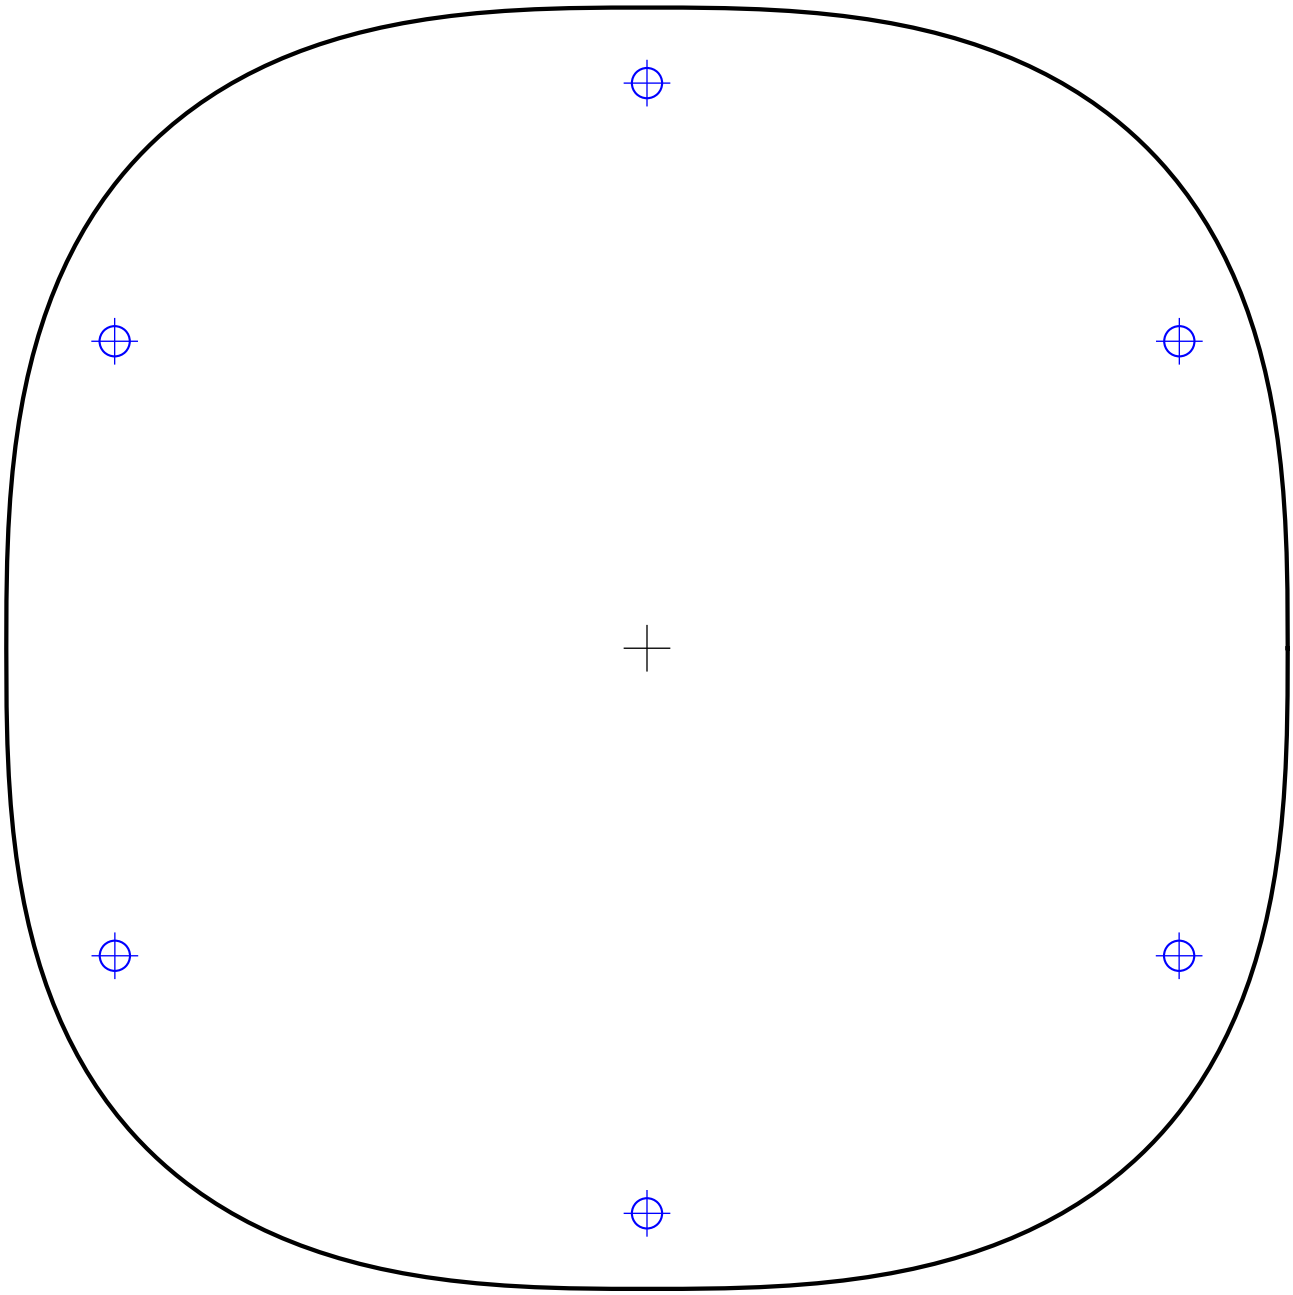



## C0  control, no holes  (CFD design base_q2.8)

net area 250.00 cm².  How to cut: tape this sheet UNDER the clear plastic (or on top for opaque sheet).
1. Cut along the centre of the black outline.  2. Remove every red shaded hole, cutting along its red line (this material comes out).
3. Punch the blue crosshairs (line points), keep >= 3 mm from the edge.  4. Write the code on the canopy.

50 mm: measure this after printing

100 mm: measure this after printing

**Print at 100% / Actual size (NOT 'fit to page').**

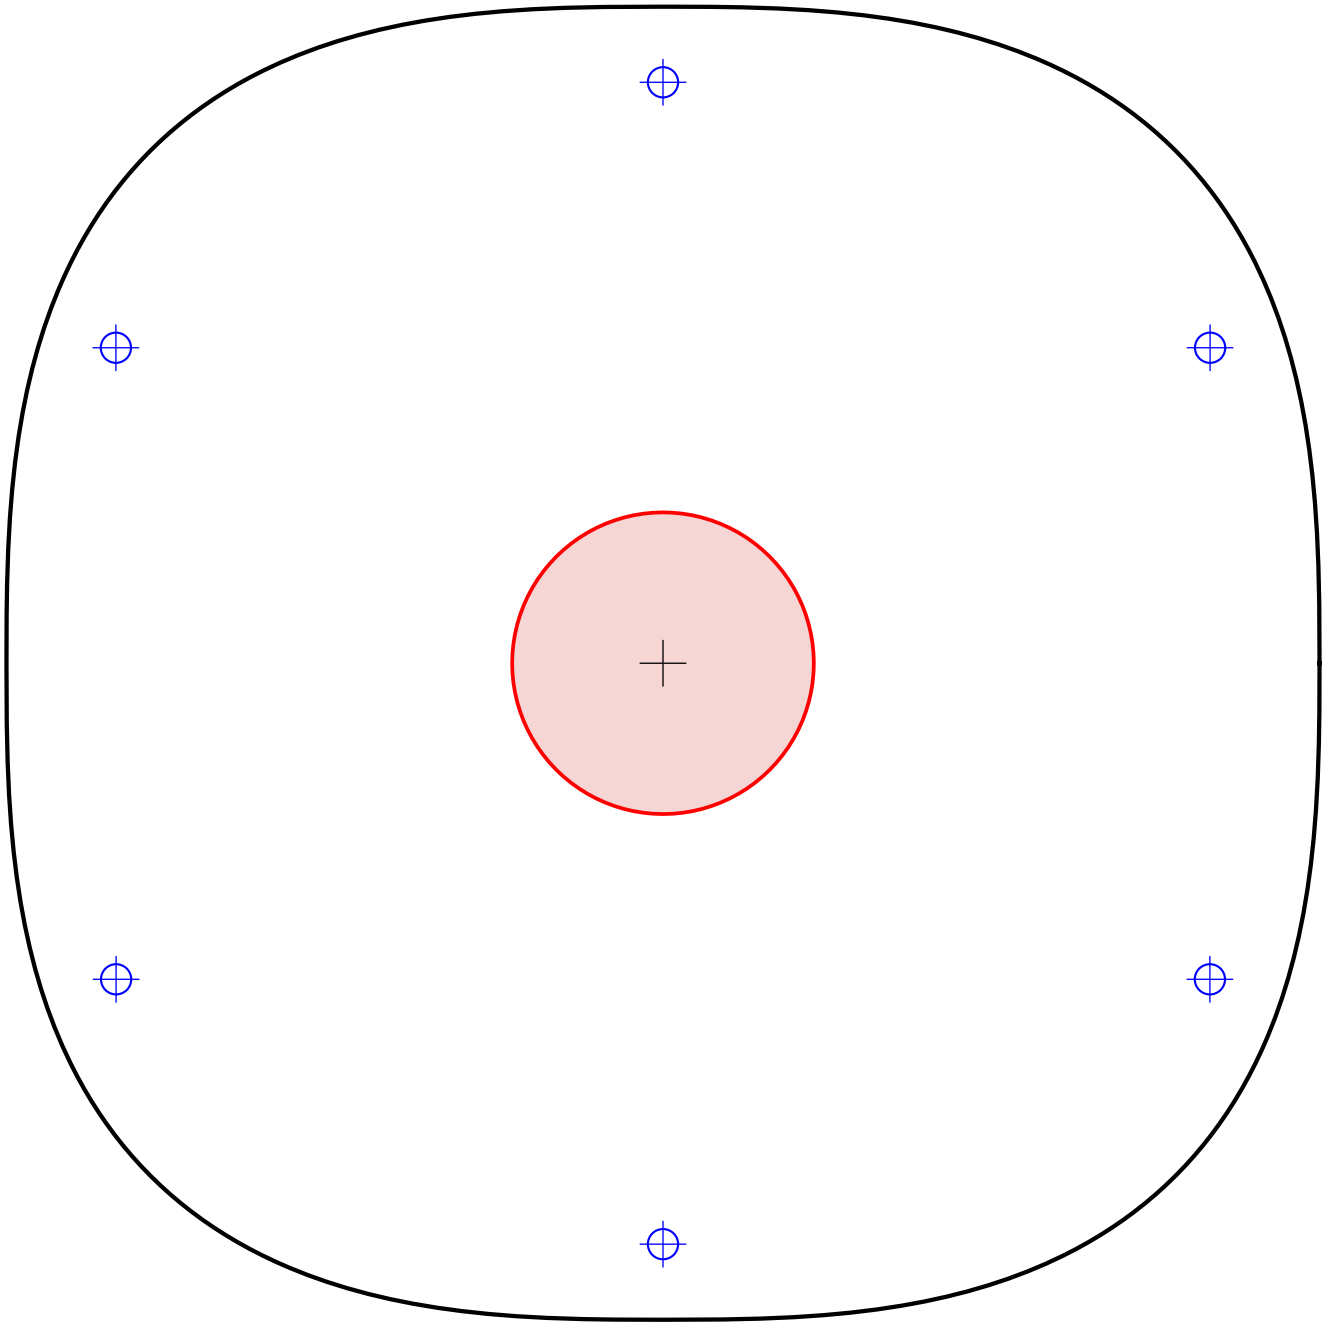


## V05  5% central vent  (CFD design vent05)

net area 250.00 cm².  How to cut: tape this sheet UNDER the clear plastic (or on top for opaque sheet).
1. Cut along the centre of the black outline.  2. Remove every red shaded hole, cutting along its red line (this material comes out).
3. Punch the blue crosshairs (line points), keep >= 3 mm from the edge.  4. Write the code on the canopy.

50 mm: measure this after printing

100 mm: measure this after printing

**Print at 100% / Actual size (NOT 'fit to page').**

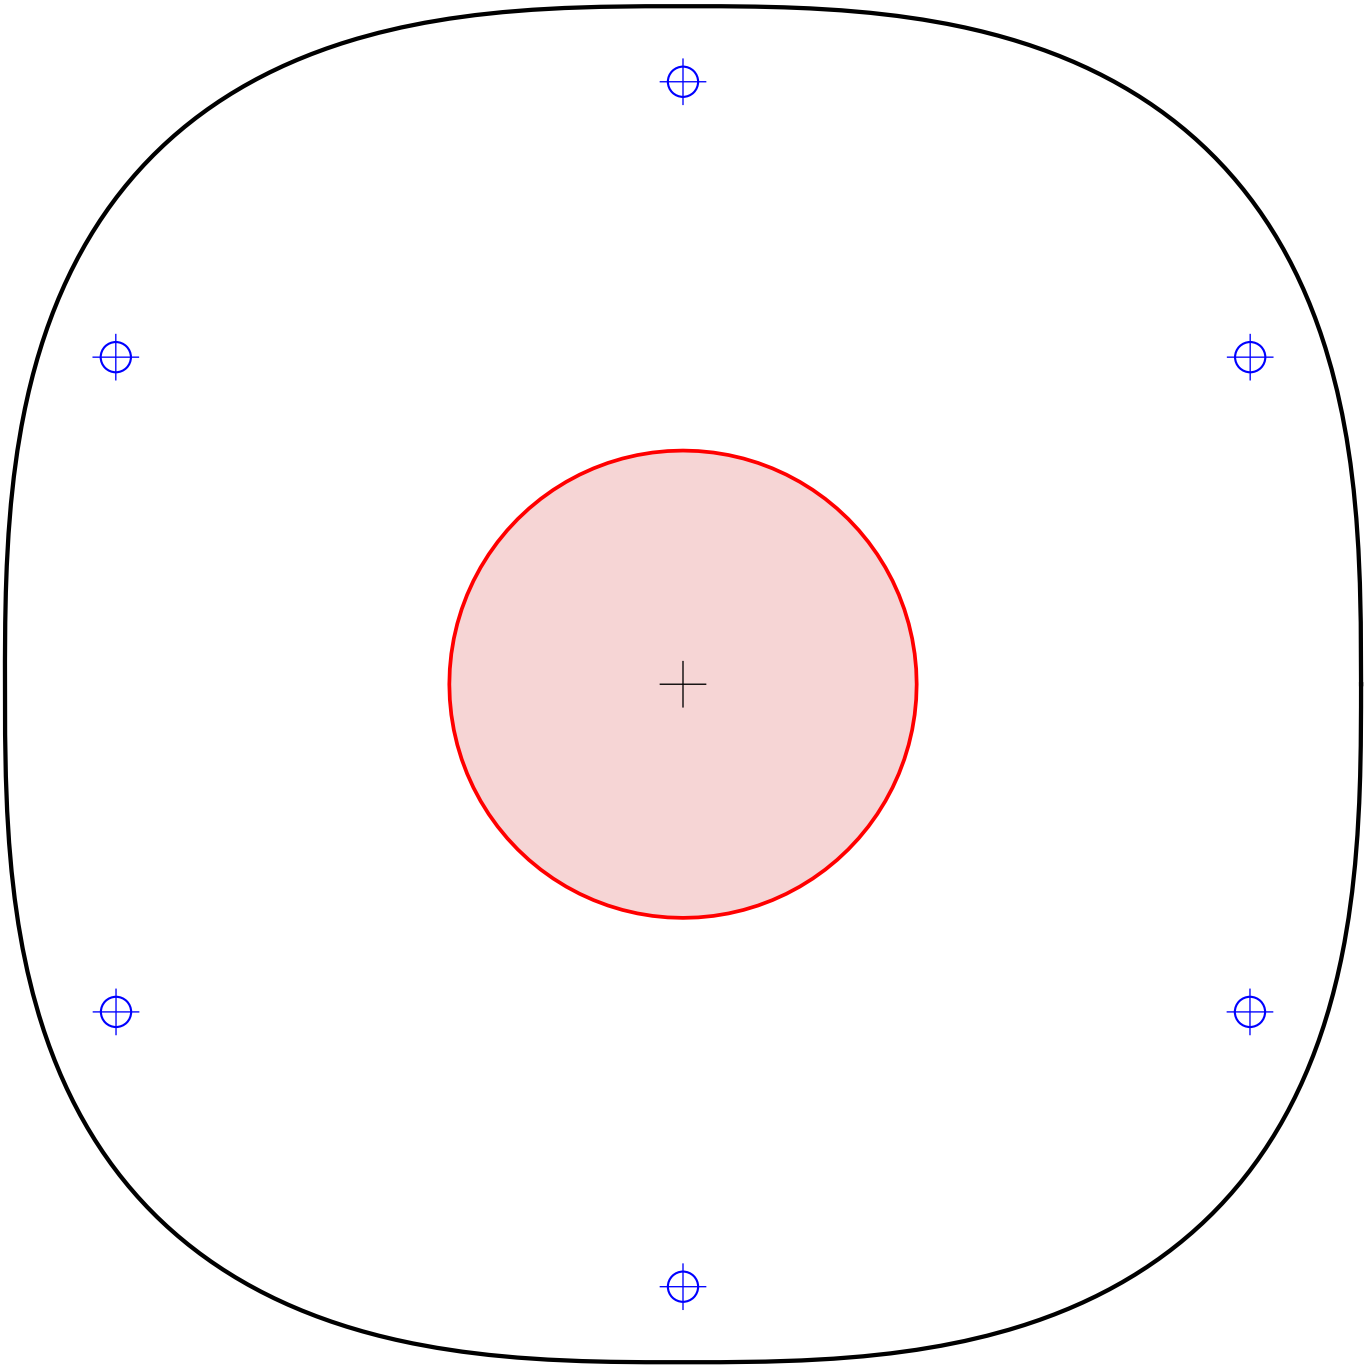


## V12  12% central vent  (CFD design vent12)

net area 250.00 cm².  How to cut: tape this sheet UNDER the clear plastic (or on top for opaque sheet).
1. Cut along the centre of the black outline.  2. Remove every red shaded hole, cutting along its red line (this material comes out).
3. Punch the blue crosshairs (line points), keep >= 3 mm from the edge.  4. Write the code on the canopy.

50 mm: measure this after printing

100 mm: measure this after printing

**Print at 100% / Actual size (NOT 'fit to page').**

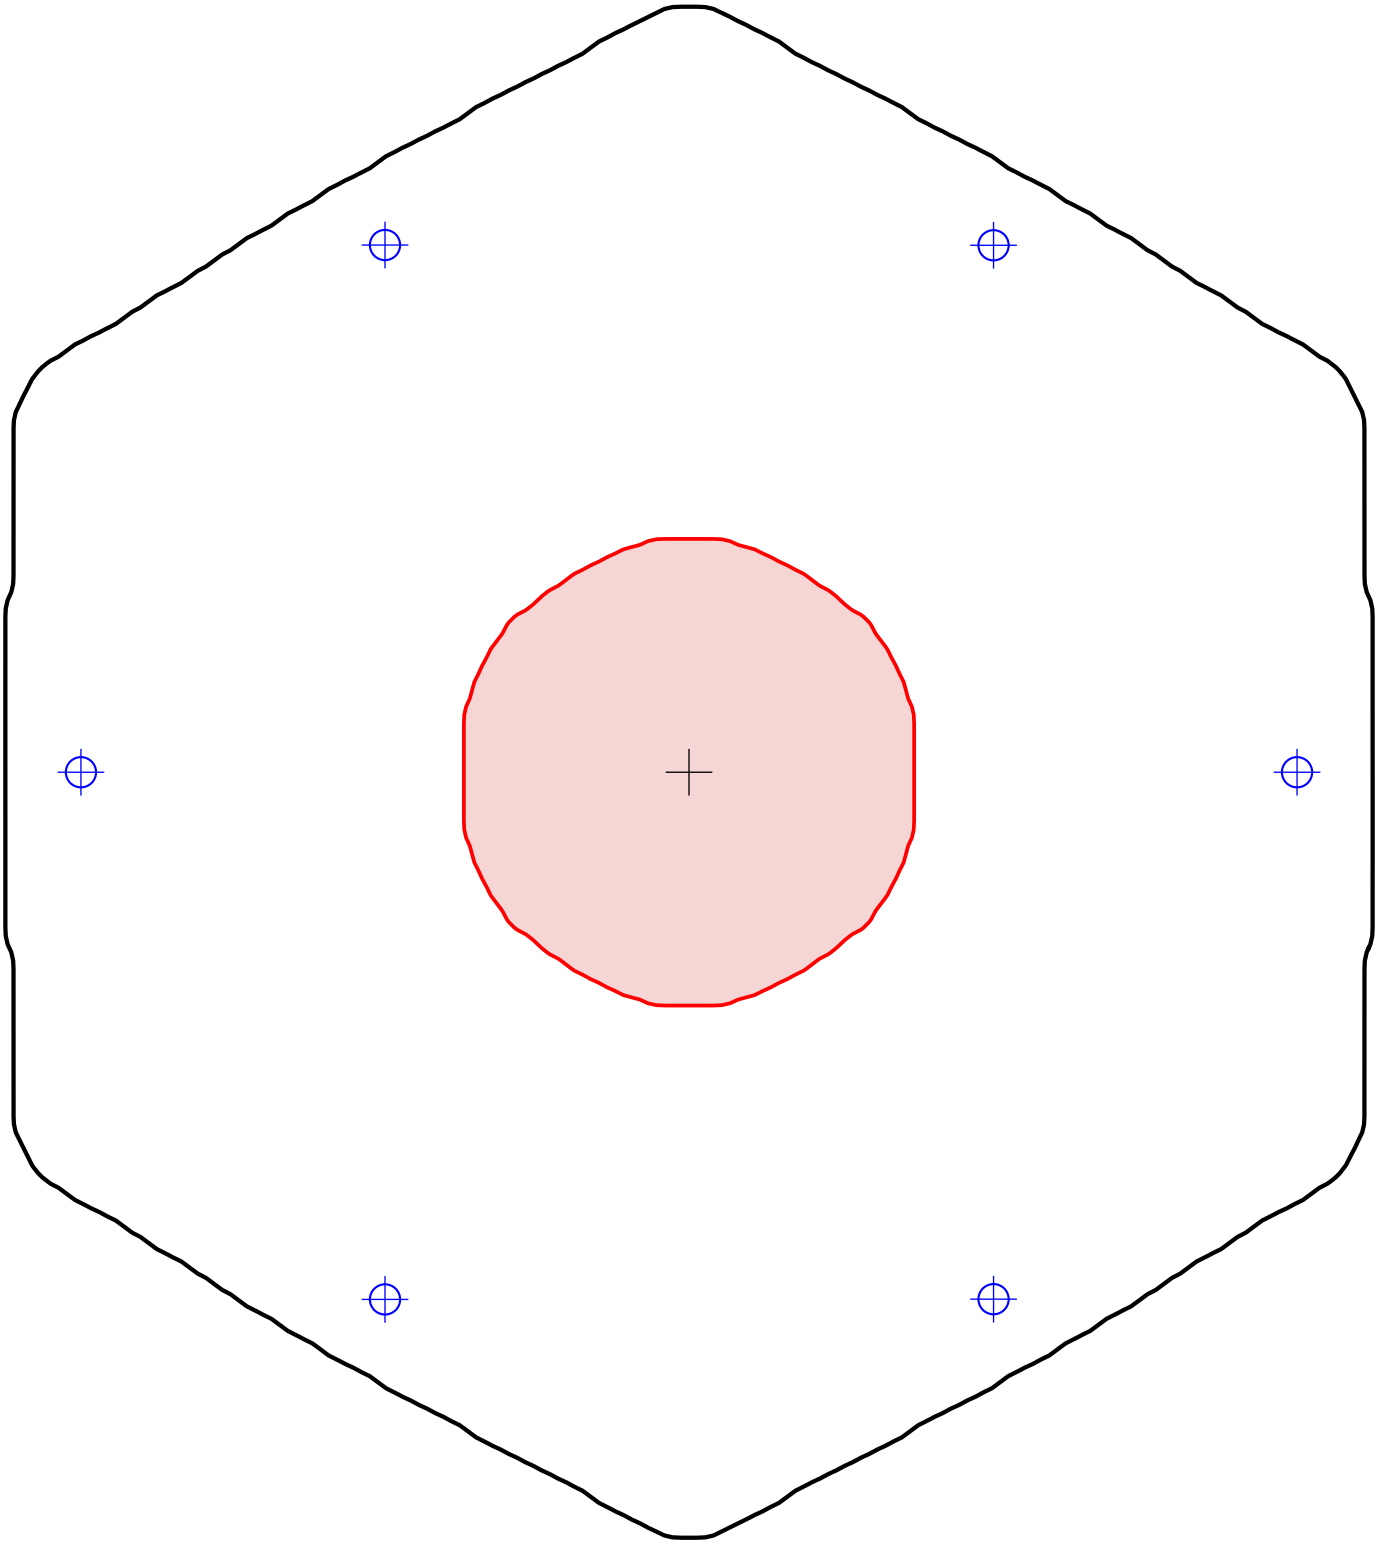


## F56  best hand-sampled free-form  (CFD design free56)

net area 250.00 cm².  How to cut: tape this sheet UNDER the clear plastic (or on top for opaque sheet).
1. Cut along the centre of the black outline.  2. Remove every red shaded hole, cutting along its red line (this material comes out).
3. Punch the blue crosshairs (line points), keep >= 3 mm from the edge.  4. Write the code on the canopy.

50 mm: measure this after printing

100 mm: measure this after printing

**Print at 100% / Actual size (NOT 'fit to page').**

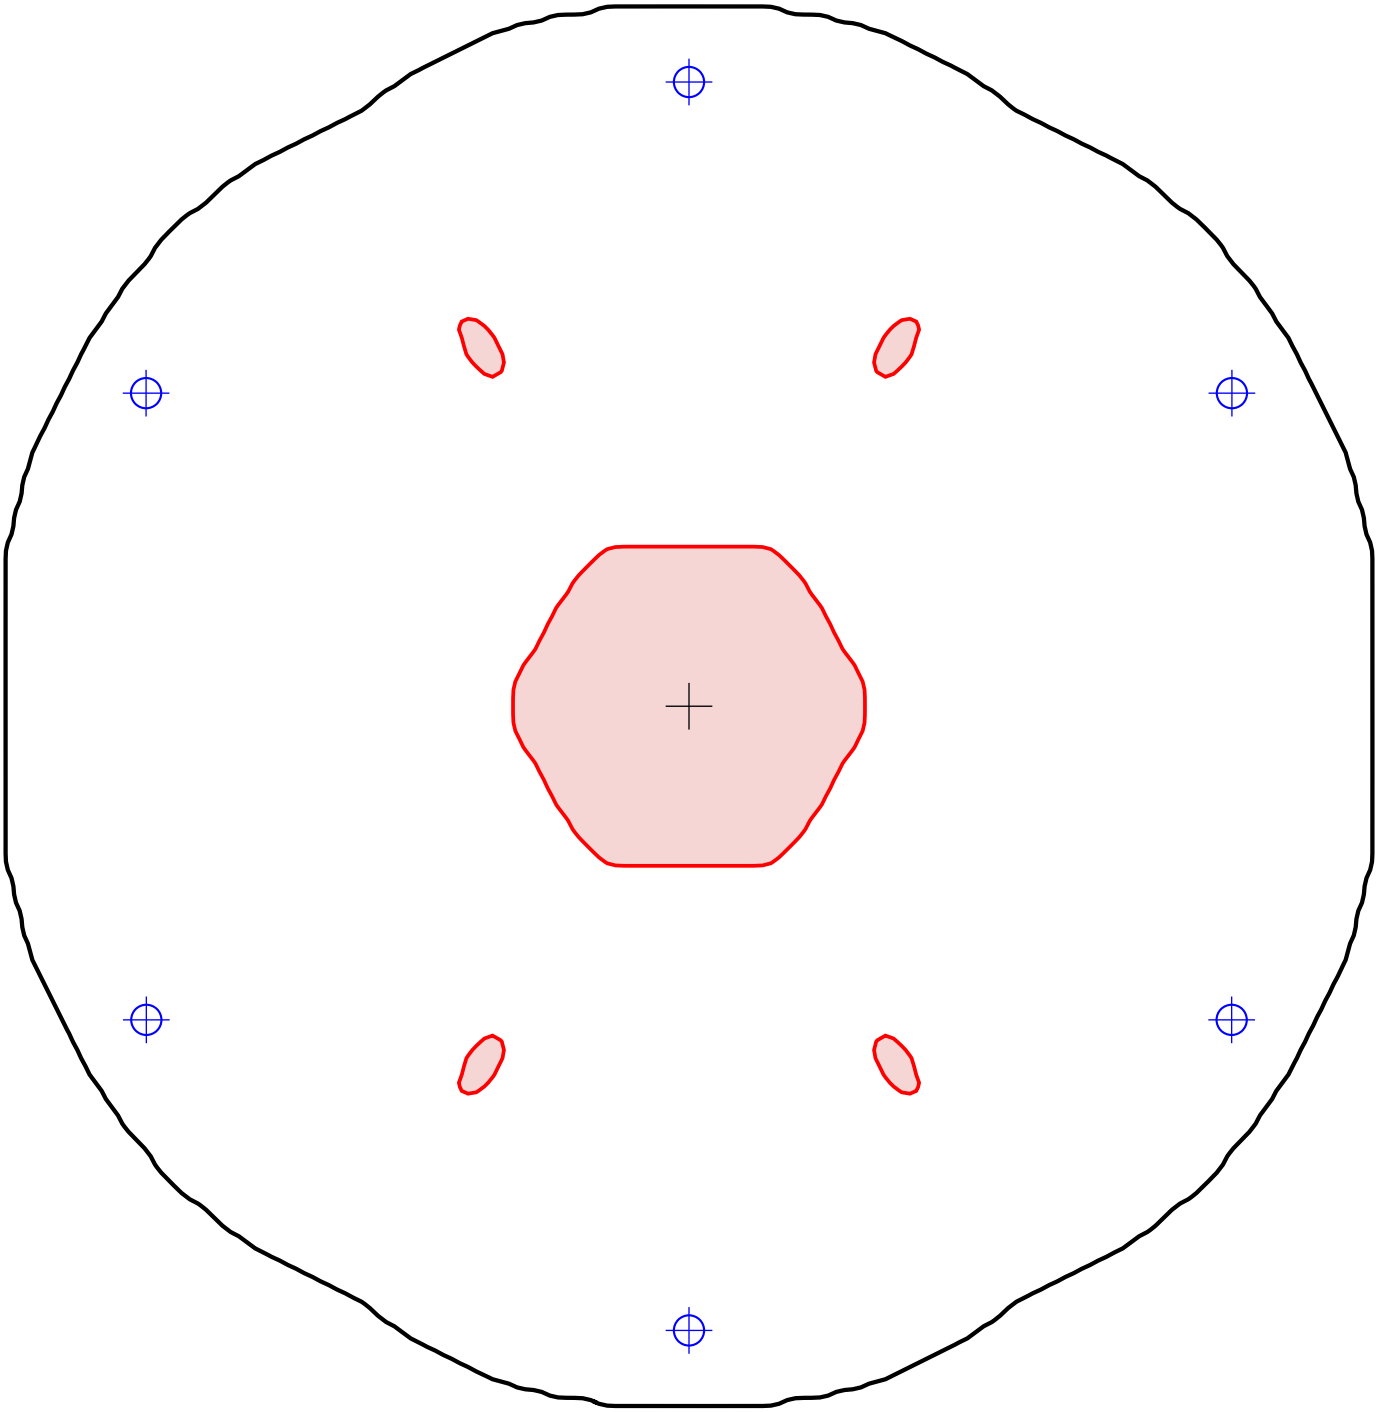

## W0  best search winner, GA  (CFD design win0)

net area 250.00 cm².  How to cut: tape this sheet UNDER the clear plastic (or on top for opaque sheet).
1. Cut along the centre of the black outline.  2. Remove every red shaded hole, cutting along its red line (this material comes out).
3. Punch the blue crosshairs (line points), keep >= 3 mm from the edge.  4. Write the code on the canopy.

50 mm: measure this after printing

100 mm: measure this after printing

**Print at 100% / Actual size (NOT 'fit to page').**