
1. General Description

A: COMPONENT

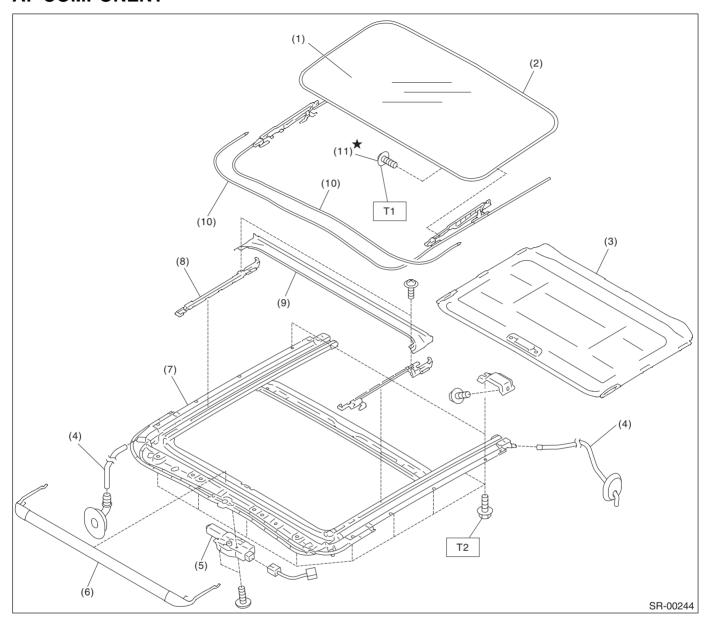

- (1) Lid ASSY sunroof
- (2) Weather strip
- (3) Sunshade ASSY
- (4) Drain tube sunroof
- (5) Motor ASSY sunroof
- (6) Deflector ASSY sunroof
- (7) Rail ASSY sunroof
- (8) Link drain sunroof
- (9) Drain ASSY sunroof
- (10) Cable ASSY

(11) TORX® bolt

Tightening torque: N⋅m (kgf-m, ft-lb)

T1: 4.5 (0.5, 3.3)

T2: 6 (0.6, 4.4)

B: CAUTION

Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery. When replacing the audio and MFD parts provided with memory functions, record the memory contents before disconnecting the battery ground cable.

General Description

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Hexagon wrench	Used for forcibly driving the motor assembly - sunroof. Width across flat 4 mm (0.16 in)
TORX [®] T25	Used for removing and installing the lid assembly - sunroof.