

[illegible]

Key matrix (left half, COL2ROW, 44 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

Clock

Decoupling

Reset (press = DFU bootloader via HWB)

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V


USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

OLED 0.91" 128x32 (I2C SSD1306)

nrsk
Sheet: /
File: nrsk-left.kicad_sch
Title: nrsk split keyboard – left half
Size: A2 Date: Rev: 2.0
KiCad E.D.A. 10.0.6 Id: 1/1

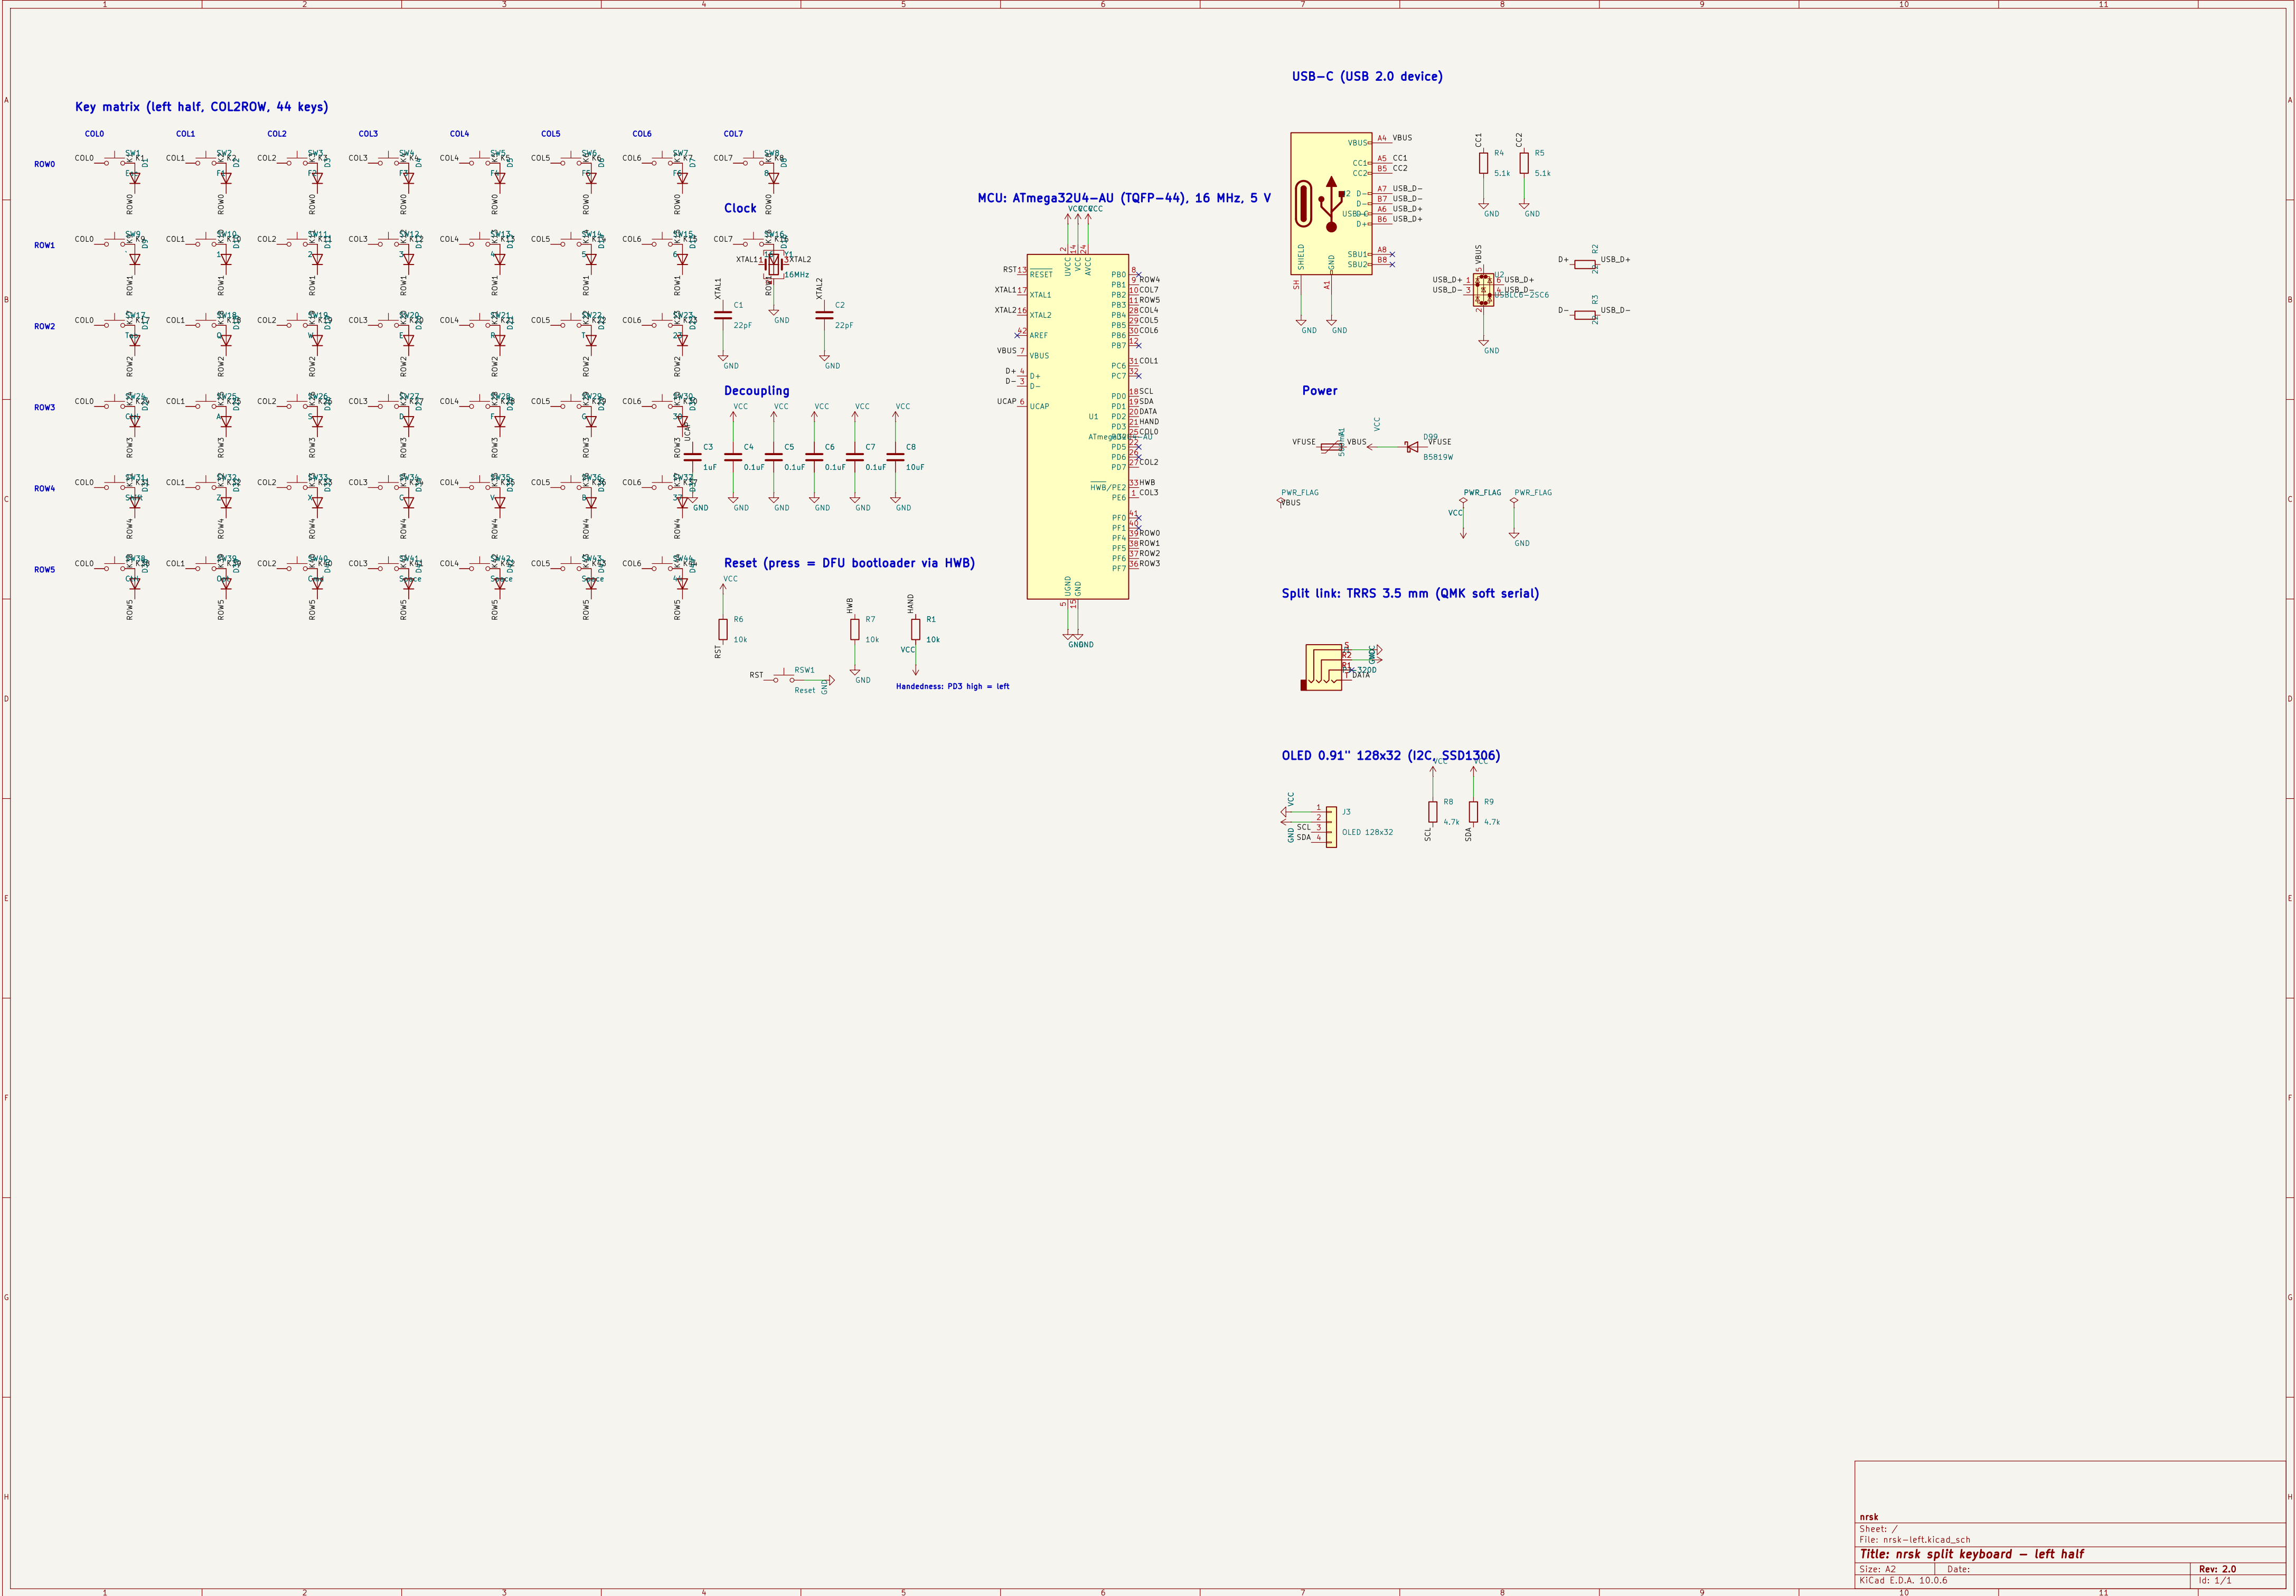

Key matrix (left half, COL2ROW, 44 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

Clock

Decoupling

Reset (press = DFU bootloader via HWB)

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V


USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

OLED 0.91" 128x32 (I2C SSD1306)

nrsk
Sheet: /
File: nrsk-left.kicad_sch
Title: nrsk split keyboard – left half
Size: A2 Date: KiCad E.D.A. 10.0.6
Rev: 2.0 Id: 1/1

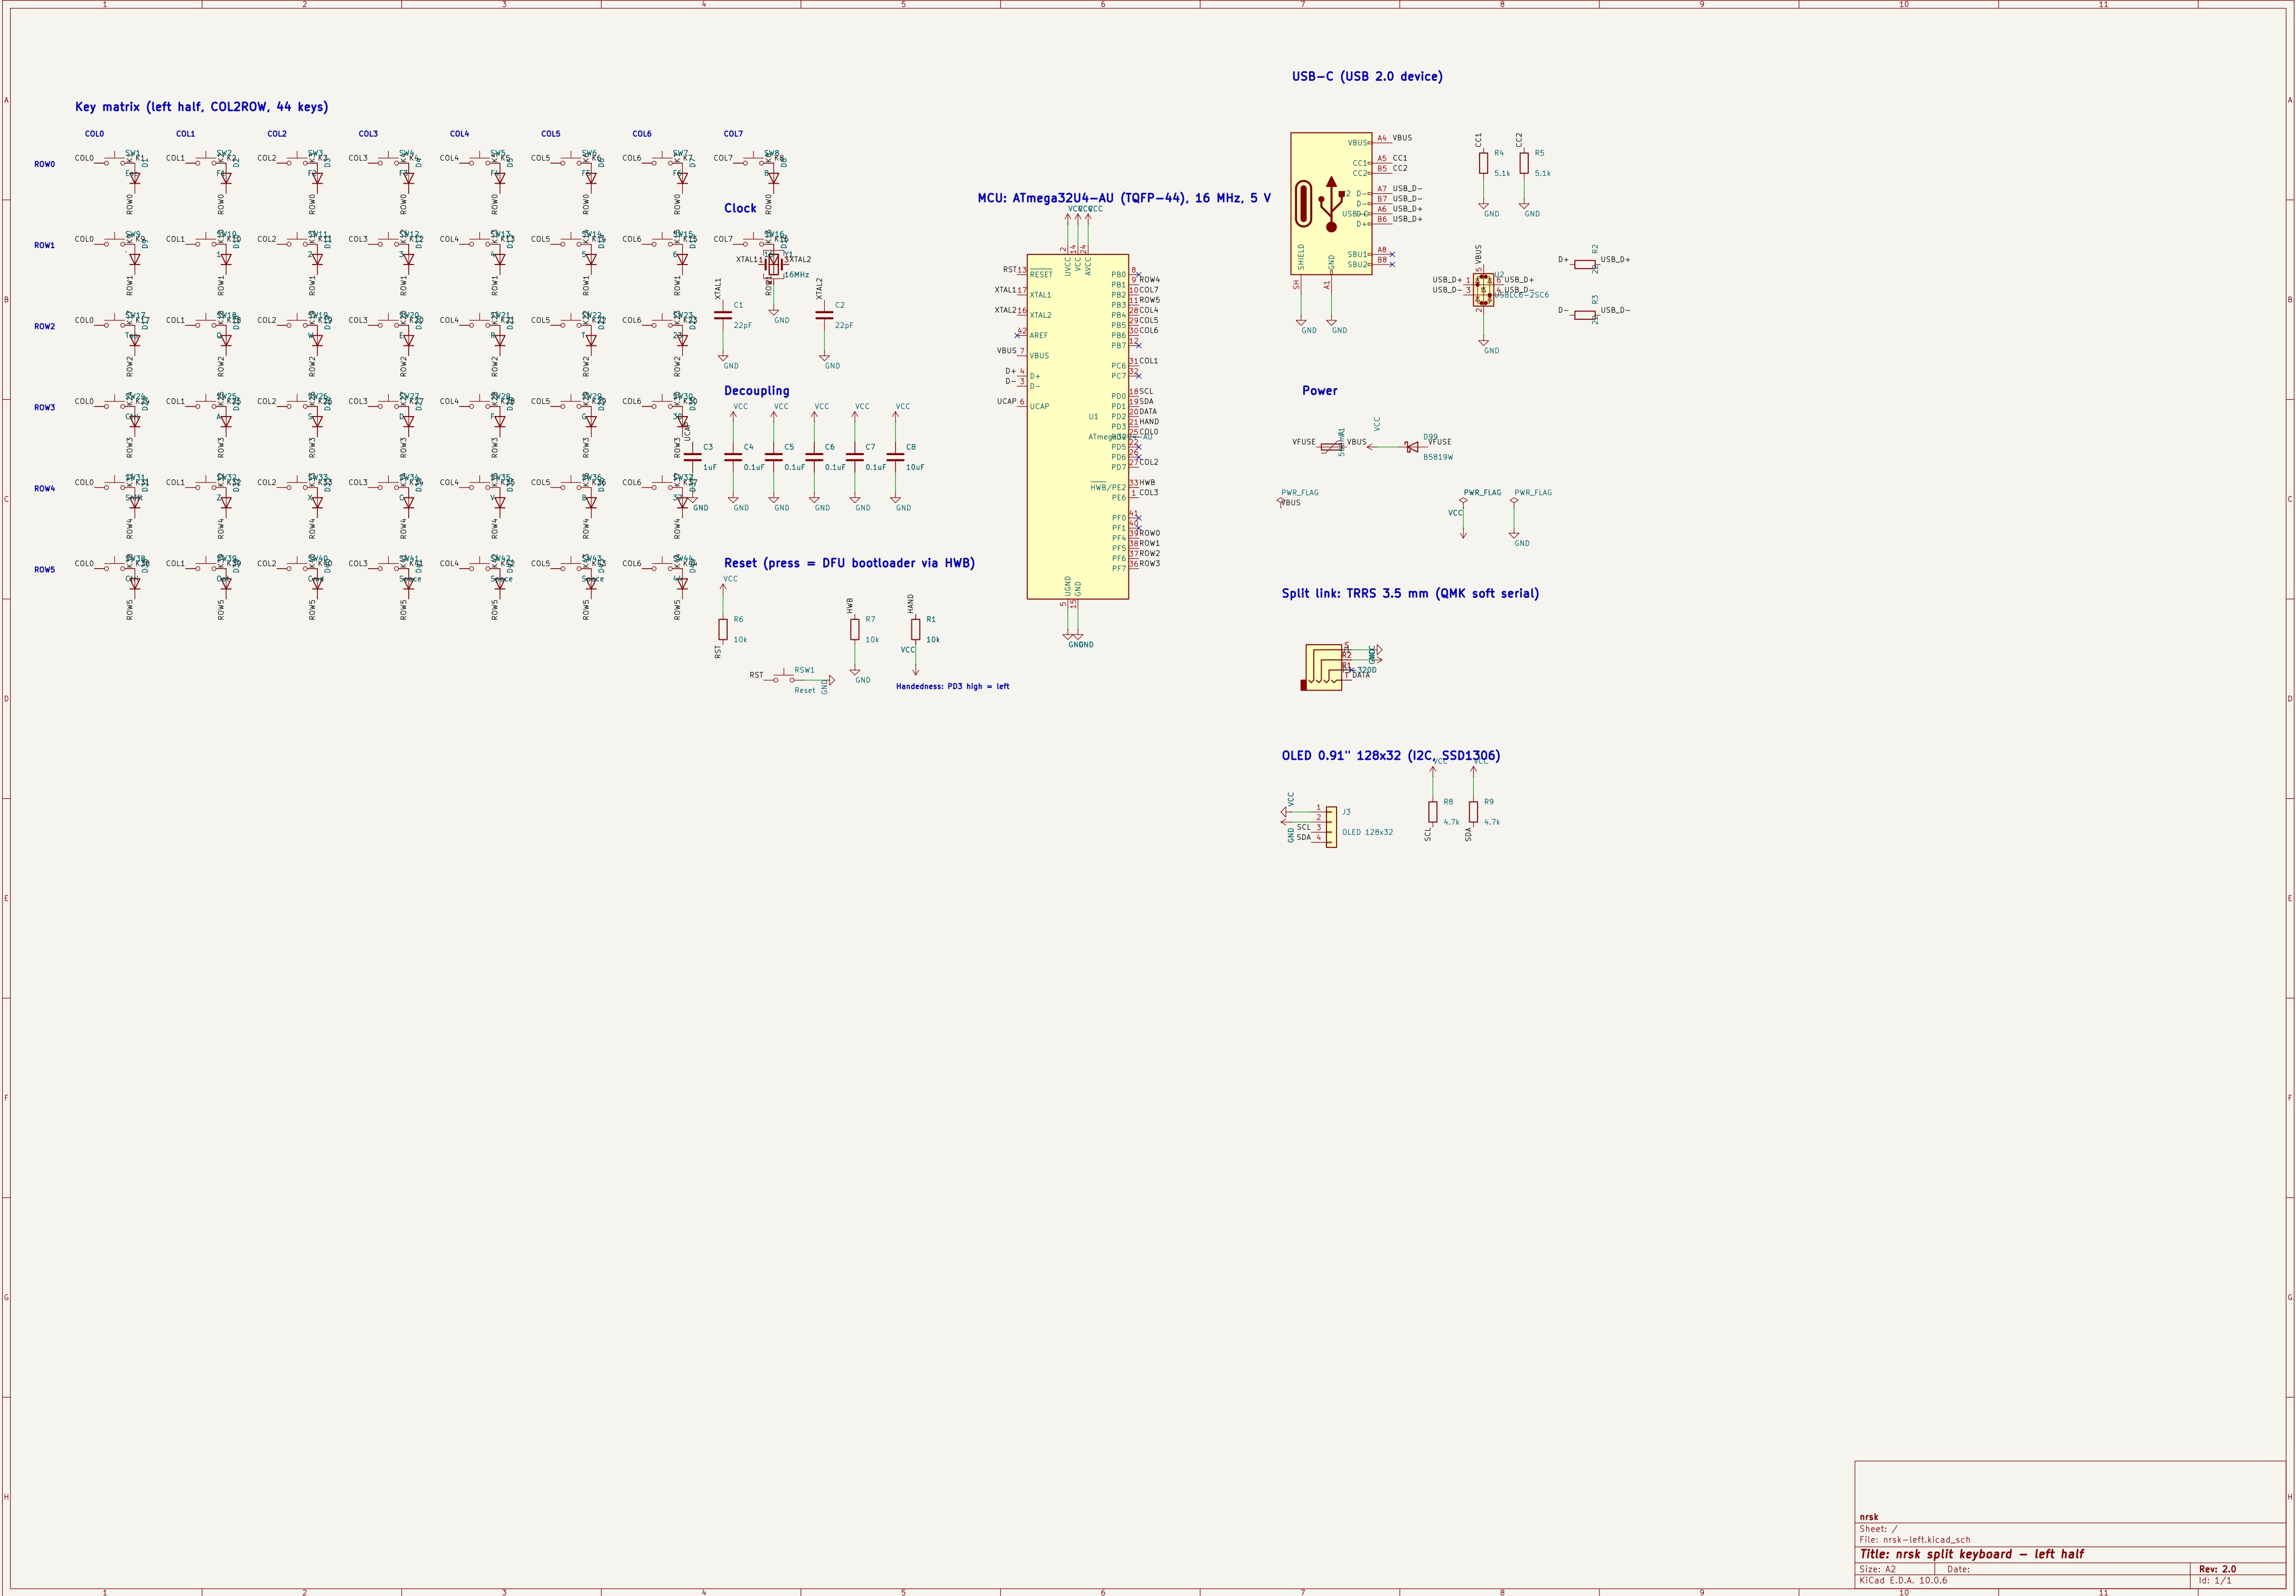

Key matrix (left half, COL2ROW, 44 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

Clock

Decoupling

Reset (press = DFU bootloader via HWB)

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

OLED 0.91" 128x32 (I2C SSD1306)

nrsk


Sheet: /

File: nrsk-left.kicad_sch

Title: nrsk split keyboard – left half

Size: A2 Date: Rev: 2.0

KiCad E.D.A. 10.0.6 Id: 1/1

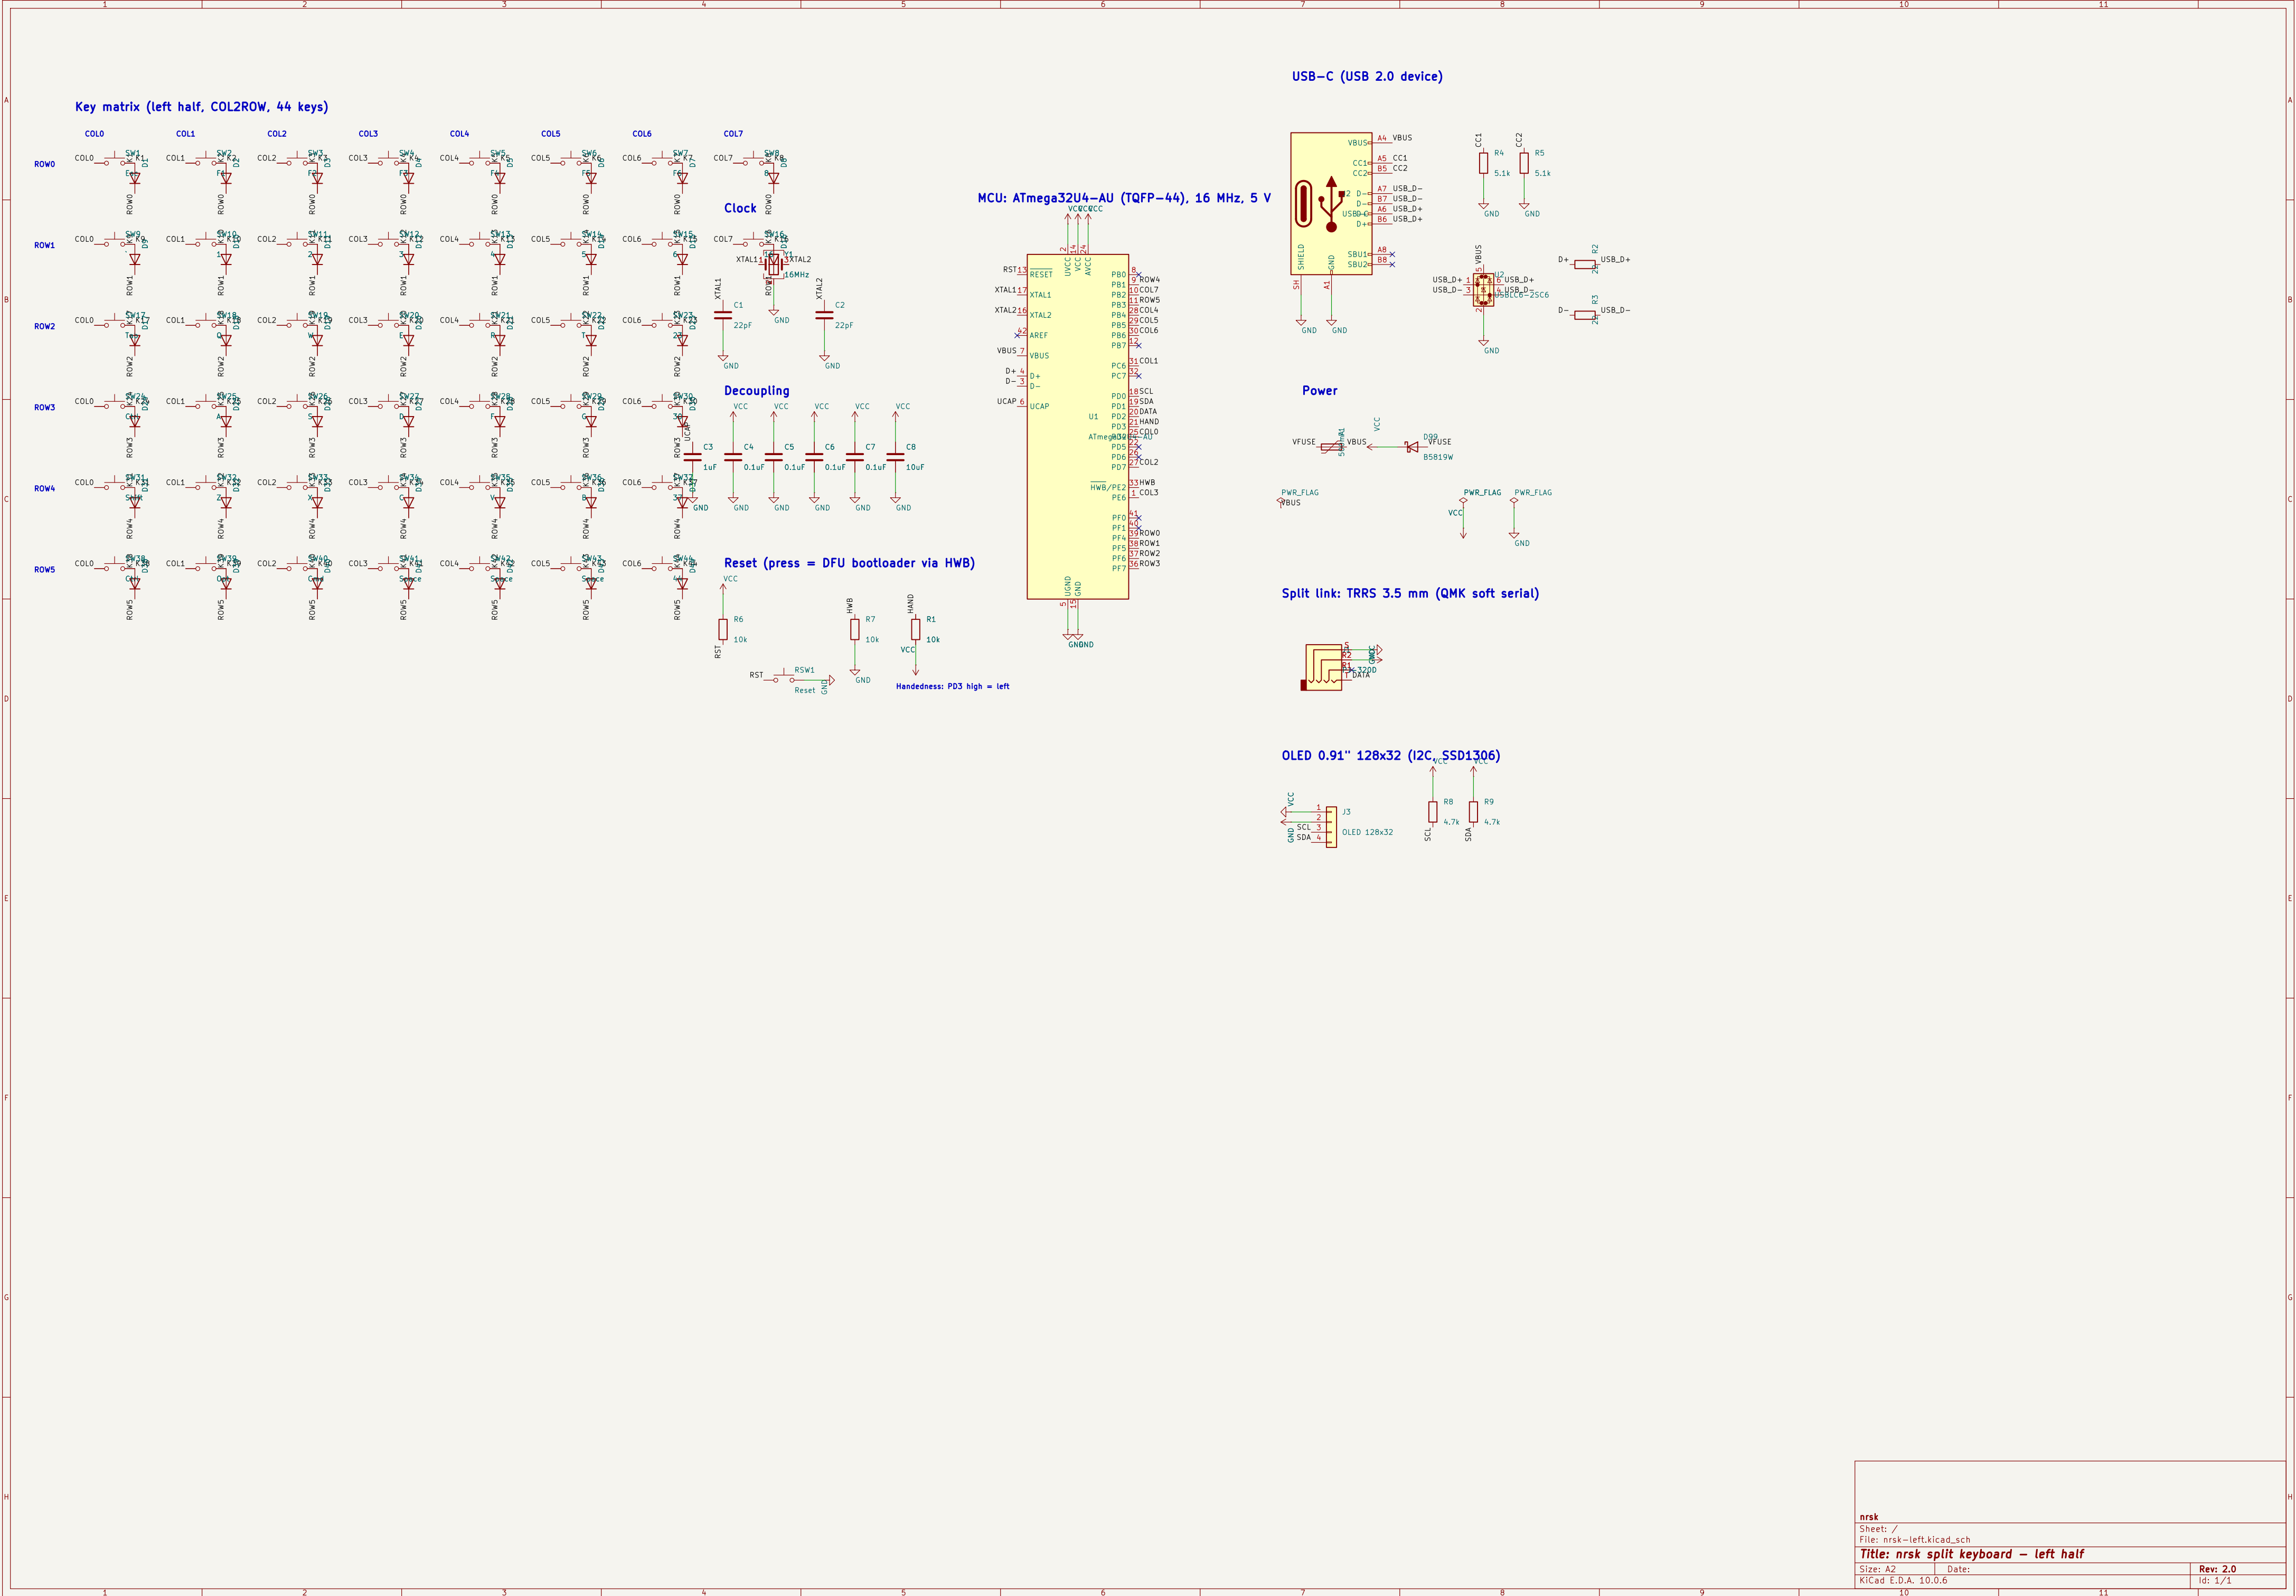

Key matrix (left half, COL2ROW, 44 keys)

COL0 COL1 COL2 COL3 COL4 COL5 COL6 COL7

ROW0 ROW1 ROW2 ROW3 ROW4 ROW5

Clock

Decoupling

Reset (press = DFU bootloader via HWB)

MCU: ATmega32U4-AU (TQFP-44), 16 MHz, 5 V

USB-C (USB 2.0 device)

Power

Split link: TRRS 3.5 mm (QMK soft serial)

OLED 0.91" 128x32 (I2C SSD1306)

nrsk

Sheet: /

File: nrsk-left.kicad_sch

Title: nrsk split keyboard – left half

Size: A2 Date: Rev: 2.0

KiCad E.D.A. 10.0.6 Id: 1/1

