todo
- connect VDD and VDDA to +3V3

USB 2x downstream

micro-b plug (XR50)

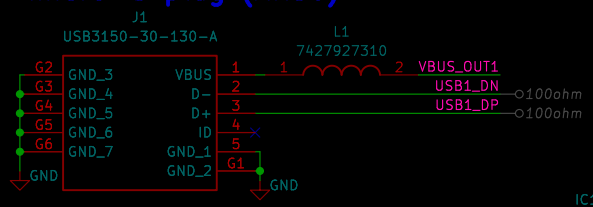

FFC (SIR170)

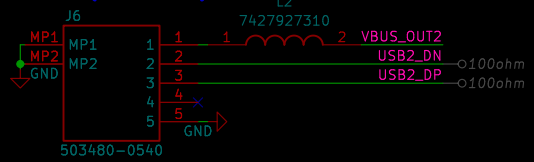

clock

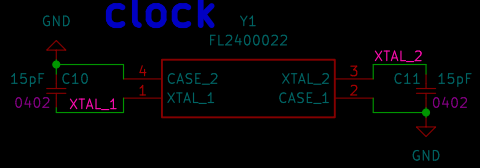

reset button

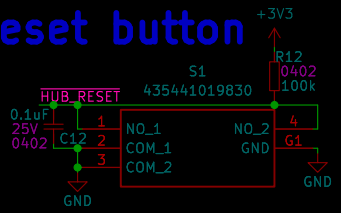

HUB

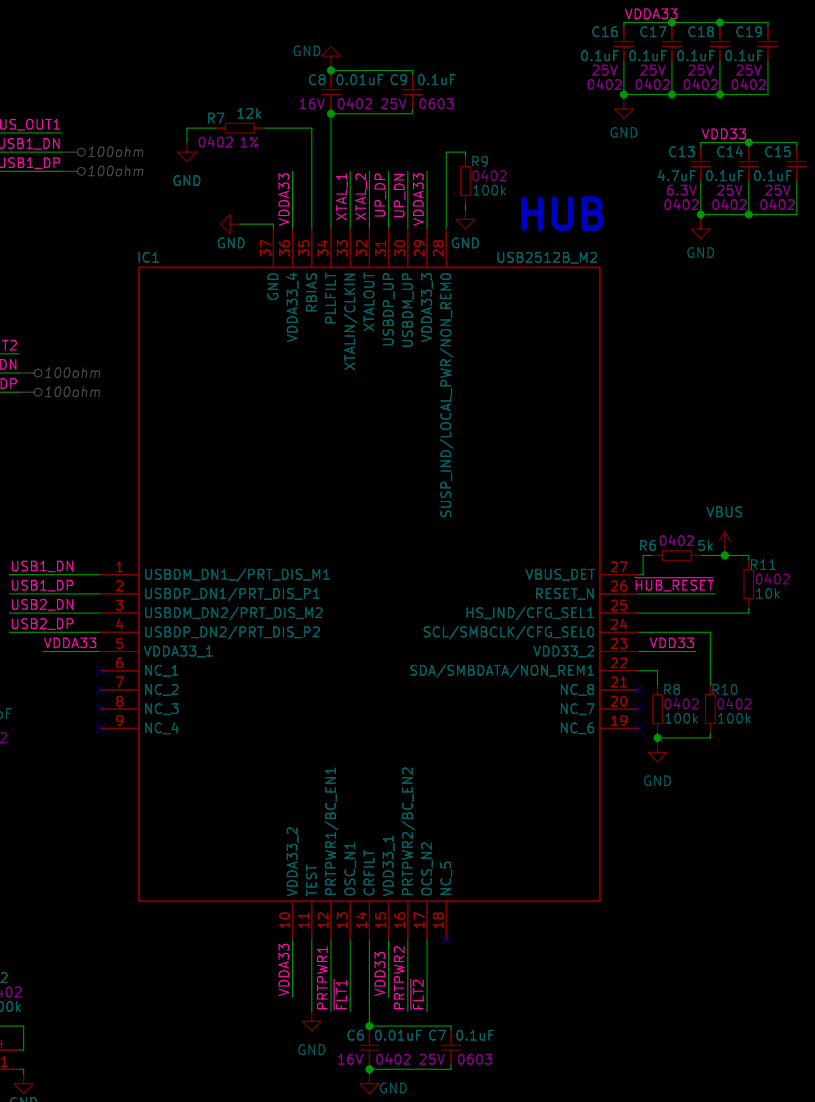

USB2 upstream (to injector)

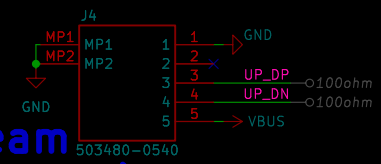

5V => 3V3

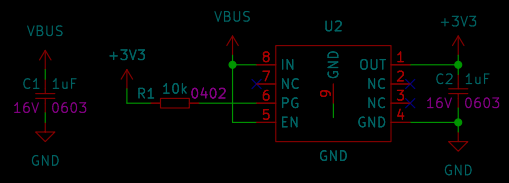
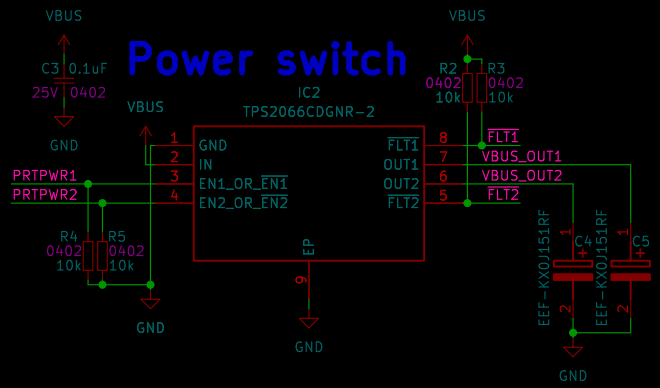
Power switch