

Tesollo Hand Installation Guide Step by Step

1. Fingertip installation guide

1. Please remove the original **5× Fingertips.**

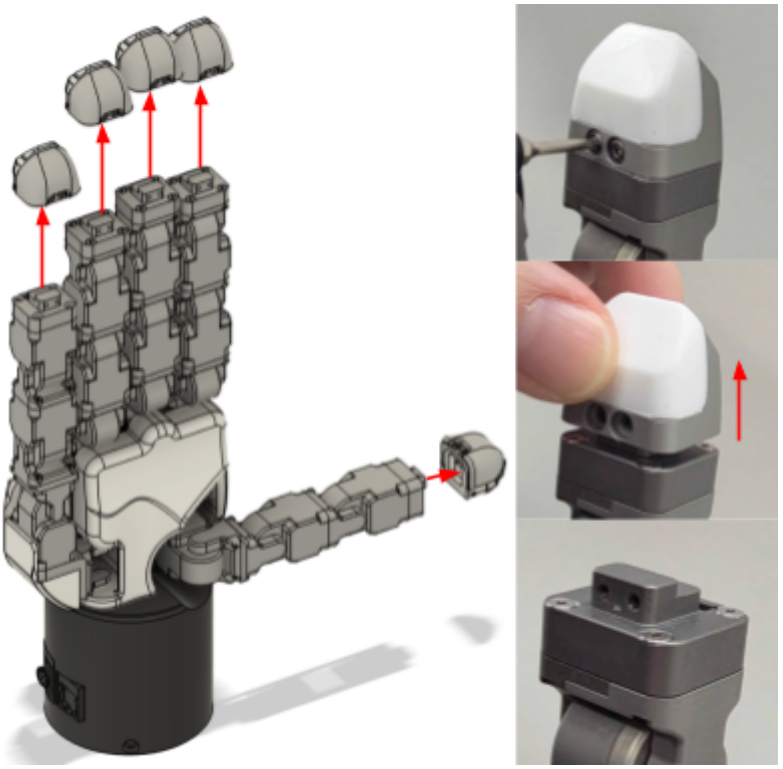


2. Please also remove the original **5× Fingertip Interface** by using the **Torx key**.

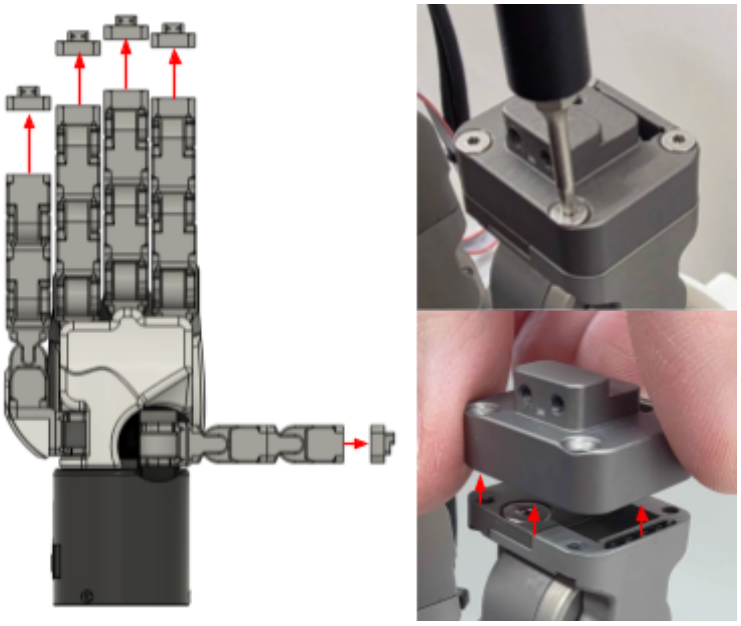


Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.

3. Please install our new **5× Fingertip Interface** by using the original screws. Make sure to follow the same direction as you can see in the picture.

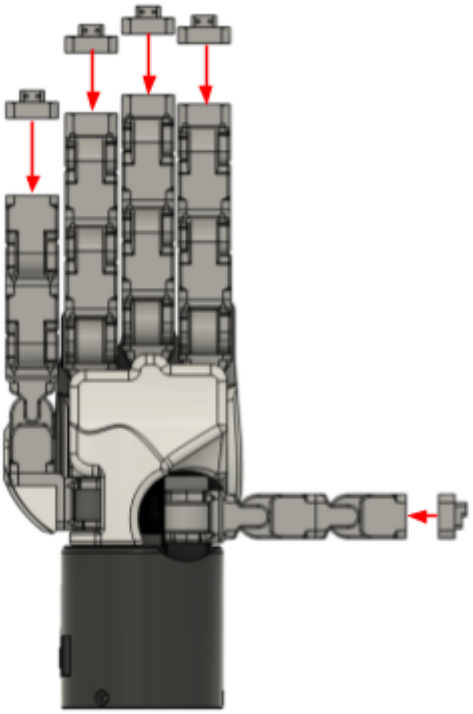




4. Please install our **5×** DG-5F-Fingertips using new type **10× M2×6mm Slim Head Machine Screws**, as shown in the picture.

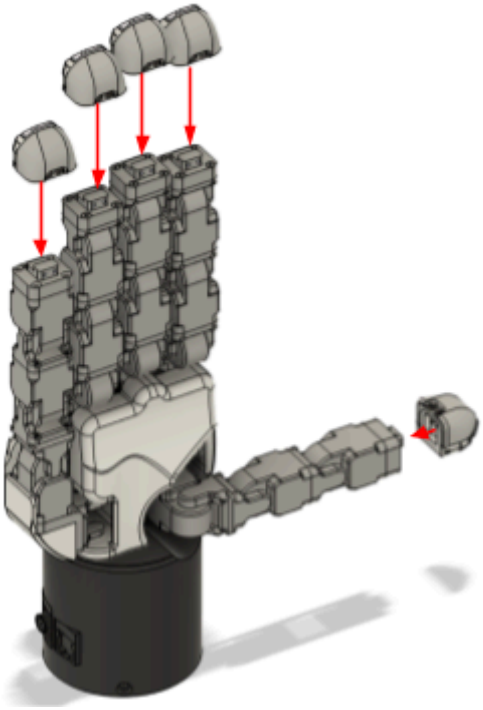




5. When installing the DG-5F-Fingertips, please press them down firmly onto the Fingertip Interface until **all gaps between them are eliminated** **before** tightening the screws (see the images below). **Loctite 222** may be used to prevent the screws from loosening or falling out.
   Please **be very careful when tightening the 2 screws** for the DG-5F-Fingertips. The screws only need to be screwed down **until their heads just slightly press** on the outer skin under them. Do not screw them down too much, as they will damage the outer skin.
   You may notice a **gap on the opposite side of the DG-5F-Fingertips compared to the original fingertips**; this is normal.

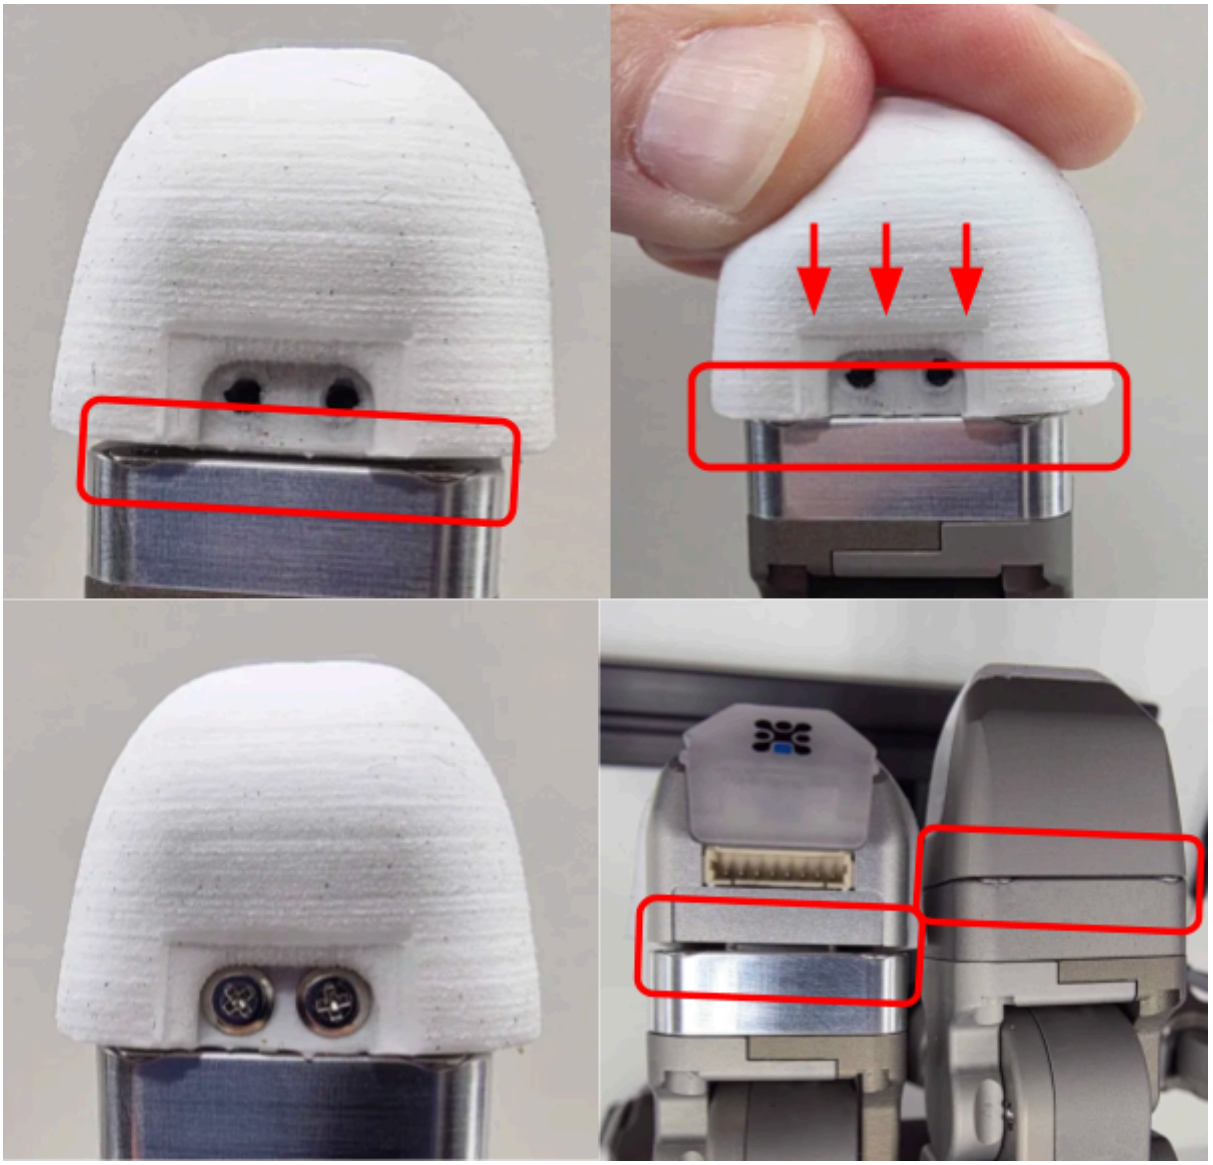


2. Phalange sensor (uSPa 22) Installation guide


1. Before installing the sensors, please ensure that the **cable orientation follows the correct direction as shown in the picture below**.
2. Please also make sure to attach the **“A” Group sensor** on the **Distal Phalange** of the finger and the **“D” Group sensor** on the **Proximal Phalange**, as shown in the picture.

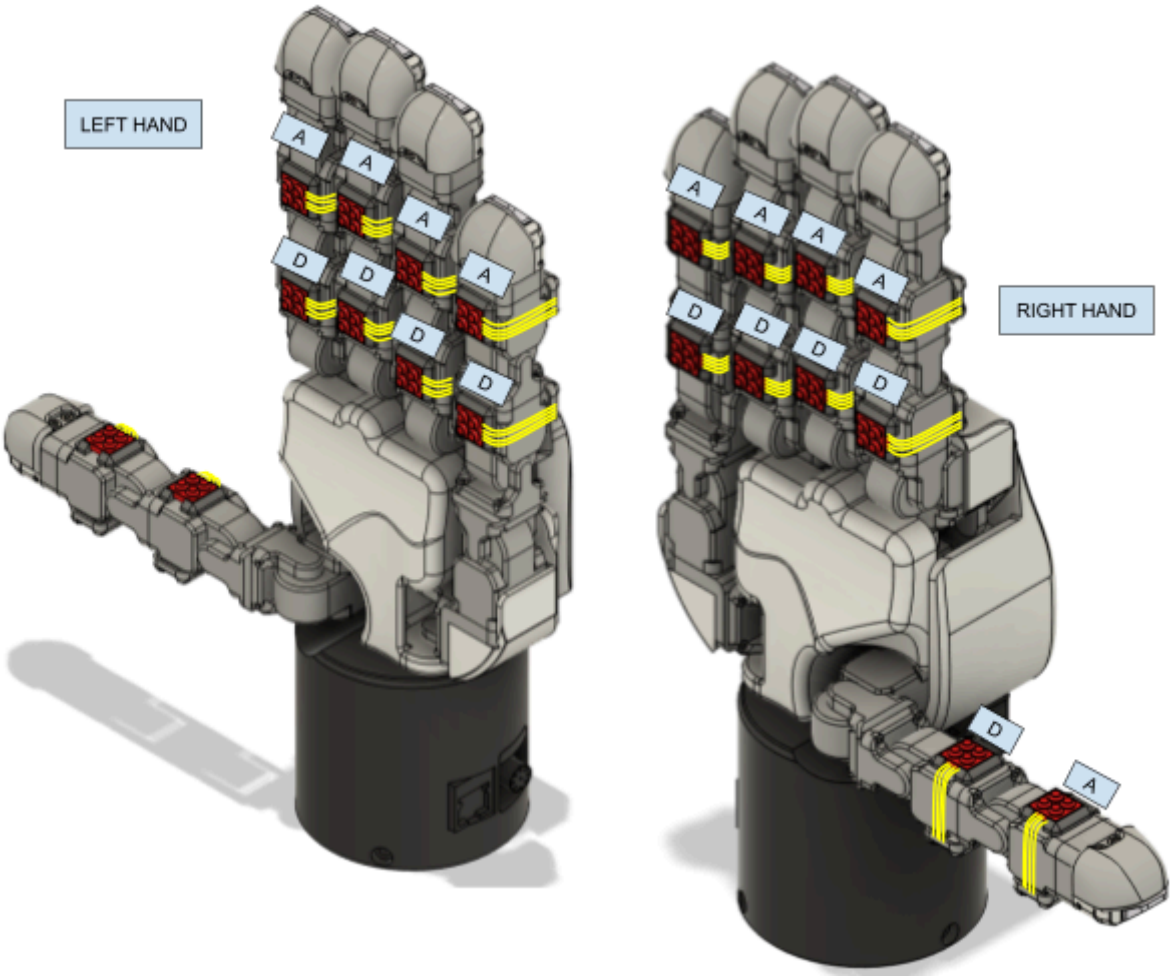


Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.

3. After confirming the orientation of the sensor and the location of “A” and “D” Group sensors, please peel off the double-sided tape on the back of the uSPa 22 sensors and I2C hubs, and attach them to the fingers as shown in the picture.

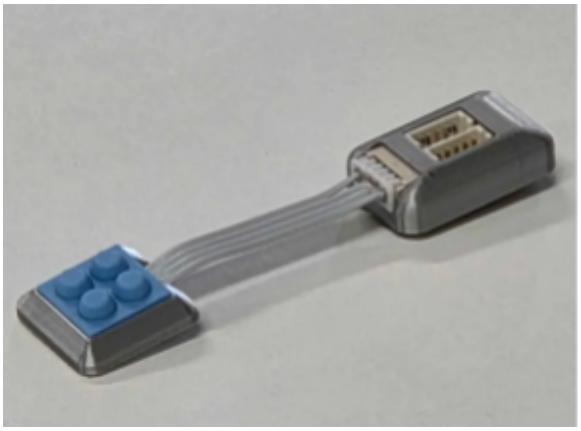


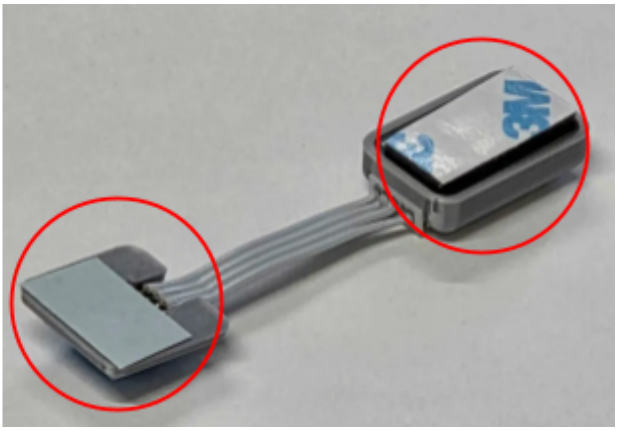

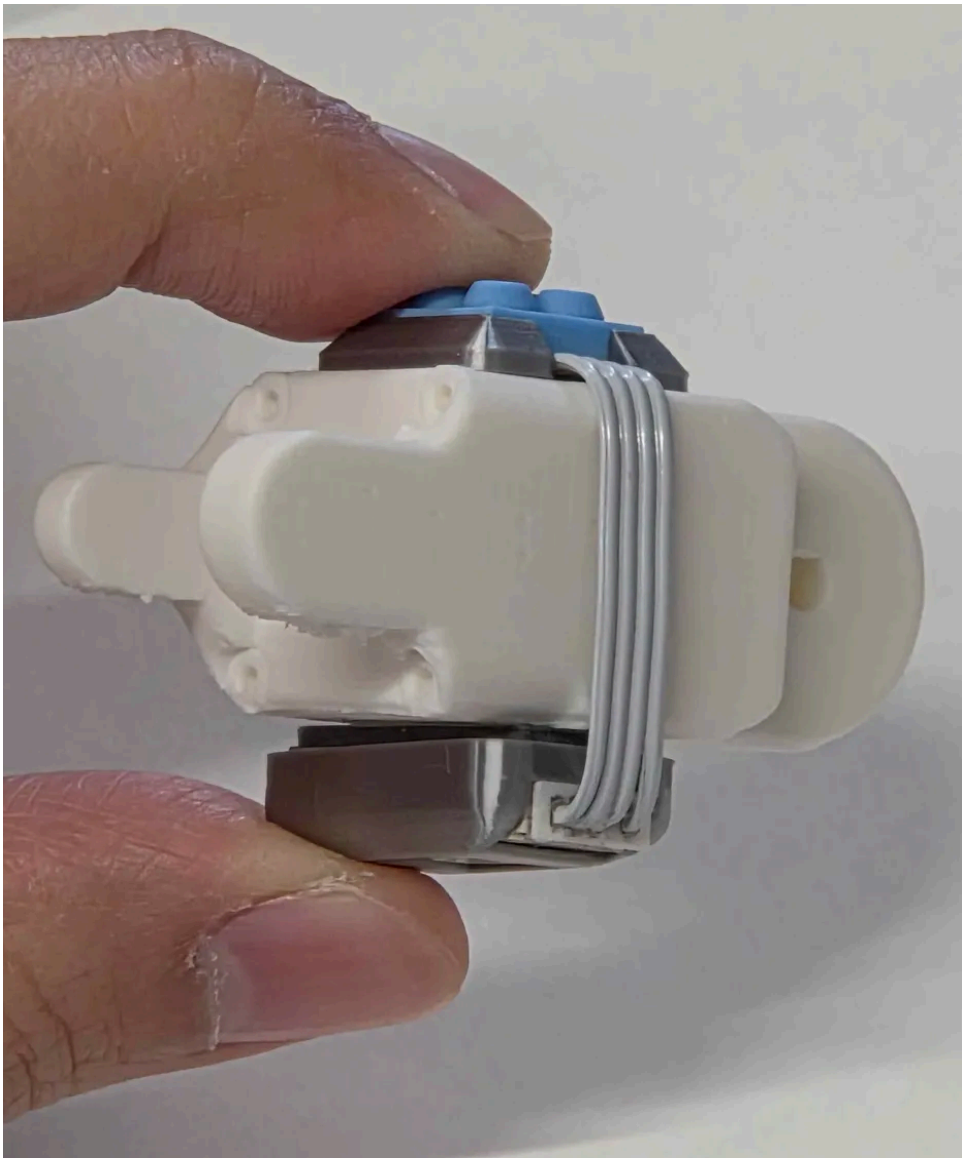

3. Palm installation


1. Remove the original palm cover and replace it with our DG-5F-Palm-uSPa46 cover, using the original screws, as shown in the picture.
2. The steps of connecting the cable of the palm sensor are described in Section 5.4.

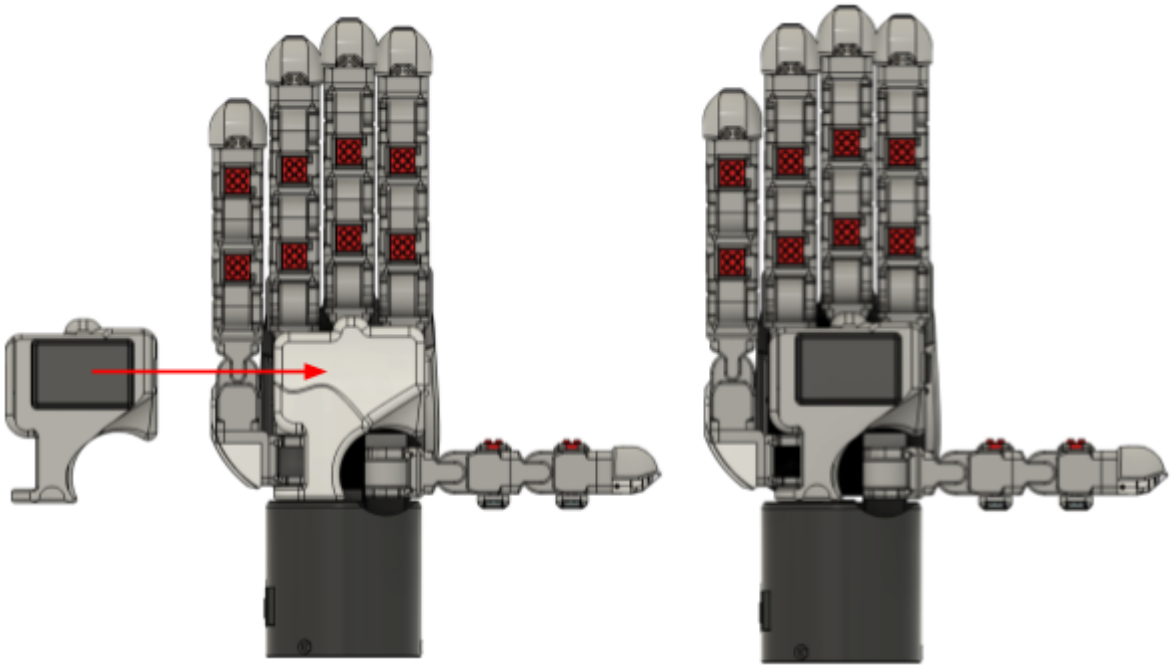

4. Back cover installation

1. Remove the original back cover and replace it with our DG-5F-Back-Cover, using the original screws, as shown in the picture.


Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.

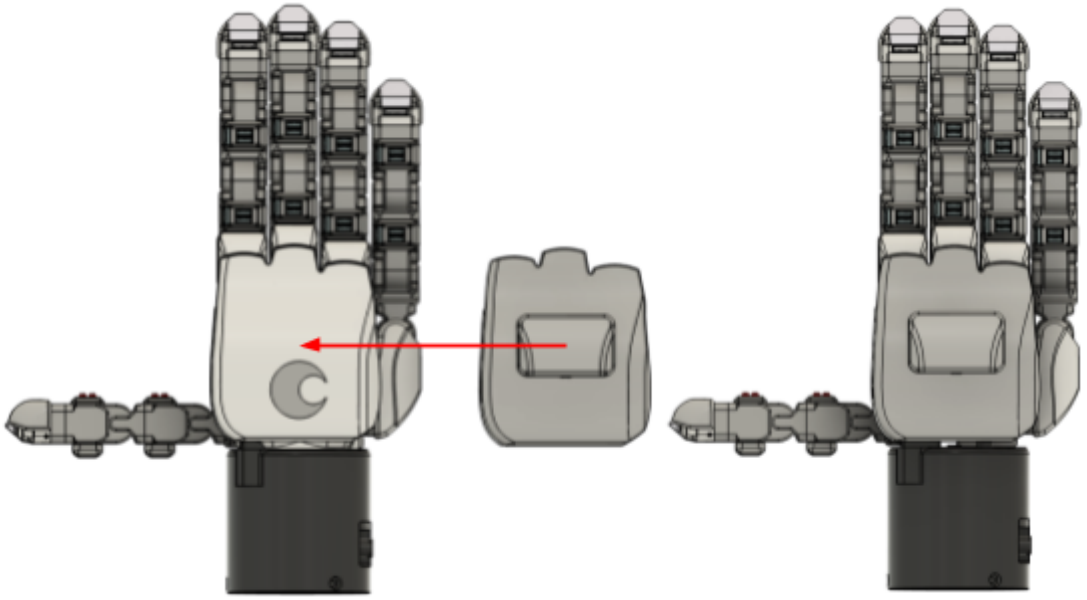



5. Cable connection

5.1 Cover lid removal

1. Please open the DG-5F-Back-Cover-Lid by removing the three screws, as shown in the picture.

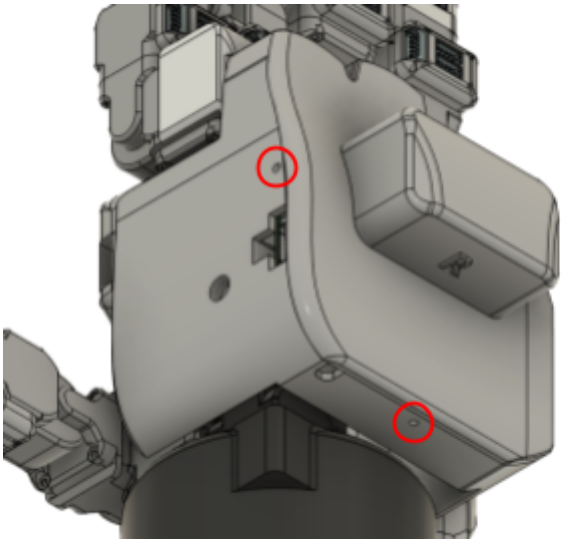

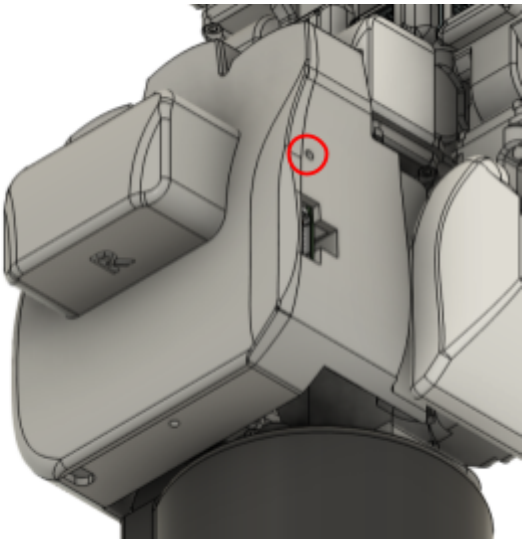

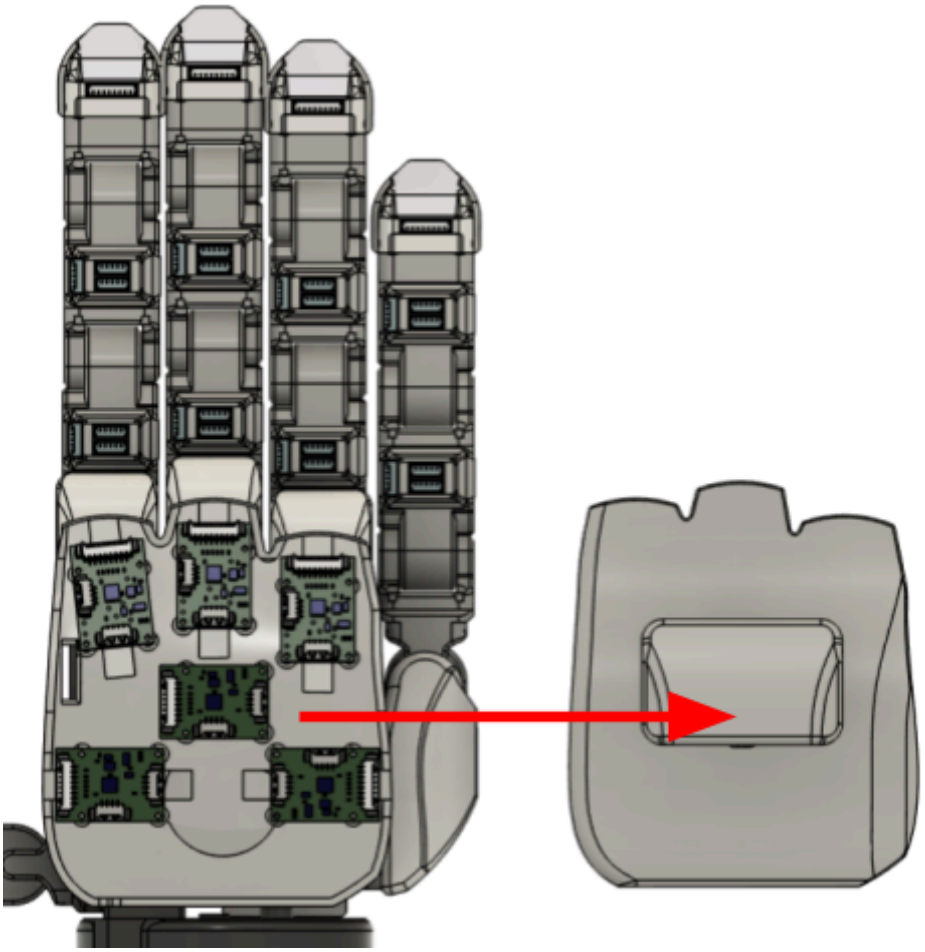


5.2 Phalange sensor (uSPa 22) connection


1. Please connect the A **Group** I2C Hub to the B **Group** I2C Hub using the provided 80 mm Phalange Cable.


2. Next, connect the B **Group** I2C Hub to the Breakout Board, as shown in the picture.
3. For cable lengths:
4. **Index, Middle, and Ring fingers:** use 150 mm Phalange cables. The cables are preinstalled.
5. **Thumb and Pinky:** Please use longer variations, such as 250 mm or 300 mm Phalange cables, since these two fingers have greater movement.
   Please choose the cable length that best fits your application.
   The 250 mm variation is preinstalled.

6. Finally, please connect each finger to the corresponding SDA channel:
   a. Thumb => Channel 0
   b. Index => Channel 1
   c. Middle => Channel 2
   d. Ring => Channel 3
   e. Pinky => Channel 4

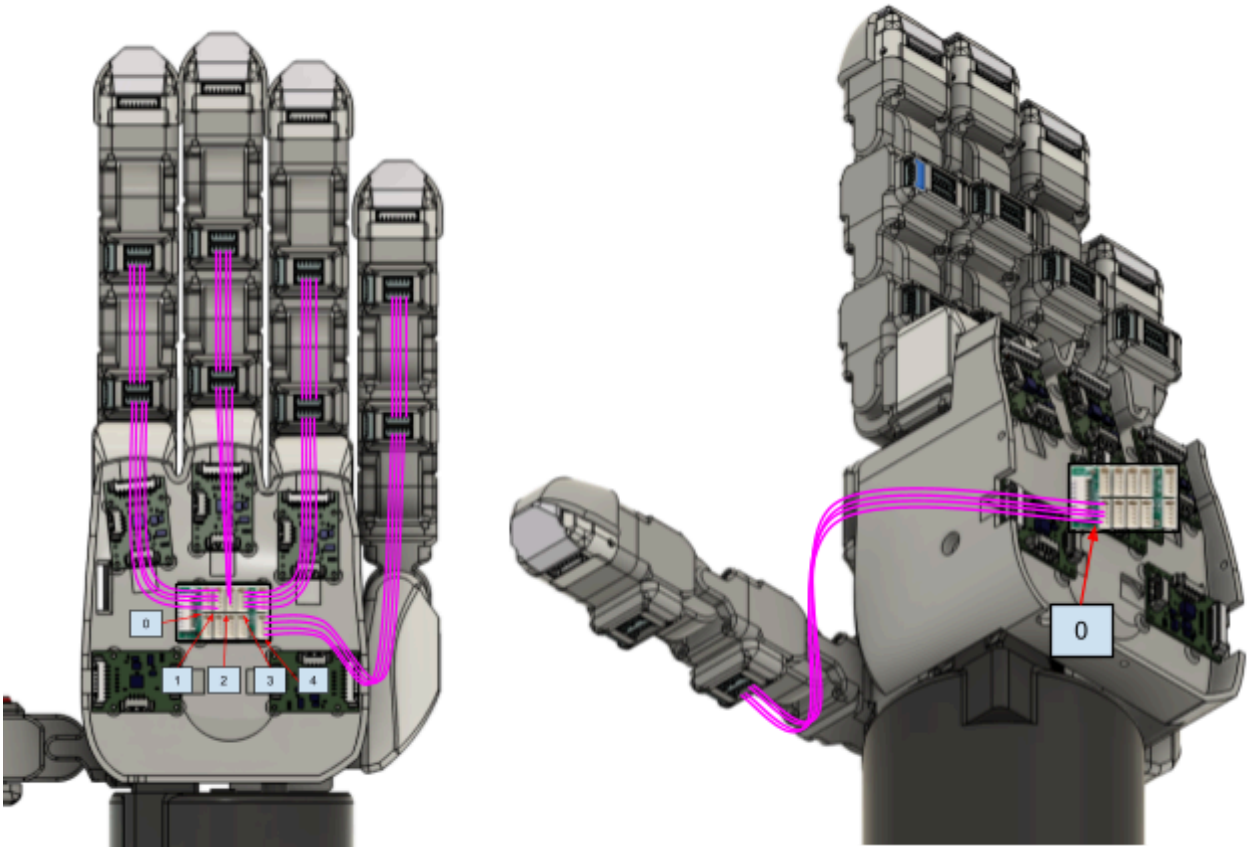

7. The preinstalled cables look as follows:

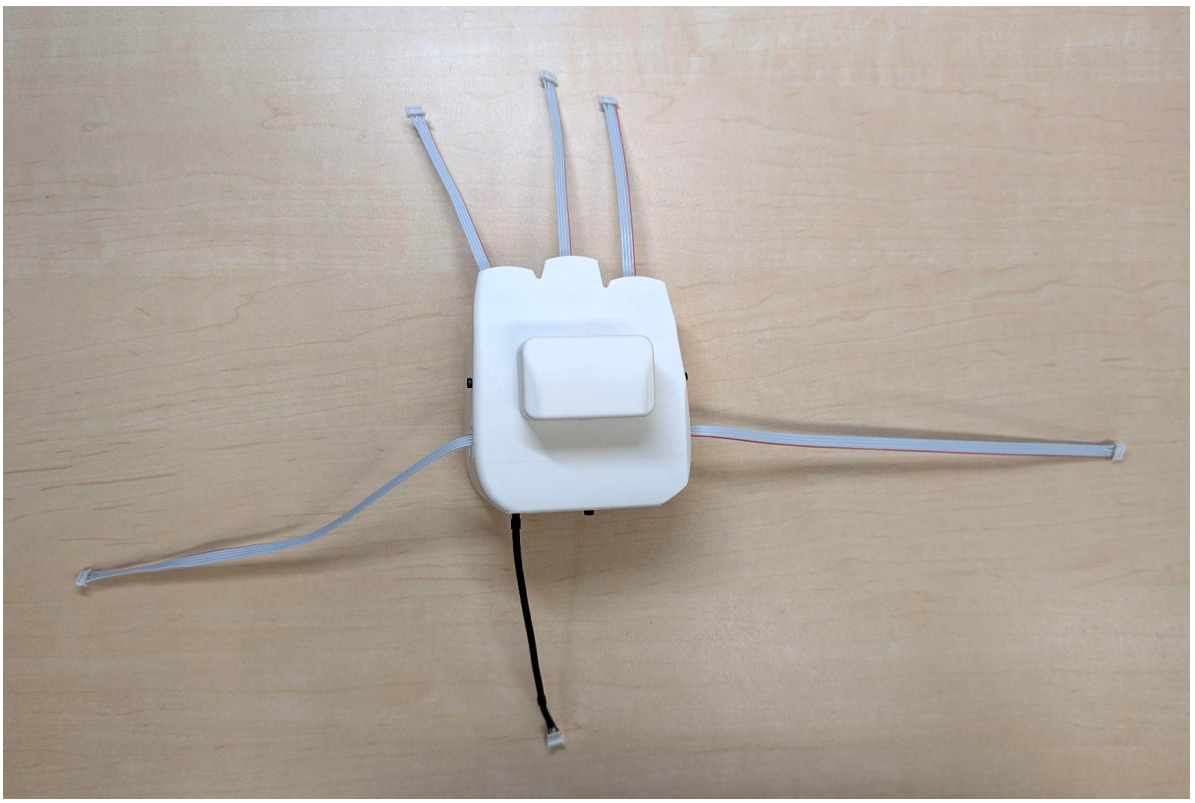


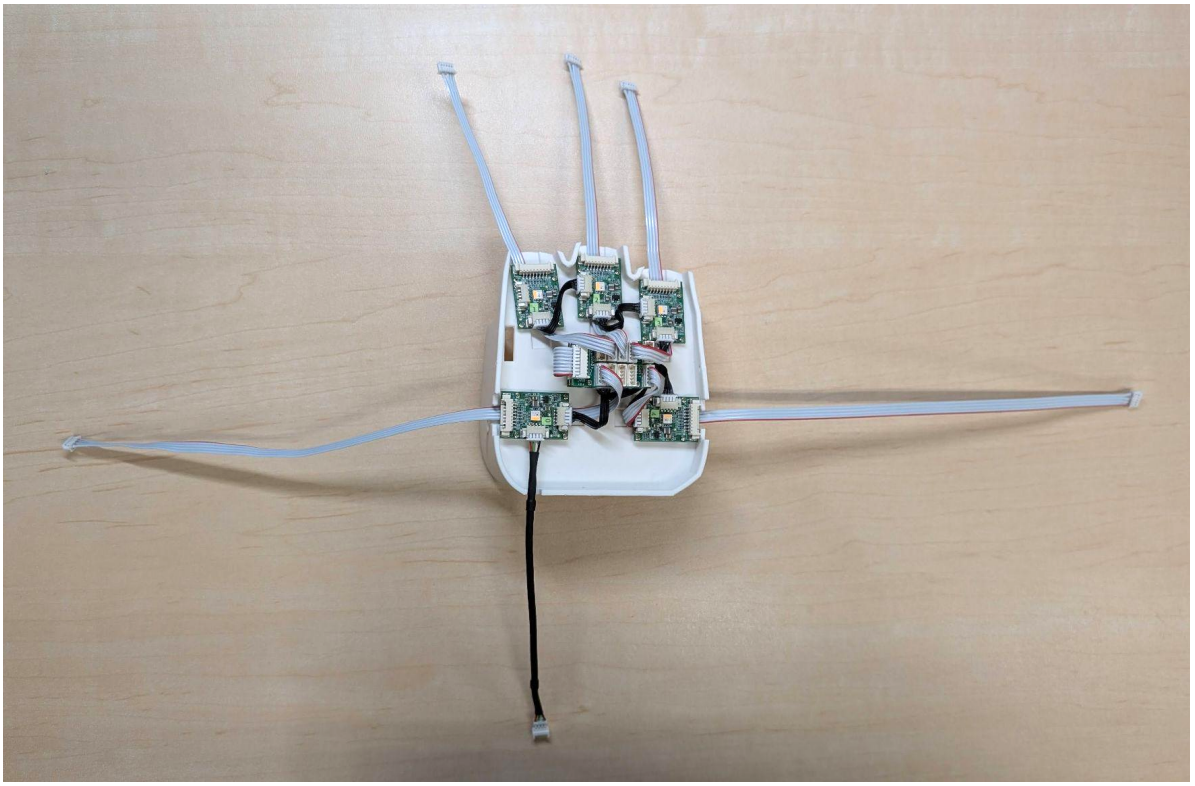

Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.


5.3 Fingertip connection


1. Please connect each **Fingertip** to the **XMC** using the provided Fingertip cable (The cables of **200 mm, 250 mm, and 300 mm** are provided).
2. Please use **200 mm cables** for the **Index, Middle, and Ring** fingers.
3. For the **Thumb and Pinky**, please use either the **250 or 300 mm** ones, as these two fingers have a greater range of movement.
   Choose the cable length that best suits your application.

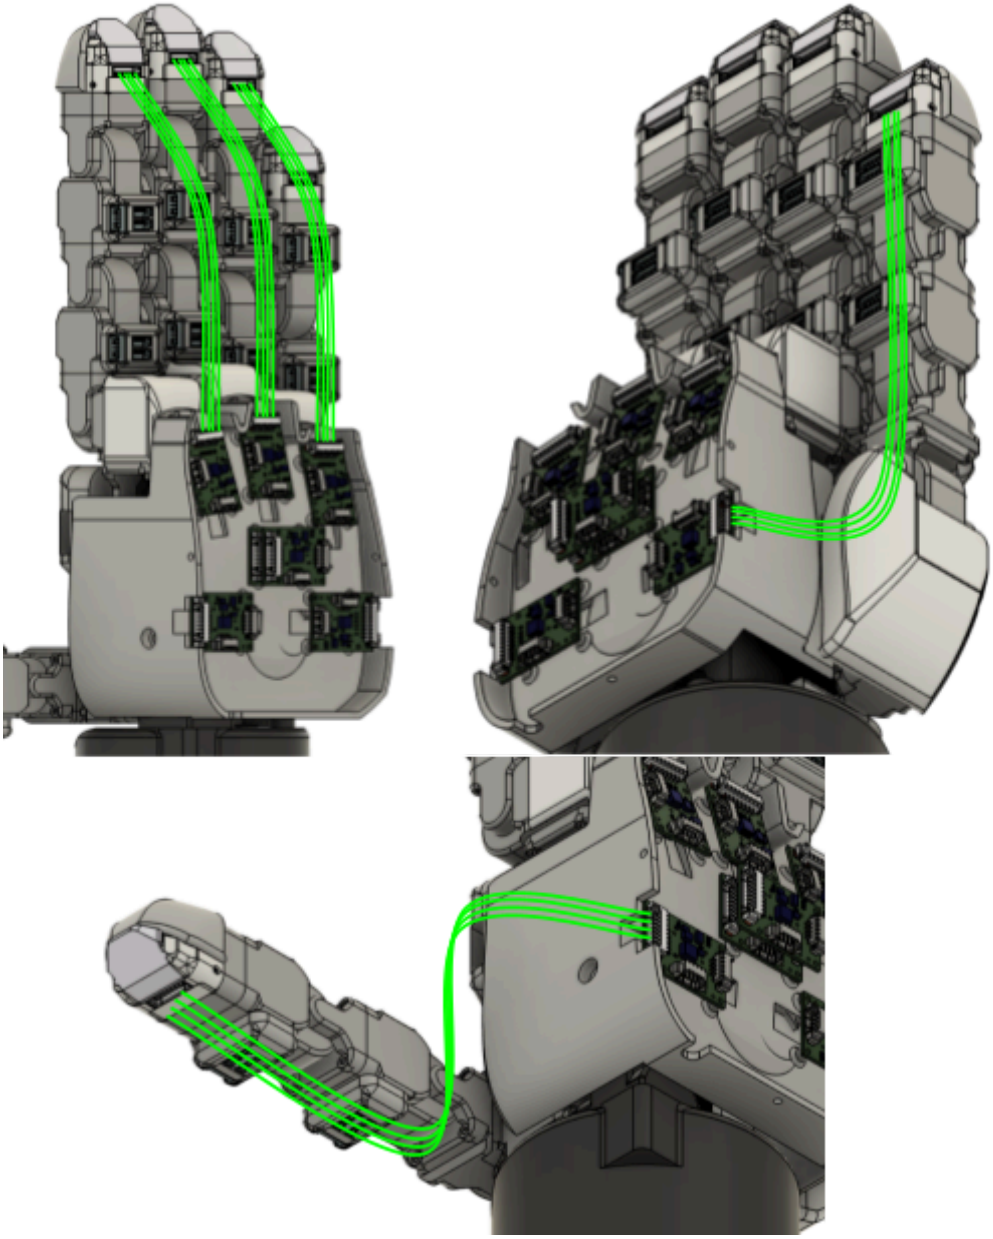


5.4 Palm sensor connection

1. Please route the uSPa46 palm sensor cable through the inside of the DG-5F-back-cover-enclosure (there is a groove for guiding the cable through).
2. Then connect the cable to the bottom-most XMC in the centre stack **(ID 5)**, as shown in the picture.

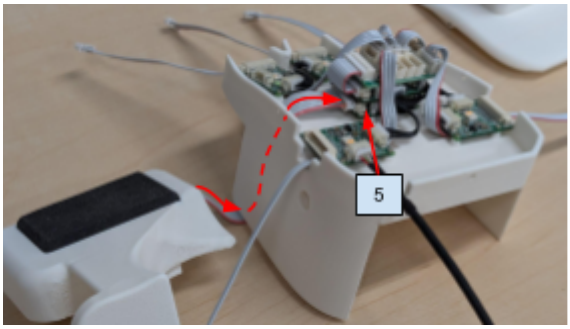


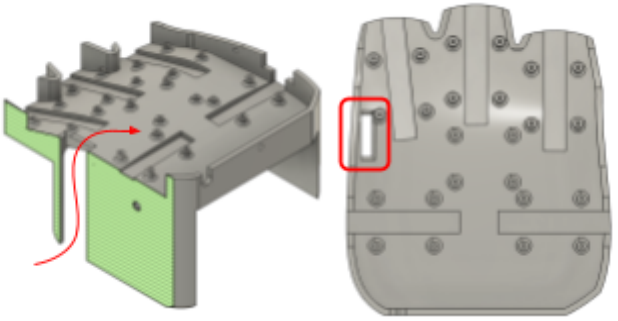


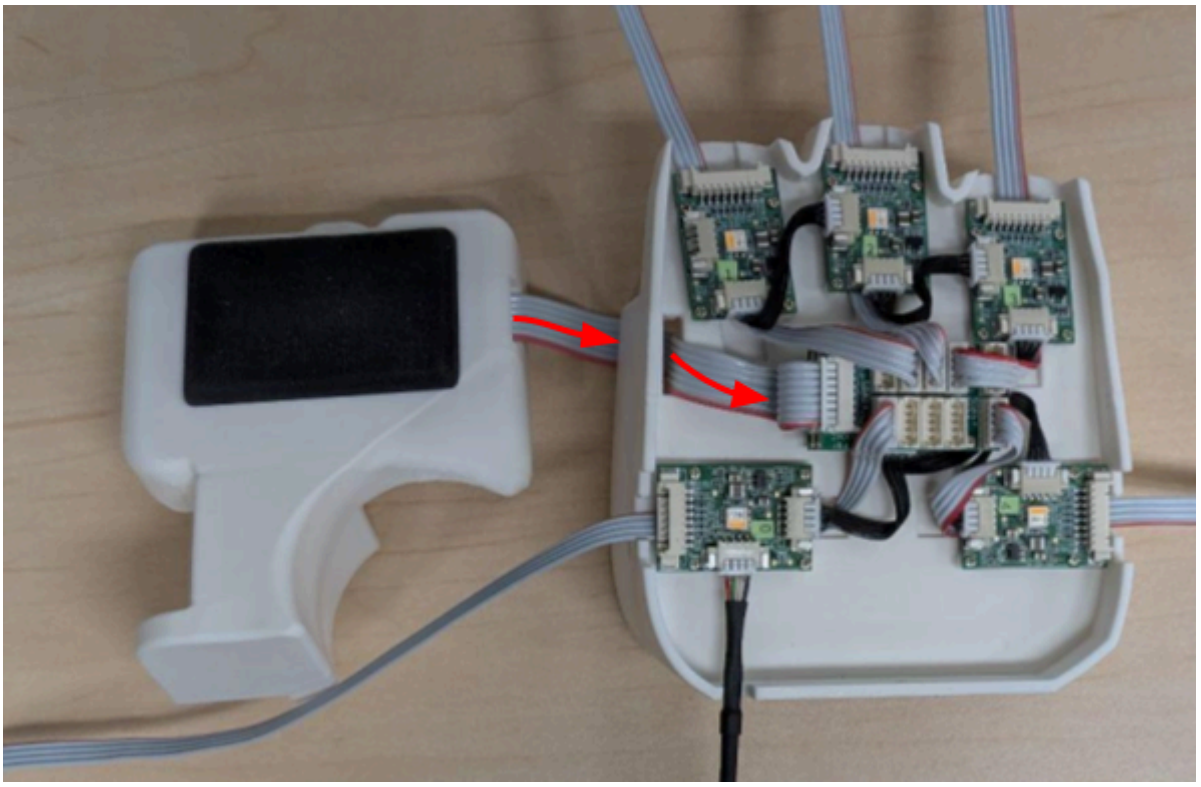


5.5 Cover lid installation

1. After connecting all the cables, please close the DG-5F-Back-Cover-Lid using the three screws that were removed earlier, as shown in the picture.

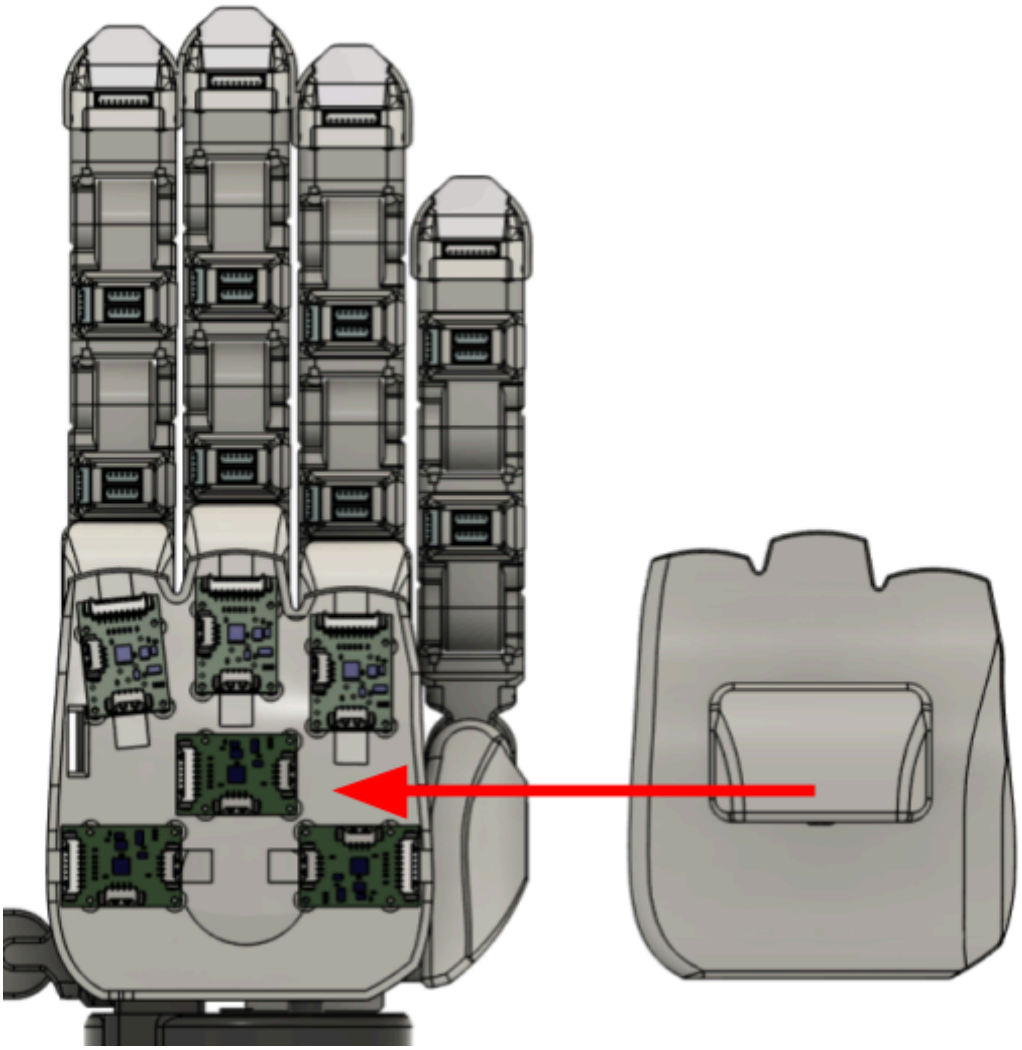

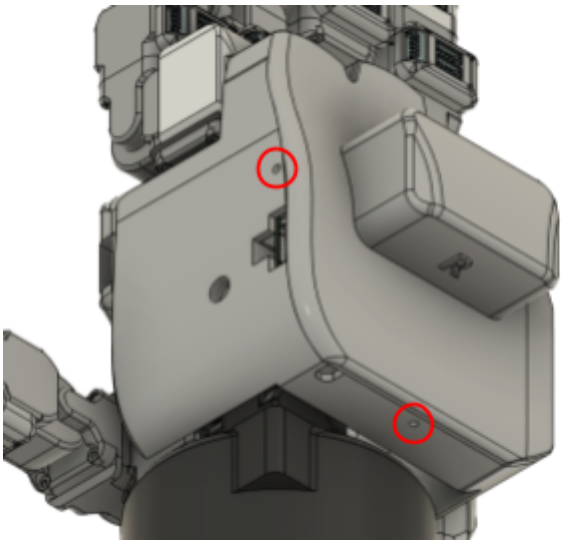

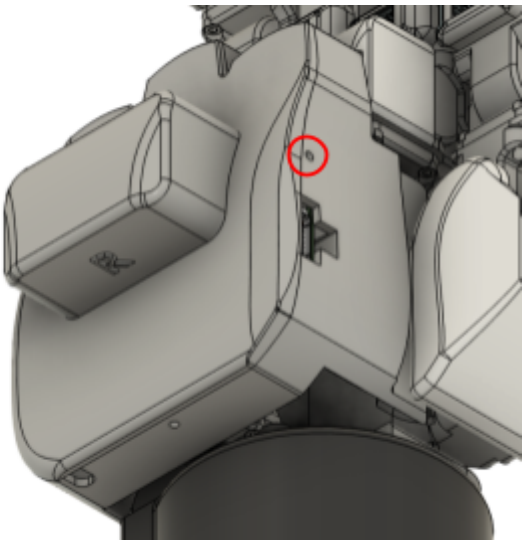


Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.

6. Replacing the outer skin of the fingertip


6.1 The outer skin removal

1. Please wear a pair of gloves to prevent scratching the Fingertip Nail.
2. Please slide off the Fingertip Nail from the DG-5F-Top-Bracket and remove it.




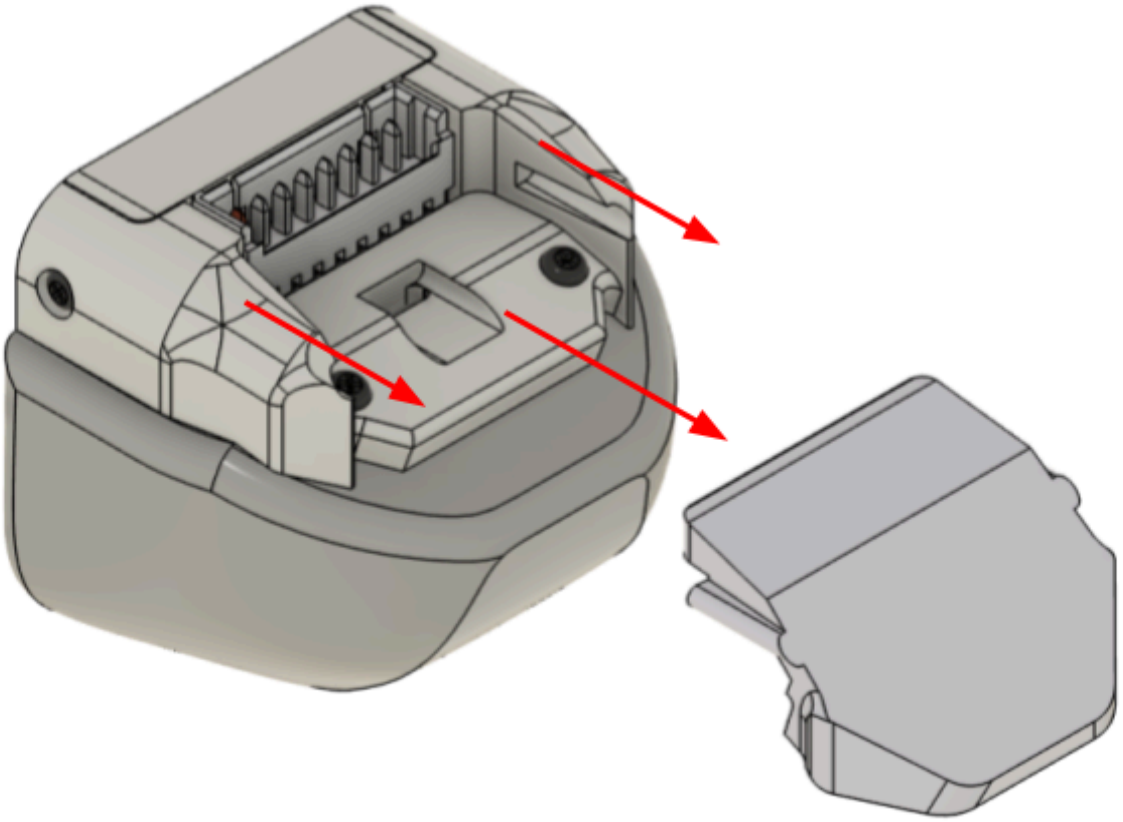

3. Remove the **4x** M1.4×6 mm SNZ screws, and then remove the DG-5F-Top-Bracket, as shown in the picture.

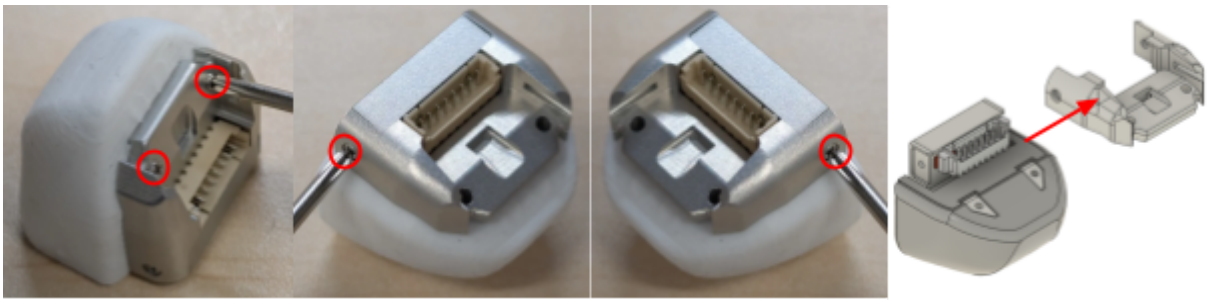


4. Gently and slowly peel off the DG-5F-Fingertip-Outer-Cover, starting from the bottom, as shown in the picture.

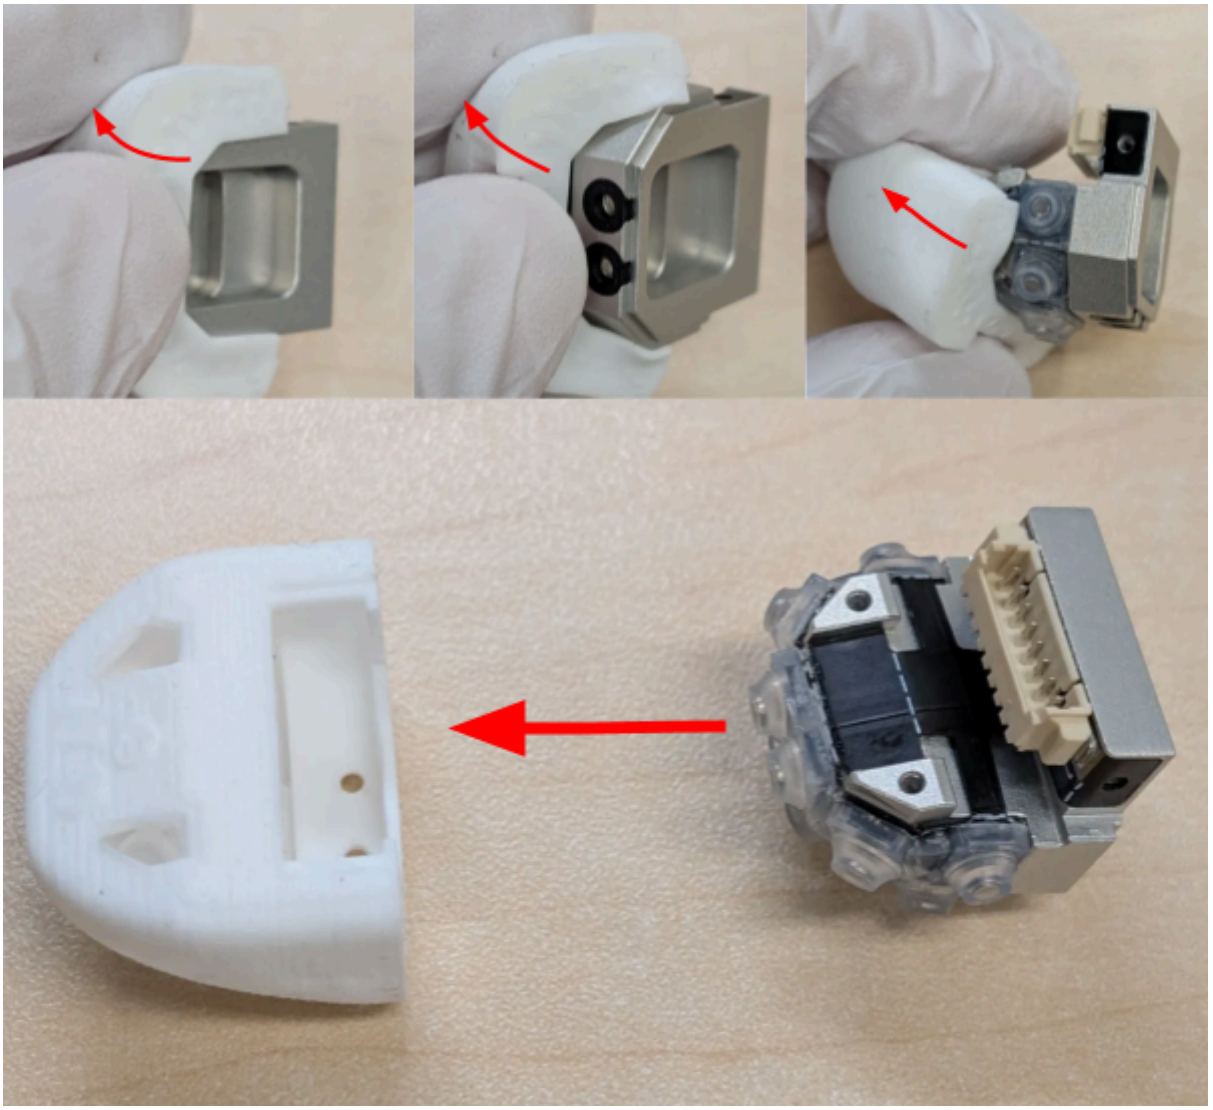


6.2 The outer skin reinstallation

1. Please follow the pictures below from left to right to attach a new DG-5F-Fingertip-Outer-Cover to the DG-5F-Fingertip-Main-Frame
2. Please make sure the cutouts on DG-5F-Fingertip-Outer-Cover **are properly aligned** with the features on DG-5F-Fingertip-Main-Frame.
3. Please make sure that the silicone **wraps securely over the bottom** of the DG-5F-Fingertip-Main-Frame, as shown in the picture.

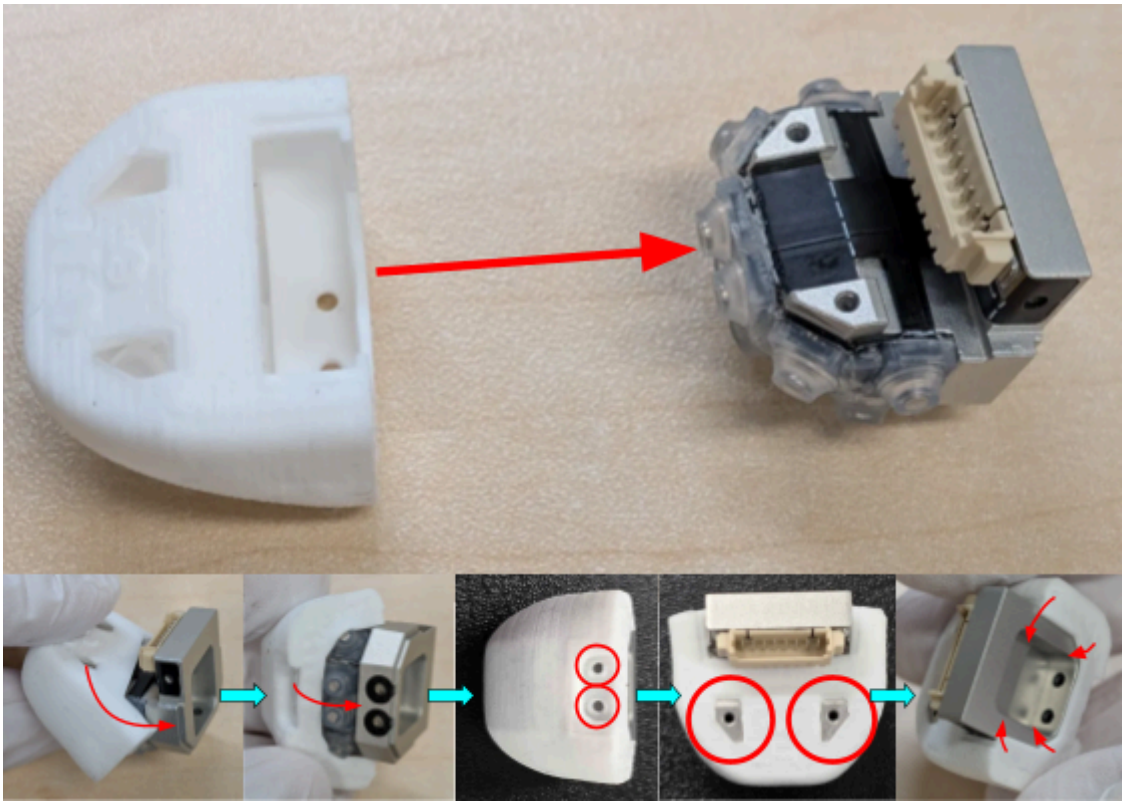


4. Reinstall the DG-5F-Top-Bracket onto the DG-5F-Fingertip-Outer-Cover by **pressing it down firmly** and ensuring there is **no gap** between the two parts. The DG-5F-Top-Bracke should compress the silicone.
5. Then, secure **one side** using **1x M1.4 × 6 mm SNZ screw**, as shown in the picture.

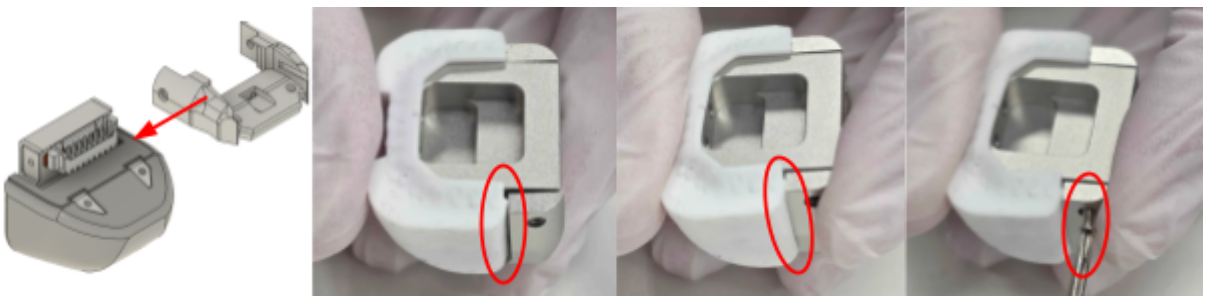


6. Then, repeat the same procedure on the **other side** by pressing down firmly and ensuring there is **no gap** between the parts.
7. Secure it using **1x M1.4 × 6 mm SNZ screw**, as shown in the picture.



8. Then, install the remaining **2x M1.4 × 6 mm SNZ screws**, as shown in the picture.

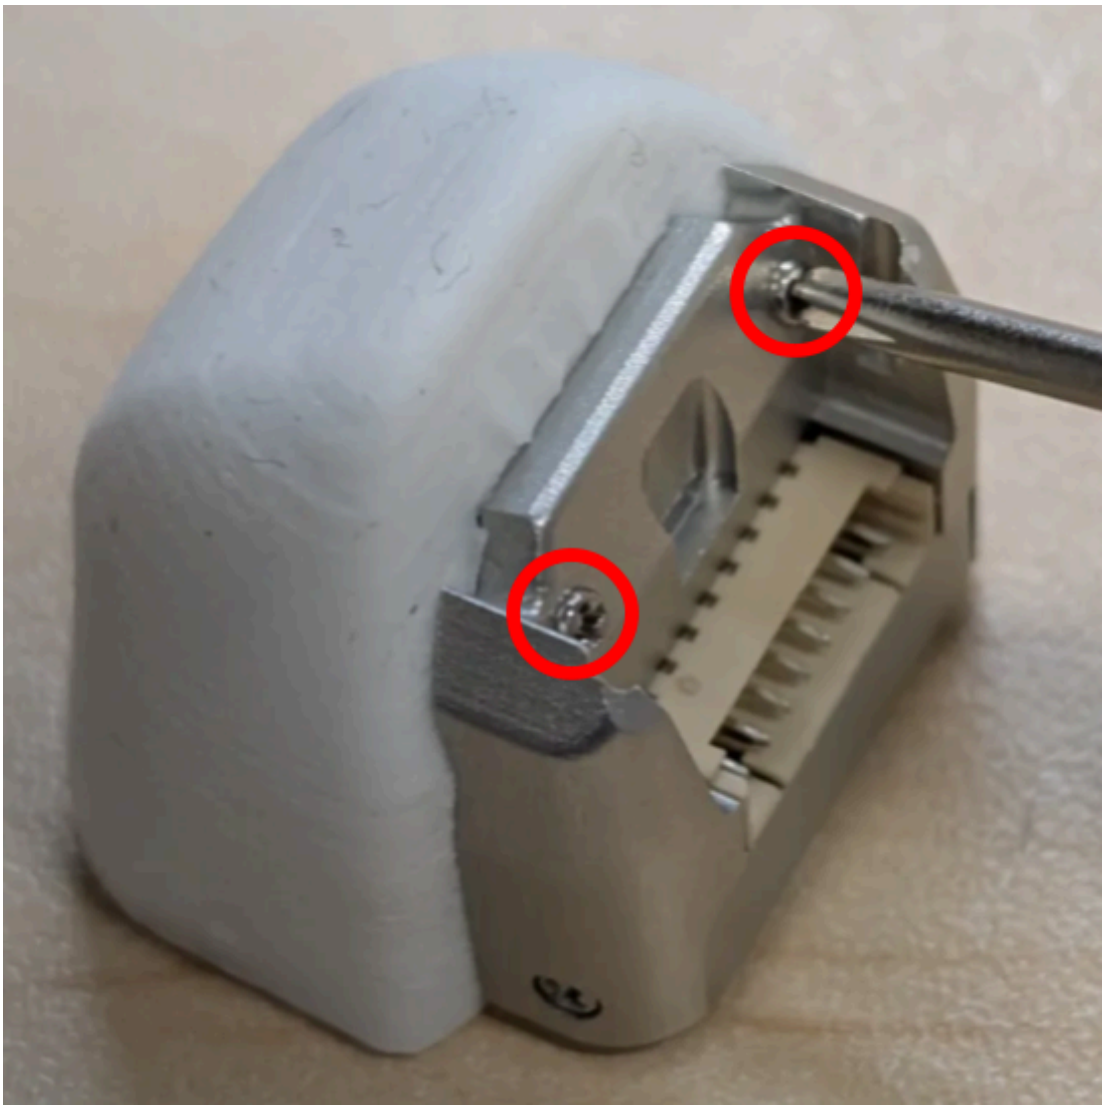

9. Please align the side tabs of the Fingertip Nail with the cutouts of the DG-5F-Top-Bracket, and slide the Fingertip Nail back into the DG-5F-Top-Bracket until you hear a “click” sound.

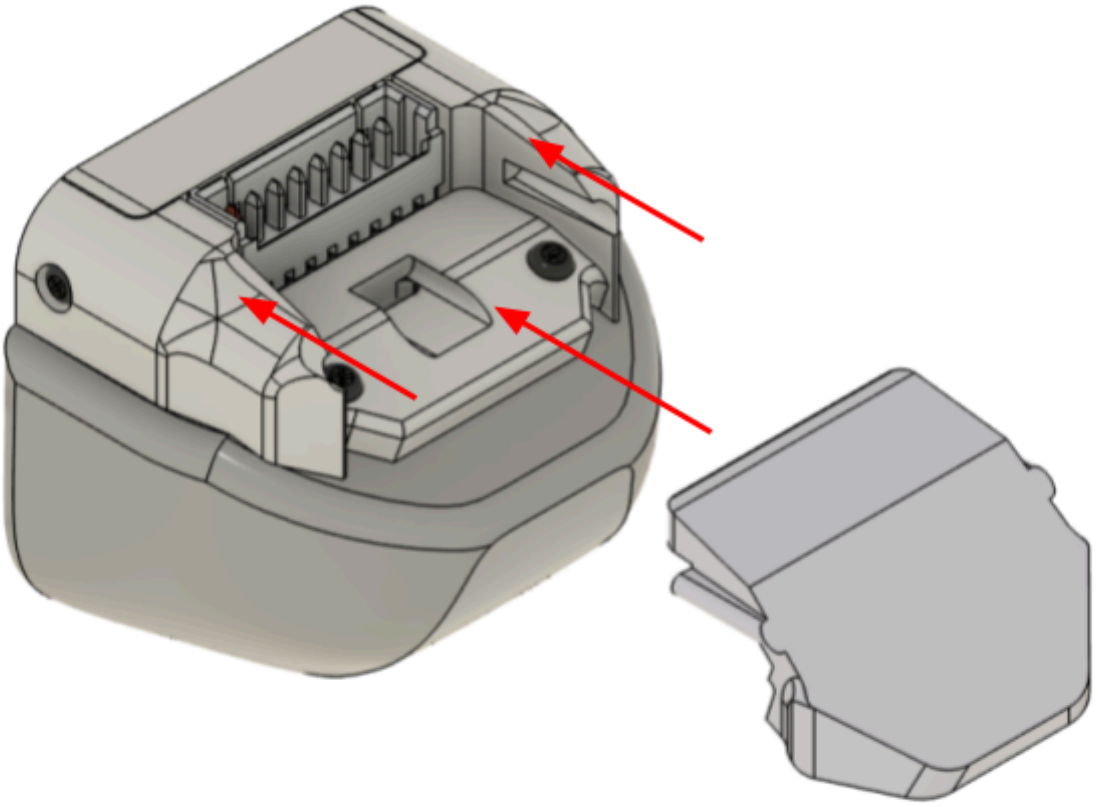



7. Contact Information

XELA Robotics Co., Ltd.
Website: https://www.xelarobotics.com
Email:

End of Document

Document Version: 1.0
Date: December 2025
Company: XELA Robotics Co., Ltd.