


12X12FT


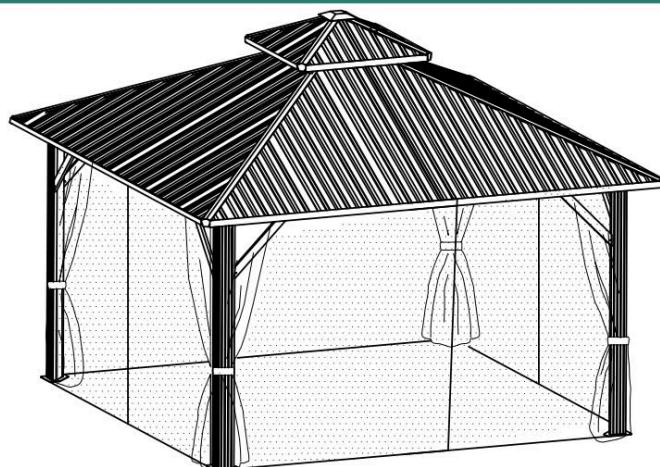


Item no.	Reference Image	Qty.
A		X4
B		X4
B1		X4
E1		X4
Ea		X4
Eb		X4
F1		X8







## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G1		X4
G3		X4
G5		X4
G6		X4
H		X4
H1		X4
J		X4
K		X4
K1		X4
L		X1
M		X1
N		X12
N1		X4

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
P		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4
Q7		X4
Q8		X4
S		X4
Sa		X4
T		X4
T1		X4

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
U		X112	V1		X2
W		X4	V2		X2
W3		X4	W1		X4
Z		X72	Y		X116
1	 M6X16mm	X144	Z1		X16
3	 M6X25mm	X9	2	 M6X23mm	X72
5	 M6X10mm	X8	4	 ST4.8X12mm	X16
7	 M6X47mm	X32	6	 M6X42mm	X4
9		X12	8		X16
12	 M5X12mm	X12	10		X1
14		X12	13		X1
16		X12	15		X1
18		X4	17		X12

# ASSEMBLY INSTRUCTIONS

**1**

X4





Ⓐ4pcs



Ⱪ4pcs



①12pcs

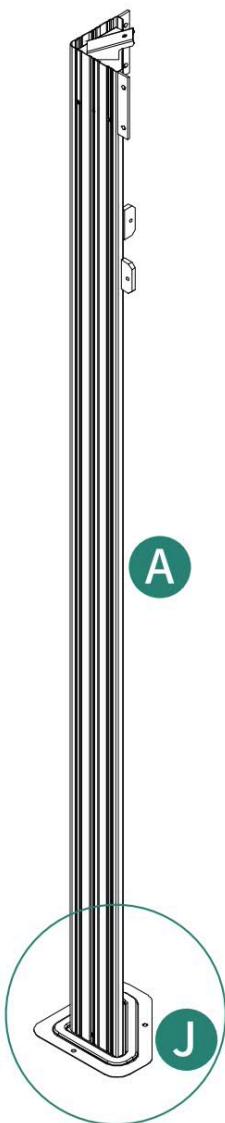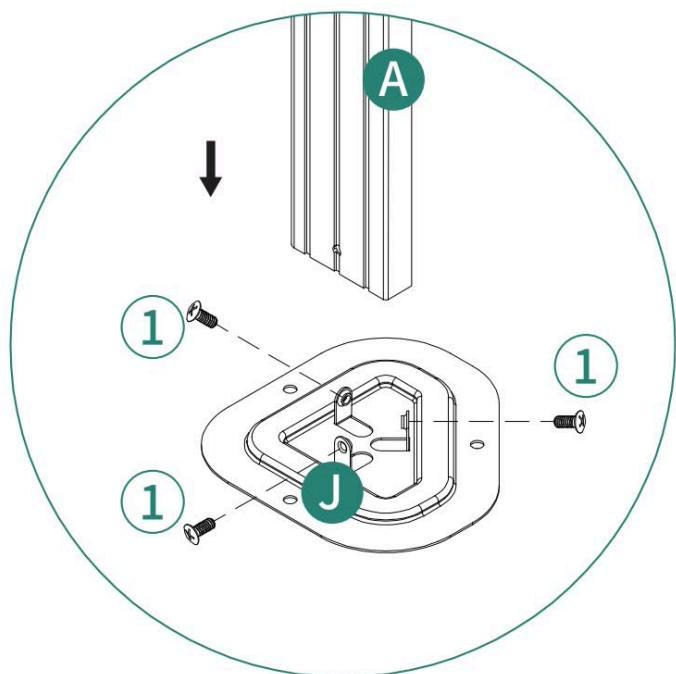

## ASSEMBLY INSTRUCTIONS

**2**

X4



(B)4pcs



(B1)4pcs



(P)4pcs




(U)112pcs



(1)32pcs

When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.



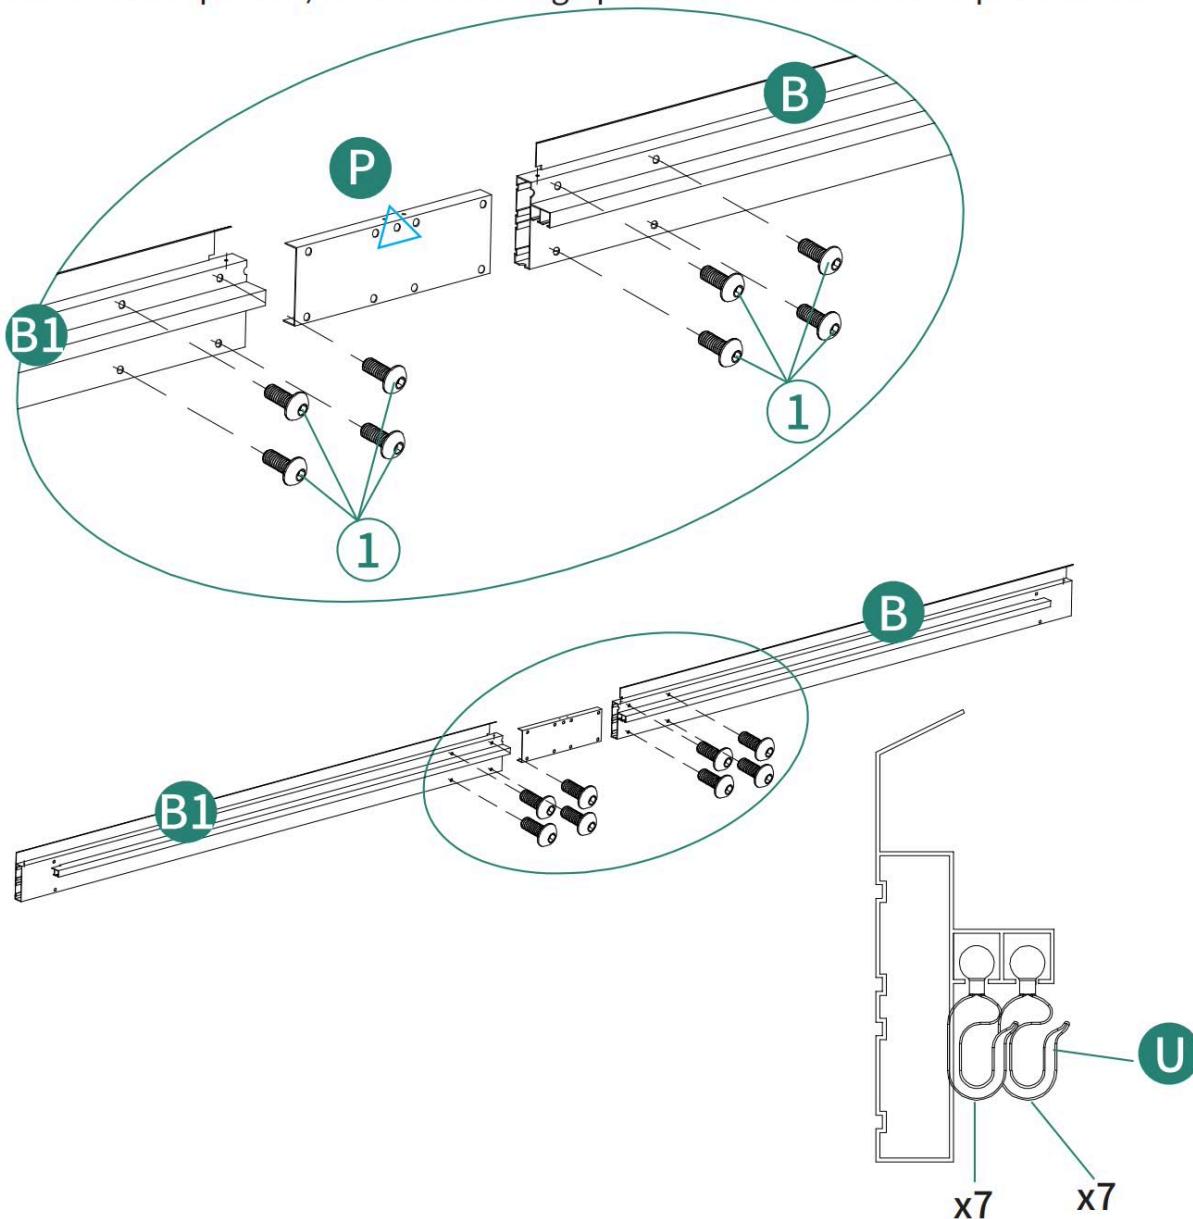


## ASSEMBLY INSTRUCTIONS

3





①16pcs ⑧16pcs

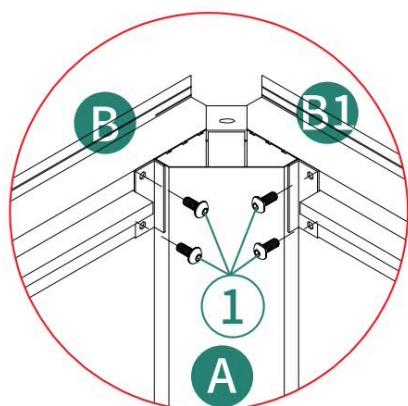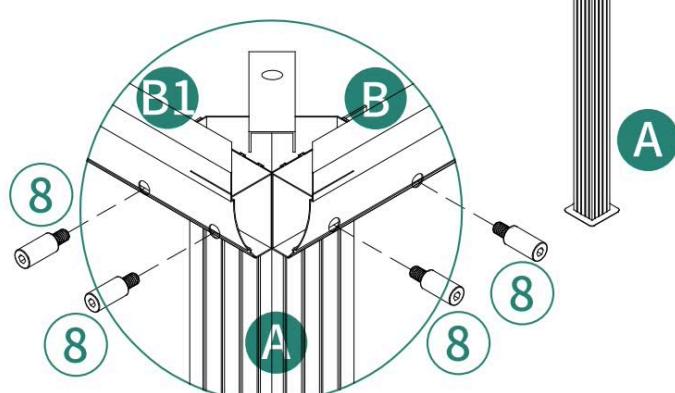
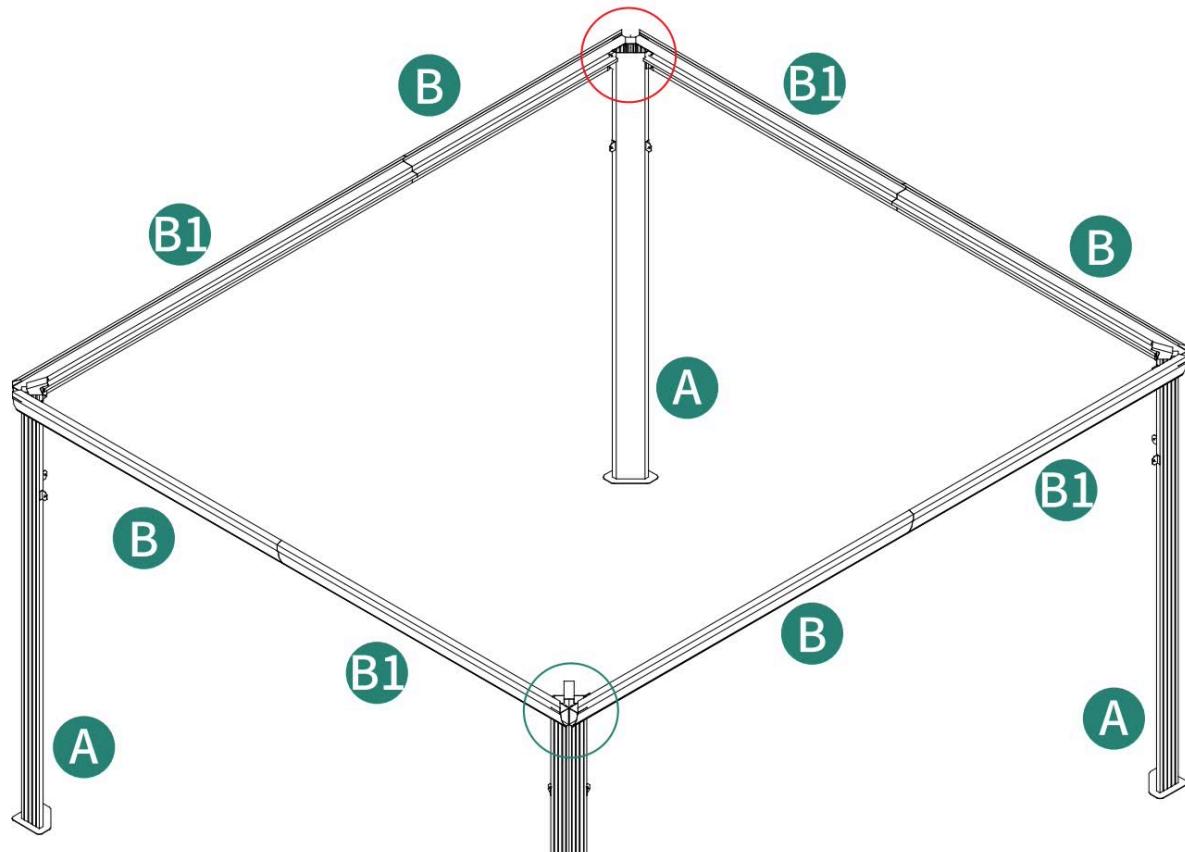


## ASSEMBLY INSTRUCTIONS

4

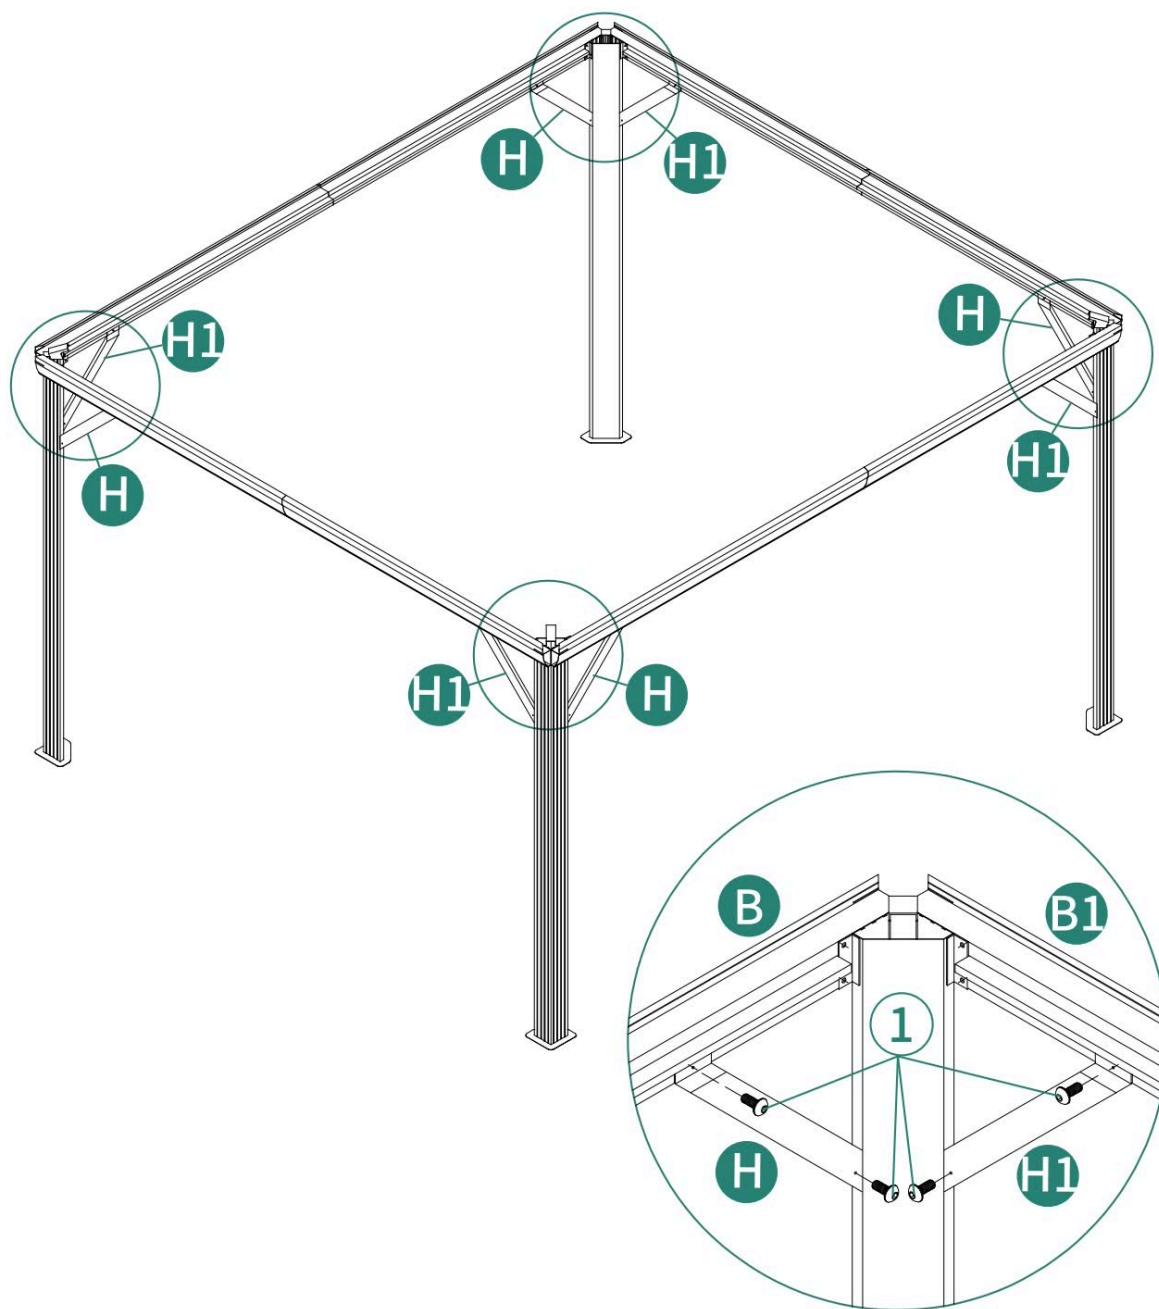
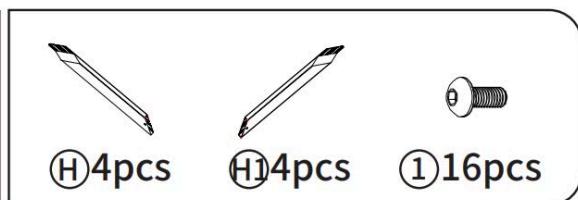


## ASSEMBLY INSTRUCTIONS

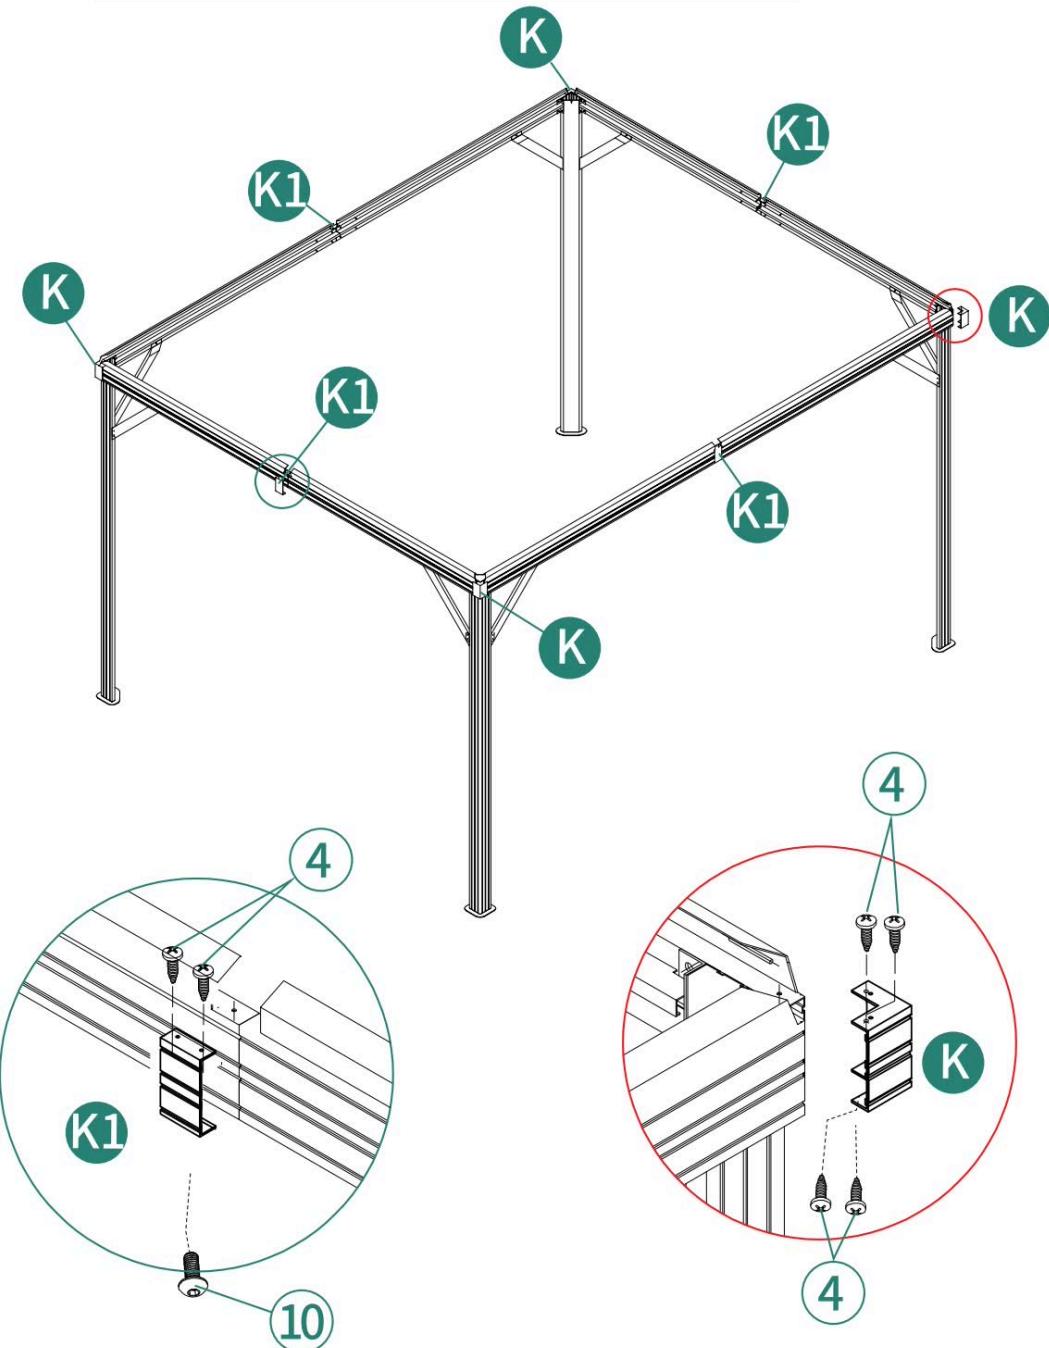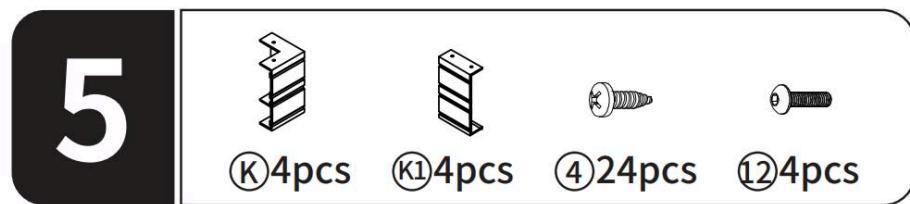



## ASSEMBLY INSTRUCTIONS

**6**  
—  
**X4**

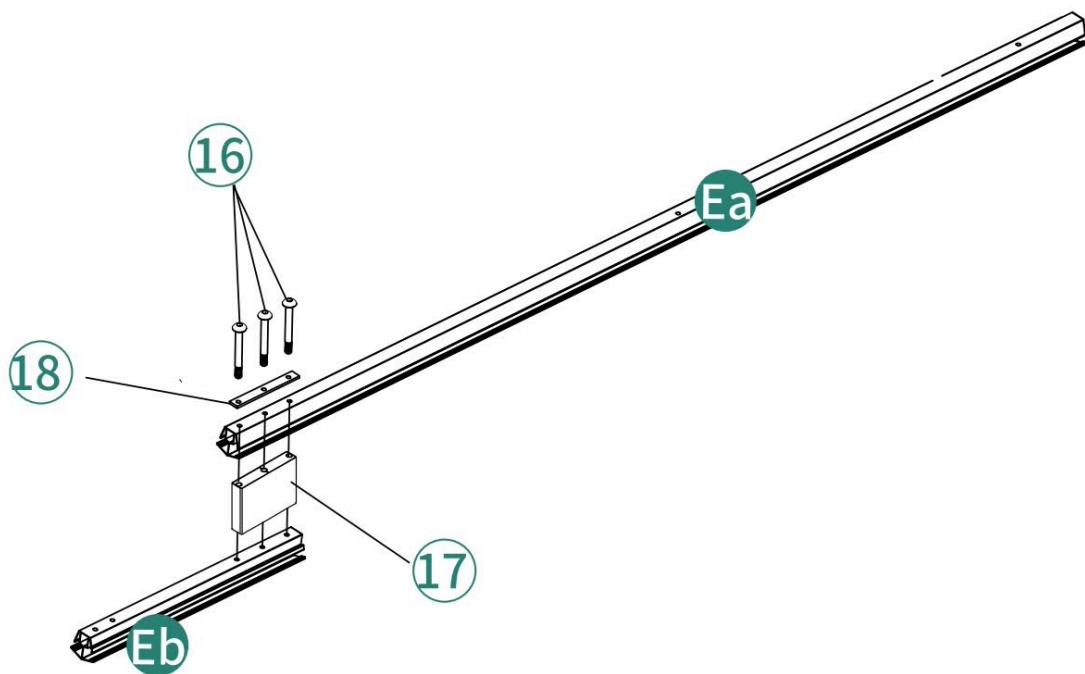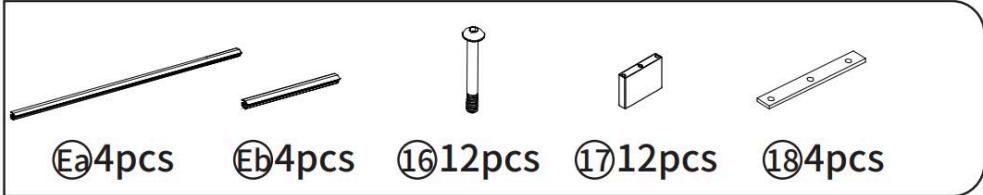


## ASSEMBLY INSTRUCTIONS

7

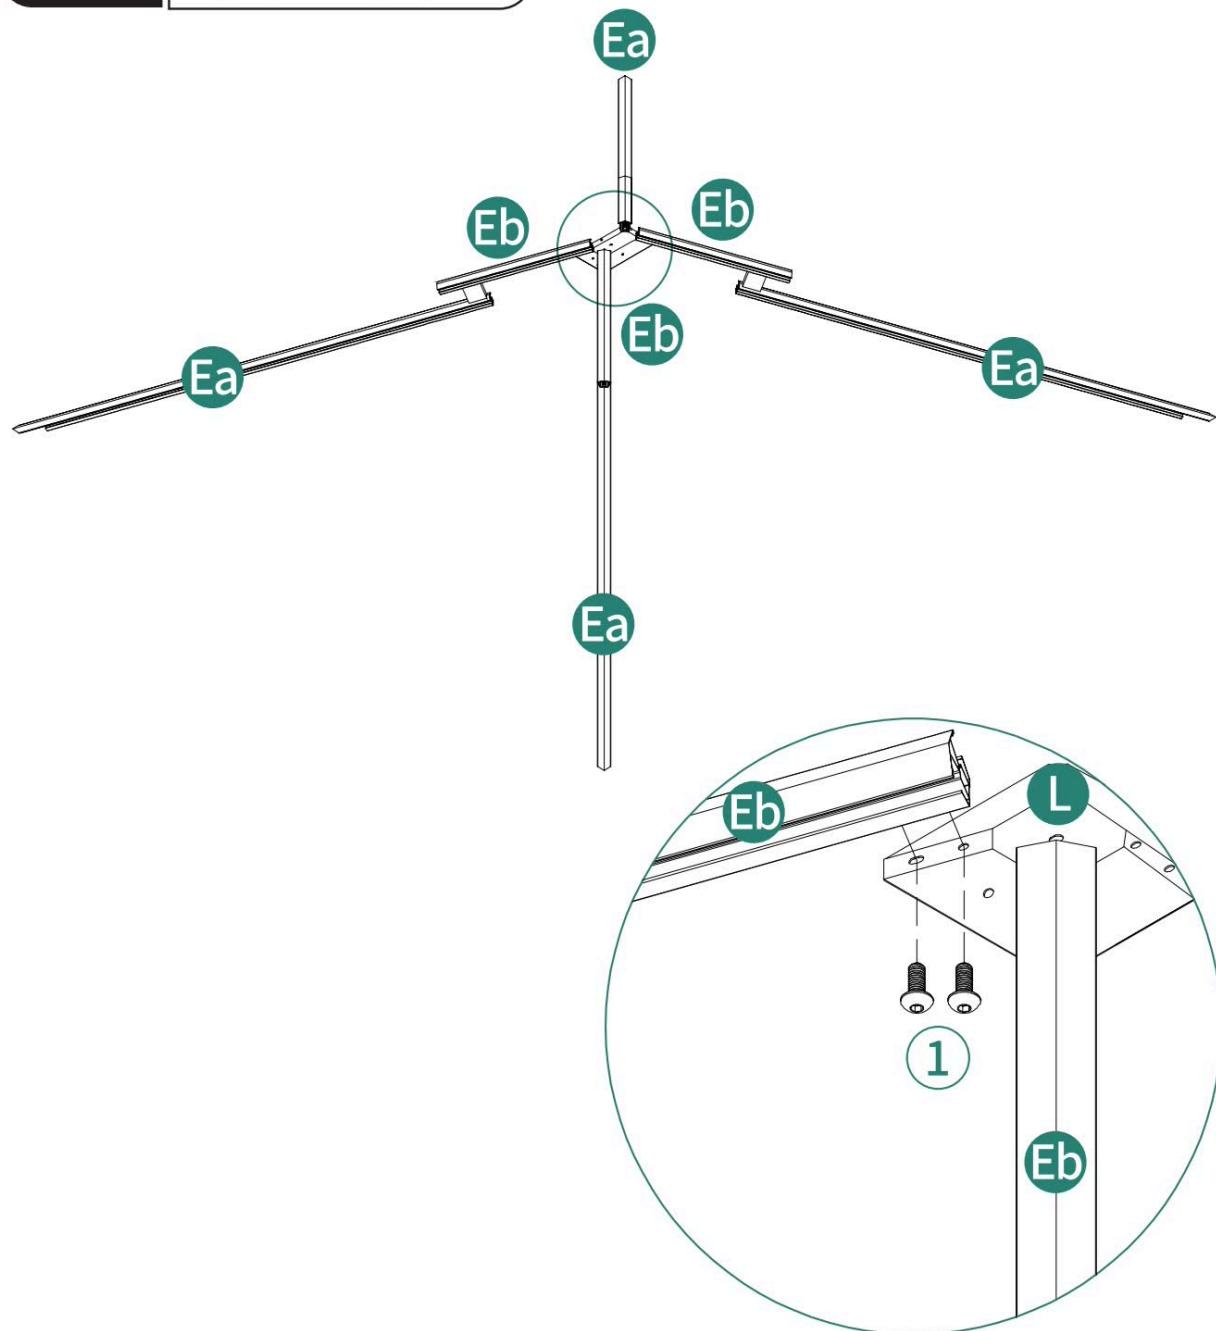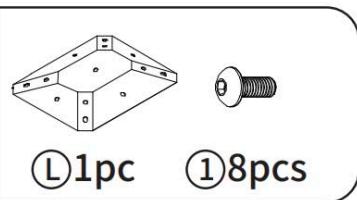



## ASSEMBLY INSTRUCTIONS

8  
① 4pcs

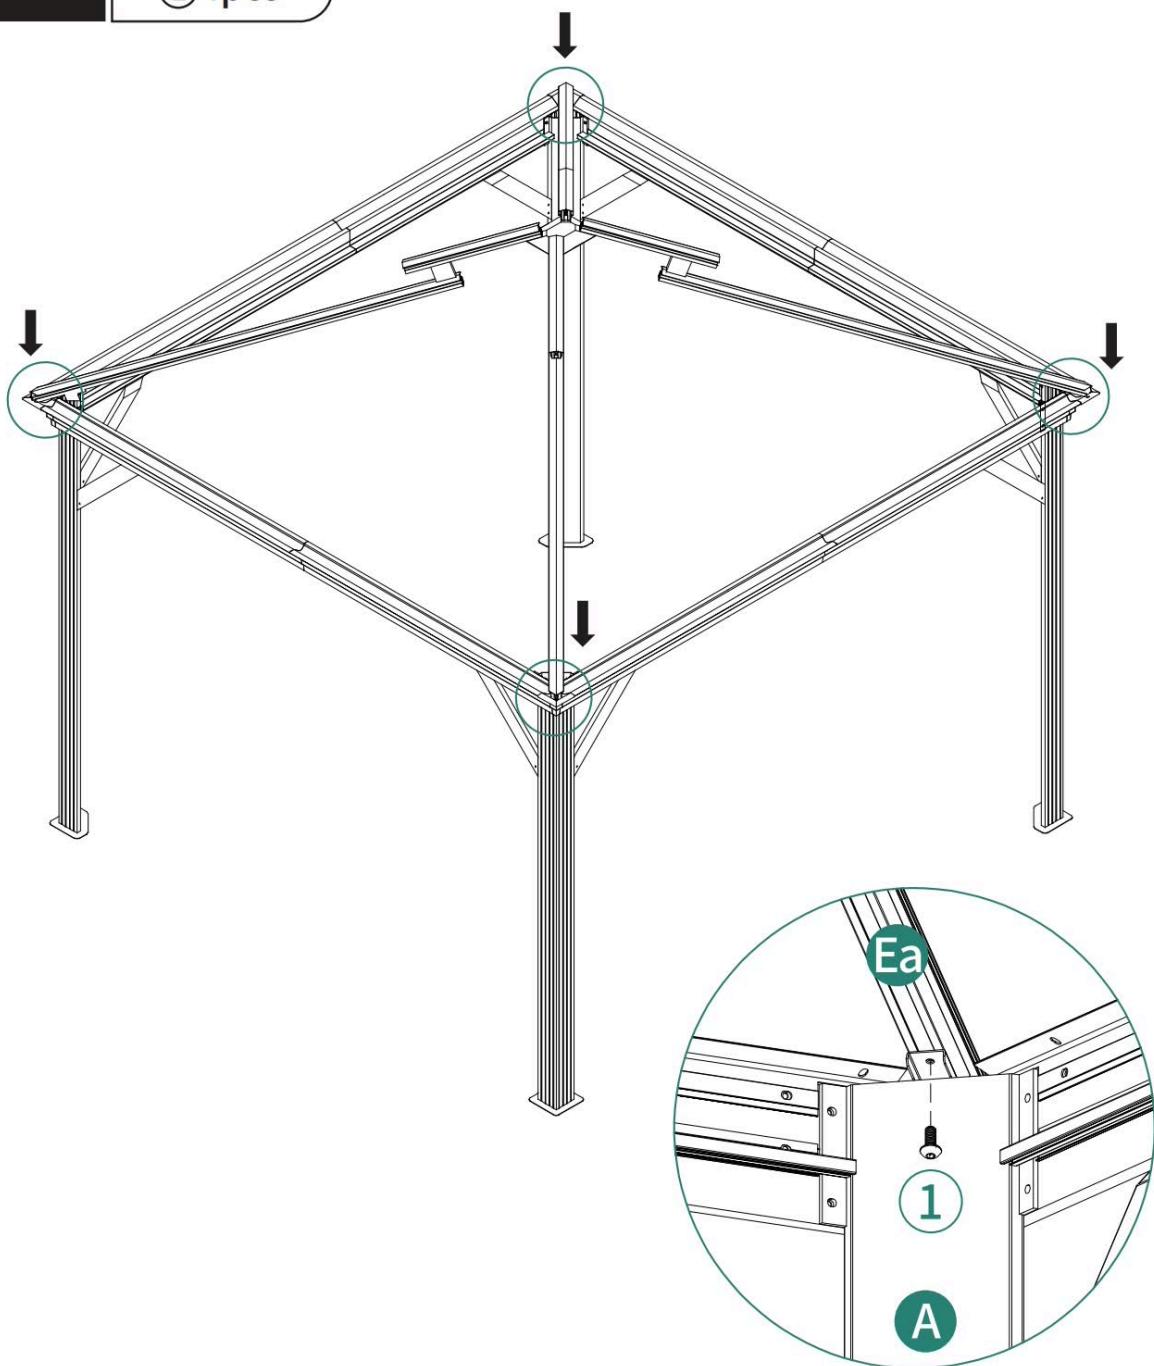



## ASSEMBLY INSTRUCTIONS

9

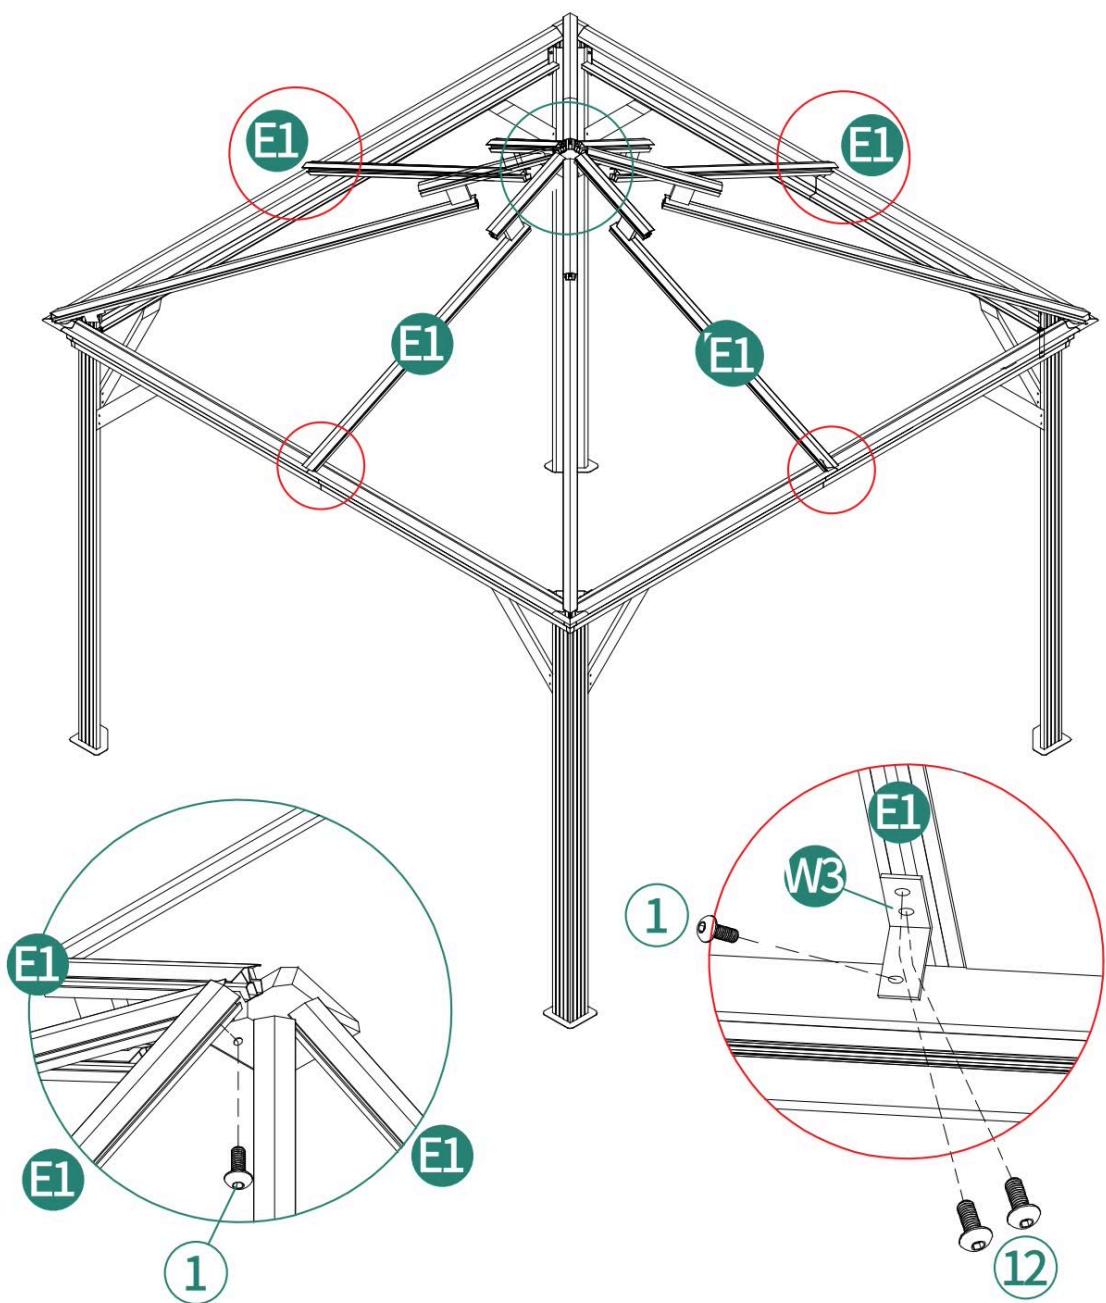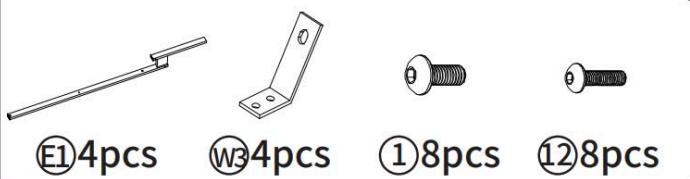





## ASSEMBLY INSTRUCTIONS

10

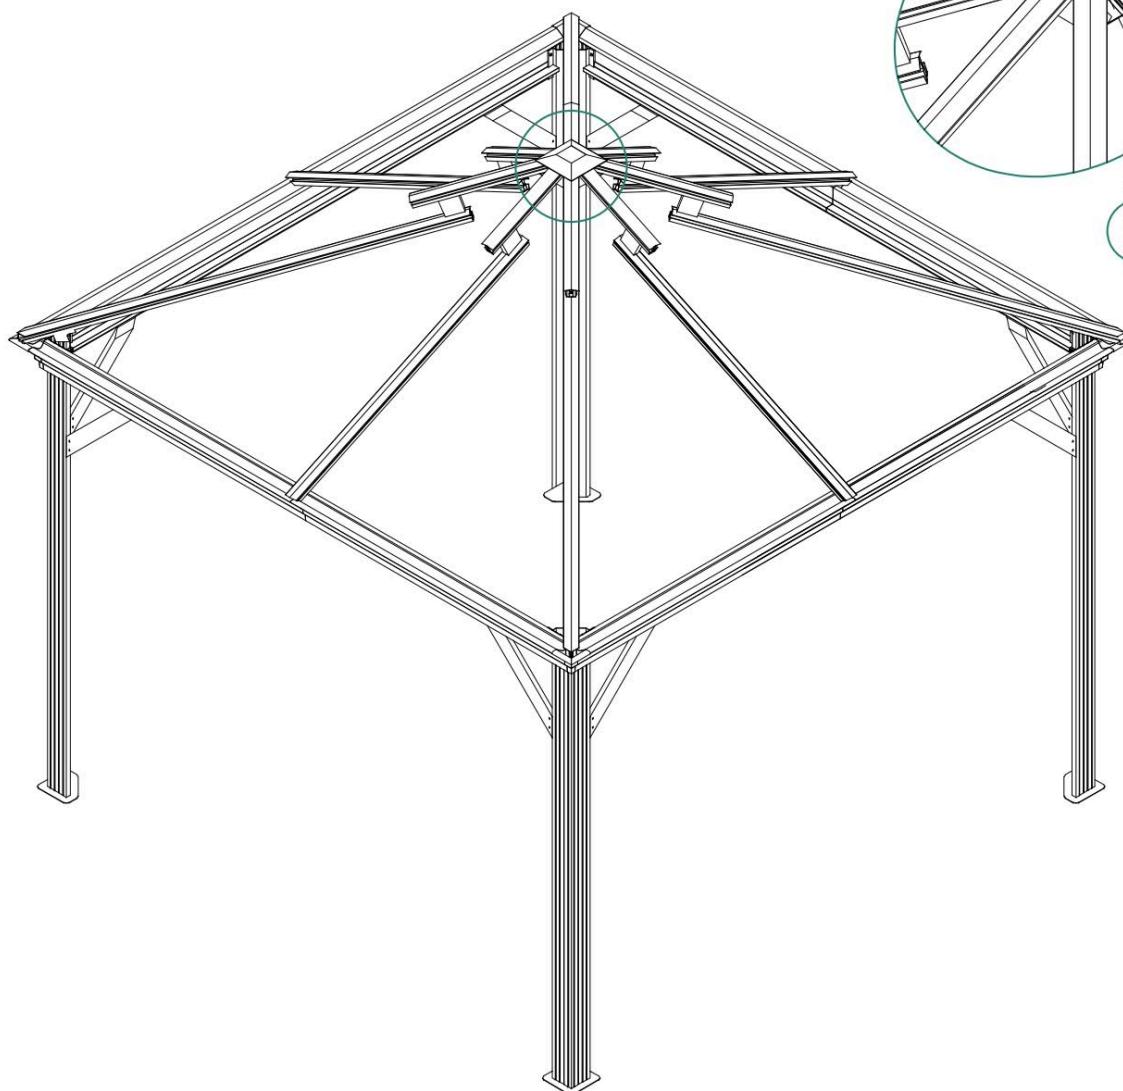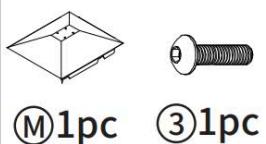

## ASSEMBLY INSTRUCTIONS


11

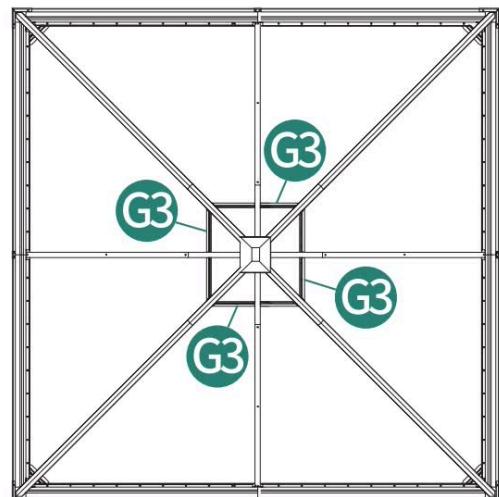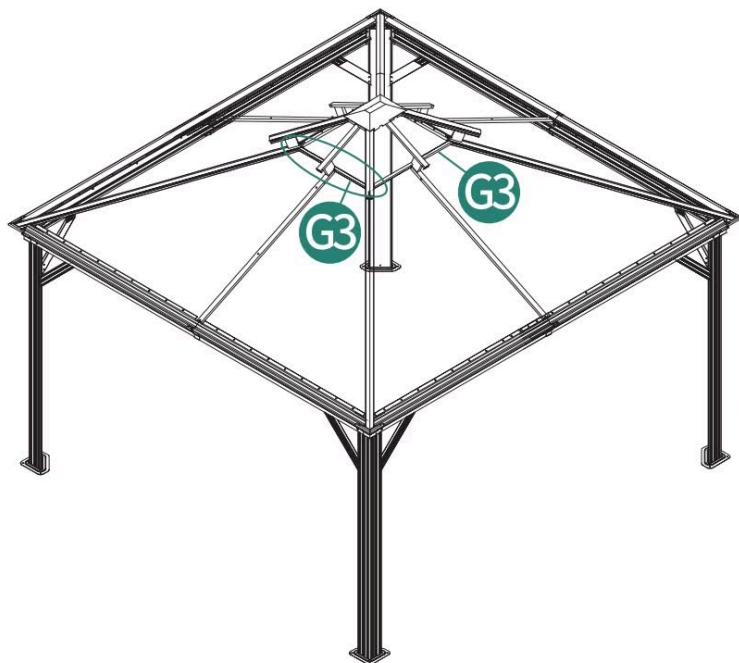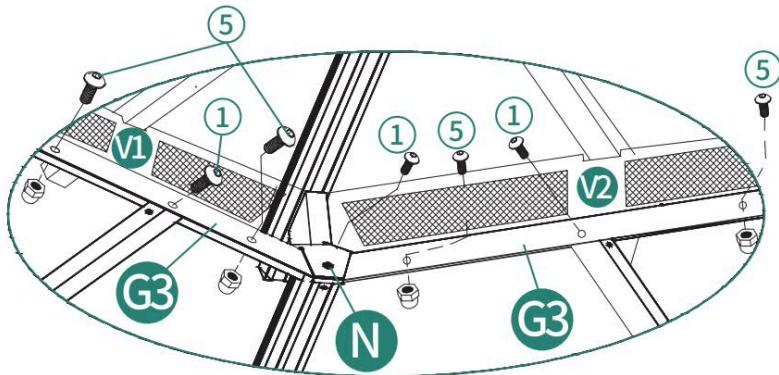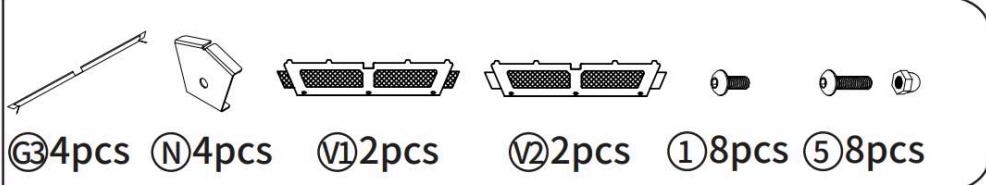


## ASSEMBLY INSTRUCTIONS

**12**  
**X4**

- ① 4pcs
- ② 4pcs
- ③ 4pcs
- ④ 4pcs
- ⑤ 4pcs
- ⑥ 4pcs
- ⑦ 4pcs
- ⑧ 4pcs
- ⑨ 4pcs
- ⑩ 4pcs
- ⑪ 72pcs
- ⑫ 16pcs





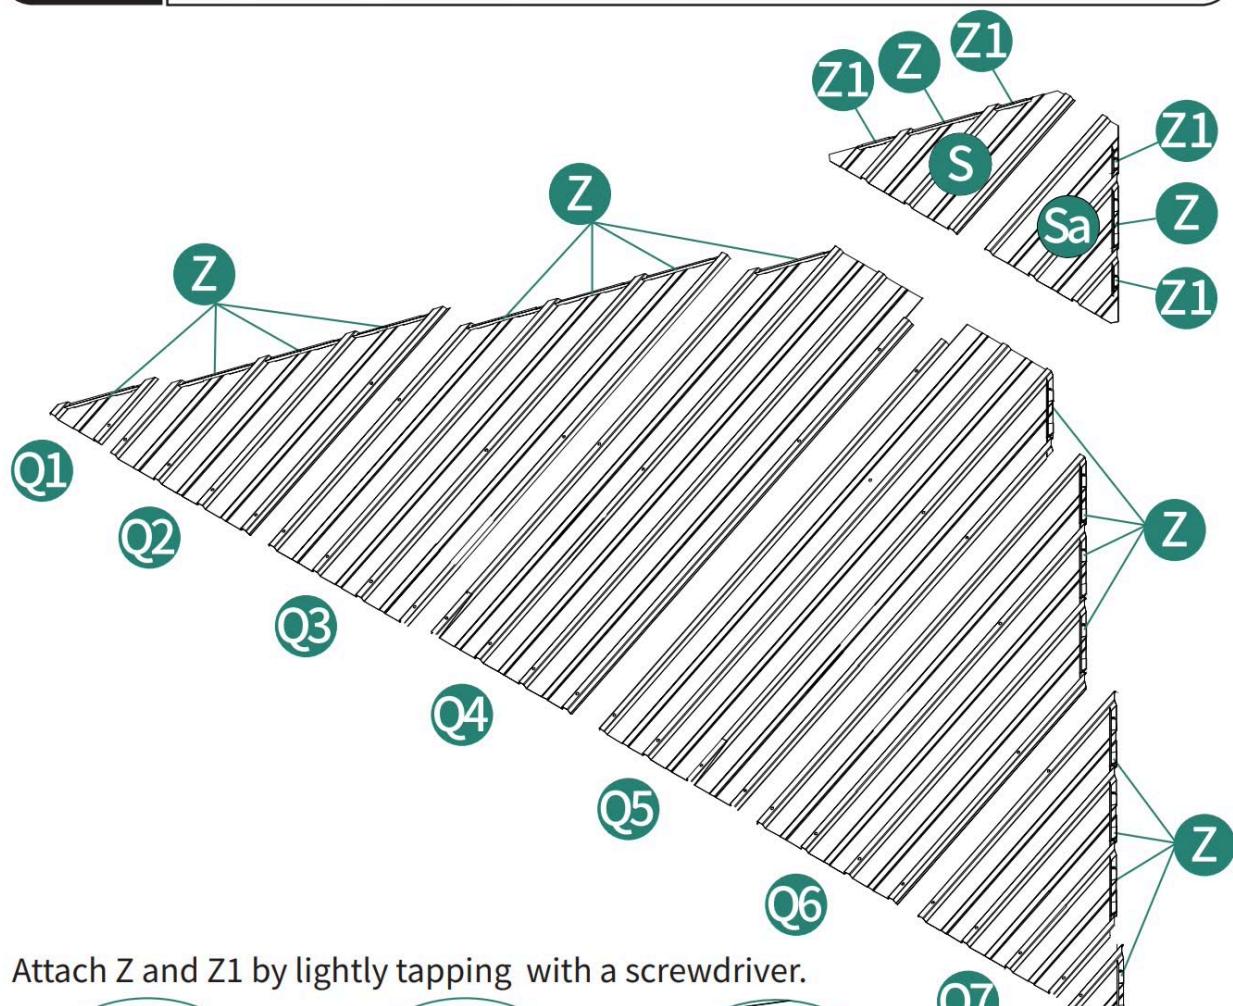


Attach Z and Z1 by lightly tapping with a screwdriver.

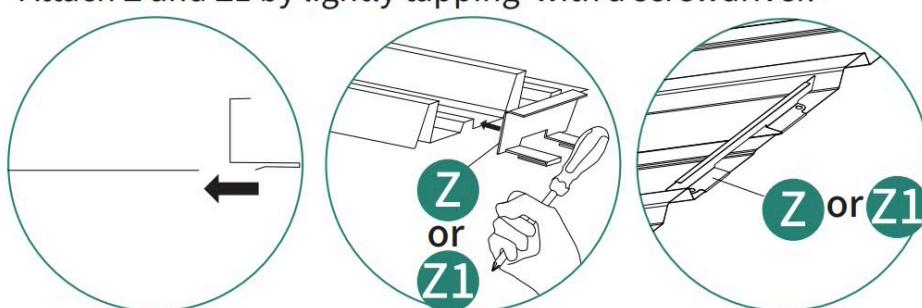






## ASSEMBLY INSTRUCTIONS

13

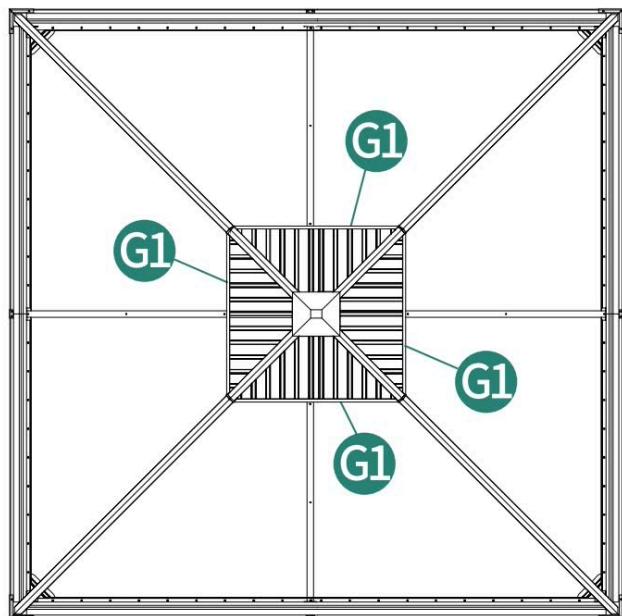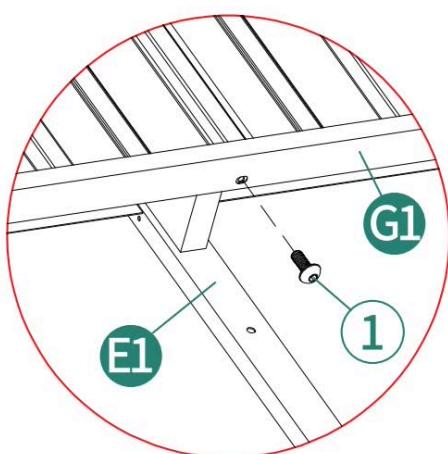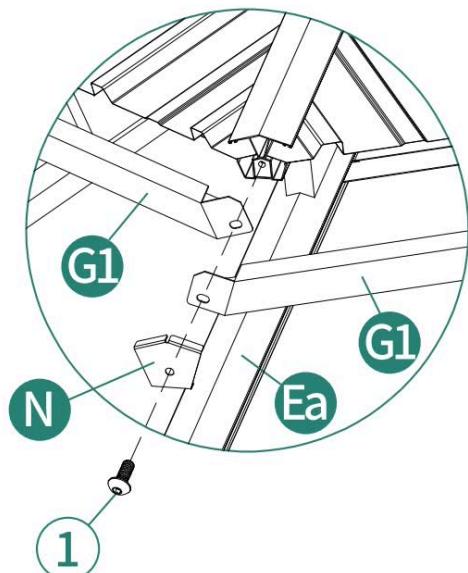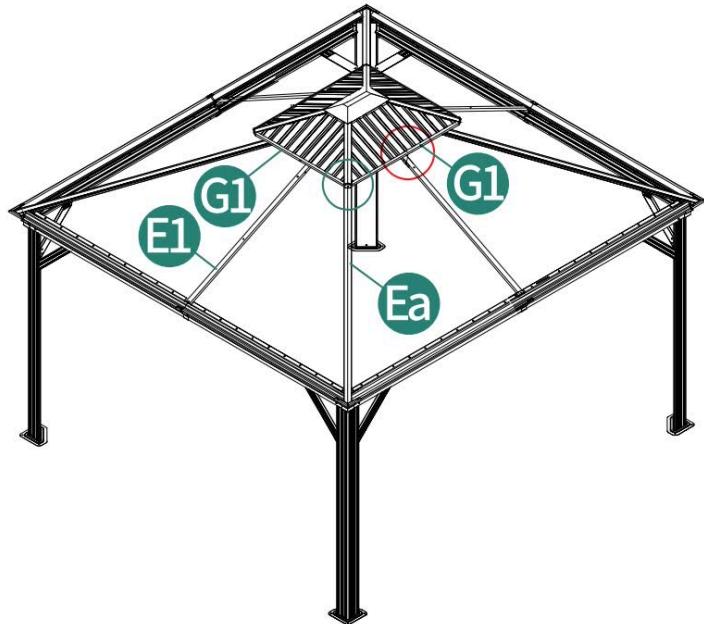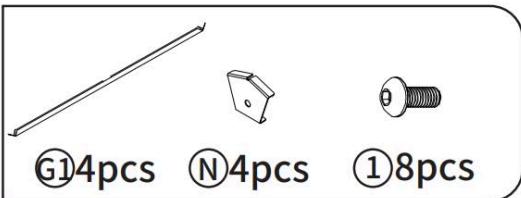


## ASSEMBLY INSTRUCTIONS

14

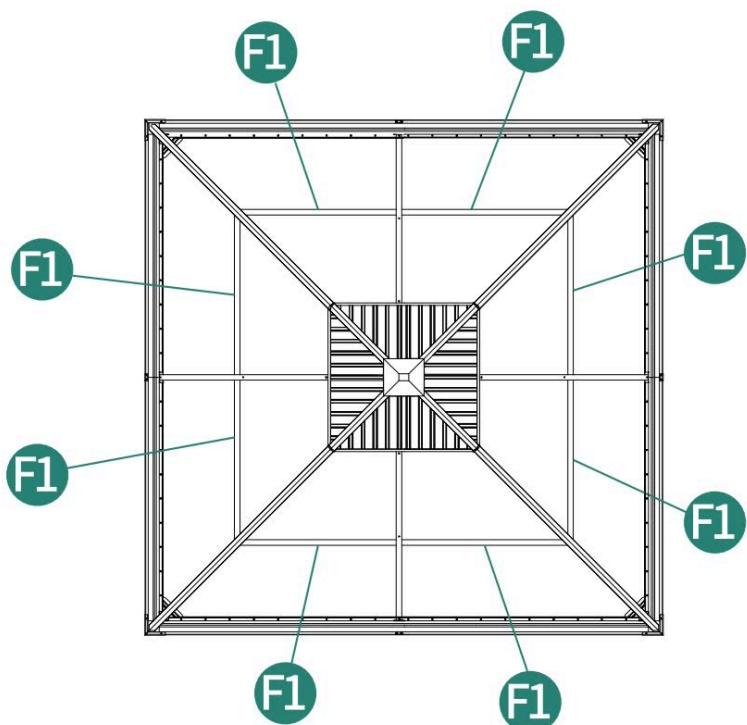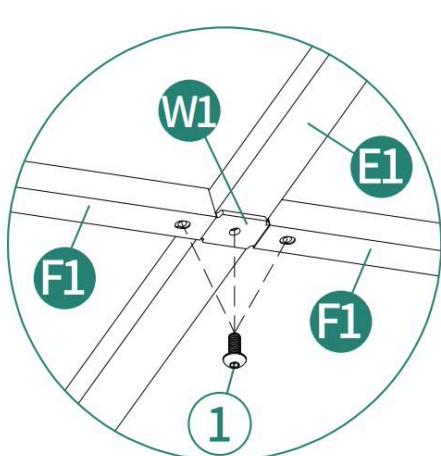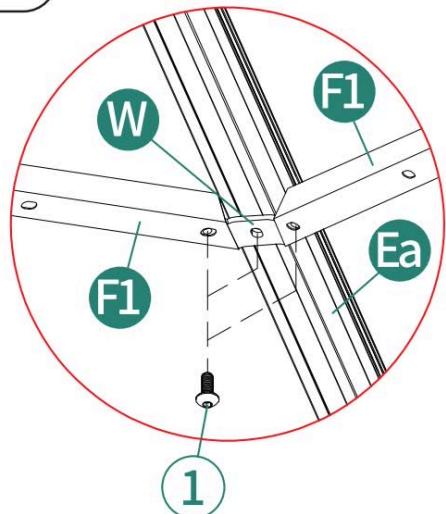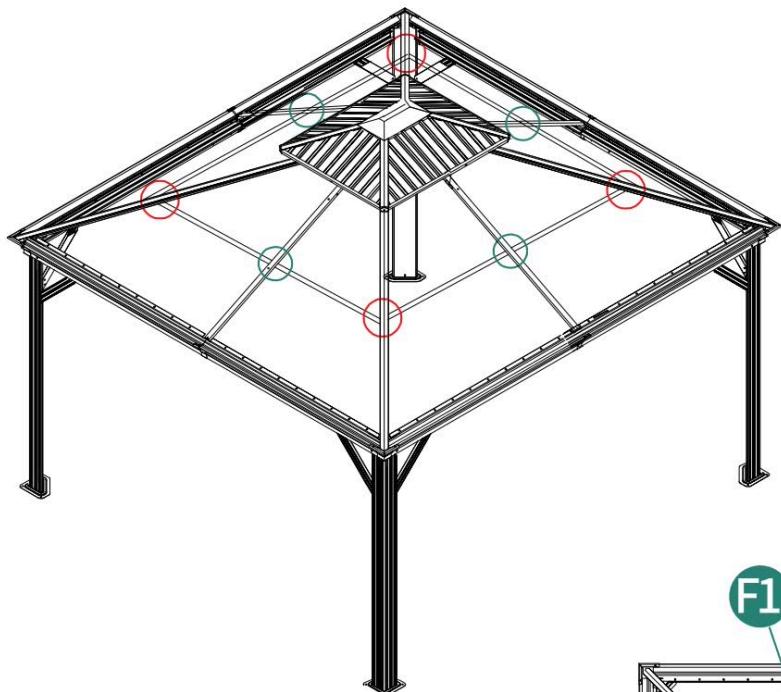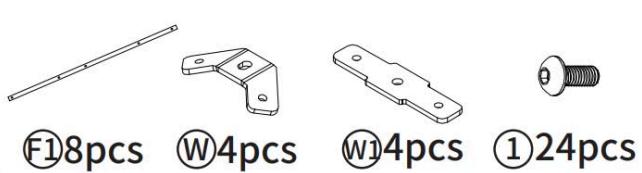


## ASSEMBLY INSTRUCTIONS

15

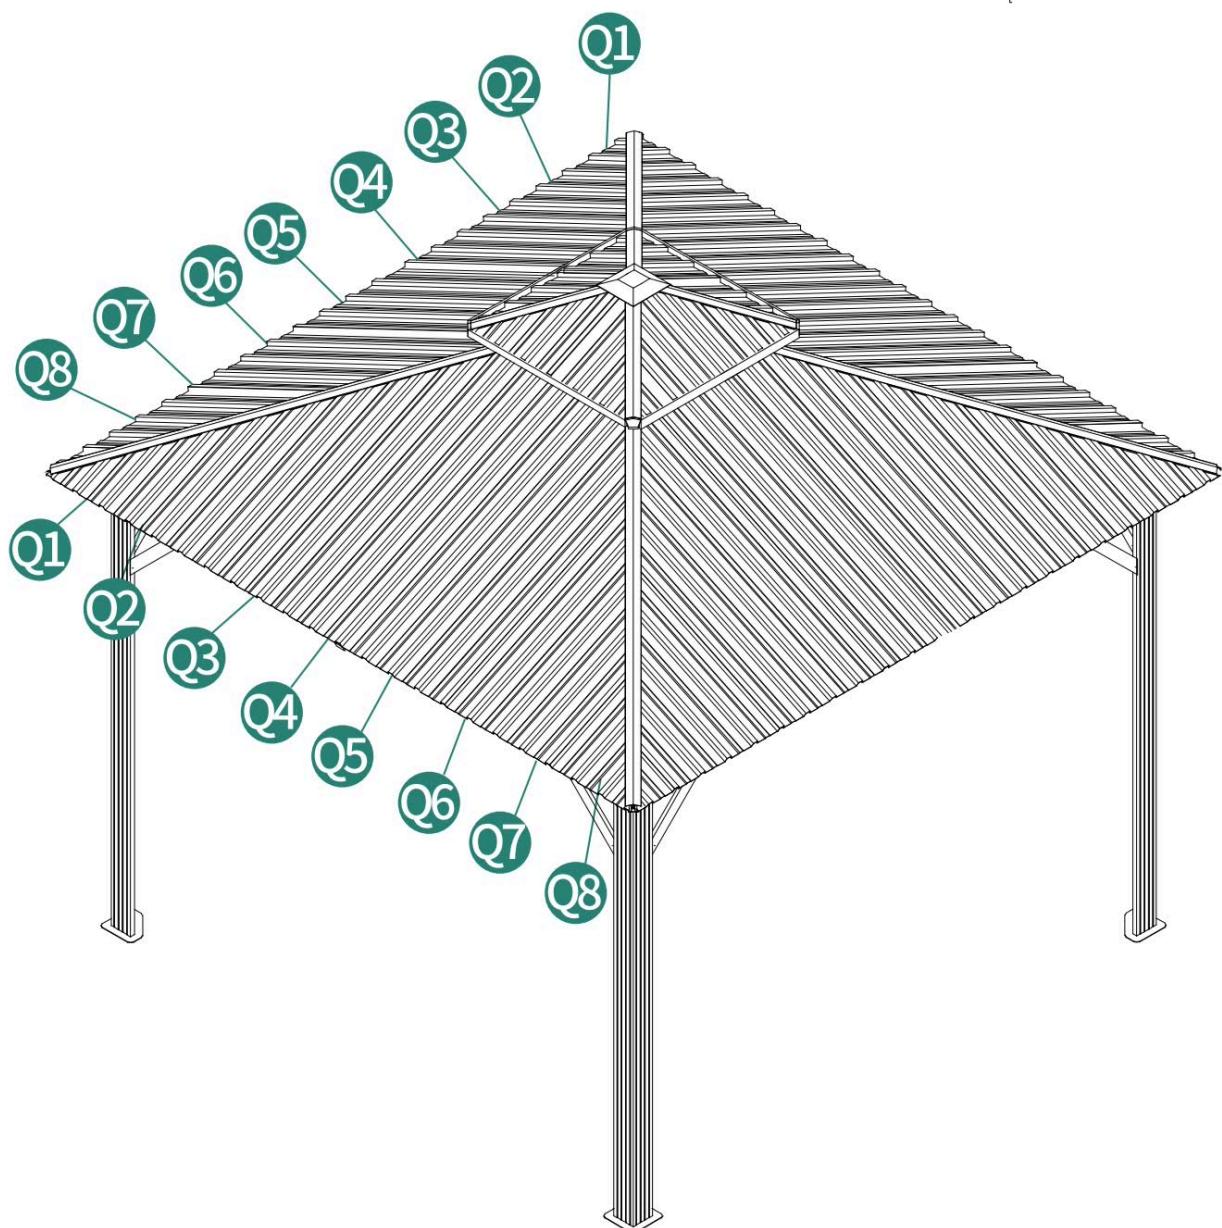

## ASSEMBLY INSTRUCTIONS


16

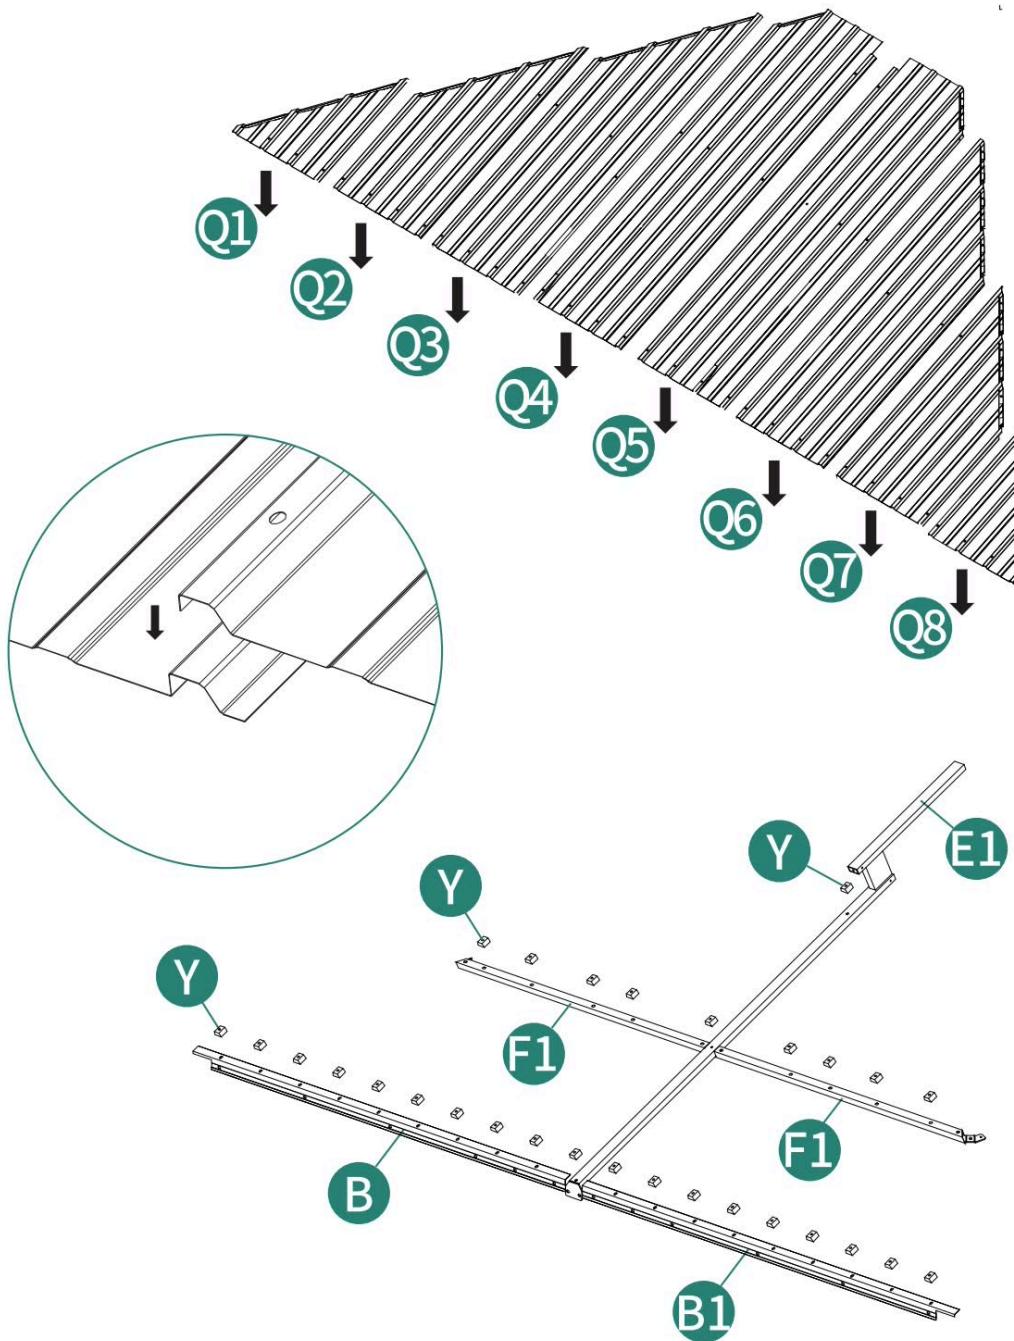

## ASSEMBLY INSTRUCTIONS


17

① 116pcs ② 72pcs ③ 8pcs ⑥ 4pcs ⑦ 32pcs

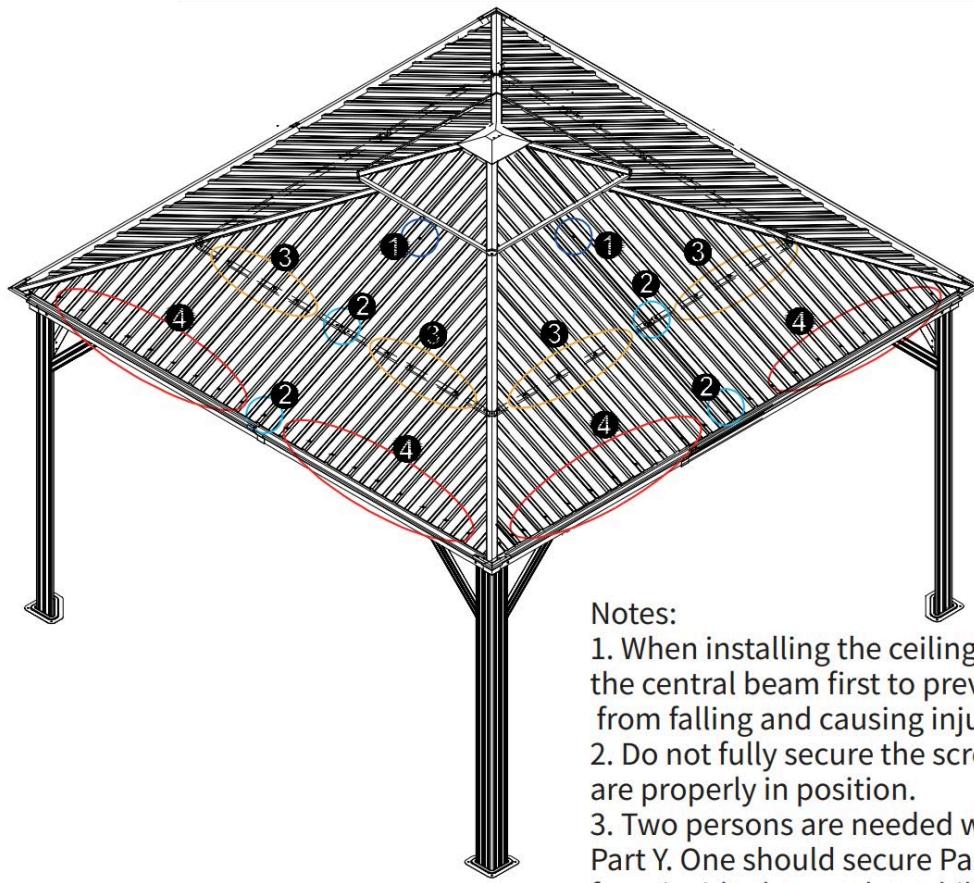






Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

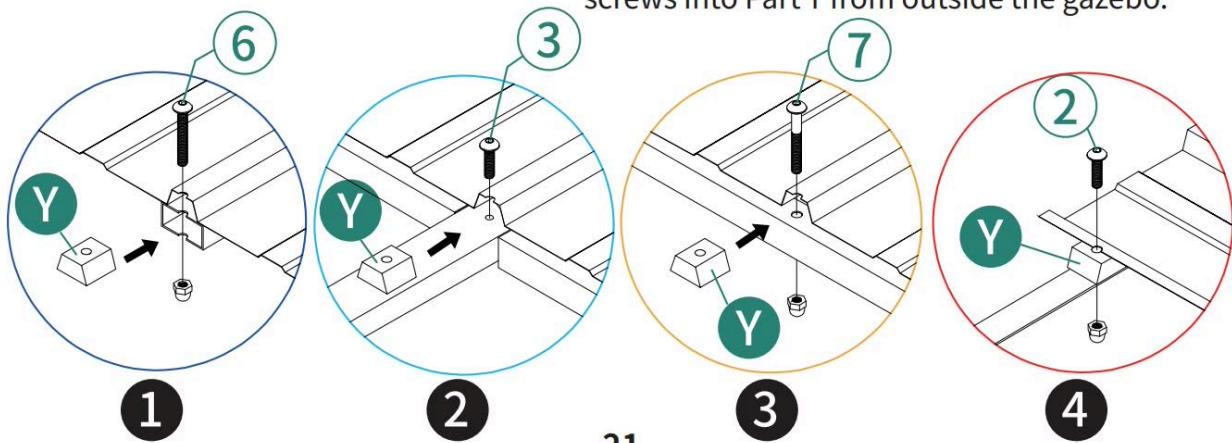


## ASSEMBLY INSTRUCTIONS

18

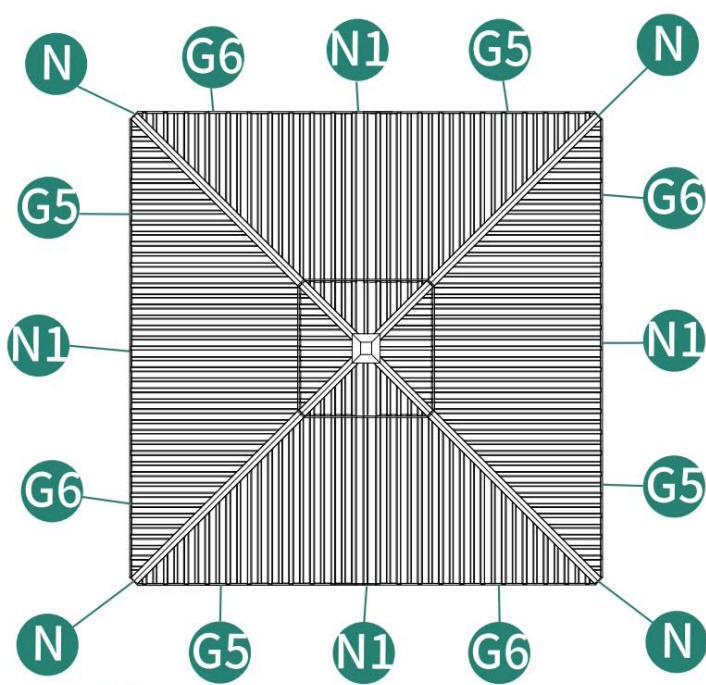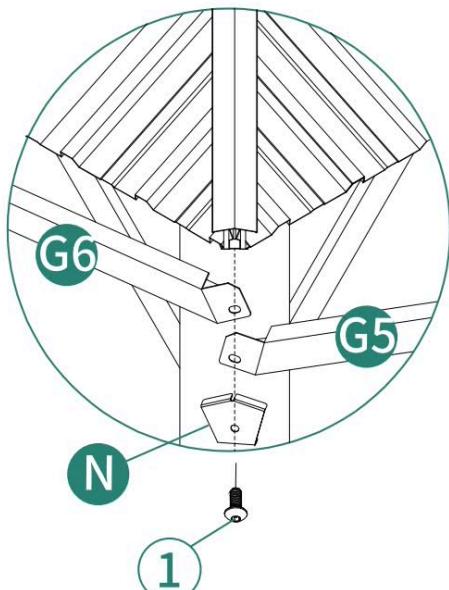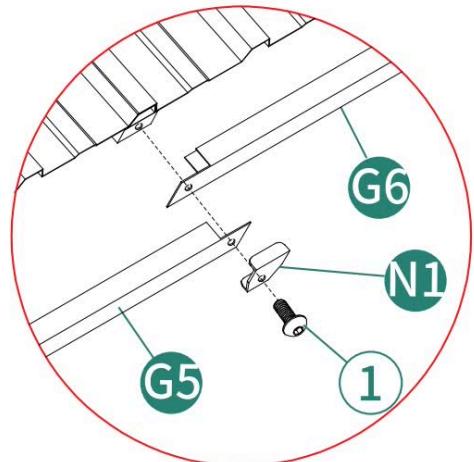
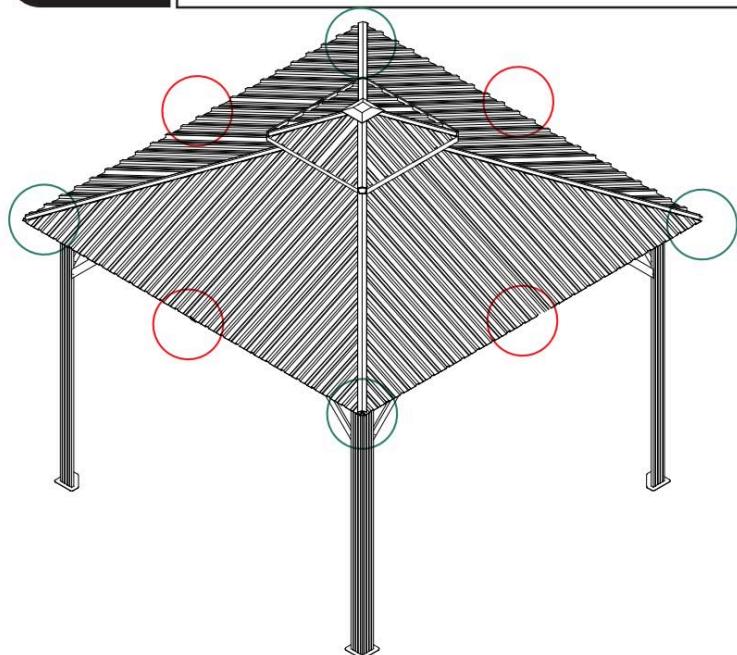
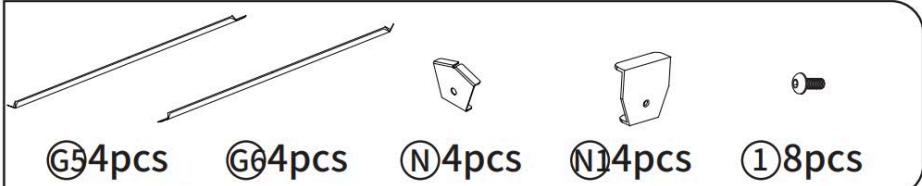


## ASSEMBLY INSTRUCTIONS

19



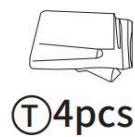


4pcs

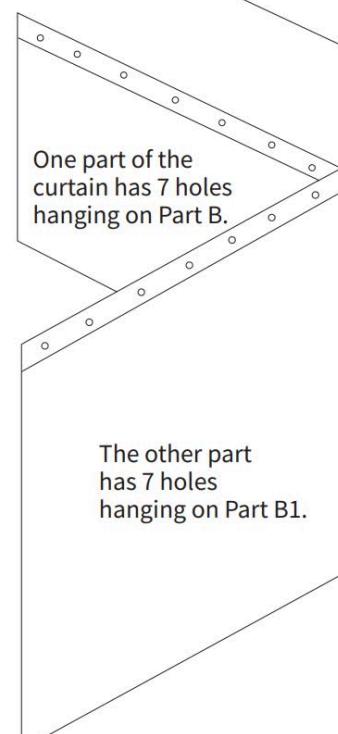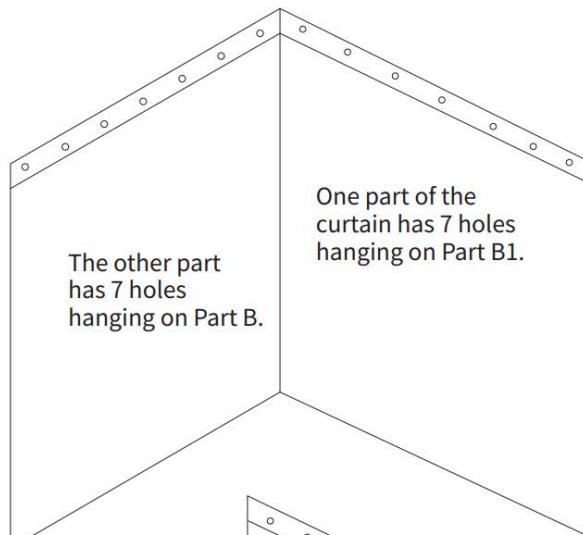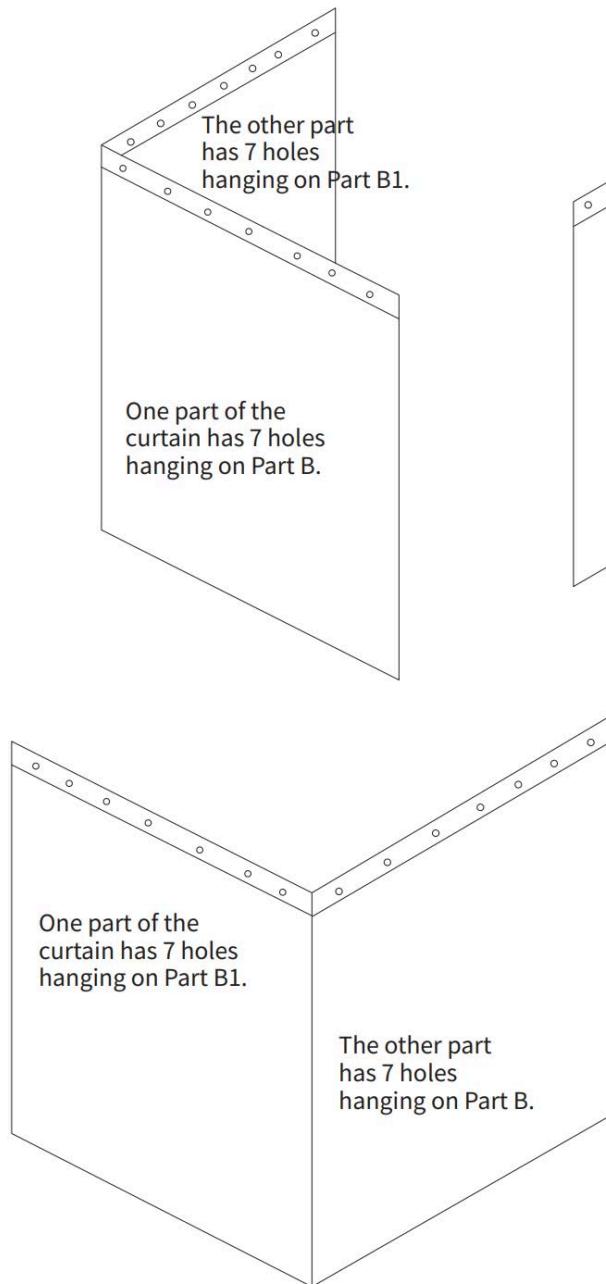

## ASSEMBLY INSTRUCTIONS


20

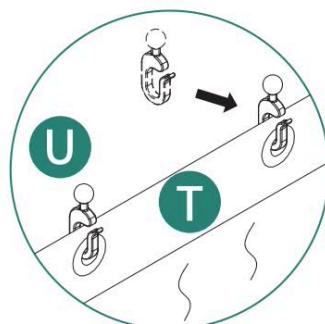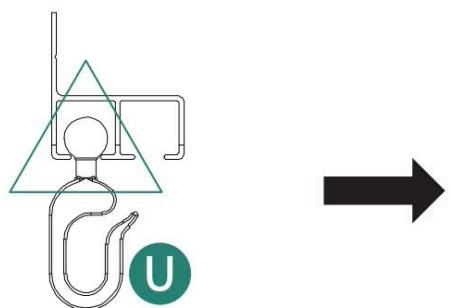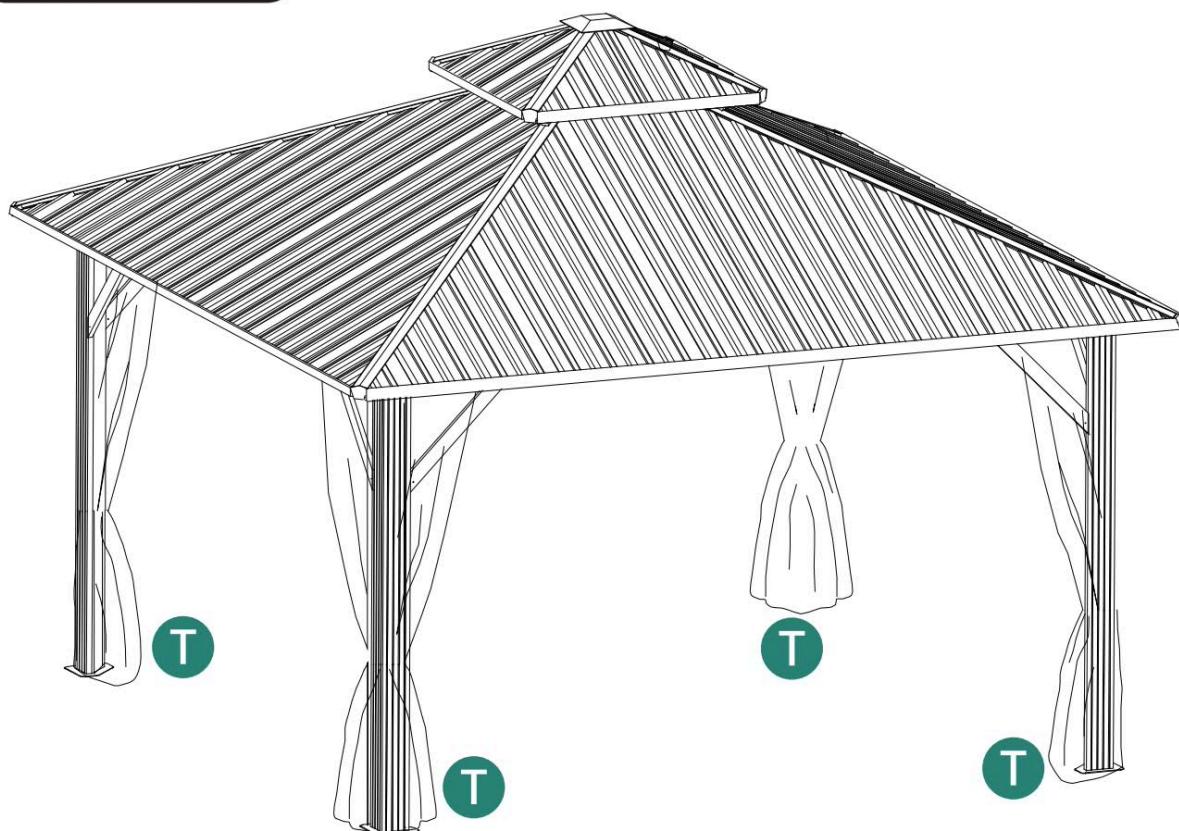





Pay attention to the sidewall curtain's installation position.

## ASSEMBLY INSTRUCTIONS

**21**





T14pcs

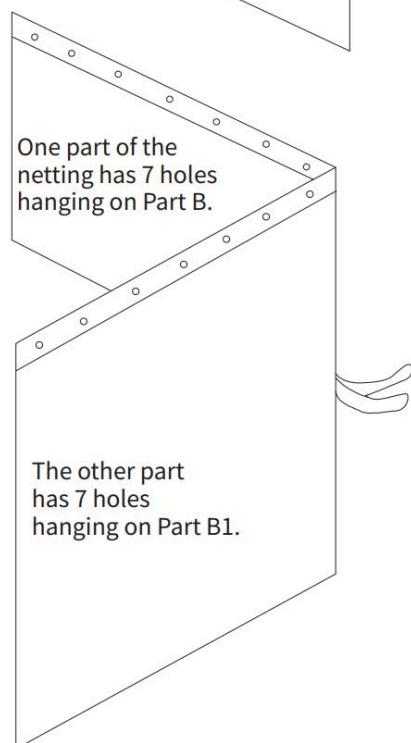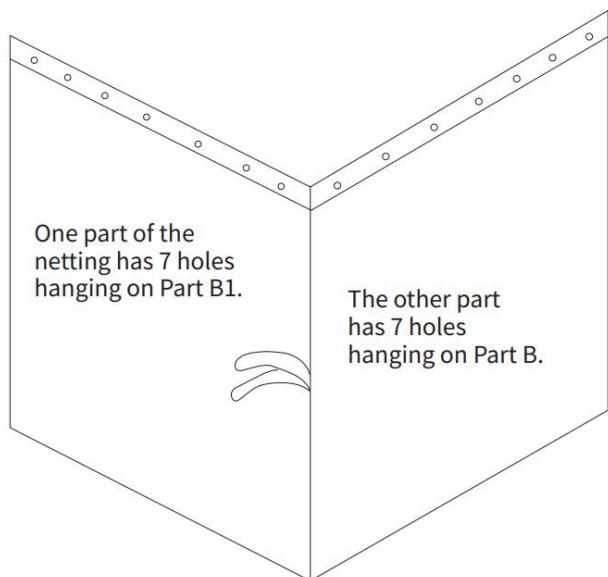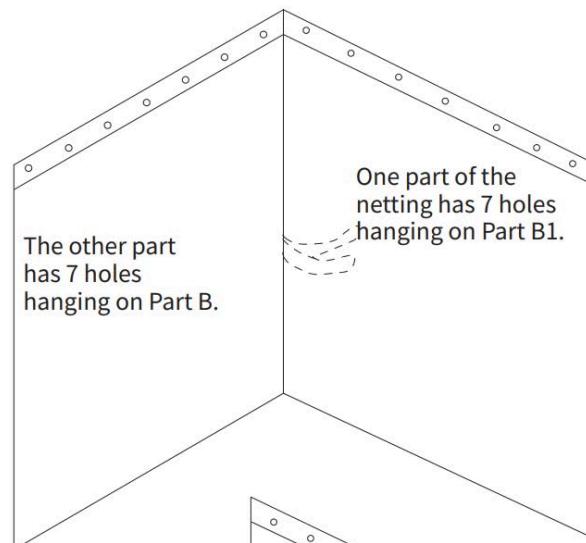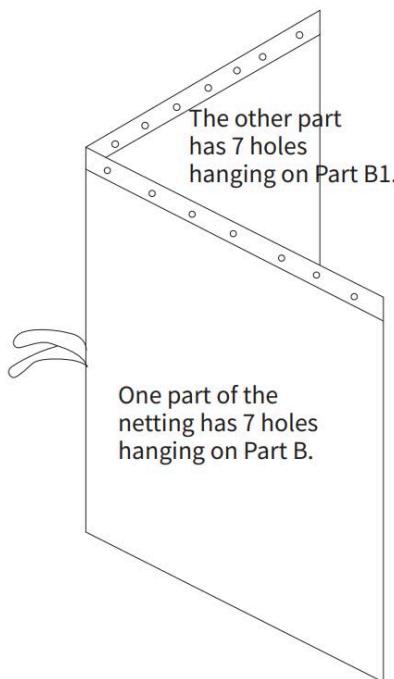


## ASSEMBLY INSTRUCTIONS

22

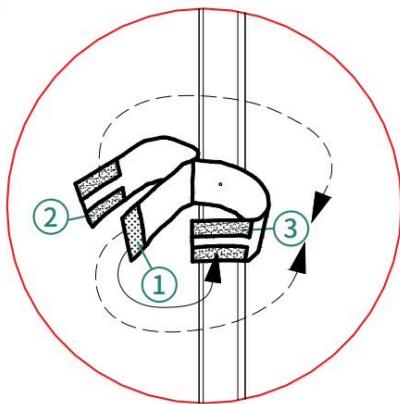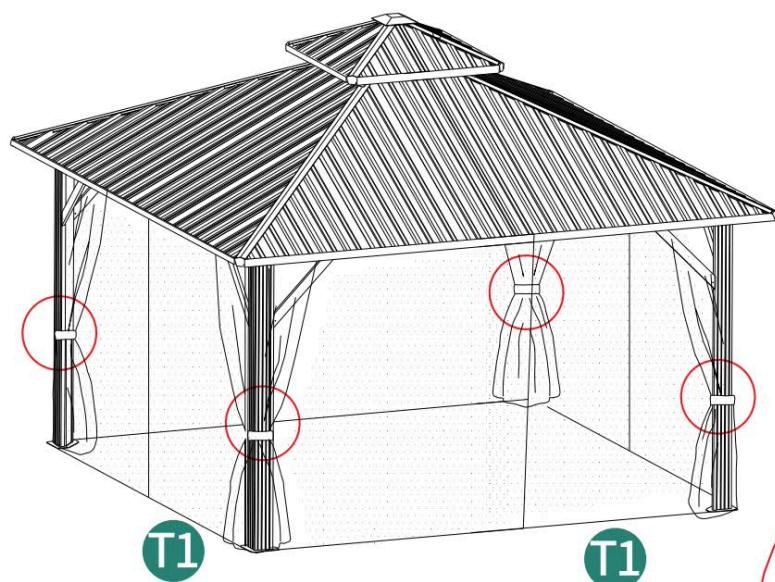

Note:

Attach 1 to 2 to secure parts T1 and T (curtains) together.  
Attach 1 to 3 to secure the back curtain (T).  
Attach 1 to 3 to secure the front curtain (T1).

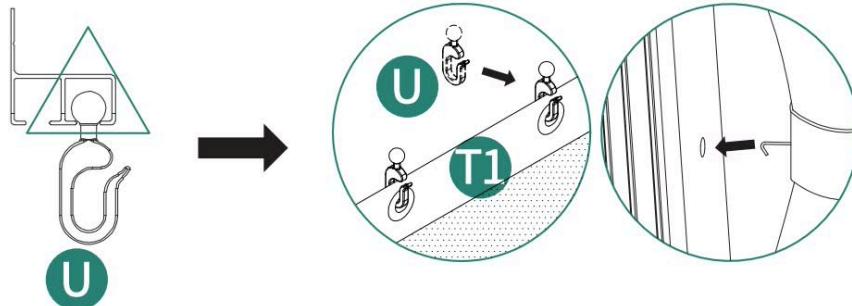

Pay attention to the sidewall netting's installation position.

Hang the hook attached to the netting on Part A.


## ASSEMBLY INSTRUCTIONS

23



⑨ 12pcs

⑯ 12pcs

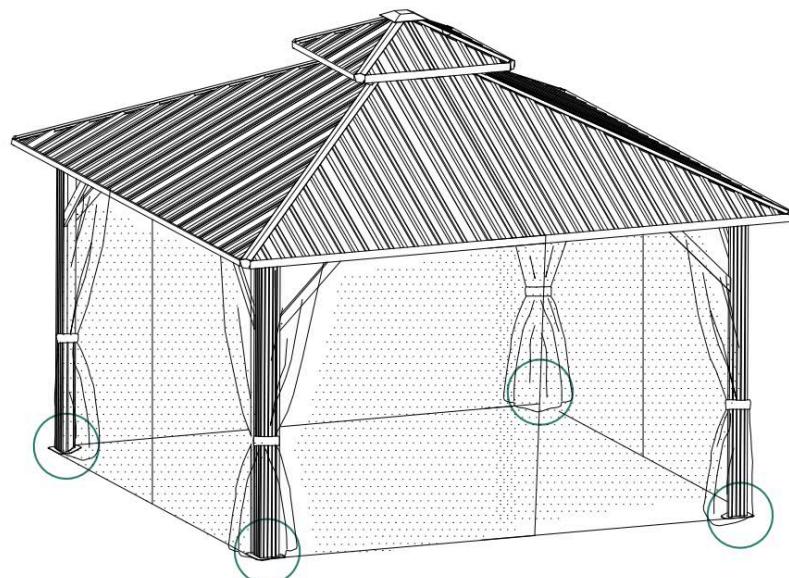

To improve wind resistance,  
**be sure to complete this installation  
step. If expansion screws or ground  
nails are not installed, strong winds  
may topple the gazebo.**

Expansion screws are essential for  
stability on cement surfaces, and  
ground nails are for grassy surfaces.  
All are included in the accessories  
package.

