WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product



Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance







 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.

Cabinet Parts List Picture QTY Label Description Α Top Panel 1 Right Side Board В 1

С	Right Clapboard	1
D	Left Clapboard	1
E	Left Side Board	1
F	Back board	2
G	 Top back board of the middle	1
Н	Slot	1
I	Bottom back board of the middle	1
J	Bottom panel	1
К	Iron foot	2


L		Middle foot	1
М		Back board of the drawer	2
N	0	Left side Board of the drawer	2
O	0	Right side Board of the drawer	2
Р		Bottom panel of the drawer	2
Q	0 0	Front panel of the drawer	2
R		Middle shelf board	1
S		Shelf board of the side	2
Т		Left door	1

U		Middle door 1	1	
V		Middle door 2	1	
W		Right door	1	
Hardware				
Label	Picture	Description	QTY	
1)		Wood Tenon	4	
2		Long Bolt (M6*35mm)	12+1	
3		Flat Washer	12+1	
4)		Allen Wrench	1	
5		Short Bolt (M6*18mm)	8+1	
6	4	Shelf support pin	12+1	
7	<u>Cumuum</u>	Screw(M4x30mm)	8+1	
8		Cam nut	8+1	
9		Cam bolt	8+1	

Tipover Restraint Device Hardware				
10		Anti-Tipping sheet iron	2	
11)	anaga O	Expansion screw	2	
(12)		Screw (M4*30mm)	2	
(13)		Screw (M4*14mm)	2	

Assembly Preparation

Before Beginnin g Assembly

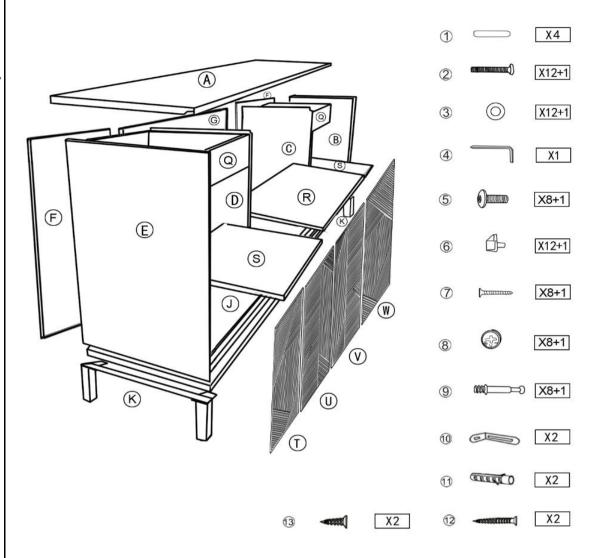



· Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

Assembly Steps


Overview

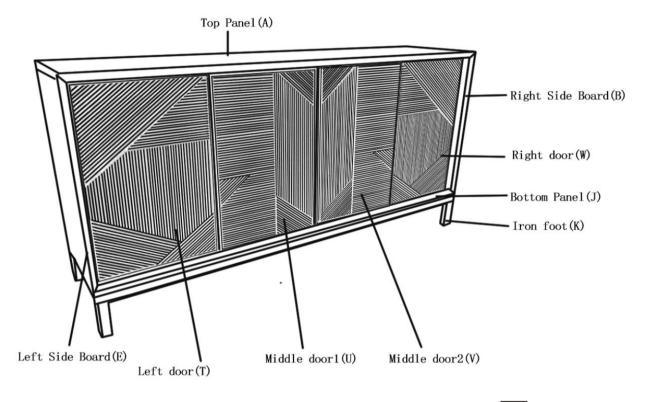




This Cabinet has multiple parts and may require up to 50 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



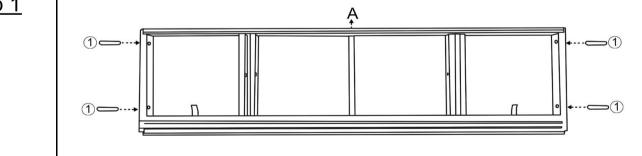


Install the Wooden Tenons(1) into the sides of the Top Panel (A) as pictured above.

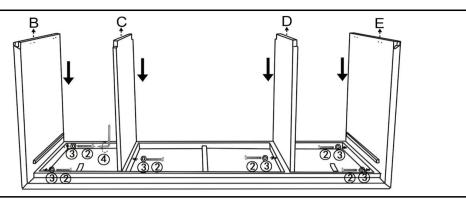

Attach the right side boad(B), left side board(E), left clapboad (D) and right clapboard (C) to the top panel(A), use long bolt(②)and flat washer(③) align with board hole position, Allen wrench (④) is used to assist rotation tightening.


ATTENTION: One grooves side of board must be stay in one side(backside); The short distance from the edge to the hole is upside for left clapboad (D) and right clapboard (C)

Step 3

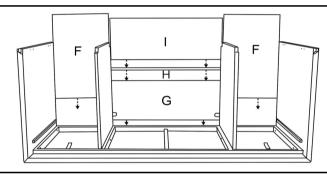


Insert the back board(F), the top back board of the middle(G), slot(H) and the bottom back board of the middle(I) into the grooves.


Step 4

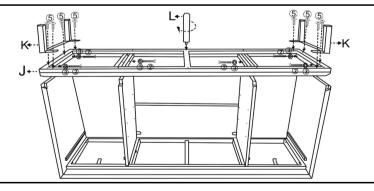


Install the bottom panel(J) as the above picture, use long bolt(2) and flat washer(3) align with board hole position to fix the bottom panel(J); Connect the iron foot(K) with the bottom panel(J) by short bolt(5); Insert the middle foot(L) and rotate it to tighten it.

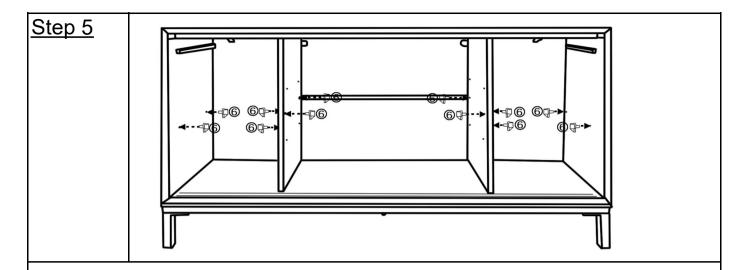

Stand the mounted cabinet up, and insert shelf support pin(6) into each panel hole.

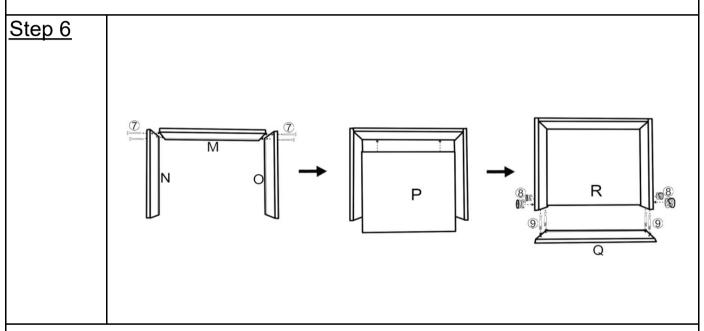


Install the drawer. First, connect the back board of the drawer(M) with the left side board of the drawer(N) and the right side board of the drawer(O) by screw(7); Second, Insert the bottom panel of the drawer (P) into the groove of the bottom of three boards; Third, connect the front panel of the drawer(Q) with the left side board of the drawer(N) and the right side board of the drawer(O) by cam bolt(9) and cam nut(8), then tighten cam nut(8).

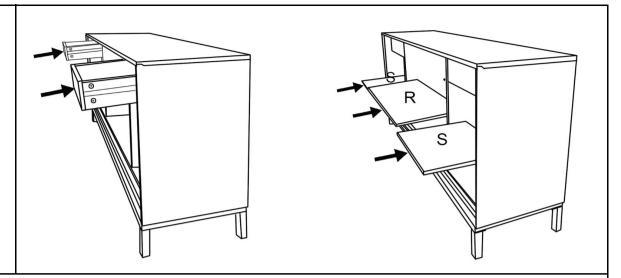


Insert the mounted drawer into the cabinet body as the picture; Put the middle shelf board(R) and shelf board of the side on the shelf support pin(6)).



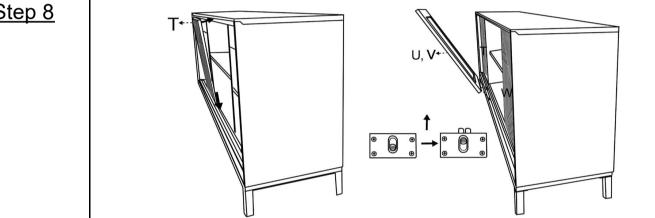


Insert the wheel of left door (T) into the inside groove of the bottom panel(J) and insert top of left door(T) into the inside groove of the top pannel(A), then press the button of the top as the picture; Use the same way to install the right door (W); Insert the wheel of middle door 1(U) into the outside groove of the bottom panel(J) and insert top of middle door 1(U) into the outside groove of the top panel (A), then press the button of the top as the picture. Use the same way to install the middle door 2(V).

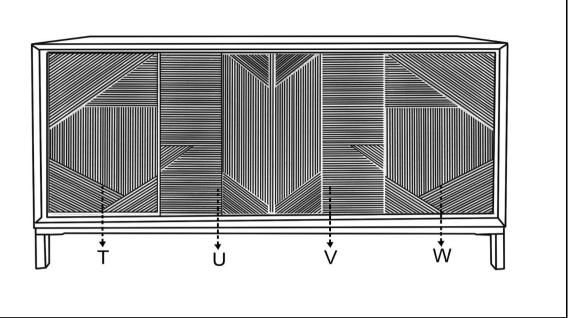

The mounted door is as the picture order.

<u>Step 10</u>

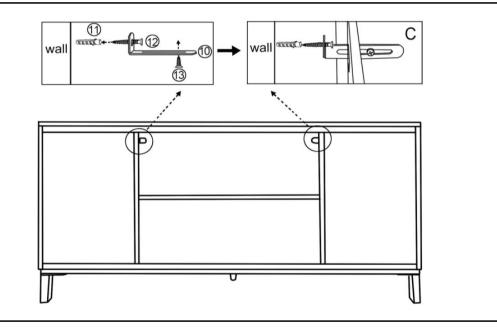

Align with the pre-drilled hole on top back board of the middle(G), screw the expansion screw (1) in to the wall. Install the short side of Anti-Tipping sheet iron (10) on the wall with screw (12), then using the long side of Anti-tipping sheet iron (10) connected to the inside of left clapboad (D) and right clapboard (C) by srew (13)

The sideboard is ready for use.

This cabinet can only be used on a flat and level surface.