


12X16 FT


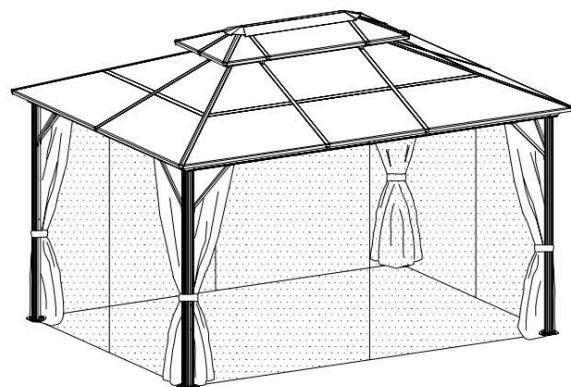


Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
C		X2
C1		X2
Ea		X4
E1		X6
G		X2
G1		X4

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G2		X4
G4		X2
G6		X2

Item no.	Reference Image	Qty.
D1		X4
D2		X6
Eb		X4
E2		X6
F		X2
F1		X4
F2		X4
F3		X4
F4		X4
G3		X2

Item no.	Reference Image	Qty.
G5		X2
H		X4
H1		X4
K		X4
K1		X4
U		X128
L		X1
M		X1
N		X12
N1		X6

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
P		X4	W2		X6
J		X4	1		X168
S		X4	2		X16
T		X4	3		X16
Q		X4	4		X16
Q1		X4	5		X2
Q2		X4	6		X1
Q3		X4	7		X1
Q4		X4	8		X12
Q5		X4	9		X1
Q6		X4	10		X8
R1		X4			
R2		X4			
R3		X2			

# ASSEMBLY INSTRUCTIONS

**1**

X4





Ⓐ4pcs



Ⱶ4pcs




①12pcs

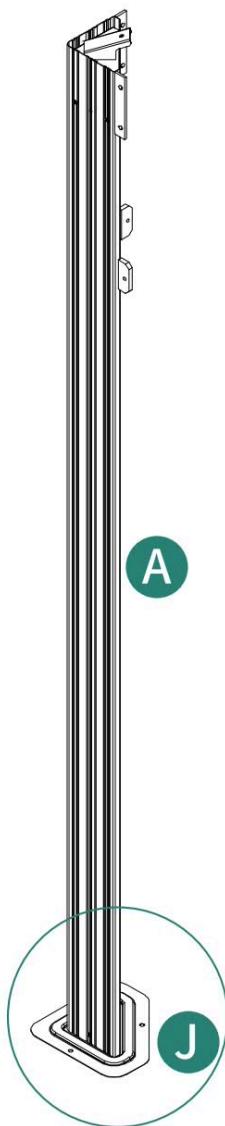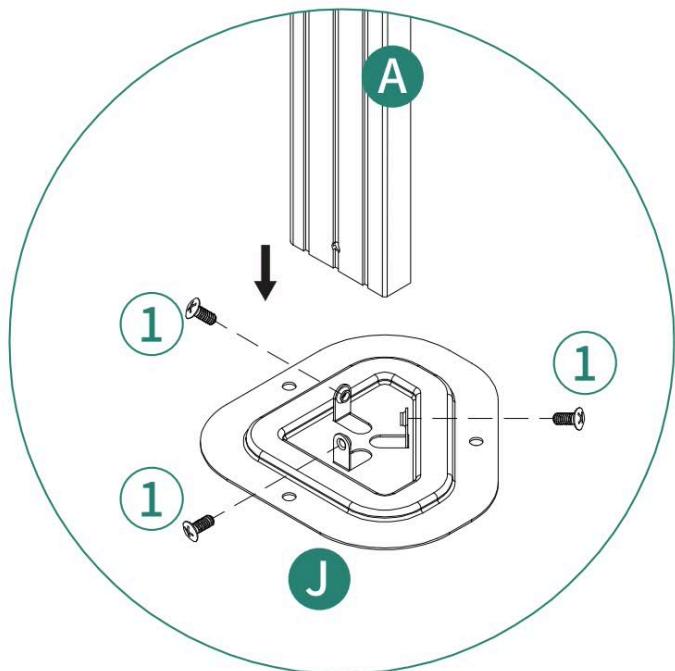



## ASSEMBLY INSTRUCTIONS

**2**

X2

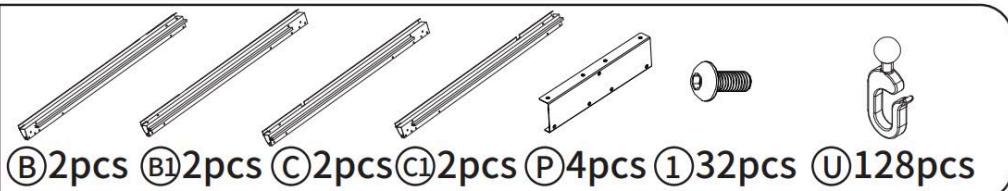

When connecting B and B1 via P,C and C1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.


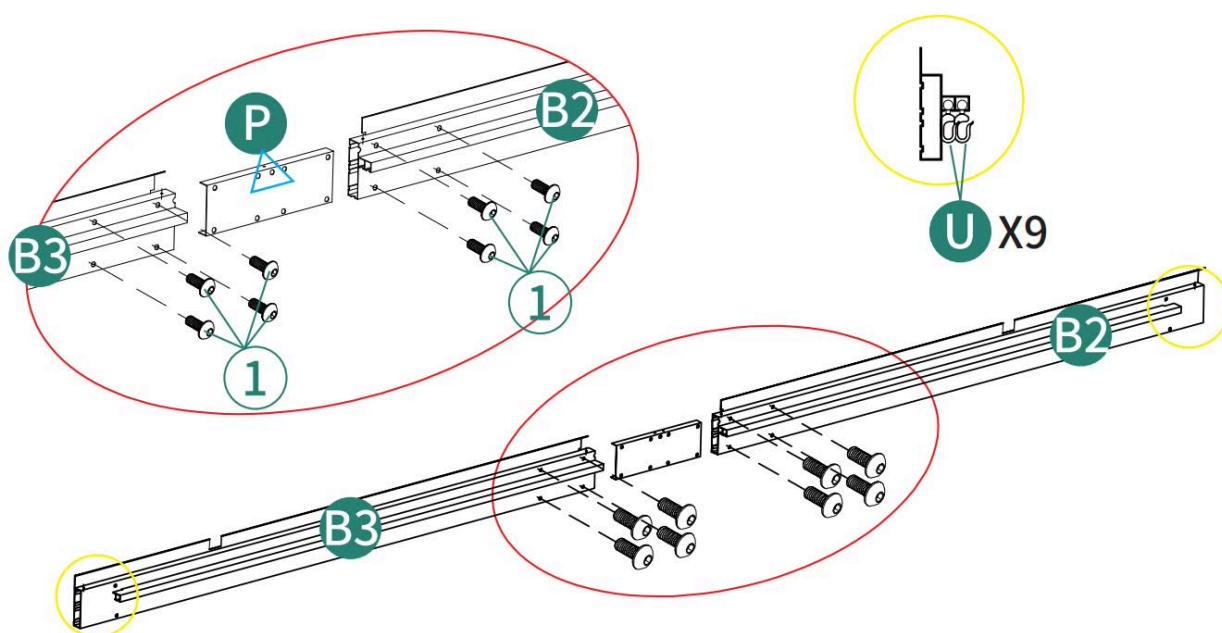
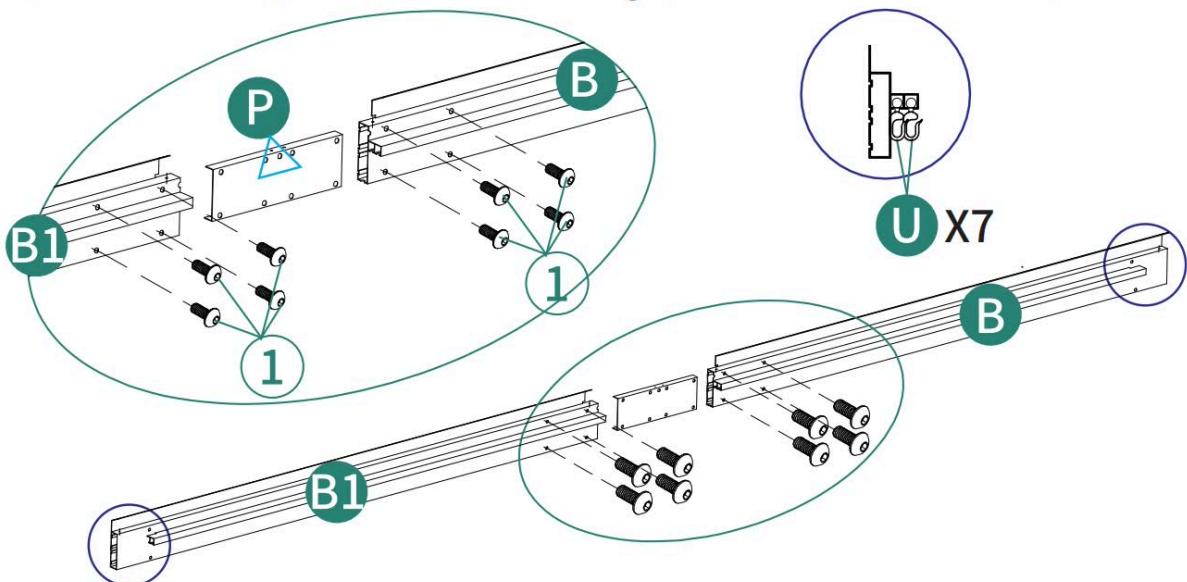


## ASSEMBLY INSTRUCTIONS


3



①16pcs ②16pcs

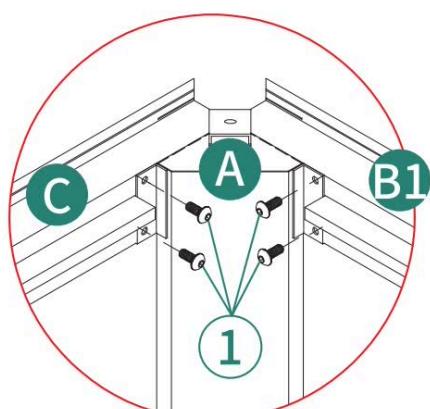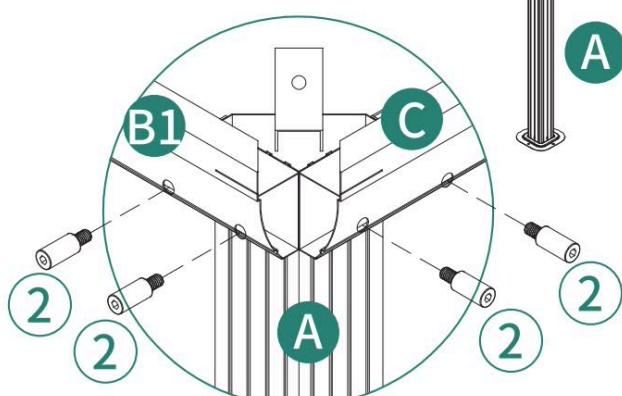
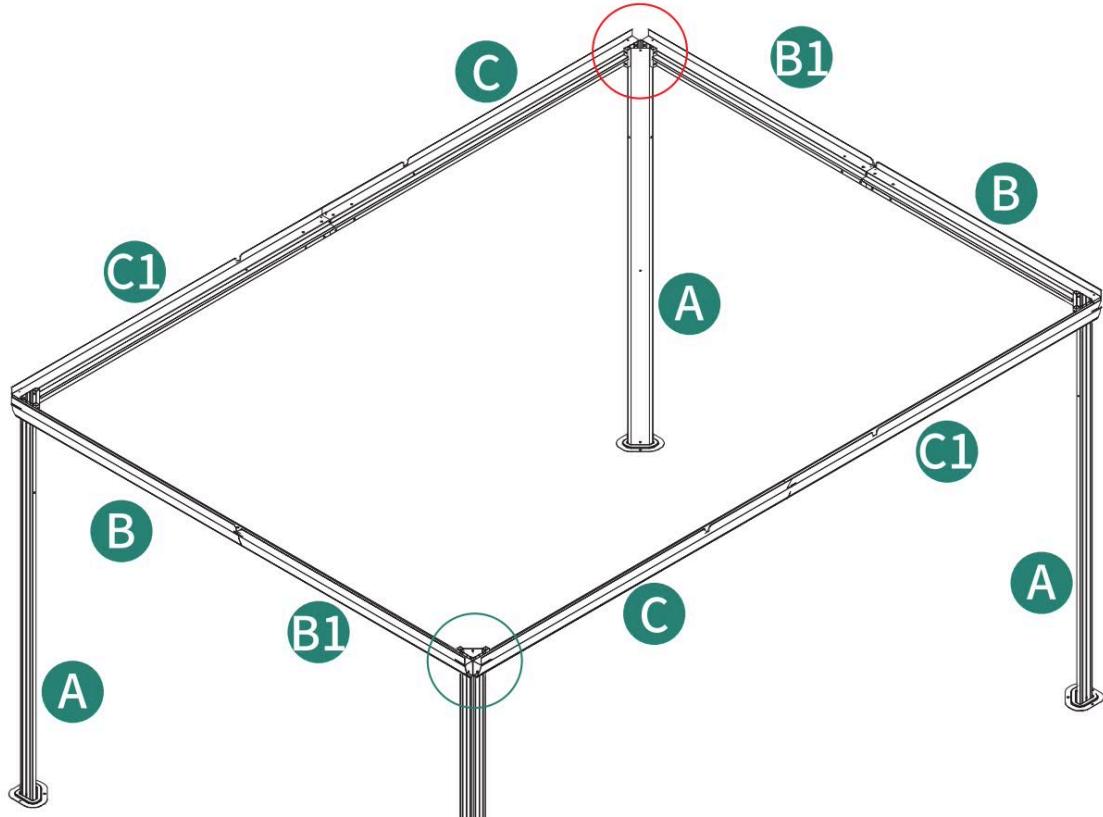


## ASSEMBLY INSTRUCTIONS


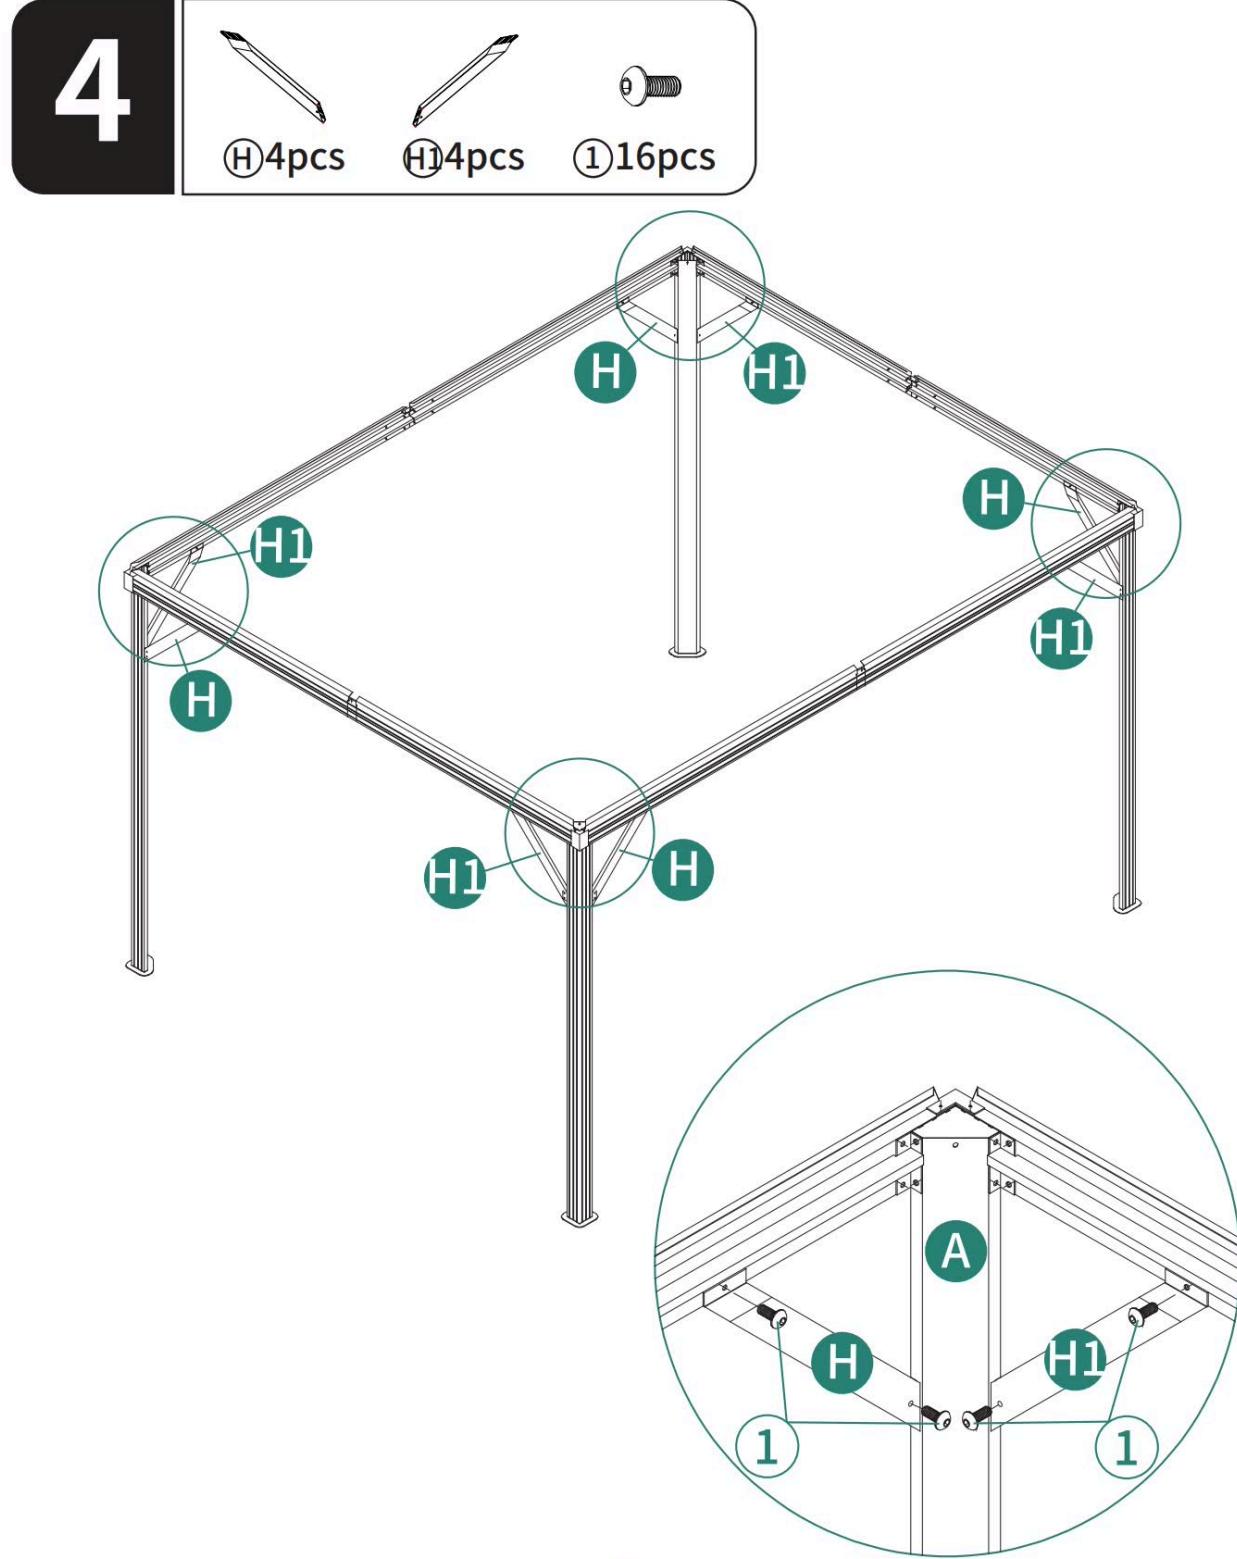


## ASSEMBLY INSTRUCTIONS

5

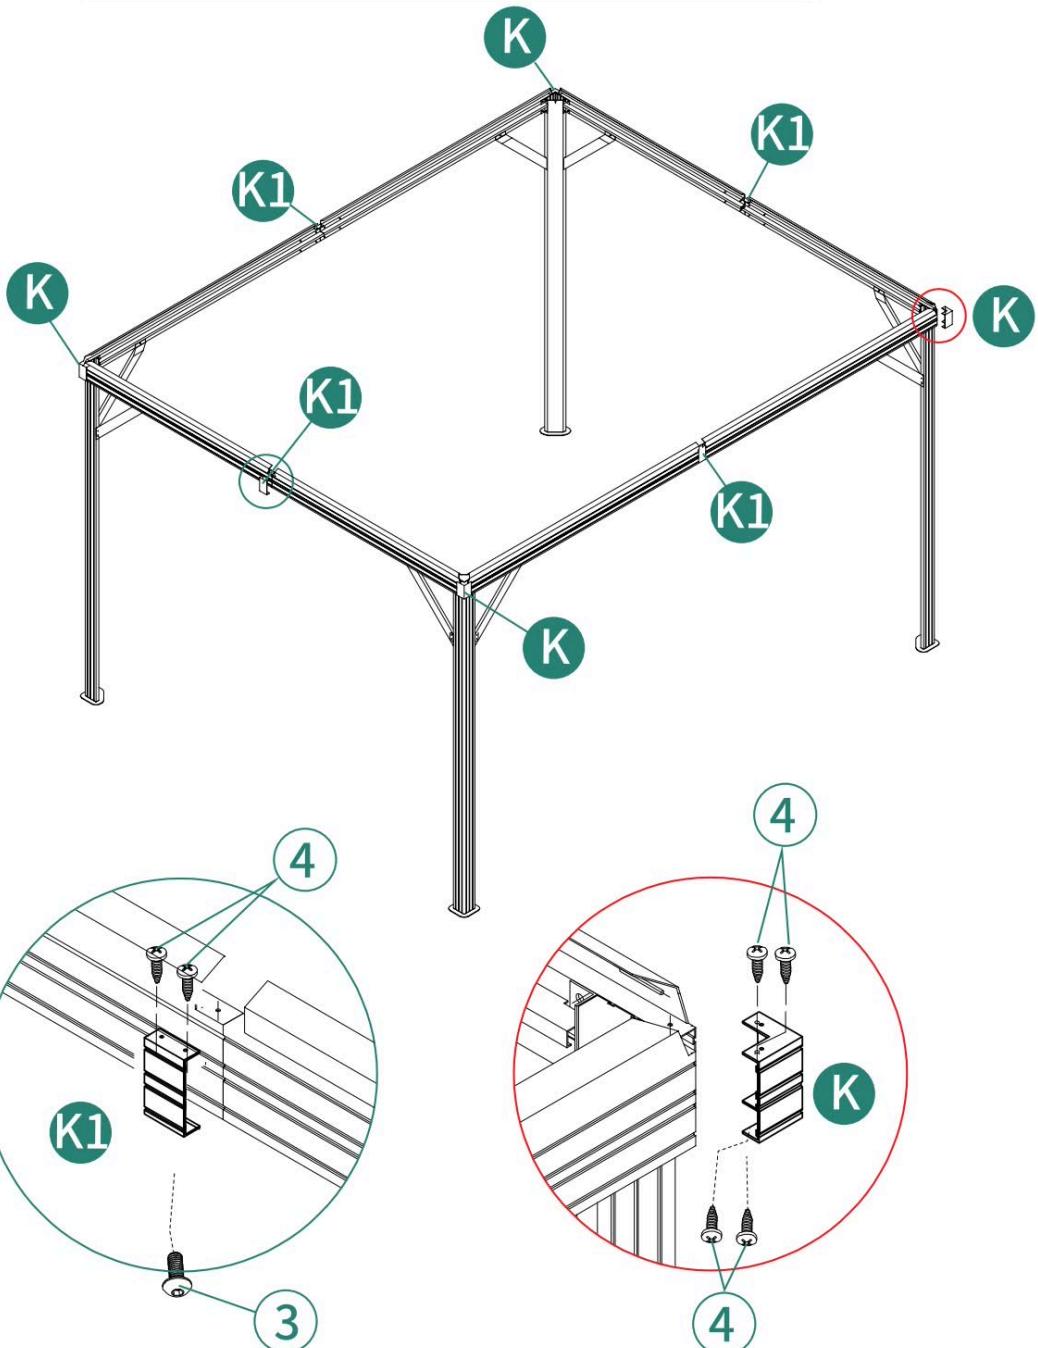
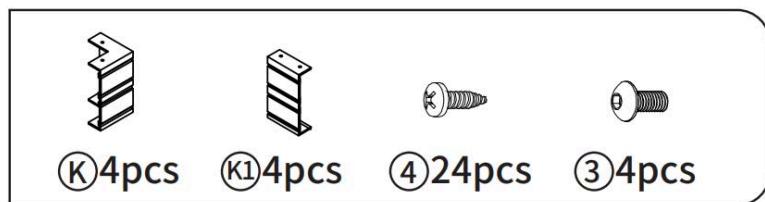


## ASSEMBLY INSTRUCTIONS

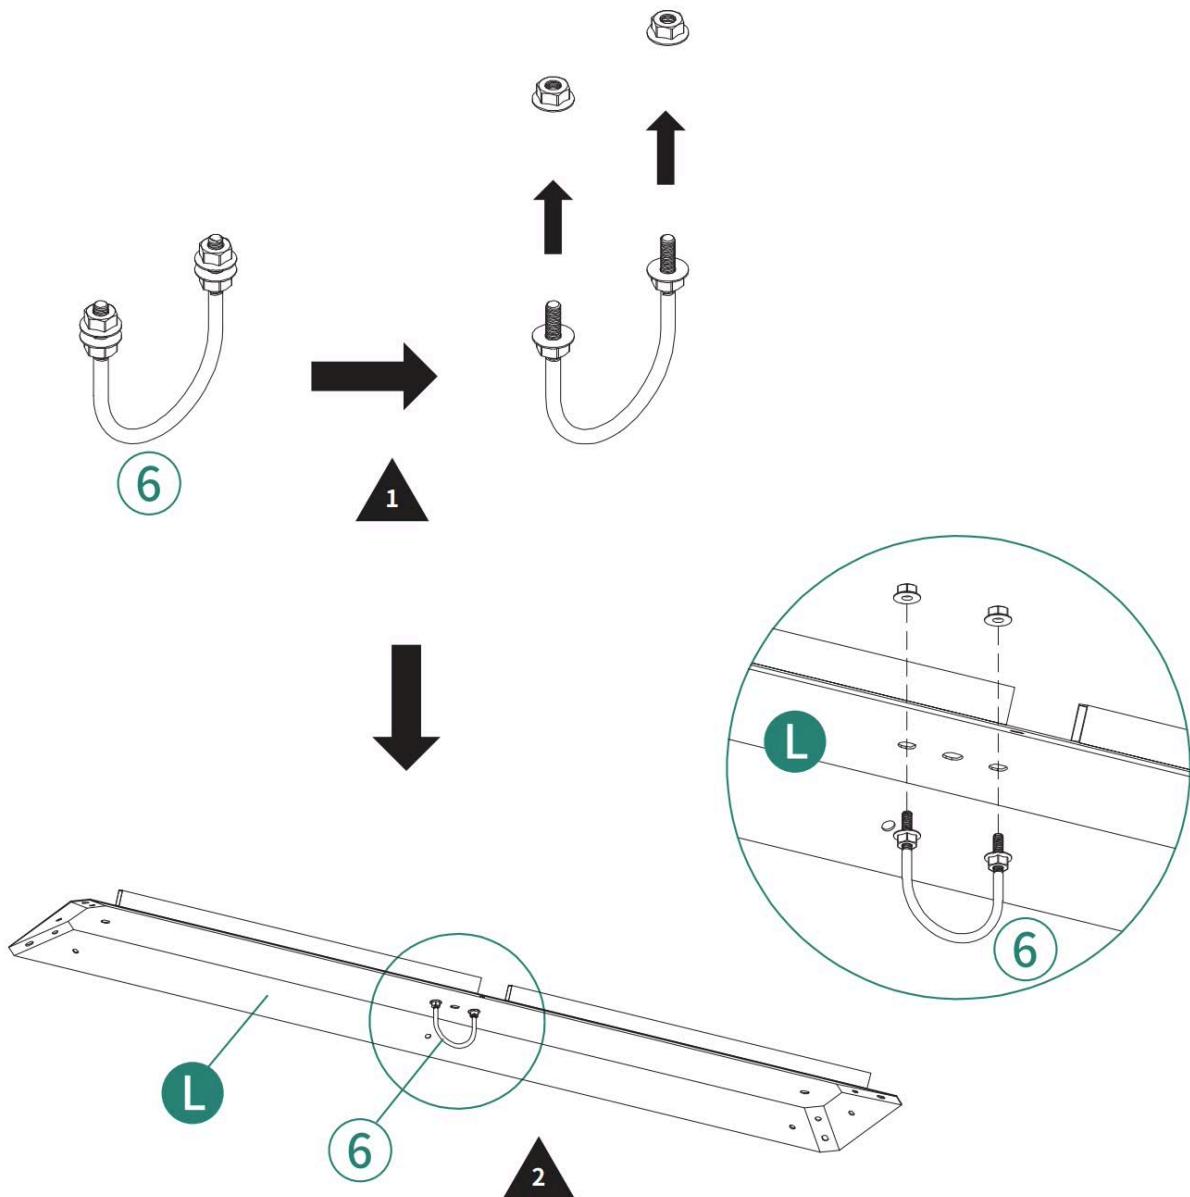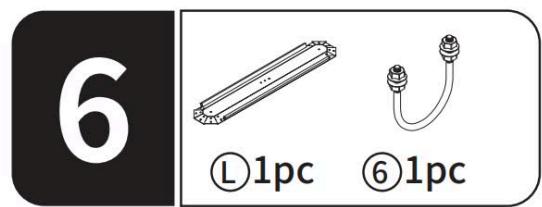


## ASSEMBLY INSTRUCTIONS

7

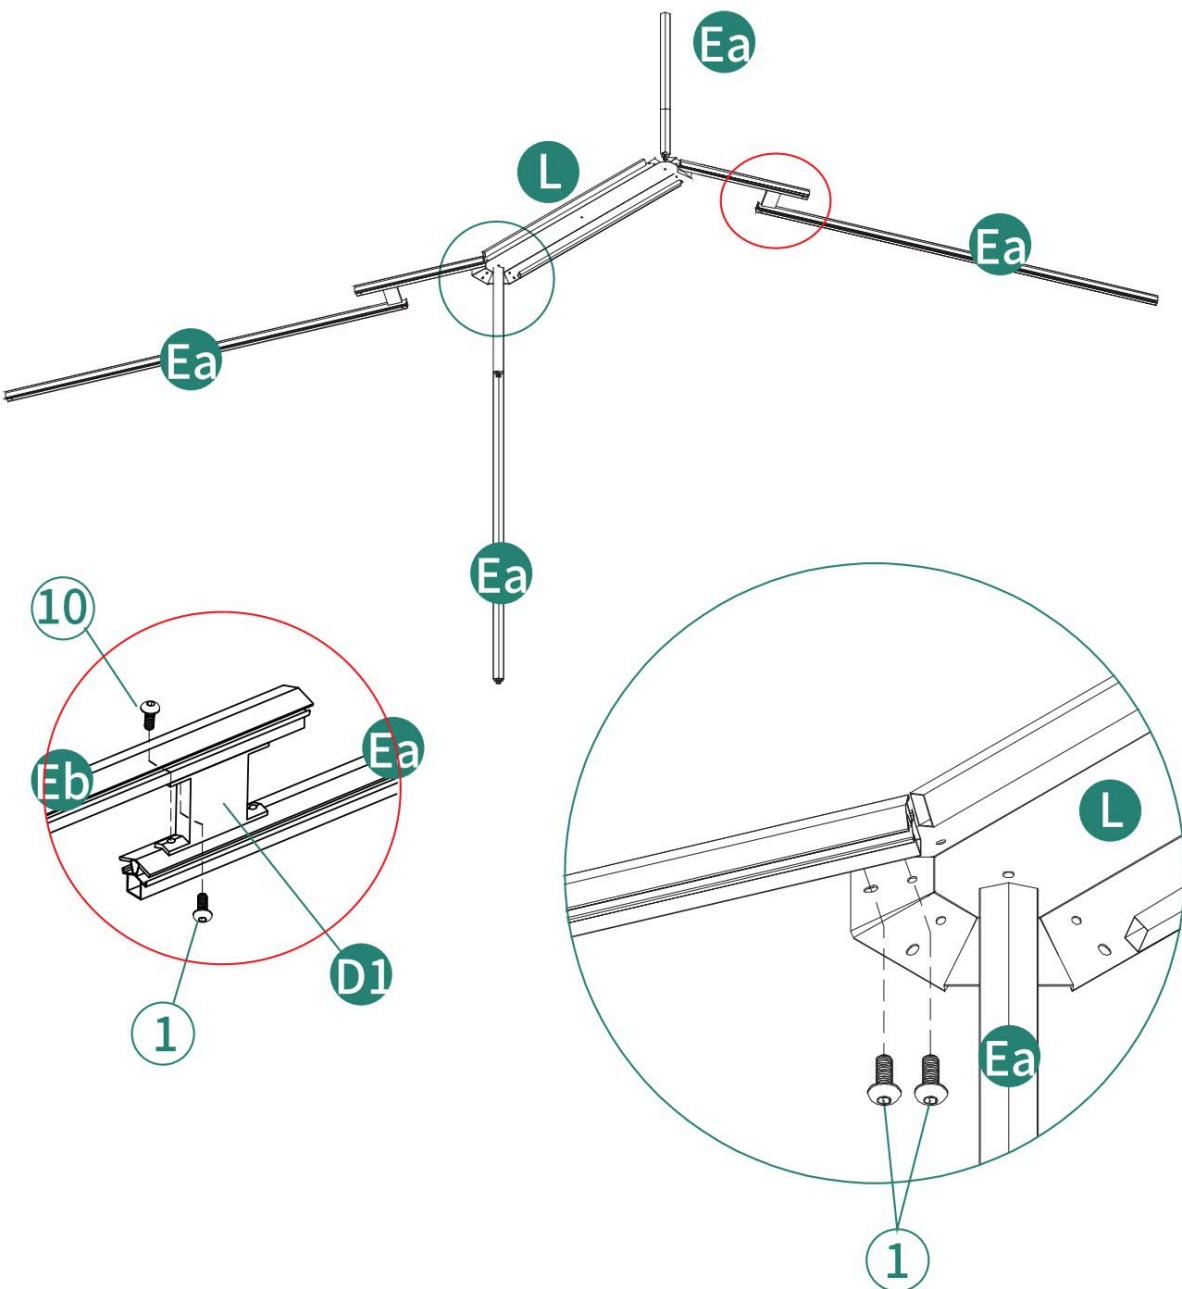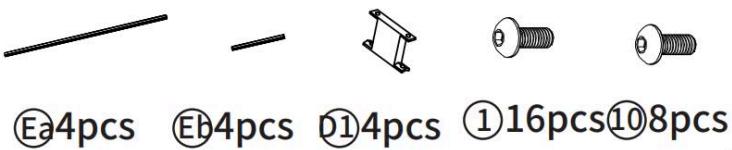


## ASSEMBLY INSTRUCTIONS

8  
① 4pcs

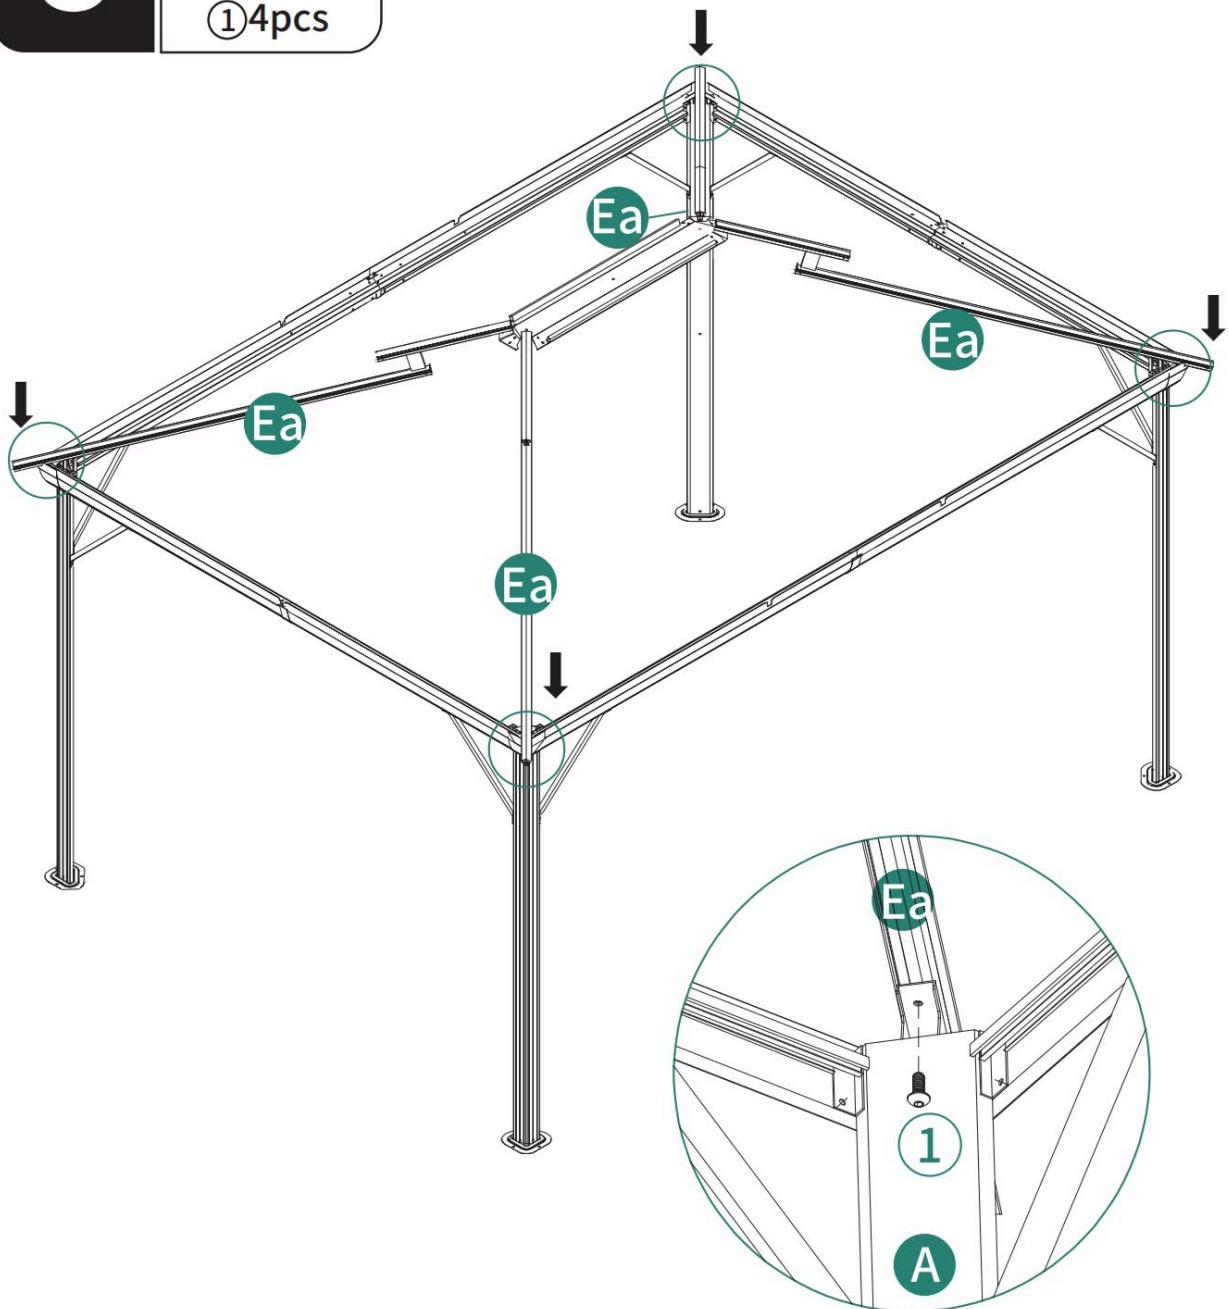

## ASSEMBLY INSTRUCTIONS

9  
X6



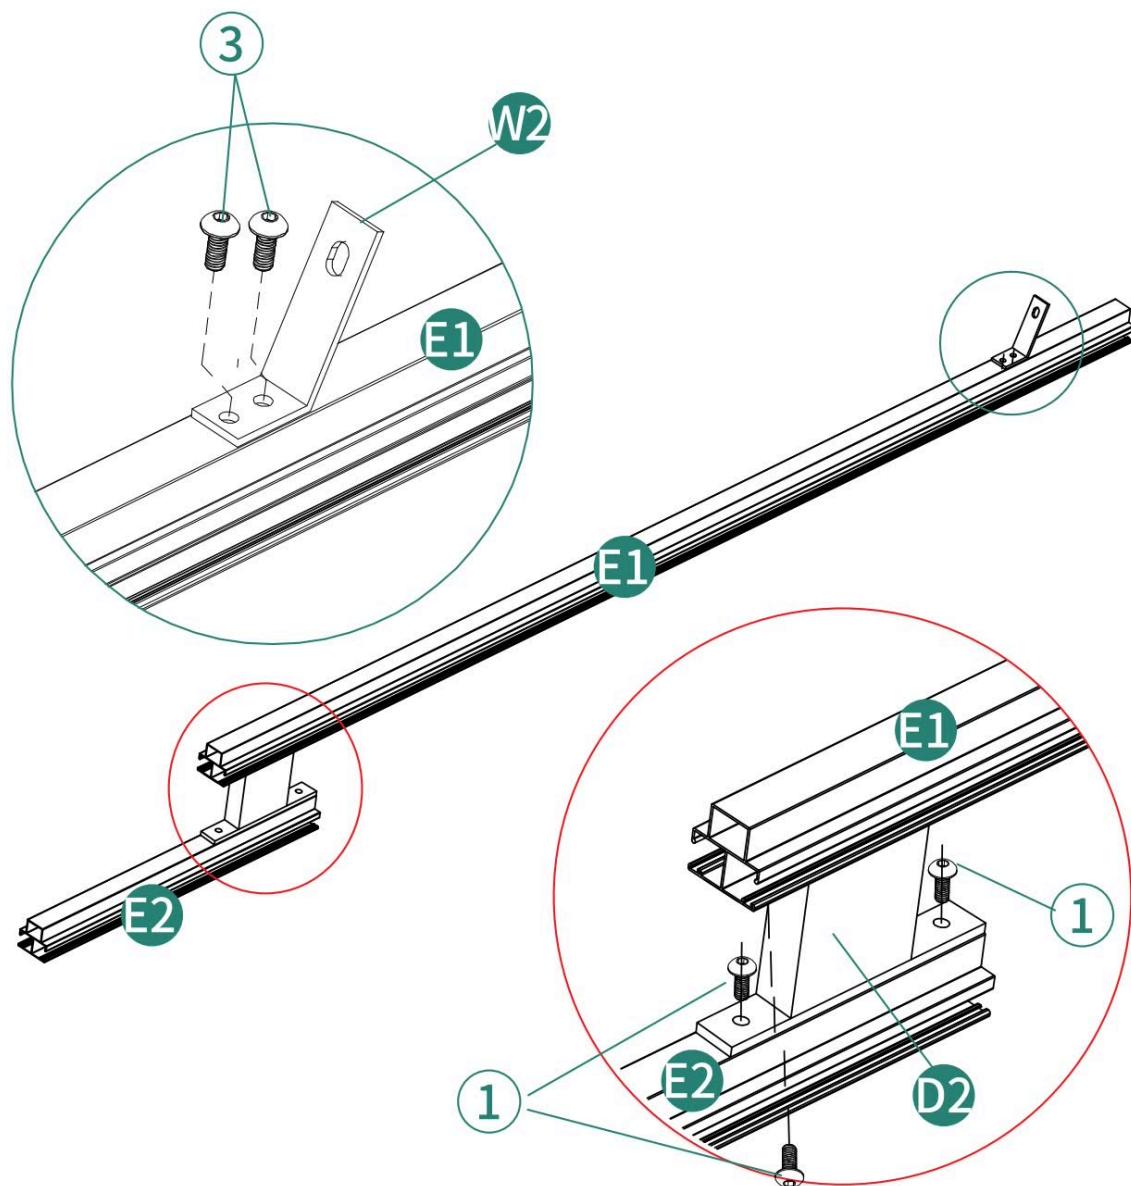


## ASSEMBLY INSTRUCTIONS

10





① 18pcs

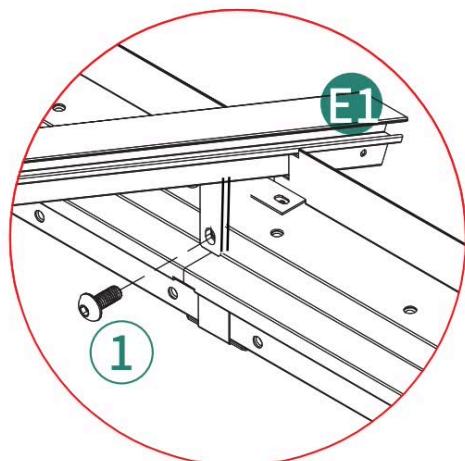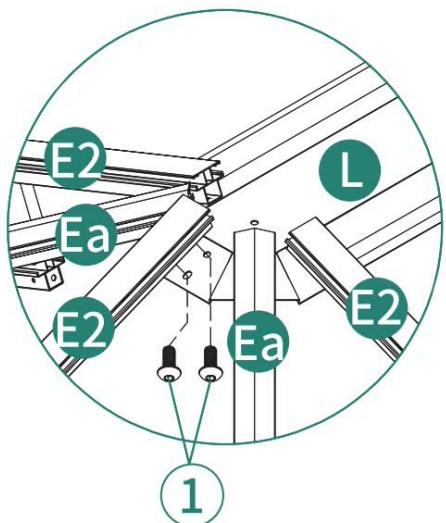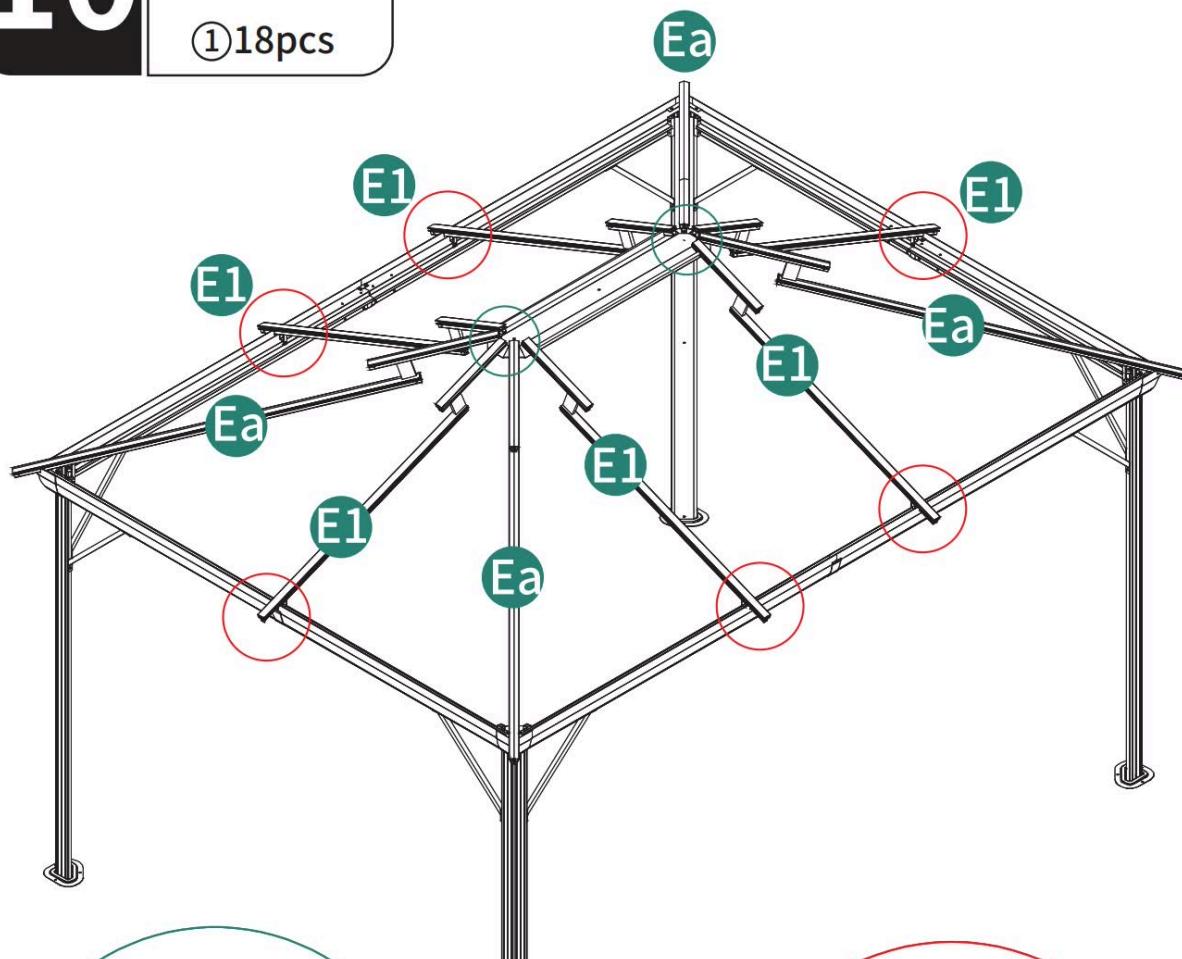



## ASSEMBLY INSTRUCTIONS

**11**

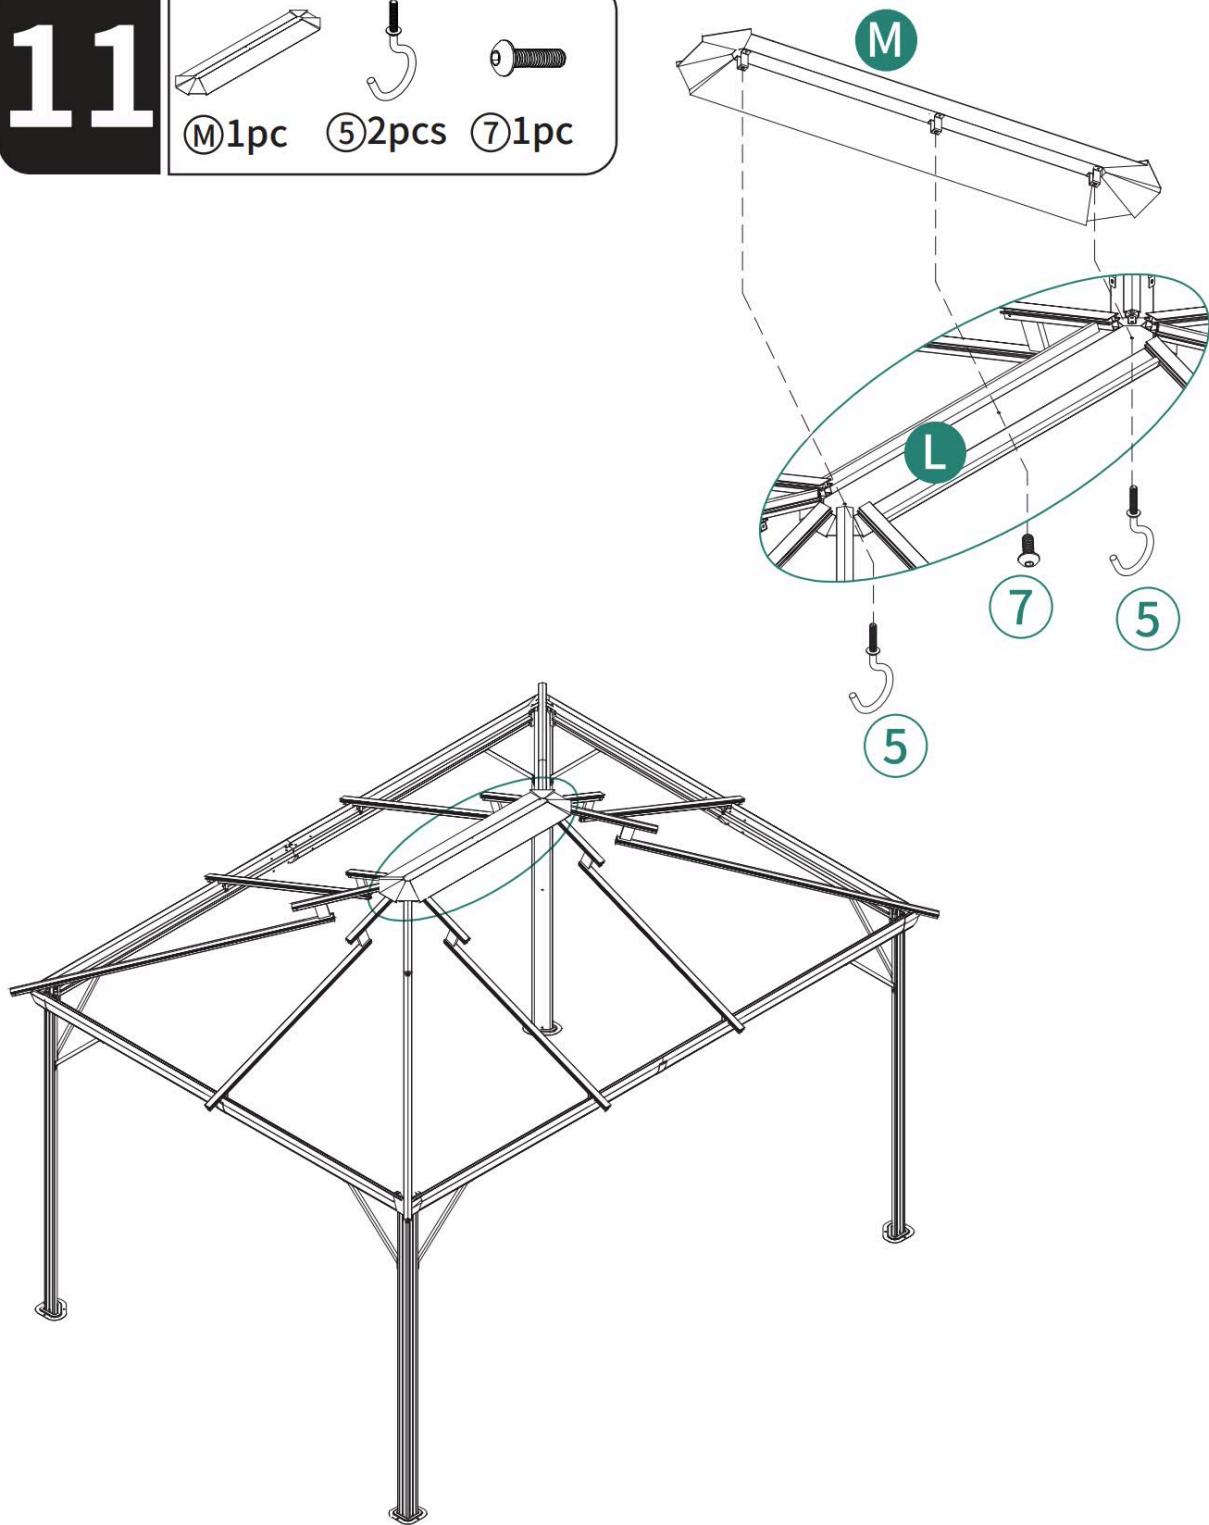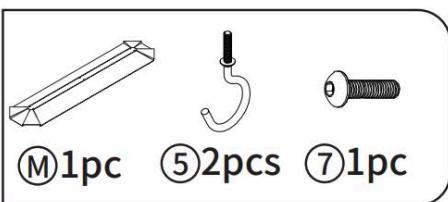




## ASSEMBLY INSTRUCTIONS

12

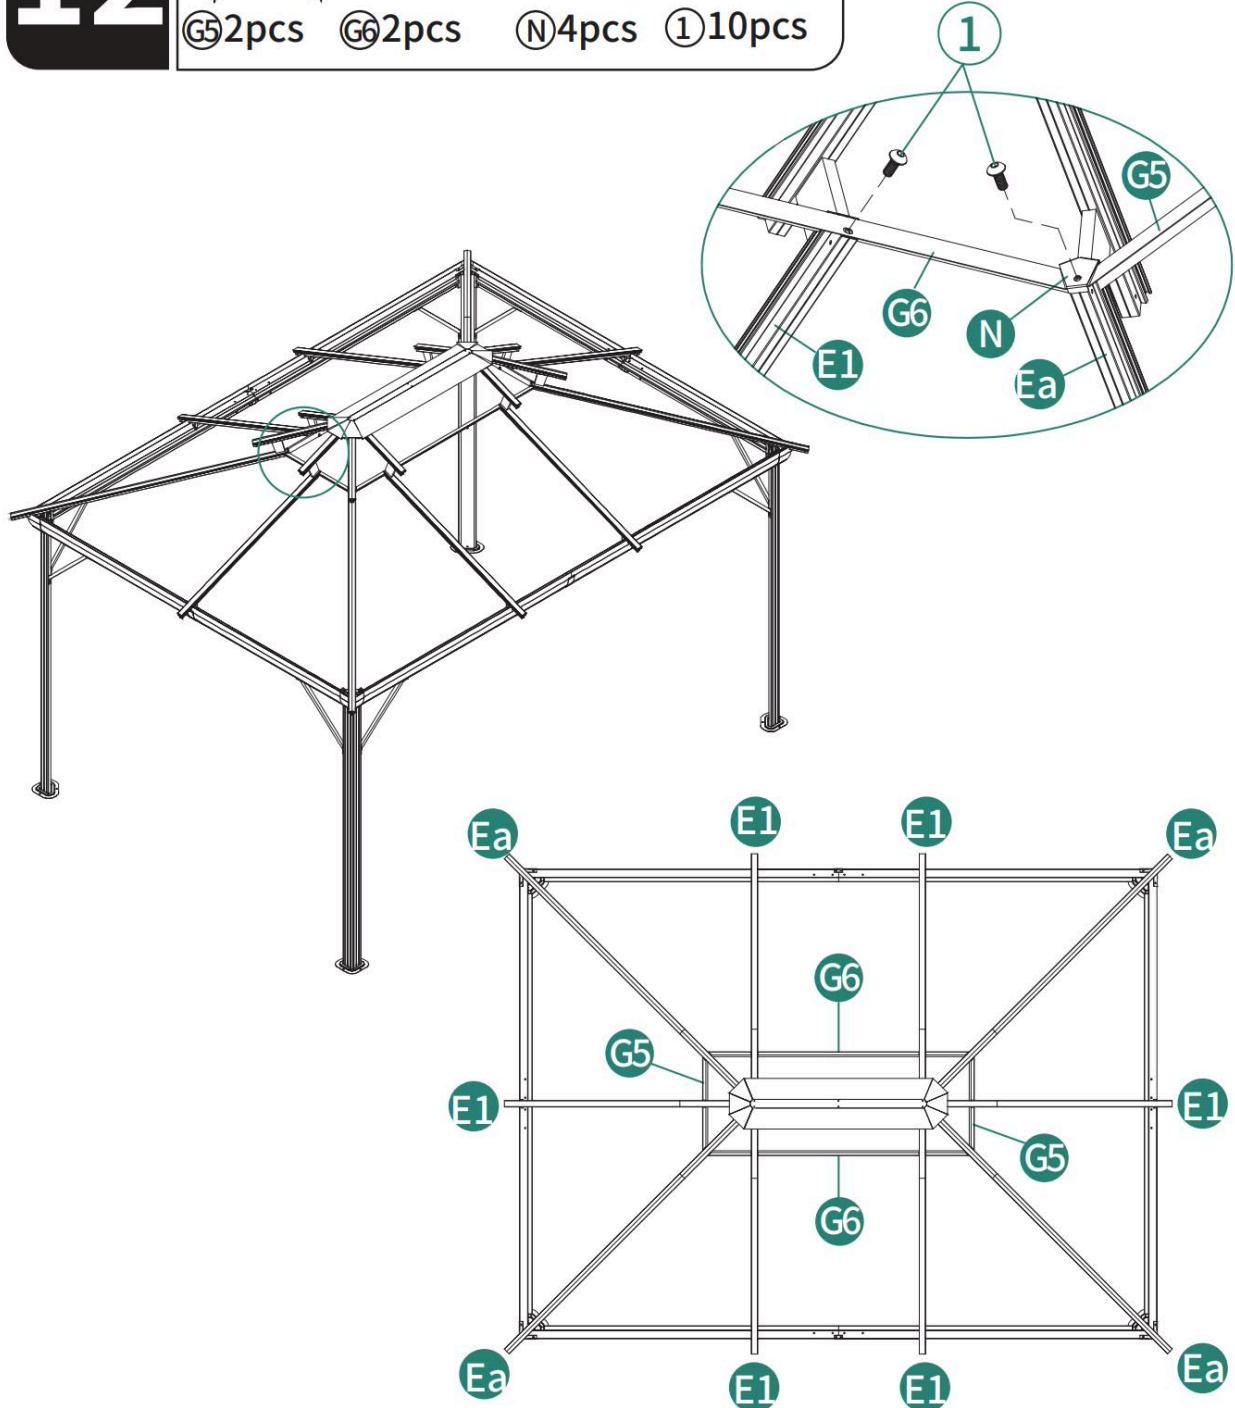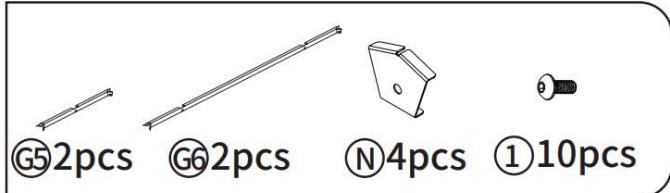

## ASSEMBLY INSTRUCTIONS






13

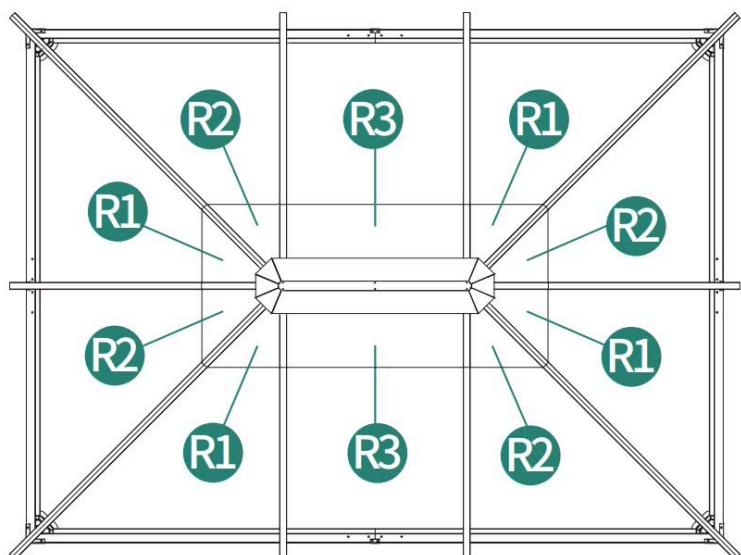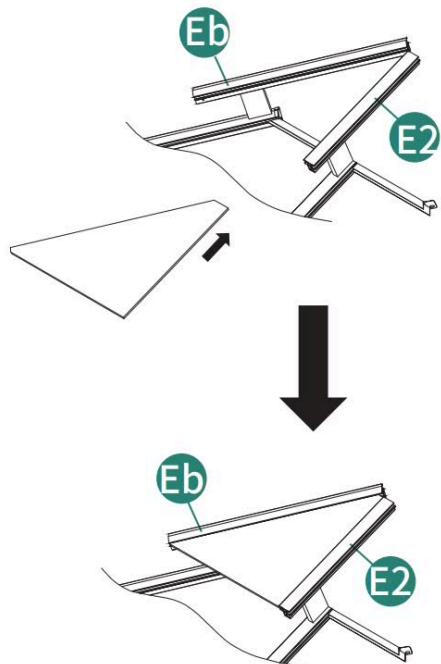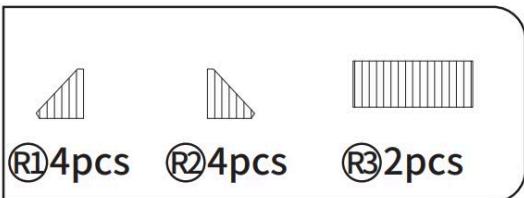

Before installing Parts R1/R2/R3, remove protective films (with side marks) on both the front and back sides. After removal, there will be no mark and minimal difference between the sides. Therefore, pay close attention to directions before removal.



## ASSEMBLY INSTRUCTIONS

14

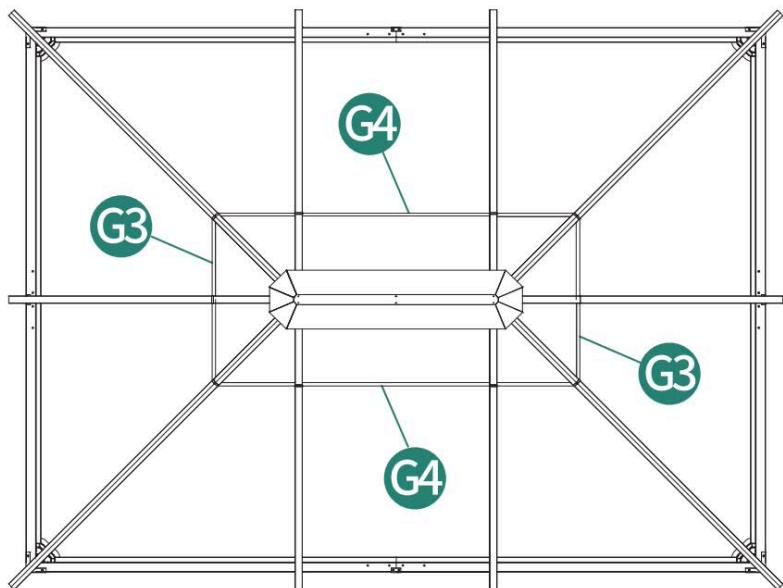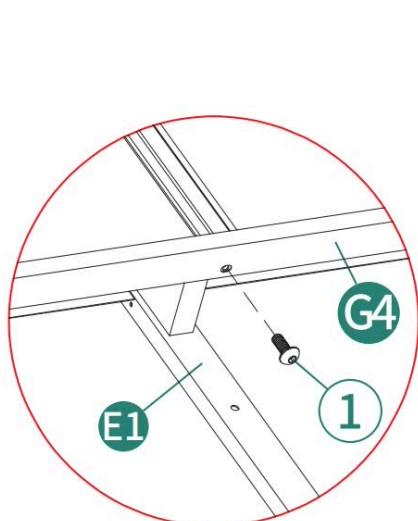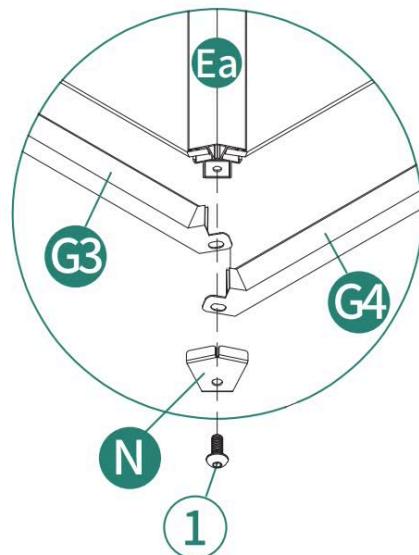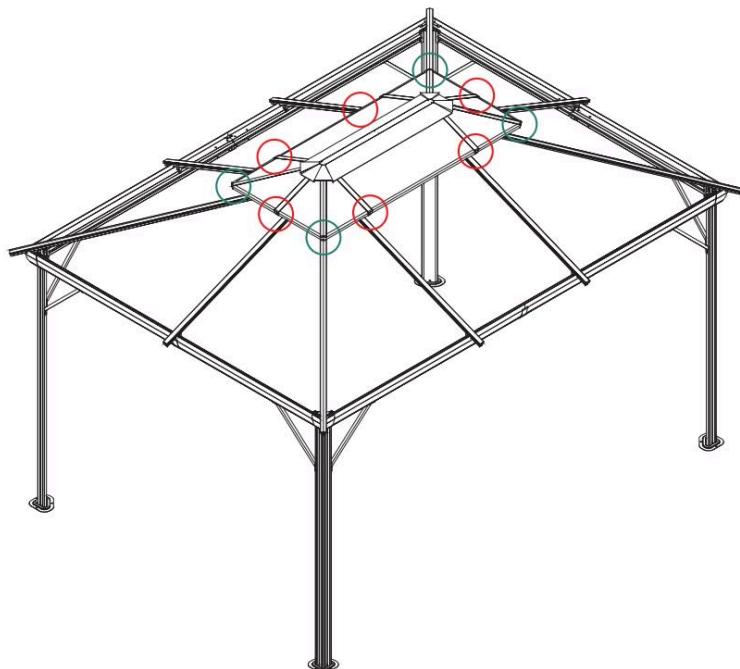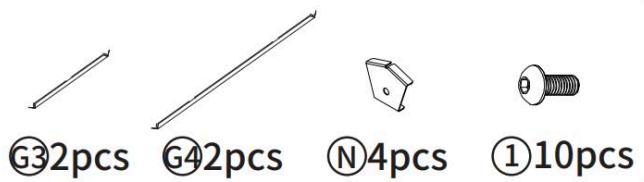



## ASSEMBLY INSTRUCTIONS

**15**

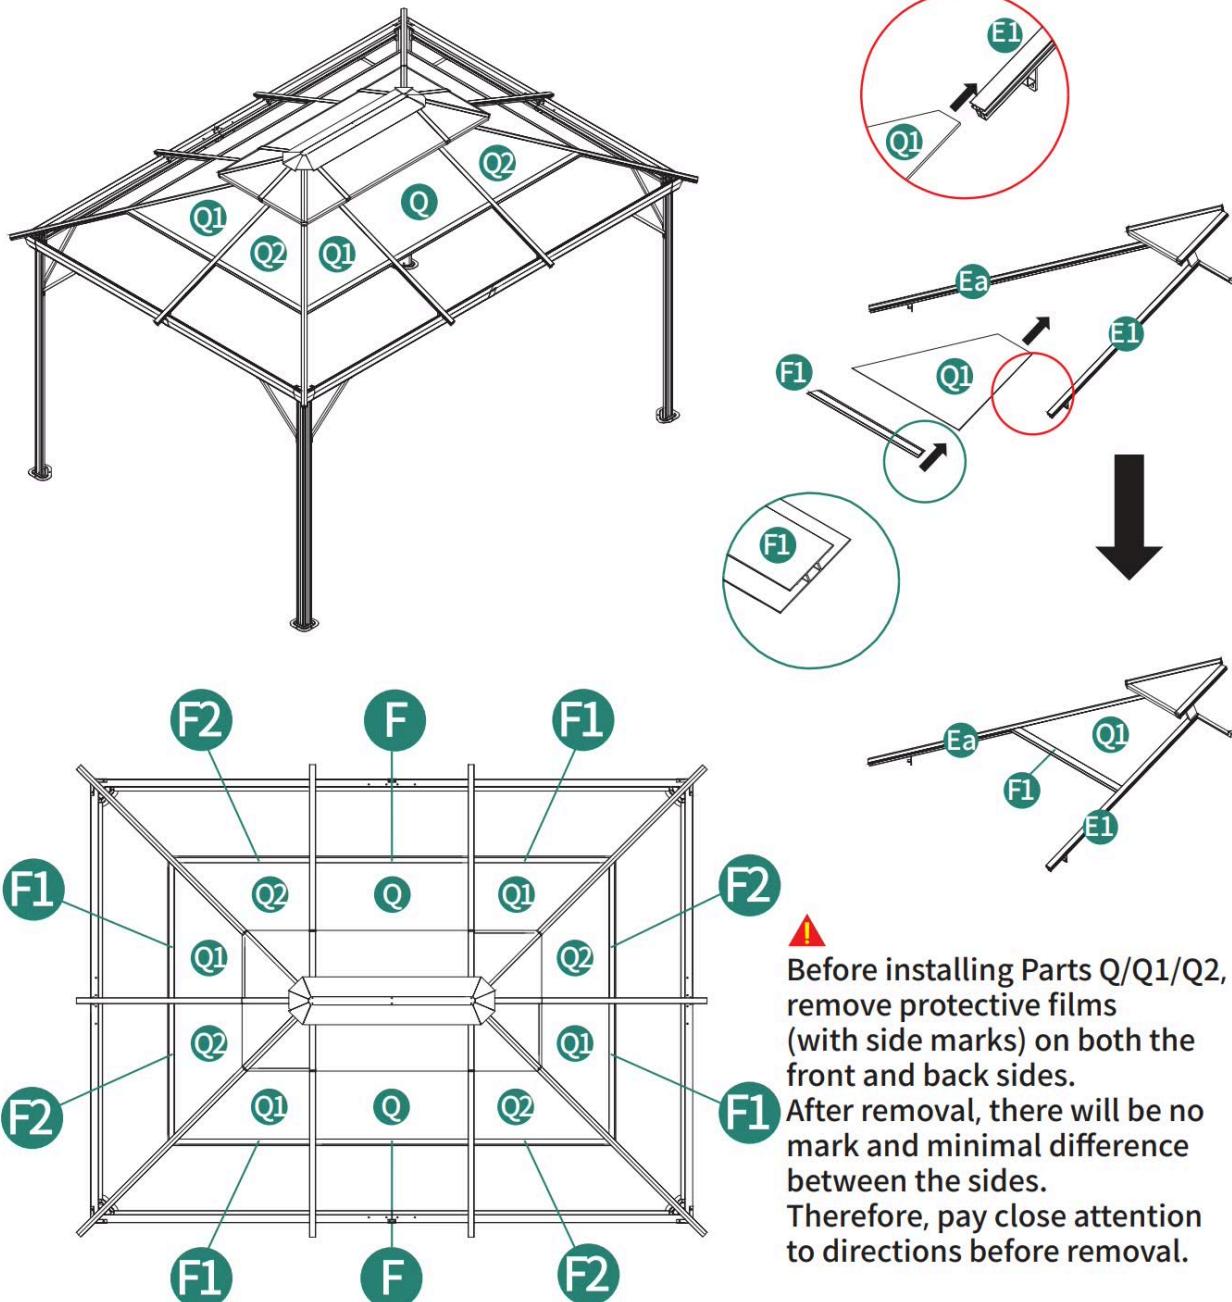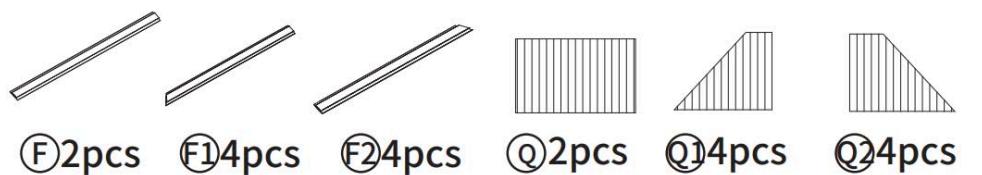

## ASSEMBLY INSTRUCTIONS




**16**

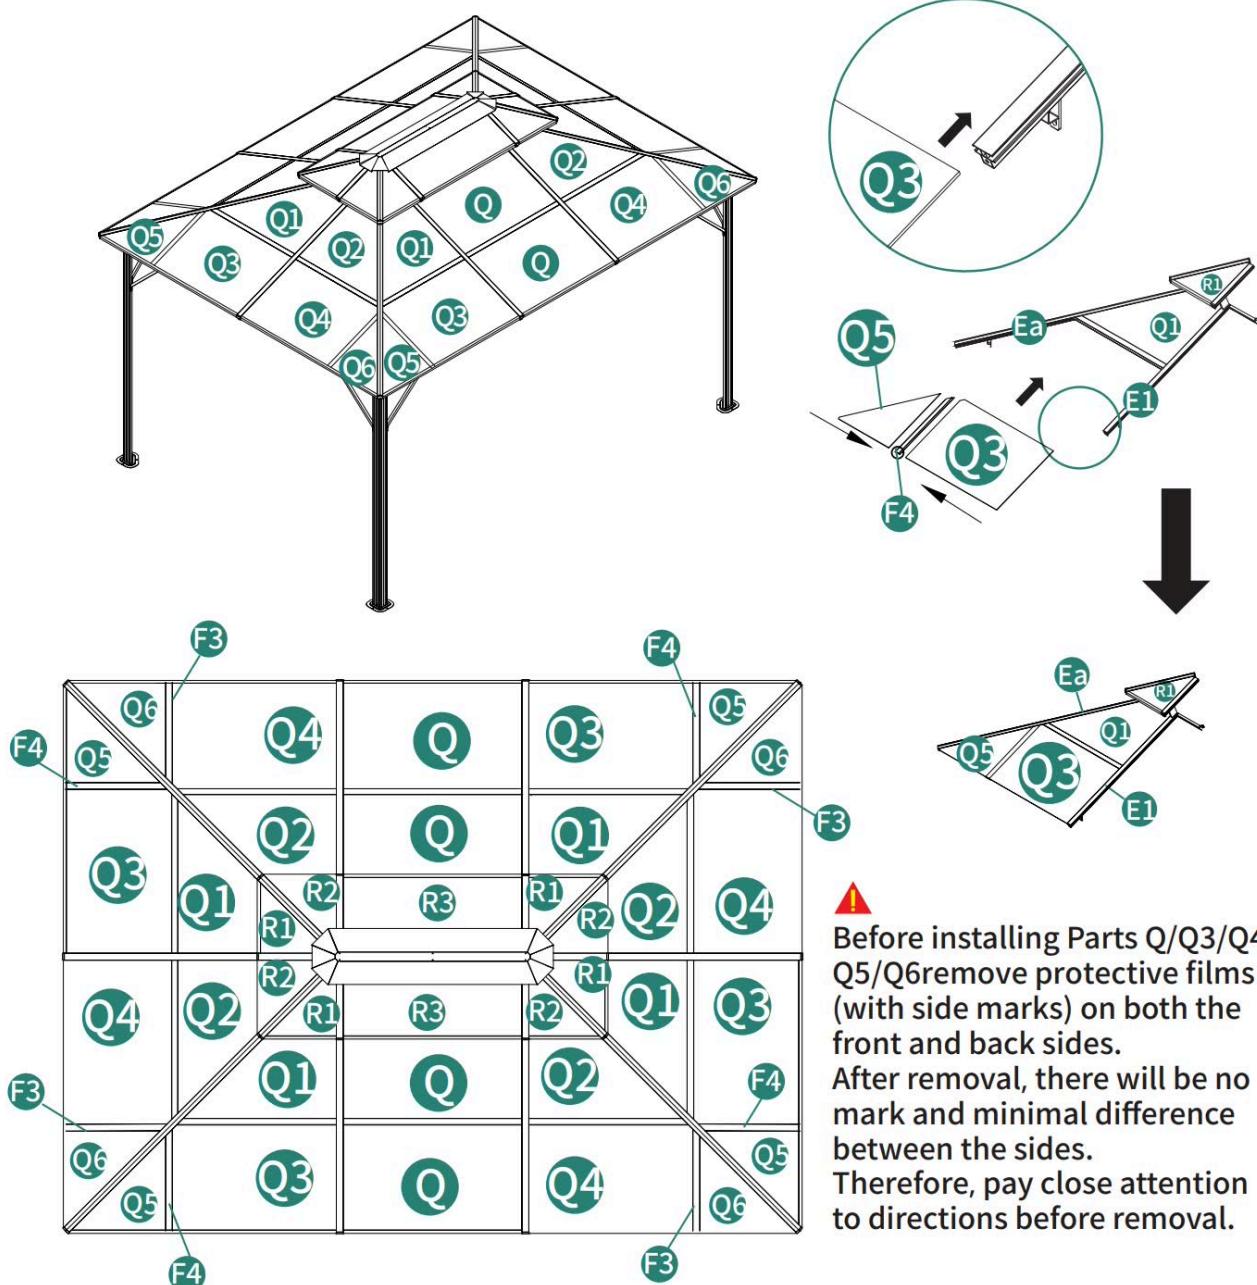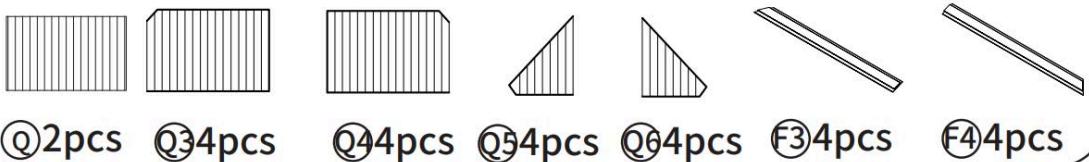

## ASSEMBLY INSTRUCTIONS




17

- (G)2pcs
- (G1)4pcs
- (G2)4pcs
- (N)4pcs
- (N1)6pcs
- (1)10pcs

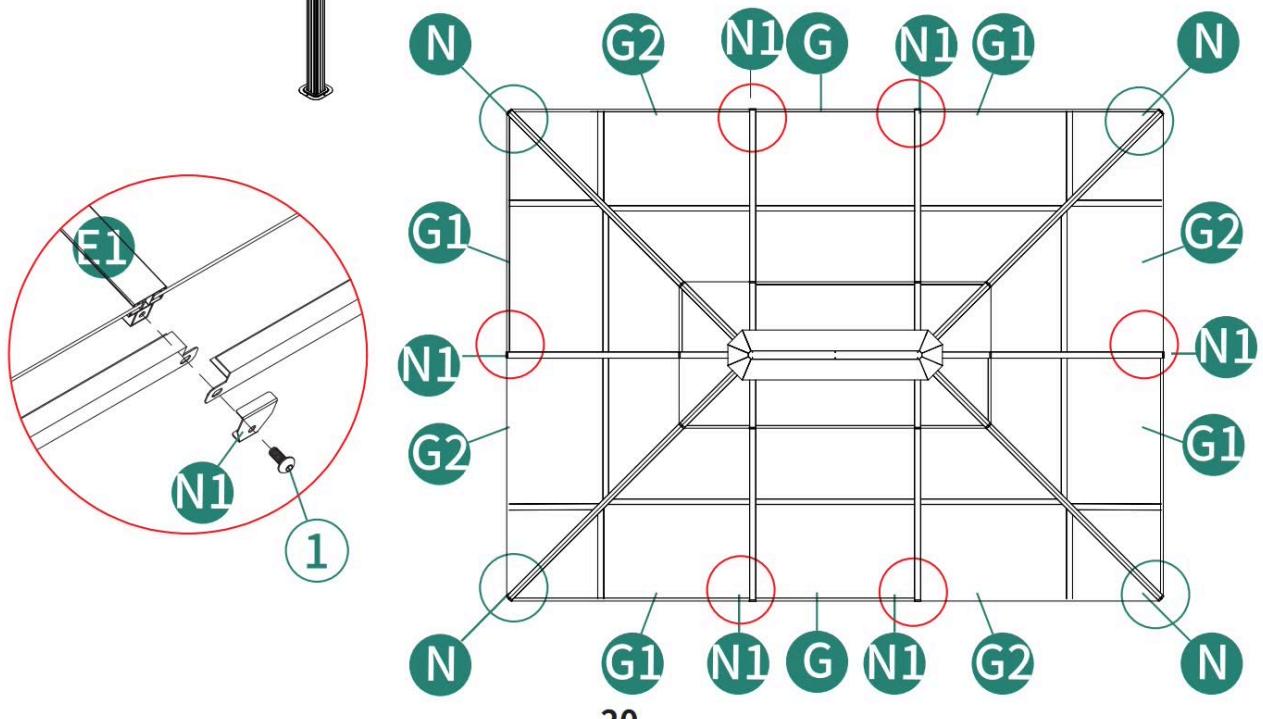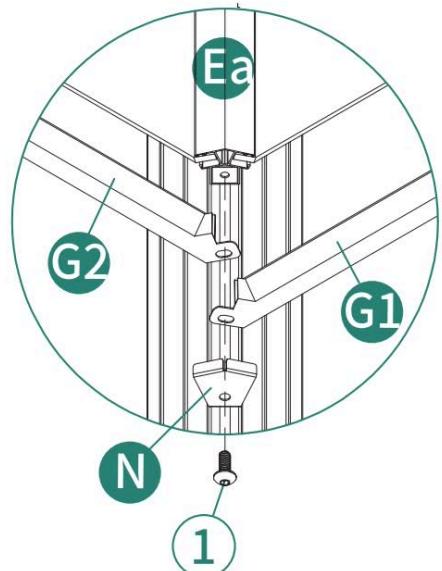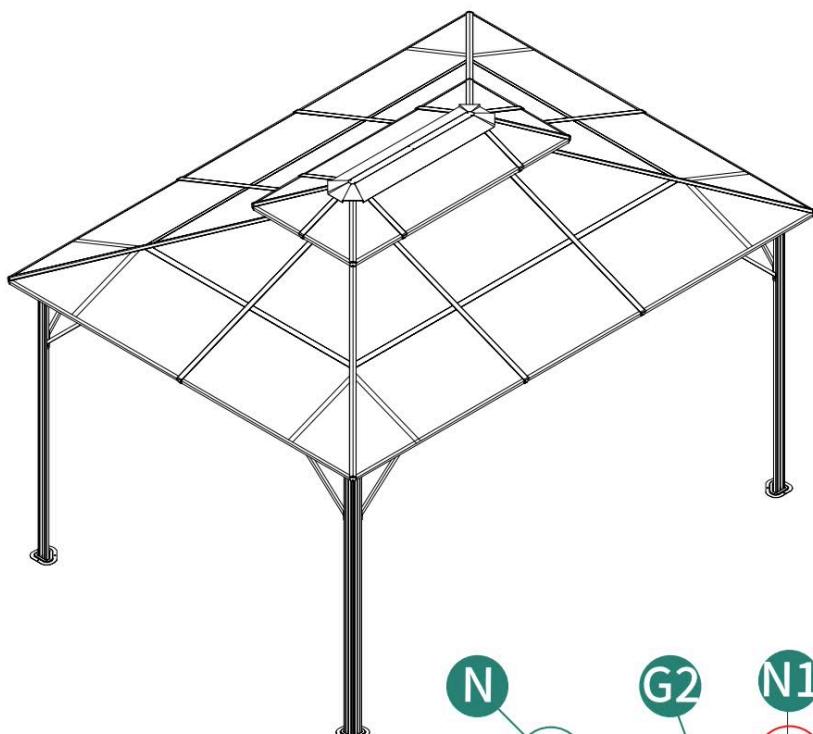


## ASSEMBLY INSTRUCTIONS

18

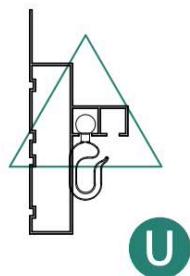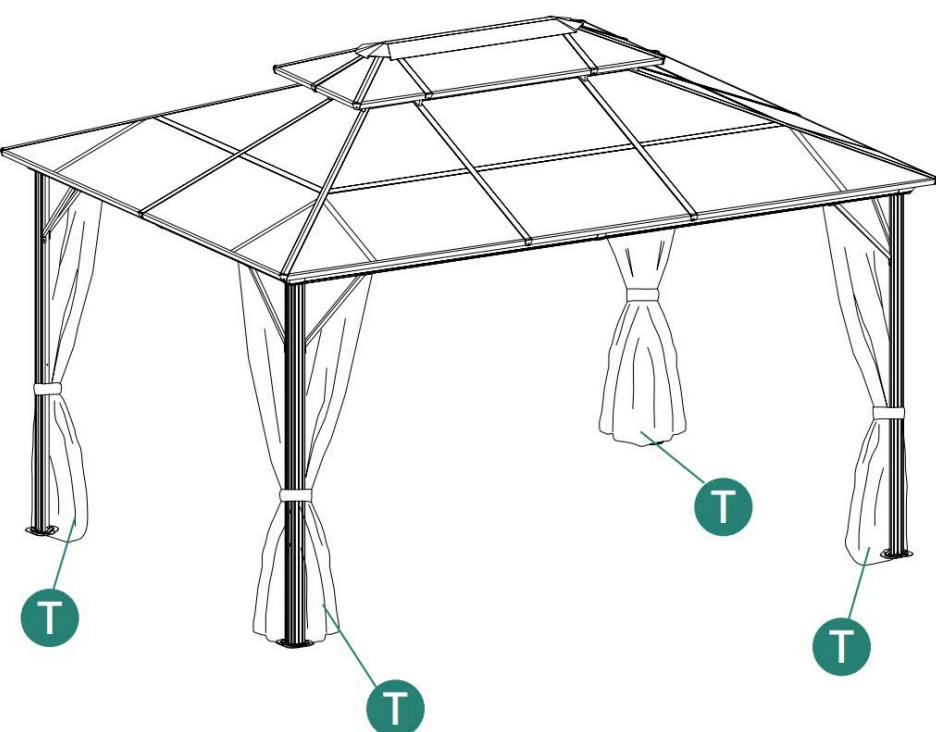


Pay attention to the sidewall curtain's installation position.


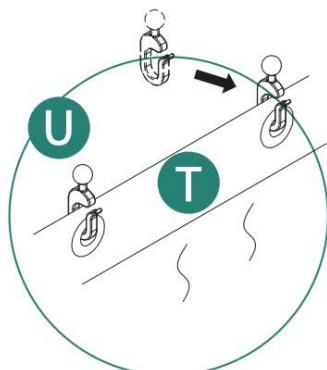


# ASSEMBLY INSTRUCTIONS

19



⑤4pcs

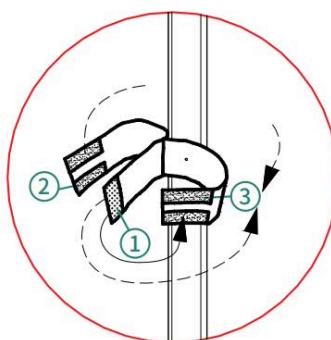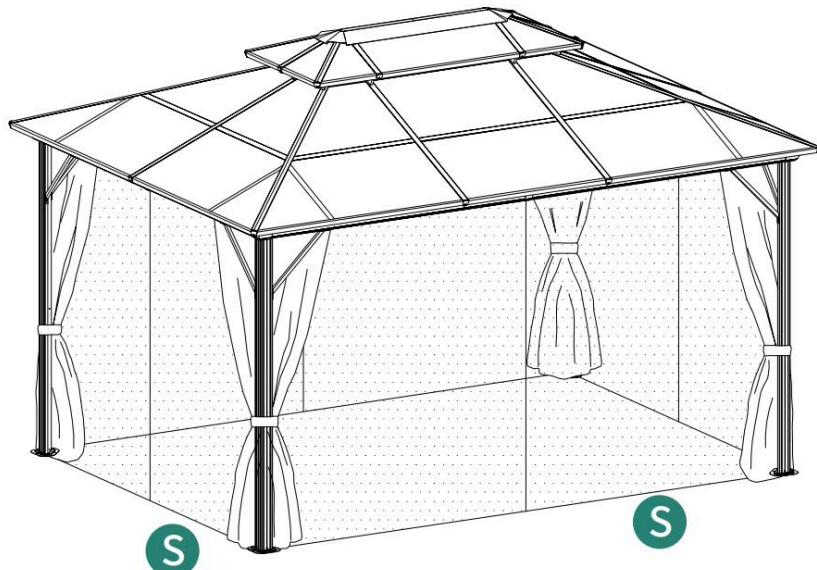


Note:



Attach 1 to 2 to secure parts S (netting) and T (curtains) together.

Attach 1 to 3 to secure the back curtain (T).

Attach 1 to 3 to secure the front netting (S).

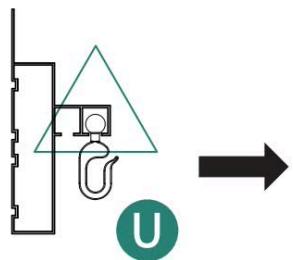

Pay attention to the sidewall netting's installation position.

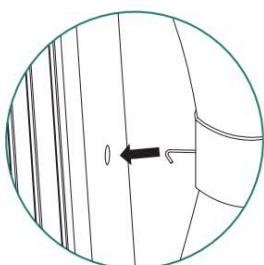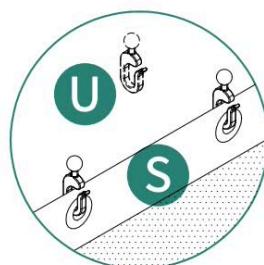


Hang the hook attached to the netting on Part A.

## ASSEMBLY INSTRUCTIONS



20



⑧12pcs

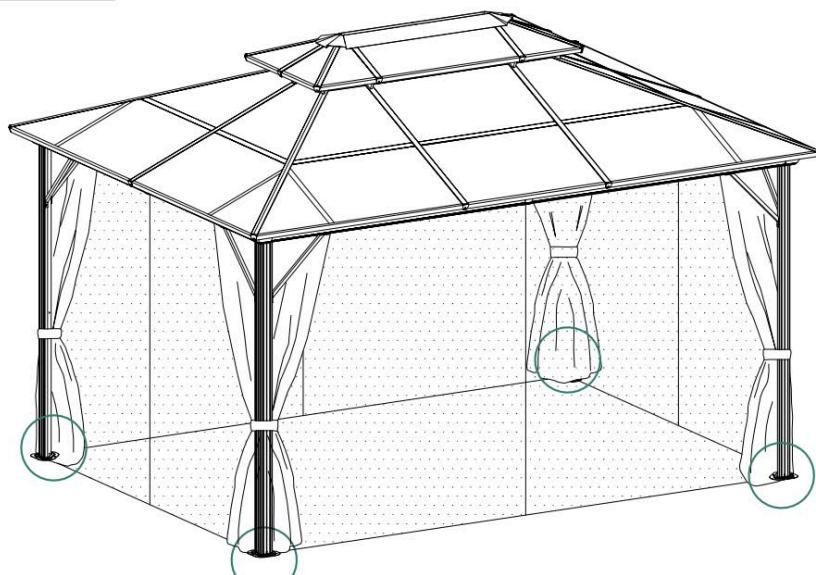

Installation Completed

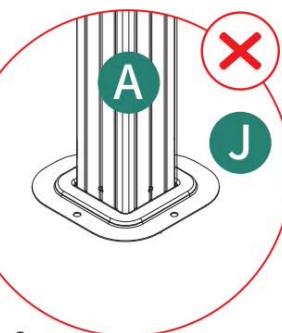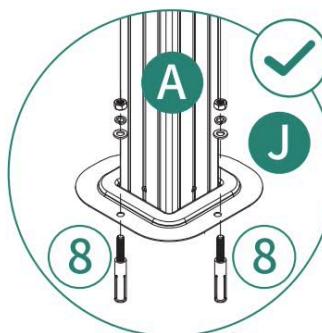

Cement surfaces



To improve wind resistance,  
**be sure to complete this installation  
step. If expansion screws or ground  
nails are not installed, strong winds  
may topple the gazebo.**

Expansion screws are essential for  
stability on cement surfaces,  
All are included in the accessories  
package.