
ASSEMBLY INSTRUCTION

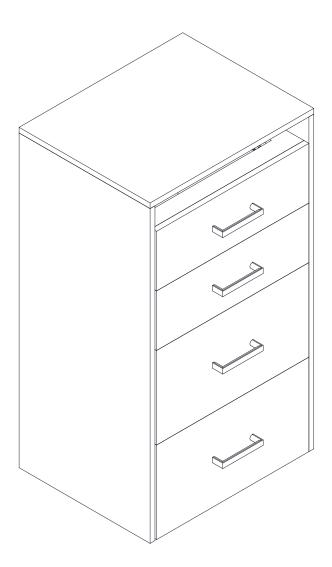

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARING THE ASSEMBLY Scan this QR code and watch our assembly tutorials Or go to:https://youtu.be/yph_FyKiMic

PLEASE DO NOT RETURN TO STORE




Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

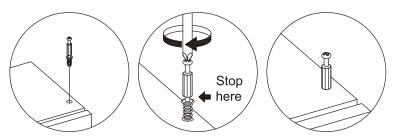


2. Check the direction of the nut


This direction of the marked nutis consistent with the direction in which the scre is inserted

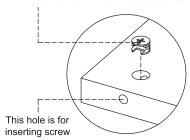



3. Installation on thr board with fixing screws

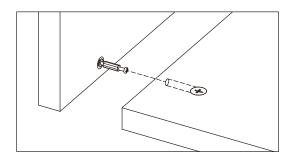



3. Rotate slowlyuntil it stops

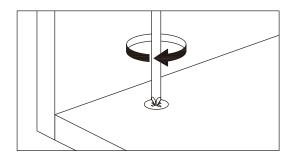


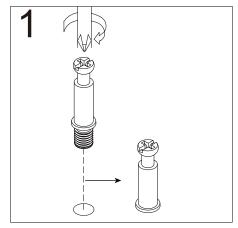


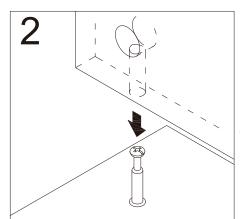

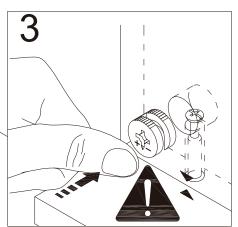

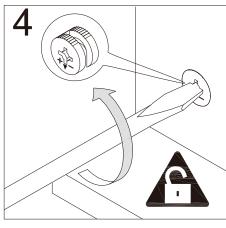

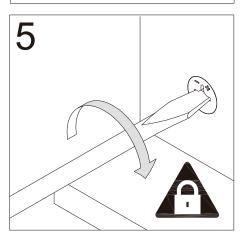

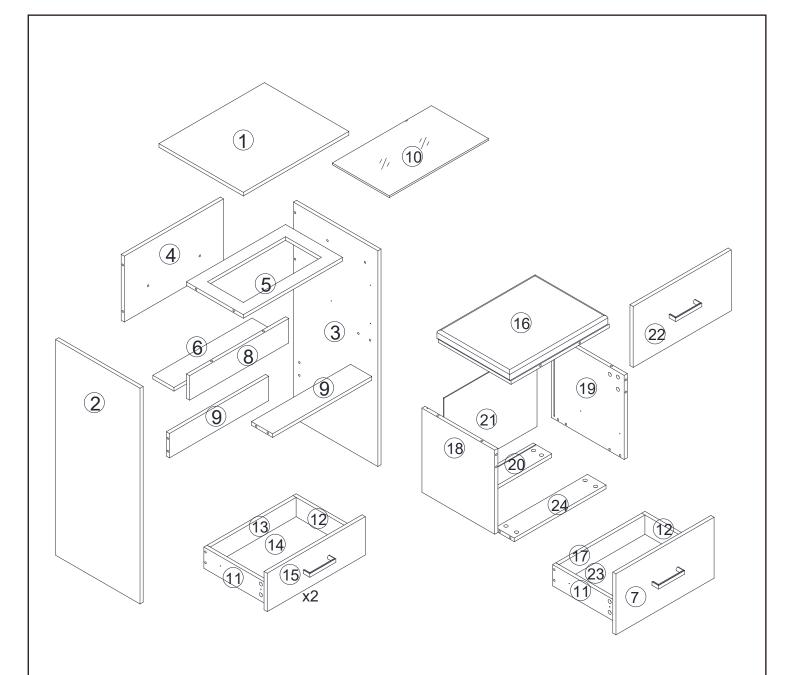

1 - x1 6 - x1 11 - x3 16 - x1 21 - x1 2 - x1 7 - x1 12 - x3 17 - x1 22 - x1 3 - x1 8 - x1 18 - x1 23 - x1 13 - x3 23 - x1 4 - x1 9 - x2 14 - x3 19 - x1 5 - x1 10 - x1 15 - x2 20 - x1

HARDWARE







B SCREW & METAL LOCK X52







С	SCREW	х36
---	-------	-----

D	RAIL	х6

E HANDLE X8













J FOOT PAD X6

