Full Length Mirror 3Installation Options







1.Wall mounted

2.Paste installation

3.Leaning on the wall

Expansion screw*2

Installation Instruction

Before Installation *Please make sure that theinstalled wall is a load bearing wall.


*Please be awared of the wires and water pipes while drilling


Product and accessories BAPEREN I Screw*2 3M adhesivestrip*8 Non-slip Mat*4


Glue*1

1.Wall mounted

Tools Needs(not included in the package) Pencil Electric Drill Hammer Tapeline Level Ruler Screwdriver

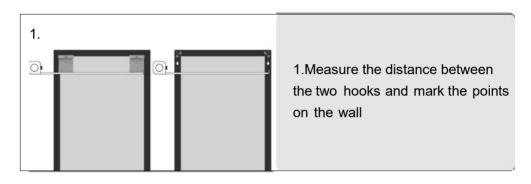

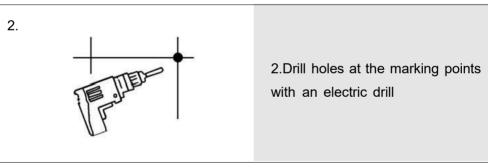

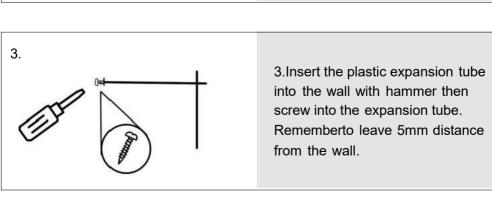


2.Paste installation

1. 1.Stick83M rubber strips on the back of the frame respectively. 2. 2.Apply structural adhesive to the back of the frame and tear off the back of the adhesive tape. 3. 3.Stick the mirror on the wall. Note:the wall should be smooth and flat when pasting(wall covering /wallpaper,wet/dusty wall can't be pasted).

3.Leaning on the wall

Put two non-slip pads on the bottom, two non-slip pads on the back of the mirror, put the bracket away and lean against the wall.

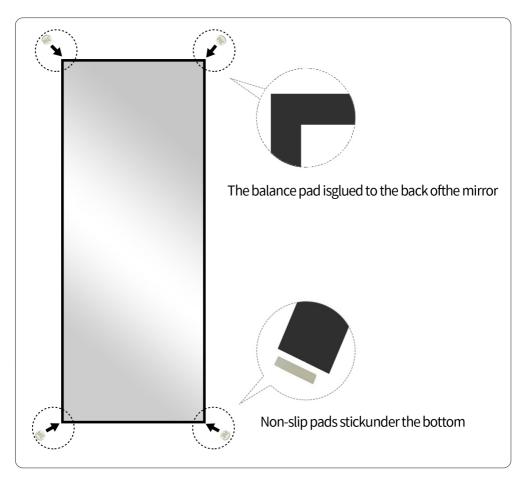

The mirror can be usedwhen it is put away and tilted against the wall