Full Length Mirror 3 Installation Options







1.Wall mounted

2.Paste installation

3.Leaning on the wall

Installation Instruction

Before Installation

- Please make sure that the installed wall is a load bearing wall.
- * Please be awared of the wires and water pipes while drilling.

Product and accessories







Glue*1



Non-slip Mat*4



Screw*2 Expansion screw*2

1.Wall mounted

Tools Needs (not included in the package)







Electric Drill



Hammer



Tapeline




Level Ruler




Screwdriver



1.Measure the distance between the two hooks and mark the points on the wall

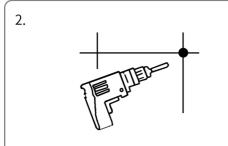



2.Drill holes at the marking points with an electric drill

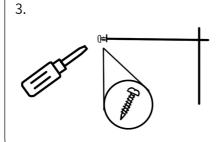

3.Insert the plastic expansion tube into the wall with hammer then screw into the expansion tube. Remember to leave 5mm distance from the wall.


2.Paste installation

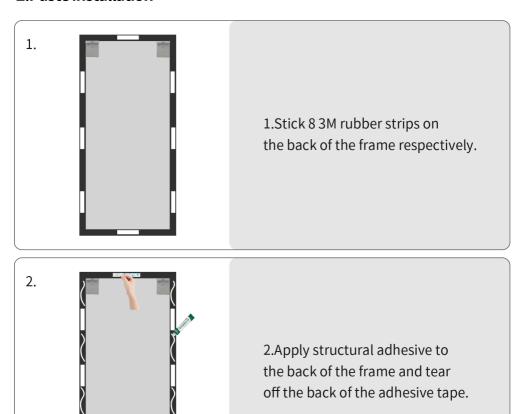

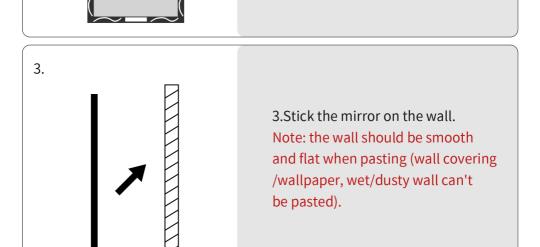

3.Leaning on the wall

Put two non-slip pads on the bottom, two non-slip pads on the back of the mirror, put the bracket away and lean against the wall.

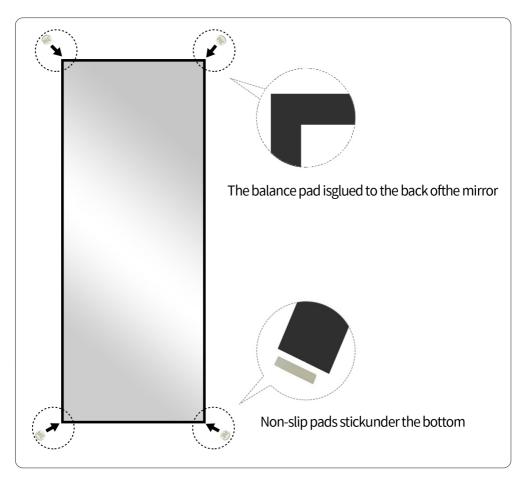

The mirror can be usedwhen it is put away and tilted against the wall