


10X12 FT

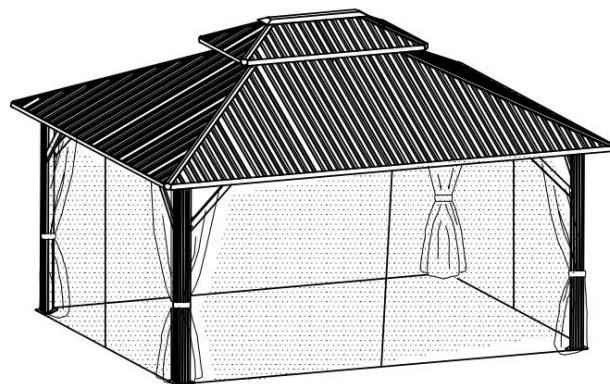

Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
B2		X2
B3		X2
Ea		X4
Eb		X4
E1		X4
F1		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
F2		X4	L		X1
G1		X2	M		X1
G2		X2	N		X12
G3		X2	N1		X4
G4		X2	P		X4
G5		X2	T		X4
G6		X2	T1		X4
G7		X2	Z		X56
G8		X2	Z1		X24
H		X4	U		X104
H1		X4	W		X4
K		X4	W1		X4
K1		X4	W2		X4

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
W3		X4	Sa		X2
J		X4	R1		X2
Y		X104	R2		X2
V1		X2	R3		X2
V2		X2	R4		X2
V3		X2	R5		X2
Q1		X2	R6		X2
Q2		X2	R7		X2
Q3		X2	R8		X2
Q4		X2	S1		X2
Q5		X2	S2		X2
Q6		X2	S3		X2
S		X2	S4		X2

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
①	 M6X16mm	X144	⑨	 X12	
②	 M6X23mm	X64	⑩	 M5X12mm	X20
③	 M6X25mm	X8	⑪		X2
④	 ST4.8X12mm	X24	⑫	 S4	X1
⑤	 M6X10mm	X8	⑬	 S5	X1
⑥	 M6X42mm	X4	⑭	 S6	X1
⑦	 M6X47mm	X28	⑮		X12
⑧	 M6X15mm	X16	⑯		X4
			⑰		X4
			⑱		

ASSEMBLY INSTRUCTIONS

1

X4




(A)4pcs



(J)4pcs




(1)12pcs

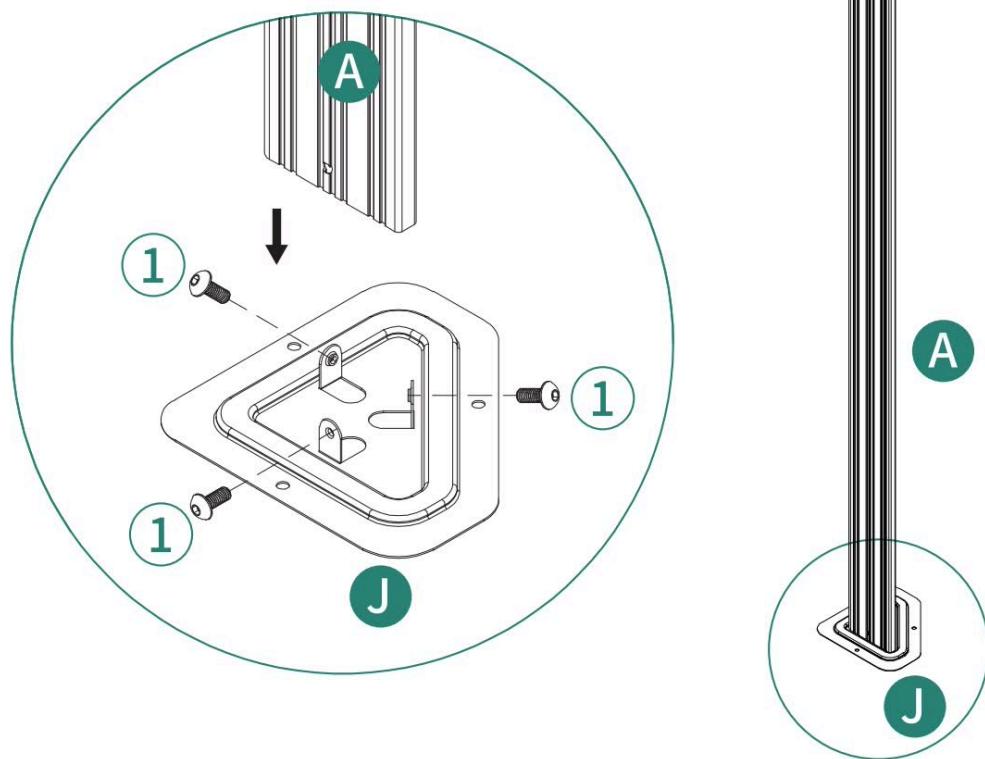



ASSEMBLY INSTRUCTIONS

2





X2

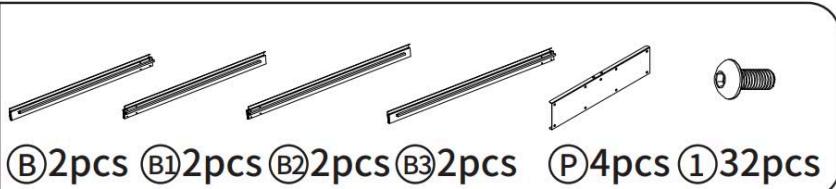


When connecting B and B1 via P, B2 and B3 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

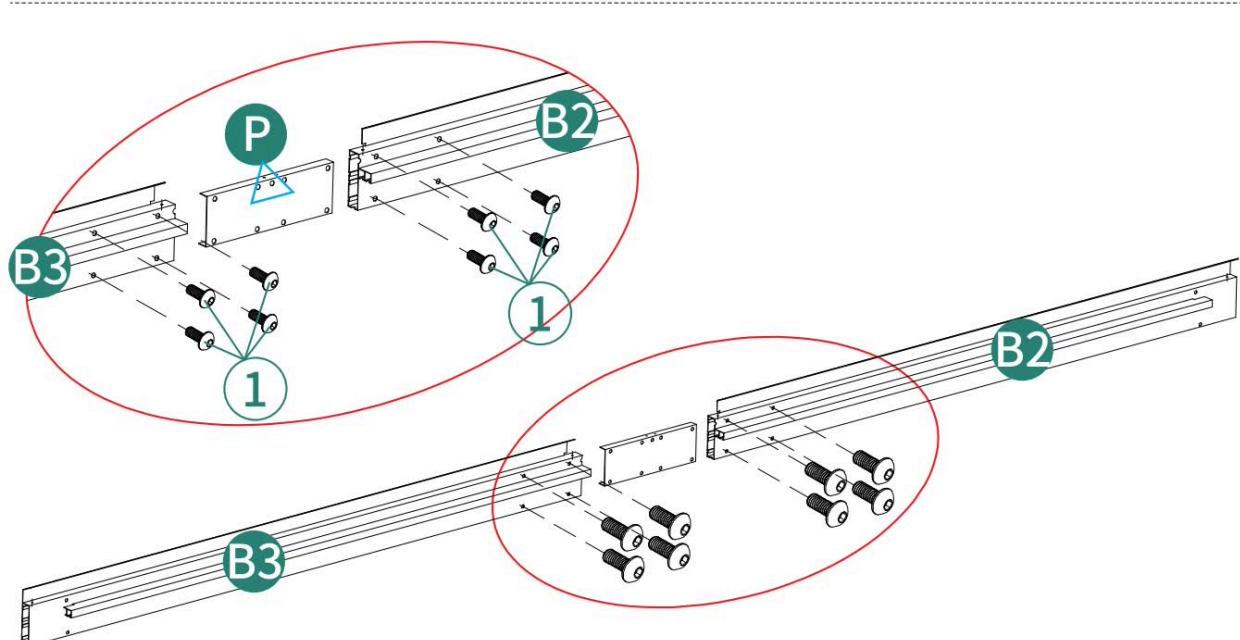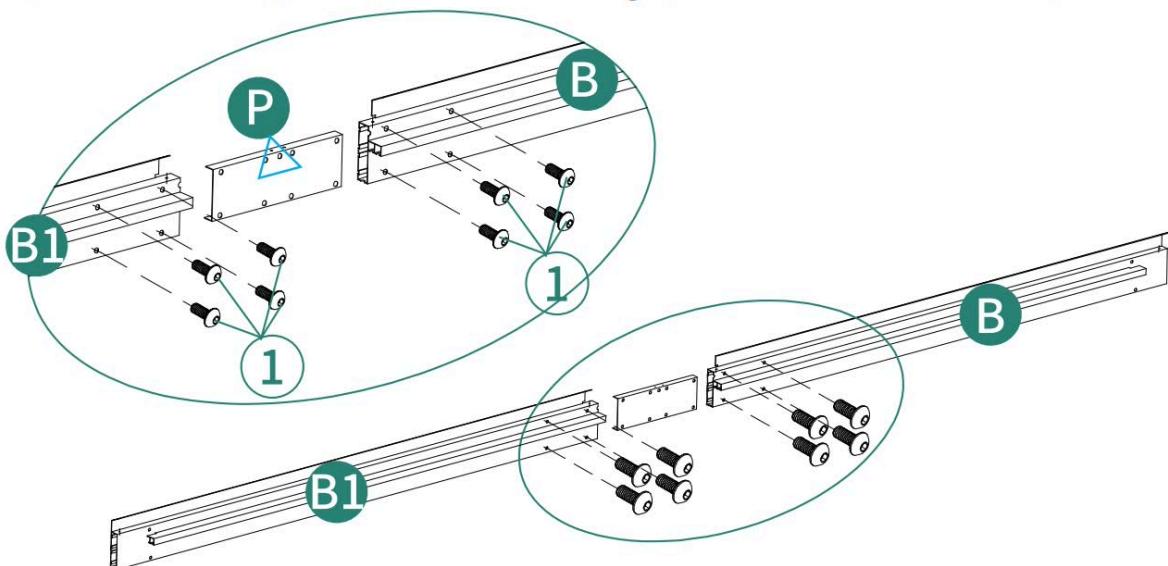

ASSEMBLY INSTRUCTIONS

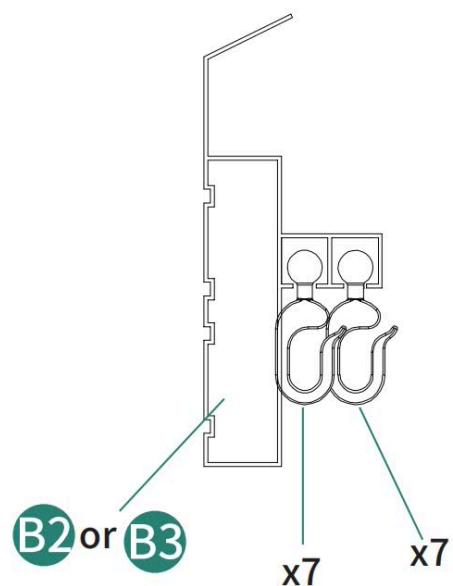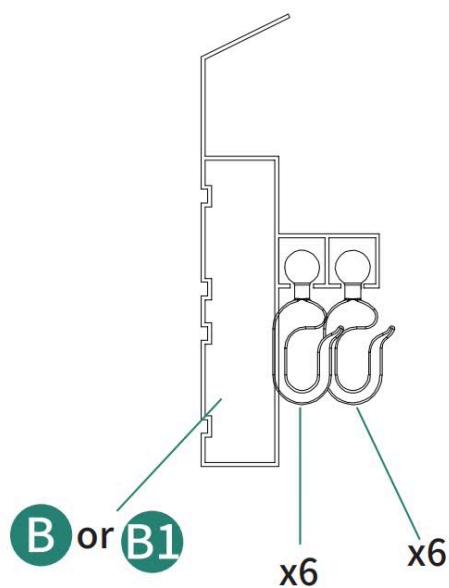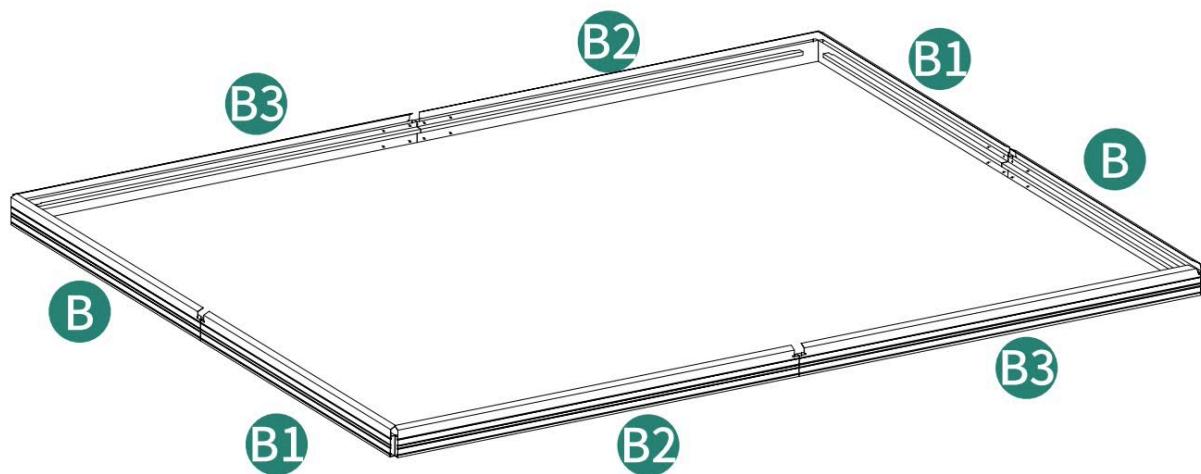
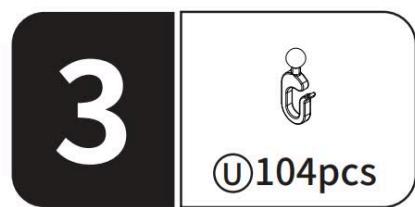


ASSEMBLY INSTRUCTIONS

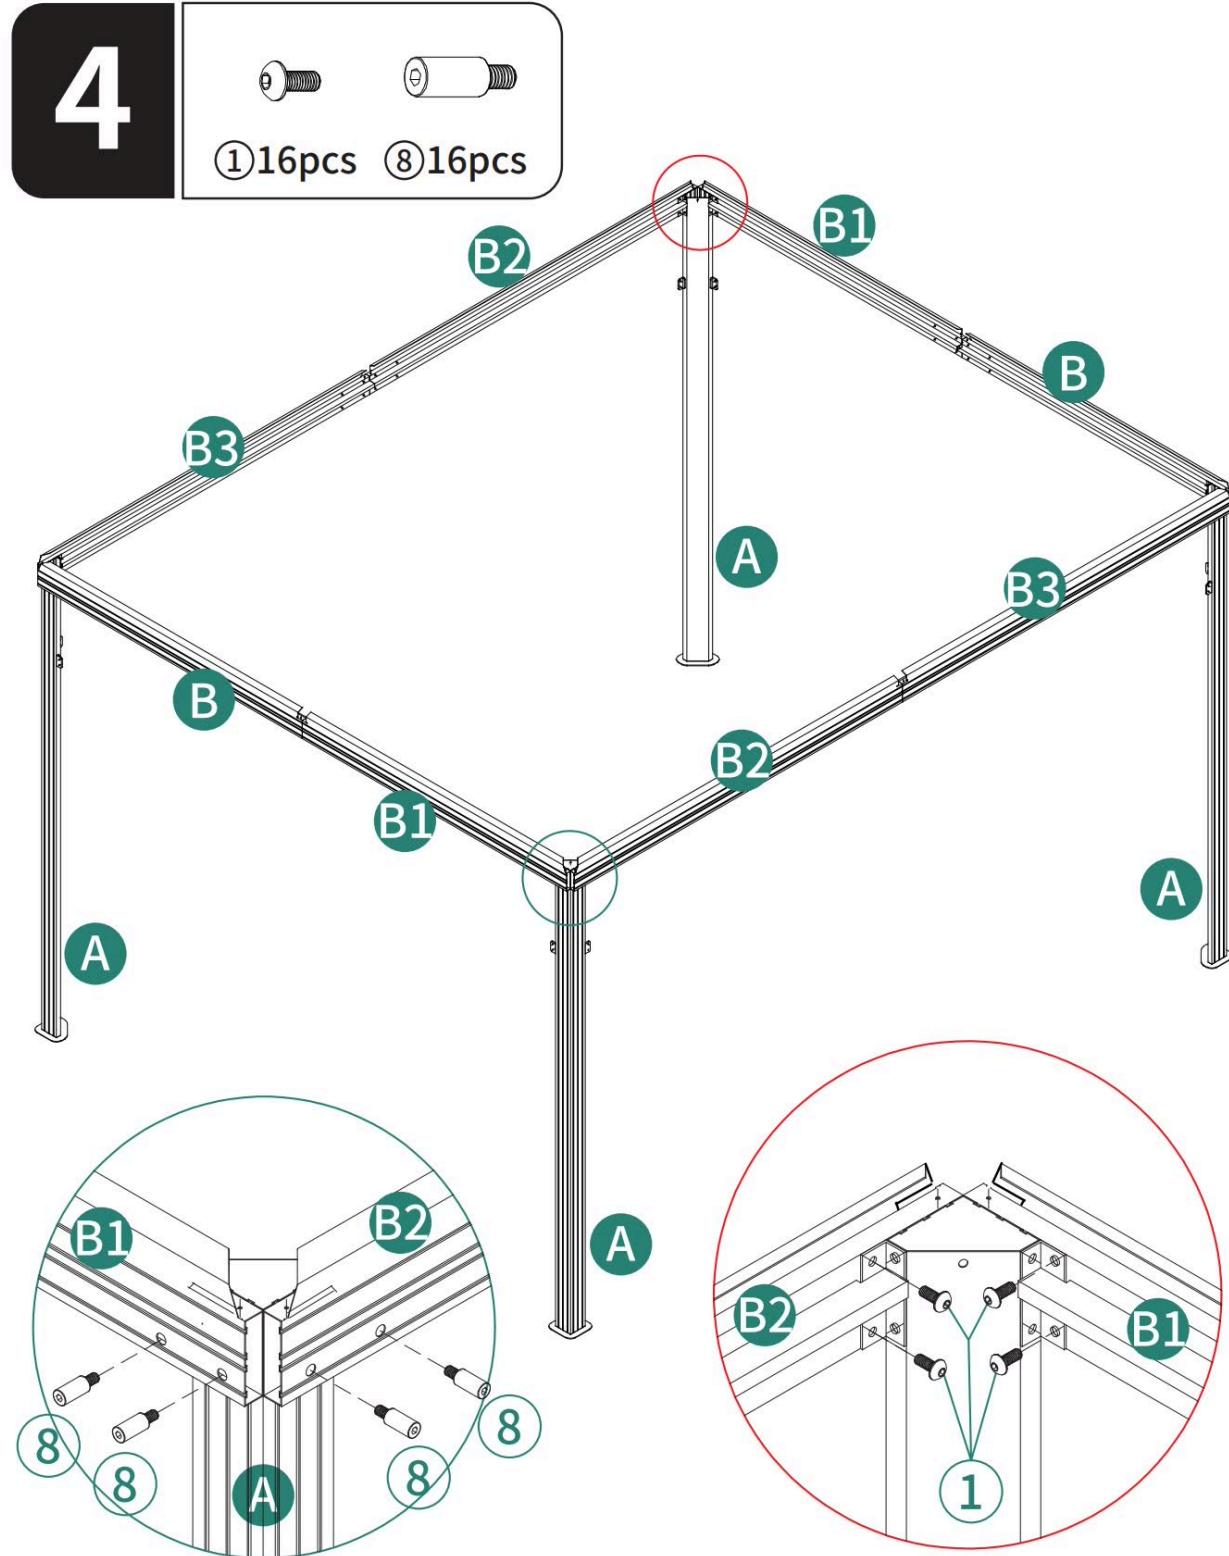



ASSEMBLY INSTRUCTIONS

5

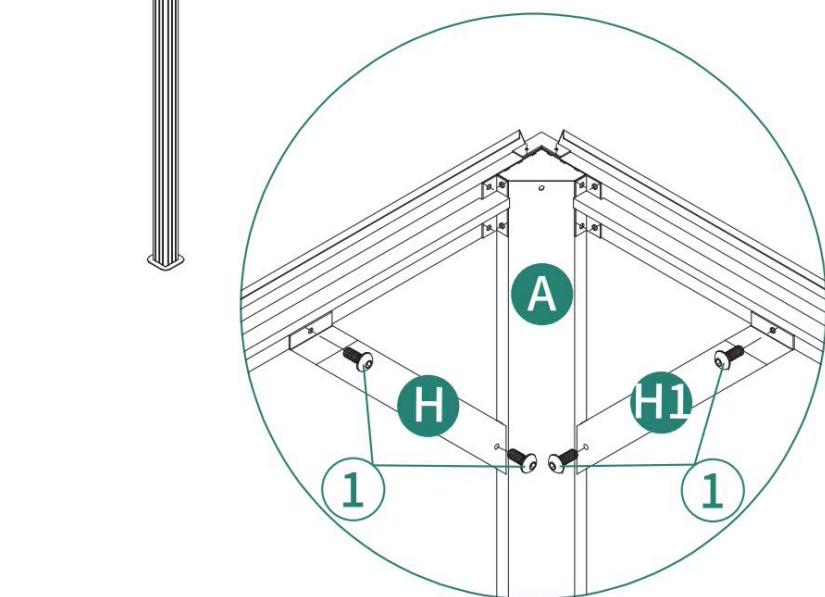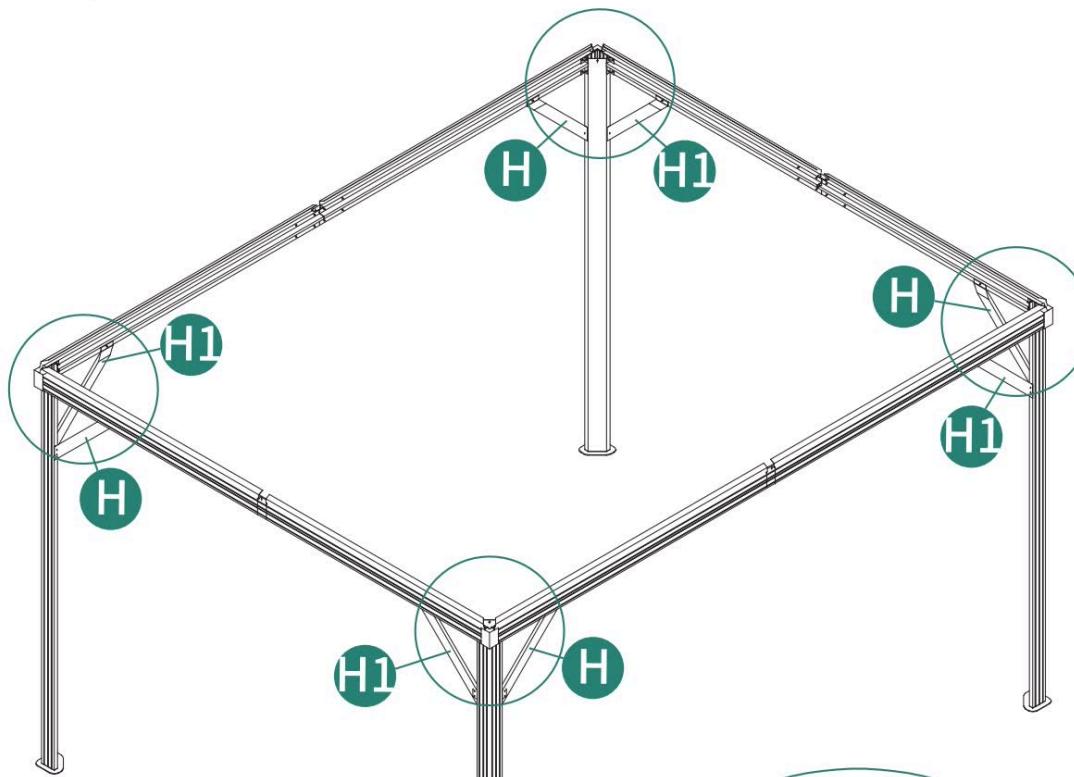



ASSEMBLY INSTRUCTIONS

6

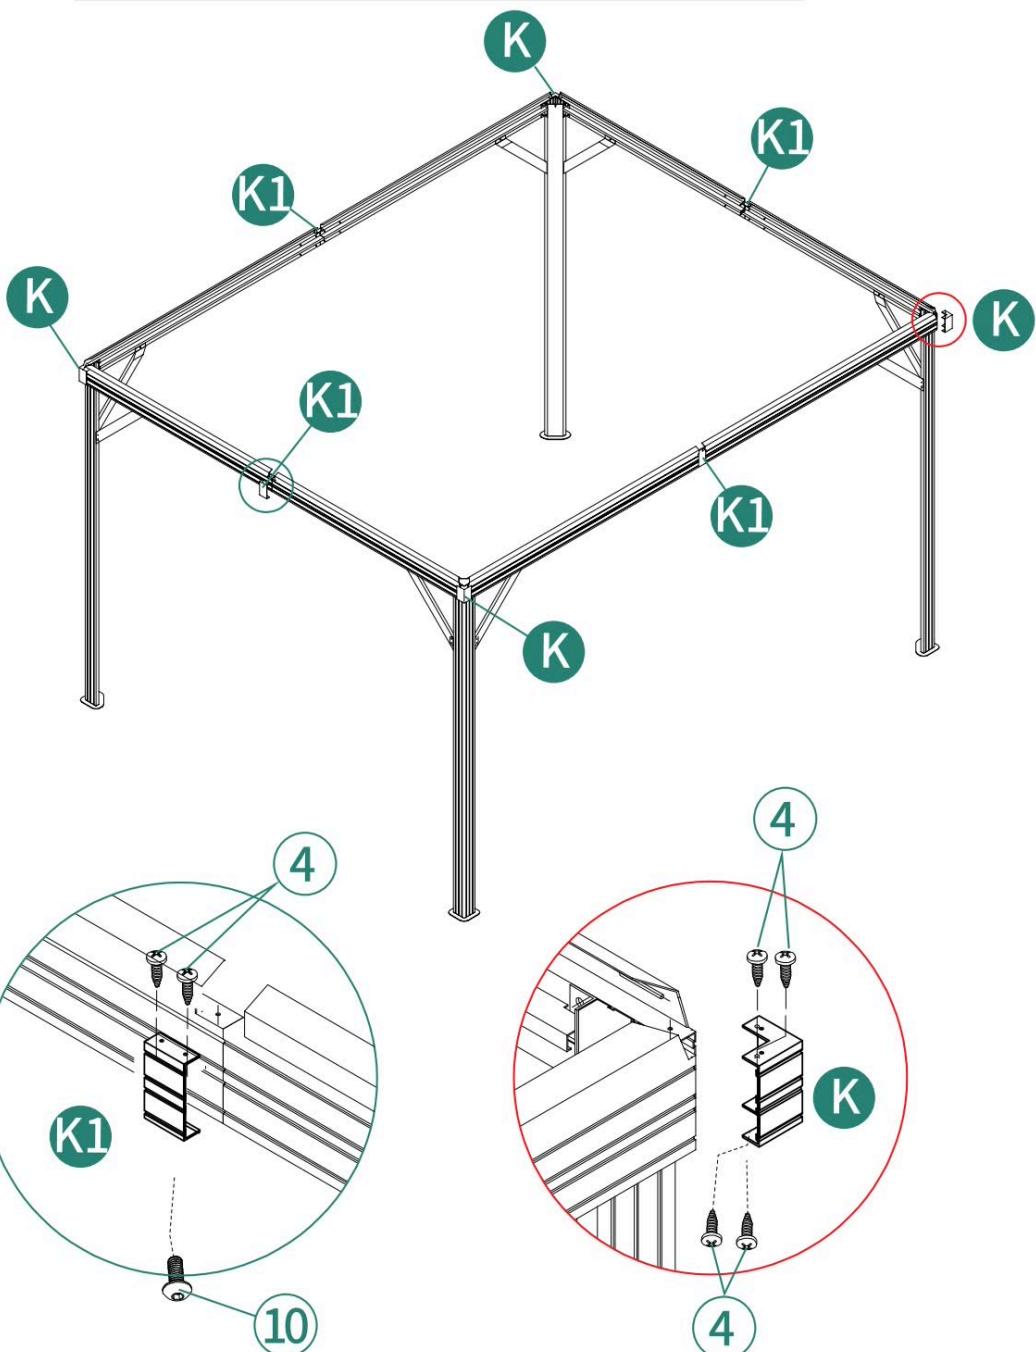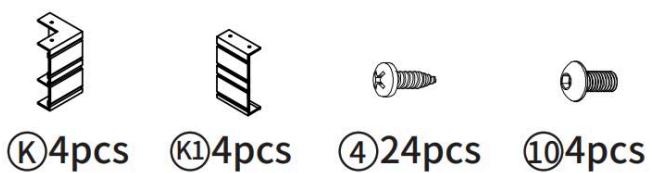



ASSEMBLY INSTRUCTIONS

7
X4

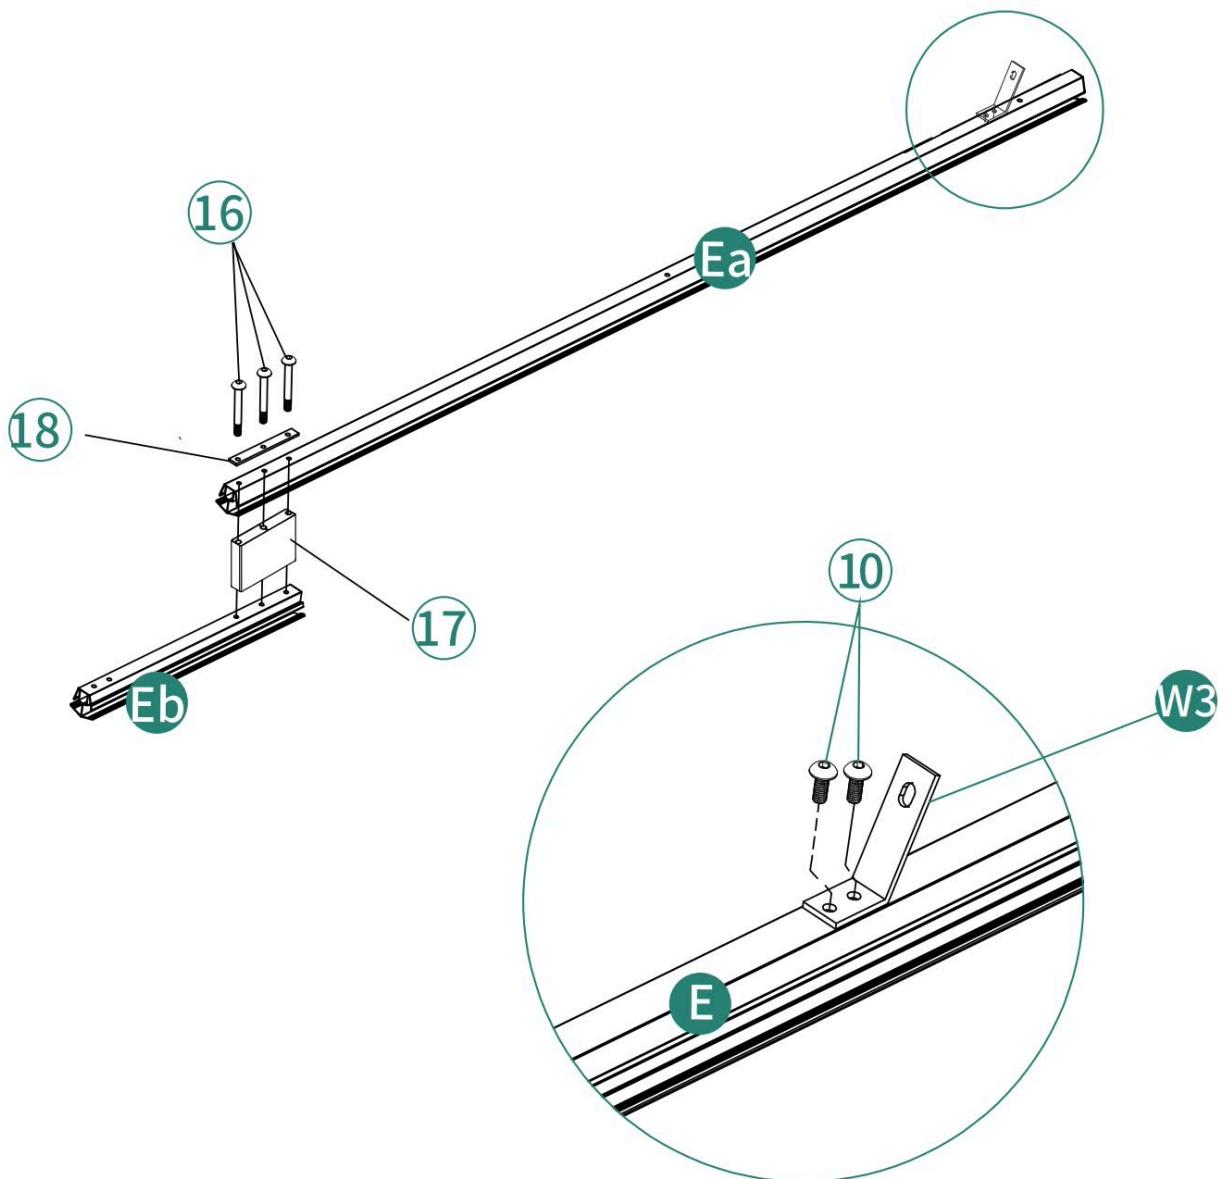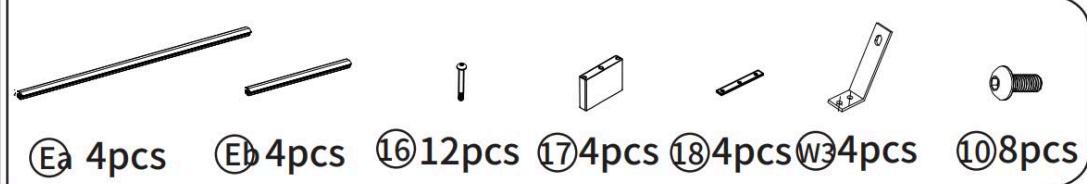



ASSEMBLY INSTRUCTIONS

8

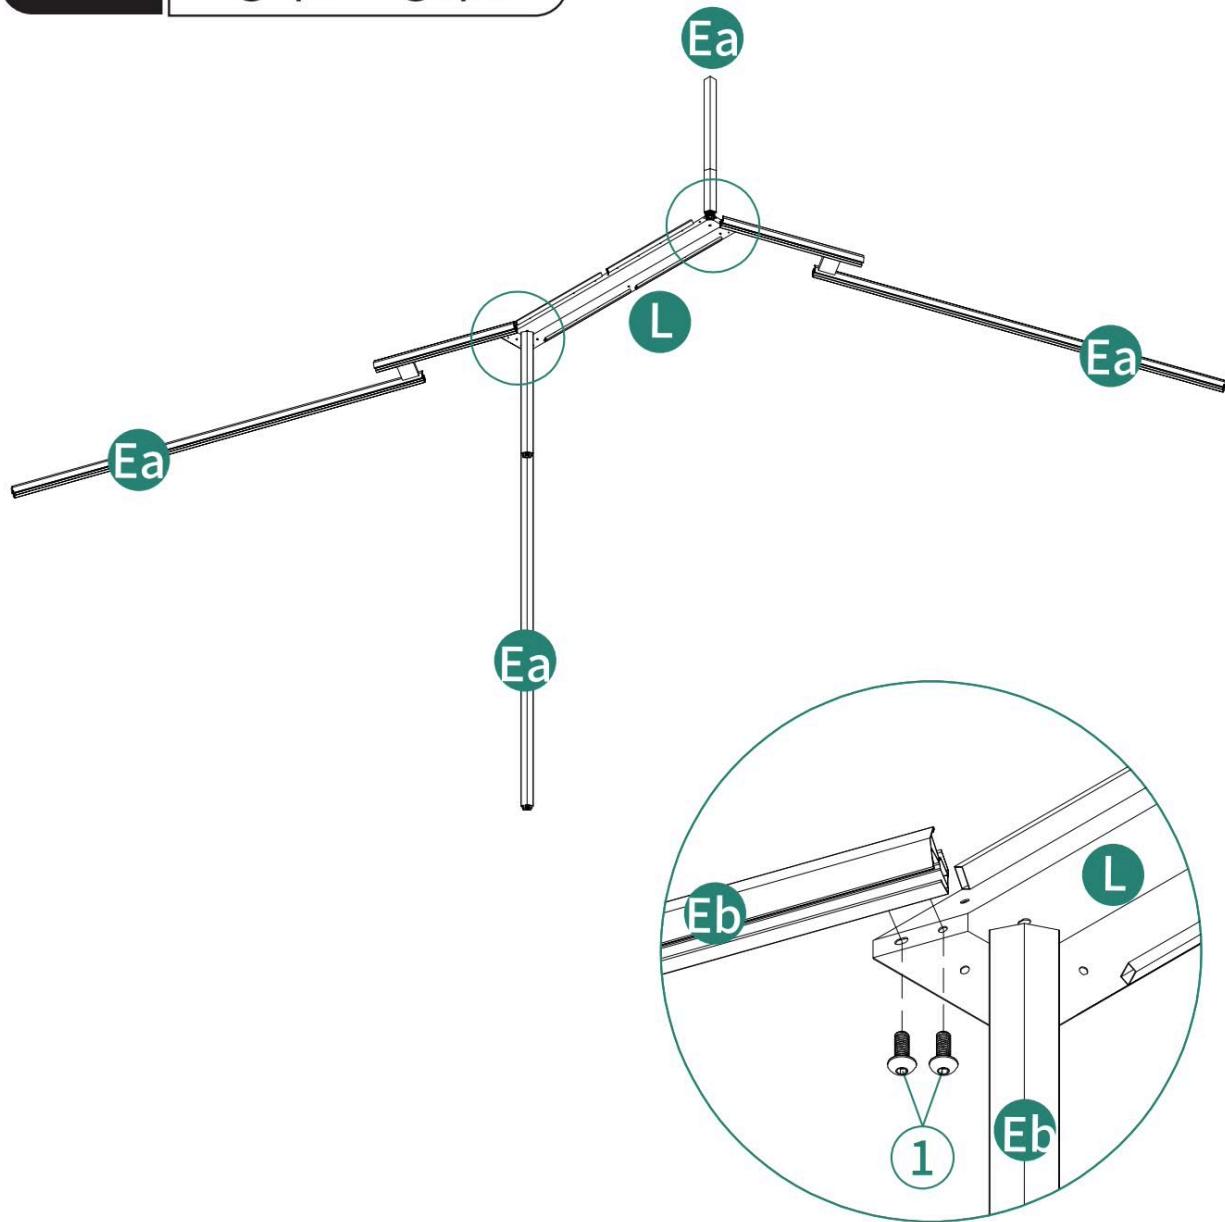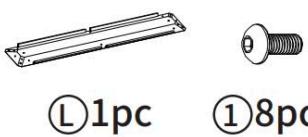



ASSEMBLY INSTRUCTIONS

9
① 4pcs

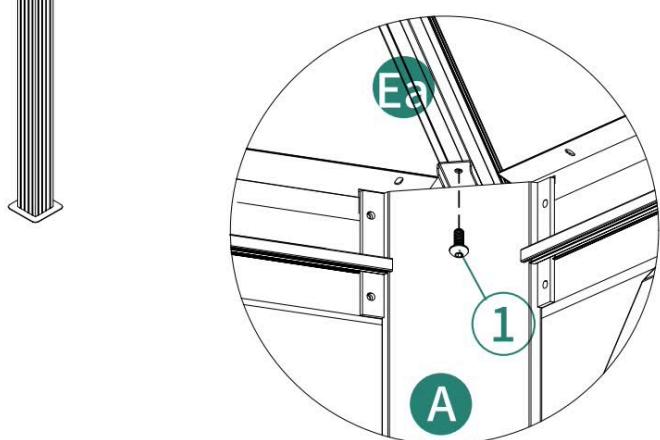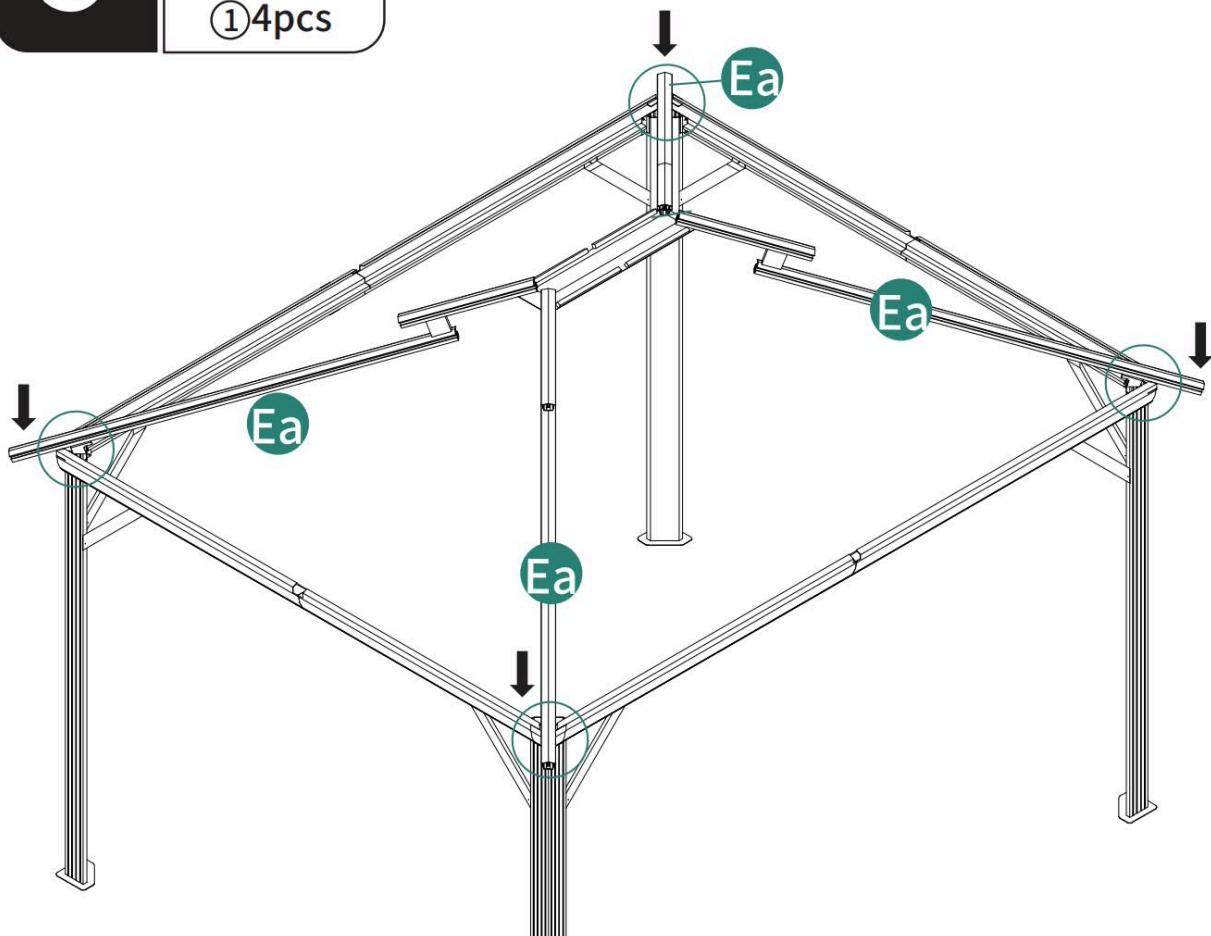

ASSEMBLY INSTRUCTIONS

10
X4


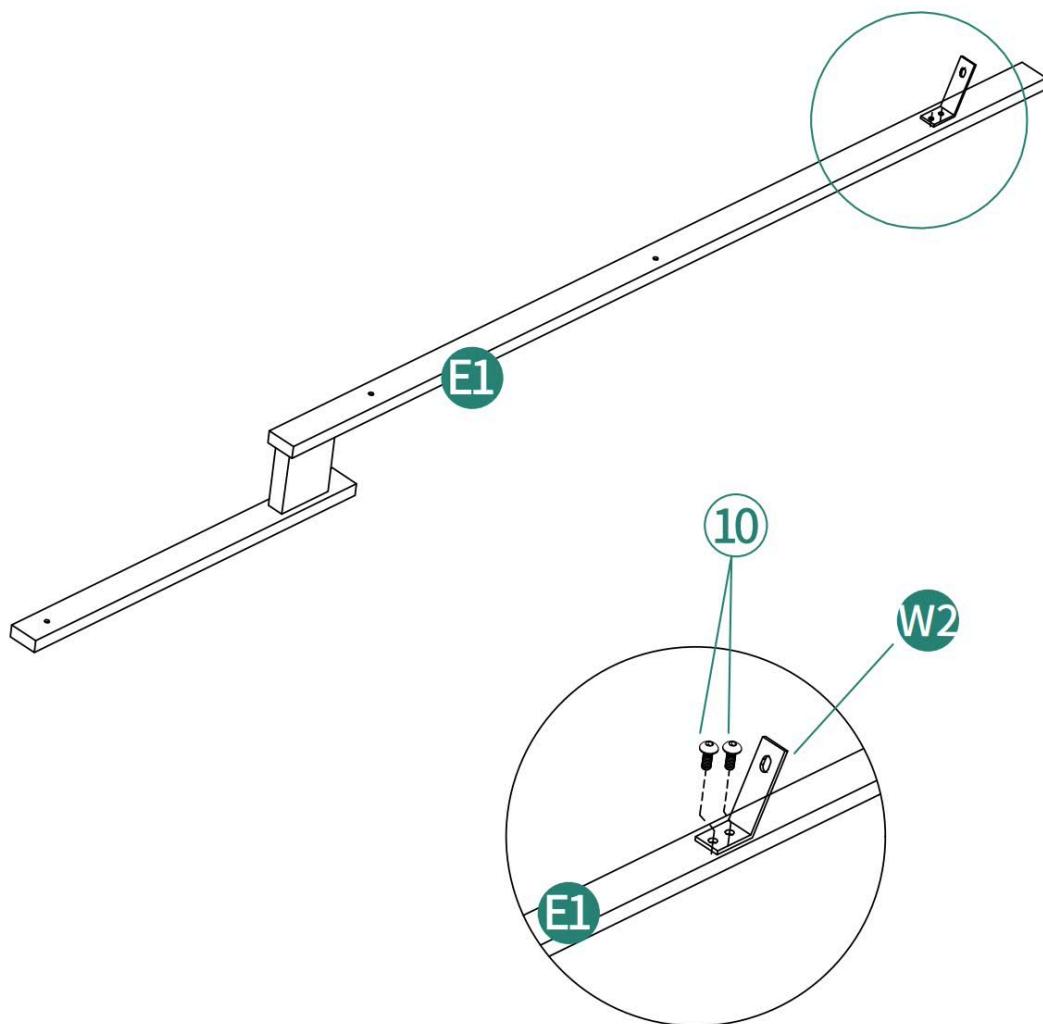
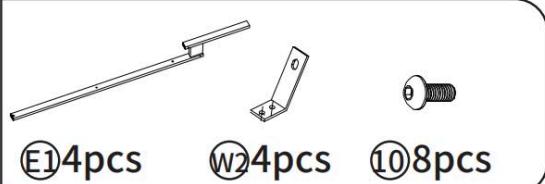


ASSEMBLY INSTRUCTIONS

11






① 8pcs

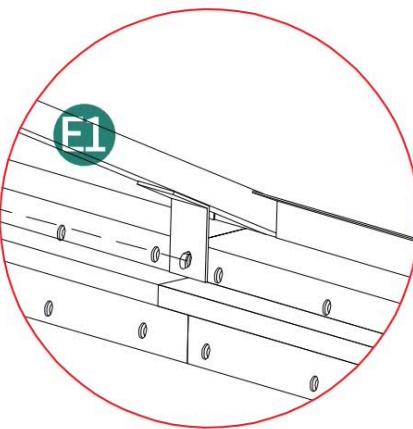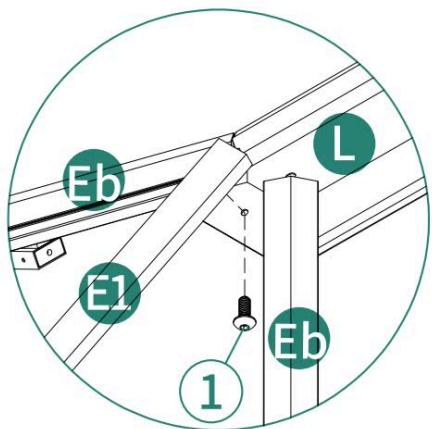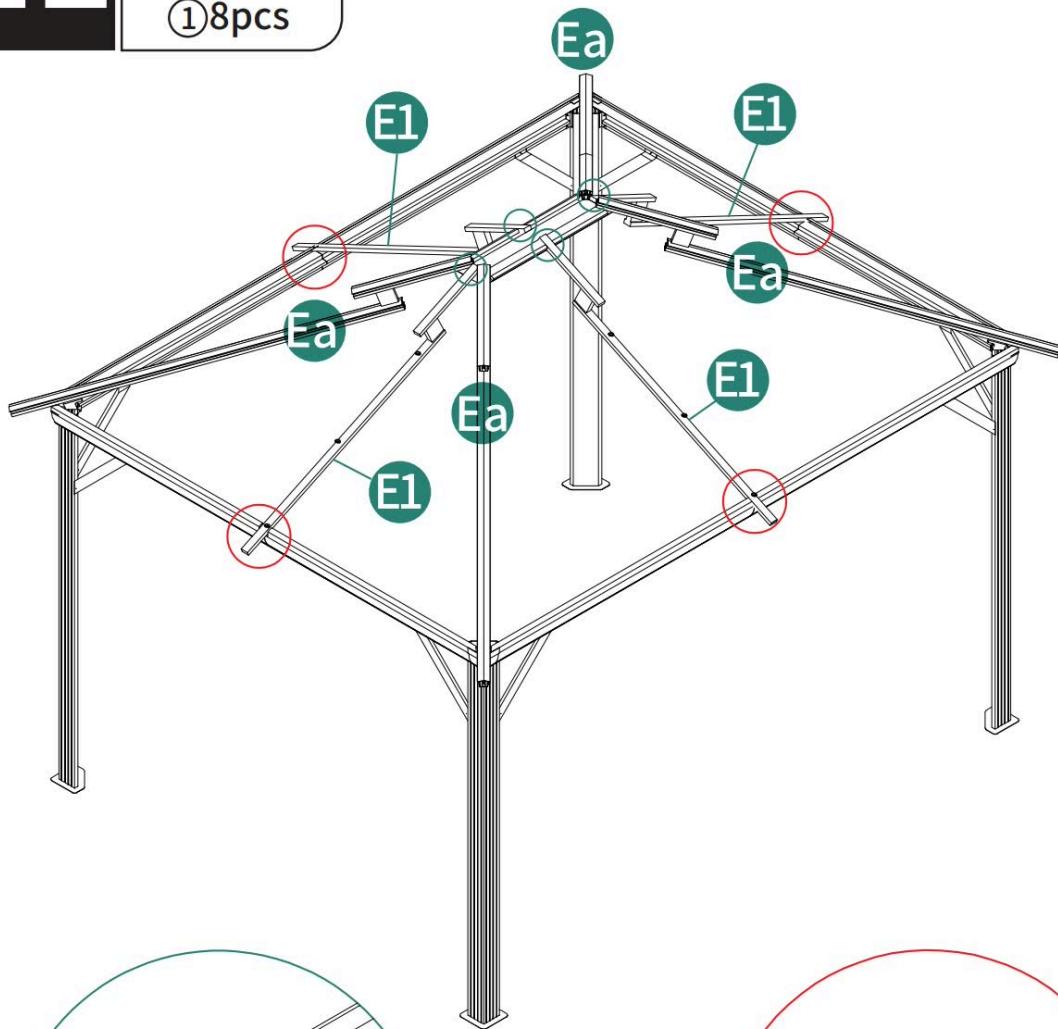



ASSEMBLY INSTRUCTIONS

12

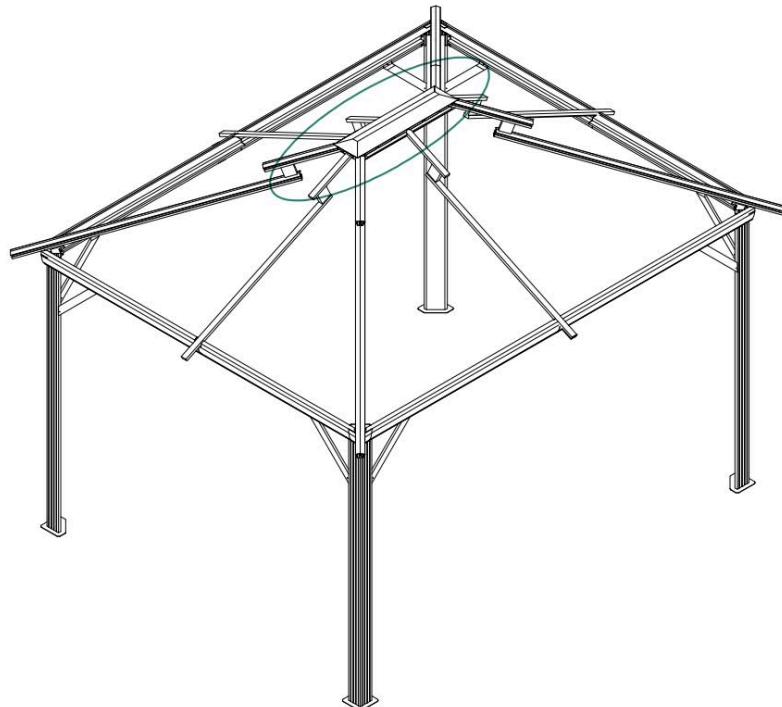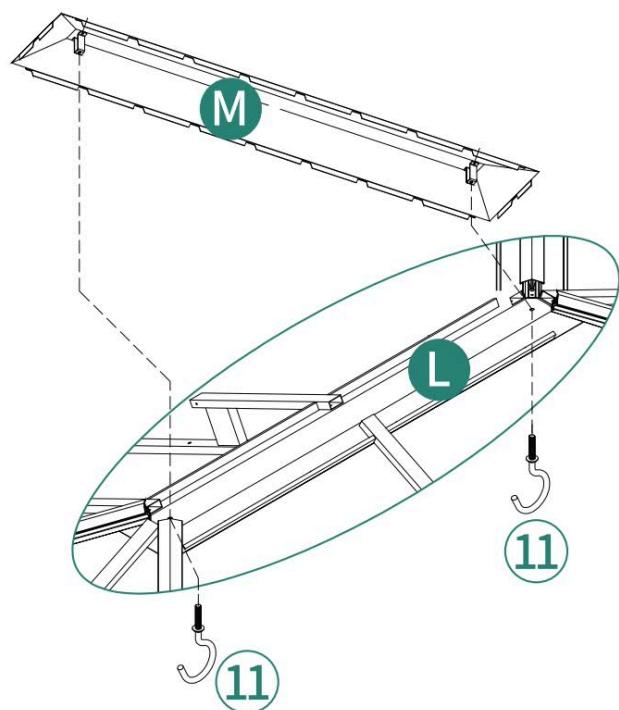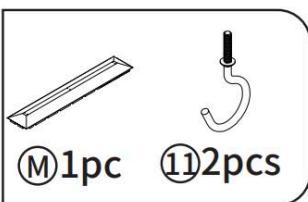


ASSEMBLY INSTRUCTIONS

13

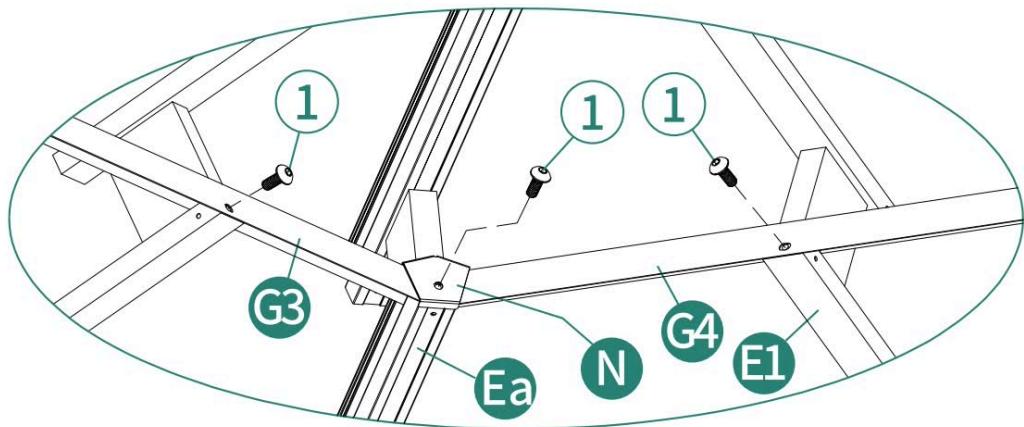
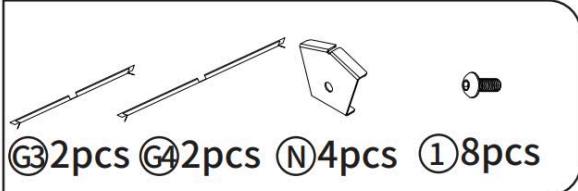


Do not tighten the screw 1 before completing step 19.
It's view from the bottom inside gazebo.

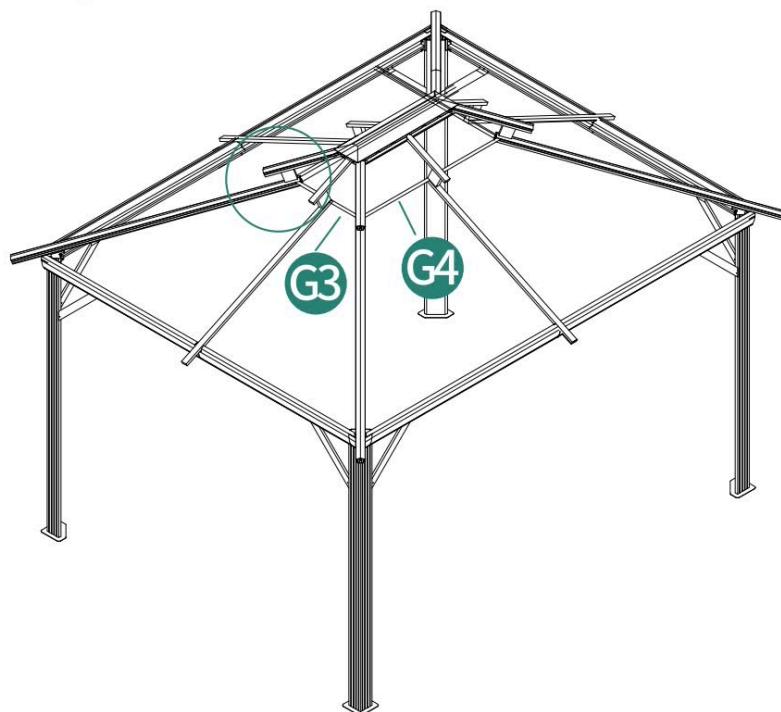


ASSEMBLY INSTRUCTIONS

14
X2

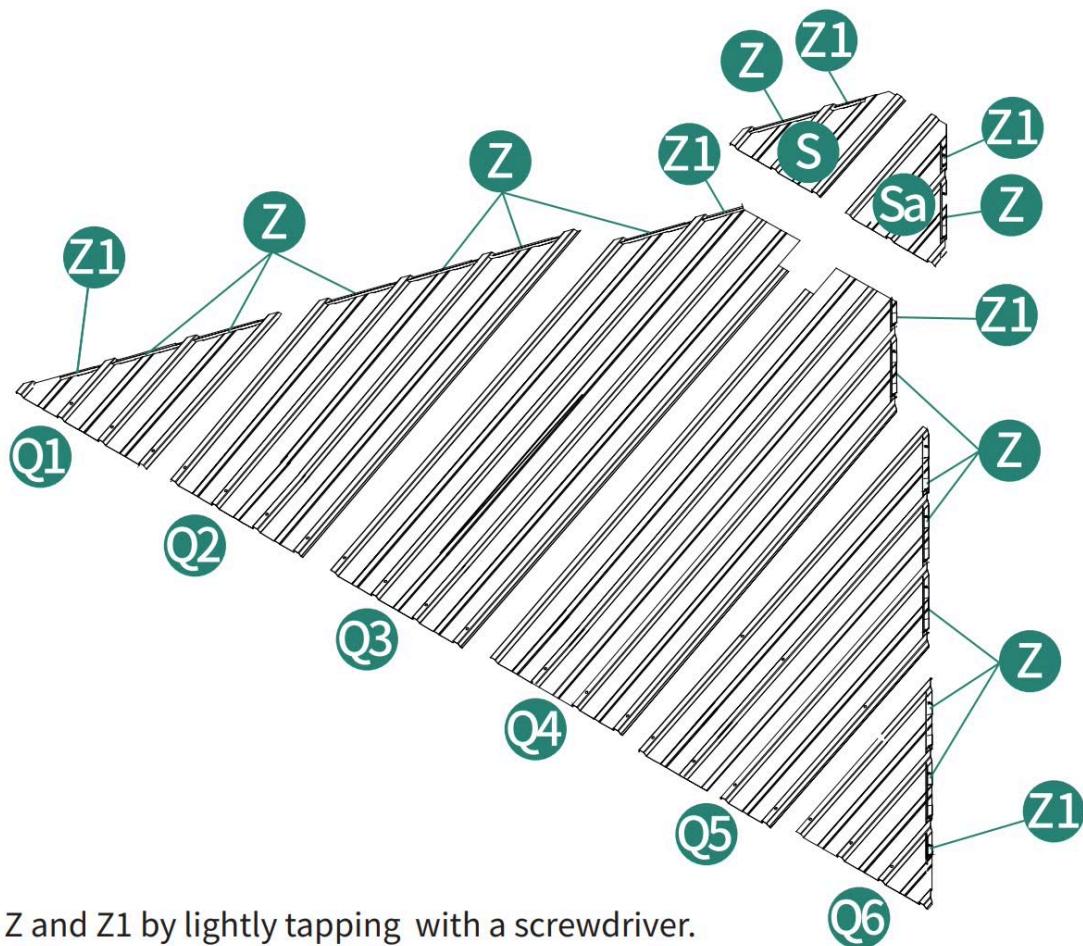
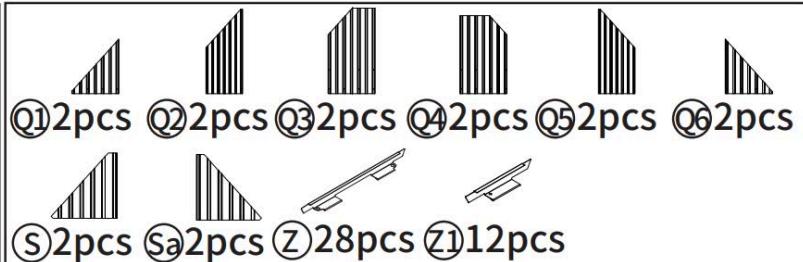


Attach Z and Z1 by lightly tapping with a screwdriver.

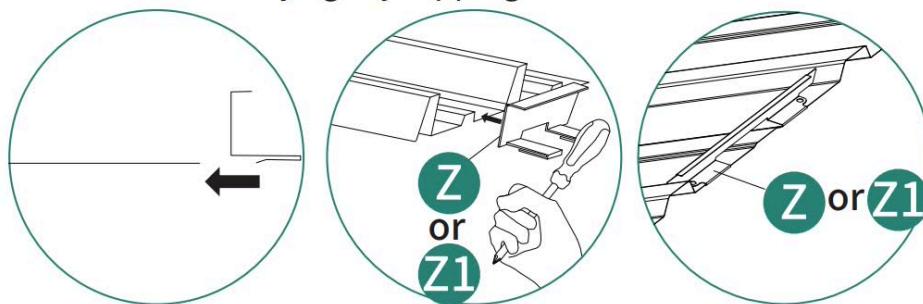


ASSEMBLY INSTRUCTIONS

15
X2

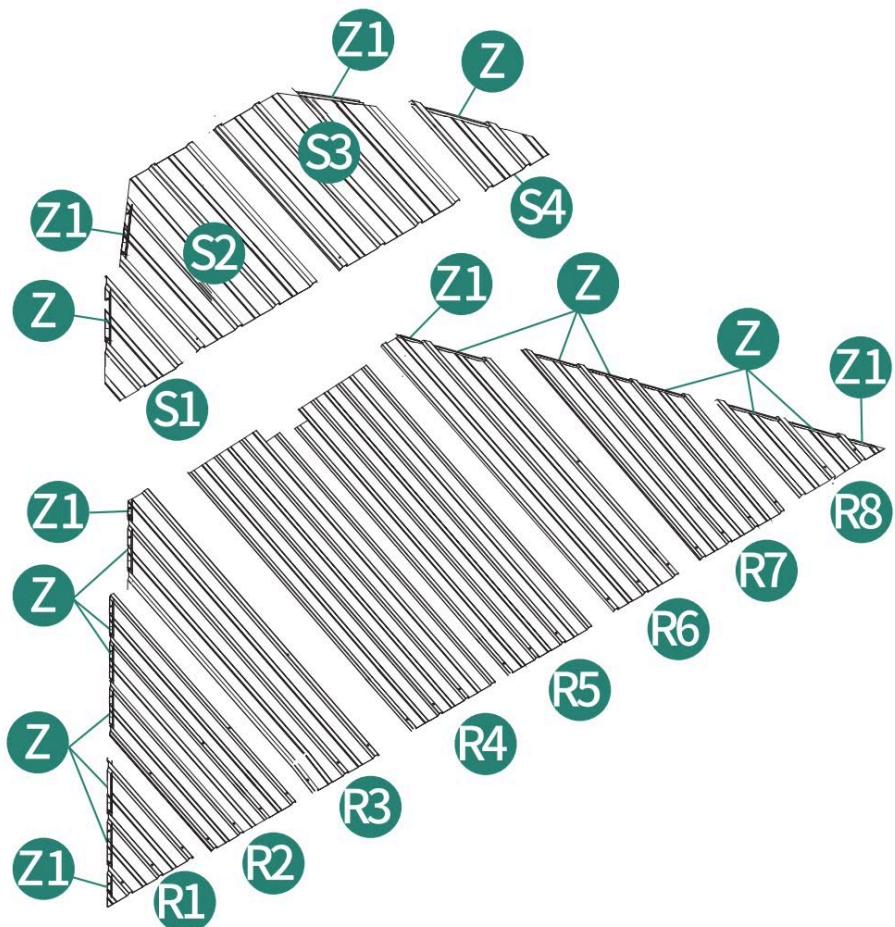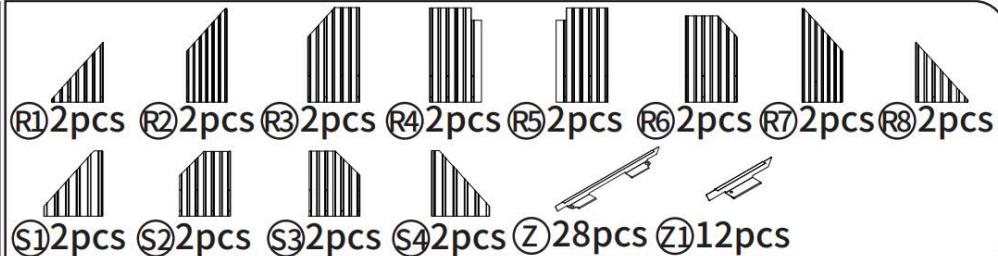


Attach Z and Z1 by lightly tapping with a screwdriver.

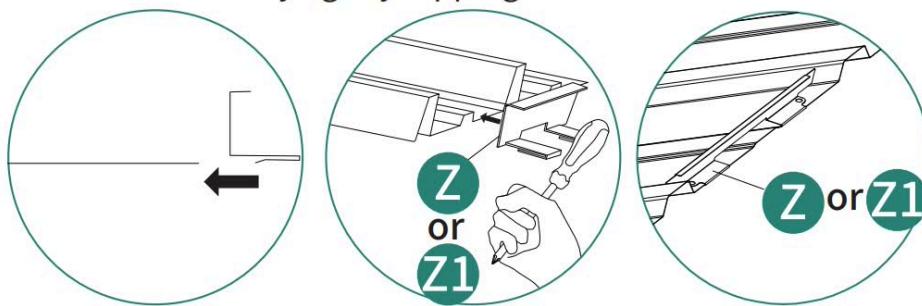




ASSEMBLY INSTRUCTIONS

16

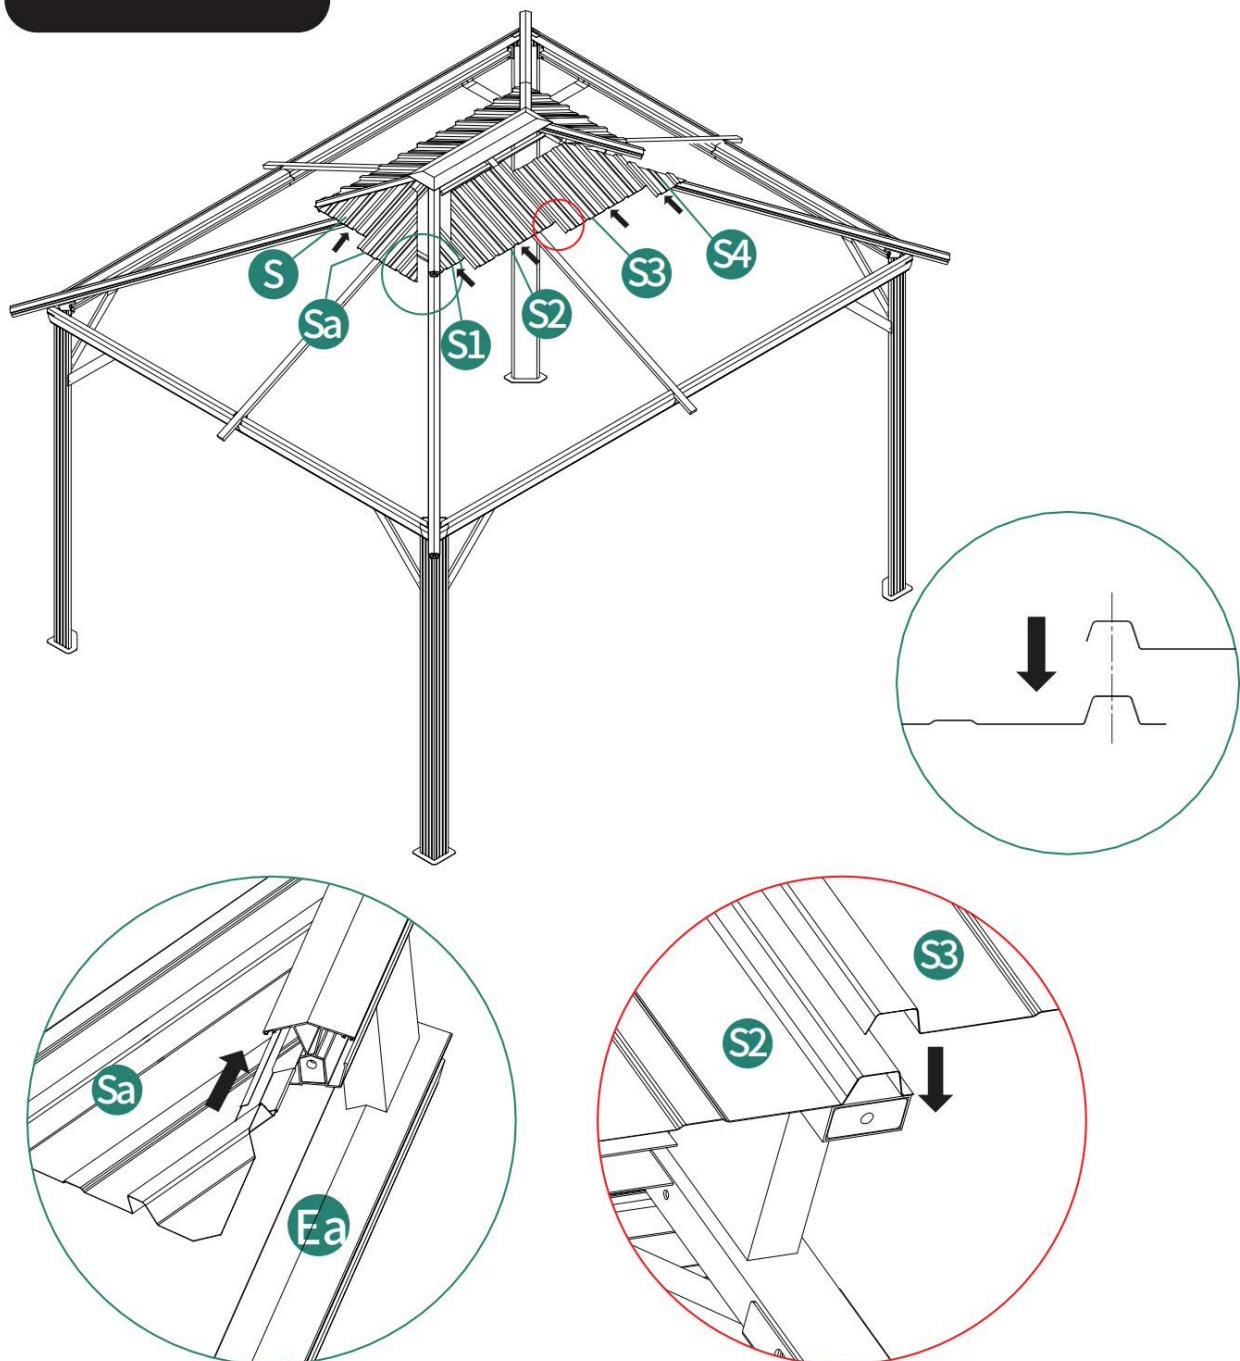



ASSEMBLY INSTRUCTIONS

17

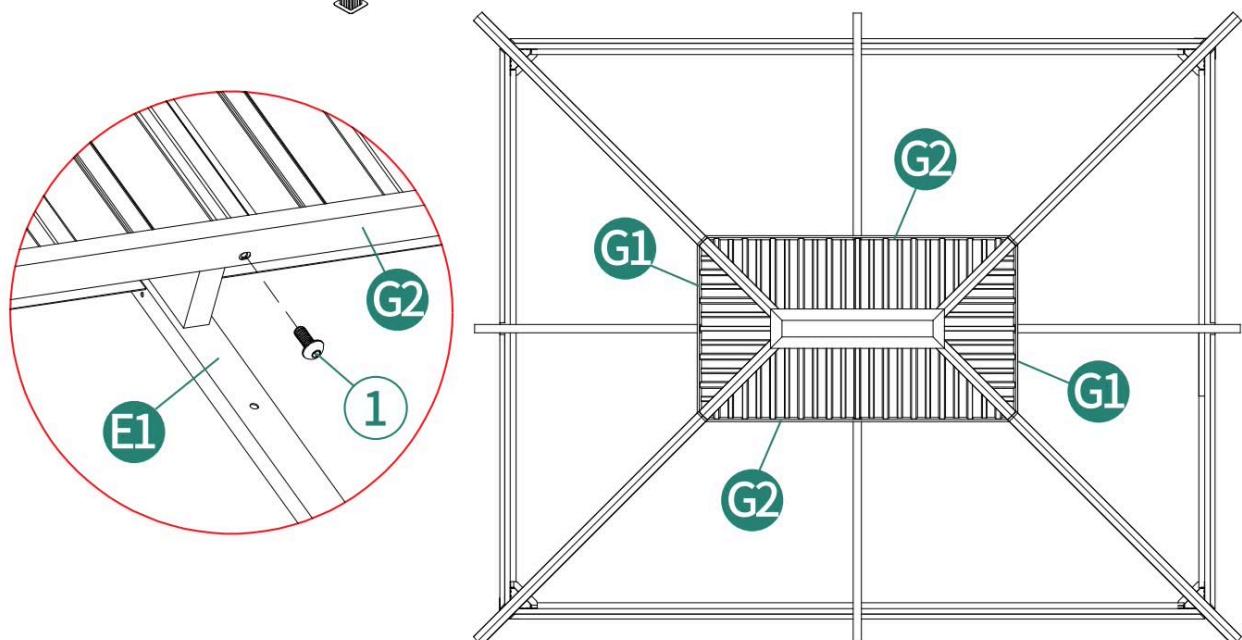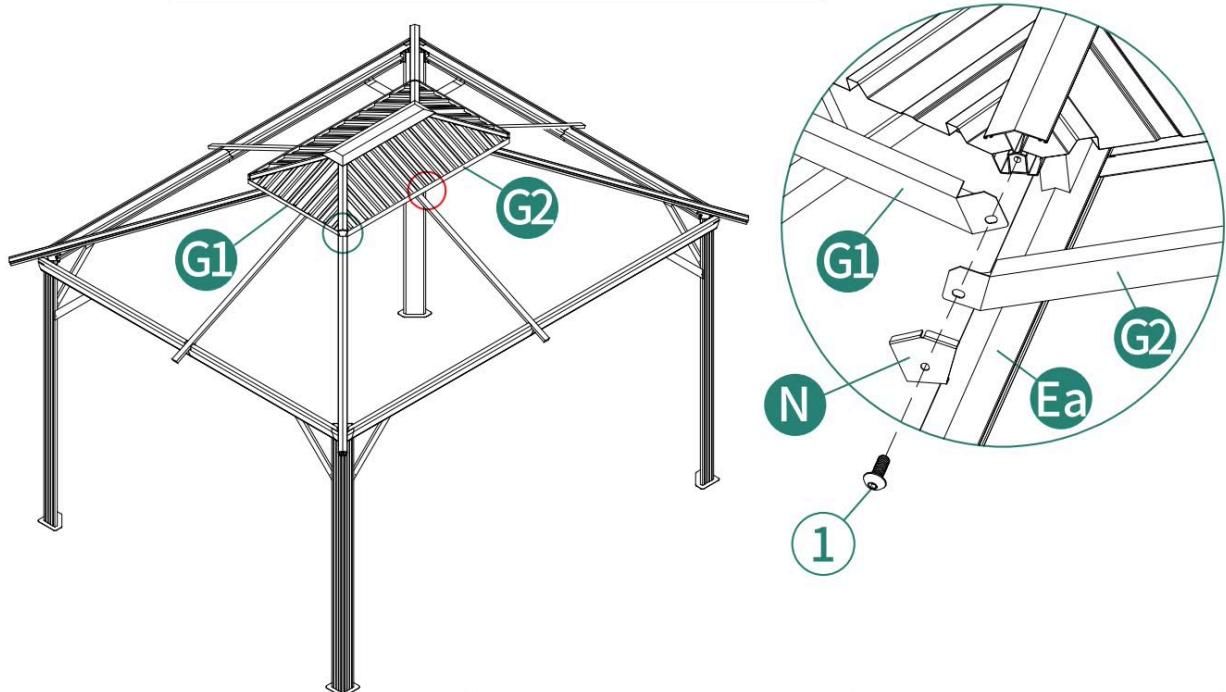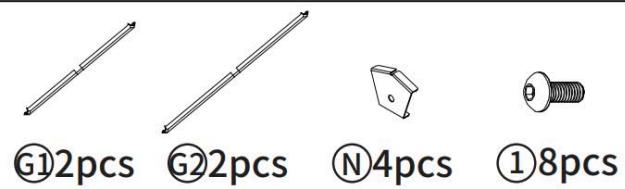

ASSEMBLY INSTRUCTIONS

18

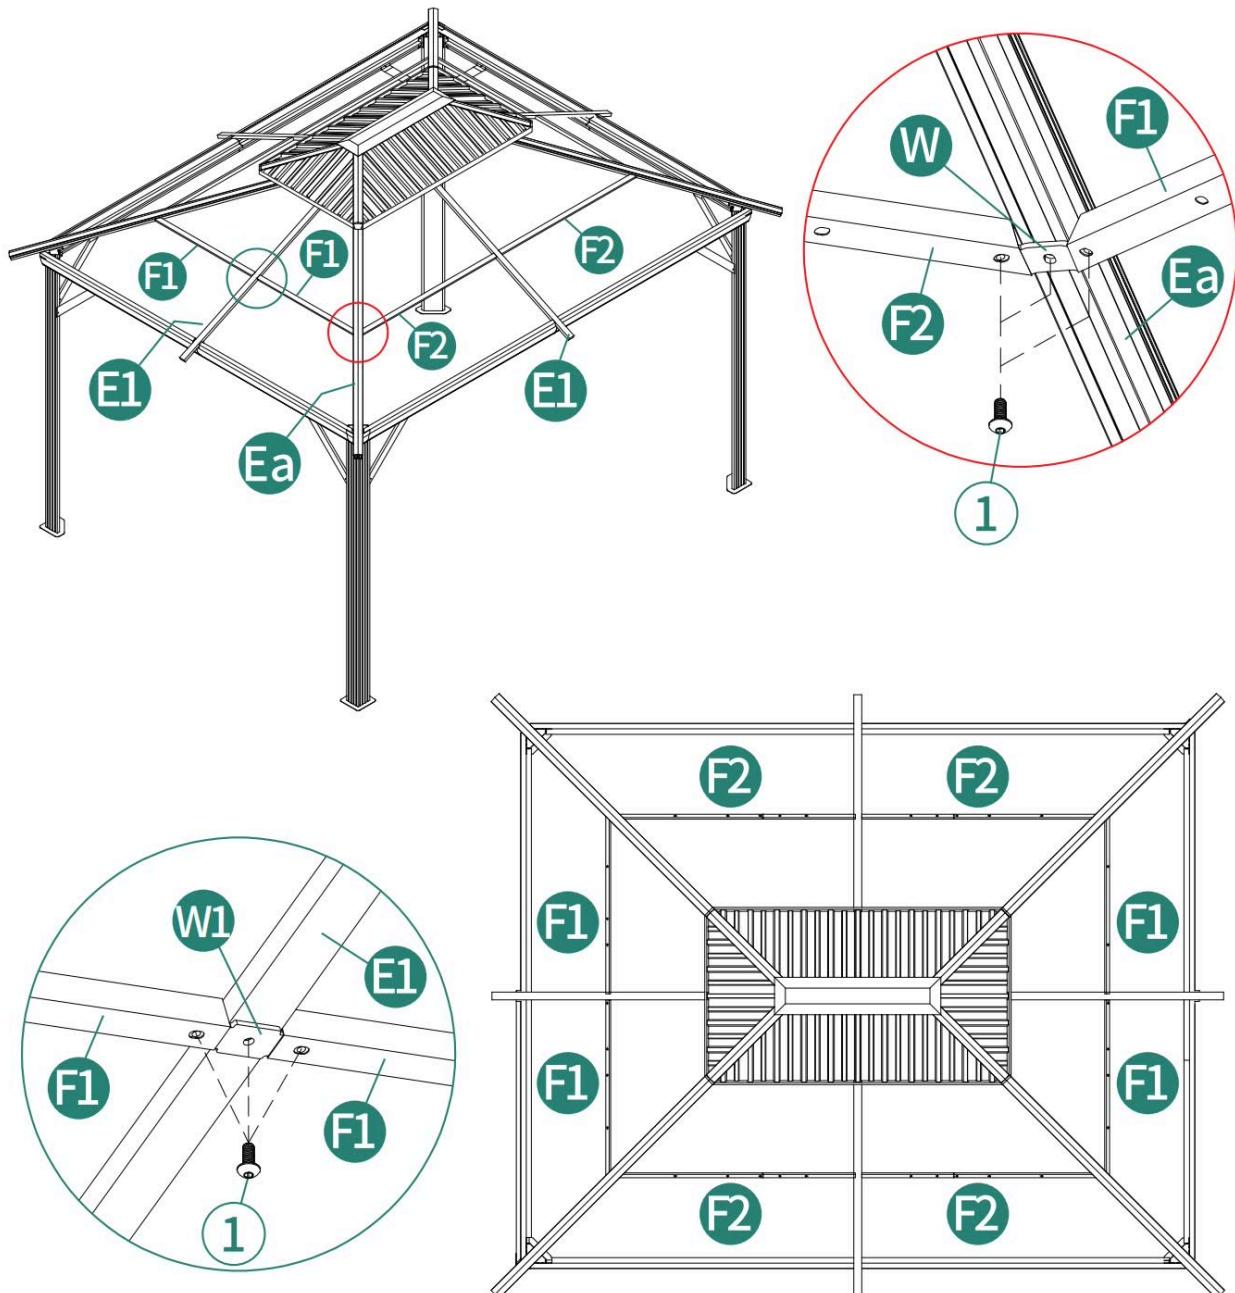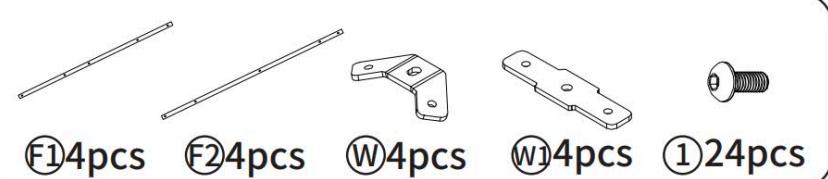


ASSEMBLY INSTRUCTIONS


19



V1 2pcs




V2 2pcs




V3 2pcs



5 8pcs

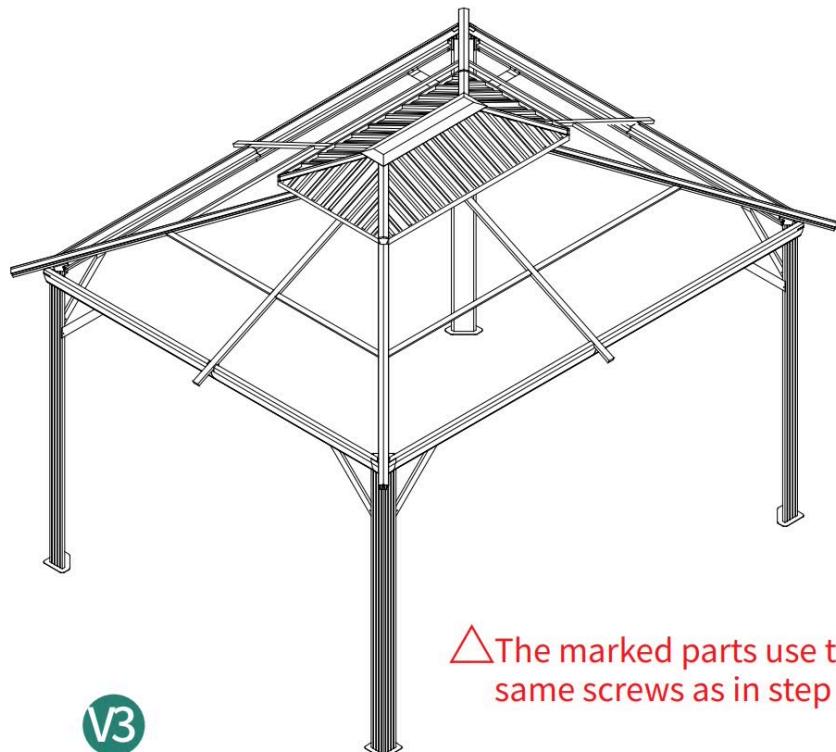


△The marked parts use the same screws as in step 13.

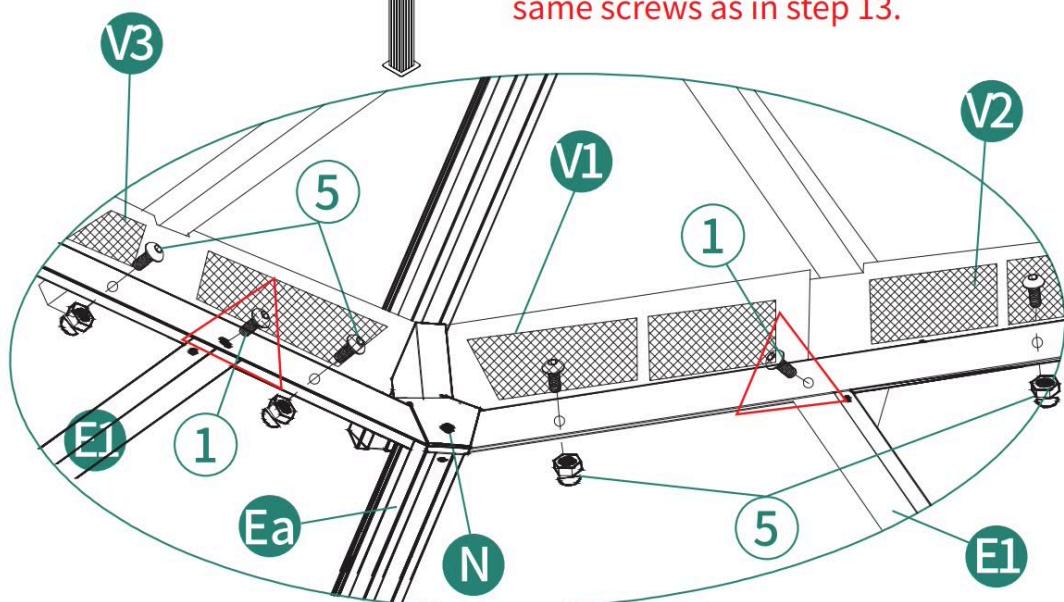

It's view from the bottom inside gazebo.


ASSEMBLY INSTRUCTIONS

20

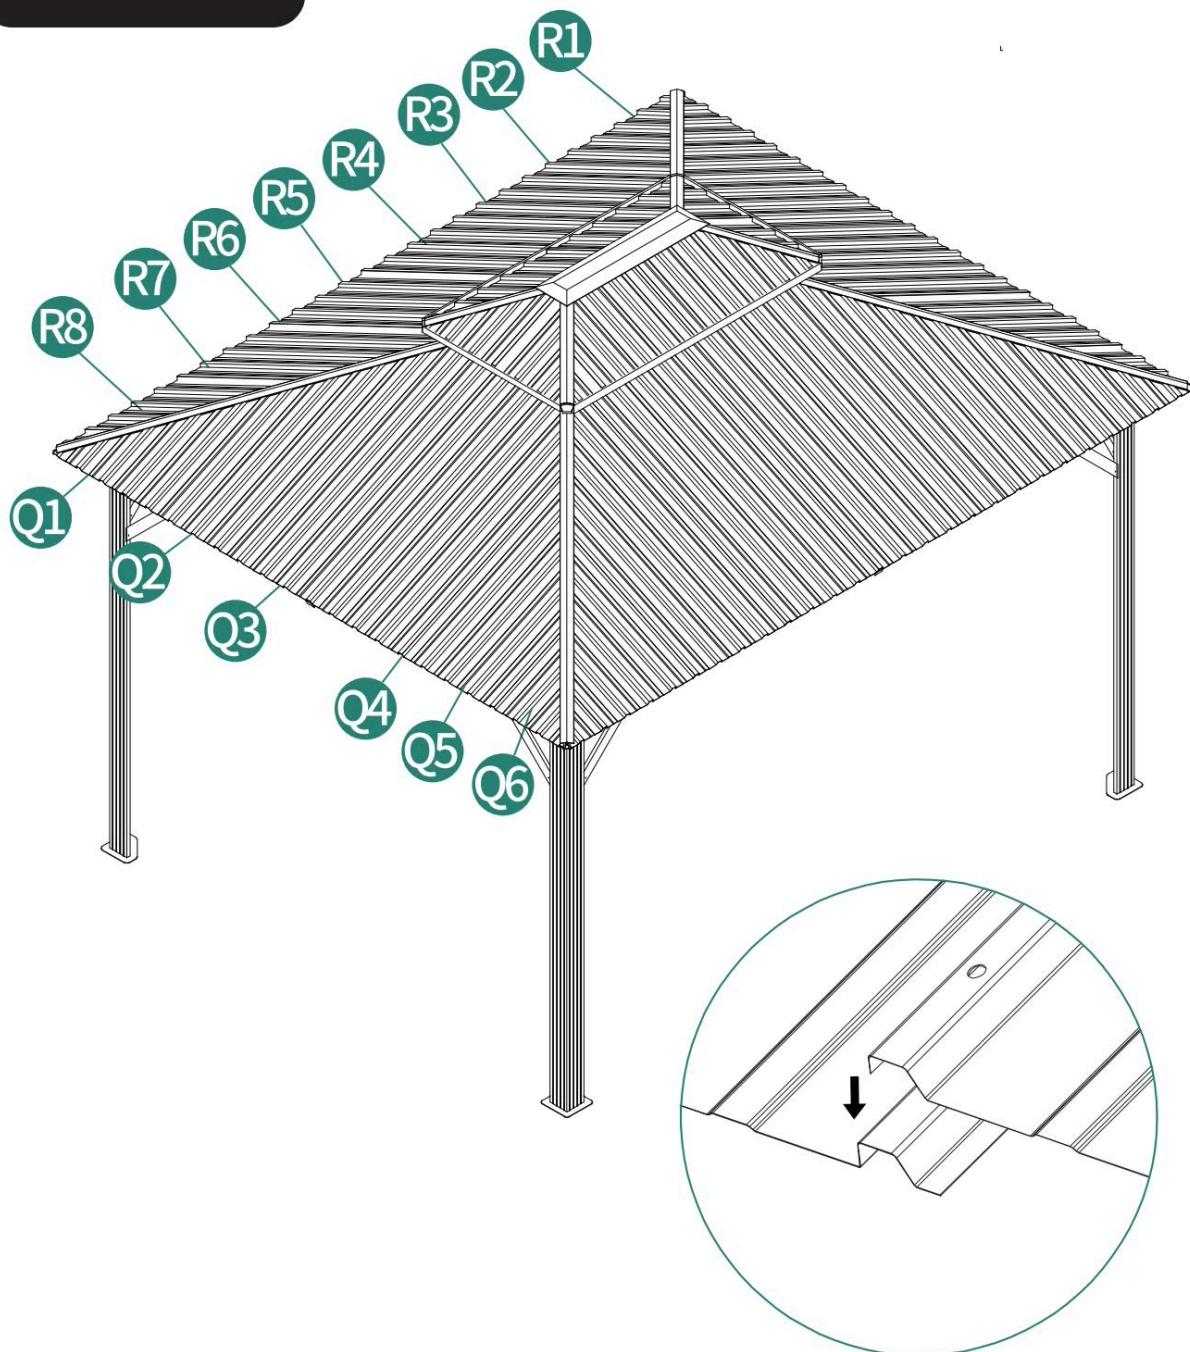


ASSEMBLY INSTRUCTIONS

21

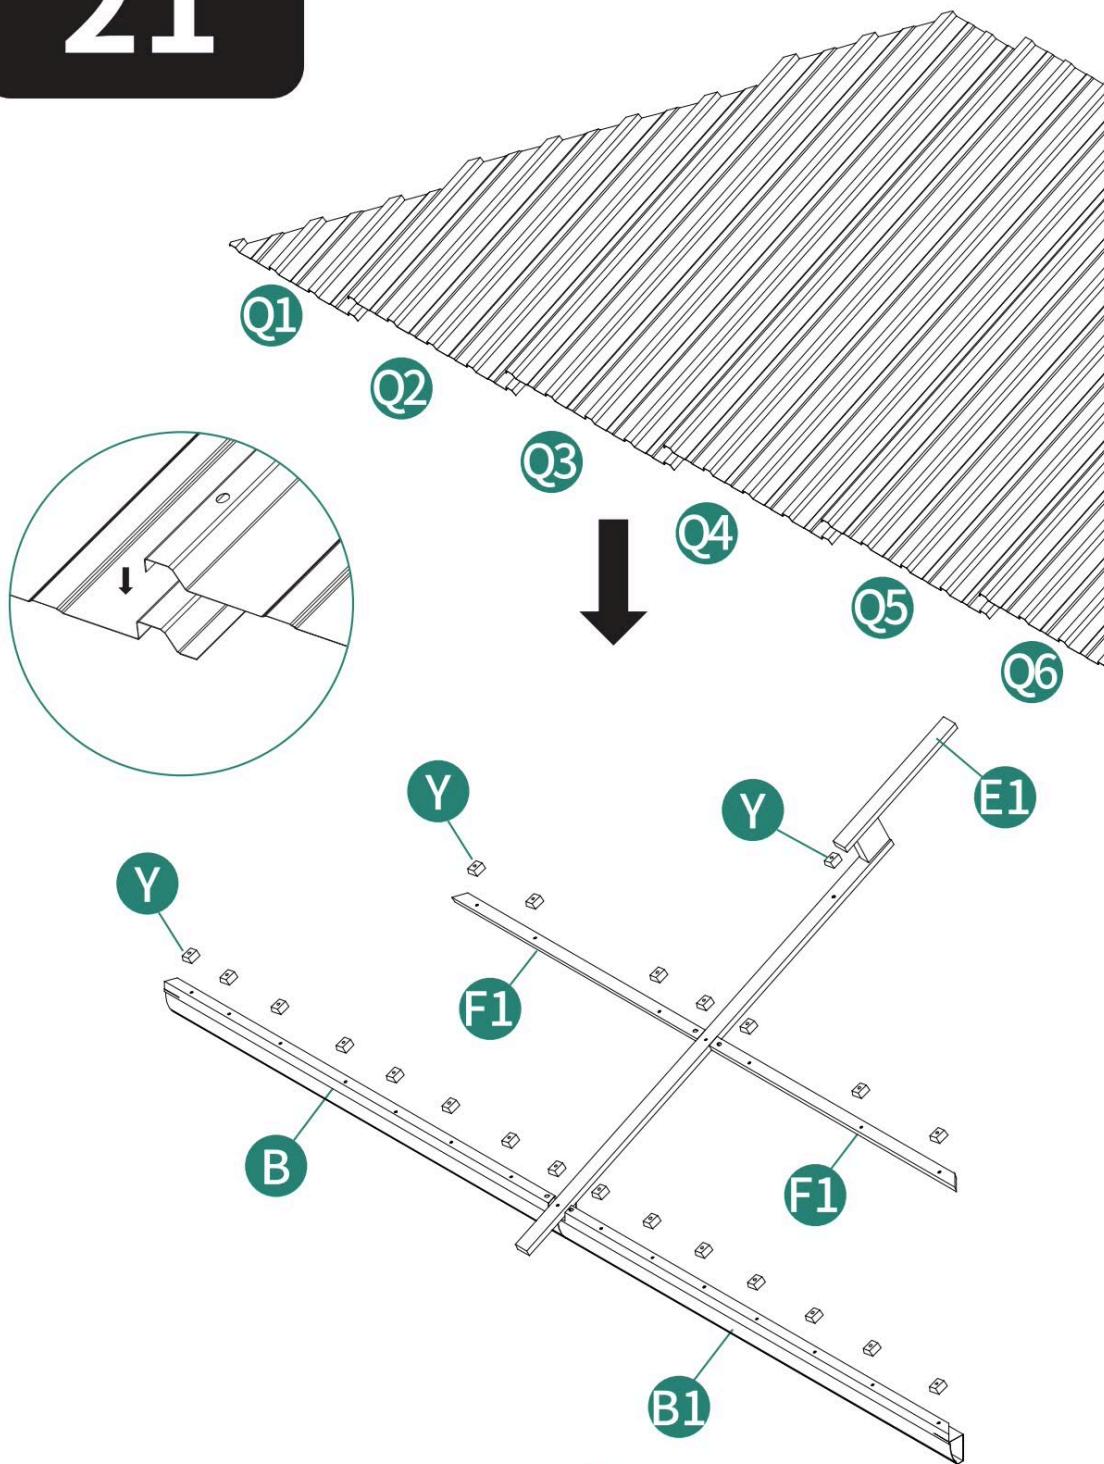

ASSEMBLY INSTRUCTIONS


22

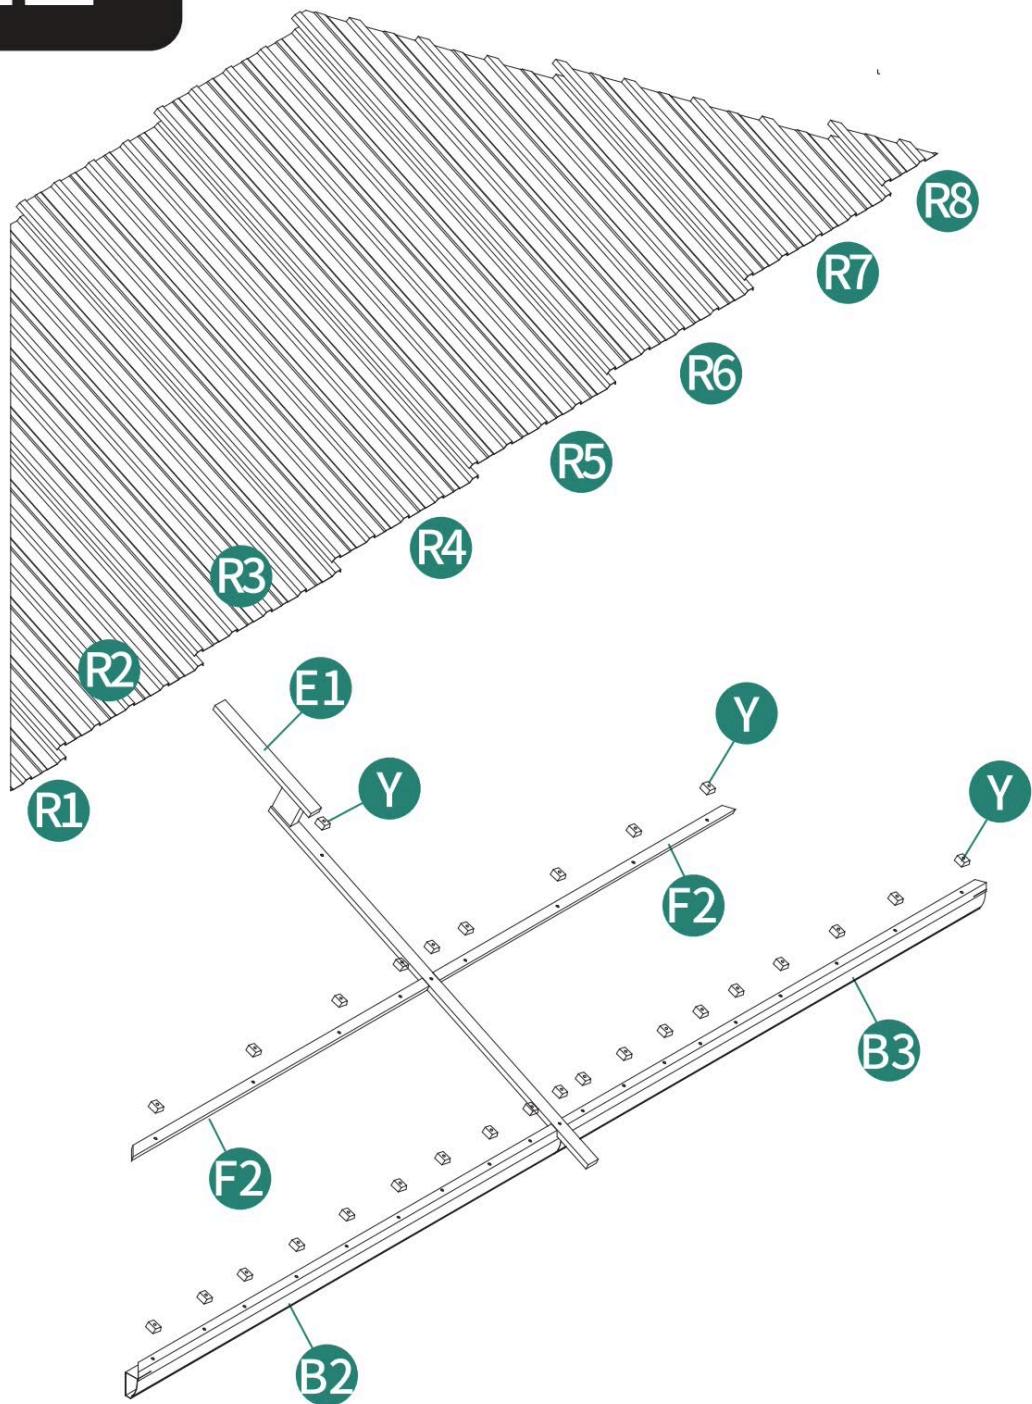

ASSEMBLY INSTRUCTIONS


23

① 104pcs ② 64pcs ③ 8pcs ⑥ 4pcs ⑦ 28pcs

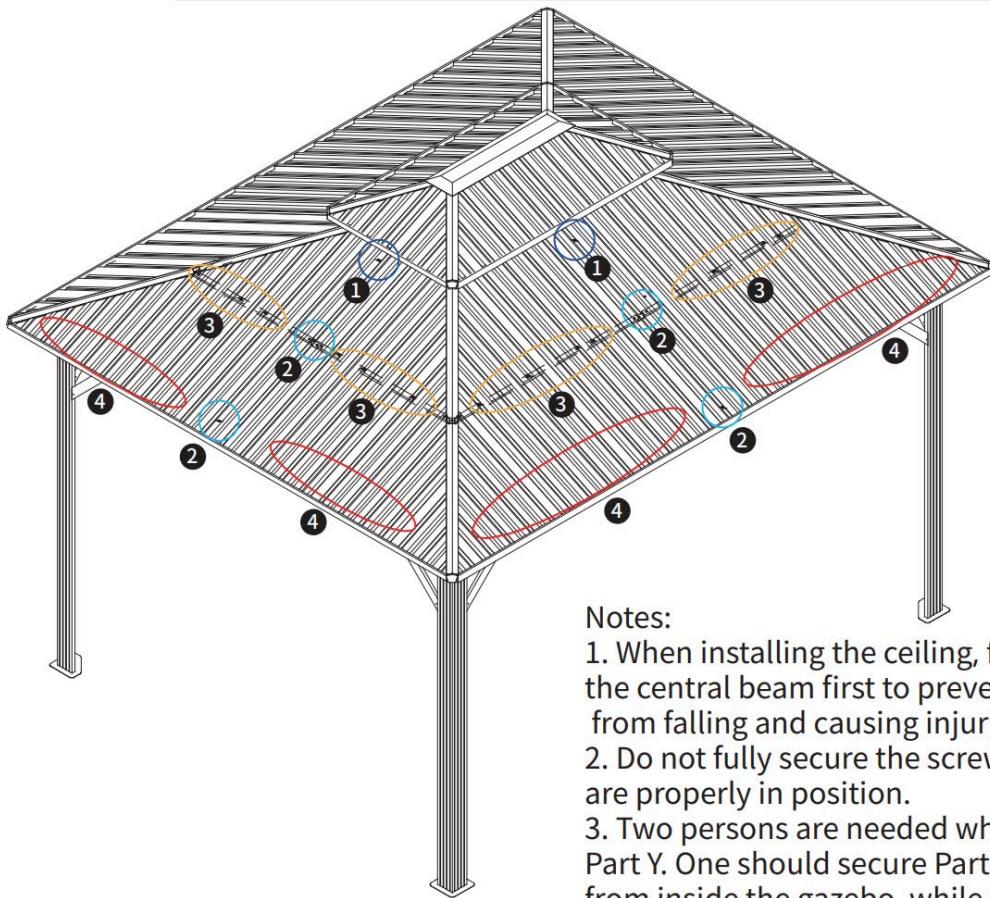



Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

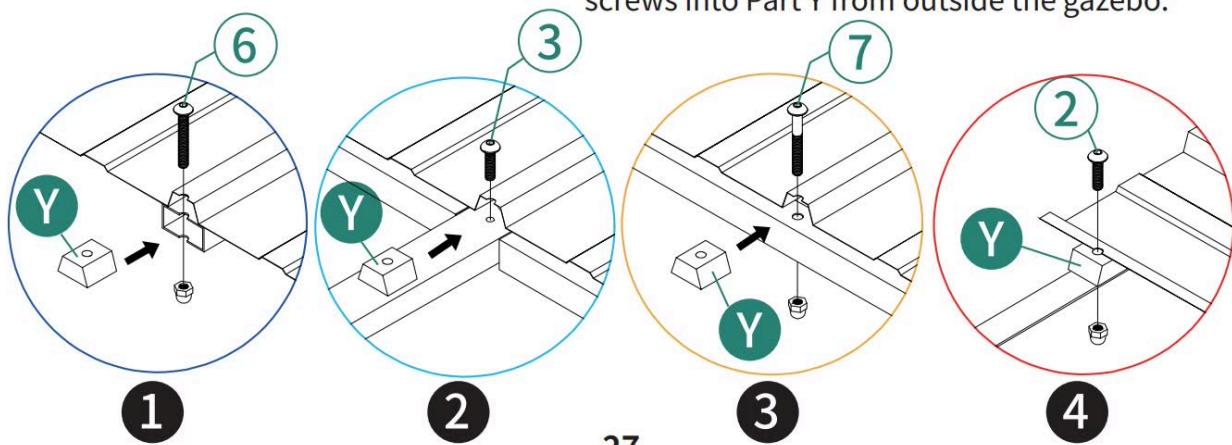


ASSEMBLY INSTRUCTIONS

24



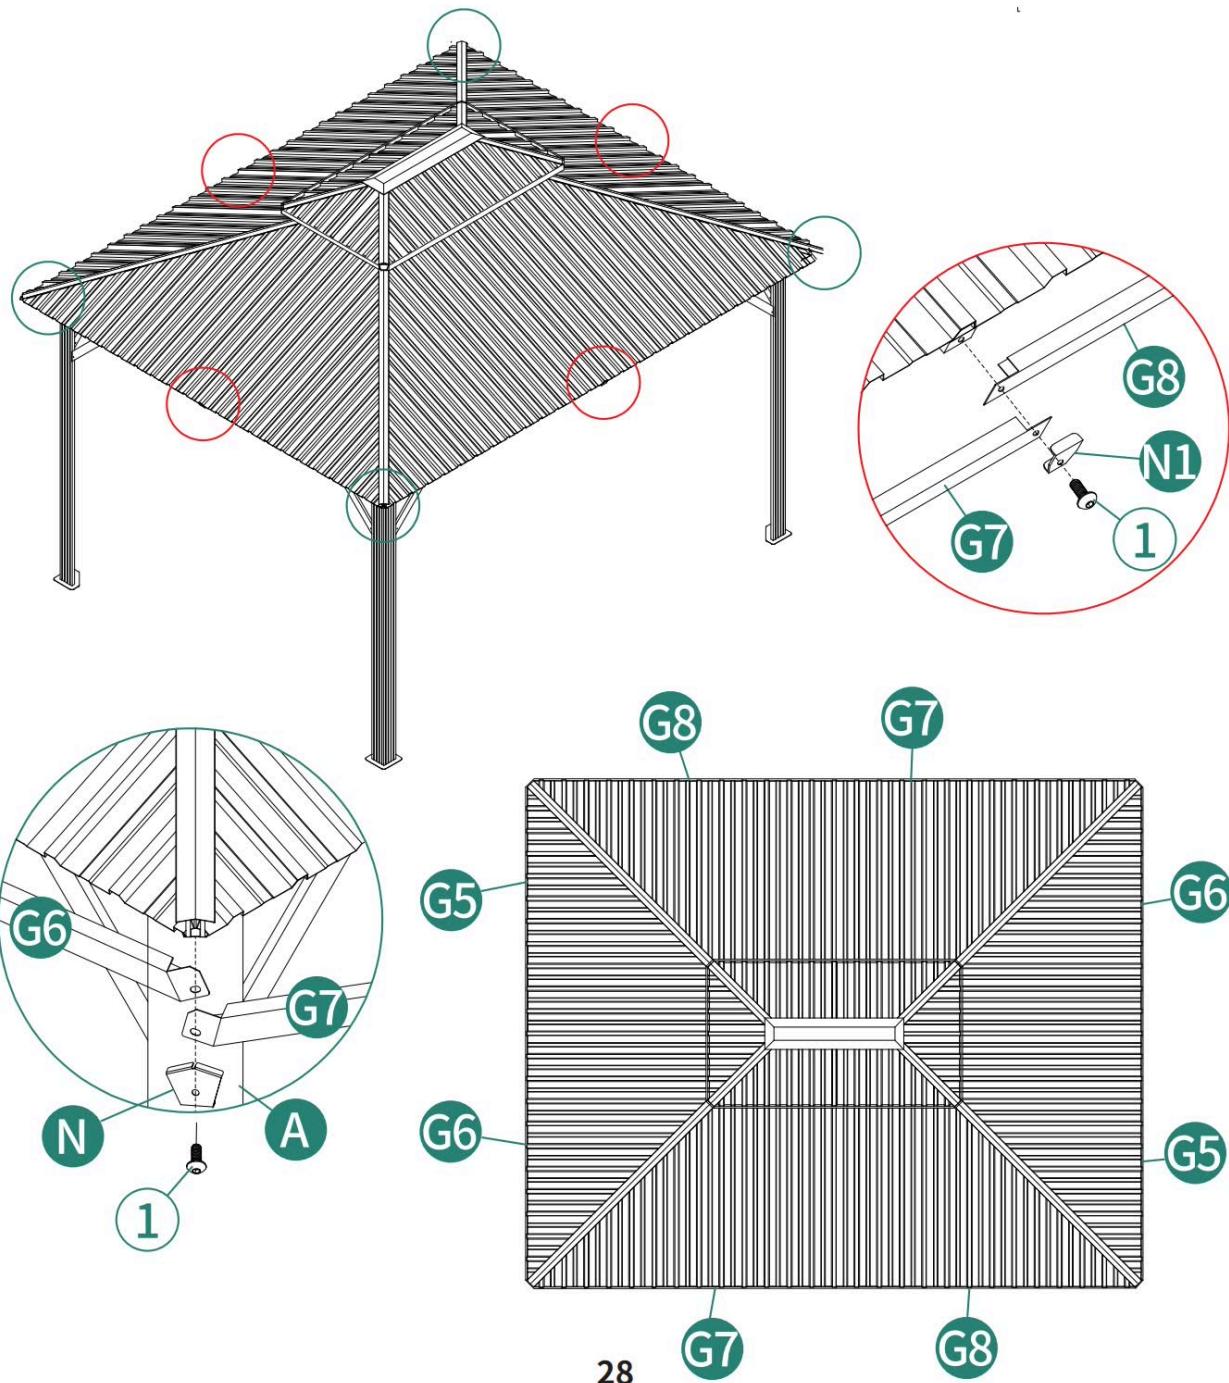
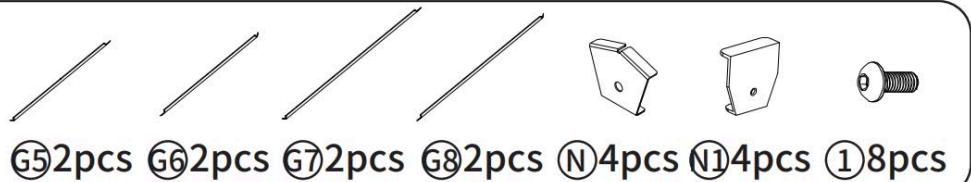


ASSEMBLY INSTRUCTIONS

25



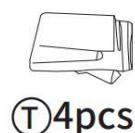


4pcs

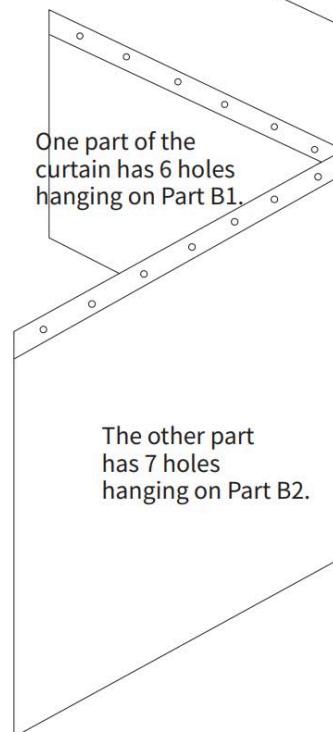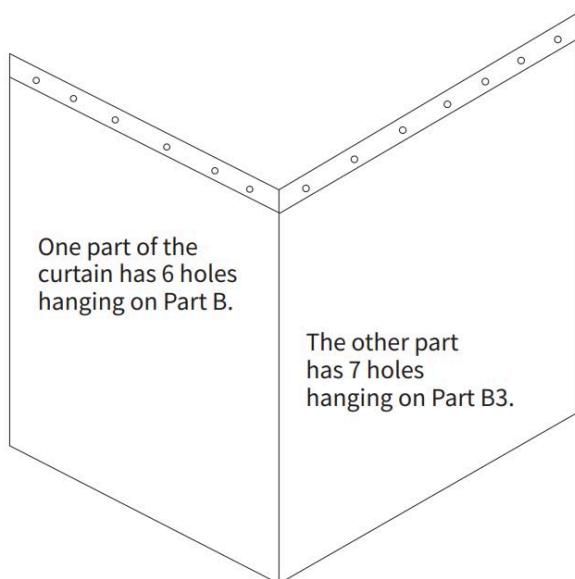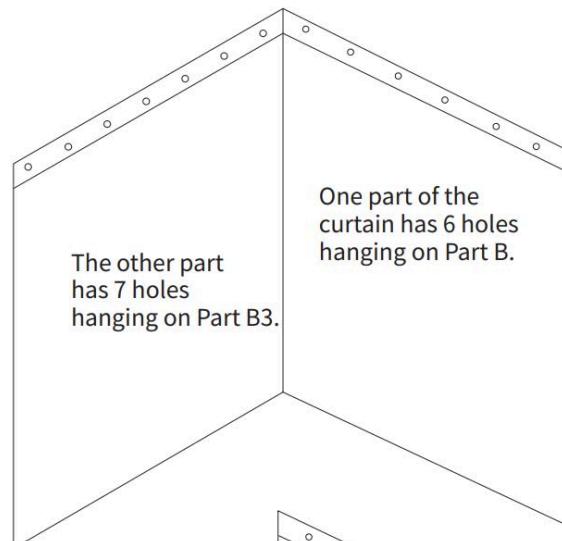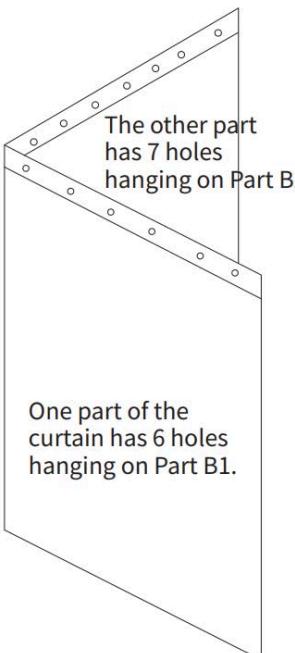

ASSEMBLY INSTRUCTIONS


26

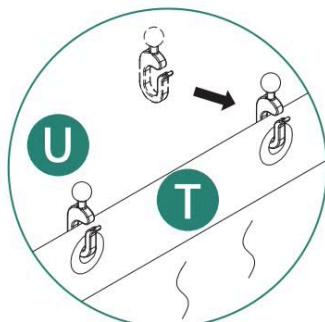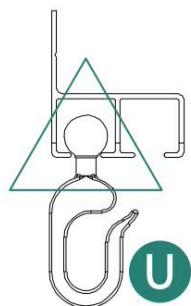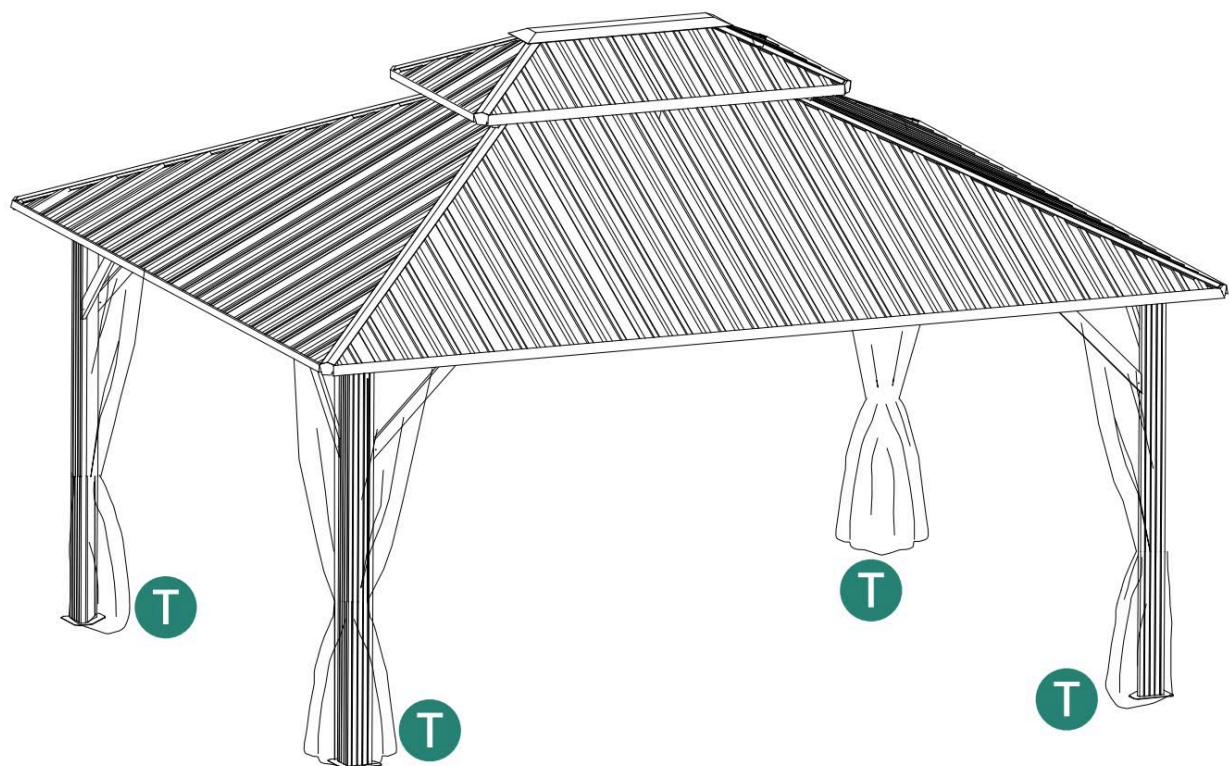





Pay attention to the sidewall curtain's installation position.

ASSEMBLY INSTRUCTIONS

27





T14pcs

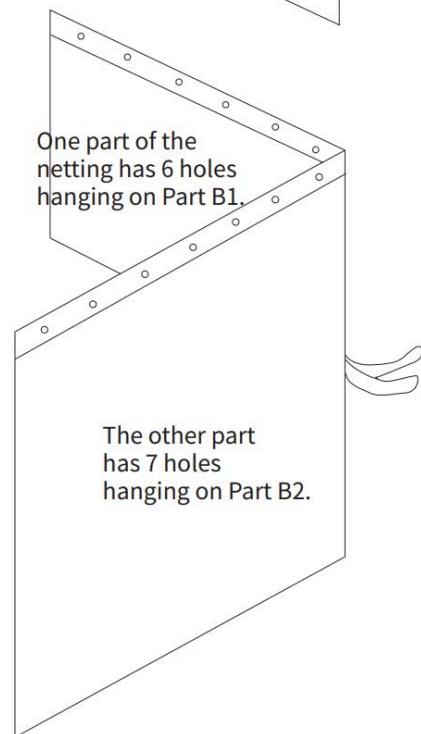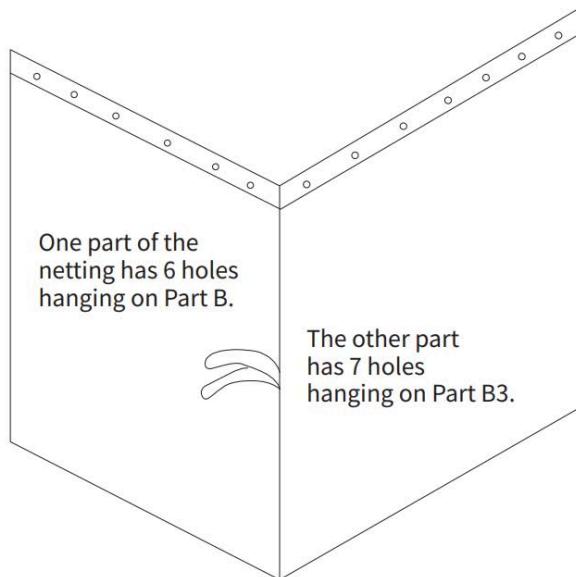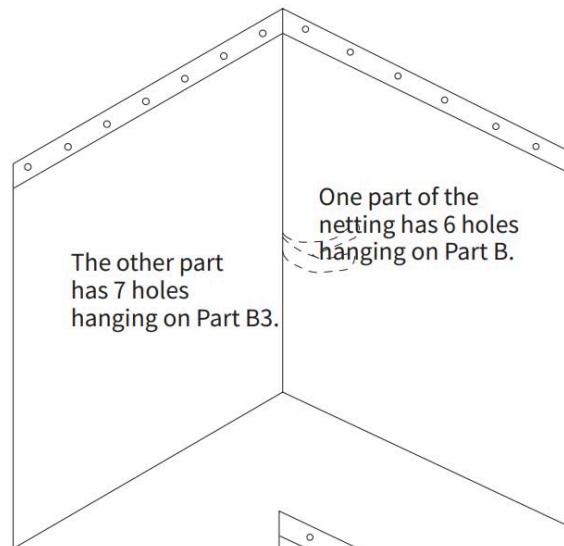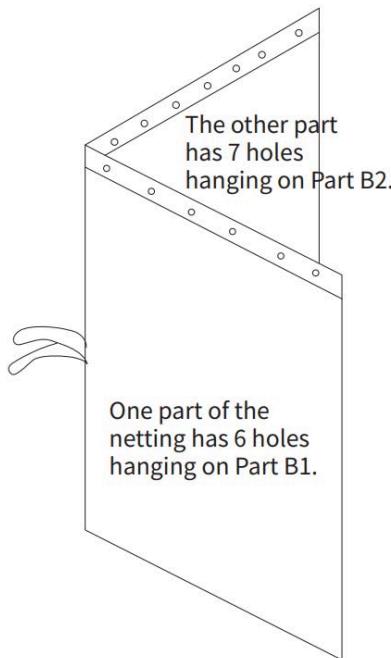


ASSEMBLY INSTRUCTIONS

28

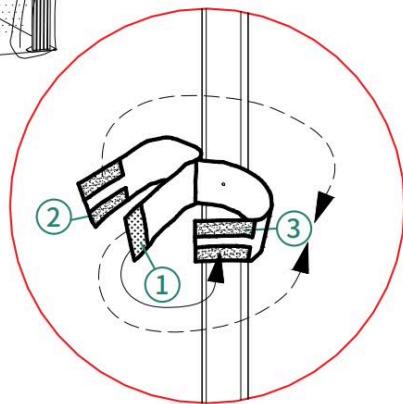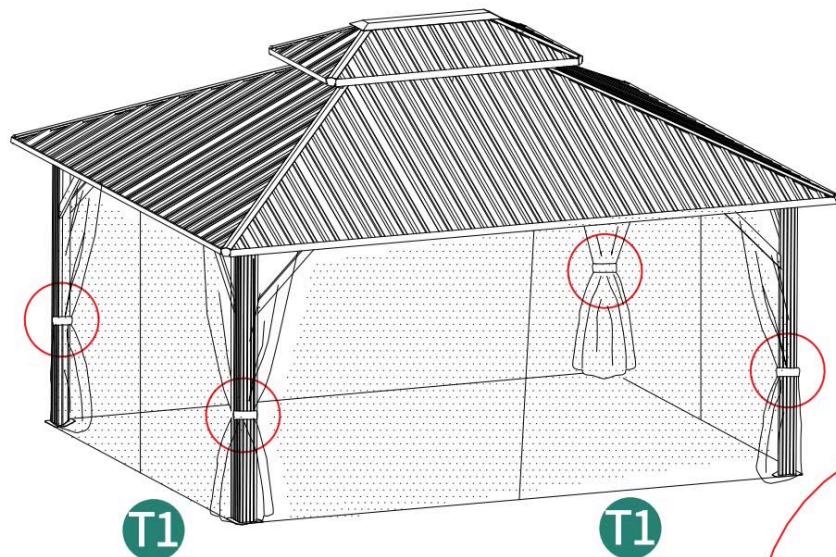

Note:

Attach 1 to 2 to secure parts T1 and T (curtains) together.
Attach 1 to 3 to secure the back curtain (T).
Attach 1 to 3 to secure the front netting (T1).

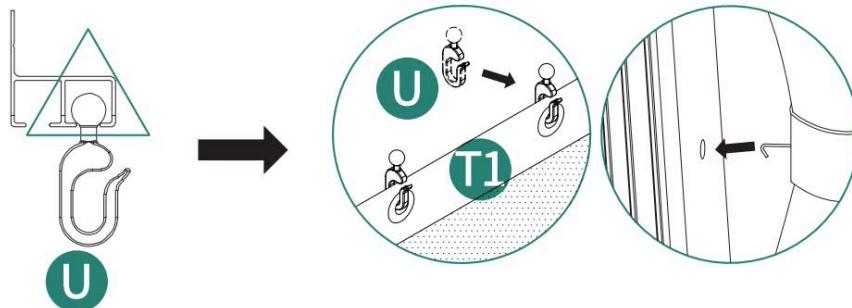


Pay attention to the sidewall netting's installation position.


Hang the hook attached to the netting on Part A.

ASSEMBLY INSTRUCTIONS

29



⑨12pcs ⑯12pcs

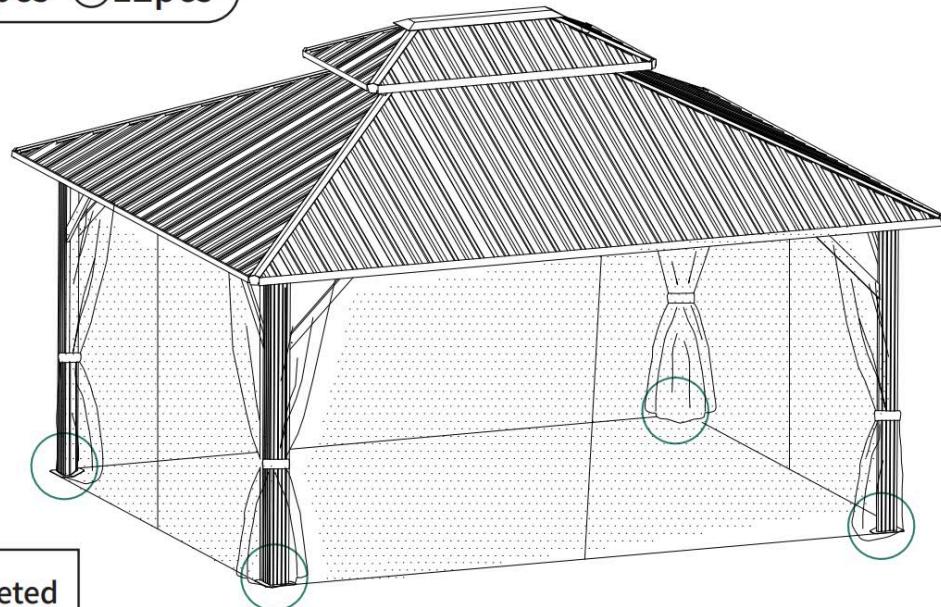

Installation Completed



To improve wind resistance,
**be sure to complete this installation
step. If expansion screws or ground
nails are not installed, strong winds
may topple the gazebo.**

Expansion screws are essential for
stability on cement surfaces, and
ground nails are for grassy surfaces.
All are included in the accessories
package.

