




ASSEMBLY INSTRUCTION

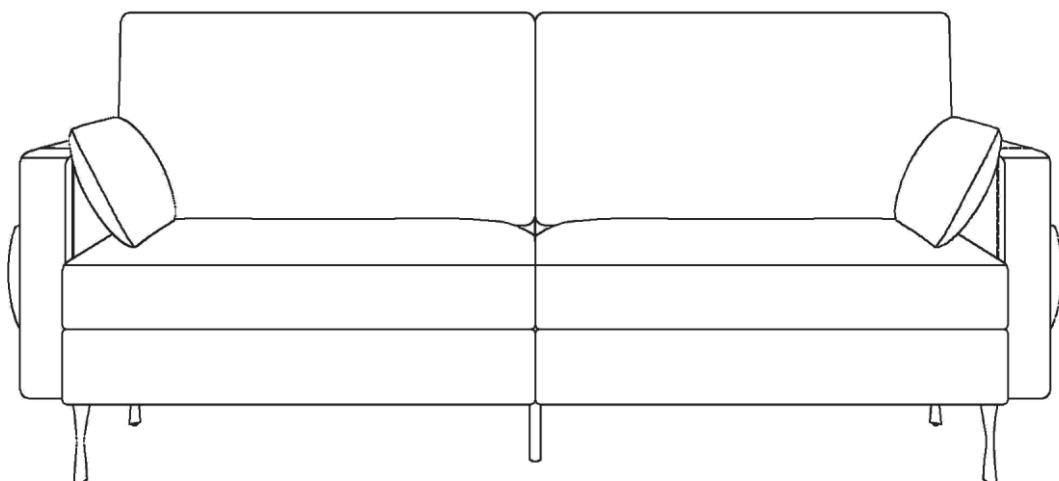


1. Please do not cut the compressed packages until your sofa frame is completely assembled.
2. Compressed components need to be fully fulfilled within 72 hours for perfect use.
3. Please keep children away from plastic bags or any small pieces of stuff.

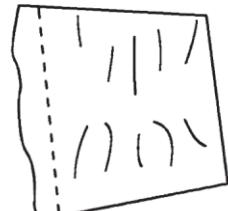


List of Components-check the QTY before assembly

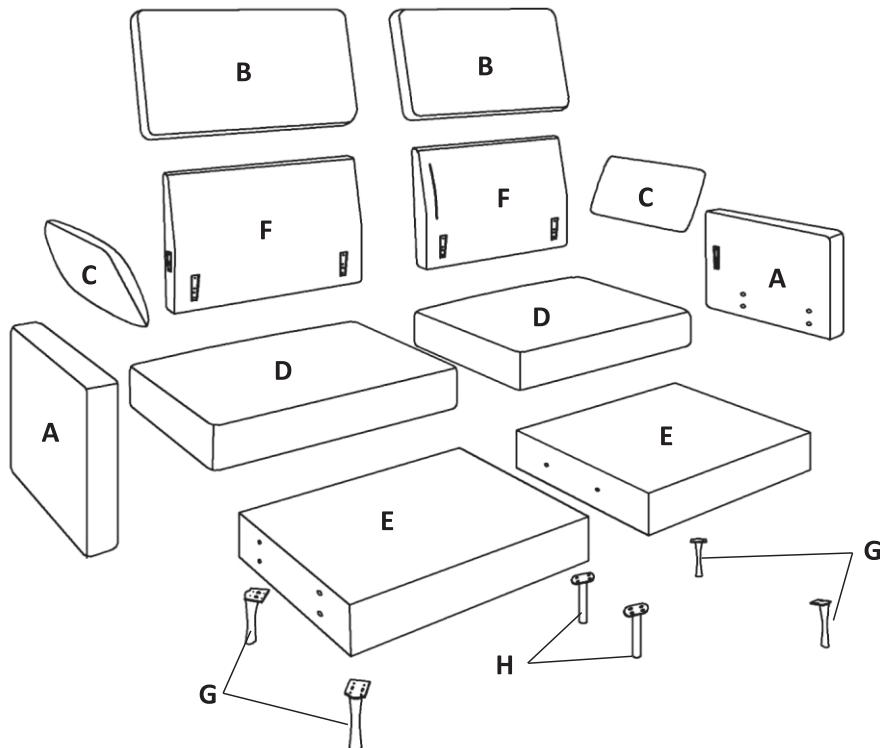

A - Armrest*2

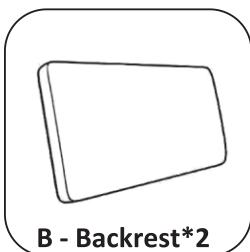

B - Backrest*2

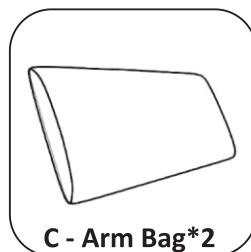

C - Arm Bag*2



D - Seat Bag*2




E - Sofa Base*2



F -Sofa Back*2



G - Side Leg*4

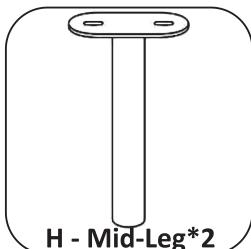


H - Mid-Leg*2

Hardware list




I - Non-Slip Mat for
Mid-Leg*2

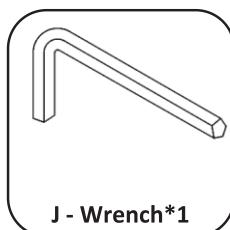

J - Wrench*1



K - 8x25 Screw*12

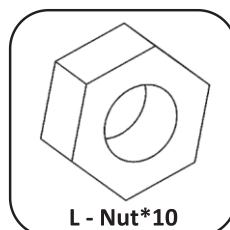


L - Nut*10



M - Steel Gasket*24




N - Wrench*1

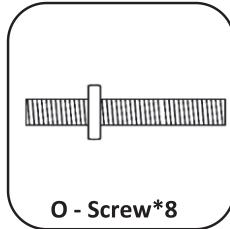

O - Screw*8



P - Long Screw*2




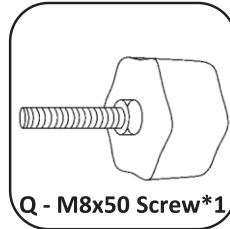


Q - M8x50 Screw*1







R - Storage Bag*1


Step 1: Screw down G - Front Side Leg*2 on E - Sofa Base*2 and Back Side Leg*2 on A - Armrest*2.

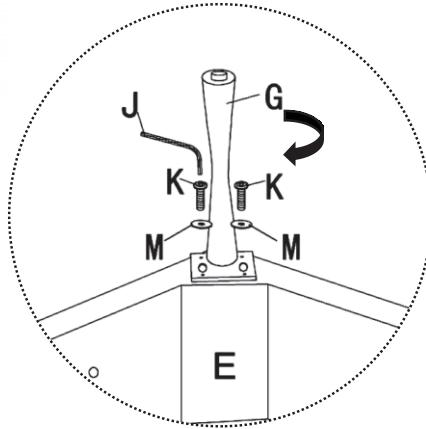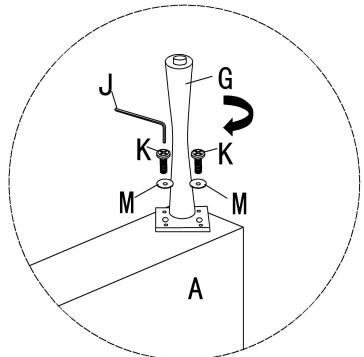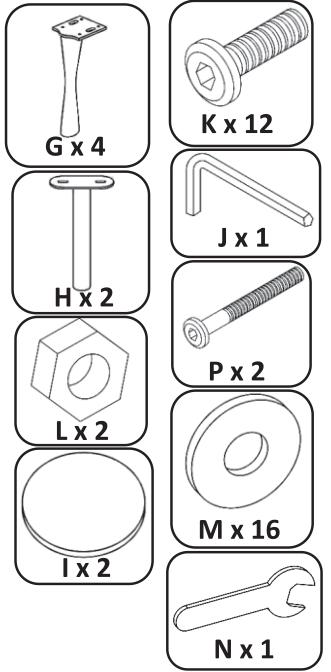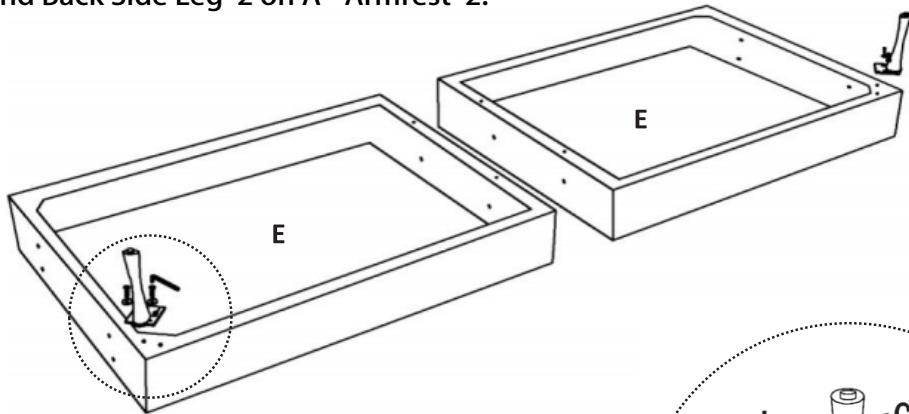


Step 2: Screw down H - Mid-Leg*2 and connect E - Sofa Base*2.

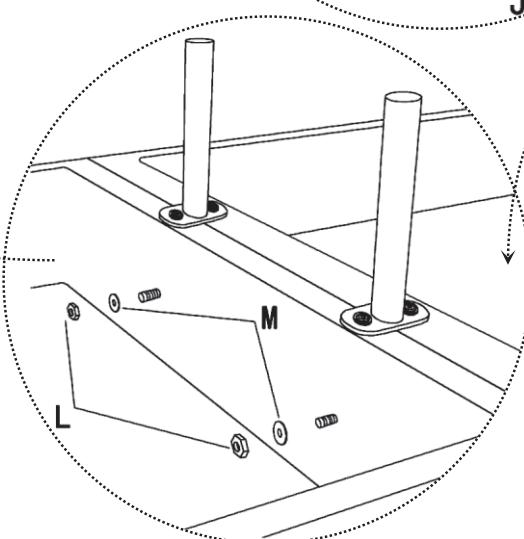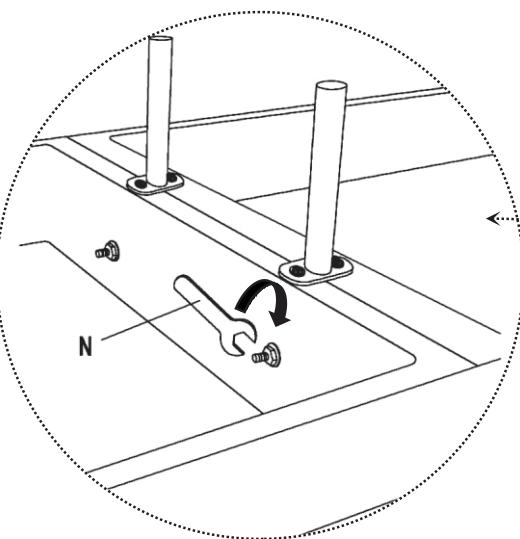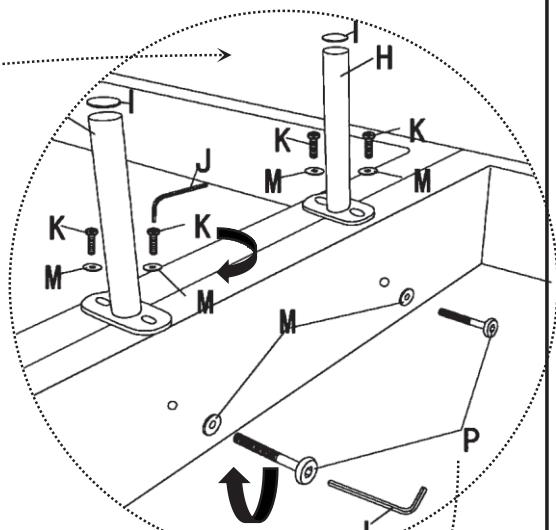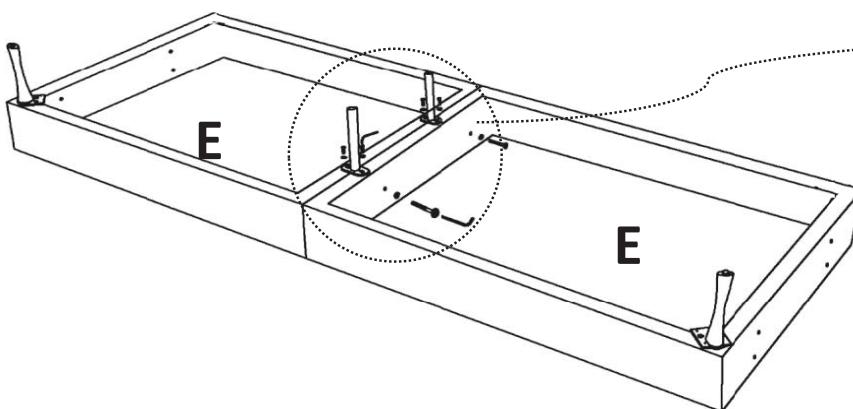


Step 3: Screw down O-Screw*8 on A - Armrest*2, with the Handgrip of Wrench.

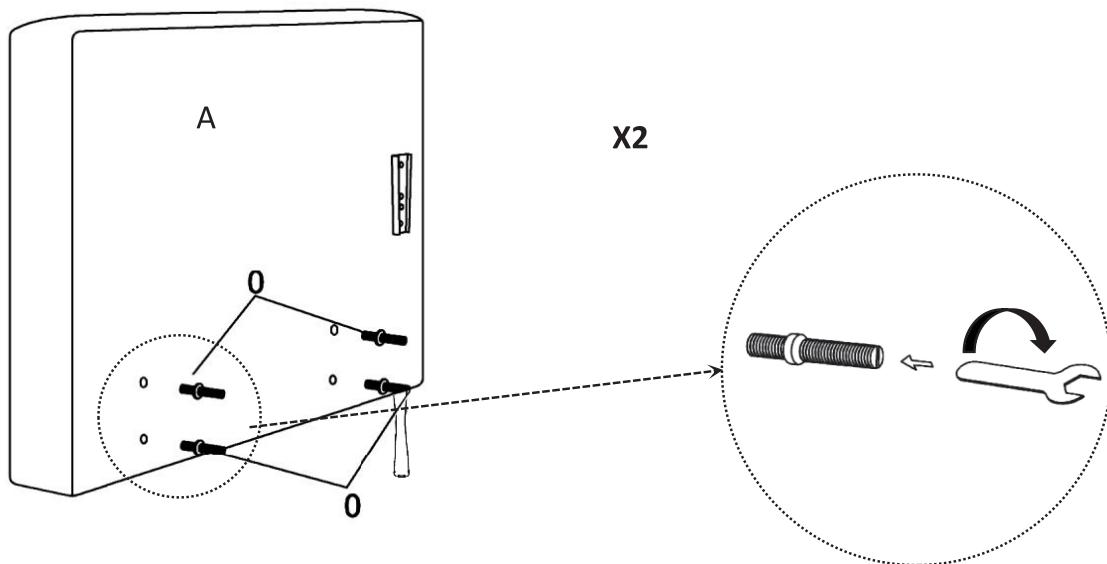


Step 4: A Point at and plug in holes of E, and tighten up the inner side.

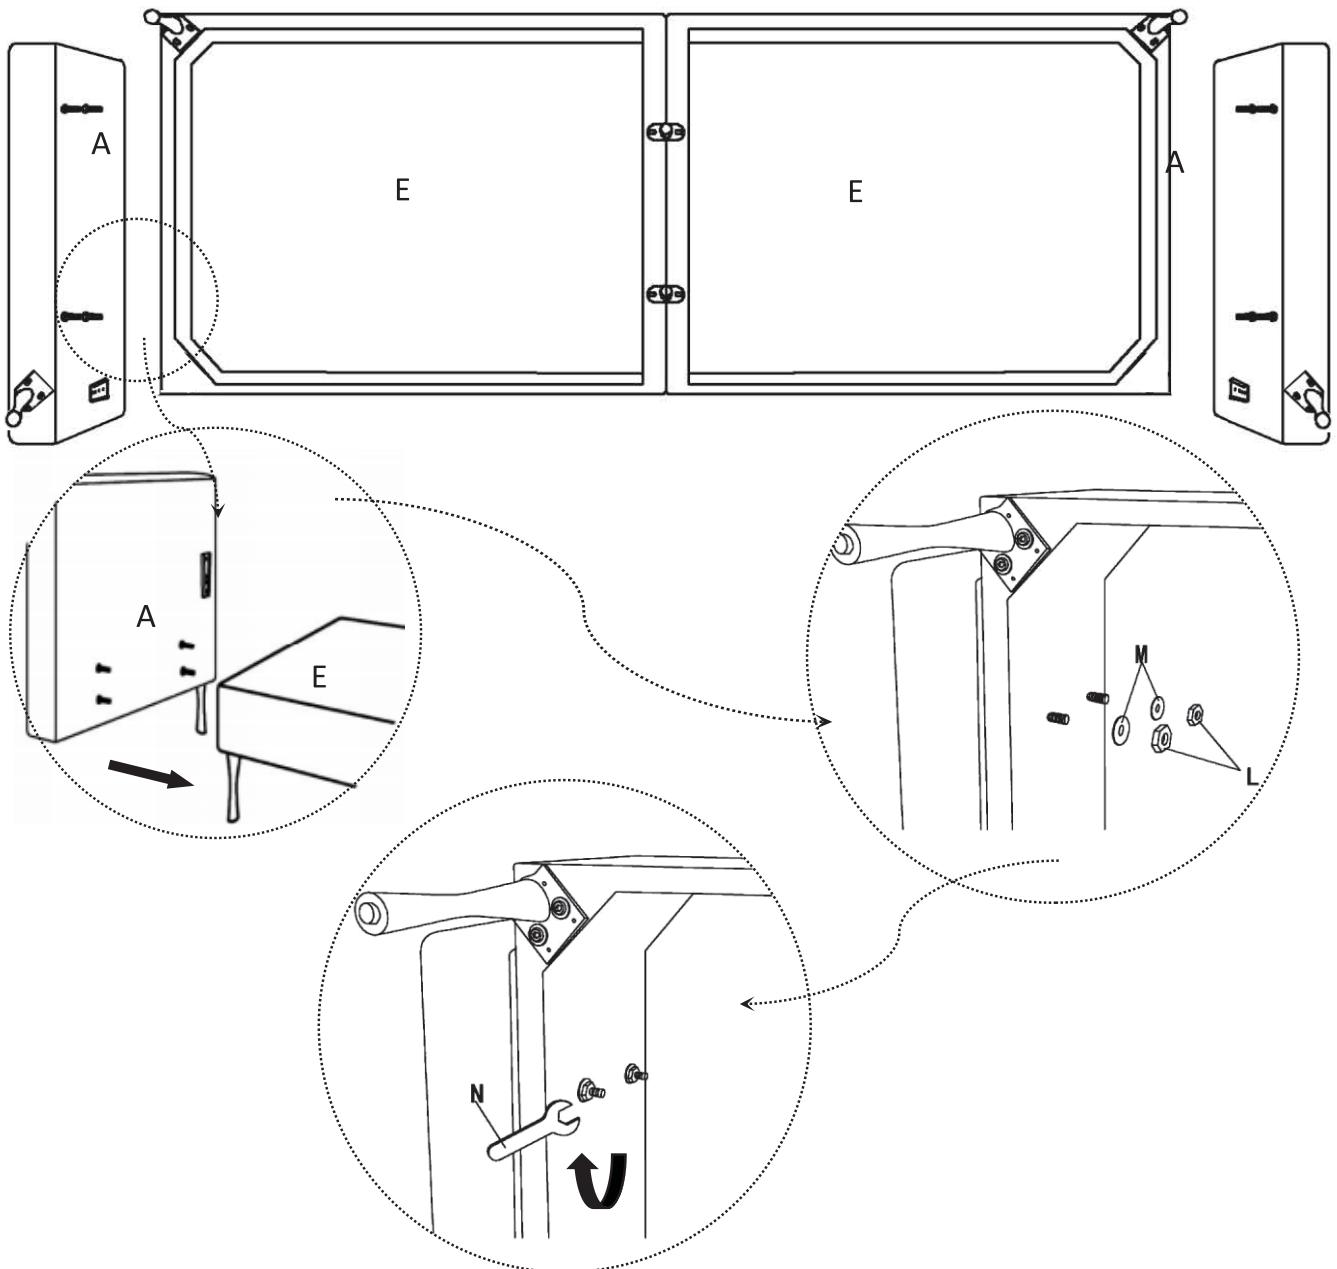


Step 5: Plug in F - Sofa Back*2, point at the suitable positions and press to the end. Press one side of Back first and same way for another side.

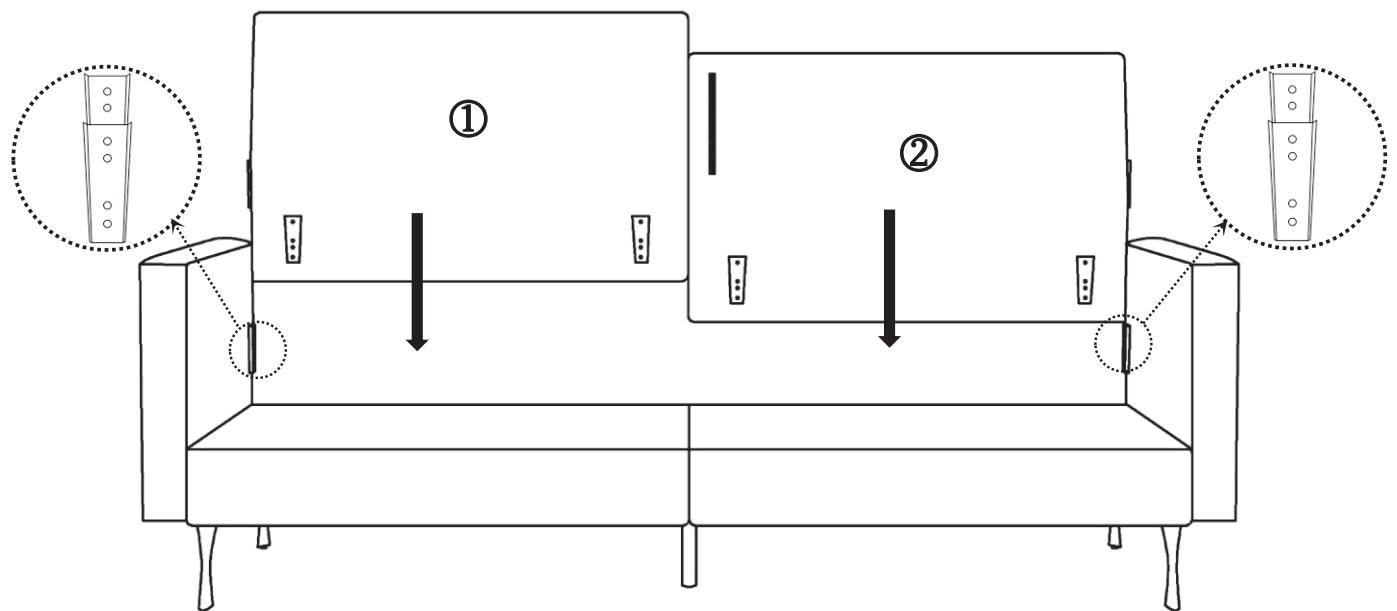

Step 6: Unzip and connect F - Sofa Back*2 with Q - M8x50 Screw*1.

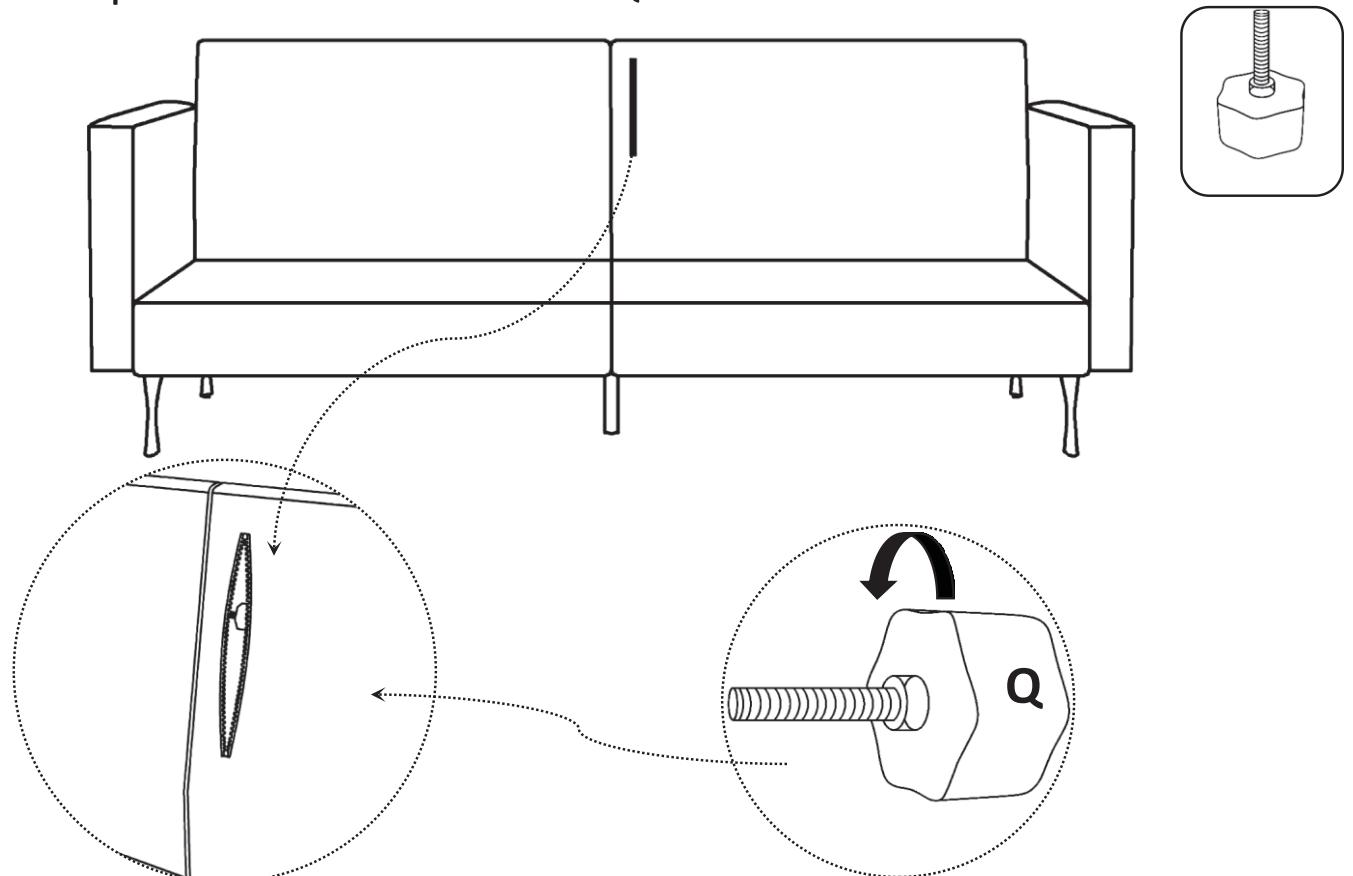

Configure Storage Bag on Left or Right Armrest with touch fastener.

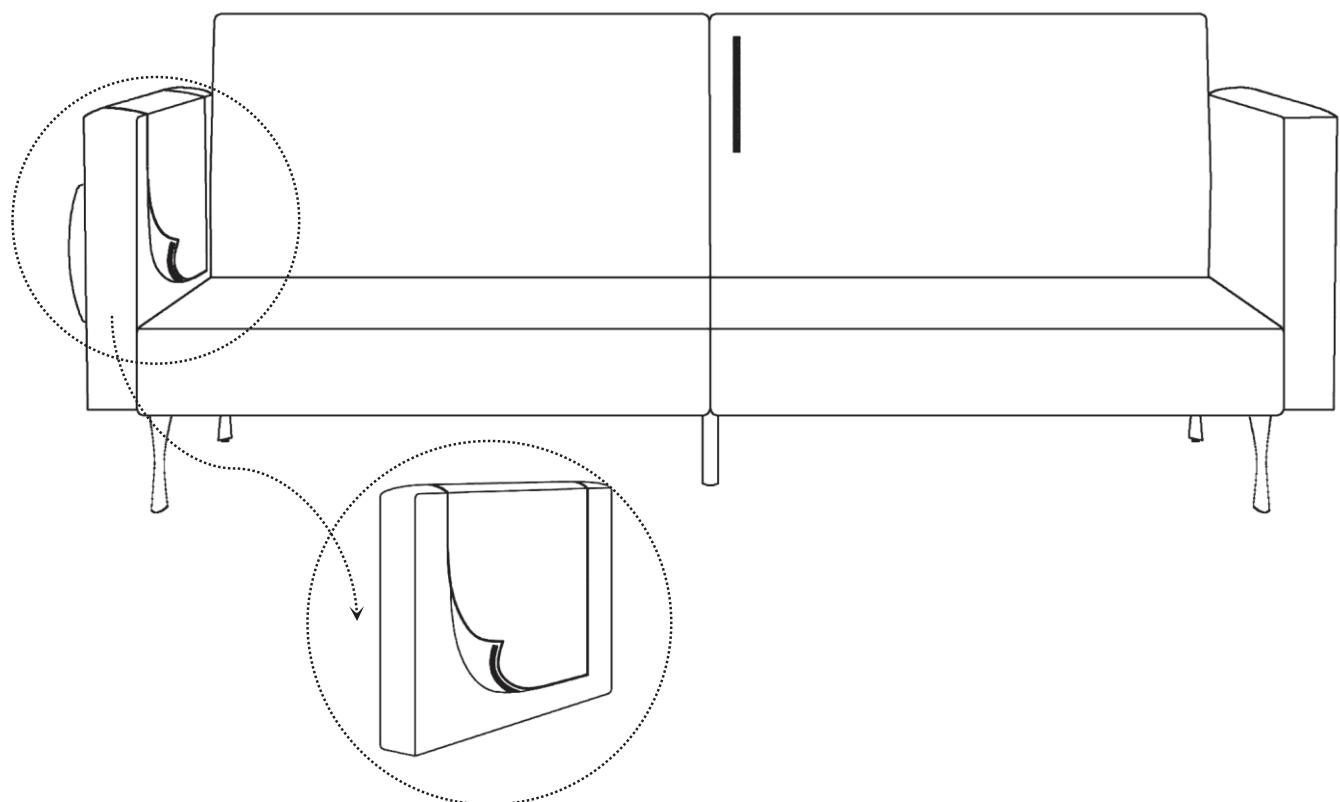Step 7:Configure Storage Bag on Left or Right Armrest with touch fastener.**Step 8:Tidy up B - Backrest*2, C - Arm Bag*2, and D - Seat Bag*2, finish assembly.**