# **ASSEMBLY INSTRUCTION**


Please check the lists before installation


### **PACKING LIST:**


A:RECLINER BACKREST: 1

D:RECLINER SEAT:1 (with 2 Armrest inside)


E:Attaching Plug:1










# (Take out the ArmrestsB&C from the Recliner SeatD)

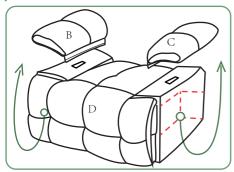

B:RIGHT ARMREST:1 C:LEFT ARMREST:1






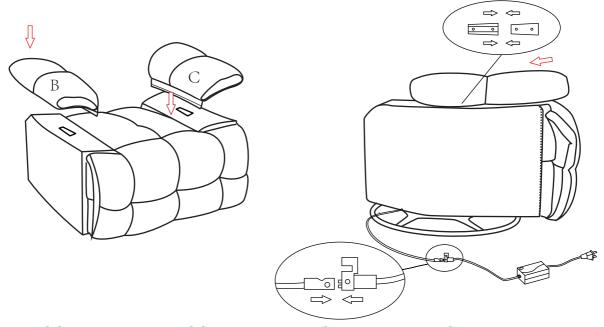

# **Assemble Armrest Cushion Connect the power cord**


- 1: Align the snaps of the armrest cushion with the armrest frame, and push the cushion from the front to the back.
- 2: Attach the Velcro of the armrest cushion to the Seat Frame.

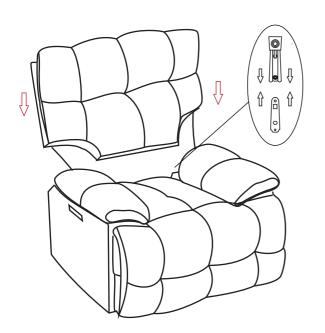

#### **Assemble The Backrest**

Align the tabs on the backrest with the tabs on the base, and then insert the backrest downward. When you hear a click, the insertion is complete.

# "Ta-cla!"

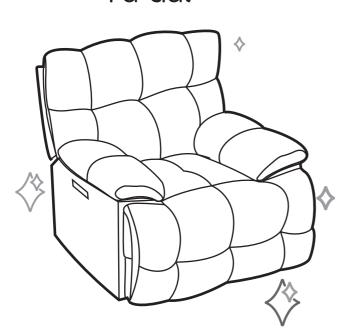

## **Arrange The Recliner**

When the recliner is freshly unpacked, it may have some deformations due to compression. You can promote its shape recovery by patting and tapping it with your hands.

