



10x13 FT

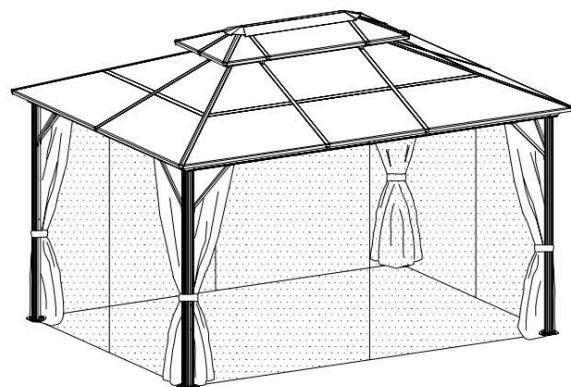

Item no.	Reference Image	Qty.
A		X4
B		X2
B1		X2
C		X2
C1		X2
Ea		X4
E1		X6
G		X2
G1		X4

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.
G2		X4
G4		X2
G6		X2

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
D1		X4	G5		X2
D2		X6	H		X4
Eb		X4	H1		X4
E2		X6	K		X4
F		X2	K1		X4
F1		X4	U		X112
F2		X4	L		X1
F3		X4	M		X1
F4		X4	N		X12
G3		X2	N1		X12

## ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
P		X4	W2		X6
J		X4	W3		X4
S		X4	1		X168
T		X4	2		X16
Q		X4	3		X24
Q1		X4	4		X24
Q2		X4	5		X2
Q3		X4	6		X1
Q4		X4	7		X1
Q5		X4	8		X12
Q6		X4	9		X1
R1		X4	10		X8
R2		X4			
R3		X2			

# ASSEMBLY INSTRUCTIONS

**1**

X4





Ⓐ4pcs



Ⱶ4pcs




①12pcs

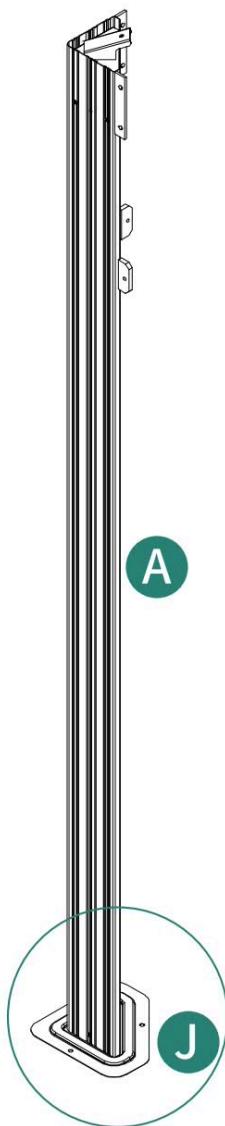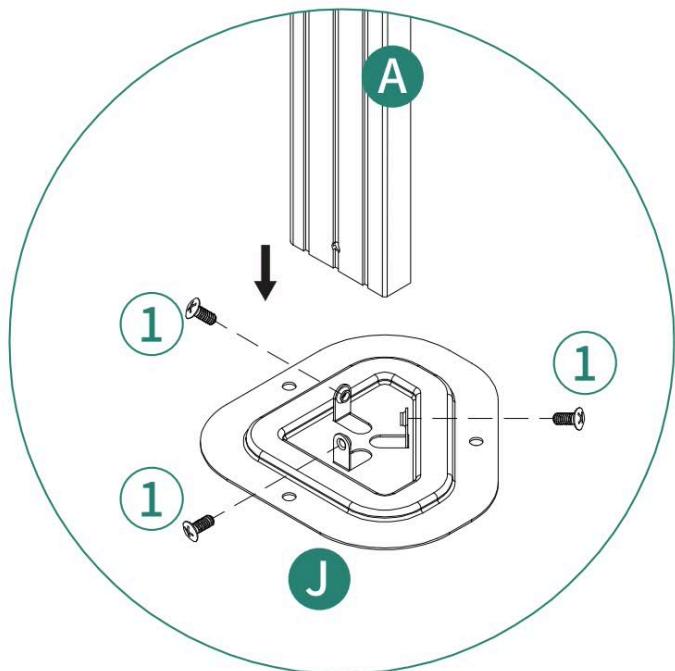



## ASSEMBLY INSTRUCTIONS

**2**

**X2**

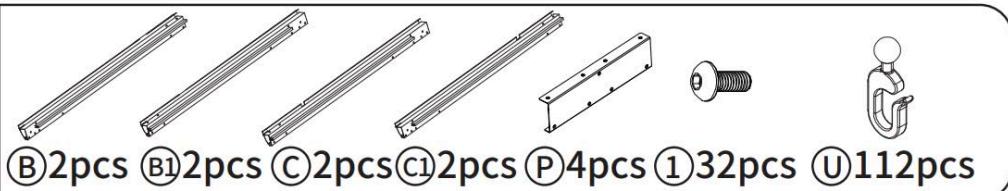

When connecting B and B1 via P,C and C1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.


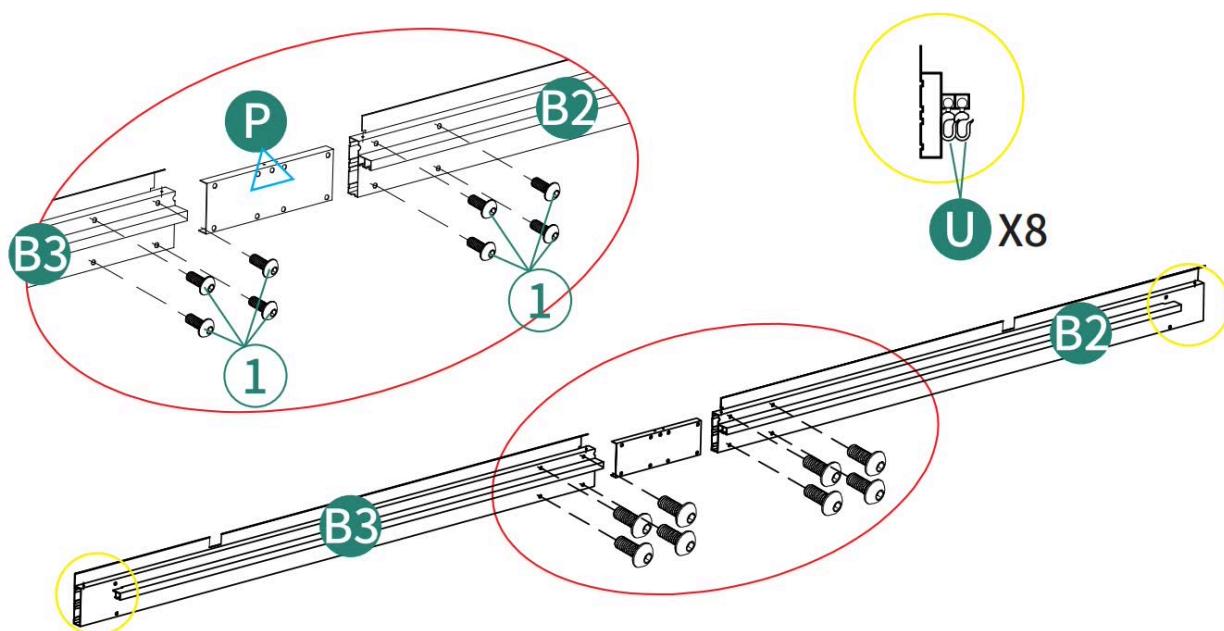
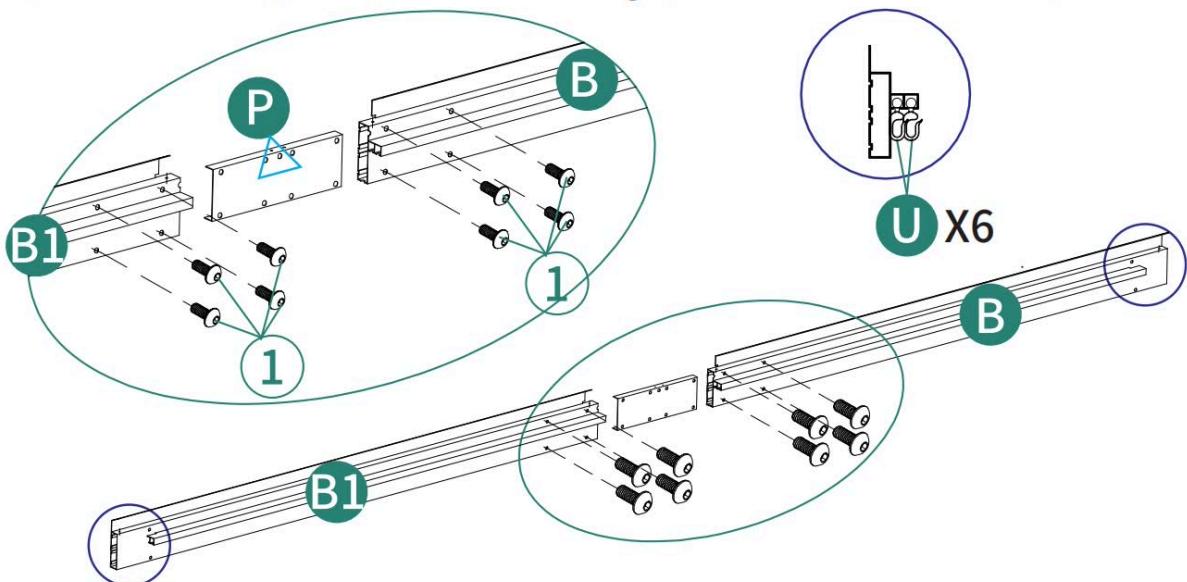


## ASSEMBLY INSTRUCTIONS

3





①16pcs ②16pcs

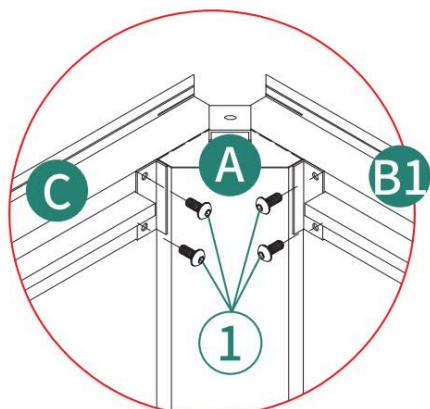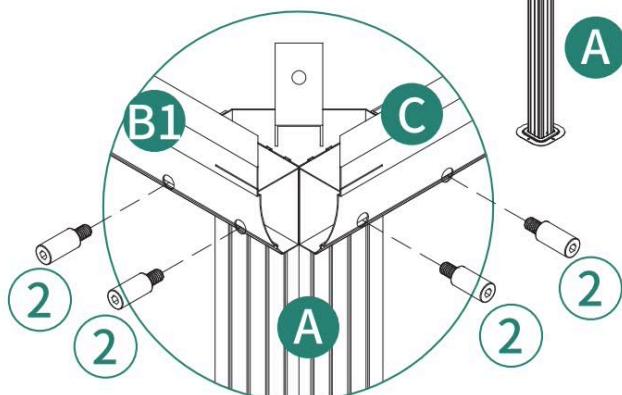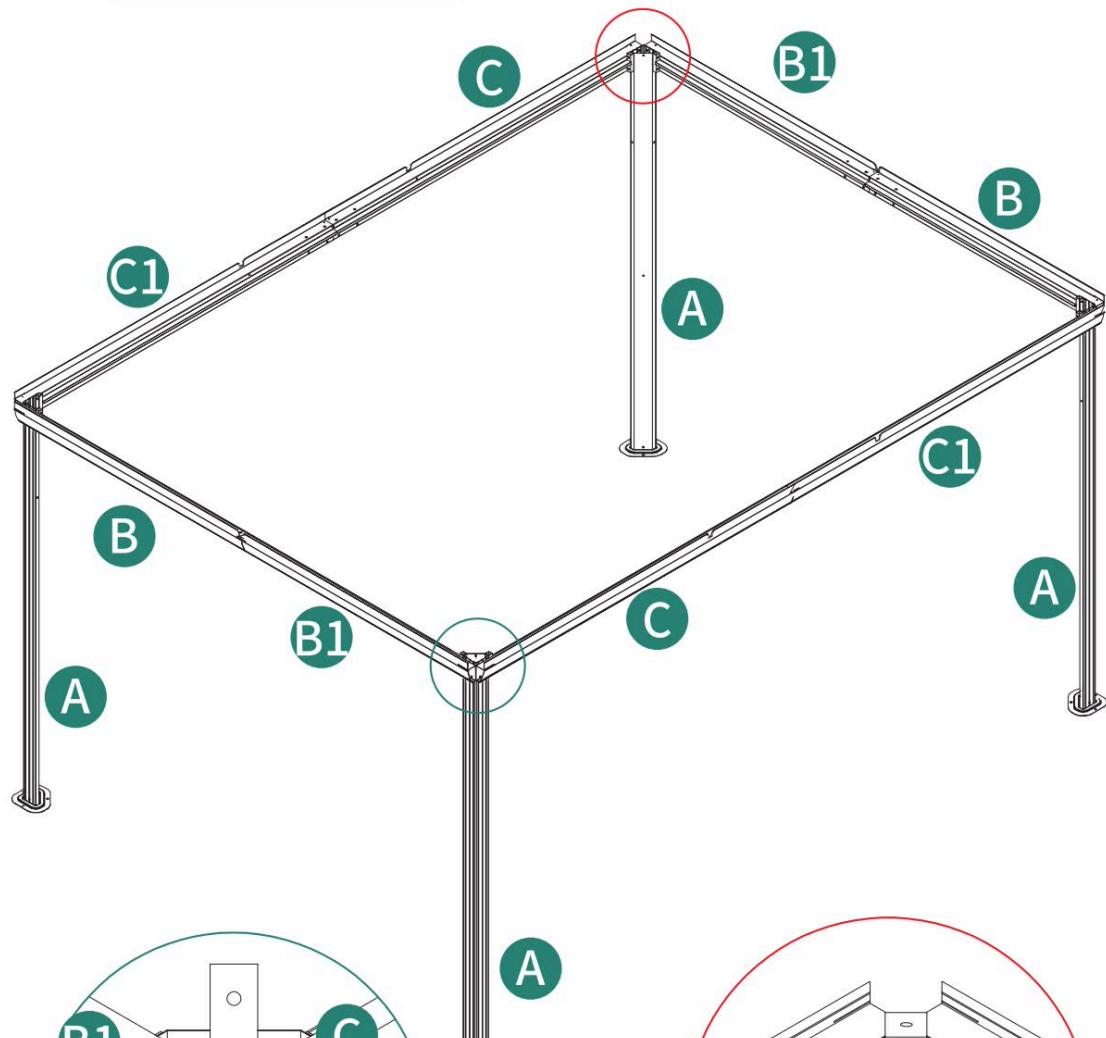



## ASSEMBLY INSTRUCTIONS

4

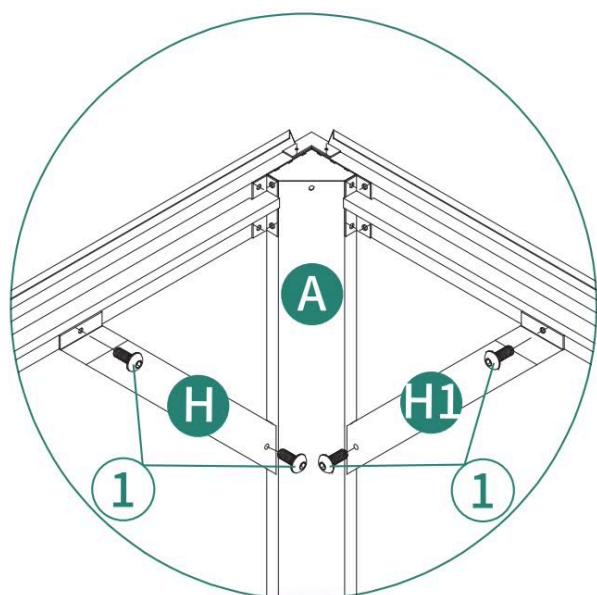
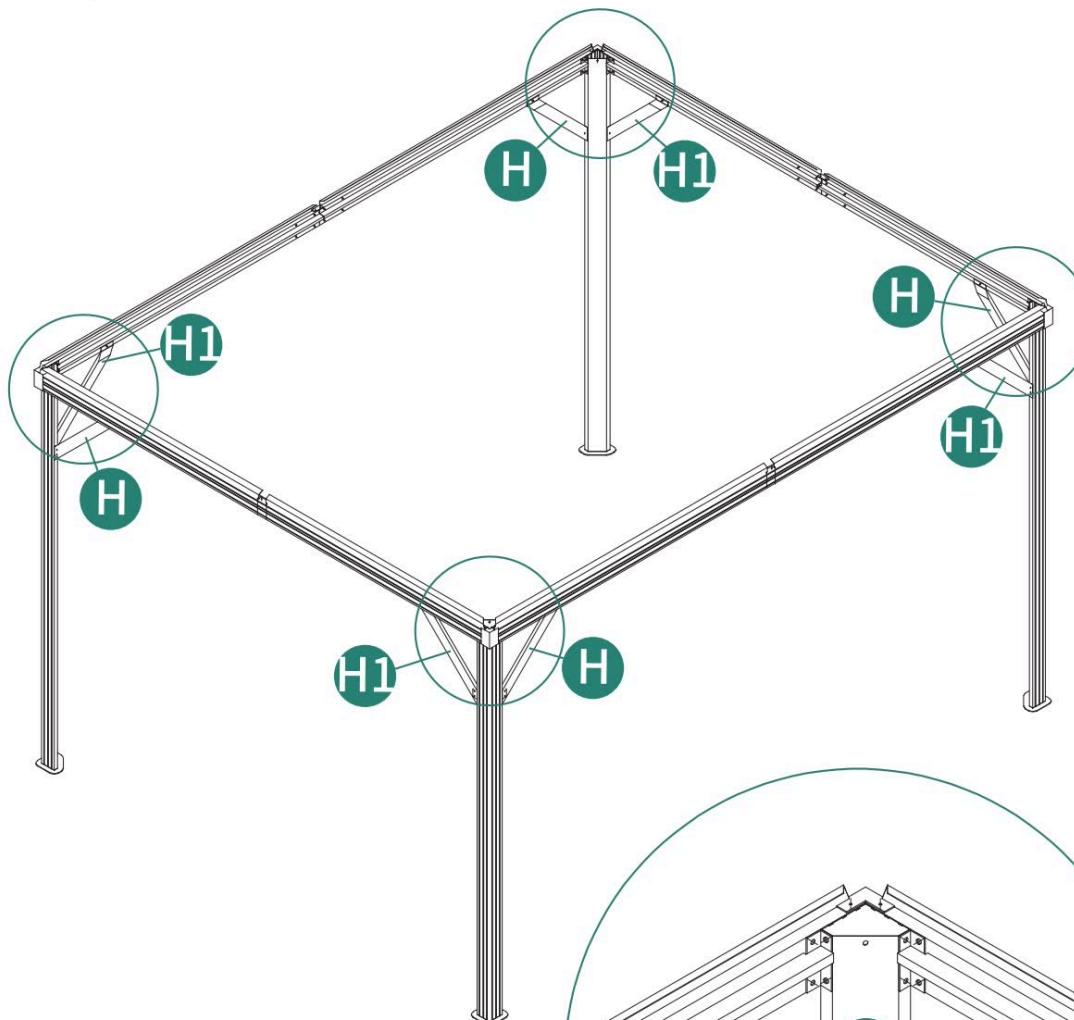


## ASSEMBLY INSTRUCTIONS

5

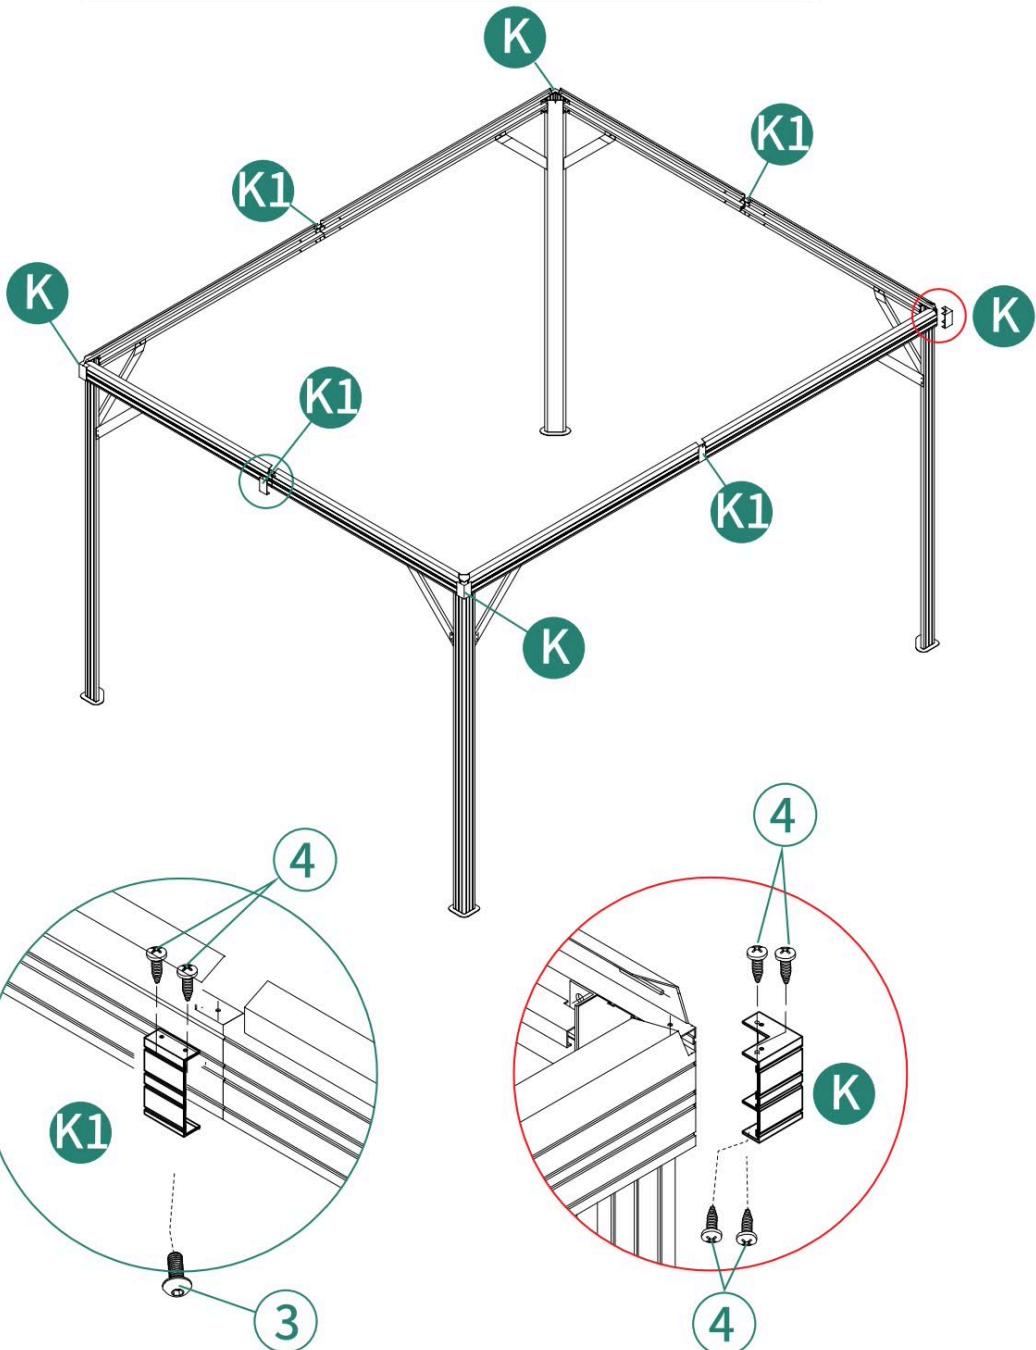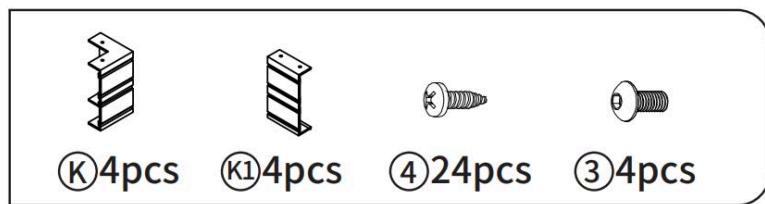

## ASSEMBLY INSTRUCTIONS

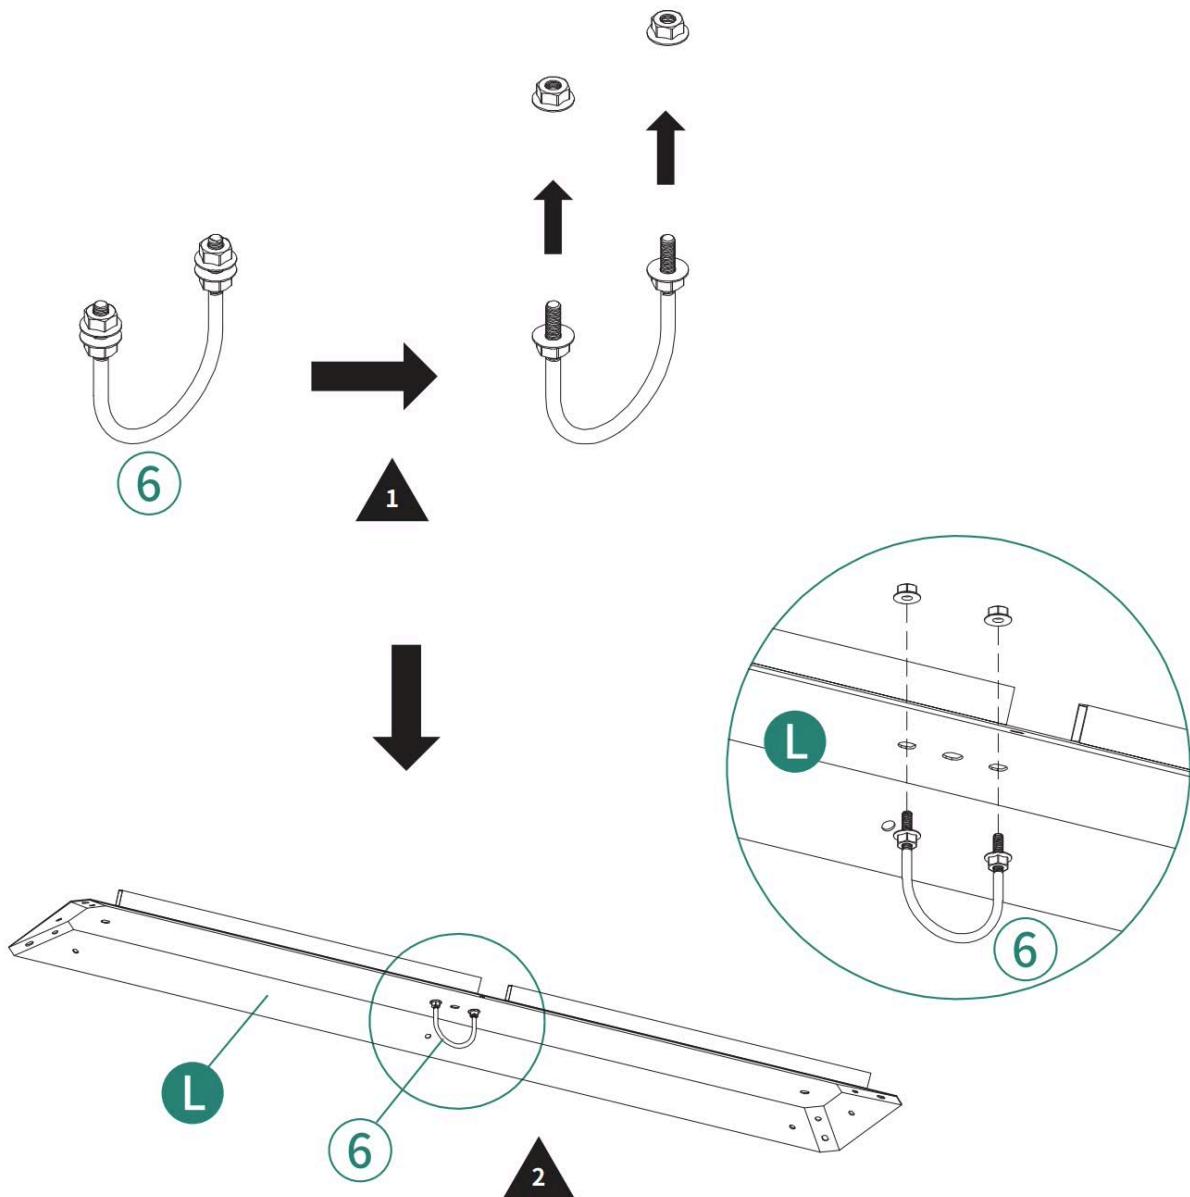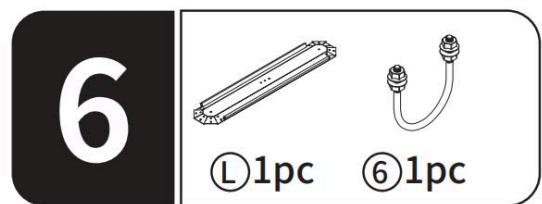


## ASSEMBLY INSTRUCTIONS

7

X4



⑩4pcs ⑬4pcs ⑭4pcs ⑮8pcs ⑯8pcs ⑰4pcs ⑲8pcs

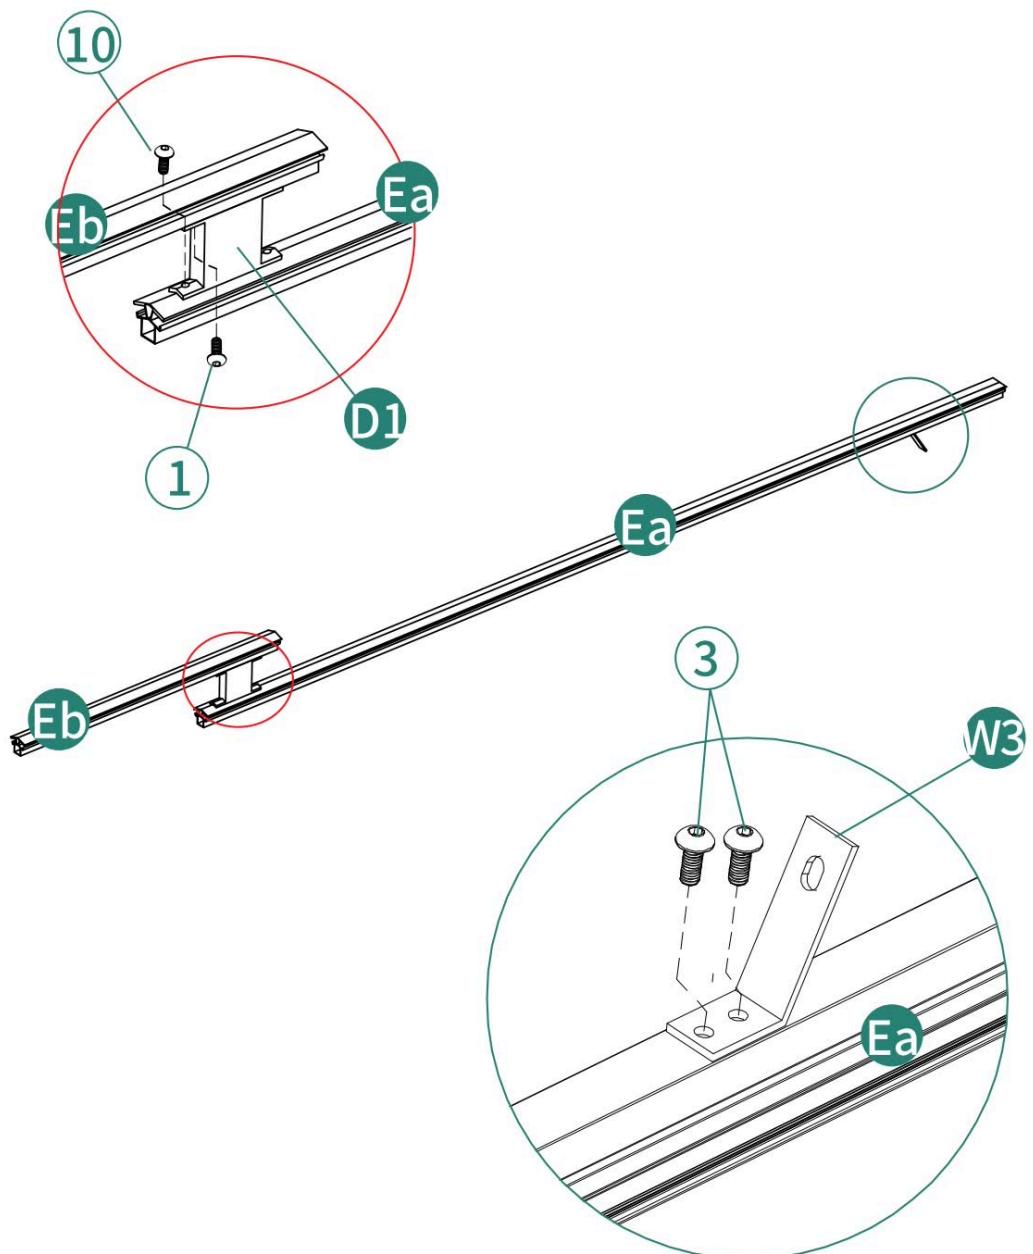


## ASSEMBLY INSTRUCTIONS

8





① 12pcs

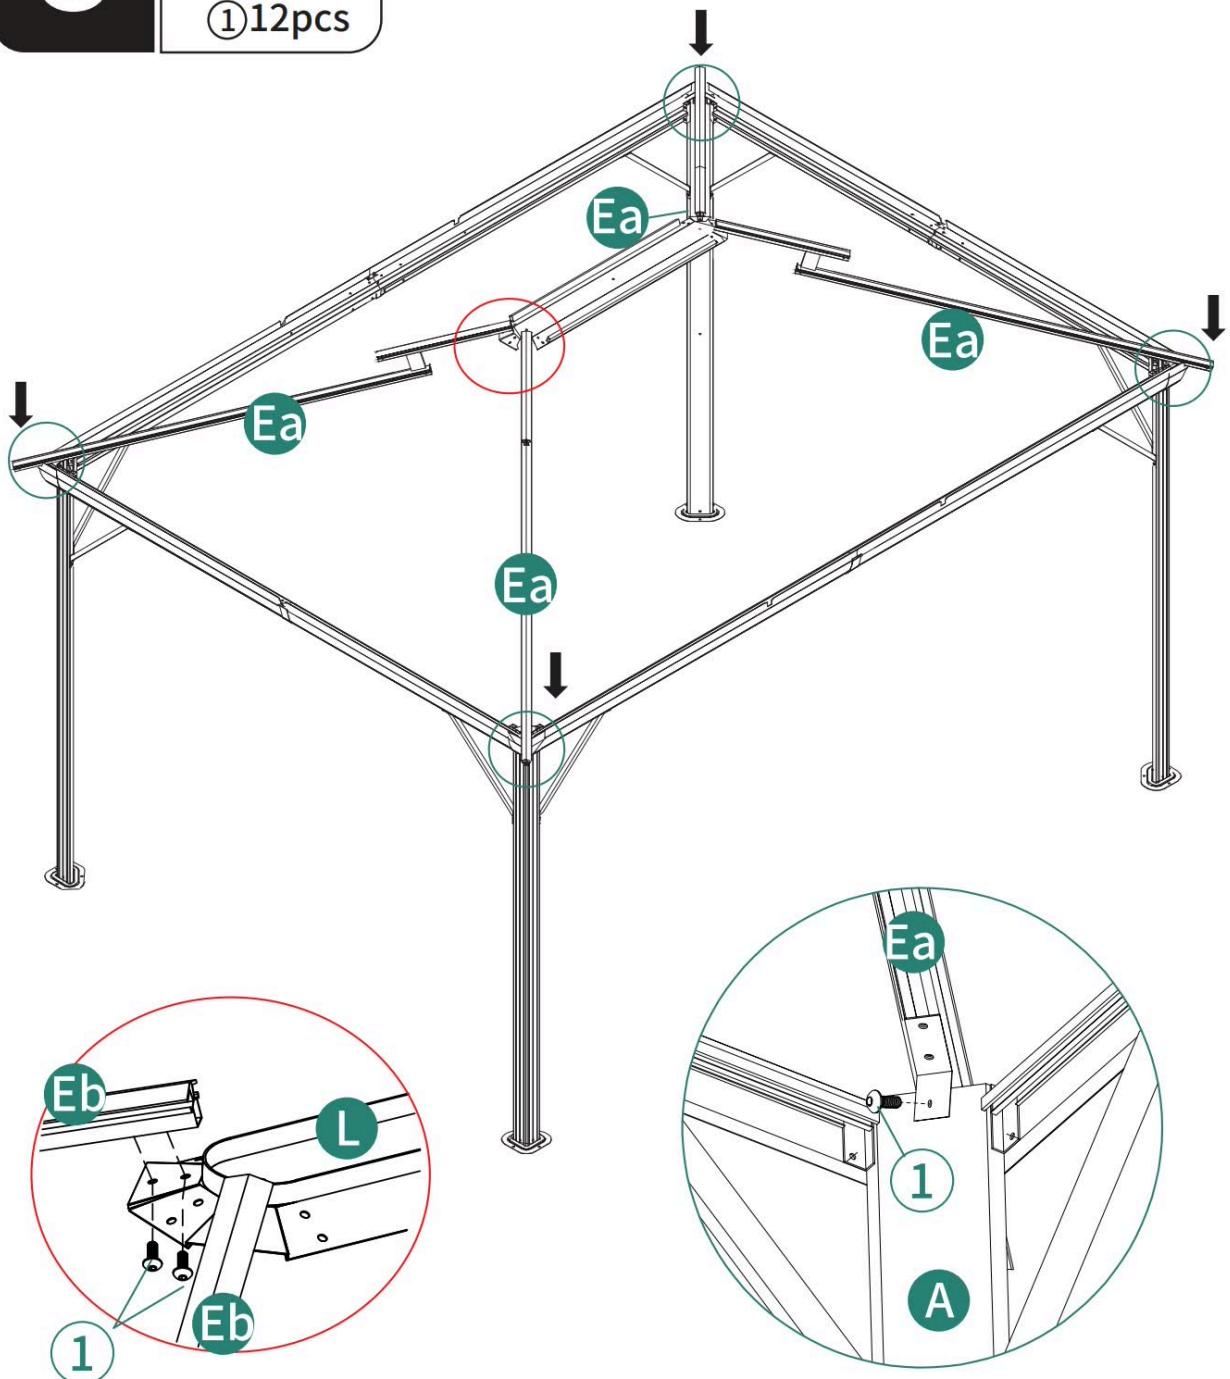

## ASSEMBLY INSTRUCTIONS

9  
X6


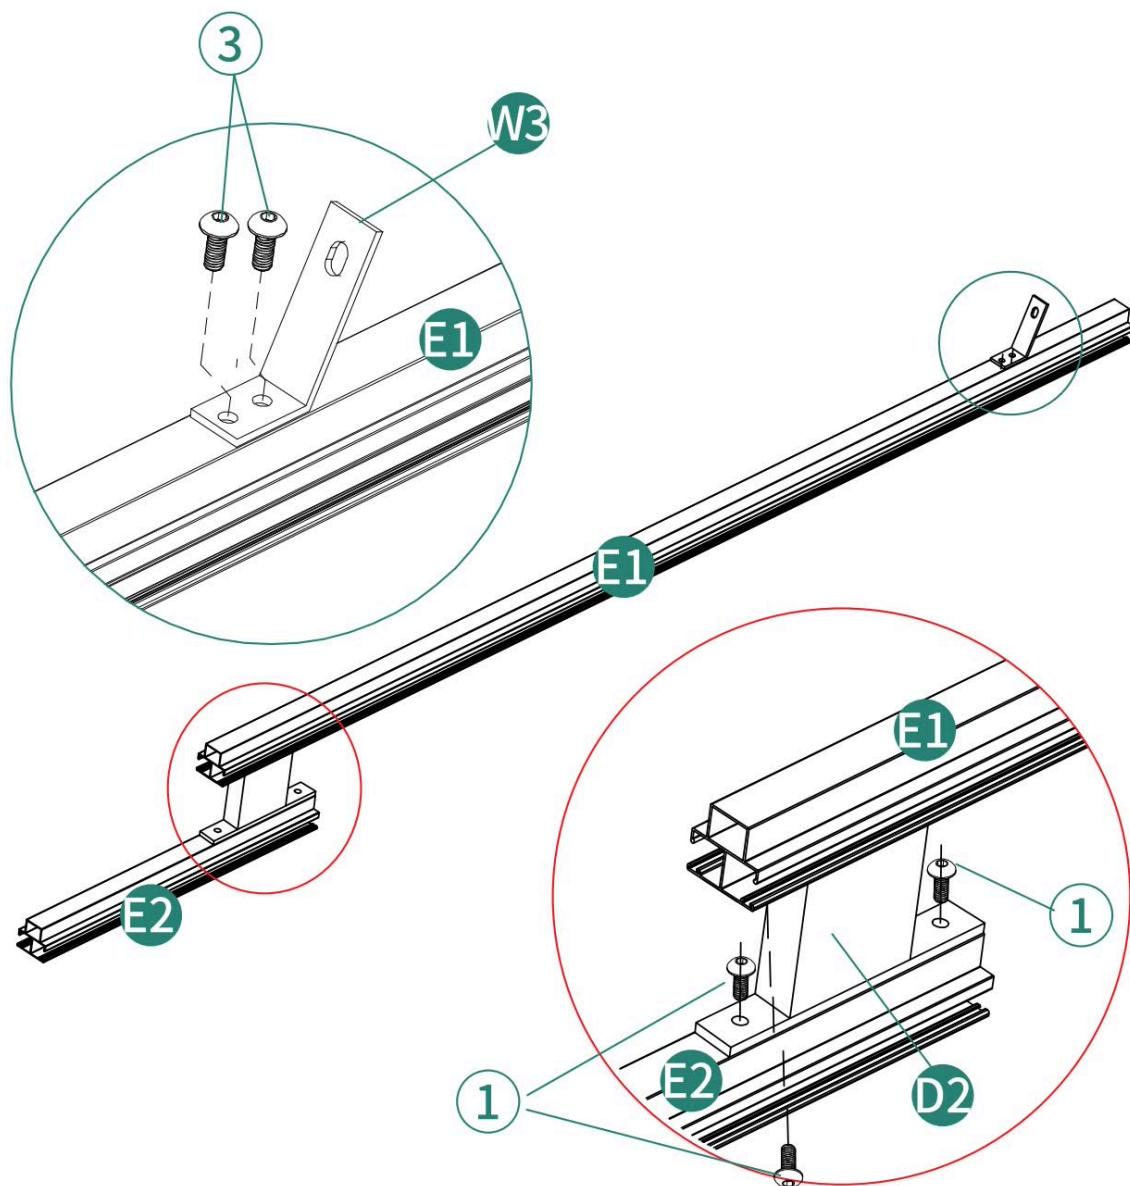
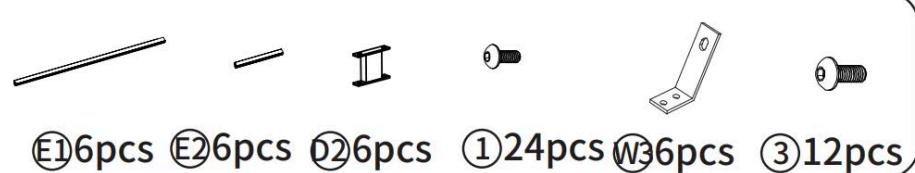


## ASSEMBLY INSTRUCTIONS

10





① 18pcs

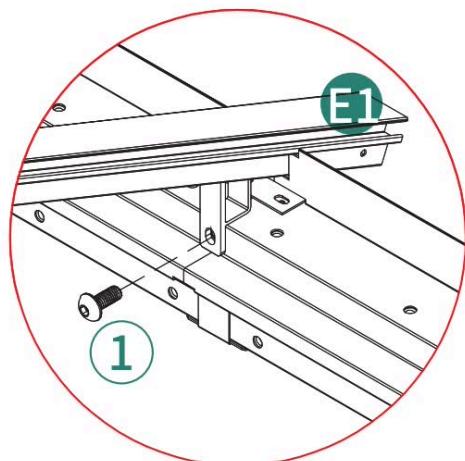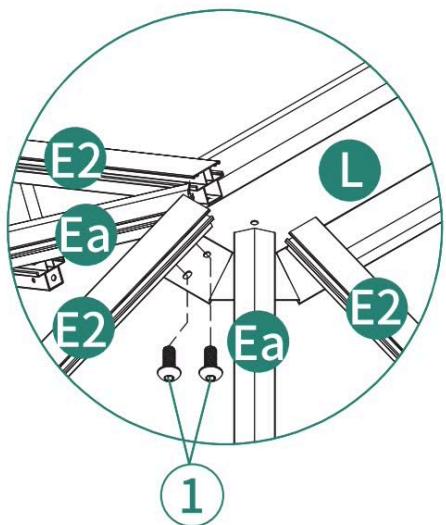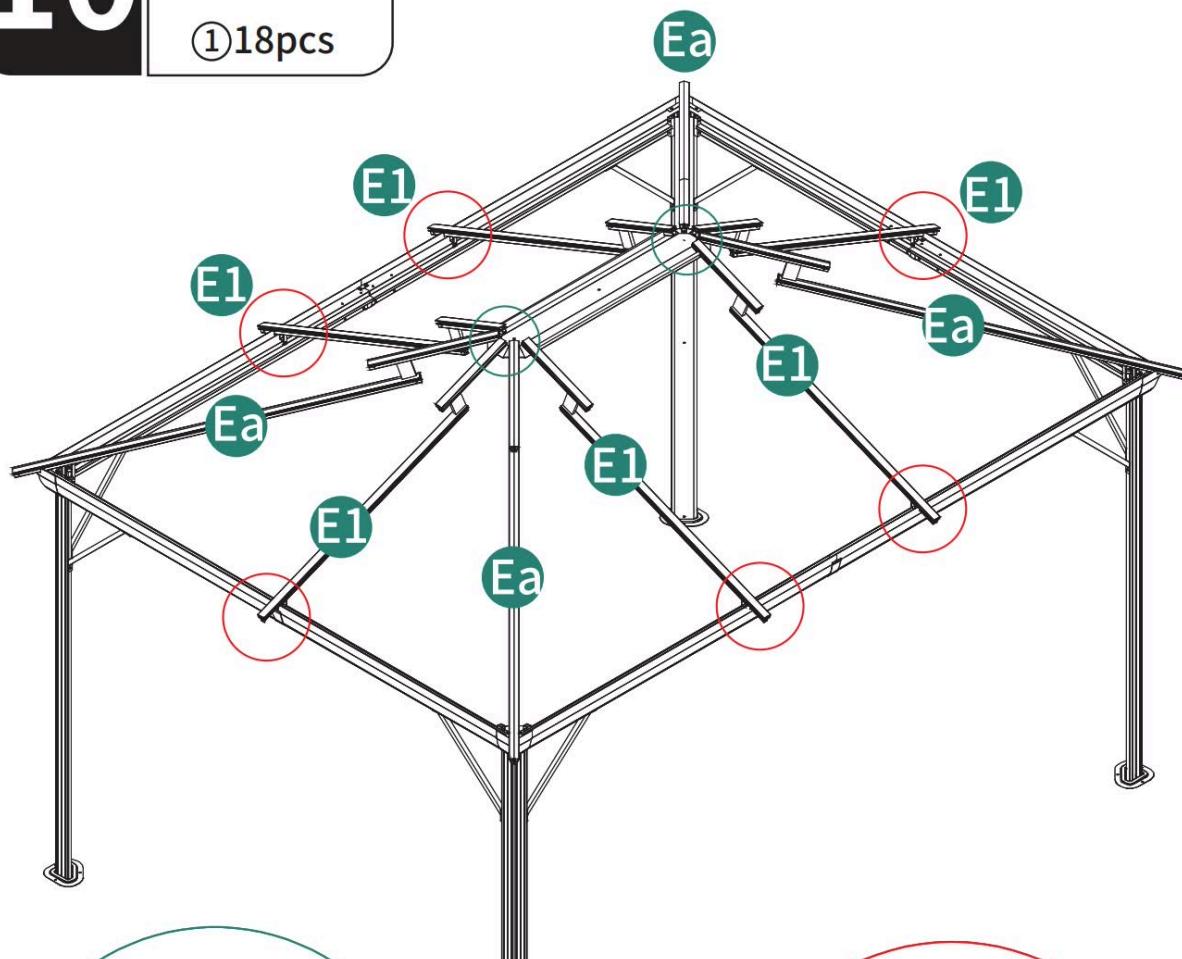



## ASSEMBLY INSTRUCTIONS

**11**

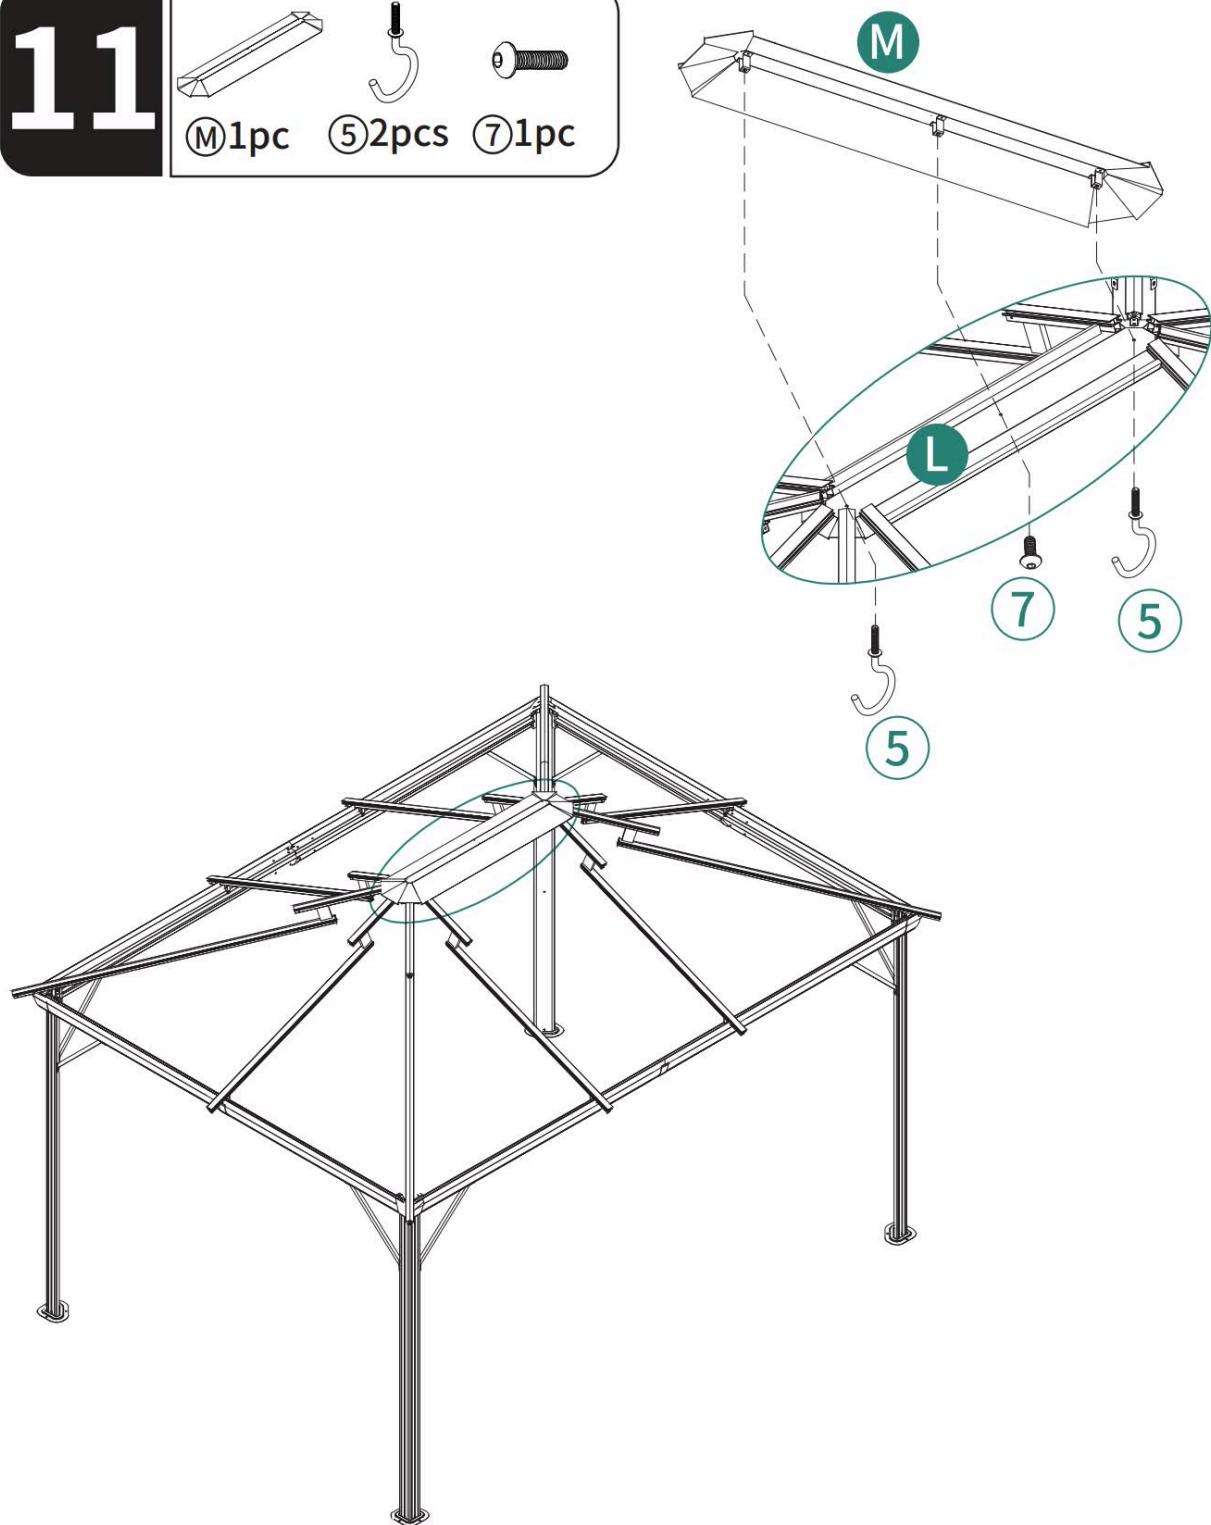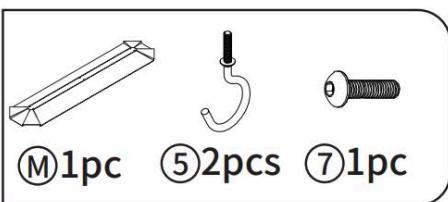




## ASSEMBLY INSTRUCTIONS

**12**

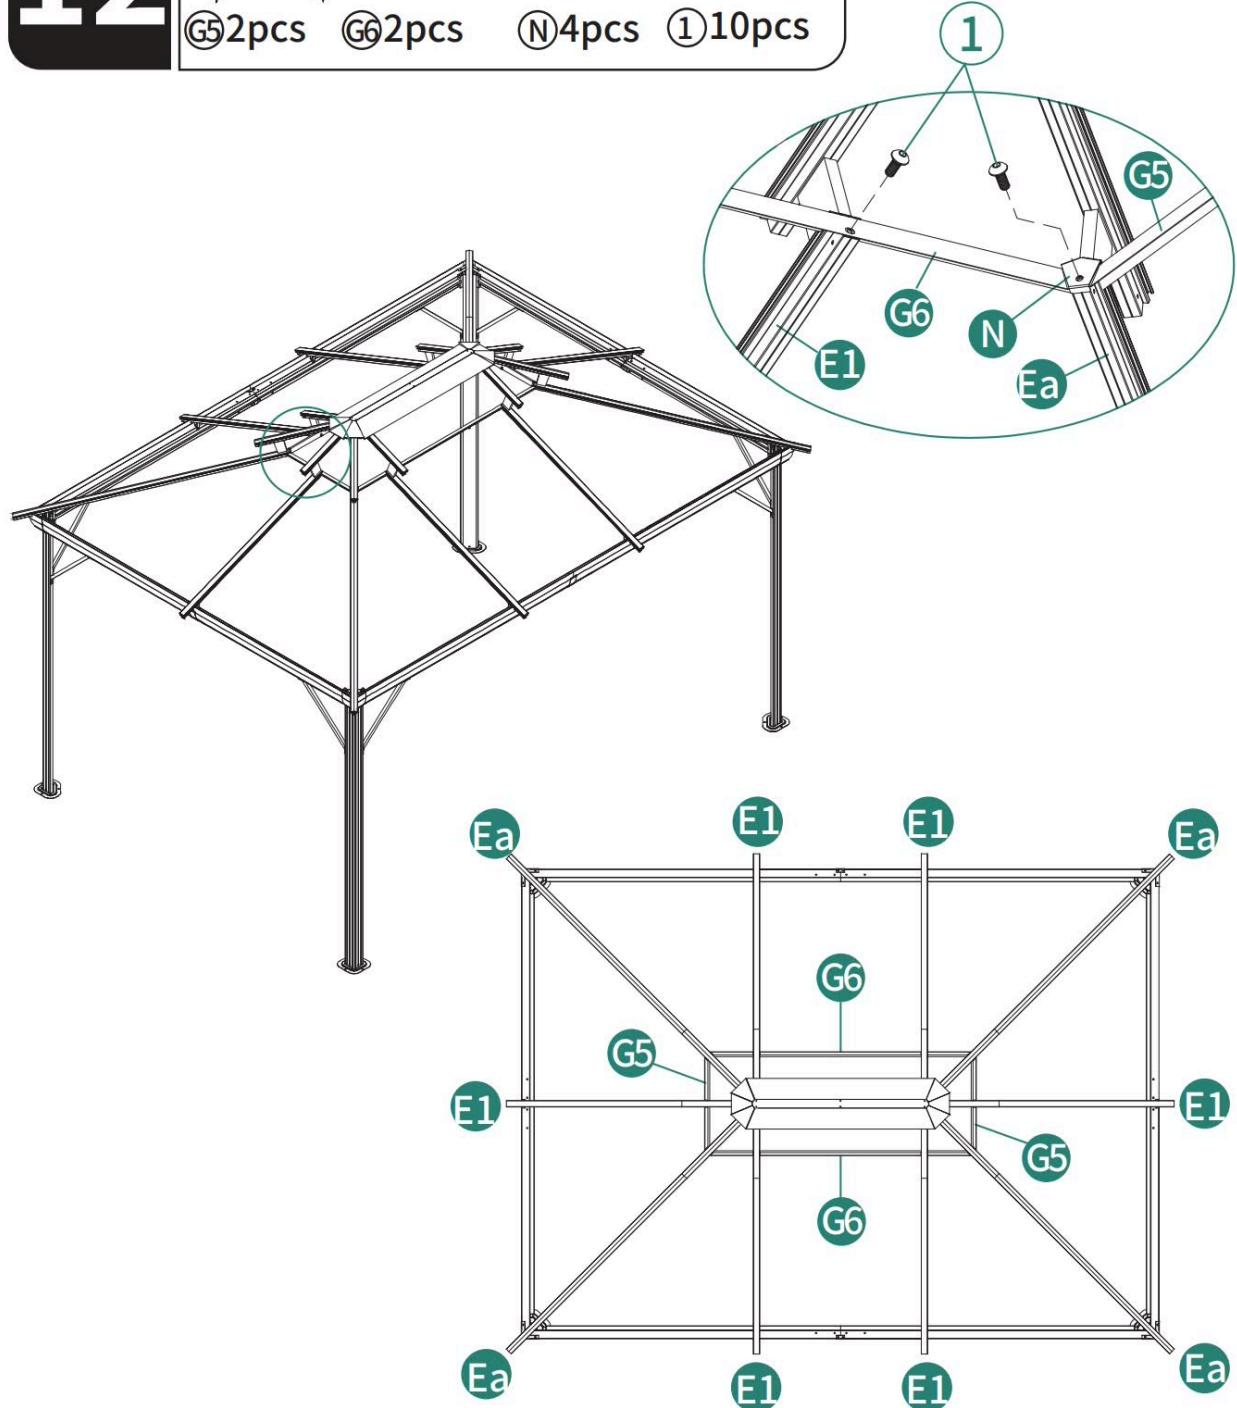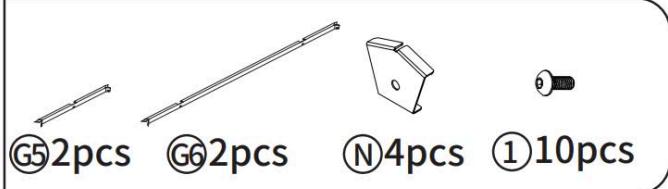

## ASSEMBLY INSTRUCTIONS






13

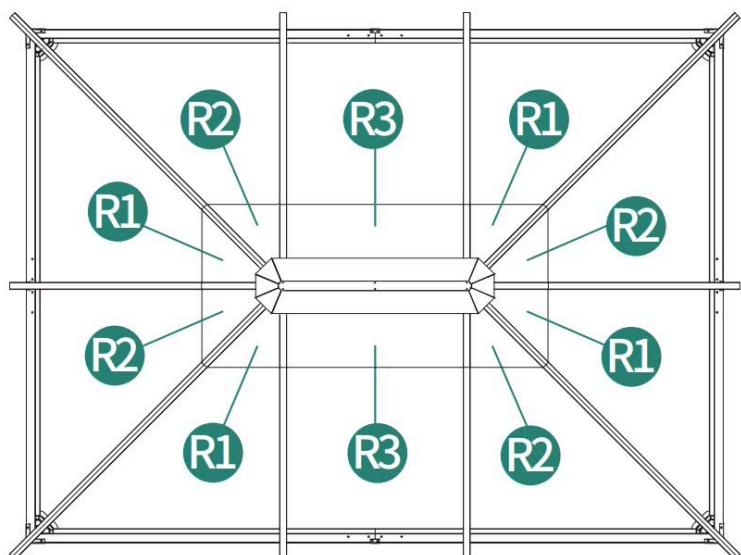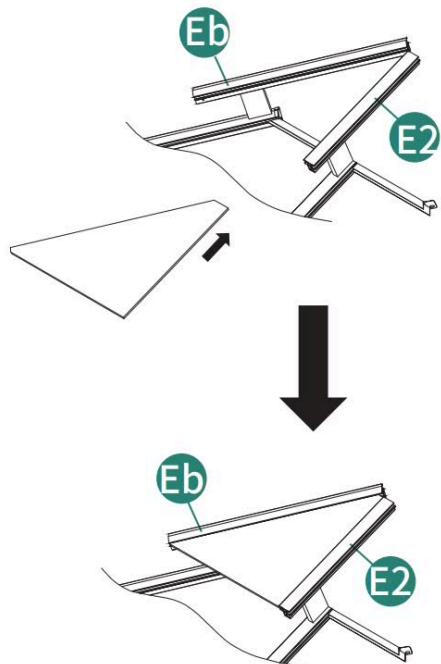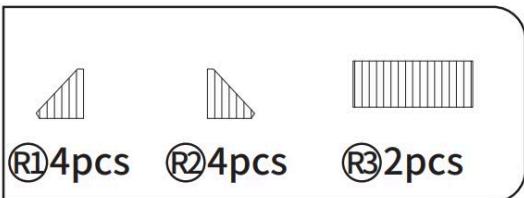

Before installing Parts R1/R2/R3, remove protective films (with side marks) on both the front and back sides. After removal, there will be no mark and minimal difference between the sides. Therefore, pay close attention to directions before removal.



## ASSEMBLY INSTRUCTIONS

**14**

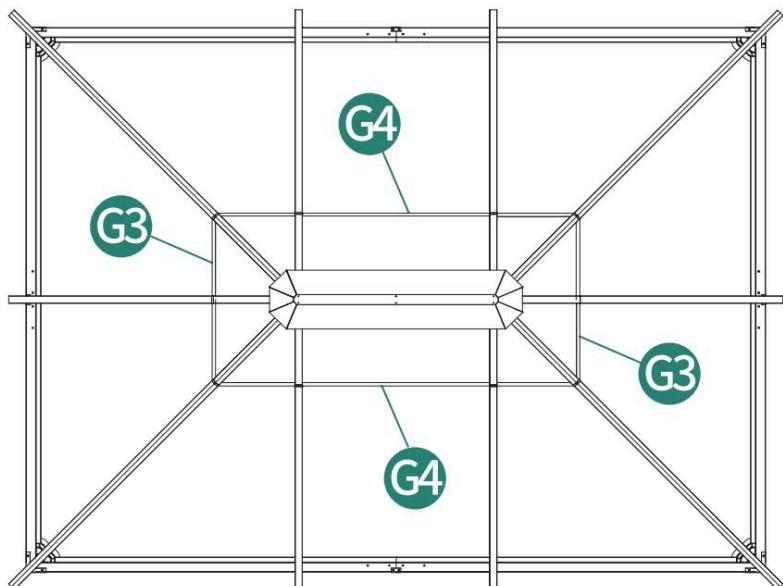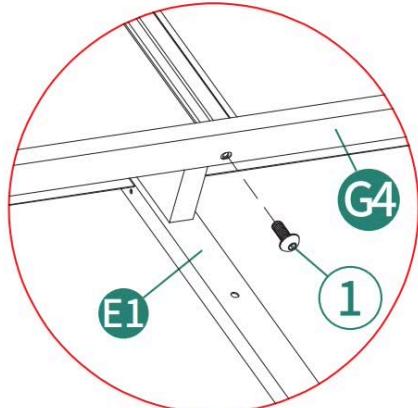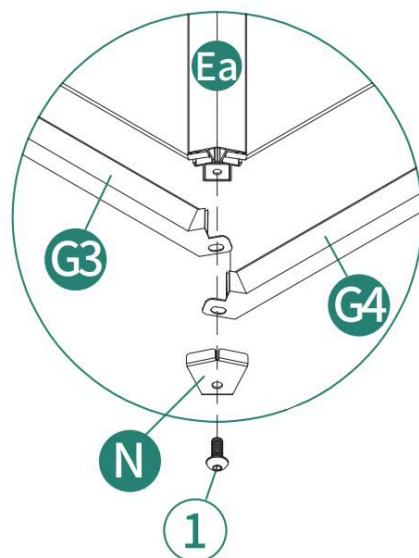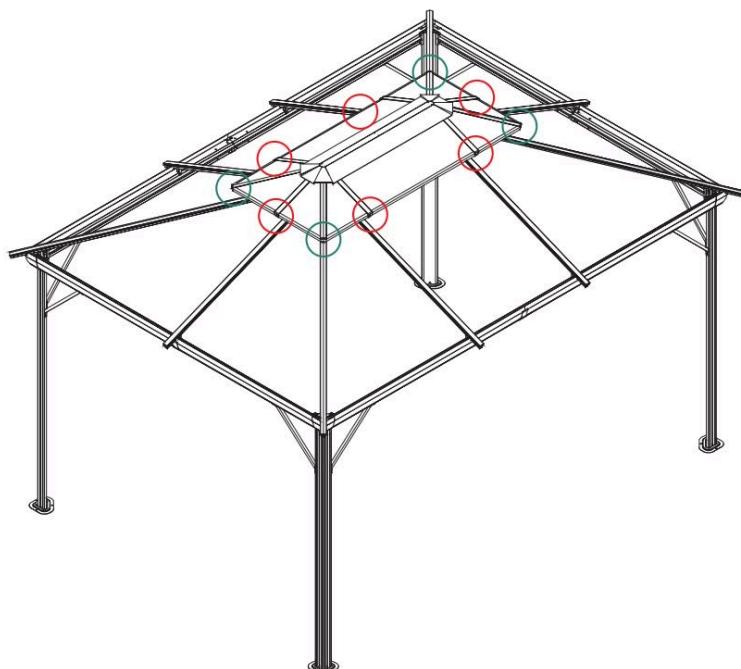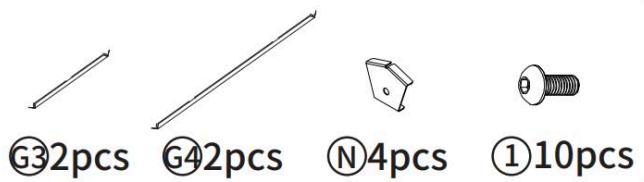



## ASSEMBLY INSTRUCTIONS

**15**

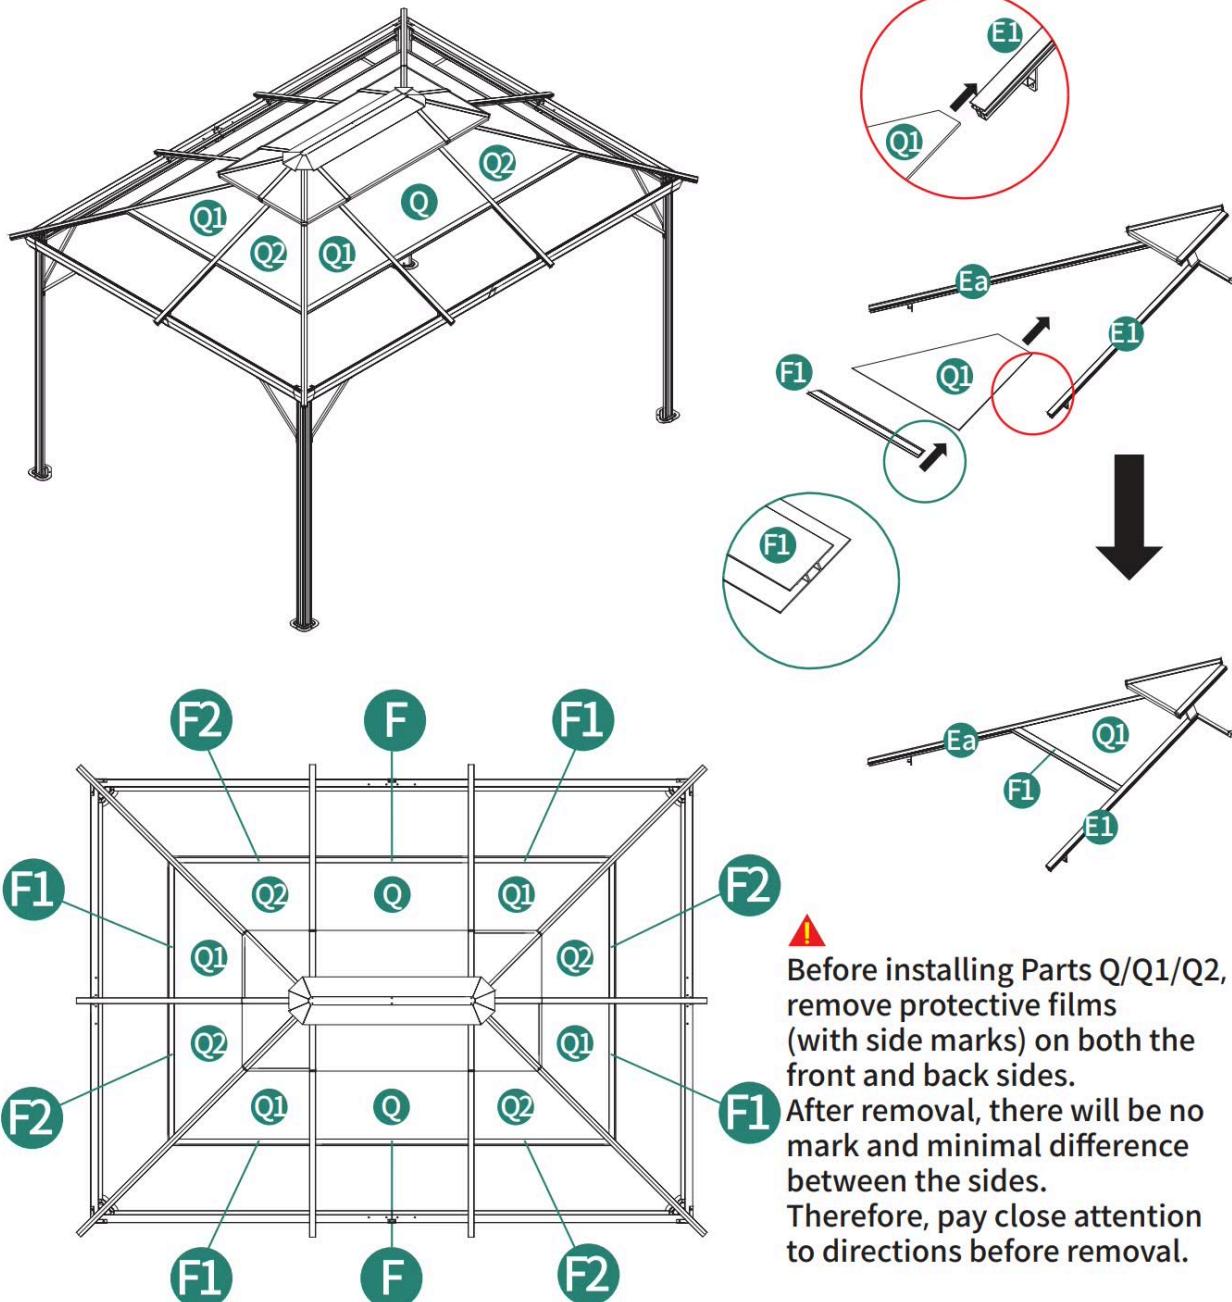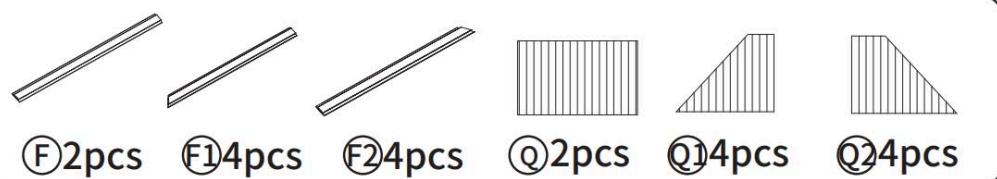

## ASSEMBLY INSTRUCTIONS




**16**

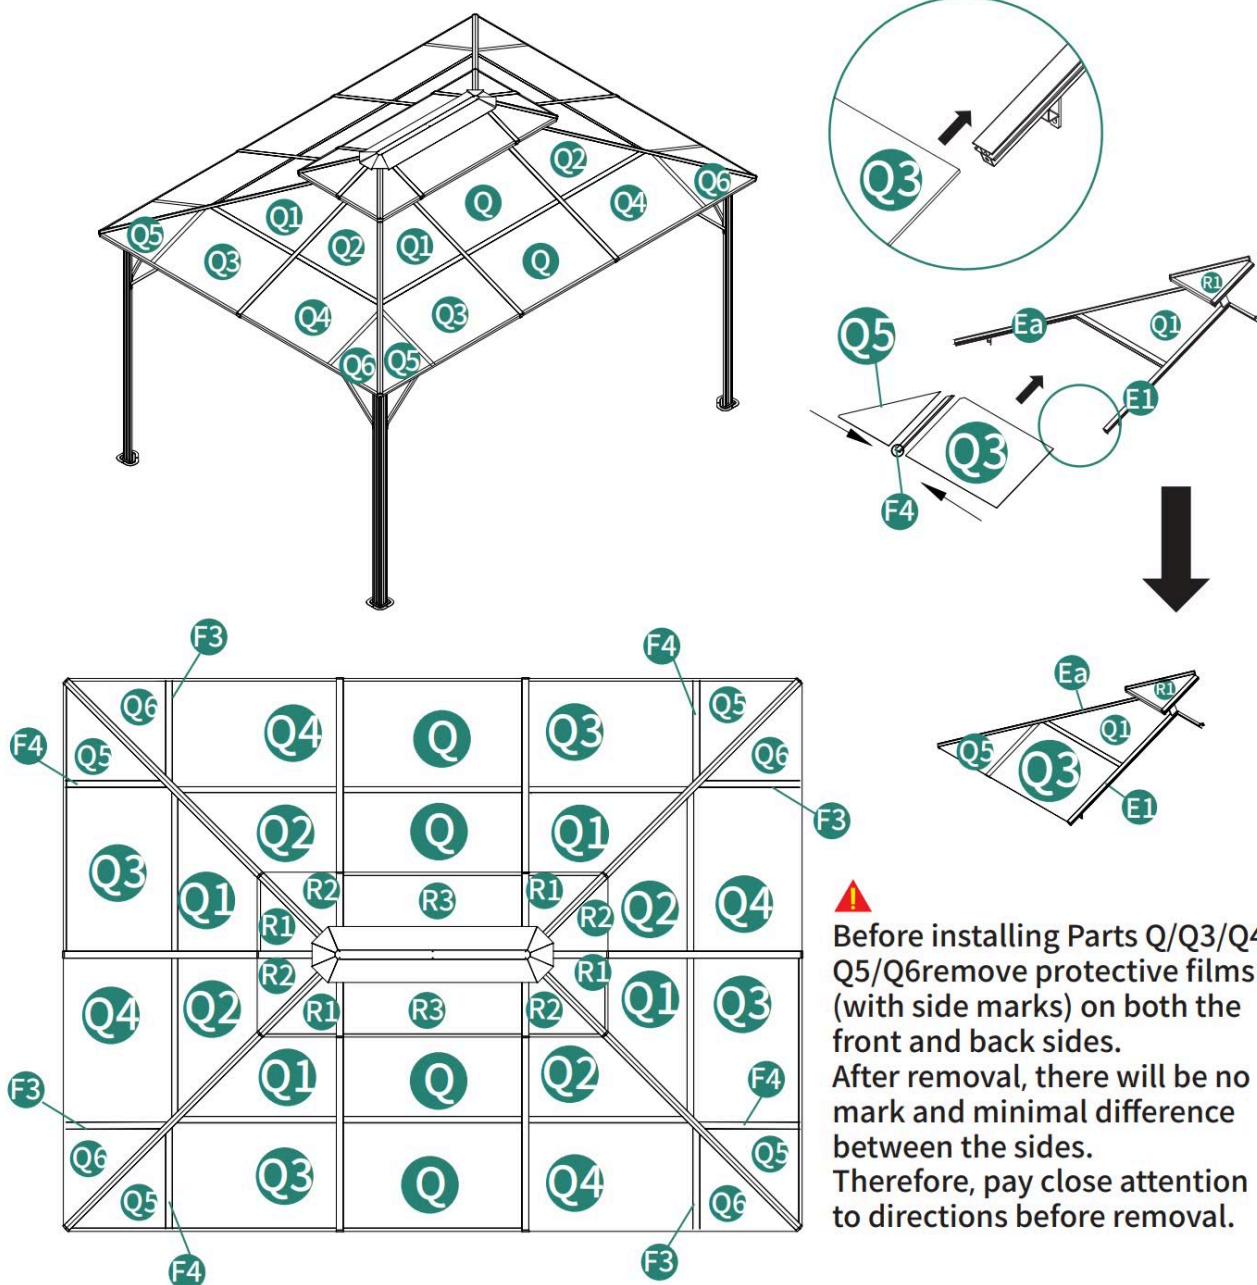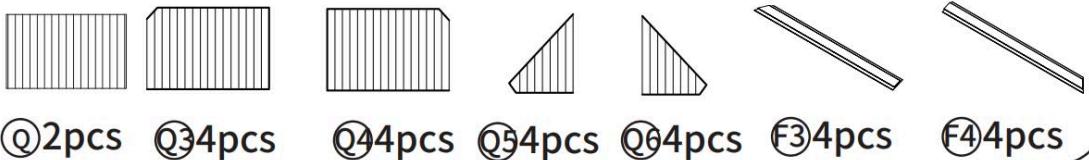

## ASSEMBLY INSTRUCTIONS




17

- (G) 2pcs
- (G1) 4pcs
- (G2) 4pcs
- (N) 4pcs
- (N1) 6pcs
- (1) 10pcs

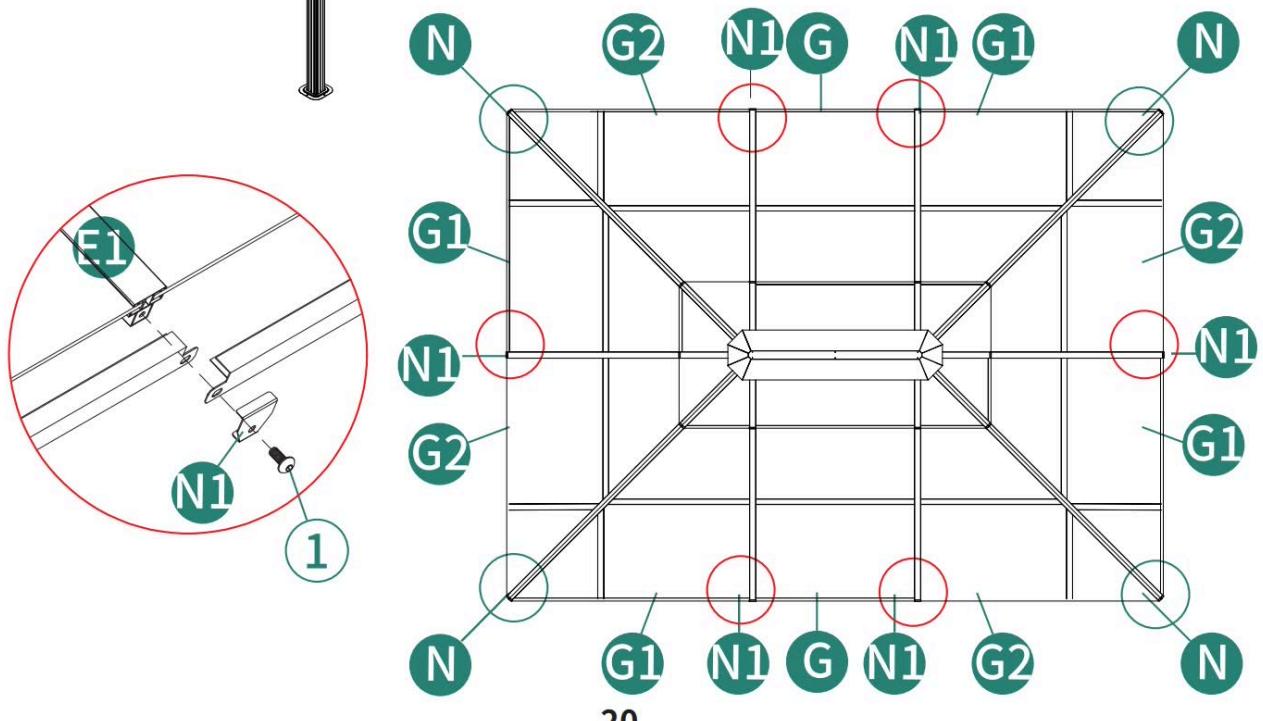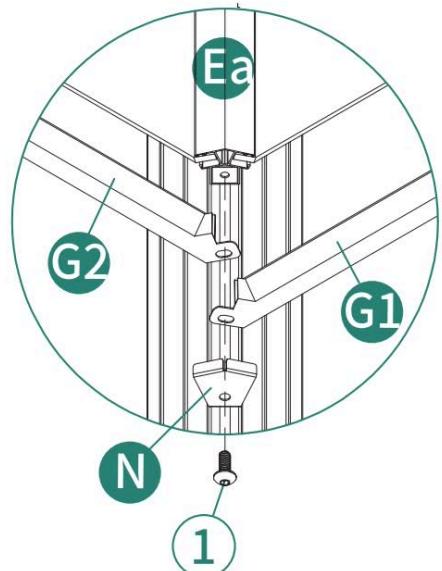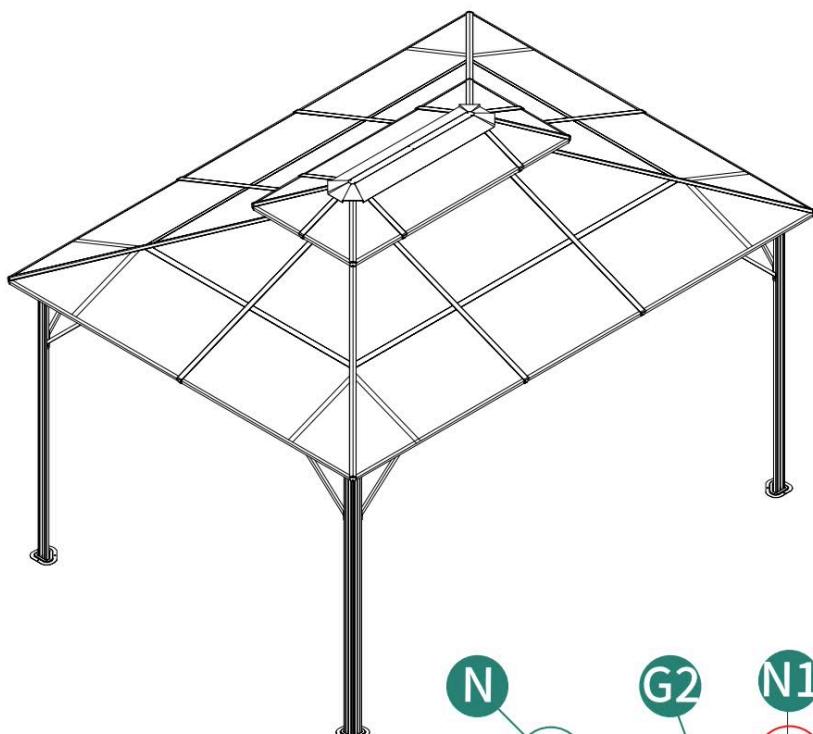


## ASSEMBLY INSTRUCTIONS

18

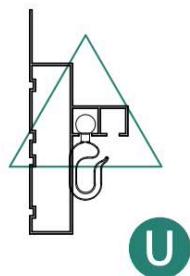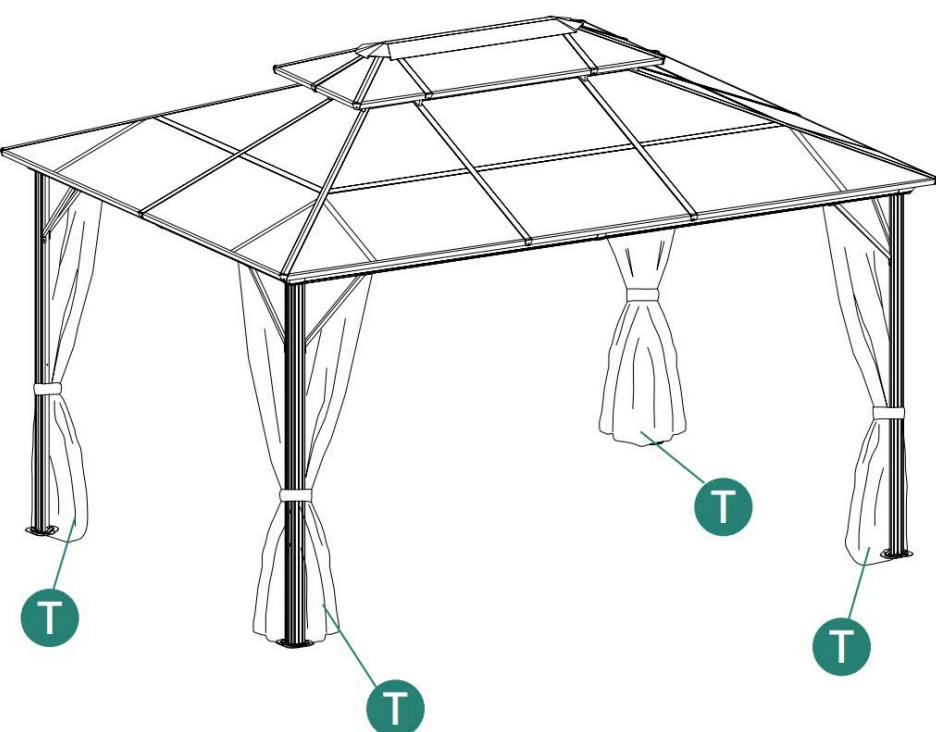


Pay attention to the sidewall curtain's installation position.


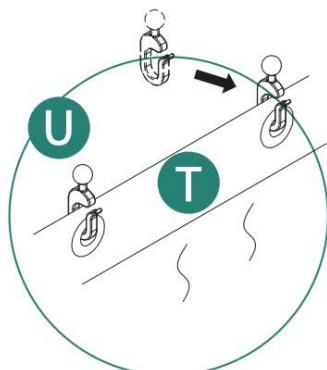


# ASSEMBLY INSTRUCTIONS


19





⑤ 4pcs

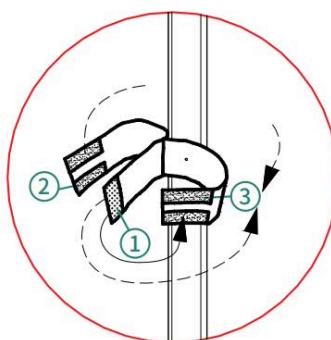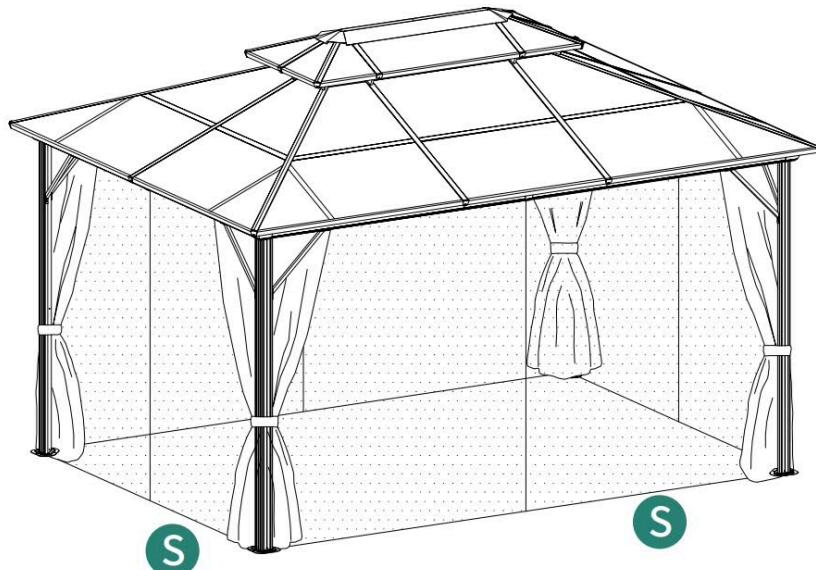

Note:  
Attach 1 to 2 to secure parts S (netting) and T (curtains) together.  
Attach 1 to 3 to secure the back curtain (T).  
Attach 1 to 3 to secure the front netting (S).

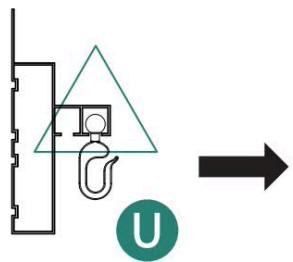

Pay attention to the sidewall netting's installation position.

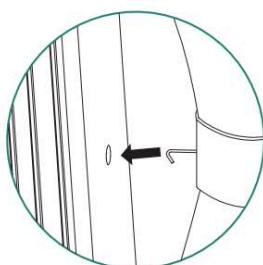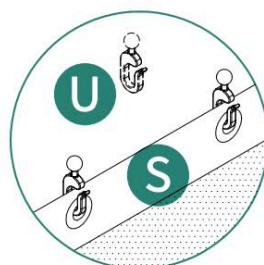


Hang the hook attached to the netting on Part A.

## ASSEMBLY INSTRUCTIONS



20



⑧12pcs

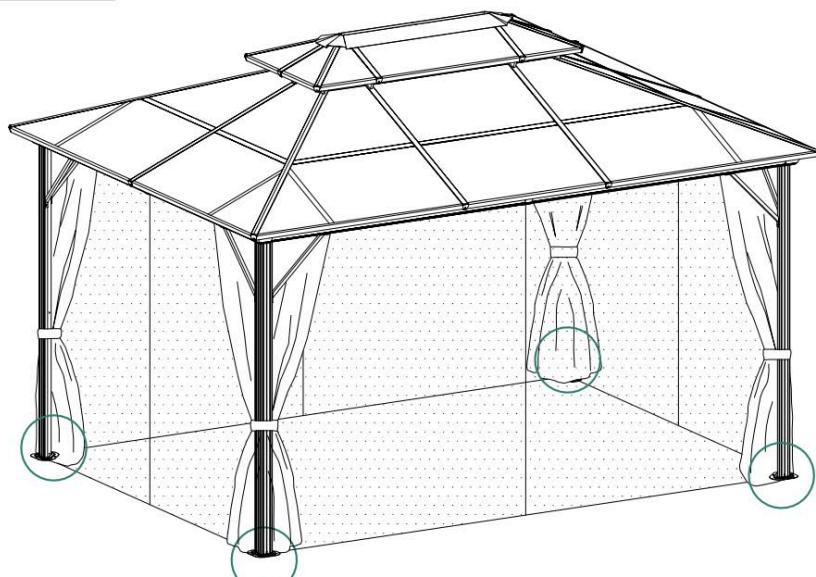

Installation Completed

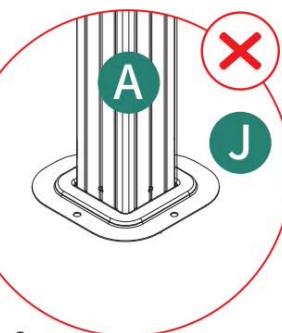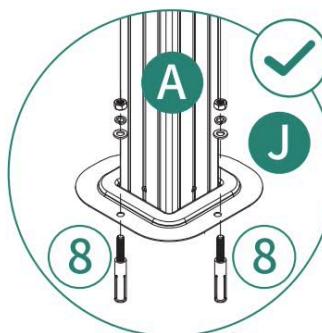

Cement surfaces



To improve wind resistance,  
**be sure to complete this installation  
step. If expansion screws or ground  
nails are not installed, strong winds  
may topple the gazebo.**

Expansion screws are essential for  
stability on cement surfaces,  
All are included in the accessories  
package.