


Hall IC to LB&RB

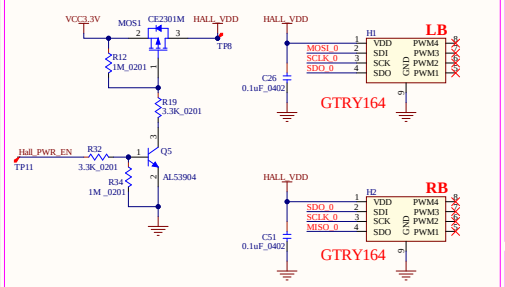


SIDE KEY IO资源不足，Side Key停用

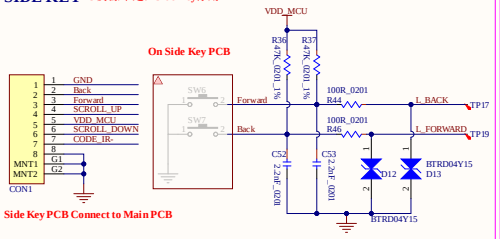


DPI SWITCH

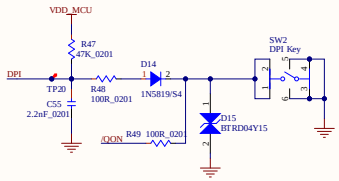

INDICATOR LED DRIVE

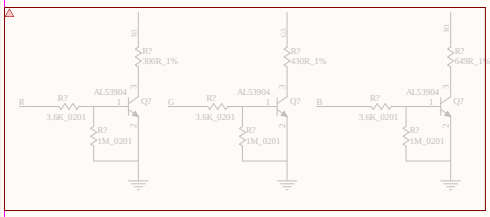


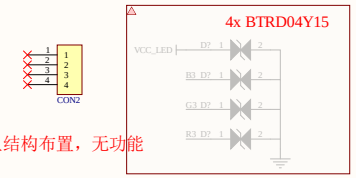

仅用于确认结构布置，无功能


L/R Level SLIDE SW

仅用于确认结构布置，无功能




Optical Encoder


Optical Encoder自带FPC连接线，直接接在Side Key PCB的连接器上，再从Side Key PCB一起连到Main PCB

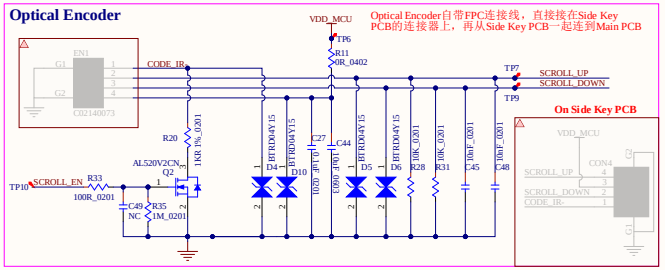


Sensor

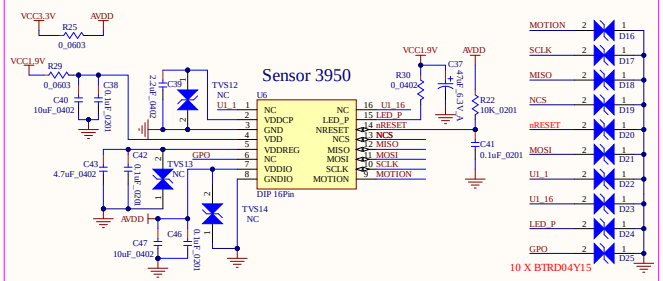


MCU

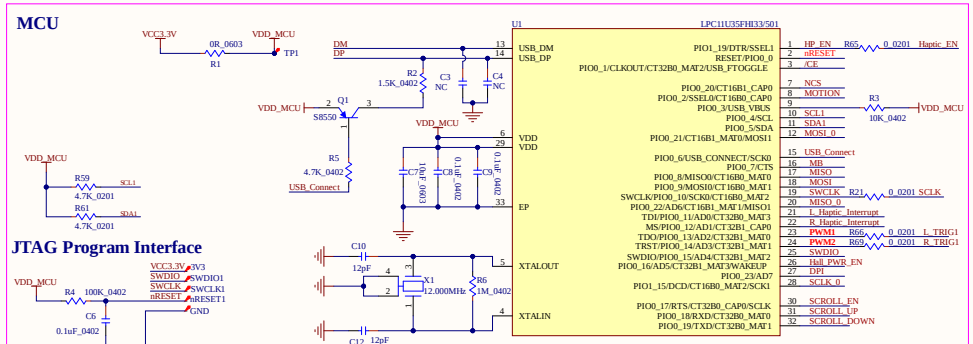

JTAG Program Interface

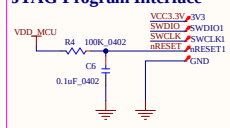


MB

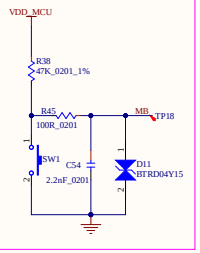


LB&RB Haptics Driver Option 1 分立方案

Option 1和Option 2
两种方案使用其中一个

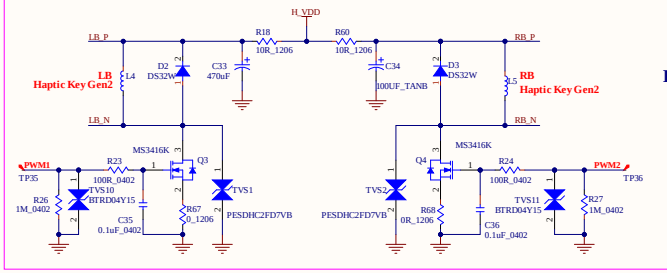


Haptic BOOST 7V

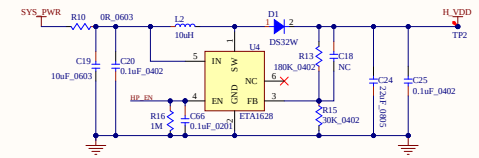


LB&RB Haptics Driver Option 2 LRA Driver IC方案

布局时，LRA Driver IC位置应尽可能靠近对应的按键

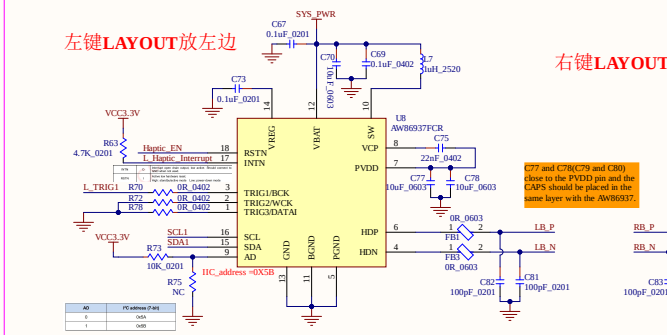


Title: GT_Lina T1A hall haptic_G2_V0.1.PrjPcb			SHENZHEN GOODIX TECHNOLOGY LTD. No.8, Jinyuan 1st road, High-tech Zone, Zhuhai, Guangdong, China
Size: A2	Number: XXXXXXXX	Revision: V0.1	
Date: 2026/10/9	Time: 8:31:15	Sheet 1 of 1	
Drawn BY: Zero	Checked BY: Henry.chen	Approved BY: James.tian	


USB_INPUT

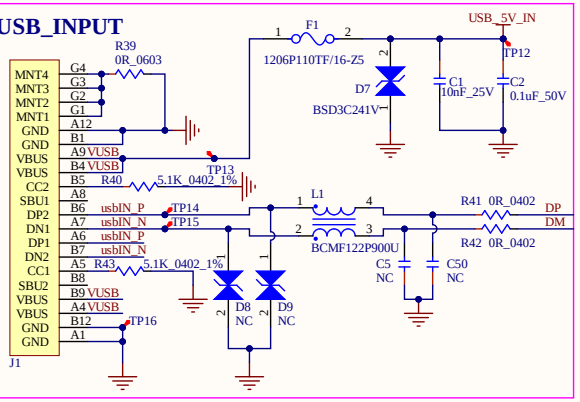

OVP/OCP

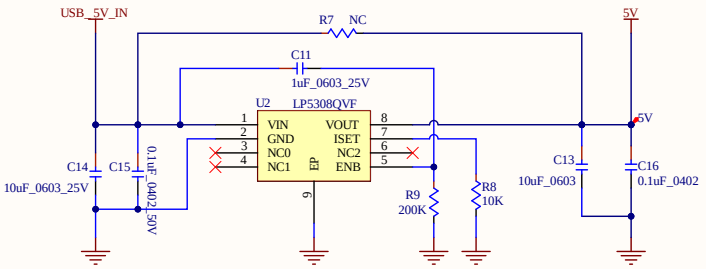


Power ON/OFF

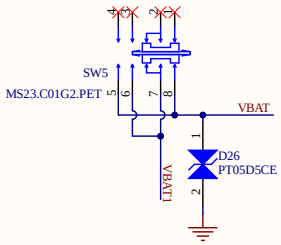


Charger

Placement of C8 & C4 have to exactly same position in top and bottom layer

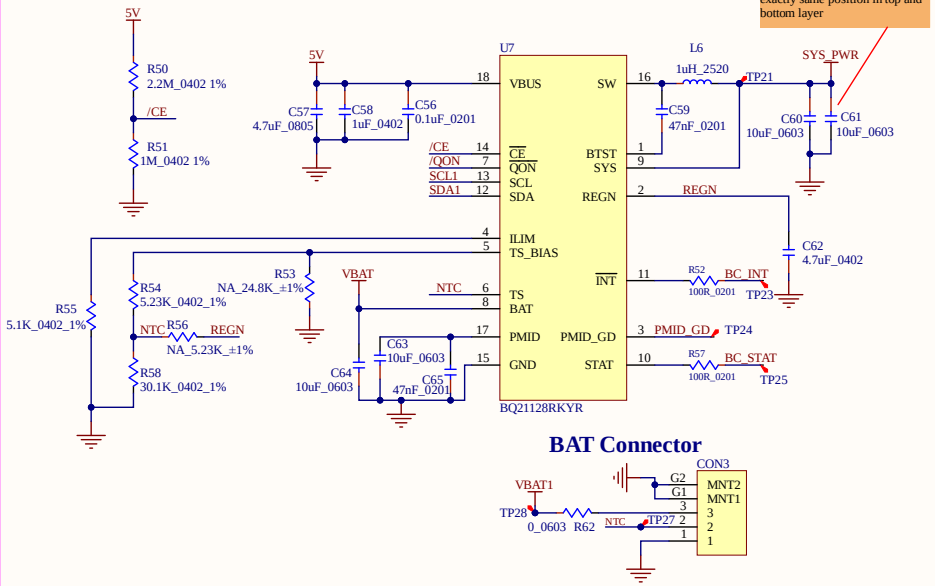


BAT Connector


DC-DC 1.9V

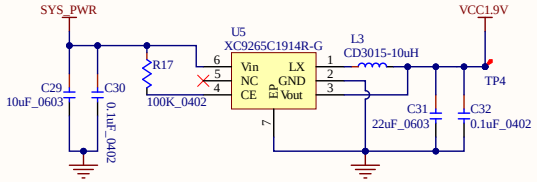

DC-DC 3.3V

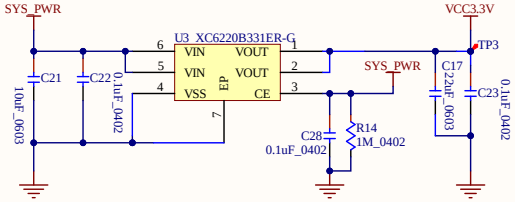

Optical Mark Point

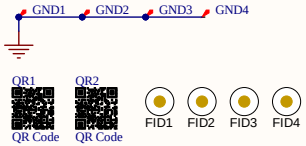

Title: GT_Lina T1A hall haptic_G2_V0.1.PrjPcb			TECH TECHNOLOGY LTD. No.8, Jinyuan 1st road, High-tech Zone, Zhuhai, Guangdong, China
Size: A3	Number: 2	Revision: V01	
Date: 2026/10/9	Time: 8:31:15	Sheet 2 of 3	
Drawn BY: Jinming.Luo	Checked BY: Henry.Chen	Approved BY: James.Tian	