

Document Title	Glossary
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	055
Document Classification	Auxiliary

Document Status	Final
Part of AUTOSAR Release	4.2.2

Document Change History			
Release			
4.2.2	AUTOSAR Release Management	Following terms changed:ECU Abstraction Layer (3.74)	
		 Standardized AUTOSAR Interface (3.224) Following terms removed: Software Module 	
4.2.1	AUTOSAR Release Management	 Following terms changed: Data Variant Coding (3.65) OS-Application (3.168) Post-build time configuration (3.179) Standardized AUTOSAR Interface (3.224) 	
4.1.3	AUTOSAR Release Management	 Extended Abbreviations (0) Following terms changed: Software Component (SW-C) (3.217) 	
4.1.1	AUTOSAR Administration	 Extended Abbreviations (0) Following terms added: Application Interface (3.4) Asynchronous Functions (3.13) AUTOSAR Application Interface (3.17) Dynamic PDU (3.70) Life Cycle (3.150) MetaDataLength (3.156) PDU MetaData (3.173) Pretended Networking (3.181) Synchronous Functions (3.231) 	
4.0.3	AUTOSAR Administration	 Extended Abbreviations (0) Following terms added: Callback (3.38) Callout (3.39) ECU (3.73) 	
4.0.1	AUTOSAR Administration	 Following terms added: AUTOSAR Partial Model (3.24) Bus Wake-Up (3.36) Empty Function (3.79) 	
3.1.4	AUTOSAR Administration	Following terms added:Automotive Safety Integrity Levels (ASIL) (3.16)	



Document Change History		
Release	Changed by	Change Description
	gear ay	Bit Position (3.33)
		Category 1 Interrupt (3.41)
		Category 2 Interrupt (3.42)
		Code Generator (3.48)
		Coordinate (3.61)
		• E2E Profile (3.72)
		Error Detection Rate (3.82)
		Failure Rate (3.91)
		ICC1 (Implementation Conformance Class 1)
		(3.134)
		ICC2 (Implementation Conformance Class 2) (3.135)
		ICC3 (Implementation Conformance Class 3)
		(3.136)
		Interrupt Frames (3.143)
		Interrupt Handler (3.144)
		Interrupt Logic (3.145)
		Meta Model (3.154)
		Mode (3.159)
		Model (3.160)
		Network Interface (NWI) (3.164)
		NM Coordination Cluster (3.165)
		NM Coordinator (3.166)
		Rate Conversion (3.187)
		Residual Error Rate (3.193)
		• SAE J1939 (3.201)
		Safety Protocol (3.203)
		Software Component Interface (SW-CI) (3.218)
		Synchronize (3.229)
		Variability (3.242)
		• Variant (3.243)
		Variation Binding (3.245)
		Variation Binding Time (3.246)
		 Variation Definition Time (3.247)
		Variation Point (3.248)
		Formal adaptations
		Legal disclaimer revised
3.1.1	AUTOSAR Administration	Legal disclaimer revised
3.0.1	AUTOSAR	Following terms added:
	Administration	Debugging (3.67)
		Implementation Conformance Statement (3.137)
		Document meta information extended
		Small layout adaptations made
2.1.15	AUTOSAR	"Advice for users" revised



Document Change History		
Release	Changed by	Change Description
	Administration	"Revision Information" added
2.1.14	AUTOSAR Administration	Following terms added: FlexRay (3.100) Vendor ID (3.249) Callback (3.38) Interrupt frames (3.143) Interrupt vector table(3.147) Accreditation (3.1) Accreditation Body (3.2) Conformance Test Agency (3.57) Assessment (3.10) Surveillance (3.228) Attestation (3.14) (Conformance) Declaration (3.68) First party and (3.97) Third party (3.238) Safety (3.202) ECU Configuration (3.75) ECU Configuration Description (3.76) Legal disclaimer revised
2.0	AUTOSAR Administration	 removed and added some terms rework of several descriptions and some formal changes
1.0	AUTOSAR Administration	Initial Release



Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



Table of Contents

0	Abb	previations	11
1	Intro	oduction	15
2	Hov	v to read this document	16
	2.1	<definition></definition>	16
3	Def	initions	17
	3.1	Accreditation	17
	3.2	Accreditation Body	17
	3.3	Application	
	3.4	Application Interface	
	3.5	Application Programming Interface (API)	
	3.6	Application Software Component	
	3.7	Architecture	
	3.8 3.9	Artifact	
	3.10	Assessment	
	3.10	Asset	
	3.12	Asynchronous Communication	
	3.13	Asynchronous Function	
	3.14	Attestation	
	3.15	Atomic Software Component	
	3.16	Automotive Safety Integrity Levels (ASIL)	20
	3.17	AUTOSAR Application Interface	20
	3.18	AUTOSAR Authoring Tool	21
	3.19	AUTOSAR Converter Tool	21
	3.20	AUTOSAR Definition	
	3.21	AUTOSAR Interface	
	3.22	AUTOSAR Metamodel	
	3.23	AUTOSAR Model	
	3.24	AUTOSAR Partial Model	
	3.25	AUTOSAR Processor Tool	
	3.26	AUTOSAR Service	
	3.27 3.28	AUTOSAR ToolAUTOSAR XML description	
	3.29	AUTOSAR XML description	
	3.30	Availability	
	3.31	Basic Software (BSW)	
	3.32	Basic Software Module	
	3.33	Bit Position	
	3.34	Blueprint	
	3.35	Bulk Data	
	3.36	Bus Wake-Up	
	3.37	Calibration	26
	3.38	Callback	
	3.39	Callout	
	3.40	Call Point	27



3.41	Category 1 Interrupt	27
3.42	Category 2 Interrupt	27
3.43	Causality of Transmission	28
3.44	Client	28
3.45	Client-Server Communication	28
3.46	Client-Server Interface	
3.47	Cluster Signal	
3.48	Code Generator	
3.49	Code Variant Coding	
3.50	Communication Attribute	
3.51	Complex Driver (CDD)	
3.52	Composition	
3.53	Compositionality	
3.54	Conditioned Signal	
3.55	Configuration	
3.56	Confirmation	
3.57	Conformance Test Agency (CTA)	
3.58	Conformance Test Suite (CTS)	
3.59	Connector	
3.60	Control Flow	_
3.61	Coordinate	
3.62	Data	
3.63	Data Element	
3.64	Data Flow	
3.65	Data Variant Coding	
3.66	Deadline	
3.67	Debugging	
3.68	(Conformance) Declaration	
3.69	Dependability	
3.70	Dynamic PDU	
3.71	Dynamic Routing	
3.72	E2E Profile	
3.73	ECU	
3.74	ECU Abstraction Layer	
3.75	ECU Configuration	
3.76	ECU Configuration Description	
3.77	Electronic Control Unit (ECU)	
3.78	Electrical Signal	
3.79	Empty Function	
3.80	Entry Point	
3.81	Error	
3.82	Error Detection Rate	
3.83	Event	
3.84	Execution Time	
3.85	Exit Point	
3.86	Fail-degraded	
3.87	Fail-operational	
3.88	Fail-safe	
3.89	Fail-silent	
3.90	Failure	40



3.91	Failure Rate	. 40
3.92	Fault	. 40
3.93	Fault Detection	. 40
3.94	Fault Reaction	
3.95	Fault Tolerance	. 41
3.96	Feature	. 41
3.97	First party	. 42
3.98	Flag	. 42
3.99	FlexRay Base Cycle	. 42
3.100	FlexRay Bus	. 42
3.101	FlexRay Cell	. 43
3.102	FlexRay Channel	. 43
3.103	FlexRay Cluster	. 43
3.104	FlexRay Cycle	. 44
3.105	FlexRay Cycle Number	. 44
3.106	FlexRay Cycle Offset	. 44
3.107	FlexRay Cycle Repetition	. 45
3.108	FlexRay Frame	
3.109	FlexRay Global Time	. 45
3.110	FlexRay L-PDU	
3.111	FlexRay L-PDU-Identifier	
3.112	FlexRay L-SDU-Identifier	
3.113	FlexRay Matrix	
3.114	FlexRay Network	
3.115	FlexRay Node	
3.116	FlexRay Physical Communication Link	
3.117	FlexRay Slot	
3.118	FlexRay Slot Multiplexing	
3.119	FlexRay Slot Number	
3.120	FlexRay Star	
3.121	Frame	
3.122	Frame PDU	
3.123	Function	
3.124	Functional Network	
3.125	Functional Unit	
3.126	Functionality	
3.127	Gateway	
3.128	Gateway ECU	
3.129	Hardware Connection	
3.130	Hardware Element	
3.131	Hardware Interrupt	
3.132	Hardware Port	
3.133	I-PDU	
3.134	ICC1 (Implementation Conformance Class 1)	
3.135	ICC2 (Implementation Conformance Class 2)	
3.136	ICC3 (Implementation Conformance Class 3)	
3.137	Implementation Conformance Statement	
3.138	Indication	
3.139	Integration	
3.140	Integration Code	



3.141	Interface	57
3.142	Interrupt	57
3.143	Interrupt Frames	58
3.144	Interrupt Handler	58
3.145	Interrupt Logic	58
3.146	Interrupt Service Routine (ISR)	58
3.147	Interrupt Vector Table	
3.148	Invalid Flag	
3.149	Invalid Value of Signal	
3.150	Life Cycle	
3.151	Link time configuration	
3.152	Mapping	
3.153	MCAL Signal	
3.154	Meta Model	
3.155	Metadata	
3.156	MetaDataLength	
3.157	Microcontroller Abstraction Layer (MCAL)	
3.158	Mistake	
3.159	Mode	
3.160	Model	
3.161	Multimedia Stream	
3.162	Multiple Configuration Sets	
3.163	Multiplexed PDU	
3.164	Network Interface (NWI)	
3.165	NM Coordination Cluster	
3.166	NM Coordinator	
3.167	Notification	
3.168	OS-Application	
3.169	Partial Model	
3.170	Partitioning	
3.171	PCI	
3.172	PDU	
3.173	PDU MetaData	
3.174	PDU Timeout	
3.175	Peripheral Hardware	
3.176	Personalization	
3.177	Port	
3.178	Port Interface	
3.179	Post-build time configuration	
3.180	Pre-Compile time configuration	
3.181	Pretended Networking	
3.182	Private Interface (API 3)	69
3.183	Probability of failure	
3.184	Procedure Call	
3.185	Process	
3.186	Provide Port	
3.187	Rate Conversion	
3.188	Redundancy	
3.189	Reliability	
3.190	Relocatability	
J. 1 JU	· voiceatability	1



3.191	Require Port	
3.192	Required property	71
3.193	Residual Error Rate	71
3.194	Resource	
3.195	Resource-Management	72
3.196	Response Time	
3.197	Risk	72
3.198	Robustness	73
3.199	RTE Event	73
3.200	Runnable Entity	73
3.201	SAE J1939	
3.202	Safety	74
3.203	Safety Protocol	
3.204	Sample Application	
3.205	Scalability	
3.206	Scheduler	
3.207	SDU	
3.208	Security	
3.209	Sender-Receiver Communication	
3.210	Sender-Receiver Interface	
3.211	Sensor/Actuator SW-Component	
3.212	Server	
3.213	Service	
3.214	Service Port	
3.215	Services Layer	
3.216	Shipping	
3.217	Software Component (SW-C)	
3.218	Software Component Interface (SW-CI)	
3.219	Software Configuration	
3.220	Software Interrupt	
3.221	Software Signal	
3.222		
3.222	Special Periphery Access	
	Standard Periphery Access	79
3.224 3.225		
_	Standard Software	
3.226	Standard Software	
3.227	Static Configuration	
3.228	Surveillance	
3.229	Synchronize	
3.230	Synchronous Communication	
3.231	Synchronous Function	
3.232	System	
3.233	System Constraint	
3.234	System Signal	
3.235	Task	
3.236	Technical Signal	
3.237	Template	
3.238	Third party	
3.239	Timeout	
3.240	Use Case	83





3.241	Validation	83
3.242	Variability	84
3.243	Variant	84
3.244	Variant Coding	84
3.245	Variation Binding	
3.246	Variation Binding Time	85
3.247	Variation Definition Time	85
3.248	Variation Point	85
3.249	Vendor ID	
3.250	Verification	86
3.251	VFB View	86
3.252	Virtual Functional Bus (VFB)	86
3.253	Virtual Integration	
3.254	Worst Case Execution Time	
3.255	Worst Case Response Time	87
Anney 1: I	iterature	88



0 Abbreviations

Abbreviation	Description
ADC	Analog Digital Converter
AMM	Application Mode Management
API	Application Programming Interface
ARP	Address Resolution Protocol
ASAM	Association for Standardization of Automation and Measuring systems
ASIL	Automotive Safety Integrity Levels
ASW	Application SoftWare
AUTOSAR	AUTomotive Open System Architecture
BFx	Bitfield functions for fixed point
BSW	Basic SoftWare
BSWM	Basic SoftWare Mode manager
BSWMD	Basic SoftWare Module Description
CAN	Controller Area Network
CDD	Complex Driver
СОМ	Communication
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
СТА	Conformance Test Agency
CTS	Conformance Test Suite
DAC	Digital to Analog Converter
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DHCP	Dynamic Host Configuration Protocol
DIO	Digital Input/Output
DLC	Data Length Code
DoIP	Diagnostics over Internet Protocol
DTD	Document Type Definition
E2E	End to End
ECU	Electronic Control Unit
EEPROM	Electrically Erasable Programmable Read-Only Memory
EFx	Extended Mathematical library – Fixed point



FIFO	First In First Out
FPU	Floating Point Unit
FW	Fire Wire
GPT	General Purpose Timer
GSM	Global System for Mobile Communication
HIS	Hersteller Initiative Software
HW	Hardware
I-PDU	Interaction Layer Protocol Data Unit
ICC	Implementation Conformance Class
ICMP	Internet Control Message Protocol
ICOM	Intelligent COMmunication controller
ICU	Input Capture Unit
IEC	International Electrotechnical Commission
IFI	Interpolation Floating point
IFx	Interpolation Fixed point
Ю	Input/ Output
ISR	Interrupt Service Routine
L-PDU	Protocol Data Unit of the data Link layer
L-SDU	SDU of the data Link layer
LIFO	Last In First Out
LIN	Local Interconnected Network
LSB	Least Significant Bit
μC	MicroController
MCAL	MicroController Abstraction Layer
MCU	Micro Controller Unit
MFI	Mathematical Floating point
MFx	Math – Fixed Point
MIPS	Million Instructions Per Second
MMU	Memory Management Unit
ММІ	Man Machine Interface
MOST	Media Oriented Systems Transport
μΡ	MicroProcessor
MPU	Memory Protection Unit
	Most Significant Bit



N-PDU	Protocol Data Unit of the Network layer (transport protocols)
N-SDU	SDU of the Network layer (transport protocols)
NVRAM	Non-Volatile Random Access Memory
OEM	Original Equipment Manufacturer
OIL	OSEK Implementation Language
os	Operating System
OSEK	Open Systems and the Corresponding Interfaces for Automotive Electronics
PCI	Protocol Control Information
PDU	Protocol Data Unit
PS	Product Supplier
PWM	Pulse Width Modulation
RAM	Random Access Memory
RfC	Request for Change
RTE	Runtime Environment
SAE	Society of Automotive Engineers
SDU	Service Data Unit
SIL	Safety Integrity Level
SPI	Serial Peripheral Interface
SW	SoftWare
SW-C	SoftWare Component
SWS	SoftWare Specification
TCP	Transmission Control Protocol
TP	Transport Protocol
TTCAN	Time Triggered CAN
TTP	Time Triggered Protocol
UDP	User (Universal) Datagram Protocol
UdpNm	UDP Network Management
USB	Universal Serial Bus
VFB	Virtual Functional Bus
VMM	Vehicle Mode Management
WCET	Worst Case Execution Time
WCRT	Worst Case Response time
XCP	Universal Calibration Protocol
1	•



XML Extensible Markup Language	
--------------------------------	--



1 Introduction

This document is the overall glossary of AUTOSAR. It contains definitions of all major terms and notions used within AUTOSAR. It does not claim to be complete and please keep in mind that some WPs have more specific terms defined within their domain specific glossary.



2 How to read this document

The title of the subchapters is identical to the term to be defined.

2.1 <Definition>

Definition	tbd - term to be defined
Initiator	tbd – person and/or group who introduced the term
Further	tbd – further explanation of the definition
Explanations	
Comment	tbd – comment or hints
Example	tbd – example of the term
Reference	tbd – reference of definition



3 Definitions

3.1 Accreditation

Definition	Third-party (→ definition 3.238) attestation to an organization conveying formal demonstration of its competence to carry out AUTOSAR conformance test tasks.
Initiator	WP Exploitation
Further Explanations	Within the AUTOSAR environment two different scopes of Accreditation exist: - In reference to ISO/IEC 17025 for accreditation of organizations performing conformance testing within own laboratories. - In reference to ISO/IEC Guide 65 for accreditation of Conformance Test Agencies (CTA) (→ definition 3.57) performing 3rd party product conformance attestation.
Comment	
Example	
Reference	[ISO/IEC 17000]

3.2 Accreditation Body

Definition	This is an organization, which employs or contracts individual assessors, who in turn perform the independent assessments (→ definition 3.10) as part of the accreditation (→ definition3.1) process.
Initiator	WP Exploitation
Further	In the AUTOSAR context the Accreditation Bodies have the role to accredit the
Explanations	Conformance Test Agencies.
Comment	
Example	
Reference	

3.3 Application

Definition	A software (or program) that is specified to the solution of a problem of an end
	user requiring information processing for its solution.
	The software configuration (→ definition 3.219) of a software entity.
Initiator	WP Virtual Functional Bus
Further	To 1. of Definition:
Explanations	In AUTOSAR Application software is located above the AUTOSAR RTE
	(RunTimeEnvironment).
Comment	Definition 1 is the "by default" meaning for application in AUTOSAR. When
	definition 2 is meant, it has to be explicitly mentioned.
Example	
Reference	[ISO 2382-20]

3.4 Application Interface

Definition	A PortInterface (→ definition 3.178) used by a SwComponentType (→ definition 3.217) as specified in the software component template (→ definition 3.237).
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	[TPS_SoftwareComponentTemplate]



3.5 Application Programming Interface (API)

Definition	An Application Programming Interface (API) is the prescribed method of a specific software part by which a programmer writing a program can make requests to that software part.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	OSEK OS API
Reference	

3.6 Application Software Component

Definition	An Application Software Component is a specific Software Component (> definition 3.217) which realizes a defined functionality on application level and runs on the AUTOSAR infrastructure. It communicates only through the AUTOSAR Runtime Environment.
Initiator	WP Software Architecture and OS
Further	Application Software Components are located "above" the AUTOSAR Runtime
Explanations	Environment.
Comment	
Example	
Reference	

3.7 Architecture

Definition	The fundamental organization of a system embodied in its components, their static and dynamic relationships to each other, and to the environment, and the principles guiding its design and evolution.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	"Static and dynamic" added to EAST definition.
Example	
Reference	[IEEE 1471], [EAST-Glossary]

3.8 Artifact

Definition	This is a Work Product Definition that provides a description and definition for
	tangible work product types. Artifacts may be composed of other artifacts ([14]). At
	a high level, an artifact is represented as a single conceptual file.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	



3.9 Asserted Property

Definition	A property or quality of a design entity (e.g. SW component or system) is
	asserted, if the design entity guarantees that this property or quality is fulfilled.
Initiator	WP Body and Comfort
Further	A property or quality of a design unit can be asserted by the design unit itself or in
Explanations	combination with another design unit.
Comment	
Example	If the worst case execution time of a task (w.r.t. a certain CPU etc.) is asserted to be 3 ms, the execution time of this task will under any circumstances be less than or equal to 3 ms.
Reference	Compare required property (→ definition 3.192)

3.10 Assessment

Definition	Activity conducted by an assessor to demonstrate that the assessed organization
	fulfills the set requirements.
Initiator	WP Exploitation
Further	Within the AUTOSAR context after the initial assessment a new full-set
Explanations	assessment will be repeated every 4 years. In between, surveillances (→
	definition 3.228) take place once a year.
Comment	
Example	
Reference	[ISO/IEC 17011]

3.11 Asset

Definition	An item that has been designed for use in multiple contexts.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	An asset can be design, specifications, source code, documentation, test suits,
	manual procedures, etc
Reference	[IEEE 1517], [EAST-Glossary]

3.12 Asynchronous Communication

Definition	Asynchronous communication does not block the sending software entity. The sending software entity continues its operation without getting a response from the communication partner(s).
Initiator	WP Virtual Functional Bus
Further	There could be an acknowledgement by the communication system about the
Explanations	sending of the information.
	A later response to the sending software entity is possible.
Comment	
Example	
Reference	

3.13 Asynchronous Function

Definition	A function is called asynchronous if the described functionality is not guaranteed



	to be completed the moment the function returns to the caller.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	

3.14 Attestation

Definition	Issue of a statement, based on a decision following a review, that fulfillment of
	specified requirements has been demonstrated.
Initiator	WP Exploitation
Further Explanations	The resulting statement, referred to in the International Standard as a "statement of conformity", conveys the assurance that the specified requirements have been fulfilled. Such an assurance does not, of itself, afford contractual or other legal guarantees.
Comment	
Example	Attestation of product conformance given by a third party like a CTA (→ definition 3.57). Attestation of product conformance given by a first party like the Product Supplier (also called declaration).
Reference	[ISO/IEC 17000]

3.15 Atomic Software Component

Definition	Non-composed Software-Component.
Initiator	WP Software Architecture and OS
Further	An Atomic Software Component might access HW or not, therefore not all Atomic
Explanations	SW-Cs are relocatable.
Comment	
Example	Application Software-Component, Complex Driver
Reference	

3.16 Automotive Safety Integrity Levels (ASIL)

Definition	Automotive Safety Integrity Levels (ASIL) are used within ISO 26262 to express the level of risk reduction required to prevent a specific hazard, with ASIL D representing the highest and ASIL A the lowest. The ASIL is assigned to the according safety goal and inherited to the safety requirements derived from it.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	

3.17 AUTOSAR Application Interface

	A set of Blueprints (→ definition 3.34) which are standardized by AUTOSAR and which can be used for creating AUTOSAR Interfaces (→ definition 3.21) of an Application (→ definition 3.3).
Initiator	WP General Methodology and Configuration



Further	
Explanations	
Comment	
Example	
Reference	[EXP_AlUserGuide]

3.18 AUTOSAR Authoring Tool

Definition	An AUTOSAR Tool used to create and modify AUTOSAR XML Descriptions (→
	definition 3.28).
Initiator	WP Authoring Tools
Further	
Explanations	
Comment	
Example	System Description Editor
Reference	

3.19 AUTOSAR Converter Tool

Definition	An AUTOSAR Tool used to create AUTOSAR XML files by converting information from other AUTOSAR XML files.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	ECU Flattener
Reference	

3.20 AUTOSAR Definition

Definition	This is the definition of parameters which can have values. One could say that the parameter values are instances of the definitions. But in the meta model hierarchy of AUTOSAR, definitions are also instances of the meta model and therefore considered as a description.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	EcucParameterDef, PostBuildVariantCriterion, SwSystemconst
Reference	

3.21 AUTOSAR Interface

Definition	The AUTOSAR Interface of a software component (→ definition 3.217) refers to the collection of all ports (→ definition 3.177) of that component through which it interacts with other components.
Initiator	WP Virtual Functional Bus
	WI VIItual I unctional bus
Further	
Explanations	
Comment	Note that an AUTOSAR Interface is different from a Port Interface (→ definition
	3.178). The latter characterizes one specific port of a component.
Example	



Reference	[AUTOSAR Specification of Virtual Functional Bus], Chapter " Modeling of
	Communication, Graphical Notation"

3.22 AUTOSAR Metamodel

Definition	The AUTOSAR metamodel is a UML2.0 model that defines the language for describing AUTOSAR systems and related artifacts.
Initiator	WG Meta Model Team
Further	The AUTOSAR metamodel is a graphical representation of a template (→
Explanations	definition 3.237). UML2.0 class diagrams are used to describe the attributes and their interrelationships. Stereotypes and OCL (object constraint language) are used for defining specific semantics and constraints.
Comment	The AUTOSAR XML Schema (→ definition 3.29) is derived from the AUTOSAR metamodel.
Example	
Reference	[UML 2.0]

3.23 AUTOSAR Model

Definition	This is a representation of an AUTOSAR product. The AUTOSAR model represents aspects suitable to the intended use according to the AUTOSAR methodology.
Initiator	WP General Methodology and Configuration
Further	Strictly speaking, this is an instance of the AUTOSAR metamodel (→ definition
Explanations	3.22). The information contained in the AUTOSAR model can be anything that is representable according to the AUTOSAR meta-model.
Comment	
Example	
Reference	

3.24 AUTOSAR Partial Model

Definition	In AUTOSAR, the possible partitioning of models is marked in the meta-model by < <atpsplitable>>. One partial model is represented in an AUTOSAR XML description (→ definition 3.28) by one file. The partial model does not need to fulfill all semantic constraints applicable to an AUTOSAR model.</atpsplitable>
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.25 AUTOSAR Processor Tool

Definition	An AUTOSAR Tool used to create non-AUTOSAR files by processing information
	from AUTOSAR XML files.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	RTE Generator



Reference	
-----------	--

3.26 AUTOSAR Service

Definition	An AUTOSAR Service is a logical entity of the basic software (→ definition 3.31) offering general functionality to be used by various software components. The functionality is accessed via standardized AUTOSAR Interfaces (→ definition 3.21).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	Parts of the basic software required to realize AUTOSAR communication patterns and communication attributes are not called AUTOSAR services.
Example	Error memory for diagnosis.
	Timer service.
	ECU state manager.
Reference	

3.27 AUTOSAR Tool

Definition	This is a software tool which supports one or more tasks defined as AUTOSAR tasks in the methodology. Depending on the supported tasks, an AUTOSAR tool can act as an authoring tool (→ definition 3.18), a converter tool (→ definition
	3.19), a processor tool (→ definition 3.25) or as a combination of those.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.28 AUTOSAR XML description

Definition	In AUTOSAR this means "Filled Template". In fact an AUTOSAR XML description is the XML representation of an AUTOSAR model (→ definition 3.23). The AUTOSAR XML description can consist of several files. Each individual file represents an AUTOSAR partial model (→ definition 3.24) and must validate successfully against the AUTOSAR XML schema (→ definition 3.29).
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.29 AUTOSAR XML Schema

Definition	The AUTOSAR XML Schema is an XML language definition for exchanging AUTOSAR models (→ definition 3.23) and descriptions.
Initiator	WP Authoring Tools
Further	The AUTOSAR XML Schema is a W3C XML schema that defines the language
Explanations	for exchanging AUTOSAR models. This Schema is derived from the AUTOSAR



	metamodel (→ definition 3.22). The AUTOSAR XML Schema defines the AUTOSAR data exchange format.
Comment	
Example	
Reference	

3.30 Availability

Definition	Probability that a system or functional unit is able to perform its normal operation under specified conditions at a specific time. The property of data or resources being accessible and usable on demand by an authorized entity.
Initiator	WP Safety Aspect
Further	The time can be used to model a decrease of the availability over time due to e.g.
Explanations	aging of components.
Comment	Degraded modes are covered by this definition (see example)
Example	1. Power Steering: if the support function fails it is not available while the steering
	as a base function has full availability.
Reference	based on [ISO 2382-14], [ISO 2382-8],
	Reliability (→ definition 3.189)

3.31 Basic Software (BSW)

Definition	The Basic Software provides the infrastructural (schematic dependent and schematic independent) functionalities of an ECU (→ definition 3.77). It consists of Integration Code (→ definition 3.140) and Standard Software (→ definition 3.226).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	MCAL, AUTOSAR services, communication layer
Reference	

3.32 Basic Software Module

Definition	A collection of software files (code and description) that define a certain basic software functionality present on an ECU.
Initiator	WP ECU Configuration
Further Explanations	Standard software (→ definition 3.226) may be composed of several software modules that are developed independently. A software module may consist of Integration Code (→ definition 3.140), and/or standard software (→ definition 3.226).
Comment	
Example	A Digital IO Driver, Complex Driver, OS are examples of basic software modules.
Reference	

3.33 Bit Position

Definition	In AUTOSAR the bit position N within an I-PDU denotes the bit I, with I = N
	modulo 8, within the byte J, with $J = N / 8$. The byte J and bit position I is



	interpreted in accordance to the definition in OSEK COM chapter 2.4.1: "An I-PDU is a sequence of bytes numbered from 0 upwards. Within an I-PDU byte, bits are numbered from 0 upwards with bit 0 being the least significant bit."
Initiator	WP COM Stack
Further	
Explanations	
Comment	
Example	
Reference	

3.34 Blueprint

Definition	This is a model from which other models can be derived by copy and refinement. Note that in contrast to meta model resp. types, this process is not an instantiation.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.35 Bulk Data

Definition	"Bulk Data" is a set of data such big in size, that standard mechanisms used to handle smaller data sets become inconvenient. This implies that bulk data in a software system are modeled, stored, accessed and transported by different mechanisms than smaller data sets.
Initiator	WP Virtual Functional Bus
Further	Bulk data are typically handled by adding a level of abstraction (e.g. files) which
Explanations	separates the containment of the data from the internal structure.
Comment	The critical size, above which data must be regarded as bulk data depends on the technical infrastructure (e.g. bus system) and the considered use case (transport, storage etc.).
Example	Data on a persistent medium which has a capacity of a few kBytes (e.g. EEPROM) can be directly accessed via memory addresses, address offsets can be mapped to symbols of a programming language: No bulk data mechanisms are needed. For media with bigger capacity this becomes inconvenient or even impossible, so that a file system is used: The data are treated as bulk data.
Reference	

3.36 Bus Wake-Up

Definition	A bus wake-up is caused by a specific wake pulse on the bus defined within the specification of the dedicated communication standard (e.g. CAN, LIN, FR). A bus wake-up initiates that the transceiver and controller leave their energy saving mode and enter normal mode to start bus communication again.
Initiator	WP COM Stack
Further	
Explanations	
Comment	
Example	
Reference	



3.37 Calibration

Definition	Calibration is the adjustment of parameters of SW-Components realizing the control functionality (namely parameters of AUTOSAR SW-Cs, ECU abstraction or Complex Drivers).
Initiator	WP Virtual Functional Bus
Further Explanations	Only those software modules can be calibrated, which are above RTE and ECU Abstraction and CDD. Calibration is always done at post-build time. Used techniques to set calibration data include end-of-line programming, garage programming and adaptive calibration (e.g. in the case of anti-pinch protection for power window).
Comment	
Example	The calibration of the engine control will take into account the production differences of the individual motor this system will control.
Reference	

3.38 Callback

Definition	Functionality that is defined by an AUTOSAR module so that lower-level modules
	(i.e. lower in the Layered Software Architecture) can provide notification as
	required (e.g. when certain events occur or asynchronous processing completes).
Initiator	WP Software Architecture and OS
Further	In AUTOSAR, modules usually provide a register mechanism for callback
Explanations	functions which is set through configuration.
	A module provides callbacks so that other modules can initiate its processing
	while the module calls Callouts (> definition 3.39) to execute functionality that
	could not be specified by AUTOSAR, i.e. integration code (> 3.125)
Comment	
Example	(from the viewpoint of a particular SWS): The module being specified (Msws) should be informed about an event (> definition 3.68) in another module (Mexternal). In this example, Msws calls Mexternal to perform some processing and can only resume when Mexternal completes. Upon completion, Mexternal calls Msws's callback function. That is, the called module (Mexternal) CALLS the calling module (Msws) BACK when complete ==> a callback.
	(from AUTOSAR): COM callback (OSEK-BD)
Reference	

3.39 Callout

Definition	Function stubs that the system designer can replace with code to add functionality to a module which could not be specified by AUTOSAR.
Initiator	WP Software Architecture and OS, Subgroup Vehicle Mode Management and Application Mode Management
Further Explanations	A module calls callouts to execute functionality that could not be specified by AUTOSAR, i.e. integration code (> 3.125) while the module provides Callbacks (> definition 3.38) so that other modules can initiate its processing. Callouts can be separated into two classes: 1) callouts that provide mandatory functionality and thus serve as a hardware abstraction layer



	2) callouts that provide optional functionality
Comment	
Example	In the EcuM: For class 1): EcuM_EnableWakeupSources For class 2): The Init Lists (EcuM_AL_DriverInitZero)
Reference	

3.40 Call Point

Definition	A point in a Software-Component (→ definition 3.217) where the SW-C enforce an execution entity (Entry point → definition 3.80) in another SW-C.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Request Service
	Send Information
Reference	

3.41 Category 1 Interrupt

Definition	Category 1 (Cat1) Interrupts are supported by the OS but their code is only allowed to call a very small subset of OS functions. Furthermore they can bypass the OS. The code of Category 1 Interrupts depends (normally) on the used compiler and microcontroller. Category 1 Interrupts are not allowed to use the ISR() macro. Category 1 Interrupts need to implement/establish their own Interrupt Frame. Nevertheless they have to be configured in order to be included in the Interrupt Vector Table.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	

3.42 Category 2 Interrupt

Definition	Category 2 (Cat2) Interrupts are supported by the OS and their code can call a subset of OS functions. The definition of the Cat2 Interrupt must use the ISR() macro in order to be recognized by the OS. The Interrupt Frame of a Category 2 Interrupt is managed by the OS.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	ISR(timer1) { /* here is the code which handles timer1 interrupts */ }
Reference	



3.43 Causality of Transmission

Definition	Transmit order of PDUs with the same identifier (instances of PDUs) from a source network is preserved in the destination network.
Initiator	WP Gateway
Further Explanations	Transmission of PDUs (→ definition 3.172) with the same identifier has a particular temporal order in a given source network. After routing over a gateway the temporal order of transmission of PDUs in a destination network may be changed. Only in case that the temporal order is the same, causality is given. Otherwise causality is violated. Causality can be in contradiction to prioritization of PDUs.
Comment	
Example	
Reference	

3.44 Client

Definition	Software entity which uses services of a server (→ definition 3.212).
Initiator	WP Virtual Functional Bus
Further	The client and the server might be located on one ECU (→ definition 3.77) or
Explanations	distributed on different calculation units (e.g. ECU, external diagnostic tester).
Comment	Adapted from Balzert.
Example	
Reference	[Balzert99]

3.45 Client-Server Communication

Definition	A specific form of communication in a possibly distributed system in which software entities act as clients (→ definition 3.44), servers (→ definition 3.212) or both, where 1n clients are requesting services via a specific protocol from
	typically one server.
Initiator	WP Virtual Functional Bus
Further	Client-server communication can be realized by synchronous or asynchronous
Explanations	communication.
	 Client takes initiative: requesting that the server performs a service, e.g. client triggers action within server (server does not start action on its own) Client is after service request blocked / non-blocked Client expects response from server: data flow (+ control flow, if blocked) One example for 1 client to n server communication (currently not supported) is a functional request by diagnosis. This has to be treated as a specific exception.
Comment	Adapted from Hyper Dictionary
Example	Internet (TCP/IP)
Reference	[Hyper Dictionary]

3.46 Client-Server Interface

	The client-server interface is a special kind of port-interface (→ definition 3.178) used for the case of client-server communication (→ definition 3.45). The client-server interface defines the operations that are provided by the server (→ definition 3.212) and that can be used by the client (→ definition 3.44).
Initiator	WG System Team



Further Explanations	
Comment	
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.47 Cluster Signal

Definition	A cluster signal represents the aggregating system signal on one specific communication cluster. Cluster signals can be defined independently of frames. This allows a development methodology where the signals are defined first, and are assigned to frames in a later stage.
Initiator	WP System Constraint Template
Further	
Explanations	
Comment	
Example	
Reference	

3.48 Code Generator

Definition	The Code Generator consumes complete and correctly formed XML for a BSW
	module and generates code and data that configures the module.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	[AUTOSAR_InterruptHandling_Explanation.doc]

3.49 Code Variant Coding

Definition	Adaptation of SW by selection of functional alternatives according to external
	requirements
Initiator	WP Virtual Functional Bus
Further	Code Variant Coding might influences RTE (RuntimeEnvironment) and BSW
Explanations	modules (→ definition 3.32), not only the application software modules. Code
	Variant Coding is always done at pre-compile time or at link time. Code Variant
	Coding also includes vehicle-specific (not user-specific) SW adaptation due to
	end-customer wishes (e.g. deactivation of speed dependent automatic locking).
Comment	In case of the C language the #if or #ifdef directive can be used for creating code
	variants. Code Variant Coding is a design time concept.
Example	The same window lifter ECU is used for cars with 2 and 4 doors, however different
	code segments have to be used in both cases.
Reference	

3.50 Communication Attribute

Definition	Communication attributes define, according to the development phase, behavioral
	as well as implementation aspects of the AUTOSAR communication patterns.
Initiator	WP Virtual Functional Bus
Further	The exact characteristics of the communication patterns provided by AUTOSAR



Explanations	(client-server and sender-receiver) can be specified more precisely by communication attributes.
Comment	See chapter 4.1.6 in Specification of the Virtual Functional Bus
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.51 Complex Driver (CDD)

Definition	A software entity not standardized by AUTOSAR that can access or be accessed via AUTOSAR Interfaces (→ definition 3.21) and/ or Basic Software Modules (→ definition 3.32) APIs.
Initiator	WP Virtual Functional Bus
Further	CDD used to be the acronym for Complex Device Driver, but is not limited to
Explanations	drivers.
Comment	
Example	 Communication stack CDD to support the communication on a bus not supported by AUTOSAR Reuse of legacy SW Integration of software with high HW interraction requirements within a standardized AUTOSAR Architecture
Reference	

3.52 Composition

Definition	An AUTOSAR Composition encapsulates a collaboration of software components (→ definition 3.217), thereby hiding detail and allowing the creation of higher abstraction levels. Through Delegation Connectors (→ definition 3.59) a Composition (→ definition 3.52) explicitly specifies, which Ports (→ definition 3.177) of the internal components are visible from the outside. AUTOSAR Compositions are a type of Components, e.g. they can be part of further compositions.
Initiator	WP SW Component Template
Further	
Explanations	
Comment	See Virtual Functional Bus Specification, Chapter "VFB View, Meta-Model
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.53 Compositionality

Definition	Compositionality is given when the behavior of a software component or subsystem of a system is independent of the overall system load and configuration.
Initiator	BMW
Further	Compositionality is an important property of deterministic systems. This property
Explanations	leads to a complete decoupling of systems. Smooth subsystem integration without backlashes is then easily achievable.
Comment	
Example	A new component or a subsystem can be added to a system without changing the behavior of the original components.
Reference	



3.54 Conditioned Signal

Definition Initiator	The conditioned signal is the internal electrical representation of the electrical signal within the ECU. It is delivered to the processor and represented in voltage and time (or, in case of logical signals, by high or low level).
Further Explanations	The Electrical Signal (→ definition 3.78) usually can not be processed by the peripherals directly, but has to be adopted. This includes amplification and limitation, conversion from a current into a voltage and so on. This conversion is performed by some electronical devices in the ECU and the result of the conversion is called the Conditioned Signal. The description means for the Conditioned Signal can also be the same as for Technical Signals (→ definition 3.236) and Electrical Signals, but limited to electrical voltage
Comment	
Example	
Reference	

3.55 Configuration

Definition	The arrangement of hardware and/or software elements in a system.
Initiator	WP Virtual Functional Bus
Further	A configuration in general takes place before runtime.
Explanations	
Comment	
Example	
Reference	[AST-Glossary], [SO 61511-1]

3.56 Confirmation

Definition	Service primitive defined in the ISO/OSI Reference model (ISO 7498). With the 'confirmation' service primitive a service provider informs a service user about the result of a preceding service request of the service user [OSEK BD]
Initiator	WP Virtual Functional Bus
Further	A confirmation is e.g. a specific notification generated by the OSEK underlying
Explanations	layer to inform about a Message Transmission Error.
Comment	
Example	OSEK Com notification class 2 and 4
Reference	[SEK BD], [OSEK Com]

3.57 Conformance Test Agency (CTA)

Definition	This is an organization performing a role with specific tasks in the conformance test process. Two possibilities are distinguished, a third party (→ definition 0) CTA or a first party (→ definition 3.97) CTA (which is also a product supplier).
In 141 - 4 - 11	
Initiator	WP Exploitation
Further	The tasks/services provided by a CTA is:
Explanations	- Provision of a CTS
	- Test execution
	- Attestation of product conformance
	For a third party CTA the focus is on the attestation and for a first party the focus is on the test execution.
Comment	



Example	
Reference	-

3.58 Conformance Test Suite (CTS)

Definition	Is a test implementation used in the context of Conformance Testing. Typically, multiple test implementations from different vendors (e.g. CTA) will exist, each of which implements the standardized Conformance Test specifications.
Initiator	WP Exploitation
Further	ISO 9646 distinguishes between Abstract Test Suites and Executable Test Suites.
Explanations	For AUTOSAR the earlier relates to the Conformance Test Specifications,
	whereas the latter to the test implementations or Conformance Test Suites.
Comment	
Example	
Reference	[ISO 9646, Parts 1,2 and 4]

3.59 Connector

Definition	A connector connects ports (→ definition 3.177) of software components (→ definition 3.217) and represents the flow of information between those ports.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	For more information see AUTOSAR Specification of VFB
Example	AssemblyConnector, DelegationConnector
Reference	[AUTOSAR Specification of Virtual Function Bus]

3.60 Control Flow

Definition	The directed transmission of information between multiple entities, directly
	resulting in a state change of the receiving entity.
Initiator	WP Virtual Functional Bus
Further	A state change could result in an activation of a schedulable entity.
Explanations	
Comment	
Example	
Reference	

3.61 Coordinate

Definition	To control and harmonize two or more events or operations to act in an organized and predictable way.
Initiator	WP COM Stack
Further	
Explanations	
Comment	
Example	Two NM Channels can be coordinated to synchronize different stages of network
	sleep.
Reference	AUTOSAR Generic NM Interface



3.62 Data

Definition	A reinterpretable representation of information in a formalized manner suitable for
	communication, interpretation or processing.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Flag, Notification, etc.
Reference	[ISO 2382-1]

3.63 Data Element

Definition	Data elements are declared within the context of a "Sender-Receiver Interface" (> definition 3.210). They serve as the data units that are exchanged between sender and receiver.
Initiator	Stefaan Sonck Thiebaut
Further	
Explanations	
Comment	
Example	
Reference	[AUTOSAR SoftwareComponentTemplate]

3.64 Data Flow

Definition	The directed transmission of data (→ definition 3.62) between multiple entities. The transmissioned data are not directly related to a state change at the receiver side.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Asynchronous communication.
Reference	

3.65 Data Variant Coding

Definition	Adaptation of SW by setup of certain characteristic data according to external
	requirements.
Initiator	WP Virtual Functional Bus
Further	Data Variant Coding might influences RTE (RunTimeEnvironment) and BSW
Explanations	modules (→ definition 3.32) not only the application software modules (Multiple
	configuration parameter sets are needed). Variant Coding also includes vehicle-
	specific (not user-specific) SW adaptation due to end-customer wishes (e.g.
	deactivation of speed dependent automatic locking). Used techniques to select
	variants include end-of-line programming and garage programming.
Comment	The major difference with calibration is that this later doesn't aim to adapt the SW
	functionality itself but only aims to adjust the characteristic data of the SW to the
	HW/SW environment. Characteristic data in the source code of a software function
	have a significant impact on the functionality of the software.
Example	- Steering wheel controller adaptation to the left or right side can be done with
	Variant Coding. (Selection of the configuration.)
	- Country related adaptation of MMI with respect to speed and/or temperature unit
	(km/h vs. mph, °C vs. F).



Reference	
-----------	--

3.66 Deadline

Definition	The point in time when an execution of an entity must be finished.
Initiator	WP Virtual Functional Bus
Further	A deadline is calculated dependent on its local reference system.
Explanations	
Comment	
Example	
Reference	[OSEKtime, OS Specification]

3.67 Debugging

Definition	Debugging is the process of gathering information in case of a software problem. The information is used to analyze the software problem.
Initiator	WP Debugging
Further Explanations	To analyze and later fix a software problem, in many cases more information than the one provided by the software API is necessary. This can be for example the state of internal variables of the software or a trace of the communication. The information can be collected by different means, e.g. an emulator or a tracing tool for the communication bus.
Comment	
Example	
Reference	

3.68 (Conformance) Declaration

Definition	First-party (→ definition 3.97) attestation
Initiator	WP Exploitation
Further	
Explanations	
Comment	
Example	Attestation of product conformance given by a first party, i.e. the Product Supplier.
Reference	[ISO/IEC 17000]; [ISO/IEC 17050]

3.69 Dependability

Definition	Dependability is defined as the trustworthiness of a computer system such that reliance can justifiable be placed on the service it delivers.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	[EAST-Glossary]

3.70 Dynamic PDU

Definition	PDU (→ definition 3.172) with dynamic identifier.
Initiator	WP Software Architecture and OS



Further	Dynamic PDUs are PDUs where the <bus> identifier (e.g. CAN ID) is dynamically</bus>
Explanations	assigned (transmission) or evaluated (reception) at run time.
Comment	AUTOSAR supports two types of dynamic PDUs in CanIf: CanIf_SetDynamicTxId
	(only transmission), and PDUs with MetaData (reception and transmission).
Example	PDU with variable source address, encoded in the CAN ID, e.g. ISO15765
	NormalFixed.
Reference	

3.71 Dynamic Routing

Definition	The routing of signals or PDUs (→ definition 3.172) in a gateway can be changed throughout operation without change of the operation mode of the gateway.
Initiator	WP Gateway
Further	Dynamic routing requires the change of routing tables during operation. It is not
Explanations	intended to use dynamic routing in the gateway.
Comment	
Example	
Reference	[EAST-Glossary]

3.72 E2E Profile

Definition	A functional and complete description of a specific communication stack in terms of data structures, services, behavioral state-machines, error handling. E2E Profiles are defined in AUTOSAR E2E Library. An E2E Profile is configurable by runtime parameters. A specific set of runtime parameters is called E2E profile variant. In order to reach interoperability, the application developers should use the E2E profile variants defined in the E2E library.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	

3.73 ECU

Definition	In the AUTOSAR sense an ECU means a microcontroller plus peripherals and the according software/configuration. Therefore, each microcontroller requires its own ECU Configuration.
Initiator	WP-1.2
Further	
Explanations	
Comment	
Example	
Reference	

3.74 ECU Abstraction Layer

Definition	The ECU Abstraction Layer is located above the Microcontroller Abstraction Layer
	(→ definition 3.157) and abstracts from the ECU schematic.
	It is implemented for a specific ECU and offers an API for access to peripherals
	and devices regardless of their location (onchip/offchip) and their connection to



	the migrocentraller (part pine type of interface)
	the microcontroller (port pins, type of interface).
	Task: make higher software layers independent of the ECU hardware layout.
Initiator	WP Architecture
Further	The ECU Abstraction Layer consists of the following parts:
Explanations	I/O Hardware Abstraction
	Communication Hardware Abstraction
	Memory Hardware Abstraction
	Onboard Device Abstraction
	Properties:
	 Implementation: μC independent, ECU hardware dependent
	 Upper Interface (API): μC and ECU hardware independent, dependent on signal type
Comment	
Example	See Layered Software Architecture
Reference	[AUTOSAR SoftwareArchitecture]

3.75 ECU Configuration

Definition	Activity of integrating and configuring one ECU's software.
Initiator	WP ECU Configuration
Further	Further Explanations: ECU Configuration denotes the activity when one ECU's
Explanations	software is set up for a specific usage inside the ECU. In AUTOSAR the ECU
	Configuration activity is divided into "Pre-compile time", "Link time" and "Post-build
	time" configuration.
Comment	
Example	
Reference	ECU Configuration Description (→ definition 3.76), Pre-compile time configuration
	(→ definition 3.180), Link time configuration (→ definition 3.151), Post-build time configuration (→ definition 3.179), Multiple Configuration Sets (→ definition 3.162).

3.76 ECU Configuration Description

Definition	Output of the ECU Configuration activity containing the values of configuration
	parameters and references.
Initiator	WP ECU Configuration
Further	ECU Configuration Description holds the configuration parameter values and
Explanations	references to other module's configurations which have been defined in the ECU
	Configuration activity.
Comment	ECU Configuration Description may contain the whole ECU Configuration information or only the parts relevant for a specific configuration step (e.g. Precompile time).
Example	
Reference	ECU Configuration Description (→ definition 3.76), Pre-compile time configuration
	(→ definition 3.180), Link time configuration (→ definition 3.151), Post-build time
	configuration (→ definition 3.179), Multiple Configuration Sets (→ definition 3.162).

3.77 Electronic Control Unit (ECU)

Definition	Embedded computer system consisting out of at least one CPU and corresponding periphery which is placed in one housing.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	"Small" deleted from EAST definition



	The term ECU is problematic using LIN busses: An ECU can carry at least one
	SW-Component. Sensors and Actuators which are according to this definition not
	an ECU are related to an ECU which capsules the sensors or actuators
	functionality -new
Example	Head Unit (telematics domain).
Reference	[EAST-Glossary]

3.78 Electrical Signal

Definition	The electrical signal is the electrical representation of technical signals (→ definition 3.236). Electrical signals can only be represented in voltage, current and time
Initiator	WP ECU Resource Template
Further	When a sensor processes the Technical Signal it is converted into an Electrical
Explanations	Signal. The information can be provided in the current, the voltage or in the timely
	change of the signal (e.g. a pulse width modulation).
Comment	To describe the Electrical Signal the same means as for the Technical Signal can
	be used, limited to electrical current and voltage.
Example	
Reference	

3.79 Empty Function

Definition	Any C function defined by an AUTOSAR specification which does not implement or alter behavior required to accomplish the assigned functional responsibility.
Initiator	WP Software Architecture and OS
Further Explanations	As such an empty function in the context of AUTOSAR can still have code but this code shall not impact the state machine other than error reporting. Auxiliary code like validating arguments to report to the DET does not constitute functional behavior because without the code and proper calling this code would still fulfill its architectural responsibility.
Comment	
Example	
Reference	

3.80 Entry Point

Definition	A point in a Software-Component (→ definition 3.217) where an execution entity of the SW-C begins.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Service of the Server in Client/Server Communication
	Reaction after receive Information (Notification)
Reference	

3.81 Error

Definition	Discrepancy between a computed, observed or measured value or condition and
	the true, specified, or theoretically correct value or condition.
Initiator	WP Safety Aspect



Further Explanations	An error can arise as a result of unforeseen operating conditions or due to a fault within the system, subsystem or component being considered. A fault can manifest itself as an error within the considered element and, at the end of its latency, the error can cause a failure.
Comment	
Example	
Reference	[ISO DIS 26262, Part 1]

3.82 Error Detection Rate

Definition	Ratio between detected lost/faulty words/symbols/blocks, divided by the total number of symbols/words/blocks sent.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	

3.83 Event

Definition	State change of a hardware and/or software entity.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	

3.84 Execution Time

Definition	The time during which a program is actually executing, or more precisely during
	which a certain thread of execution is active.
Initiator	WP SW Component Template
Further	The execution time of software is the time during which the CPU is executing its
Explanations	instructions. The time the CPU spends on task switches or on the execution of
	other pieces of software is not considered here.
	See also: response time, worst case execution time, worst case response time.
Comment	
Example	
Reference	

3.85 Exit Point

Definition	A point in a Software-Component (→ definition 3.217) where an execution entity of
	the SW-C ends.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Return point.



Reference	
-----------	--

3.86 Fail-degraded

Definition	Property of a system or functional unit.
	Describes the ability of a system to continue with intended degraded operation at
	its output interfaces despite the presence of hardware or software faults.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	Safety means are not regarded as a part of the normal functionality
	respectively operation.
	Also known as: Fail-reduced, Fail-soft
Example	"Limp home" functionality for ECU (reduce torque to assure an arrival at home or
	service station)
Reference	

3.87 Fail-operational

Definition	Property of a system or functional unit. Describes the ability of a system or functional unit to continue normal operation at its output interfaces despite the presence of hardware or software faults.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	 Typically, a fail-operational system or functional unit has no safe state. Safety means are not regarded as a part of the normal functionality respectively operation.
Example	Braking system
Reference	

3.88 Fail-safe

Definition	Property of a system or functional unit.
	In case of a fault the system or functional unit transits to a safe state.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	

3.89 Fail-silent

Definition	Property of a system or functional unit. In case of a fault the output interfaces are disabled in a way that no further outputs are made.
Initiator	WP Safety Aspect
Further	Fail-silent is a special case of the fail-safe property.
Explanations	
Comment	
Example	The fail-silent property can be used to avoid that "babbling idiots" disturb the



	overall communication.
Reference	

3.90 Failure

Definition	Termination of the ability of an element or an item to perform a function as required.
Initiator	WP Safety Aspect
Further Explanations	Termination is a reduction in, or loss of, ability of an element or an item to perform a function as required. There is a difference between "to perform a function as required" (stronger definition, use-oriented) and "to perform a function as specified", so a failure can result from an incorrect specification.
Comment	
Example	
Reference	[ISO DIS 26262, Part 1]

3.91 Failure Rate

Definition	Frequency of occurrence of an error measured within a specific period. It is usually expressed in [1e9 * h 1] = [FIT], which means how many faults happen within 1.000.000.000 hours. Error rates can be determined by physical/mathematical models and by tracking of failures of already produced units.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	

3.92 **Fault**

Definition	Abnormal condition that can cause an element or an item to fail.
Initiator	WP Safety Aspect
Further	In the context of AUTOSAR an element is e.g. a BSW Module (→ definition 3.32),
Explanations	a SW-C (→ definition 3.217) or the CPU.
Comment	
Example	
Reference	[ISO DIS 26262, Part 1]

3.93 Fault Detection

Definition	The action of monitoring errors and setting fault states to specific values is called
	fault detection.
Initiator	WP Virtual Functional Bus
Further	The different states are called "not detected"/ "present"/ "intermittent or
Explanations	maturing"/
	The names of the fault states are following the ISO/SAE norms; however there is
	a coordination step in between the states of the DTCs (Diagnostic Trouble Code
	→ see definition in ISO 15765/ ISO14229) and the states of the faults.
	The SW-C's Fault Detection is executed decentralized, e.g. each SW-C sets the



	state of a fault according to the defined fault qualification (SW-C Template). Therefore the Fault Detection is implemented in the SW-C (SW-C could be either Application SW Component or Basic SW Component). There are exceptions; these will be pointed out individually for each fault. The SW-C's developer will define the conditions (=fault qualification), when these conditions are fulfilled the SW-C notifies a fault to the Diagnostic Memory Management.
Comment	
Example	
Reference	[ISO 15765], [ISO14229]
	[AUTOSAR Specification of Virtual Functional Bus]

3.94 Fault Reaction

Definition	In case of a Failure of a SW-C there is a specific action to be carried out. This
	action is called "Fault Reaction".
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Fault Reactions can be implemented decentralized in the SW-C. There might also be the need of coordinating the fault reactions since there are reactions excluding each other. This will be done by a central fault reaction manager.
Reference	

3.95 Fault Tolerance

Definition	Property of a system or functional unit. In case of n faults the system or functional unit continues with full functionality (n>0).
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	

3.96 Feature

Definition	The term feature is commonly used in the software tool community to describe characteristics (functionality) of the software.
Initiator	WP Authoring Tools
Further Explanations	In AUTOSAR a feature is represented by one or many metaclasses and their attributes in the AUTOSAR meta-model. Features are used to implement use cases such that a single use case requires one or more features for
	implementation.
Comment	
Example	Automatic windshield wiper
Reference	[EAST-Glossary]



3.97 First party

Definition	An organization that provides automotive products, which are subject to
	AUTOSAR conformance testing.
Initiator	WP Exploitation
Further	
Explanations	
Comment	
Example	
Reference	

3.98 Flag

Definition	A piece of data that can take on one of two values indicating whether a logical condition is true or false.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Notification flag
Reference	

3.99 FlexRay Base Cycle

Definition	One operand of the equation used to calculate the Cycle Numbers (→ definition 3.105) of the FlexRay Cells (→ definition 3.101) being used for periodic transmission of FlexRay Frames (→ definition 3.108) in a given FlexRay Slot (→ definition 3.117). Equation: Cycle Number = (B + n * 2 ^R) _{mod64} Where: Base Cycle B = 0 63 Cycle Repetition 2 ^R = 2 ⁰ 2 ⁶ = 1, 2, 4, 8, 64 Variable n = 0 64 B < 2 ^R (See also graphic in FlexRay L-SDU-Identifier → definition 3.112)
Initiator	WP FlexRay
Further Explanations	
Comment	Synonym: "Cycle Offset", "Cycle Counter Offset"
Example	
Reference	

3.100 FlexRay Bus

Definition	A communication system topology in which Nodes (→ definition 3.115) are directly connected to a single, common communication media (as opposed to connection through Stars (→ definition 3.120), gateways, etc.). The term "bus" is also used to refer to the media itself .
Initiator	WP FlexRay
Further	The term "FlexRay Bus" is not to be confused with the term "FlexRay Cluster" (→



Explanations	definition 3.103) or "FlexRay Network" (→ definition 3.114).
Comment	Synonym: "FlexRay Communication Bus"
Example	
Reference	[FR_PROTOCOL]

3.101 FlexRay Cell

Definition	One element in a FlexRay Matrix (→ definition 3.113) unequivocally defined by a combination of exactly one FlexRay Slot (or FlexRay Slot Number) (→ definition 3.117) and exactly one FlexRay Cycle (or FlexRay Cycle Number) (→ definition 3.104). In other words: a FlexRay Cell is defined by the tuple <slot cycle="" number="" number,="">. Each FlexRay Cell represents one (possible) transmission time interval for at most one FlexRay Frame (→ definition 3.108). If a FlexRay Network (→ definition 3.114) consists of two Channels (→ definition 3.102), there is one FlexRay Matrix per Channel , so there are also two FlexRay Cells defined by the same tuple <slot cycle="" number="" number,="">, one for "Channel A" and one for "Channel B".</slot></slot>
Initiator	WP FlexRay
Further Explanations	In order to achieve periodic transmission of FlexRay Frames in a given FlexRay Slot, the Cycle Numbers of the FlexRay Cells being used for transmission have to fulfill the following equation:
	Equation:
	Cycle Number = (B + n * 2 ^R) _{mod64}
	Where:
	• Base Cycle B = 0 63
	• Cycle Repetition 2 ^R = 2 ⁰ 2 ⁶ = 1, 2, 4, 8, 64
	• Variable n = 0 64
	• B < 2 ^R
Comment	Synonym: "FlexRay Matrix Cell"
Example	
Reference	

3.102 FlexRay Channel

Definition	The inter-Node (→ definition 3.115) connection through which signals are conveyed for the purpose of communication. The communication channel abstracts both the network topology, i.e., Bus (→ definition 3.100) or Star (→ definition 3.120), as well as the physical transmission medium, i.e. electrical or optical.
Initiator	WP FlexRay
Further Explanations	According to the FlexRay Protocol Specification, the two possible Channels of a FlexRay Network (→ definition 3.114) are named "Channel A" and "Channel B".
Comment	Synonym: "FlexRay Communication Channel"
Example	
Reference	[FR_PROTOCOL]

3.103 FlexRay Cluster

Definition	A communication system of multiple Nodes (→ definition 3.115) connected directly
	(Bus topology) or by Star Couplers (Star topology) (→ definition 3.120) via a
	Communication Network consisting of at least one Communication Channel.
Initiator	WP FlexRay



Further	The term "FlexRay Cluster" is not to be confused with the term "FlexRay Bus" (→
Explanations	definition 3.100) which describes a communication system topology. A FlexRay Cluster consists of a FlexRay Network (→ definition 3.114) and several FlexRay Nodes.
Comment	
Example	
Reference	[FR_PROTOCOL]

3.104 FlexRay Cycle

Definition	One complete instance of the communication structure that is periodically repeated to comprise the media access method of the FlexRay system. The Communication Cycle consists of a Static Segment, an optional Dynamic Segment, an optional Symbol Window, and a Network Idle Time. The FlexRay Cycles are unequivocally numbered by the FlexRay Cycle Number (→ definition 3.105) ranging from 0 to 63. Even if a FlexRay Network (→ definition 3.114) consists of two Channels, the FlexRay Cycle is always a common quantity of both Channels, irrespective of the data transmission schedule possibly being different for the two Channels.
Initiator	WP FlexRay
Further Explanations	
Comment	Synonym: "FlexRay Communication Cycle"
Example	
Reference	[FR_PROTOCOL]

3.105 FlexRay Cycle Number

Definition	An unequivocal number of a FlexRay Cycle (→ definition 3.104), ranging from 0 to
	63.
Initiator	WP FlexRay
Further	
Explanations	
Comment	Synonym: "FlexRay Communication Cycle Number"
Example	
Reference	[FR_PROTOCOL]

3.106 FlexRay Cycle Offset

Definition	See definition of Base Cycle (→ definition 3.99).
Initiator	WP FlexRay
Further Explanations	
Comment	This term is mentioned here to simplify finding it via this document's table of contents. Synonym: "Cycle Counter Offset", "Base Cycle"
Example	
Reference	



3.107 FlexRay Cycle Repetition

Definition	One operand of the equation used to calculate the Cycle Numbers (→ definition 3.105) of the FlexRay Cells (→ definition 3.101) being used for periodic transmission of FlexRay Frames (→ definition 3.108) in a given FlexRay Slot (→ definition 3.117). Equation: Cycle Number = (B + n * 2 ^R) _{mod64} Where: Base Cycle B = 0 63 Cycle Repetition 2 ^R = 2 ⁰ 2 ⁶ = 1, 2, 4, 8, 64 Variable n = 0 64 B < 2 ^R (See also graphic in FlexRay L-SDU-Identifier → definition 3.112)
Initiator	WP FlexRay
Further Explanations	
Comment	Synonym: "Cycle Counter Repetition"
Example	
Reference	

3.108 FlexRay Frame

Definition	A structure used by the communication system to exchange information within the system. A FlexRay Frame consists of a header segment, a payload segment and a trailer segment. The payload segment is used to convey application data.
Initiator	WP FlexRay
Further	A FlexRay Frame is a "data package" that may be transmitted within a FlexRay
Explanations	Cell (→ definition 3.101).
Comment	Synonym: "FlexRay L-PDU"
Example	
Reference	[FR_PROTOCOL]

3.109 FlexRay Global Time

Definition	A tuple consisting of one specific value of the FlexRay Cycle Counter and one specific value of the FlexRay Cycle Time in Macroticks.	
Initiator	WP FlexRay	
Further		
Explanations		
Comment		
Example		
Reference	[FR_PROTOCOL]	

3.110 FlexRay L-PDU

Definition	See definition of FlexRay Frame (→ definition 3.108).	
Initiator	WP FlexRay	
Further		
Explanations		
Comment	This term is mentioned here to simplify finding it via this document's table of	




	contents.
Example	
Reference	Synonym: "FlexRay Frame"

3.111 FlexRay L-PDU-Identifier

	assigned to it.				
	Identifier has on assigned to it.	ne configuration of	a FlexRay Commu	nication Controller b	uffer
Comment	Usually, on one	specific FlexRay N	lode (→ definition 3	3.115), one FlexRay	
		L-PDU-Identifier: Slot:	6 Channel: A&B Base Cvd	cle: 1 Cycle Repetition: 2 ²	
		L-PDU-Identifier: Slot:	•	0 Cycle Repetition: 2 ¹	
	Slot Number		Communication Cycle		-
	Slot ID /				→ t
	1 0	AB.			\mathbb{H}
	3 2	(/ A /)		-	Н
	4	(A)			Щ
	6 5	· AA			H I
	7	· // / //		:	\mathbb{H}
		: XAB			Щ
	:				
	61	(A)			\mathbb{H}
	62	////			H I
	Number 63				*
	Cycle	Static Se	gment	Dynamic Segment	Network Idde Time
Explanations		with	L-PDU-Identifie		ymbol indow
Further		FlexRay	Communication	Matrix	
Initiator	WP FlexRay				
	shall be disjunct		Tay L-FDU-IUEIIIII	ars useu ioi iidiisiilis	5510[]
				ne Bus (→ definition ers used for transmis	
		annel = "A", "B", "A			
	• Cyc	cle Repetition 2 ^R = 2	2° 2° = 1, 2, 4, 8	, 64	
		se Cycle B = 0 6			
		Number = 1 Ma	·	J 4 ()	
		a FlexRay L-PDU-I	·	•	
	(See also graph		D		
	with exactly one	e tuple of values for	or B and 2 ^R .		
	3.117), Which fu	ilfill the equation: lumber = (B + n * :	2 ^R) _{mod64}		
	FlexRay Channels (→ definition 3.102) in a specific FlexRay Slot (→ defi 3.117), which fulfill the equation:				nition
	A unequivocal identifier of a set of FlexRay Cells (→ definition 3.101) used for periodic transmission of FlexRay Frames (→ definition 3.108) over one or both				




3.112 FlexRay L-SDU-Identifier

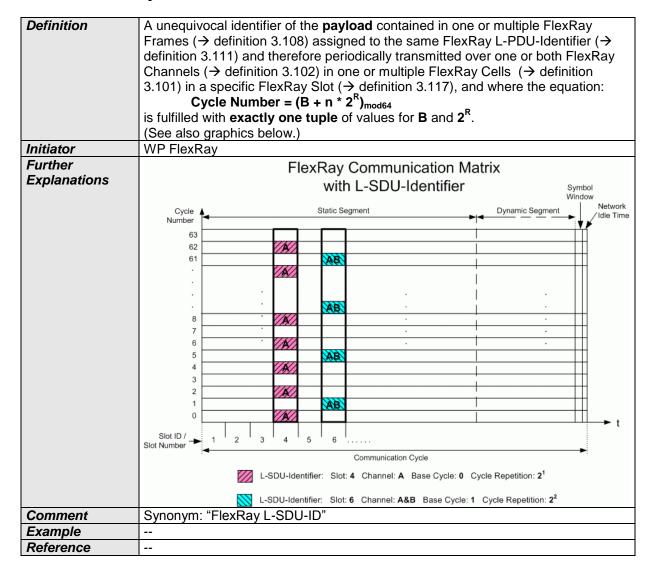

3.113 FlexRay Matrix

Definition	A two-dimensional array with a width of the number of FlexRay Slots (→ definition
201111111011	3.117) within one FlexRay Cycle (→ definition 3.104) and a height of 64 FlexRay
	Cycles, numbered 0 63. (See also graphics below.)
	This array is being used to describe the (possible) transmission time intervals on a
	FlexRay Channel (→ definition 3.102).
	If a FlexRay Network (→ definition 3.114) consists of two Channels, there is one
	FlexRay Matrix per Channel (resulting in a total of two Matrixes), since the data
	transmission schedule may be different for the two FlexRay Channels.
Initiator	WP FlexRay



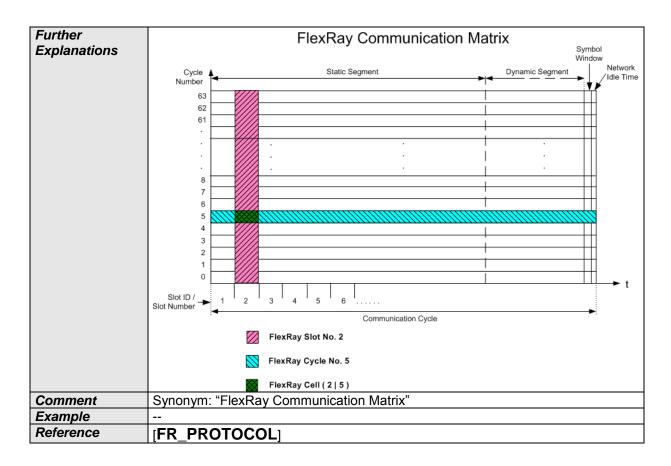

3.114 FlexRay Network

Definition	The combination of the (up to two) FlexRay Communication Channels that connect the FlexRay Nodes (→ definition 3.115) of a FlexRay Cluster (→ definition 3.103).	
Initiator	WP FlexRay	
Further	The term "FlexRay Network" is not to be confused with the term "FlexRay Cluster"	
Explanations	or "FlexRay Bus" (→ definition 3.100).	
Comment	Synonym: "FlexRay Communication Network"	
Example		
Reference	[FR_PROTOCOL]	

3.115 FlexRay Node

Definition	A logical entity connected to the FlexRay Network (→ definition 3.114) that is capable of sending and/or receiving frames.
Initiator	WP FlexRay
Further	
Explanations	
Comment	
Example	
Reference	[FR_PROTOCOL]

3.116 FlexRay Physical Communication Link

Definition	An inter-Node (→ definition 3.115) connection through which signals are conveyed
	for the purpose of communication. All Nodes connected to a given Physical




	Communication Link share the same electrical or optical signals (i.e., they are not connected through repeaters, Stars (→ definition 3.120), gateways, etc.). Examples of a Physical Communication Link include a Bus (→ definition 3.100) Network or a point-to-point connection between a Node and a Star. A Communication Channel may be constructed by combining one or more Physical Communication Links together using Stars.
Initiator	WP FlexRay
Further	
Explanations	
Comment	
Example	
Reference	[FR_PROTOCOL]

3.117 FlexRay Slot

3.118 FlexRay Slot Multiplexing

Definition	A method used to fill a FlexRay Slot (→ definition 3.117) on a Channel (→ definition 3.102) more efficiently by alternating the Frames being sent in this Slot from Cycle (→ definition 3.104) to Cycle. In order to achieve periodic transmission of FlexRay Frames (→ definition 3.108) in a given FlexRay Slot, the Cycle Numbers (→ definition 3.105) of the FlexRay Cells (→ definition 3.101) being used for transmission have to fulfill the equation: Cycle Number = (B + n * 2 ^R) _{mod64} Where:
	• Base Cycle B = 0 63
	• Cycle Repetition 2 ^R = 2 ⁰ 2 ⁶ = 1, 2, 4, 8, 64
	• Variable n = 0 64
	• B < 2 ^R



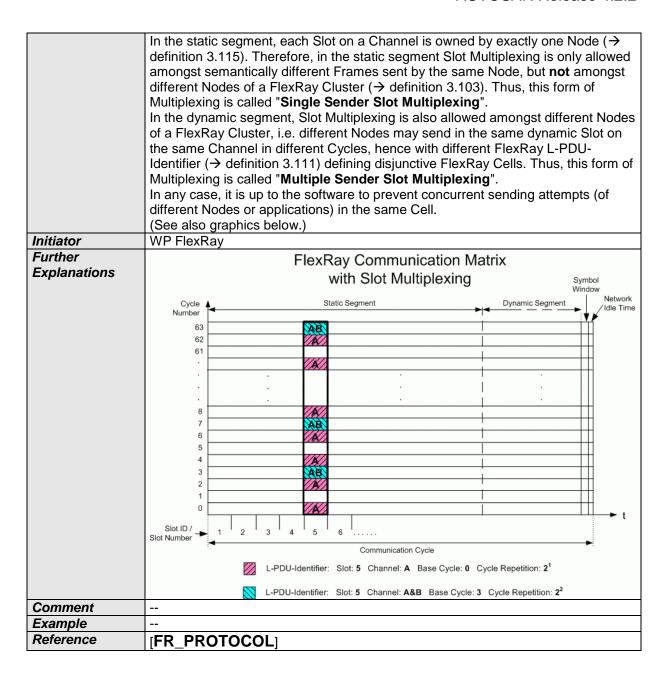

3.119 FlexRay Slot Number

Definition	An unequivocal number of a FlexRay Slot (→ definition 3.117), ranging from 1 to a
	configurable maximum number ≤ 2047.
Initiator	WP FlexRay
Further	
Explanations	
Comment	Synonym: "FlexRay Slot Identifier", "FlexRay Slot ID"
Example	
Reference	[FR_PROTOCOL]

3.120 FlexRay Star

Definition	A device that allows information to be transferred from one Physical
	Communication Link (→ definition 3.116) to one or more other Physical



	Communication Links. A star duplicates information present on one of its links to the other links connected to the star. A star can be either passive or active.
Initiator	WP FlexRay
Further	
Explanations	
Comment	Synonym: "Star", "Star Couplers"
Example	
Reference	[FR_PROTOCOL]

3.121 Frame

Definition	Data unit according to the data link protocol specifying the arrangement and meaning of bits or bit fields in the sequence of transfer across the transfer medium .
Initiator	WP Architecture
Further	
Explanations	
Comment	
Example	A CAN frame consists of up to 8 bytes of payload data and additional protocol specific bits / bit fields (e.g. CAN-Identifier).
Reference	[ISO OSEK, Glossary]

3.122 Frame PDU

Definition	A PDU that fits into 1 frame instance. e.g. it does not need to be fragmented across more than 1 frame for transmission
	over a network.
Initiator	WP Architecture
Further	
Explanations	
Comment	
Example	
Reference	

3.123 Function

Definition	A task, action or activity that must be accomplished to achieve a desired outcome.
	A part of programming code that is invoked by other parts of the program to fulfill a desired purpose.
	 In mathematics, a function is an association between two sets of values in which each element of one set has one assigned element in the other set so that any element selected becomes the independent variable and its
	associated element is the dependent variable.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	Due to the different meanings in texts using the term application the appropriate
	meaning should be explained in detail or referenced.
Example	2. C-Code Function
	3. Y=f(x)
Reference	[IEEE12331], [EAST-Glossary]



3.124 Functional Network

Definition	A logical structure of interconnections between defined functional parts of features
	(→ definition 3.96).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	

3.125 Functional Unit

Definition	An entity of software or hardware, or both, capable of accomplishing a specified
	purpose.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	ECU, Software Component,
Reference	[ISO 2382-1]

3.126 Functionality

Definition	Functionality comprises User-visible and User-non-visible functional aspects of a
	system.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	EAST glossary not applicable, due to use of function.
Example	Functionality of a communication system is a user-non-visible aspect.
Reference	

3.127 Gateway

Definition	A gateway is functionality within an ECU that performs a frame or signal mapping function between two communication systems. Communication system in this context means e.g. a CAN system or one channel of a FlexRay system.
Initiator	WP System Constraint Template
Further	
Explanations	
Comment	
Example	
Reference	Gateway ECU 0

3.128 Gateway ECU

Definition	A gateway ECU is an ECU (→ definition 3.77) that is connected to two or more communication channels, and performs gateway functionality.
Initiator	WP System Constraint Template
Further	
Explanations	



Comment	
Example	
Reference	Gateway 3.127

3.129 Hardware Connection

Definition	HW Connections are used to describe the connection of HW elements (→ definition 3.130) among each other. It defines/characterizes the interrelationship among HW Elements (for abstract modelling). The HW Ports (→ definition 3.132) of the HW Elements serve as connection points for this purpose.
Initiator	WP ECU Resource Template
Further	In AUTOSAR are 2 kinds of HW Connections defined:
Explanations	Assembly HW Connection
	Delegation HW Connection
Comment	
Example	
Reference	[AUTOSAR Specfication of ECU Resource Template]

3.130 Hardware Element

Definition	The HW Element is the main describing element of an ECU (→ definition 3.77). It provides HW ports (→ definition 3.132) for being interconnected among each others. A generic HW Element specifies definitions valid for all specific HW Elements.
Initiator	WP ECU Resource Template
Further	A HW Element is the piece or a part of the piece to be described with the ECU
Explanations	Resource Template. It uses other elements as primitive: This means HW elements can be nested (trough HW Containers, a hierarchical structur of HW Elements). At the lowest level a HW Element only uses promitives
Comment	
Example	
Reference	[AUTOSAR Specification of ECU Resource Template]

3.131 Hardware Interrupt

Definition	Interrupt triggered by HW event
Initiator	WP Virtual Functional Bus
Further	2 sorts of HW events
Explanations	 Processor-intern: events as for example division by zero, arithmetical overflow, non-implemented instruction
	 Processor-extern: events as for example response of peripheral device (e.g. PWM), memory error, timer
Comment	
Example	
Reference	Translation/Adaptation from [VDI Lexikon]

3.132 Hardware Port

Definition	The HW port exposes functionality to the exterior of the HW element (→ definition 3.130). HW elements can be connected via HW Connections (→ definition 3.129).
	It defines a connection Endpoint for the HW Element.
Initiator	WG System Team



Further	HW elements provide HW ports for being interconnected among each others.
Explanations	Each HW port has a name which is unique within the HW element it is located in.
Comment	
Example	
Reference	[AUTOSAR Specification of ECU Resource Template]

3.133 I-PDU

Definition	Interaction Layer Protocol Data Unit Collection of messages for transfer between nodes in a network. At the sending node the Interaction Layer (<i>IL</i>) is responsible for packing messages into an I-PDU and then sending it to the Data Link Layer (<i>DLL</i>) for transmission. At the receiving node the DLL passes each I-PDU to the IL which then unpacks the messages sending their contents to the application.
Initiator	WP Architecture
Further	
Explanations	
Comment	
Example	OSEK COM specifies an Interaction Layer and works on I-PDUs
Reference	[ISO OSEK, Glossary]

3.134 ICC1 (Implementation Conformance Class 1)

Definition	An ICC1 cluster offers a software-component interface (SW-CI) (→ definition
	3.218) and/ or an AUTOSAR network interface (NWI) (→ definition 3.164).
	The SW-CI and NWI of an ICC1 cluster provide the functional behavior as
	specified in the AUTOSAR specifications on ICC3 level.
Initiator	WP Conformance Test Specification
Further	In an ICC1 cluster the basic software is regarded as a black box. It allows legacy
Explanations	platforms to migrate to AUTOSAR:
	- to be integrated into an AUTOSAR network
	- to support SW-Cs (→ definition 3.217).
	The features of an ICC1 cluster can be a subset of the ICC3 features (e.g.
	FlexRay not used). This has to be indicated in the Implementation Conformance
	Statement (ICS) (→ definition 3.137).
	The functionality represented in AUTOSAR by the RTE must be a part of any
	ICC1 cluster that provides an SW-CI.
	T : " 1004 I :
	Typically an ICC1 cluster
	- is not structured into Basic Software (BSW) modules (ICC3) or BSW module
	clusters (ICC2)
	- has a proprietary internal structure and might consist of legacy/proprietary or highly optimized code.
	Ingrity optimized code.
	An ICC1 cluster shall provide an interface to the boot loader.
	All 1001 cluster shall provide all interface to the boot loader.
	ICC1 shall support SW-C compatible configuration for SW-CI and AUTOSAR
	Network compatible Configuration for NWI.
Comment	Up to Release 4.0 the boot loader architecture is not standardized in AUTOSAR.
	Therefore the term ICC1 is not applicable to the boot loader architecture itself.
Example	
Reference	



3.135 ICC2 (Implementation Conformance Class 2)

Definition	ICCO divistore logically related ICCO Pagis Cofficers (PCM) modules (2N.
Definition	ICC2 clusters logically related ICC3 Basic Software (BSW) modules (2 N modules).
	The number of Cluster Features in an ICC2 cluster is a subset of the union of the
	number of features of the clustered ICC3 modules.
Initiator	WP Software Architecture and OS
Further	Each ICC2 cluster presents a subset of the clustered ICC3 module's interfaces.
Explanations	ICC2 cluster provides the functional behavior as specified in the AUTOSAR
	specifications on ICC3 level.
	ICC2 cluster have a proprietary internal structure and might consist of proprietary or highly optimized code.
	or nigniy optimized code.
	ICC2 shall support AUTOSAR ECU Configuration description as an input for the
	Cluster Configuration
	It shall be possible to combine ICC2 Clusters and ICC3 Modules in a BSW
	Architecture.
	Application interfers Conference (above DTE and a second second in a
	Application interface Conformance (above RTE, software-component interface, SW-CI (→ definition 3.218)) and Bus Conformance (AUTOSAR network interface,
	NWI (→ definition 3.164)) must be testable for a BSW which contain one or more
	ICC2 clusters.
Comment	
Example	Example of a ICC2 Cluster
	ICC2 Cluster Y ⊆ (ICC3 Module A U ICC3 Module B U
	ICC3 Module C U ICC3 Module D)
	↑ a ↑ b
	Module A Module B
	Module A Module B
	e e
	<u> </u>
	f
	h h
	g
	Module C Module D
	J c J d
	Y • • • • • • • • • • • • • • • • • • •
	\longleftrightarrow
	External Interfaces relevant for ICC2 clustering, subset of ICC3 interfaces to other
	BSW modules or clusters.
	\longleftrightarrow
	Internal Interferon not relevant for ICC2 electoring (see he preprietory)
	Internal Interfaces not relevant for ICC2 clustering (can be proprietary).
Reference	



3.136 ICC3 (Implementation Conformance Class 3)

Definition	For ICC3 the AUTOSAR BSW consists of BSW modules as defined in the Basic
	Software Module List, including the RTE.
	ICC3 is the highest level of granularity.
Initiator	WP Software Architecture and OS
Further	All Basic Software modules as defined in the BSW module list including the RTE,
Explanations	must comply with the defined interfaces and functionality as specified in their
	respective Software specification document (SWS).
Comment	
Example	
Reference	

3.137 Implementation Conformance Statement

Definition	Implementation Conformance Statement (ICS) describes the actual implementation of a BSW module or a BSW cluster in terms of
	(1) the actually supported values or value ranges of parameters that enable the
	configuration of the functionality of a module/cluster implementation and
	(2) the signatures of the operations actually provided and required at the interface of a module/cluster implementation
Initiator	WP Conformance Test Specification
Further	(1) An SWS of a module/cluster specifies the configurable functionality and
Explanations	configurable operations of all SWS-conformant module/cluster implementations (BSW implementations). The ICS restricts the generally configurable functionality and operations according to what a concrete module/cluster actually implements according to the specification (SWS).
	(2) The ICS is used to derive values of configuration parameters (CP) valid for the given implementation of a module/cluster and, e.g., to select and parameterize conformance test suites.
	(3) A BSW implementation can consist of variable parts, i.e., operations and functionality. A BSW implementation can be adjusted with CPs within a certain range of permitted parameter values. An ICS describes which parts a BSW implementation actually supports and to what extend.
	 (4) For any given CP: a. The absolute range is limited by the type of the CP. b. The permitted range is limited by the SWS. c. The actual range is limited by the implementation of the BSW module or BSW cluster. A test suite or the integration of the BSW module or BSW cluster into a target platform limits the actual range to a single value.
Comment	An ICS is a view on a BSW Module Description (BSWMD). An ICS can be extracted from a BSWMD.
Example	(1) An ICS describes which operations a BSW module/cluster actually provides (2) The number of entries for the standard job queue of the NVRAM Manager (NvM) is defined with CP NVM_SIZE_STANDARD_JOB_QUEUE. a. The type of the CP is unit8. Thus the absolute range is 0255. b. The SWS limits the permitted range to 1255. c. A specific NvM implementation states to support the full range of permitted values 1255. Tests run the specific NvM implementation with job queues of 1, 8 and 173 entries. During integration the number of queue entries is limited to 64 entries
	because of known application-specific usage constraints.
Reference	The definition is partially based on ITU-T Recommendation X.296 [1]



3.138 Indication

Definition	Service primitive defined in the ISO/OSI Reference Model (ISO 7498). With the
	service primitive 'indication' a service provider informs a service user about the
	occurrence of either an internal event or a service request issued by another
	service user. [OSEK BD]
Initiator	WP Virtual Functional Bus
Further	An indication is e.g. a specific notification generated by the OSEK underlying layer
Explanations	to inform about a Message Reception Error.
Comment	
Example	OSEK Com notification class 1 and 3.
Reference	[OSEK BD], [OSEK Com]

3.139 Integration

Definition	The progressive assembling of system components into the whole system.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	[ISO 2382-20]

3.140 Integration Code

Definition	Code that the Integrator needs to add to an AUTOSAR System, to adapt non-standardized functionalities. Examples are Callouts (> definition 3.39) of the ECU State Manager and Callbacks (> definition 3.38) of various other BSW Modules (> definition 3.32).
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	

3.141 Interface

Definition	A shared boundary between two functional units (→ definition 3.125) defined by various characteristics pertaining to the functions, physical interconnections, signal exchanges, and other characteristics, as appropriate.
Initiator	WP Virtual Functional Bus
Further	In AUTOSAR the interface has specific meanings:
Explanations	See Standardized AUTOSAR Interface (→ definition 3.224) and Standardized
	Interface (→ definition 3.225).
Comment	
Example	Diagnosis Service
Reference	[ISO 2382-1]

3.142 Interrupt

Definition	Event that enforces the processor to change its state. This interruption causes the



	normal sequence of instructions to be stopped. Once an interrupt occurred, the running software entity is suspended and an interrupt service routine (> definition 0) (the one dedicated to this interrupt) is called.
Initiator	WP Virtual Functional Bus
Further	Two sorts of interrupts exists: HW and SW interrupts (→ definition 3.131 and
Explanations	definition 3.220)
Comment	
Example	
Reference	Translation/Adaptation from [VDI Lexikon]

3.143 Interrupt Frames

Definition	An interrupt frame is the code which handles the entering/leaving of (C written) interrupt service routines. This code is microcontroller specific and often written in assembly language. Interrupt frames are typically generated by the OS generation tool.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	[AUTOSAR_InterruptHandling_Explanation.doc]

3.144 Interrupt Handler

Definition	In the case of a Category 2 interrupt, the ISR is synonymous with Interrupt Handler. In the case of Category 1 interrupt the Interrupt Handler is the function called by the hardware interrupt vector. In both cases the Interrupt handler is the user code that is normally a part of the BSW module. So the Interrupt Handler is a user level piece of code.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	[AUTOSAR InterruptHandling Explanation.doc]

3.145 Interrupt Logic

Definition	This is the MCU logic that controls all interrupts for all devices. This is normally controlled by the OS.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	[AUTOSAR_InterruptHandling_Explanation.doc]

3.146 Interrupt Service Routine (ISR)

Definition	A software routine called in case of an interrupt (→ definition 3.142)
Initiator	WP Virtual Functional Bus



Further	ISRs have normally higher priority than normal processes and can only be
Explanations	suspended by another ISR which presents a higher priority than the one running.
Comment	
Example	
Reference	[VDI Lexikon]

3.147 Interrupt Vector Table

Definition	An interrupt vector table is a table of interrupt vectors that associates the interrupt service routines (→ definition 3.146) with the corresponding interrupt request (typically by an array of jumps or similar mechanisms).
Initiator	WP Implementation and Integration
Further	
Explanations	
Comment	
Example	
Reference	

3.148 Invalid Flag

Definition	For a signal in a PDU an optional invalid flag can be added to the PDU payload layout. This flag indicates the validity of other signals in the payload. In case the invalid flag of a signal is set to true in a PDU instance, the respective signal in the payload of the PDU instance does not contain a valid signal value.
Initiator	WP Gateway
Further	This mechanism may be used in gateways to indicate that parts of an PDU do not
Explanations	contain valid data.
Comment	
Example	
Reference	

3.149 Invalid Value of Signal

Definition	For a signal in a PDU an optional invalid value can be defined.
Initiator	WP Gateway
Further	The invalid value is element of the signal value range that can be represented and
Explanations	transported by the signal. The invalid value is the value that is used in all
-	situations where the receiver should be notified that the value in a signal is not
	valid.
Comment	
Example	In case a PDU for a destination network of a gateway is composed from two PDUs of two different source networks, the failure to receive one PDU can be indicated as invalid values in the respective signals of the transmitted PDU in the destination network.
Reference	

3.150 Life Cycle

Definition	The course of development/evolutionary stages of a model element during its life time.
Initiator	WP Powertrain
Further	A life cycle consists of a set of life cycle states. A life cycle state can be attached



Explanations	to an element in parallel to its version information. A typical life cycle is {valid, obsolete} and means that a valid element is up to date when first introduced but is substituted later by a new one and therefore gets the life cycle state "obsolete".
Comment	
Example	
Reference	

3.151 Link time configuration

Definition	The configuration of the SW module is done during link time.
Initiator	WP ECU Configuration
Further	The object code of the SW modules receives parts of its configuration from
Explanations	another object code file or it is defined by linker options.
Comment	
Example	Initial value of a signal.
Reference	

3.152 Mapping

Definition	Mapping designates the distribution of elements in the logical view to elements in
	the physical view.
Initiator	WP Virtual Functional Bus
Further	In general several entities may be allocated to one container but an entity may be
Explanations	allocated to only one container.
Comment	
Example	a) Mapping of AUTOSAR Signals onto Frames (for inter-ECU communication).b) Mapping of SW-C onto ECUs (Distribution of the SW-Components to the ECUs).
Reference	

3.153 MCAL Signal

Definition	The MCAL signal is the software representation of the conditioned signal (→ definition 3.54). It is provided by the microcontroller abstraction layer (MCAL) and is further processed by the ECU abstraction.
Initiator	WP ECU Resource Template
Further Explanations	The processing unit is accessing the Conditioned Signal through some peripheral device that typically digitises the Conditioned Signal into a software representation. The transformation from the Conditioned Signal to the MCAL Signal has to take the digitalization error into account in order to provide information about the quality loss between the Technical Signal and the MCAL Signal.
Comment	
Example	
Reference	

3.154 Meta Model

Definition	A Model of a Model, in other words a Model on M2.
Initiator	WP General Methodology and Configuration
Further	



Explanations	
Comment	
Example	The AUTOSAR Meta Model is an UML2.0 model that defines the language for describing AUTOSAR systems. It is a graphical representation of a template. UML2.0 class diagrams are used to describe the attributes and their interrelationships. Stereotypes and OCL (object constraint language) are used for defining specific semantics and constraints.
Reference	

3.155 Metadata

Definition	Metadata is data about data
Initiator	WP Authoring Tools
Further	Metadata includes pertinent information about data, including information about
Explanations	the authorship, versioning, access-rights, timestamps etc
Comment	
Example	
Reference	

3.156 MetaDataLength

Definition	Number of bytes of MetaData (→ definition 3.155) of a PDU.
Initiator	WP Software Architecture and OS
Further	The MetaDataLength defines the number of bytes at the end of the PDU (→
Explanations	definition 3.172) data which are not actual PDU payload but MetaData.
Comment	
Example	When MetaDataLength is set to 2, the PDU size will increase by 2, and 2 bytes of
	MetaData are appended to the PDU data.
Reference	

3.157 Microcontroller Abstraction Layer (MCAL)

Definition	Software layer containing drivers to enable the access of onchip peripheral
	devices of a microcontroller and offchip memory mapped peripheral devices by a
	defined API (→ definition 3.5).
	Task: make higher software layers independent of the microcontroller.
Initiator	WP Architecture
Further	The Microcontroller Abstraction Layer is the lowest software layer of the Basic
Explanations	Software.
	The Microcontroller Abstraction Layer consists of the following parts:
	I/O Drivers
	Communication Drivers
	Memory Drivers
	Microcontroller Drivers
	Properties:
	 Implementation: μC dependent
	 Upper Interface (API): standardizable and μC independent
Comment	
Example	Examples of drivers located in the Microcontroller Abstraction Layer are:
	onchip eeprom driver
	onchip adc driver
	offchip flash driver
Reference	[AUTOSAR Software Architecture]



3.158 Mistake

Definition	Human error
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	[DIN 40041]

3.159 Mode

Definition	A Mode is a certain set of states of the various state machines that are running in the vehicle that are relevant to a particular entity, e.g. a SW-C, a BSW module, an application or a whole vehicle. In its lifetime, an entity changes between a set of mutually exclusive Modes. These changes are triggered by environmental data, e.g. signal reception, operation invocation.
Initiator	WP VFB and RTE
Further	
Explanations	
Comment	
Example	
Reference	

3.160 Model

Definition	An M1 - Model, it is an instance of the Meta Model
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	An AUTOSAR Model is an instance of the AUTOSAR Meta Model (→ definition 3.154). The information contained in the AUTOSAR Model can be anything that is representable according to the AUTOSAR Meta Model. The AUTOSAR Model can be stored in many different ways: it might be a set of files in a file system, an XML stream, a database or memory used by some running software tools, etc.
Reference	

3.161 Multimedia Stream

Definition	A consistent sequence of digital data versus time which is suited as input for devices which transfer these data into a continuous visible or audible impression to humans. When transferred over a physical link, multimedia stream data typically are produced at the same rate (by the data source), as they are consumed (by the data sinks).
Initiator	
Further	A multimedia stream usually follows a certain standard (e.g. MPEG-x).
Explanations	When transferred over a physical link, a multimedia stream needs a certain minimum bandwidth (in terms of bits/second) in order to allow continuous impressions. A multimedia stream in a car typically exists for several seconds (a warning signal,



	a navigation hint) up to several hours (a video film, a phone call, playing a radio program). Resources (e.g. bus system channels) needed by the stream have to be allocated continuously over this lifetime (this is a difference to e.g. file transfer, which may be split into several chunks of data). The source of a multimedia stream typically is a specialized device and/or software program (a tuner, a microphone, a text-to-speech engine, etc.). The same holds for the sinks (an audio amplifier or mixer, a voice recognition software, an MPEG decoder, etc.).
Comment	The term "visible or audible impression to humans" should not be taken too literally, because streams can also be used to transfer machine readable data (e.g. modem, encrypted signals). But it is this condition, which defines the standards and technology used in multimedia streams.
Example	Audio stream as output of or input to a telephone (mono, low bandwidth) Audio stream as output of a radio tuner (stereo, high bandwidth) Video stream as output of a television tuner An example for the physical implementation on a multimedia bus is the Firewire isochronous stream. see reference
Reference	[IEEE 1394]

3.162 Multiple Configuration Sets

Definition	A SW module has more than one alternative configuration (parameter) set, which can be selected according to external requirements. The set can ONLY be selected during start-up and it is not allowed to switch the set during runtime.
Initiator	WP ECU Configuration
Further	Multiple configuration sets reside in the ECU non-volatile memory at the same
Explanations	time, the active configuration is selected at the start-up of the ECU. Only BSW
	modules can have multiple configuration sets
Comment	Multiple configuration is a kind of data variant coding
Example	The same ECU can be used for the left and the right window lifter, the actual pin
	setting determines which configuration set will be used.
Reference	

3.163 Multiplexed PDU

Definition	A multiplexed PDU is a PDU with a configurable number of different payload layouts.
Initiator	WP Gateway
Further Explanations	Each instance of a multiplexed PDU has a distinct layout. The set of possible layouts is statically defined. A selector signal defines which layout is used in a PDU instance. The selector signal must reside at the same position in all layouts. Each layout is identified by a unique selector value. The length of each instance of a multiplexed PDU is fixed.
Comment	
Example	
Reference	

3.164 Network Interface (NWI)

Definition	A Network Interface is the sum of all interfaces offered by the Basic Software (→ definition 3.31) towards its connected network.
Initiator	WP Conformance Test Specification
Further	The interface that the Basic Software shares via the communication lines with
Explanations	other systems that behave like AUTOSAR ECUs in order to



	- allow distributed SW-Cs (→ definition 3.217) to exchange inter-ECU signals and
	to - operate the communication lines (the network) is called Network Interface.
	A Network Interface (NWI) denotes the interface between the Basic Software and the physical network (OSI Layer 0) to which the ECU executing the Basic Software is connected to (e.g. CAN, LIN, FlexRay). The NWI therefore transports network data packets between the Basic Software and the physical network.
	The interfaces included within the term NWI are: - Logical interfaces, including O Network Management
	Data Management
	 Data transmission/reception
	The interfaces excluded from the term NWI are:
	- The physical network interface (CAN, FlexRay etc).
	Note that, while attention must be given to the physical form of the network, since it is not formally specified by AUTOSAR, it cannot be considered a part of the conformance test of an AUTOSAR cluster.
	The NWI provided by a given ECU supports the transfer of data to and from the ECU, and management of the network.
	For the purposes of this definition, the Basic Software can be designed according to ICC1, ICC2 or ICC3.
Comment	The term has been introduced as a short-hand to aid in discussion of the conformance of the content of ICC1 / 2 and to define the backward compatibility between releases and revisions. However, since from the network perspective, the clustering of the Basic Software is invisible, the Network Interface is applicable to all potential Basic Software conformance classes (ICC1, ICC2, ICC3) in the same way.
Example	
Reference	Software Component Interface (SW-CI)

3.165 NM Coordination Cluster

Definition	A discrete set of NM Channels on which shutdown is coordinated.
Initiator	WP COM Stack
Further	The NM Coordinator will keep all presently awake NM Channels of an NM
Explanations	Coordination Cluster awake until it is possible to coordinate network sleep on all
	the awake channels.
Comment	
Example	
Reference	AUTOSAR Generic NM Interface

3.166 NM Coordinator

Definition	A functionality of the Generic NM Interface which allows coordination of network
	sleep for multiple NM Channels.
Initiator	WP COM Stack
Further	Depending on configuration, different level of synchronous network sleep can be
Explanations	achieved. The NM Coordinator is using a generic coordination algorithm which, by means of individually configured timeout and synchronization indications can coordinate a synchronized shutdown of multiple NM Channels.
Comment	



Example	
Reference	AUTOSAR Generic NM Interface

3.167 Notification

Definition	Informing a software entity about a state change of a hardware and/or software
	entity which has occurred.
Initiator	WP Virtual Functional Bus
Further	The informing about a state change can be done by an activation of a software
Explanations	part or by setting a flag (→ definition 3.97).
Comment	
Example	
Reference	[OSEK Com]

3.168 OS-Application

Definition	A block of software including tasks, interrupts, hooks and user services that form a cohesive functional unit.
Initiator	WP Vehicle Mode Management and Application Mode Management
Further	Trusted:
Explanations	An OS-Application that may be executed in privileged mode and may have unrestricted access to the API and hardware resources. Only trusted applications can provide trusted functions. Non-trusted: An OS-Application that is executed in non-privileged mode has restricted access to the API and hardware resources.
Comment	The trusted / non-trusted attribute of an OS-Application is not related to ASIL/non-ASIL.
Example	
Reference	[AUTOSAR Specification of OS]

3.169 Partial Model

Definition	This is a part of a model which is intended to be persisted in one particular artifact.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.170 Partitioning


Definition	Decomposition, the separation of the whole system into functional units and
	further into software components.
Initiator	WP Safety Aspect
Further	Partitioning has to be done before the mapping in order to identify the components
Explanations	that are to be mapped.
Comment	
Example	
Reference	Based on [IEEE Std.610.12-1990]



3.171 PCI

Definition	PCI is the abbreviation of "Protocol Control Information". This Information is needed to pass a SDU (→ definition 3.207) from one instance of a specific protocol layer to another instance. E.g. it contains source and target information.
Initiator	WP Architecture
Further	The PCI is added by a protocol layer on the transmission side and is removed
Explanations	again on the receiving side.
Comment	
Example	
Reference	

3.172 PDU

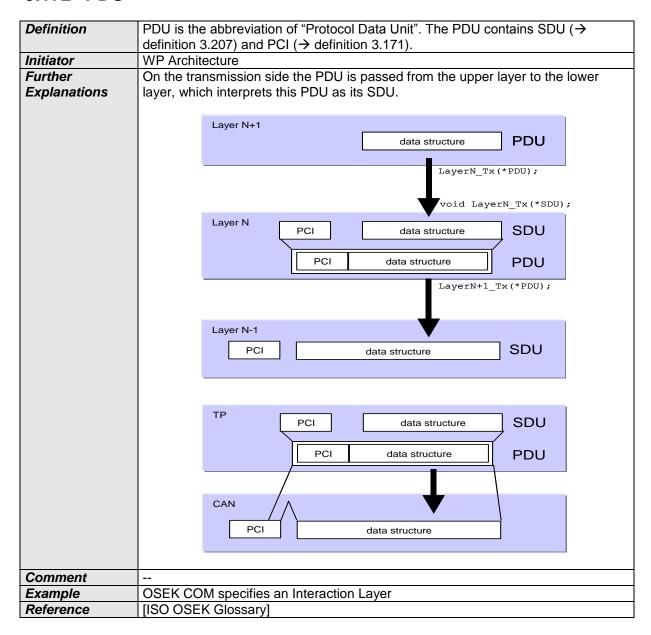



3.173 PDU MetaData

Definition	Additional data of a PDU (→ definition 3.172), which is not part of the payload.
Initiator	WP Software Architecture and OS
Further	MetaData (→ definition 3.155) is placed behind the PDU payload in the PDU
Explanations	buffers. The size of the MetaData is determined by the MetaDataLength (→
	definition 3.156).
Comment	MetaData was introduced to transport parts of the CAN ID or addressing
	information alongside the data of a PDU.
Example	Diagnostics according to ISO 15765/14229, J1939 parameter group handling.
Reference	

3.174 PDU Timeout

Definition	Maximum time between the receptions of two instances of one PDU is exceeded.
Initiator	WP Gateway
Further Explanations	This timeout indicates that the last reception of a PDU instance is too long in the past. As a consequence it can be concluded that the data in the last PDU instance is outdated.
Comment	
Example	
Reference	

3.175 Peripheral Hardware

Definition	Hardware devices integrated in micro-controller architecture to interact with the
	environment.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Memory, CAN-Controller, ADC, DIO, etc.
Reference	

3.176 Personalization

Definition	User-specific and memorized adjustment of SW data or selection of functional alternatives.
Initiator	WP Body and Comfort
Further	
Explanations	
Comment	
Example	Seat parameters (position, activation status of drive-dynamic seat) can be stored in correlation to a user ID. For a given user ID the seat can be adjusted according to the stored position parameters and the drive-dynamic seat can be activated or deactivated.
Reference	

3.177 Port

Definition A port belongs to a software component (→ definition 3.217) and is the interaction
--



	point between the component and other components. The interaction between specific ports of specific components is modeled using connectors (→ definition 3.59). A port can either be a p-port (→ definition 3.186) or an r-port (→ definition 3.191).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	For more information see AUTOSAR Specification of VFB
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.178 Port Interface

Definition	A Port Interface characterizes the information provided or required by a port (→ definition 3.177) of a software component (→ definition 3.217).
Initiator	WP Virtual Functional Bus
Further	A Port Interface is either a Client-Server Interface (→ definition 3.46) in case
Explanations	client-server communication (→ definition 3.45) is chosen or a sender-receiver
	Interface (→ definition 3.210) in case sender-receiver communication (→ definition
	3.209) is used.
Comment	For more information see: AUTOSAR Specification of VFB
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.179 Post-build time configuration

Definition	The configuration of the SW module is possible after building the SW module.
Initiator	WP ECU Configuration
Further Explanations	The SW may receive its configuration file that can be downloaded to the ECU separately, avoiding a re-compilation and re-build of the ECU SW modules. In order to make the post-build time re-configuration possible, the re-configurable elements shall be stored at a known position in the ECU storage area
Comment	
Example	Identifiers of the CAN frames
Reference	

3.180 Pre-Compile time configuration

Definition	The configuration of the SW module is done at source code level and will be
	effective after compile time.
Initiator	WP ECU Configuration
Further	The source code contains all the ECU configuration data and when compiled
Explanations	together, it produces the given SW.
Comment	
Example	Preprocessor switch for enabling the development error detection and reporting
Reference	

3.181 Pretended Networking

	Method to reduce energy consumption in an existing active network without changing network infrastructure.
Initiator	WP Software Architecture and OS



Further	
Explanations	
Comment	
Example	
Reference	

3.182 Private Interface (API 3)

Definition	A private interface is an interface within the Basic Software (→ definition 3.31) of AUTOSAR which is neither standardized nor defined within AUTOSAR.
Initiator	WP Architecture
Further Explanations	The goal of the private interface is to enable a more efficient implementation of basic software modules. Basic software modules sharing a private interface have to be distributed as one package. This package has to behave exactly the same as separate modules would. It must provide the same standardized interfaces to the rest of the basic software and/or RTE as separate modules would. It has to be configured exactly the same as separate modules would be configured.
Comment	Private interfaces contradict the goal of exchangeability of standard software modules and should be avoided.
Example	
Reference	

3.183 Probability of failure

Definition	Probability of the occurrence of a failure in a system or functional unit.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	

3.184 Procedure Call

Definition	A simple statement that provides the actual parameters for and invokes the
	execution of a procedure (software function).
Initiator	WP Virtual Functional Bus
Further	A synchronous communication mechanism can be implemented by a procedure
Explanations	call.
Comment	
Example	
Reference	[ISO 2382-15]

3.185 Process

Definition	An executable unit managed by an operating system scheduler that has its own name space and resources (including memory) protected against use from other processes.
Initiator	WP Virtual Functional Bus
Further	A process consists of n Task (n>=1)
Explanations	
Comment	



Example	
Reference	

3.186 Provide Port

Definition	Specific Port (→ definition 3.177) providing data (→ definition 3.62) or providing a
	service of a server (→ definition 3.212).
Initiator	WP Virtual Functional Bus
Further	The Provide Port is sometimes abbreviated as PPort or P-Port.
Explanations	
Comment	
Example	Server Port
	Sender Port
Reference	

3.187 Rate Conversion

Definition	Operation to change the timing between two transmissions of the same Pduld on one physical Network.
Initiator	WP COM Stack
Further	
Explanations	
Comment	
Example	
Reference	

3.188 Redundancy

Definition	Existence of means in addition to the means that would be sufficient for an
	element to perform a required function or to represent information.
Initiator	WP Safety Aspect
Further	Redundancy is used in ISO 26262 with respect to achieving a safety goal, a
Explanations	specified safety requirement, or representing safety-related information.
Comment	
Example	Duplicated functional components can be an instance of redundancy for the
	purpose of increasing availability or allowing fault detection.
	The addition of parity bits to data representing safety-related information provides
	redundancy for the purpose of allowing fault detection.
Reference	[ISO DIS 26262, Part 1]

3.189 Reliability

Definition	Probability of a system or functional unit to perform as expected under specified
	conditions within a time interval.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	



3.190 Relocatability

Definition	Capability of a software part being executed on different hardware environments
	without changing the code of the software part.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	

3.191 Require Port

Definition	Specific Port (→ definition 3.177) requiering data (→ definition 3.62) or requiering
	a service of a server.
Initiator	WP Virtual Functional Bus
Further	The Require Port is sometimes abbreviated as RPort or R-Port.
Explanations	
Comment	
Example	Client Port
	Receiver Port
Reference	

3.192 Required property

Definition	A <i>required</i> property or quality of a design entity (e.g. SW component or system) is a property or quality which has to be fulfilled by the environment of this design entity.
Initiator	WP Body and Comfort
Further	A property or quality can be required by a stakeholder (e.g. customer) or another
Explanations	design entity.
Comment	
Example	 In order to meet its functionality, a SW component A requires a minimum temporal resolution of a signal (information on a required port) which has to be fulfilled by SW component B. SW component requires to be activated by the runtime environment every 100ms with a jitter of 10ms.
Reference	Compare term asserted property (→ definition 3.9)

3.193 Residual Error Rate

Definition	The ratio of the number of bits, unit elements, or blocks incorrectly received and undetected, to the total number of bits, unit elements, characters, or blocks sent.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	



3.194 Resource

Definition	A resource is a required but limited hardware entity of an ECU (→ definition 3.77), which in general can be accessed concurrently, but not simultaneously, by multiple software entities.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	The OSEK definition [OSEK BD] cannot be used, due to the specific usage in OSEK OS.
Example	CPU-load, interrupts (mechanism itself and the resulting CPU-load), memory, peripheral hardware, communication,
Reference	

3.195 Resource-Management

Definition	Entity which controls the use of resources (→ definition 3.194).
Initiator	WP Virtual Functional Bus
Further Explanations	The main functionality of resource management is the control of simultaneous use of a single resource by several entities, e.g. scheduling of requests, multiple access protection.
Comment	
Example	OS-scheduler (CPU-load management)
Reference	

3.196 Response Time

Definition	Time between receiving a stimulus and delivering an appropriate response or reaction.
Initiator	WP SW Component Template
Further Explanations	The response time describes the time between a stimulus like e.g. the state change of hardware or software entity and the expected reaction of the system (e.g. response, actuator activation). Synonym: reaction time See also: execution time, worst case execution time and worst case response time.
Comment	
Example	
Reference	

3.197 Risk

Definition	Combination of the probability of occurrence of harm and the severity of that harm.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	[ISO DIS 26262, Part 1]



3.198 Robustness

Definition	Ability of a system or functional unit to perform as expected also under
	unexpected conditions.
Initiator	WP Safety Aspect
Further	
Explanations	
Comment	
Example	
Reference	

3.199 RTE Event

Definition	An RTE Event encompasses all possible situations that can trigger execution of a runnable entity (\rightarrow definition 3.200) by the RTE. Thus they can address timing, data sending and receiving, invoking operations, call server returning, mode switching, or external events. RTE Events can either activate a runnable entity or wakeup a runnable entity at its waitpoints.
Initiator	Stefaan Sonck Thiebaut
Further	Note 'event' in this context is not necessarily synonymous with 'RTEEvent' as
Explanations	defined in the VFB specification. In particular, RTE Events that result from
	communication are handled by communication-triggered runnable entities.
Comment	Events can have a variety of sources including time.
Example	Scheduling of runnable entities from angular position, e.g. a crankshaft, that are used to trigger an interrupt and hence an RTE notification. A software component needs to perform a regular interval, e.g. flash an LED, reset a watchdog, etc.
Reference	

3.200 Runnable Entity

Definition	A Runnable Entity is a part of an Atomic Software-Component (→ definition 3.14) which can be executed and scheduled independently from the other Runnable Entities of this Atomic Software-Component. It is described by a sequence of instructions that can be started by the RTE (definition→ 3.199). Each runnable entity is associated with exactly one Entry Point (definition→ 3.80).
Initiator	WP Virtual Functional Bus
Further	A Runnable Entity contains at least two points for the Scheduler (→ definition
Explanations	3.206):
	1 Entry Point (→ definition 3.80) and 1 Exit Point (→ definition 3.85).
	Due to the reason that an Atomic Software Component is not dividable, all its
	Runnable Entities are executed on the same ECU.
Comment	In general a task in the runtime system consists out of n Runnable Entities of m
	Atomic Software-Components.
Example	Server function of a Software Component.
Reference	

3.201 SAE J1939

Definition	SAE J1939 is a vehicle bus standard created by the SAE (Society of Automotive
	Engineers, a USA standards body) for car and heavy duty truck industries.
Initiator	WP COM Stack
Further	The J1939 standard encompasses the following areas:
Explanations	- bus physics (J1939/11, J1939/15)



Comment	- CAN message layout (J1939/21) - request/response and multi packet transport protocols (J1939/21) - network management used to assign a unique address to each node (J1939/81) - diagnostics layer comparable to UDS in complexity (J1939/73) - standardized application signals and messages (J1939/71) The J1939 standard is used by most truck manufacturers worldwide and is prescribed for OBD in some states of the USA. It is also used as a base for other standards for maritime (NMEA 2000), agricultural (ISO 11783), and military (MilCAN A) applications.
Example	
Reference	http://www.sae.org/

3.202 Safety

Definition	Absence of unreasonable risk.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	[ISO DIS 26262, Part 1]

3.203 Safety Protocol

Definition	A communication protocol defining the necessary mechanisms to ensure the integrity of transmitted data and to detect any communication related error.
Initiator	WP Functional Safety and Processes
Further	
Explanations	
Comment	
Example	
Reference	

3.204 Sample Application

Definition	Defined system used for evaluation purposes.
Initiator	WP Virtual Functional Bus
Further	The application may be simplified for better understanding within the evaluation
Explanations	phase.
Comment	-
Example	Diagnosis Application
	Exterior Light Management
Reference	

3.205 Scalability

Definition	The degree to which assets can be adapted to specific target environments for various defined measures.
Initiator	WP Virtual Functional Bus
Further	
Explanations	



Comment	Target environment introduced compared to EAST-Glossary.
Example	
Reference	[EAST-Glossary]

3.206 Scheduler

Definition	The scheduler handles the scheduling of the tasks/runnable entities (definition → 3.235 / 3.200) according to the priority and scheduling policy (pre-defined or configurable). It has the responsibility to decide during run-time when which task can run on on the CPU of the ECU.
Initiator	WG System Team
Further	There are many strategies (priority-based, time-triggered, round-robbin,) a
Explanations	scheduler can use, depending of the selected and/or implemented algorythms
Comment	
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.207 SDU

Definition	SDU is the abbreviation of "Service Data Unit". It is the data passed by an upper layer, with the request to transmit the data. It is as well the data, which is extracted after reception by the lower layer and passed to the upper layer.
Initiator	WP Architecture
Further	A SDU is part of a PDU (→ definition 3.172).
Explanations	
Comment	
Example	
Reference	

3.208 Security

Definition	Protection of data, software entities or resources from accidental or malicious
	acts.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	Slightly adapted norm.
Example	
Reference	[ISO 2382-8]

3.209 Sender-Receiver Communication

Definition	A communication pattern which offers asyncronous distribution of information where a sender communicates information to one or more receivers, or a receiver receives information from one or several senders.
Initiator	WP Virtual Functional Bus
Further	The process of sending data does not block the sender and the sender usually
Explanations	gets no response from the receivers
Comment	Often used for data or event distribution
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]



3.210 Sender-Receiver Interface

Definition	A sender-receiver interface is a special kind of port-interface (→ definition 3.178) used for the case of sender-receiver communication (→ definition 3.209). The sender-receiver interface defines the data-elements which are sent by a sending component (which has a p-port providing the sender-receiver interface) or received by a receiving component (which has an r-port requiring the sender-receiver interface).
Initiator	Stefaan Sonck Thiebaut
Further	
Explanations	
Comment	A special kind of Port-Interface
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.211 Sensor/Actuator SW-Component

Definition	SW-Component (→ definition 3.217) dedicated to the control of a sensor or
	actuator.
Initiator	WP Virtual Functional Bus
Further	There will be several Sensor/ Actuator SW-Cs in each ECU. In general there will
Explanations	be one Sensor/Actuator SW-C for each sensor and one for each actuator (=> number of Sensor/Actuator SW-C = number of sensors + number of actuators).
Comment	
Example	
Reference	

3.212 Server

Definition	Software entity which provides services for clients (→ definition 3.44).
Initiator	WP Virtual Functional Bus
Further	The server (→ definition 3.212) and the clients using its service might be located
Explanations	on one ECU or distributed on different calculation units (e.g. ECU).
Comment	Adapted from Balzert.
Example	
Reference	[Balzert99]

3.213 Service

Definition	A service is a type of operation that has a published specification of interface and behavior, involving a contract between the provider of the capability and the potential clients.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Diagnosis service,
Reference	[EAST-Glossary]

3.214 Service Port

Definition	A Service Port is a Port (→ definition 3.177) of an SW-C (→ definition 3.217),



	Complex Driver (→ definition 3.51) and/or ECU Abstraction (→ definition 3.74)
	connected to an AUTOSAR Service (→ definition 3.26).
Initiator	WP Virtual Functional Bus
Further	The interface of a Service Port has to be a Standardized AUTOSAR Interface (→
Explanations	definition 3.21 and 3.224).
	A Service Port does not need to be connected to another Port in the VFB View (→
	definition 3.251).
Comment	If a service is provided by the ECU where a specific Atomic Software Component
	is located the VFB View is sufficient.
	If a service is provided by another ECU the connection of the service call to the
	service has to be done explicitly during the mapping step.
Example	Write data to non volatile memory.
Reference	

3.215 Services Layer

Definition	The Services Layer is the highest layer of the Basic Software which also applies for its relevance for the application software: while access to I/O signals is covered by the Hardware Abstraction Layer, the Services Layer offers Operating system services Vehicle network communication and management services Memory services (NVRAM management) Diagnosis Services (including KWP2000 interface and error memory) ECU state management Task: Provide basic services for application and basic software modules
Initiator	WP Architecture
Further	The Services Layer consists of the following parts:
Explanations	Communication Services
	Memory Services
	System Services
Comment	
Example	Network Management, NVRAM Manager, ECU State Manager
Reference	[AUTOSAR Software Architecture]

3.216 Shipping

Definition	Component shipment refers to the action of a supplier releasing a software component (also a composition) to the system integrator. The integrator will gather all shipments of the components that make up the whole system and then map them to ECUs.
Initiator	WP SW Component Template
Further	
Explanations	
Comment	
Example	
Reference	

3.217 Software Component (SW-C)

Definition	Software-Components are architectural elements that provide and/or require
	interfaces and are connected to each other through the Virtual Function Bus to fulfill
	architectural responsibilities.
Initiator	WP Virtual Functional Bus



Further Explanations	A Software Component has a formal description defined by the software component template (→ definition 3.237). Software Components can be abbreviated as SW-Cs. SW-Cs may be atomic components, parameter components or compositions. Also the software modules providing the Software Component Interface (→ definition 3.218) of a Basic Software Module (→ definition 3.32) are called Software Components.
Comment	
Example	
Reference	

3.218 Software Component Interface (SW-CI)

Definition	A SoftWare-Component Interface is the sum of all interfaces offered by the Basic
	Software (→ definition 3.31), towards the SW-Cs (→ definition 3.217).
Initiator	WP Conformance Test Specification
Further	A SW-CI denotes the interface between an SW-C and the underlying Basic Software
Explanations	cluster including the RTE. The SW-CI therefore comprises all API (→ definition 3.5), functions (→ definition 3.123) and Callbacks (→ definition 3.38) that the SW-C requires from and provides to the Basic Software (generally by means of RTE mechanisms). It includes also the mechanisms allowing SW-Cs sharing the SW-CI to communicate with one another. For the purposes of this definition, the Basic Software clustered on an ECU can be designed according to ICC1, 2 and 3.
Comment	The term has been introduced as a short-hand to aid in discussion of the conformance of the content of Basic Software clusters of conformance class ICC1 / 2 and to define the backward compatibility between releases and revisions. However, since from the SW-C perspective, the clustering of the Basic Software is invisible, the Component Interface is applicable to all potential Basic Software conformance classes (ICC1, ICC2, ICC3) in the same way.
Example	
Reference	Network Interface (NWI)

3.219 Software Configuration

Definition	The arrangement of software elements in a SW system.
Initiator	WP Virtual Functional Bus
Further Explanations	A software element is a clearly definable software part. A software configuration is a selection version of software modules, software components, parameters and generator configurations. Calibration and Variant Coding (→ definition 3.244) can be regarded as subset of Software Configuration.
Comment	
Example	
Reference	[EAST-Glossary]

3.220 Software Interrupt

Definition	Interrupt triggered by SW event.
Initiator	WP Virtual Functional Bus
Further	SW events are for example calling an operating system service, starting a process
Explanations	with higher priority.
Comment	
Example	
Reference	Translation/Adaptation from [VDI Lexikon]



3.221 Software Signal

Definition	A Software Signal is an asynchronous event transmitted between one process
	and another.
Initiator	WP Virtual Functional Bus
Further	A SW Signal is the software implementation of an (control-) information.
Explanations	Additionally it may have attributes (e.g. freshness, data type,). It is exchanged
	between SW-Components.
Comment	
Example	
Reference	

3.222 Special Periphery Access

Definition	Special functions to standard peripheral devices or special peripherals.
Initiator	WP Virtual Functional Bus
Further	Is only used when, because of technical issues, no standard periphery access can
Explanations	be used
Comment	
Example	
Reference	[HIS API IO Driver version 2.1] Interaction with [Hardware v0.3]

3.223 Standard Periphery Access

Definition	Standard functions to typical standard peripheral devices that is available on an
	ECU (most microcontroller integrated) used in automotive embedded applications.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	Digital Input/Output, Analog/Digital Converter, Pulse Width (De)Modulator,
	EEPROM, FLASH, Capture Compare Unit, Watchdog Timer
Reference	[HIS API IO Driver version 2.1] Interaction with Hardware v0.3

3.224 Standardized AUTOSAR Interface

Definition	This is an AUTOSAR Interface which is standardized within the AUTOSAR
	project.
Initiator	WP Virtual Functional Bus
Further	AUTOSAR Services (→ definition 3.26) interact with other components through a
Explanations	Standardized AUTOSAR Interface.
•	AUTOSAR Interfaces can be derived from AUTOSAR Application Interfaces (→
	definition 3.17).
Comment	
Example	
Reference	

3.225 Standardized Interface

Definition	A software interface is called Standardized Interface if a concrete standardized API exists.
Initiator	WP Virtual Functional Bus



Further	Modules in the Basic Software interact which each other through Standardized
Explanations	Interfaces.
Comment	
Example	OSEK COM Interface
Reference	

3.226 Standard Software

Definition	Standard Software is software which provides schematic independent infrastructural functionalities on an ECU. It contains only Standardized Interfaces (→ definition 3.225), Standardized AUTOSAR Interfaces (→ definition 3.224) and/or Private Interfaces (→ definition 3.182).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	OSEK COM, MCAL, Services, OSEK OS
Reference	

3.227 Static Configuration

Definition	A setup where the routing configuration cannot be changed during normal
	operation of the gateway.
Initiator	WP Gateway
Further Explanations	Static configuration doesn't allow reconfiguration of the routing during normal operation e.g. during driving. Static configuration does not restrict the update of the configuration in specific maintenance operation modes (e.g. programming mode).
Comment	
Example	A software update may change a routing configuration such that a PDU is routed into two instead of one destination networks.
Reference	

3.228 Surveillance

Definition	Systematic iteration of a reduced full-set assessment (→ definition 3.10) as a
	basis for maintaining the validity of the full-set assessment.
Initiator	WP Exploitation
Further	Within AUTOSAR context, reduced set surveillances of the accredited party are
Explanations	scheduled yearly between the full-set assessments.
Comment	Supplementary full-set assessments are scheduled.
Example	
Reference	[ISO/IEC 17000]

3.229 Synchronize

Definition	To make two or more events or operations to occur at the same predefined
	moment in time.
Initiator	WP COM Stack
Further	
Explanations	
Comment	



Example	Two NM Channels can enter Bus Sleep Mode at the same time ("synchronized
	network sleep") or they can be ordered to go to sleep at the same time
	("synchronized shutdown initiation").
Reference	AUTOSAR Generic NM Interface

3.230 Synchronous Communication

Definition	A communication is synchronous when the calling software entity is blocked until the called operation is evaluated. The calling software entity continues its operation by getting the result.
Initiator	WP Virtual Functional Bus
Further	Synchronous communication between distributed functional units has to be
Explanations	implemented as remote procedure call.
Comment	Are further mechanisms possible?
Example	
Reference	

3.231 Synchronous Function

Definition	A function is called synchronous if the described functionality is guaranteed to be completed the moment the function returns to the caller.
Initiator	WP Software Architecture and OS
Further	
Explanations	
Comment	
Example	
Reference	

3.232 System

Definition	An integrated composite that consists of one or more of the processes, hardware, software, facilities and people, that provides a capability to satisfy a stated need or objective.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	ITEA EAST uses IEEE 14407 standard. Here not applicable because of problem with the definition of function. One correct interpretation is: - it might be a composition of one or more ECUs
Example	Braking system
Reference	[ISO 12207]

3.233 System Constraint

Definition	Boundary conditions that restrict the Design-Freedom of the (cars E/E-) System.
Initiator	WP System Constraint Template
Further	The design of ECU Networks and the distribution of functionalities to ECUs are
Explanations	limited by several constrains. These constraints result mostly by the
	communication matrix and safety requirements
Comment	
Example	An existing communication matrix that restricts the distribution of signals to frames



	is a system constraint. Another system constraint is a safety requirement that does not allow to map a specified Software component to specific ECU.
Reference	

3.234 System Signal

Definition	The system signal represents the communication system's view of data exchanged between SW components which reside on different ECUs. The system signals allow to represent this communication in a flattened structure, with (at least) one system signal defined for each data element sent or received by a SW component instance. If data has to be sent over gateways, there is still only one system signal representing this data. The representation of the data on the individual communication systems is done by the cluster signals.
Initiator	WP System Constraint Template
Further	
Explanations	
Comment	
Example	
Reference	

3.235 Task

Definition	A Task is the smallest schedulable unit managed by the OS. The OS decides
	when which task can run on the CPU of the ECU.
Initiator	WP Virtual Functional Bus
Further	A runnable entity (→ definition 3.200) of a software component runs in the context
Explanations	of a task. Also the Basic Software Modules runs in the context of a task.
Comment	
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.236 Technical Signal

Definition	The technical signal is the physical value of an external event coupled to an AUTOSAR system. Technical signals are represented in SI units (e.g. pressure in PA).
Initiator	WP ECU Resource Template
Further	The term Technical Signal is used when we are referring to the "real world" signal
Explanations	that is under consideration. So typical Technical Signals are temperature, velocity,
	torque, force, electrical current and voltage, etc.
Comment	
Example	
Reference	

3.237 Template

Definition	A template is a structured collection of attributes that are required to formally describe AUTOSAR artifacts like e.g. software components or configurations of ECUs.
Initiator	WP Virtual Functional Bus
Further	The term "Template" stresses the fact that the collected attributes still need to
Explanations	have actual values assigned in order to describe a particular artifact. Those values



	are collected in a Description. Templates are independent of the technology used for serialization of their respective descriptions. Possible serializations include XML, databases tables and so on.
Comment	
Example	The templates defined by AUTOSAR are represented as an UML2.0 model (→ definition 3.22) and an W3C XML Schema (→ definition 3.29). Models and descriptions created according to the templates can be exchanged using the language defined in the AUTOSAR XML Schema).
Reference	

3.238 Third party

Definition	An organization that is independent of the organization that provides automotive products, which are subject to AUTOSAR conformance testing.
Initiator	WP Exploitation
Further	Criteria for the independence of conformity assessment (→ definition 3.10) bodies
Explanations	and accreditation (→ definition 3.1) bodies are provided in the International
	Standard and Guides applicable to their activities.
Comment	
Example	
Reference	ISO/IEC 17000]

3.239 Timeout

Definition	Notification with respect to deadline violation of an event or task (e.g. while working on/with information: receiving, sending, processing,).
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	
Example	
Reference	

3.240 Use Case

Definition	A model of the usage by the user of a system in order to realize a certain
	functional feature of the system.
Initiator	WP Virtual Functional Bus
Further	
Explanations	
Comment	Added certain compared to EAST-glossary.
Example	
Reference	[EAST-Glossary]

3.241 Validation

Definition	Confirmation by examination and provisions of objective evidence that the
	particular requirements for a specific intended use are fulfilled.
Initiator	WG System Team
Further	In design and development, validation concerns the process of examining a
Explanations	product to determine conformity with user needs.
	Validation is normally performed on the final product under defined operating
	conditions. It may be necessary in earlier stages.



	"Validated" is used to designate the corresponding status. Multiple validations may be carried out if there are different intended uses. [ISO 8402: 1994]
Comment	
Example	
Reference	[IEEE 1012:1998]

3.242 Variability

Definition	Variability of a system is its quality to describe a set of variants. These variants are characterized by variant specific property settings and / or selections.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	As an example, such a system property selection manifests itself in a particular "receive port" for a connection.
Reference	

3.243 Variant

Definition	A system variant is a concrete realization of a system, so that all its properties have been set respectively selected. The software system has no variability anymore with respect to the binding time.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.244 Variant Coding

Definition	Adaptation of SW by selection of functional alternatives according to external
	requirements (e.g. country-dependent or legal restrictions).
Initiator	WP Virtual Functional Bus
Further	The major difference with calibration is that this later doesn't aim to adapt the SW
Explanations	functionality itself but only aims to adjust the SW to the HW/SW environment, e.g.
_	the calibration of engine control SW that is adjusted to the physical parameters of
	every engine.
	Variant Coding also includes vehicle-specific (not user-specific) SW adaptation
	due to end-customer wishes (e.g. deactivation of speed-dependent automatic
	locking). Variant Coding is always done after compile time. Used techniques to
	select variants include end-of-line programming and garage programming.
Comment	
Example	Country related adaptation of MMI with respect to speed and/or temperature unit
•	(km/h vs. mph, °C vs. F).
Reference	

3.245 Variation Binding

Definition	A variant is the result of a variation binding process that resolves the variability of



	the system by assigning particular values/selections to all the system's properties.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.246 Variation Binding Time

Definition	The variation binding time determines the step in the methodology at which the
	variability given by a set of variable properties is resolved.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.247 Variation Definition Time

Definition	The variation definition time determines the step in the methodology at which the
	variation points are defined.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.248 Variation Point

Definition	A variation point indicates that a property is subject to variation. Furthermore, it is associated with a condition and a binding time which define the system context for the selection / setting of a concrete variant.
Initiator	WP General Methodology and Configuration
Further	
Explanations	
Comment	
Example	
Reference	

3.249 Vendor ID

Definition	A vendor ID is a unique identification of the vendor of a software component. All basic software modules (→definition 3.32) conformant to the AUTOSAR standard shall provide a readable vendor ID.
Initiator	WP Architecture
Further Explanations	AUTOSAR Vendor IDs are used to determine vendors of basic software modules before and during runtime. The mechanism is used to improve bug handling. AUTOSAR currently only provides Vendor IDs to members of the AUTOSAR partnership.



Comment	To apply for an AUTOSAR vendor ID the possible member has to send an E-Mail to request@autosar.org. Within the request name of the company, company address and contact person should be listed. In order to keep administrative overhead low, AUTOSAR and the HIS initiative run a joint list of vendor IDs.
Example	Vendor ID for EEPROM driver is called: EEP_VENDOR_ID
Reference	SRS_BSW_00374

3.250 Verification

Definition	Confirmation by examination and provisions of objective evidence that specified requirements have been fulfilled.
Initiator	WG System Team
Further Explanations	In design and development, verification concerns the process of examining the result of a given activity to determine conformity with the stated requirement for that activity. "Verified" is used to designate the corresponding status. [ISO 8402: 1994]
Comment	
Example	
Reference	[IEEE 1012:1998]

3.251 VFB View

Definition	The VFB View describes systems or subsystems in the car independently of these resources; in other words, independently of: • what kind of and how many ECUs are present in the car • on what ECUs the entities in the VFB-View run • how the ECUs are interconnected: what kind of network technology (CAN,
	LIN,) and what kind of topology (presence of gateways) is used
Initiator	WP Virtual Functional Bus
Further	In the VFB-View, the system or subsystem under consideration is a Composition
Explanations	which consists out of Connectors and Components.
Comment	
Example	
Reference	[AUTOSAR Specification of Virtual Functional Bus]

3.252 Virtual Functional Bus (VFB)

Definition	The Virtual Functional Bus is an abstraction of the communication between Atomic Software Components (→ definition 3.14) and AUTOSAR Services (→ definition 3.26). This abstraction is such that specification of the communication mechanisms is independent from the concrete technology chosen to realize the communication.
Initiator	WP Virtual Functional Bus
Further	After compilation and linking of software for a dedicated ECU (→ definition 3.77)
Explanations	the Virtual Functional Bus interfaces are realized by the AUTOSAR Runtime
	Environment.
Comment	
Example	
Reference	



3.253 Virtual Integration

Definition	The simulated, modeled and/or calculated (not real) combination of software
	entities forming a system (→ definition 3.232).
Initiator	WP Virtual Functional Bus
Further	By virtual integration several constraints and/or requirements are checked without
Explanations	the need of real hardware units, like needed CPU load, needed memory,
	completeness of interfaces, fulfillment of timing requirements etc.).
Comment	
Example	
Reference	

3.254 Worst Case Execution Time

Definition	Maximum possible time during which a program is actually executing
Initiator	WP Virtual Functional Bus
Further	The worst case execution time of a piece of software is the maximum possible
Explanations	time during which the CPU is executing instructions which belong to this piece. The worst case execution time is often identified by analytical methods. It is required to determine if a schedule meets the overall timing requirements. Abbreviation: WCET See also: response time, execution time, worst case response time
Comment	This definition has been extended by WP COM
Example	
Reference	

3.255 Worst Case Response Time

Definition	Maximum possible time between receiving a stimulus and delivering an
	appropriate response or reaction.
Initiator	WP Virtual Functional Bus
Further	The worst case response time describes the maximum possible time between a
Explanations	stimulus like e.g. the state change of hardware or software entity and the expected reaction of the system (e.g. response, actuator activation).
	Typically: worst-case execution-time + infrastructure-overhead + scheduling-policy = worst-case reaction time
	Synonym: worst case reaction time
	See also: response time, execution time, worst case execution time
Comment	Worst case reaction time was renamed to worst case response time because response time is the more common terminology. This definition has been extended by WP COM.
Example	
Reference	



Annex 1: Literature

[Balzert99], Balzert, H. "Lehrbuch Grundlagen der Informatik" Spektrum Verlag, Heidelberg, 1999

[DCE-IDL], Remote Procedure Call http://www.opengroup.org/onlinepubs/9629399/chap1.htm

[EAST-Glossary], ITEA Project 00009 EAST-EEA Embedded Electronic Architecture "Glossary", Version 6.1, 2003

[Hyper Dictionary], Hyper Dictionary, 2003 www.HyperDictionary.com

[IEEE 1471], Institute of Electrical and Electronics Engineers, Inc. "IEEE 1471-2000: IEEE Recommended Practice for Architectural Description for Software- Intensive Systems", 2001

[IEEE 1517], Institute of Electrical and Electronics Engineers, Inc. "IEEE 1517-1999: IEEE Standard for Information Technology – Software Life Cycle Processes – Reuse Processes", 2000

[ISO 12207], International Standardization Organization "ISO/IEC 12207 Information technology – Software life cycle process", first edition, Geneva, 1995

[ISO 2382-1], International Standardization Organization "ISO/IEC 2382 Part 1 Information technology – Vocabulary – Fundamental Terms", Third Edition, Geneva, 1993

[ISO 2382-14], International Standardization Organization "ISO/IEC 2382 Part 14 Information technology – Vocabulary – Reliability, maintainability and availability", Second Edition, Geneva, 1997

[ISO 2382-15], International Standardization Organization "ISO/IEC 2382 Part 15 Information technology – Vocabulary – Programming Languages", First Edition, Geneva, 1999

[ISO 2382-20], International Standardization Organization "ISO/IEC 2382 Part 20 Information technology – Vocabulary – System Development", First Edition, Geneva, 1990

[ISO 2382-8], International Standardization Organization "ISO/IEC 2382 Part 1 Information technology – Vocabulary – Security", Second Edition, Geneva, 1998

[ISO 61511-1], International Standardization Organization "ISO/IEC 61511 Part 1 Information technology – Software life cycle process", First Edition, Geneva, 1995

[ISO DIS 26262, Part 1], International Standardization Organization "ISO/IEC 26262 Part 1 Road vehicles – Functional safety: Vocabulary"



[OMG-IDL],

http://www.omg.org/technology/documents/formal/corba_2.htm

[OSEK BD], OSEK/VDX "Binding Specification", Version 1.4.1, January 2003

[OSEK Com], OSEK/VDX "Communication", Version 3.0.1, January 2003

[ISO 7498], Information processing systems -- Open Systems Interconnection -- Basic Reference Model

[DIN 40041], DIN 40041 Ausgabe:1990-12 Zuverlässigkeit; Begriffe Deutsche Industrie Norm

[VDI Lexikon], Translation/Adaptation from VDI Lexikon Informatik und Kommunikationstechnik, Springer Verlag, Berlin 1999,

[HIS API IO Driver V 2.1],

http://www.automotive-his.de/download API_IODriver_2_1_3.pdf

[IEEE.610.12-1990], IEEE Standard Glossary of Software Engineering Terminology; ISBN 1-55937-067-X, SH13748

[UML 2.0] Unified Modeling Language

Superstructure, Version 2.0, OMG Available Specification, ptc/05-07-04. http://www.omg.org/cgi-bin/apps/doc?formal/05-07-04.pdf

[IEEE 1394] Firewire, see "isochronous stream" http://www.1394ta.org/Technology/Specifications/specifications.htm

[FR_PROTOCOL] FlexRay Communications System Protocol Specification V2.1 http://www.flexray.com/