
## **PyBoard2 Pinouts**

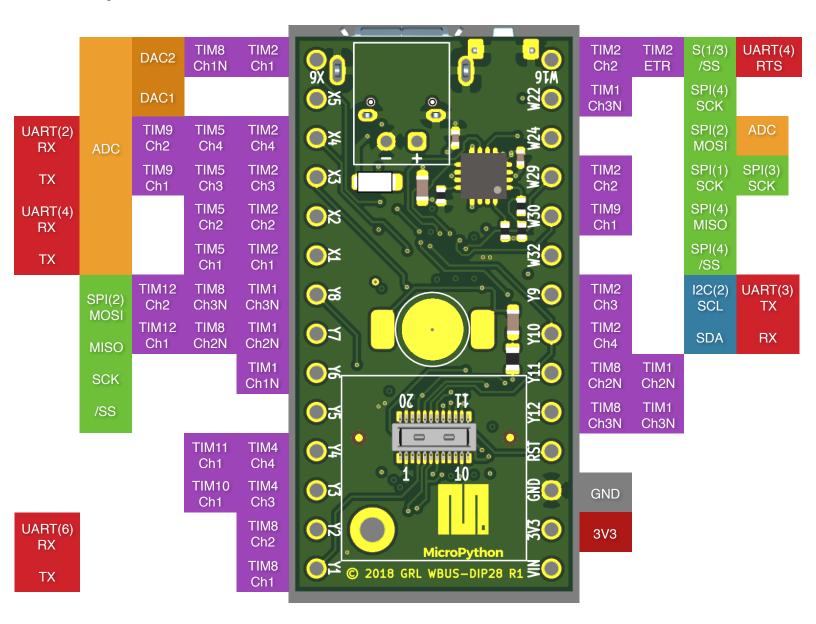

**Other Names** 

X1,PA0	Y1,PA9
X2,PA1	Y2,PA10
X3,PA2	Y3,PB4
X4,PA3	Y4,PB5
X5,PA4	Y5,PB12
X6,PA5	Y6,PB13
X7,PA6	Y7,PC2
X8,PA7	Y8,PC3
X9,PB8	Y9,PB10
X10,PB9	Y10,PB11
X11,PC4	Y11,PB0
X12,PC5	Y12,PB1

W16 = PA15 -- TIM2\_CH1/TIM2\_ETR,SPI1\_NSS,SPI3\_NSS,UART4\_RTS

W22 = PE12 -- TIM1\_CH3N,SPI4\_SCK

W24 = PC1 -- SPI2\_MOSI,ADC123\_IN11

W29 = PB3 -- TIM2\_CH2,SPI1\_SCK,SPI3\_SCK

W30 = PE5 -- TIM9\_CH1,SPI4\_MISO

W32 = PE4 -- SPI4\_NSS