

Z-Stack Monitor and Test API

Document Number: SWRA198

Texas Instruments, Inc. San Diego, California USA

Version	Description	Date
1.0	Initial Release	09/06/2008
1.1	Update address type for AUTOPEND	04/02/2009
1.2	Add MT_AF command and MT_ZDO callback for source routing	06/25/2009
	Add MT_AF commands to support inter-pan	
	Add MT_ZDO commands to support link key configuration	
1.3	Add MT_ZDO commands to MSG callback register/remove/indicate	01/17/2010
	Add MT_UTIL commands for link key establishment	
	Increase 'Length' field from uint8 to uint16 in: MT_AF_DATA_REQUEST_EXT and MT_AF_INCOMING_MSG_EXT	
	Add MT_AF_DATA_STORE and MT_AF_DATA_RETRIEVE	
	Add MT_UTIL_DATA_REQ and UTIL_TEST_LOOPBACK	
1.4	Move MT_MAC_SRC_MATCH commands to MT_UTIL	07/08/2010
	Add MT_ZDO commands to support manual joining procedure:	
	MT_ZDO_NWK_DISCOVERY_REQ	
	MT_ZDO_JOIN_REQ	
	 MT_ZDO_NWK_DISCOVERY_CNF 	
	 MT_ZDO_BEACON_NOTIFY_IND 	
1.5	• MT_JOIN_CNF	07/27/2010
1.5	Add OTE_ATSME_ENV_RET_IVV_ID_OET command	
	Add MT_SYS commands for handling system date and time:	
	• MT_SYS_GET_TIME	
	MT_SYS_SET_TIME GAMMAN AND AND AND AND AND AND AND AND AND A	
	Corrections to SYS_VERSION and ZDO_NODE_DESC_RSP commands	
	Add UTIL_APSME_REQUEST_KEY_CMD command. Changed command name from ZDO_NETWORK_DISCOVERY_REQ to	
	ZDO_NWK_DISCOVERY_REQ	
	Fixed Cmd0 for ZDO_NWK_DISCOVERY_REQ and ZDO_JOIN_REQ.	
	Add AF_APSF_CONFIG_SET, SYS_OSAL_NV_ITEM_INIT, SYS_OSAL_NV_ITEM_LENGTH, SYS_OSAL_NV_ITEM_DELETE	
1.6	commands.	07/16/2011
	Add ZDO_LEAVE_IND callback	
	Add SYS_SET_TX_POWER command	
1.7	Fixed parameter info for UTIL_ADDRMGR_EXT_ADDR_LOOKUP	03/10/2012
	Add Wildcard Profile ID bit definition in AF_DATA_REQUEST and	
	AF_DATA_REQUEST_EXT	
	Add AF_REFLECT_ERROR message	
1.8	Clarify RemoveChildren_Rejoin parameter for ZDO_MGMT_LEAVE_REQ command	11/14/2012
	Add UTIL_SRNG_GEN and UTIL_BIND_ADD_ENTRY commands	
1.9	Modify ZDO_MGMT_PERMIT_JOIN_REQ command, added AddrMode field.	11/23/2013
	Add MT_SYS commands for statistics:	
1.10	 SYS_ZDIAGS_INIT_STATS 	03/13/2014

	 SYS_ZDIAGS_CLEAR_STATS 			
	 SYS_ZDIAGS_GET_STATS 			
	SYS_ZDIAGS_RESTORE_STATS_NV			
	 SYS_ZDIAGS_SAVE_STATS_TO_NV 			
1.11	Correction to UTIL_KEY_EVENT command	12/09/2014		
	Added NV MT commands			
	SYS_NV_CREATE			
	SYS_NV_DELETE			
	SYS_NV_READ			
	SYS_NV_WRITE			
	SYS_NV_UPDATE			
	SYS_NV_COMPACT			
	Added ZDO command for new rejoin parameter ZDO_SET_REJOIN_PARAMETERS_REQ			
	Added MT_ZDO extension commands			
	MT_ZDO_SEC_ADD_LINK_KEY			
	MT_ZDO_SEC_ENTRY_LOOKUP_EXT			
	MT_ZDO_SEC_DEVICE_REMOVE			
	MT_ZDO_EXT_ROUTE_DISC			
	MT_ZDO_EXT_ROUTE_CHECK			
	MT_ZDO_EXT_REMOVE_GROUP			
	MT_ZDO_EXT_REMOVE_ALL_GROUP			
	 MT_ZDO_EXT_FIND_ALL_GROUPS_ENDPOINT 			
	MT_ZDO_EXT_FIND_GROUP			
	MT_ZDO_EXT_ADD_GROUP			
	MT_ZDO_EXT_COUNT_ALL_GROUPS			
	MT_ZDO_EXT_RX_IDLE			
	MT_ZDO_EXT_UPDATE_NWK_KEY			
	 MT_ZDO_EXT_SWITCH_NWK_KEY 			
	MT_ZDO_EXT_NWK_INFO			
	 MT_ZDO_EXT_SEC_APS_REMOVE_REQ 			
	MT_ZDO_FORCE_CONCENTRATOR_CHANGE			
1.12	MT_ZDO_EXT_SET_PARAMS	02/19/2015		
1.13	Added MT_ZDO_TC_DEVICE_IND, MT_ZDO_PERMIT_JOIN_IND, MT_ZDO_NWK_ADDR_OF_INTEREST_REQ commands	03/09/2015		
	Addition of new MT commands for the Z3 stack update			
	New ZDO command ZDO_STARTUP_FROM_APP_EX			
	Added MT_APP_CNF commands			
	APP_CNF_SET_NWK_FRAME_COUNTER			
	APP_CNF_SET_DEFAULT_REMOTE_ENDDEVICE_TIMEOUT			
	APP_CNF_SET_ENDDEVICETIMEOUT			
1.14	APP_CNF_SET_ALLOWREJOIN_TC_POLICY	10/25/2016		

- APP_CNF_BDB_START_COMMISSIONING
- APP_CNF_BDB_SET_CHANNEL
- APP_CNF_BDB_ADD_INSTALLCODE
- APP_CNF_BDB_SET_TC_REQUIRE_KEY_EXCHANGE
- APP_CNF_BDB_SET_JOINUSESINSTALLCODEKEY
- APP_CNF_BDB_SET_ACTIVE_DEFAULT_CENTRALIZED
- APP_CNF_BDB_COMMISSIONING_NOTIFICATION
- APP_CNF_BDB_ZED_ATTEMPT_RECOVER_NWK

Added MT_GREENPOWER commands

- GP_DATA_REQ
- GP_SEC_RSP
- GP_DATA_CNF
- GP_SEC_REQ

GP_DATA_IND

Table of Contents

1.	INTRO	DUCTION	1
	1.1 SCOPI	3	1
		VIEW	
	1.3 REQU	IREMENTS	2
	1.4 ACRO	NYMS	2
	1.5 Refei	RENCE DOCUMENTS	2
2.	MONIT	OR AND TEST TRANSPORT PROTOCOL	3
		AT	
		General Serial Packet	
		MT CMDPLE	
3.	MONIT	OR AND TEST COMMANDS	6
	3.1 INTRO	DUCTION	6
	3.2 MT_A	ΛF	6
	3.2.1	MT_AF Commands	6
	3.2.1.1	AF_REGISTER	
	3.2.1.2	AF_DATA_REQUEST	
	3.2.1.3	AF_DATA_REQUEST_EXT	
	3.2.1.4	AF_DATA_REQUEST_SRC_RTG	
	3.2.1.5	AF_INTER_PAN_CTL	
	3.2.1.6	AF_ DATA_STORE	
	3.2.1.7	AF_ DATA_RETRIEVE	
	3.2.1.8	AF_APSF_CONFIG_SET	
		MT_AF Callbacks	
	3.2.1.1	AF_DATA_CONFIRM	
	3.2.1.2	AF_REFLECT_ERROR	
	3.2.1.3	AF_INCOMING_MSG	
	3.2.1.4	AF_INCOMING_MSG_EXT	
		APP	
		MT_APP Commands	
	3.3.1.1	APP_MSG	
	3.3.1.2	APP_USER_TEST	
		MT_APP Callbacks	
		DEBUG MT DEBUG Commands	
	3.4.1.1		
	3.4.1.1	DEBUG_MSG	
		MT_DEBUG Callbacks	
		MAC	
		MT_MAC Commands	
	3.5.1.1	MAC_RESET_REQ	
	3.5.1.2	MAC_INIT	
	3.5.1.3	MAC_START_REQ	
	3.5.1.4	MAC SYNC REO	
	3.5.1.5	MAC_DATA_REQ	
	3.5.1.6	MAC_ASSOCIATE_REQ	
	3.5.1.7	MAC_ASSOCIATE_RSP	
	3.5.1.8	MAC_DISASSOCIATE_REQ	
	3.5.1.9	MAC_GET_REQ	23
	3.5.1.10	MAC_SET_REQ	
	3.5.1.11	MAC_SCAN_REQ	25

3.5.1.12	MAC_ORPHAN_RSP	
3.5.1.13	MAC_POLL_REQ	
3.5.1.14	MAC_PURGE_REQ	
3.5.1.15	MAC_SET_RX_GAIN_REQ	
3.5.2	MT_MAC Callbacks	
3.5.2.1	MAC_SYNC_LOSS_IND	
3.5.2.2	MAC_ASSOCIATE_IND	
3.5.2.3	MAC_ASSOCIATE_CNF	
3.5.2.4	MAC_BEACON_NOTIFY_IND	
3.5.2.5	MAC_DATA_CNF	32
3.5.2.6	MAC_DATA_IND	
3.5.2.7	MAC_DISASSOCIATE_IND	33
3.5.2.8	MAC_DISASSOCIATE_CNF	34
3.5.2.9	MAC_ORPHAN_IND	35
3.5.2.10	MAC_POLL_CNF	35
3.5.2.11	MAC_SCAN_CNF	36
3.5.2.12	MAC_COMM_STATUS_IND	36
3.5.2.13	MAC_START_CNF	
3.5.2.14	MAC_RX_ENABLE_CNF	
3.5.2.15	MAC_PURGE_CNF	38
3.6 MT_N	IWK	38
3.7 MT_S	API	38
3.7.1	MT_SAPI Commands	38
3.7.1.1	ZB_SYSTEM_RESET	38
3.7.1.2	ZB_START_REQUEST	38
3.7.1.3	ZB_PERMIT_JOINING_REQUEST	39
3.7.1.4	ZB_BIND_DEVICE	
3.7.1.5	ZB ALLOW BIND	40
3.7.1.6	ZB_SEND_DATA_REQUEST	40
3.7.1.7	ZB_READ_CONFIGURATION	
3.7.1.8	ZB_WRITE_CONFIGURATION	
3.7.1.9	ZB_GET_DEVICE_INFO	
3.7.1.10	ZB_FIND_DEVICE_REQUEST	
3.7.2	MT_SAPI Callbacks	
3.7.2.1	ZB START CONFIRM	
3.7.2.2	ZB_BIND_CONFIRM	
3.7.2.3	ZB_ALLOW_BIND_CONFIRM	
3.7.2.4	ZB SEND DATA CONFIRM	
3.7.2.5	ZB_RECEIVE_DATA_INDICATION	
3.7.2.6	ZB_FIND_DEVICE_CONFIRM	
	YS	
	MT_SYS Commands	
3.8.1.1	SYS_RESET_REQ	
3.8.1.2	SYS_PING	
3.8.1.3	SYS_VERSION	
3.8.1.4	SYS_SET_EXTADDR	
3.8.1.5	SYS_GET_EXTADDR	
3.8.1.6	SYS_RAM_READ	
3.8.1.7	SYS_RAM_WRITE	
3.8.1.8	SYS_OSAL_NV_READ	
3.8.1.9	SYS_OSAL_NV_WRITE	
3.8.1.10	SYS_OSAL_NV_ITEM_INIT	
3.8.1.11	SYS_OSAL_NV_DELETE	
3.8.1.11	SYS_OSAL_NV_LENGTH	
3.8.1.13	SYS_OSAL_NV_LENGTHSYS_OSAL_START_TIMER	
3.8.1.13	SYS_OSAL_STOP_TIMER	
5.0.1.14	SIS_USAL_SIUF_IIMER	<i>1</i>

3.8.1.15	SYS_RANDOM	52
3.8.1.16	SYS_ADC_READ	52
3.8.1.17	SYS_GPIO	53
3.8.1.18	SYS_STACK_TUNE	53
3.8.1.19	SYS_SET_TIME	54
3.8.1.20	SYS_GET_TIME	54
3.8.1.21	SYS_SET_TX_POWER	55
3.8.1.22	SYS_ZDIAGS_INIT_STATS	55
3.8.1.23	SYS_ZDIAGS_CLEAR_STATS	5 <i>t</i>
3.8.1.24	SYS_ZDIAGS_GET_STATS	
3.8.1.25	SYS_ZDIAGS_RESTORE_STATS_NV	57
3.8.1.26	SYS_ZDIAGS_SAVE_STATS_TO_NV	57
3.8.1.27	SYS_NV_CREATE	58
3.8.1.28	SYS_NV_DELETE	58
3.8.1.29	SYS_NV_LENGTH	59
3.8.1.30	SYS_NV_READ	59
3.8.1.31	SYS_NV_WRITE	60
3.8.1.32	SYS_NV_UPDATE	60
3.8.1.33	SYS_NV_COMPACT	61
3.8.1.34	SYS_OSAL_NV_READ_EXT	61
3.8.1.35	SYS_OSAL_NV_WRITE_EXT	62
3.8.2 M	AT_SYS Callbacks	
3.8.2.1	SYS_RESET_IND	62
3.8.2.2	SYS_OSAL_TIMER_EXPIRED	
3.9 MT_U	ART	63
3.10 MT_	_UTIL	63
3.10.1	MT_UTIL Commands	63
3.10.1.1	UTIL_GET_DEVICE_INFO	
3.10.1.2	UTIL_GET_NV_INFO	
3.10.1.3	UTIL_SET_PANID	
3.10.1.4	UTIL_SET_CHANNELS	
3.10.1.5	UTIL_SET_SECLEVEL	
3.10.1.6	UTIL_SET_PRECFGKEY	
3.10.1.7	UTIL_CALLBACK_SUB_CMD	
3.10.1.8	UTIL_KEY_EVENT	
3.10.1.9	UTIL_TIME_ALIVE	
3.10.1.10	UTIL_LED_CONTROL	
3.10.1.11	UTIL_LOOPBACK	
3.10.1.12	UTIL_DATA_REQ	
3.10.1.13	UTIL_SRC_MATCH_ENABLE	
3.10.1.14	UTIL_SRC_MATCH_ADD_ENTRY	
3.10.1.15	UTIL_SRC_MATCH_DEL_ENTRY	
3.10.1.16	UTIL_SRC_MATCH_CHECK_SRC_ADDR	
3.10.1.17	UTIL_SRC_MATCH_ACK_ALL_PENDING	
3.10.1.18	UTIL_SRC_MATCH_CHECK_ALL_PENDING	
3.10.1.19	UTIL_ADDRMGR_EXT_ADDR_LOOKUP	
3.10.1.20	UTIL_ADDRMGR_NWK_ADDR_LOOKUP	
3.10.1.21	UTIL_APSME_LINK_KEY_DATA_GET	
3.10.1.22	UTIL_APSME_LINK_KEY_NV_ID_GET	
3.10.1.23	UTIL_APSME_REQUEST_KEY_CMD	
3.10.1.24	UTIL_ASSOC_COUNT	
3.10.1.25	UTIL_ASSOC_FIND_DEVICE	
3.10.1.26	UTIL_ASSOC_GET_WITH_ADDRESS	
3.10.1.27	UTIL_BIND_ADD_ENTRY	
3.10.1.28	UTIL_ZCL_KEY_EST_INIT_EST	
3.10.1.29	UTIL_ZCL_KEY_EST_SIGN	77

3.10.1.30		
3.10.2	MT_UTIL Callbacks	
3.10.2.1	UTIL_SYNC_REQ	
3.10.2.2	UTIL_ZCL_KEY_ESTABLISH_IND	<i>7</i> 8
	_VERSION	
3.12 MT	_ZDO	78
3.12.1	MT_ZDO Commands	
3.12.1.1	ZDO_NWK_ADDR_REQ	79
3.12.1.2	ZDO_IEEE_ADDR_REQ	79
3.12.1.3	ZDO_NODE_DESC_REQ	80
3.12.1.4	ZDO_POWER_DESC_REQ	80
3.12.1.5	ZDO_SIMPLE_DESC_REQ	81
3.12.1.6	ZDO_ACTIVE_EP_REQ	
3.12.1.7	ZDO_MATCH_DESC_REQ	
3.12.1.8	ZDO_COMPLEX_DESC_REQ	82
3.12.1.9	ZDO_USER_DESC_REQ	
3.12.1.10	ZDO_END_DEVICE_ANNCE	
3.12.1.11	ZDO_USER_DESC_SET	
3.12.1.12	ZDO_SERVER_DISC_REQ	84
3.12.1.13	ZDO_END_DEVICE_BIND_REQ	
3.12.1.14	ZDO_BIND_REQ	85
3.12.1.15	ZDO_UNBIND_REQ	86
3.12.1.16	ZDO_MGMT_NWK_DISC_REQ	87
3.12.1.17	ZDO_MGMT_LQI_REQ	88
3.12.1.18	ZDO_MGMT_RTG_REQ	88
3.12.1.19	ZDO_MGMT_BIND_REQ	89
3.12.1.20	ZDO_MGMT_LEAVE_REQ	89
3.12.1.21	ZDO_MGMT_DIRECT_JOIN_REQ	
3.12.1.22	ZDO_MGMT_PERMIT_JOIN_REQ	
3.12.1.23	ZDO_MGMT_NWK_UPDATE_REQ	
3.12.1.24	ZDO_MSG_CB_REGISTER	
3.12.1.25	ZDO_MSG_CB_REMOVE	
3.12.1.26	ZDO_STARTUP_FROM_APP	
3.12.1.27	ZDO_STARTUP_FROM_APP_EX	
3.12.1.28	ZDO_SET_LINK_KEY	
3.12.1.29	ZDO_REMOVE_LINK_KEY	
3.12.1.30	ZDO_GET_LINK_KEY	
3.12.1.31	ZDO_NWK_DISCOVERY_REQ	
3.12.1.32	ZDO_JOIN_REQ	
3.12.1.33	ZDO_SET_REJOIN_PARAMETERS	
3.12.1.34	ZDO_SEC_ADD_LINK_KEY	
3.12.1.35	ZDO_SEC_ENTRY_LOOKUP_EXT	
3.12.1.36	ZDO_SEC_DEVICE_REMOVE	
3.12.1.37	ZDO_EXT_ROUTE_DISC	
3.12.1.38	ZDO_EXT_ROUTE_CHECK	
3.12.1.39	ZDO_EXT_REMOVE_GROUP	
3.12.1.40	ZDO_EXT_REMOVE_ALL_GROUP	
3.12.1.41	ZDO_EXT_FIND_ALL_GROUPS_ENDPOINT	
3.12.1.42	ZDO_EXT_FIND_GROUP	
3.12.1.43	ZDO_EXT_ADD_GROUP	
3.12.1.44	ZDO_EXT_COUNT_ALL_GROUPS	
3.12.1.45	ZDO_EXT_RX_IDLE	
3.12.1.46	ZDO_EXT_UPDATE_NWK_KEY	
3.12.1.47	ZDO_EXT_SWITCH_NWK_KEY	
3.12.1.48	ZDO_EXT_NWK_INFO	
3.12.1.49	ZDO_EXT_SEC_APS_REMOVE_REQ	105

3.12.1.50	ZDO_FORCE_CONCENTRATOR_CHANGE	106
3.12.1.51	ZDO_EXT_SET_PARAMS	
3.12.1.52	ZDO_NWK_ADDR_OF_INTEREST_REQ	106
3.12.2	MT_ZDO Callbacks	107
3.12.2.1	ZDO_NWK_ADDR_RSP	
3.12.2.2	ZDO_IEEE_ADDR_RSP	107
3.12.2.3	ZDO_NODE_DESC_RSP	108
3.12.2.4	ZDO_POWER_DESC_RSP	109
3.12.2.5	ZDO_SIMPLE_DESC_RSP	109
3.12.2.6	ZDO_ACTIVE_EP_RSP	
3.12.2.7	ZDO_MATCH_DESC_RSP	110
3.12.2.8	ZDO_COMPLEX_DESC_RSP	111
3.12.2.9	ZDO_USER_DESC_RSP	111
3.12.2.10	ZDO_USER_DESC_CONF	112
3.12.2.11	ZDO_SERVER_DISC_RSP	112
3.12.2.12	ZDO_END_DEVICE_BIND_RSP	112
3.12.2.13	ZDO_BIND_RSP	113
3.12.2.14	ZDO_UNBIND_RSP	113
3.12.2.15	ZDO_MGMT_NWK_DISC_RSP	113
3.12.2.16	ZDO_MGMT_LQI_RSP	114
3.12.2.17	ZDO_MGMT_RTG_RSP	115
3.12.2.18	ZDO_MGMT_BIND_RSP	
3.12.2.19	ZDO_MGMT_LEAVE_RSP	
3.12.2.20	ZDO_MGMT_DIRECT_JOIN_RSP	
3.12.2.21	ZDO_MGMT_PERMIT_JOIN_RSP	
3.12.2.22	ZDO_STATE_CHANGE_IND	
3.12.2.23	ZDO_END_DEVICE_ANNCE_IND	
3.12.2.24	ZDO_MATCH_DESC_RSP_SENT	
3.12.2.25	ZDO_STATUS_ERROR_RSP	
3.12.2.26	ZDO_SRC_RTG_IND	
3.12.2.27	ZDO_BEACON_NOTIFY_IND	
3.12.2.28	ZDO_JOIN_CNF	
3.12.2.29	ZDO_NWK_DISCOVERY_CNF	
3.12.2.30	ZDO_LEAVE_IND	
3.12.2.31	ZDO_MSG_CB_INCOMING	
3.12.2.32	ZDO_TC_DEV_IND	
3.12.2.33	ZDO_PERMIT_JOIN_IND	
	APP CONFIG	
3.13.1	MT APP CONFIG Commands	
3.13.1.1	APP CNF SET NWK FRAME COUNTER	
3.13.1.2	APP_CNF_SET_DEFAULT_REMOTE_ENDDEVICE_TIMEOUT	
3.13.1.3	APP_CNF_SET_ENDDEVICETIMEOUT	123
3.13.1.4	APP_CNF_SET_ALLOWREJOIN_TC_POLICY	
3.13.1.5	APP_CNF_BDB_START_COMMISSIONING	
3.13.1.6	APP_CNF_BDB_SET_CHANNEL	
3.13.1.7	APP_CNF_BDB_ADD_INSTALLCODE	
3.13.1.8	APP_CNF_BDB_SET_TC_REQUIRE_KEY_EXCHANGE	
3.13.1.9	APP_CNF_BDB_SET_JOINUSESINSTALLCODEKEY	
3.13.1.9	APP_CNF_BDB_SET_ACTIVE_DEFAULT_CENTRALIZED_KEY	
3.13.1.10	APP_CNF_BDB_ZED_ATTEMPT_RECOVER_NWK	
3.13.1.11	MT_APP_CONFIG Callbacks	
3.13.2.1	APP_CNF_BDB_COMMISIONING_NOTIFICATION	
	GREENPOWERGREENPOWER	
3.14.1	MT_GP Commands	
3.14.1 3.14.1.1	GP_DATA_REQ	
3.14.1.1 3.14.1.2	GP_DATA_KEQGP_SEC_RSP	
2 14 1 /	UP DEL KDP	1 . 3 1

3.14.2	MT_GP Callbacks	132
	GP DATA CNF	
3.14.2.2	GP_SEC_REQ	133
	GP_DATA_IND	

1. Introduction

1.1 Scope

This document describes the Monitor and Test (MT) interface that is used for communication between the host tester and a ZigBee device through RS-232 serial port. Tester can issue MT commands to the ZigBee target through a PC application called Z-Tool. The target must be programmed with the latest Texas Instruments Z-StackTM.

1.2 Overview

MT interfaces are divided into categories, shown in the table below. Most interfaces can be disabled or enabled by a compile flag. Depending on the desired interfaces, certain flags need to be enabled during compilation. For a list of supported compile flags, check the "**Z-Stack Compile Option**" document.

Interface	Description	Compile flags
MT_AF	This interface allows tester to interact with AF layer of the target.	MT_AF_FUNC MT_AF_CB_FUNC
MT_APP	This interface allows tester to interact with APP layer of the target to control custom tests such as test profile or user-defined test.	MT_APP_FUNC
MT_DEBUG	This interface allows tester to control the debug- messaging mechanism such as debug threshold, debug messages, etc.	MT_DEBUG_FUNC
MT_NWK	This interface allows tester to interact with NWK layer of the target.	MT_NWK_FUNC MT_NWK_CB_FUNC
MT_SAPI	This interface allows tester to interact with simple API interface.	MT_SAPI_FUNC MT_SAPI_CB_FUNC
MT_SYS	This interface allows the tester to interact with the target at system level such as reset, read/write memory, read/write extended address, etc.	MT_SYS_FUNC
MT_TASK	This interface handles communication between the Monitor Test interface and Z-Stack. Tester has no control direct over this interface.	MT_TASK
MT_UART	This interface handles communication between the target and Z-Tool. Tester has no direct control over this interface.	N/A
MT_UTIL	This interface provides tester supporting functionalities such as setting PanID, getting device info, getting NV info, subscribing callbacks, etc.	MT_UTIL_FUNC
MT_VERSION	This interface contains information about the release version of the software.	N/A
MT_ZDO	This interface allows tester to interact with the ZDO layer of the target.	MT_ZDO_FUNC MT_ZDO_CB_FUNC
MT_APP_CNF	This interface allows to interact with the commands introduced by Z3.0 Base Device Behavior.	MT_APP_CNF_FUNC
MT_GP	This interface allows to interact with GP stubs.	MT_GP_CB_FUNC

1.3 Requirements

There are several requirements for a tester to interact with the ZigBee target through the MT interface:

- ZigBee target is programmed with Texas Instruments Z-StackTM (ZStack-2.1.0 or newer).
- Z-Tool 2.0 or newer installed on the tester PC.
- PC is connected to ZigBee target though RS-232 serial port.

1.4 Acronyms

Table 1

ADC	Analog to Digital Conversion
AF	Application Framework
AREQ	Asynchronous Request
FCS	Frame Check Sequence
MT	Monitor and Test
RPC	Remote Procedure Call
SAPI	Simple API
SOF	Start of Frame
SREQ	Synchronous Request
SRSP	Synchronous Response
Z-Stack	Texas Instruments ZigBee protocol stack
Z-Tool	Texas Instruments ZigBee PC-based test tool

1.5 Reference Documents

- [1] Z-Stack Compile Options (SWRA188).
- [2] Z-Stack User's Guides (SWRA161, SWRA162, SWRA163, SWRA164, SWRA165)
- [3] Z-Stack Developer's Guide (SWRA176)
- [4] Z-Stack Application Programming Interface (SWRA195)

2. Monitor and Test Transport Protocol

- A transport protocol is necessary so that messages can be exchanged between the tester and target over an RS-232 serial link. The purpose of the transport protocol is to frame the messages in packets for proper transmission and reception and to ensure message integrity.
- The physical transmission uses: no Parity; 8 data bits and 1 stop bits for each byte.
- The transmission rate will be 38.4 kbps, 57.6kbps and 115.2kbps
- The Z-Tool program must send one message at a time and wait for either the expected response message to a timeout before sending the next message or resending the current message.
- Fields that are multi-byte fields are transmitted Least Significant byte first (LSB). There is no provision for retransmission of lost packets

2.1 Format

2.1.1 General Serial Packet

- Serial packets are sent between the Z-Tool PC application and the target ZigBee device. They contain an SOF (Start of Frame), followed by a variable-length MT packet, and terminated by an FCS (Frame Check Sequence).
- Building of the serial packets is handled by MT_TransportSend() where the SOF is
 inserted at the beginning of the packet and FCS is computed and appended to the end of
 the packet.

SOF	MT CMD	FCS
Byte: 1	3-256	1

SOF (Start of Frame): This is a one byte field with value equal to **0xFE** that defines the start of each general serial packet.

MT CMD (Monitor Test Command): This contains 1 byte for the length of the actual data, 2 bytes for the MT command Id, and the data ranging from 0-250 bytes. Check 2.1.2 for more details.

FCS (Frame Check Sequence): This is a one byte field that is used to ensure packet integrity. This field is computed as an XOR of all the bytes in the message starting with LEN field and through the last byte of data. The receiver XORs all the received data bytes as indicated above and then XORs the received FCS field. If the sum is not equal to zero, the received packet is in error.

2.1.2 MT CMD

- MT CMD is the actually Monitor and Test command. It contains information that Z-Tool and Z-Stack need to control the target.
- It contains 1 byte for the length of the actual data, 2 bytes for the command, and data ranging from 0-250 bytes.

LEN	CMD	DATA
Byte: 1	2	0-250

LEN (Length): This one byte field is the number of bytes in the **DATA** field. If the **DATA** field contains no information this LEN field has a value of 0 and the total length of the **MT CMD** is 3 bytes (0 data message).

CMD (Command Id): This is a two byte field with a value denoting the Command Identification (Id) for this message. This field is described in detail below.

C	MD0	CMD1
Bit: 7-5	4-0	7-0
Туре	Subsystem	Id

Type: Type for the command is described by bit 5, 6, 7 of CMD0 byte. The command type has one of the following values:

Type	CMD0Value
POLL	0x00
SREQ	0x20
AREQ	0x40
SRSP	0x60

- 0: POLL. A POLL command is used to retrieve queued data. This
 command is only applicable to SPI transport. For a POLL command the
 subsystem and Id are set to zero and data length is zero.
- 1: SREQ: A synchronous request that requires an immediate response. For example, a function call with a return value would use an SREQ command.
- 2: AREQ: An asynchronous request. For example, a callback event or a function call with no return value would use an AREQ command.
- 3: SRSP: A synchronous response. This type of command is only sent in response to a SREQ command. For an SRSP command the subsystem and Id are set to the same values as the corresponding SREQ. The length of an SRSP is generally nonzero, so an SRSP with length=0 can be used to indicate an error.
- 4-7: Reserved.

Subsystem: The subsystem of the command is described by bit 0, 1, 2, 3, 4 of CMD0. The command subsystem has one of the following values:

Subsystem	Subsystem Value
Reserved	0x00
SYS interface	0x01
MAC interface	0x02
NWK interface	0x03
AF interface	0x04
ZDO interface	0x05
SAPI interface	0x06
UTIL interface	0x07
DEBUG interface	0x08
APP interface	0x09
APP config	0x0F
GreenPower	0x15

Id: The command Id. The Id maps to a particular interface message. Range: 0-250.

DATA: This field contains the actual data to be transmitted. This is a field which varies in size according to the command. It can be 0 to 250.

2.2 Example

SYS_PING command will look like 0xFE 0x00 0x21 0x01 0x20

SOF	LEN	CMD0	CMD1	DATA	FCS
Byte: 1	1	1	1	0	1
0xFE	0x00	0x21	0x01	N/A	0x20

SYS_PING response will look like 0xFE 0x02 0x61 0x01 0x11 0x00 0x73

SOF	LEN	CMD0	CMD1	DATA0	DATA1	FCS
Byte: 1	1	1	1	1	1	1
0xFE	0x02	0x61	0x01	0x11	0x00	0x73

3. Monitor and Test Commands

3.1 Introduction

Monitor and Test commands (MT commands) exchanged between the target and the tester via a supported H/W medium (i.e.RS-232 or USB.) The tester controls the target using Z-Tool 2.0. In order for the target to communicate with Z-Tool 2.0, Z-Stack must be compiled with MT_SYS_FUNC. This enables the MT_SYS interface so Z-Tool 2.0 can communicate to establish the connection. Some MT interfaces support callbacks. This requires MT_UTIL_FUNC to be compiled with Z-Stack in order for the tester to subscribe callback. The corresponding MT interface must also be complied with the correct flag in order for the callbacks to be received and processed correctly by Z-Stack and Z-Tool 2.0. For the complete details on MT flags, check section 1.2 or "Z-Stack Compile Option" document (SWRA188).

Summary:

- Z-Tool 2.0 installed and connected to target using the supported H/W interface.
- Z-Stack must be compiled with MT_SYS_FUNC and MT_UTIL_FUNC.
- Z-Stack must be compiled with MT interface what tester will use.
- Z-Stack and Z-Tool must be set at the same baud rate, no Parity, 8 data-bits and 1 stop-bit for each byte.
- If the target supports flow control, this must be set correctly as well in Z-Tool 2.0

3.2 MT_AF

This interface allows the tester to interact with the Application Framework layer (AF).

3.2.1 MT_AF Commands

3.2.1.1 AF REGISTER

LatencyReq

Description:

This command enables the tester to register an application's endpoint description.

AppNumInClusters

AppInClusterList

AppNumOutClusters

AppOutClusterList

Attributes:

AppDevVer

Attribute	Length (byte)	Description
EndPoint	1	Specifies the endpoint of the device
AppProfId	2	Specifies the profile Id of the application
AppDeviceId	2	Specifies the device description Id for this endpoint
AddDevVer	1	Specifies the device version number
		Specifies latency.
LatanavDag	1	0x00-No latency
LatencyReq		0x01-fast beacons
		0x02-slow beacons
AppNumInClusters	1	the number of Input cluster Id's following in the
Appivummetusters		AppInClusterList
AppInClusterList	32	Specifies the list of Input Cluster Id's
AppNumOutClusters	1	Specifies the number of Output cluster Id's following in the
Approunioutclusters	1	AppOutClusterList
AppOutClusterList	32	Specifies the list of Output Cluster Id's



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.2.1.2 AF_DATA_REQUEST

Description:

This command is used by the tester to build and send a message through AF layer.

Usage:

SREQ:

Byte: 1		1 1			2	1	
Length = 0x0A-0x8A		$Cmd0 = 0x24 \qquad \qquad Cmd1 = 0x01$		x01	DstAddr	DstEndpoint	
•							
Byte: 1	2	1	1	1	1	0-128	
SrcEndpoint	ClusterId	TransId	Options	Radius	Len	Data	

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Short address of the destination device
DstEndpoint	1	Endpoint of the destination device
SrcEndpoint	1	Endpoint of the source device
ClusterId	2	Specifies the cluster ID
TransId	1	Specifies the transaction sequence number of the message.
Options	1	Transmit options bit mask according to the following defines from AF.h: bit 1: sets 'Wildcard Profile ID'; bit 4: turns on/off 'APS ACK'; bit 5 sets 'discover route'; bit 6 sets 'APS security'; bit 7 sets 'skip routing'.
Radius	1	Specifies the number of hops allowed delivering the message (see AF_DEFAULT_RADIUS.)
Len	1	Length of the data.
Data	0-128	0-128 bytes data

SRSP:

Byte: 1	1	1	1	
Length = $0x01$	Cmd0 = 0x64	Cmd1 = 0x01	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.2.1.3 AF_DATA_REQUEST_EXT

Description:

This extended form of the AF_DATA_REQUEST must be used to send an inter-pan message (note that the target code must be compiled with the INTER_PAN flag defined.) This extended data request must also be used when making a request with a huge data byte count which is defined to be a size that would cause the RPC request to exceed the maximum allowed size:

MT_RPC_DATA_MAX - sizeof(AF_DATA_REQUEST_EXT)

Where sizeof (AF_DATA_REQUEST_EXT) counts everything but the data bytes and now stands at 20. When making an AF_DATA_REQUEST_EXT with a huge data byte count, the request shall not contain any data bytes. The huge data buffer is sent over separately as a sequence of one or more AF_DATA_STORE requests. Note that the outgoing huge message is timed-out in 15 seconds; thus all AF_DATA_STORE requests must be completed within 15 seconds of an

AF_DATA_REQUEST_EXT with a huge data byte count. And any AF_DATA_REQUEST_EXT with a huge data byte count must be completed (or timed-out) before another will be started. The default timeout can be changed by defining the following to other values:

#if !defined MT_AF_EXEC_CNT
#define MT_AF_EXEC_CNT 15
#endif
#if !defined MT_AF_EXEC_DLY
#define MT_AF_EXEC_DLY 1000
#endif

Usage:

SREO:

•	JILLQ.							
1		1	1		1	8		1
	Length = $0x14-0$	x93 Cmd0 =	0x24 C	Cmd1 = 0x02	DstAddrMode	DstAd	dr	DstEndpoint
ı	2	1	2	1	1	1	1	0-128
	DstPanId	SrcEndpoint	ClusterId	TransId	Options	Radius	Len	Data

Attributes:

Attribute	Length (byte)	Description
DstAddrMode	1	A value of 3 (the enumeration value for 'afAddr64Bit') indicates 8-byte (64-bit) address mode; otherwise a value of 2 indicates 2-byte (16-bit) address mode, using only the 2 LSB's of the DstAddr field to form a 2-byte short address.
DstAddr	8	LSB to MSB for the long or short address of the destination device (upper 6 bytes are don't care when short address.)
DstEndpoint	1	Endpoint of the destination device (but don't care if the DstPanId is non-zero, which indicates an inter-pan message.)
DstPanId	2	PanId of the destination device: 0x0000=Intra-Pan; otherwise, Inter-Pan.
SrcEndpoint	1	Endpoint of the source device.
ClusterId	2	Specifies the cluster ID
TransId	1	Specifies the transaction sequence number of the message.
Options	1	Transmit options bit mask according to the following defines from AF.h: bit 1: sets 'Wildcard Profile ID'; bit 4: turns on/off 'APS ACK'; bit 5 sets 'discover route'; bit 6 sets 'APS security'; bit 7 sets 'skip routing'. (This doesn't apply for an inter-pan message.)
Radius	1	Specifies the number of hops allowed delivering the message (reference DEF_NWK_RADIUS.)
Len	2	Length of the data. If a large data length causes the MT command to exceed MT_RPC_DATA_MAX, then zero bytes of the data shall be sent with this request and the data shall be transferred in as many MT_AF_DATA_STORE requests as necessary.
Data	0-128	0-128 bytes data

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x64	Cmd1 = 0x02	Status

Attributes:


Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.2.1.4 AF_DATA_REQUEST_SRC_RTG

Description:

This command is used by the tester to build and send a message through AF layer using source routing.

Usage: SREQ:



Attributes:

Length (byte)	Description
2	Short address of the destination device
1	Endpoint of the destination device
1	Endpoint of the source device
2	Specifies the cluster ID
1	Specifies the transaction sequence number of the message.
1	Transmit options bit mask: Bit 0: turns on/off 'APS ACK'; bit 2 sets 'APS security'; bit 3 sets 'skip routing'.
1	Specifies the number of hops allowed delivering the message (reference DEF_NWK_RADIUS.)
1	Specifies the number of devices in the relay list for source routing
2N	List of relay devices on the source routing path. For each device, it contains 2 bytes short address for each device.
1	Length of the data.
0-128	0-128 bytes data
	2 1 1 2 1 1 1 2 N

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x64	Cmd1 = 0x03	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Memory Failure (0x01).

3.2.1.5 AF_INTER_PAN_CTL

Description:

Inter-Pan control command and data. The data content depends upon the command and the available commands are enumerated as InterPanCtl_t.

Usage:

SREQ:

Byte: 1	1	1	1	0-3
Length = 0x01-0x04	Cmd0 = 0x24	Cmd1 = 0x10	Command	Data

Data:

ı	Command	Data Length (byte)	Description
	0: InterPanClr	0	Proxy call to StubAPS_SetIntraPanChannel() to switch channel back to the NIB-specified channel.
	1: InterPanSet	1	Proxy call to StubAPS_SetInterPanChannel() with the 1-byte channel specified.
	2: InterPanReg	1	If the 1-byte Endpoint specified by the data argument is found by invoking afFindEndPointDesc(), then proxy a call to StubAPS_RegisterApp() with the pointer to the endPointDesc_t found (i.e. the Endpoint must already be registered with AF).
	3: InterPanChk	3	Proxy a call to StubAPS_InterPan() with the 2-byte PanId (LSB:MSB) and 1-byte EndPoint data.

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x64	Cmd1 = 0x10	Status

Attributes:

Attribute	Length (byte)	Description
	4	Success (0) Failure (0x01) if a channel change is in progress
Status	1	Invalid_Parameter (0x02).
		ZApsNotAllowed (0xBA) if MAC is not in an Idle state.

3.2.1.6 AF_ DATA_STORE

Description:

Huge AF data request data buffer store command and data.

Usage:

SREQ:

Byte: 1	1	1	2	1	0-252
Length = $0x03-0xFA$	Cmd0 = 0x24	Cmd1 = 0x11	Index	Length	Data

Attributes:

Command	Length (byte)	Description
Index	2	Specifies the index into the outgoing data request data buffer to start the storing of this chunk of data.
Length	1	Specifies the length of this data chunk to store. A length of zero is special and triggers the actually sending of the data request OTA.
Data	0-252	Contains 0 to 252 bytes of data.

SRSP:

Byte: 1	1	1	1			
Length = $0x01$	Cmd0 = 0x64	Cmd1 = 0x11	AF-Status			

Attributes:

Attribute	Length (byte)	Descript	tion
		afStatus SUCCESS	0x00
		afStatus FAILED	0x01
		afStatus MEM FAIL	0x10
		afStatus INVALID PARAMETER	0x02
Status	1		
		Note that the status is for of data when Length is not return value of the AF_Data is zero.	zero and the

3.2.1.7 AF_ DATA_RETRIEVE

Description:

Huge AF incoming message data buffer retrieve command.

Usage:

SREQ:

~ ~ ·					
Byte: 1	1	1	4	2	1
Length = $0x07$	Cmd0 = 0x24	Cmd1 = 0x12	Timestamp	Index	Length

Attributes:

Command	Length	Description
Timestamp	4	The timestamp of the incoming message in order to uniquely Identify it in a queue of incoming huge messages.
Index	2	Specifies the index into the incoming message data buffer to start the

retrieving of this chunk of data.

Specifies the length of this data chunk to retrieve.

Length 1 A length of zero is special and triggers the freeing of the corresponding

incoming message.

SRSP:

Byte: 1	1	1	1	1	0-253
Length = $0x02-0xFA$	Cmd0 = 0x64	Cmd1 = 0x12	AF-Status	Length	Data

Attributes:

Attribute	Length (byte)	Description
		afStatus_SUCCESS 0x00
Status	1	afStatus_FAILED 0x01
Status	1	afStatus_MEM_FAIL 0x10
		afStatus_INVALID_PARAMETER 0x02
Length	1	Specifies the length of this data chunk retrieved.
Data	0-253	The length of data bytes requested from the specified index into the
Data	0-255	huge incoming message data buffer.

3.2.1.8 AF_APSF_CONFIG_SET

Description:

MT proxy for afAPSF_ConfigSet().

Usage:

SREQ:

Byte: 1	1	1	1	1	1
Length = $0x03$	Cmd0 = 0x24	Cmd1 = 0x13	endPoint	frameDelay	windowSize

Attributes:

Command	Length	Description
endpoint	1	The specific EndPoint for which to set the fragmentation configuration.
frameDelay	1	The APS Fragmentation inter-frame delay in milliseconds (delay between frame fragments within the window).
windowSize	1	The APS Fragmentation window size (number of frames between APS acknowledge from receiving node).

SRSP:



Attributes:

Attribute	Length (byte)		Description	
Status	1	afStatus_SUCCESS	0x00	
Status	1	afStatus INVALID PARAM	ETER 0x02	

3.2.2 MT_AF Callbacks

3.2.1.1 AF_DATA_CONFIRM

Description:

This command is sent by the device to the user after it receives a data request.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).
Endpoint	1	Endpoint of the device
TransId	1	Specified the transaction sequence number of the message


3.2.1.2 AF_REFLECT_ERROR

Description:

This command is sent by the device to the user when it determines that an error occurred during a reflected message.

Usage:





Attributes:

ittlibutes.					
Length (byte)	Description				
1	Contains the error indication (ie. ZApsNoAck)				
1	Endpoint of the device				
1	Specified the transaction sequence number of the message				
1	Destination address type: 0 - short address, 1 - group address				
2	Destination address - depends on dstAddrMode				
	Length (byte) 1 1 1 1 2				

3.2.1.3 AF_INCOMING_MSG

Description:

This callback message is in response to incoming data to any of the registered endpoints on this device.

Usage:





Attributes:

Attribute	Length (byte)	Description
GroupId	2	Specifies the group ID of the device
ClusterId	2	Specifies the cluster Id (only the LSB is used in V1.0 networks.)
SrcAddr	2	Specifies the ZigBee network address of the source device sending the message.
SrcEndpoint	1	Specifies the source endpoint of the message
DstEndpoint	1	Specifies the destination endpoint of the message
WasBroadcast	1	Specifies if the message was a broadcast or not
LinkQuality	1	Indicates the link quality measured during reception
SecurityUse	1	Specifies if the security is used or not
TimeStamp	4	Specifies the timestamp of the message
TransSeqNumber	1	Specifies transaction sequence number of the message
Len	1	Specifies the length of the data.
Data	0-128	Contains 0 to 128 bytes of data.

3.2.1.4 AF_INCOMING_MSG_EXT

Description:

This callback message is in response to incoming data to any of the registered endpoints on this device when the code is compiled with the INTER_PAN flag defined. This extended incoming

message indication must also be used when handling an incoming message with a huge data byte count which is defined to be a size that would cause the RPC request to exceed the maximum allowed size:

```
MT_RPC_DATA_MAX - sizeof(AF_INCOMING_MSG_EXT)
```

Where <code>sizeof(AF_ INCOMING_MSG_EXT)</code> counts everything but the data bytes and now stands at 27. An AF_INCOMING_MSG_EXT with a huge data byte count indication shall not contain any data bytes. The huge data buffer must be retrieved separately as a sequence of one or more AF_DATA_RETRIEVE requests. Note that the incoming huge message is timed-out in 15 seconds after receiving it; thus all AF_DATA_ RETRIEVE requests must be completed within 15 seconds of an AF_INCOMING_MSG_EXT with a huge data byte count. Note that multiple AF_INCOMING_MSG_EXT indications with huge data byte counts may be queued, and each will be timed-out separately. The default timeout can be changed by defining the following to other values:

```
#if !defined MT_AF_EXEC_CNT
#define MT_AF_EXEC_CNT 15
#endif
#if !defined MT_AF_EXEC_DLY
#define MT_AF_EXEC_DLY 1000
#endif
```

Usage: AREO:



Attributes:

Attributes.		
Attribute	Length (byte)	Description
GroupId	2	Specifies the group ID of the device
ClusterId	2	Specifies the cluster Id (only the LSB is used in V1.0 networks.)
		A value of 3 (i.e. the enumeration value for 'afAddr64Bit') indicates 8-
SrcAddrMode	1	byte/64-bit address mode; otherwise, only the 2 LSB's of the 8 bytes are
		used to form a 2-byte short address.
SrcAddr	8	LSB to MSB for the long or short address of the destination device (upper 6
SicAddi	o	bytes are don't care when short address.)
SrcEndpoint	1	Specifies the source endpoint of the message
SrcPanId	2	Specifies the source PanID of the message.
DstEndpoint	1	Specifies the destination endpoint of the message
WasBroadcast	1	Specifies if the message was a broadcast or not
LinkQuality	1	Indicates the link quality measured during reception
SecurityUse	1	Specifies if the security is used or not
TimeStamp	4	Specifies the timestamp of the message
TransSeqNumber	1	Specifies transaction sequence number of the message
		Specifies the length of the data. If a large data length causes the MT
Len	2	command to exceed MT_RPC_DATA_MAX, then zero bytes of the data
Len	2	shall be sent with this request and the host shall retrieve the data with as
		many MT_AF_DATA_RETRIEVE requests as necessary.
Data	0-128	Contains 0 to 128 bytes of data.

3.3 MT APP

This interface allows tester to interact with APP layer of the target to control custom tests such as test profile or user-defined test.

3.3.1 MT_APP Commands

3.3.1.1 **APP_MSG**

Description:

This command is sent to the target in order to test the functions defined for individual applications. This command sends a raw data to an application.

Usage:

SREO:

BKEQ.				
Byte: 1	1	1	1	2
Length = 0x07-0x87	Cmd0 = 0x29	Cmd1 = 0x00	AppEndpoint	DestAddress
1	2	1	0-128	
DestEndpoint	ClusterId	MsgLen	Message	

Attributes:

Attribute	Length (byte)	Description
AppEndpoint	1	Application endpoint of the outgoing message
DestAddress	2	Destination address of the outgoing message
DestEndpoint	1	Destination endpoint of the outgoing message
ClusterId	2	Cluster Id of the outgoing message
MsgLen	1	Length of the outgoing message
Message	0-128	Raw data packet to send to the application
C		1 11

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x69	Cmd1 = 0x00	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.3.1.2 APP_USER_TEST

Description:

This command is used by tester to issue user's defined commands to the application.

Usage:

SREQ:

Byte: 1	1	1	1	2.	2.	2.
Length = $0x07$	Cmd0 = 0x29	Cmd1 = 0x01	SrcEP	CommandId	Parameter1	Parameter2

Attributes:

Attribute	Length (byte)	Description
SrcEP	1	Source Endpoint of the user-defined command
CommandId	2	Command Id of the user-defined command
Parameter1	2	Parameter #1 of the command
Parameter2	2	Parameter #2 of the command

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x69	Cmd1 = 0x01	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.3.2 MT_APP Callbacks

NONE

3.4 MT_DEBUG

This interface allows tester to control the debug-messaging mechanism such as debug threshold, debug messages, etc.

3.4.1 MT_DEBUG Commands

3.4.1.1 DEBUG_SET_THRESHOLD

Description:

This command allows the user to set the threshold for the debug message.

Usage:

SREQ:

Byte: 1	1	1	1	1
Length = $0x03$	Cmd0 = 0x28	Cmd1 = 0x00	ComponentId	Threshold

Attributes:

Attribute	Length (byte)	Description
ComponentId	1	Uniquely Identifies a particular software component on the target
Threshold	1	Specifies the threshold value for reporting debug messages by that software component

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x68	Cmd1 = 0x00	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.4.1.2 DEBUG_MSG

Description:

This command sends a debug string to Z-Tool. The content of the string is defined by the application.

Usage:

AREQ:

Byte: 1	1	1	1	0-254
Length = 0x01-0xFA	Cmd0 = 0x48	Cmd1 = 0x00	Length	String

Attributes:

Attribute	Length (byte)	Description
Length	1	Length of the string
String	0-254	String to be displayed by Z-Tool 2.0

3.4.2 MT_DEBUG Callbacks

NONE

3.5 MT_MAC

This interface allows tester to interact with the TI-MAC

3.5.1 MT_MAC Commands

3.5.1.1 MAC_RESET_REQ

Description:

This command is used to send a MAC Reset command to reset MAC state machine.

Usage:





Attributes:

110110 0000				
Attribute	Length (byte)	Description		
SetDefault	1	TRUE – Set the MAC PIB values to default values.		

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.5.1.2 **MAC_INIT**

Description:

This command is used to initialize the MAC.

Usage:

SREQ:



Attributes:

None

SRSP:



Attributes:


Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.3 MAC_START_REQ

Description:

This command is used to start the MAC as a coordinator or end device.

Usage:

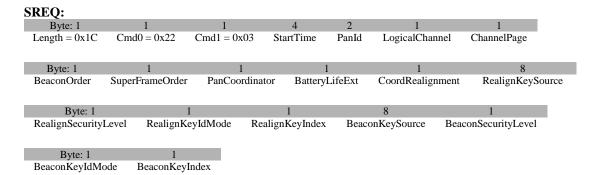

Attributes.

Attibutes.		
Attribute	Length (byte)	Description
StartTime	4	The time to begin transmitting beacons relative to the received beacon
PanId	2	The PAN Id to use. This parameter is ignored if Pan Coordinator is FALSE
LogicalChannel	1	The logical channel to use. This parameter is ignored if Pan Coordinator is FALSE
ChannelPage	1	The channel page to use. This parameter is ignored if Pan Coordinator is FALSE
BeaconOrder	1	The exponent used to calculate the beacon interval
SuperFrameOrder	1	The exponent used to calculate the superframe duration
PanCoordinator	1	Set to TRUE to start a network as PAN coordinator
BatteryLifeExt	1	If this value is TRUE, the receiver is disabled after MAC_BATT_LIFE_EXT_PERIODS full backoff periods following the interframe spacing period of the beacon frame
CoordRealignment	1	Coordinator Realignment
RealignKeySource	8	Key Source of this data frame

Security Level of this data frame:

	Security Level	Value
	NO_SECURITY	0x00
	MIC_32_AUTH	0x01
1	MIC_64_AUTH	0x02
	MIC_128_AUTH	0x03
	AES_ENCRYPTION	0x04
	AES_ENCRYPTION_MIC_32	0x05
	AES_ENCRYPTION_MIC_64	0x06
	AES_ENCRYPTION_MIC_128	0x07
	1	MIC_32_AUTH MIC_64_AUTH MIC_128_AUTH AES_ENCRYPTION AES_ENCRYPTION_MIC_32 AES_ENCRYPTION_MIC_64

Key Id Mode of this data frame:

	1	Key Id Mode	Value
Daglian Vay Id Mada		NOT_USED	0x00
RealignKeyIdMode		KEY_1BYTE_INDEX	0x01
		KEY_4BYTE_INDEX	0x02
		KEY_8BYTE_INDEX	0x03
RealignKeyIndex	1	Key Index of this data frame	
BeaconKeySource	8	Key Source of this data frame	

Security Level of this data frame:

		security Level of this data frame.	
		Security Level	Value
		NO_SECURITY	0x00
		MIC_32_AUTH	0x01
BeaconSecurityLevel	1	MIC_64_AUTH	0x02
•		MIC_128_AUTH	0x03
		AES_ENCRYPTION	0x04
		AES_ENCRYPTION_MIC_32	0x05
		AES_ENCRYPTION_MIC_64	0x06
		AES_ENCRYPTION_MIC_128	0x07
ReaconKeyIdMode	1	Key Id Mode of this data frame	

BeaconKeyIdMode 1 Key Id Mode of this data frame BeaconKeyIndex 1 Key Index of this data frame

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x03	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.4 MAC_SYNC_REQ

Description:

This command is used to request synchronization to the current network beacon

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
LogicalChannel	1	The logical channel to use.
ChannelPage	1	The channel page to use.
TrackBeacon	1	Set to TRUE to continue tracking beacons after synchronizing with the first beacon. Set to FALSE to only synchronize with the first beacon

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.5.1.5 MAC_DATA_REQ

Description:

This command is used to send (on behalf of the next higher layer) MAC Data Frame packet.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description

Description

minimum backoff exponent
Use the power and channel

values in macDataReq_t instead of the PIB values

Specifies the format of the destination address.

DestAddressMode 1

Mode	Value	Description
ADDRESS_NOT_PRESENT	0x00	Address Not Present
GROUP_ADDRESS	0x01	Group address
ADDRESS_16_BIT	0x02	Address 16 bit
ADDRESS_64_BIT	0x03	Address 64 bit
BROADCAST	0xFF	Broadcast

DestAddress 8 DestPanId 2 Address of the destination. PAN Id of the destination.

Specifies the format of the source address.

Option

SrcAddressMode

Mode	Value	Description
ADDRESS_NOT_PRESENT	0x00	Address Not Present
GROUP_ADDRESS	0x01	Group address
ADDRESS_16_BIT	0x02	Address 16 bit
ADDRESS_64_BIT	0x03	Address 64 bit
BROADCAST	0xFF	Broadcast

Handle

Handle of the packet.

Transmitting options:

Acknowledged transmission. The MAC will attempt to MAC_TXOPTION_ACK 0x01 retransmit the frame until it is acknowledged MAC_TXOPTION_GTS 0x02 GTS transmission (unused) Indirect transmission. The MAC will queue the data and wait for the destination MAC_TXOPTION_INDIRECT 0x04 device to poll for it. This can only be used by a coordinator device This proprietary option MAC_TXOPTION_NO_RETRANS 0x10 prevents the frame from being retransmitted This proprietary option prevents a MAC_TXOPTION_NO_CNF 0x20 MAC_MCPS_DATA_CNF event from being sent for this frame Use PIB value MAC_TXOPTION_ALT_BE 0x40 MAC_ALT_BE for the

0x80

Value

TxOption 1

LogicalChannel 1 Channel that data frame will be transmitted.

Power 1 Power level that data frame will be transmitted.

KeySource 8 Key Source of this data frame.

Security Level of this data frame:

MAC_TXOPTION_PWR_CHAN

SecurityLevel 1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

		Key Id Mode	Value
KeyIdMode	1	NOT_USED	0x00
		KEY_1BYTE_INDEX	0x01
		KEY_4BYTE_INDEX	0x02
		KEY_8BYTE_INDEX	0x03

KeyIndex1Key Index of this data frame.MSDULength1Length of the data.MSDU0-250Actual data that will be sent.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x05	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.6 MAC_ASSOCIATE_REQ

Description:

This command is used to request (on behalf of the next higher layer) an association with a coordinator

Usage:

SREQ:

Byte: 1	1	1	1	1	1
Length = $0x12$	Cmd0 = 0x22	Cmd1 = 0x06	LogicalChannel	ChannelPage	CoordAddressMode

Byte: 8	2	1	8	1	1	1
CoordAddress	CoordPanId	CapabilityInformation	KeySource	SecurityLevel	KeyIdMode	KeyIndex

Attributes:

Attribute	Length (byte)	Desc	ription	
LogicalChannel	1	Channel that data frame will be transmitted.		
ChannelPage	1	The channel page to be used.		
		Specifies the format of the coordinate	nator addre	ss.
		Mode	Value	Description
		ADDRESS MOT PRESENT	0.00	A 11 N A D

		Mode	v aruc	Description
CoordAddressMode	1	ADDRESS_NOT_PRESENT 0x00	Address Not Present	
CoordAddressiviode	1	GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast
CoordAddress	8	Address of the Coordinator.		

CoordPanId	2	PAN Id of the coordinator.
		Bit map which specifies the operational capabilities of the device.

bit map which specifies the operational capabilities of the device.

Bit: 0 – Alternate PAN Coordinator

1- Device type: 1- ZigBee Router; 0- End Device

2 – Power Source: 1 Main powered

CapabilityInformation 1 3 – Receiver on when Idle

4 – Reserved

5 – Reserved

6 – Security capability

7 - Reserved

KeySource 8 Key Source of this data frame

Security Level of this data frame:

SecurityLevel 1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

KeyIdMode

Key Id Mode	Value
NOT_USED	0x00
KEY_1BYTE_INDEX	0x01
KEY_4BYTE_INDEX	0x02
KEY_8BYTE_INDEX	0x03

KeyIndex 1 Key Index of this data frame.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x06	Status

Attributes:

Attrib	oute Lengt	h (byte)	Description
Stati	us	1 Status is ei	ther Success (0) or Failure (1).

3.5.1.7 MAC_ASSOCIATE_RSP

Description:

This command is sent by the host to response to the MAC_ASSOCIATE_IND.

Usage:

SREQ:

Byte: 1	1	1	8	2	1
Length = 0x0B	Cmd0 = 0x42	Cmd1 = 0x50	ExtAddr	AssocShortAddress	AssocStatus

Attributes:

Attribute	Length (byte)	Description			
ExtAddr	8	Extended Address of the device requesting association			
AssocShortAddress	2	Short address for the associated device. Allocated by the coordinator.			
AssocStatus	1	Status of the association: Status	Value		
Associatus	1	SUCCESSFUL_ASSOCIATION	0x00		
		PAN_AT_CAPACITY	0x01		
		PAN_ACCESS_DENIED	0x02		

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x50	Status

Attributes:

Attri	bute	Length (byte)	Description
Sta	tus	1	Status is either Success (0) or Failure (1).

3.5.1.8 MAC_DISASSOCIATE_REQ

Description:

This command is used to request (on behalf of the next higher layer) a disassociation of the device from the coordinator.

Usage:

SREQ:					
Byte: 1	1	1	1	8	2
Length = $0x18$	Cmd0 = 0x22	Cmd1 = 0x07	DeviceAddressMode	DeviceAddress	DevicePanId

Byte: 1	1	8	1	1	1
DisassociateReason	TxIndirect	KeySource	SecurityLevel	KeyIdMode	KeyIndex

Attributes:

Attribute	Length (byte)	Desc	ription		
		Specifies the format of the device address.			
		Mode	Value	Description	
DeviceAddressMode	1	ADDRESS_NOT_PRESENT	0x00	Address Not Present	
DeviceAddressivioue	1	GROUP_ADDRESS	0x01	Group address	
		ADDRESS_16_BIT	0x02	Address 16 bit	
		ADDRESS_64_BIT	0x03	Address 64 bit	
		BROADCAST	0xFF	Broadcast	
DeviceAddress	8	Device Address.			
DevicePanId	2	Network PAN Id of device.			
		Reason of disassociation:			
D' '	1	Reason	Value		
DisassociateReason	1	RESERVED	0x00		

DisassociateReason	1	Reason	Value			
	1	RESERVED	0x00 0x01			
		COOR_WISHES_DEV_LEAVE	0x01			
		DEV_WISHES_LEAVE	0x02			
m * 11	_					

TxIndirect	1	Tx indirect		
KeySource	8	Key Source of this data frame.		
		Security Level of this data frame		

		Security Level	Value
		NO_SECURITY	0x00
		MIC_32_AUTH	0x01
SecurityLevel	1	MIC_64_AUTH	0x02
		MIC_128_AUTH	0x03
		AES_ENCRYPTION	0x04
		AES_ENCRYPTION_MIC_32	0x05
		AES_ENCRYPTION_MIC_64	0x06
		AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

		Key Id Mode	Value
KeyIdMode	1	NOT_USED	0x00
		KEY_1BYTE_INDEX	0x01
		KEY_4BYTE_INDEX	0x02
		KEY_8BYTE_INDEX	0x03
		KEY_8BYTE_INDEX	0x0

KeyIndex 1 Key Index of this data frame.

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x07	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.9 MAC_GET_REQ

Description:

This command is used to read (on behalf of the next higher layer) a MAC PIB attribute.

Usage:

SREQ:



Attributes:

Attribute Length (byte) Description

Specifies the MAC PIB Attributes:

MAC PIB Attribute	Value
ZMAC_ACK_WAIT_DURATION	0x40
ZMAC_ASSOCIATION_PERMIT	0x41
ZMAC_AUTO_REQUEST	0x42
ZMAC_BATT_LIFE_EXT	0x43
ZMAC_BATT_LEFT_EXT_PERIODS	0x44
ZMAC_BEACON_MSDU	0x45
ZMAC_BEACON_MSDU_LENGTH	0x46
ZMAC_BEACON_ORDER	0x47
ZMAC_BEACON_TX_TIME	0x48
ZMAC_BSN	0x49
ZMAC_COORD_EXTENDED_ADDRESS	0x4A
ZMAC_COORD_SHORT_ADDRESS	0x4B
ZMAC_DSN	0x4C
ZMAC_GTS_PERMIT	0x4D
ZMAC_MAX_CSMA_BACKOFFS	0x4E
ZMAC_MIN_BE	0x4F
ZMAC_PANID	0x50
ZMAC_PROMISCUOUS_MODE	0x51
ZMAC_RX_ON_IDLE	0x52
ZMAC_SHORT_ADDRESS	0x53
ZMAC_SUPERFRAME_ORDER	0x54
ZMAC_TRANSACTION_PERSISTENCE_TIME	0x55
ZMAC_ASSOCIATED_PAN_COORD	0x56
ZMAC_MAX_BE	0x57
ZMAC_FRAME_TOTAL_WAIT_TIME	0x58
ZMAC_MAC_FRAME_RETRIES	0x59
ZMAC_RESPONSE_WAIT_TIME	0x5A
ZMAC_SYNC_SYMBOL_OFFSET	0x5B
ZMAC_TIMESTAMP_SUPPORTED	0x5C
ZMAC_SECURITY_ENABLED	0x5D
ZMAC_PHY_TRANSMIT_POWER	0xE0
ZMAC_LOGICAL_CHANNEL	0xE1
ZMAC_EXTENDED_ADDRESS	0xE2
ZMAC_ALT_BE	0xE3

Attribute

Byte: 1	1	1	1	16
Length = $0x11$	Cmd0 = 0x62	Cmd1 = 0x08	Status	Data

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).
Data	16	1-16 bytes value of the PIB attribute.

3.5.1.10 MAC_SET_REQ

Description:

This command is used to request the device to write a MAC PIB value.

Usage:

SREQ:

Byte: 1 1 1 1 16 Length = 0x11 Cmd0 = 0x22 Cmd1 = 0x09 Attribute Attribute Value

Attributes:

Attribute

Attribute	Length (byte)	Description	
-----------	------------------	-------------	--

Specified the MAC PIB Attribute:

	MAC PIB Attribute	Value
	ZMAC_ACK_WAIT_DURATION	0x40
	ZMAC_ASSOCIATION_PERMIT	0x41
	ZMAC_AUTO_REQUEST	0x42
	ZMAC_BATT_LIFE_EXT	0x43
	ZMAC_BATT_LEFT_EXT_PERIODS	0x44
	ZMAC_BEACON_MSDU	0x45
	ZMAC_BEACON_MSDU_LENGTH	0x46
	ZMAC_BEACON_ORDER	0x47
	ZMAC_BEACON_TX_TIME	0x48
	ZMAC_BSN	0x49
	ZMAC_COORD_EXTENDED_ADDRESS	0x4A
	ZMAC_COORD_SHORT_ADDRESS	0x4B
	ZMAC_DSN	0x4C
	ZMAC_GTS_PERMIT	0x4D
	ZMAC_MAX_CSMA_BACKOFFS	0x4E
1	ZMAC_MIN_BE	0x4F
	ZMAC_PANID	0x50
	ZMAC_PROMISCUOUS_MODE	0x51
	ZMAC_RX_ON_IDLE	0x52
	ZMAC_SHORT_ADDRESS	0x53
	ZMAC_SUPERFRAME_ORDER	0x54
	ZMAC_TRANSACTION_PERSISTENCE_TIME	0x55
	ZMAC_ASSOCIATED_PAN_COORD	0x56
	ZMAC_MAX_BE	0x57
	ZMAC_FRAME_TOTAL_WAIT_TIME	0x58
	ZMAC_MAC_FRAME_RETRIES	0x59
	ZMAC_RESPONSE_WAIT_TIME	0x5A
	ZMAC_SYNC_SYMBOL_OFFSET	0x5B
	ZMAC_TIMESTAMP_SUPPORTED	0x5C
	ZMAC_SECURITY_ENABLED	0x5D
	ZMAC_PHY_TRANSMIT_POWER	0xE0
	ZMAC_LOGICAL_CHANNEL	0xE1
	ZMAC_EXTENDED_ADDRESS	0xE2
	ZMAC_ALT_BE	0xE3

AttributeValue 16 1-16

1-16 bytes of the PIB attribute value.



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.11 MAC_SCAN_REQ

Description:

This command is used to send a request to the device to perform a network scan.

Usage:

SREQ:



Byte: 1 1 8 1 1 1 1
ChannelPage MaxResults KeySource SecurityLevel KeyIdMode KeyIndex

Attributes:

Attribute Length (byte) Description

This represents a bit-mask of channels to be scanned when starting the device:

Channel Value

Value NONE 0x00000000 ALL_CHANNELS 0x07FFF800 CHANNEL 11 0x00000800 CHANNEL 12 0x00001000 CHANNEL 13 0x00002000 CHANNEL 14 0x00004000 CHANNEL 15 0x00008000 CHANNEL 16 0x00010000 CHANNEL 17 0x00020000 CHANNEL 18 0x00040000 CHANNEL 19 0x00080000 CHANNEL 20 0x00100000 CHANNEL 21 0x00200000 CHANNEL 22 0x00400000 CHANNEL 23 0x00800000 CHANNEL 24 0x01000000 **CHANNEL 25** 0x02000000 0x04000000 CHANNEL 26

ScanChannels 4

Specifies the scan type:

ScanType 1

Scan Type	Value
ENERGY_DETECT	0x00
ACTIVE	0x01
PASSIVE	0x02
ORPHAN	0x03

ScanDuration 1 Duration of the scan - The exponent used in the scan duration calculation. ChannelPage 1 The channel page on which to perform the scan.

KeySource 8 Key Source of this data frame.

Security Level of this data frame:

SecurityLevel 1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

KeyIdMode

Key Id Mode	Value
NOT_USED	0x00
KEY_1BYTE_INDEX	0x01
KEY_4BYTE_INDEX	0x02
KEY_8BYTE_INDEX	0x03

KeyIndex 1 Key Index of this data frame.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x0C	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.12 MAC_ORPHAN_RSP

Description:

This command is sent by the host to response to the ORPHAN_IND.

Usage:

SREO:

~ ~ ·					
Byte: 1	1	1	8	2	1
Length = 0x0B	Cmd0 = 0x42	Cmd1 = 0x51	ExtAddr	AssocShortAddress	AssociatedMember

Attributes:

Attribute	Length (byte)	Description
ExtAddr	8	Extended Address of the device sending the orphan notification
AssocShortAddress	2	Short address of the orphan device
AssociatedMember	1	TRUE if the orphan is an associated member. FALSE otherwise.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x62	Cmd1 = 0x51	Status


Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.5.1.13 MAC_POLL_REQ

Description:


This command is used to send a MAC data request poll.

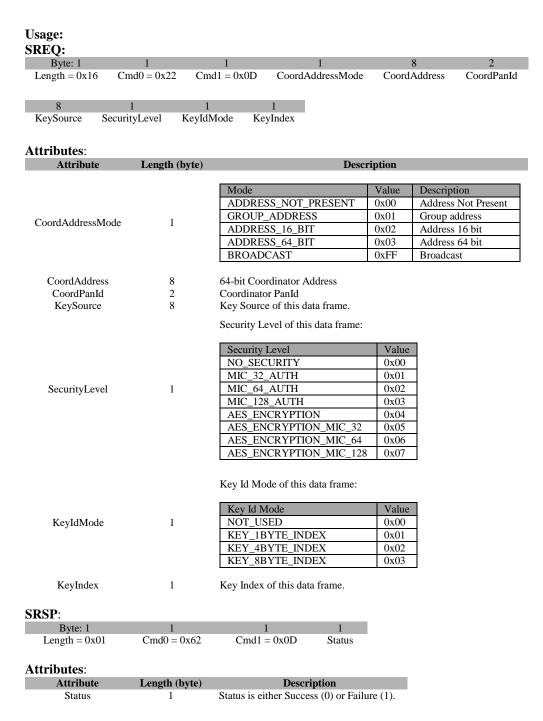

3.5.1.14 MAC_PURGE_REQ

Description:

This command is used to send a request to the device to purge a data frame

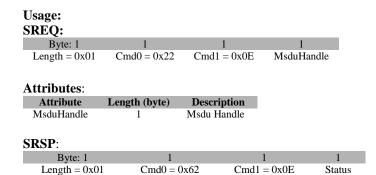



1101100000						
Attribute	Length (byte)	Description				
Status	1	Status is either Success (0) or Failure (1)				

3.5.1.15 MAC_SET_RX_GAIN_REQ

Description:

This command is used to send a request to the device to set Rx gain.





Attributes:

Attribute	Length (byte)	Description
Mode	1	PA/PNA mode – TRUE/FALSE

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.5.2 MT_MAC Callbacks

3.5.2.1 MAC_SYNC_LOSS_IND

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) an indication of the synchronization loss.

Usage:



Attributes:

TITTI DUCES.				
Attribute	Length (byte)	Description	on	
Status	1	This field indicates either SUCCESS	(0) or FA	AILURE (1).
PanId	2	PAN Id of the device		
LogicalChannel	1	Logical Channel of the device where	the synch	ronization is lost
ChannelPage	1	Channel Page of the device where th	e synchro	nization is lost
KeySource	8	Key Source of this data frame.	-	
		Security Level of this data frame:		
		Security Level	Value	
		NO_SECURITY	0x00	
		MIC_32_AUTH	0x01	
SecurityLevel	1	MIC_64_AUTH	0x02	
		MIC_128_AUTH	0x03	
		AES_ENCRYPTION	0x04	
		AES_ENCRYPTION_MIC_32	0x05	
		AES_ENCRYPTION_MIC_64	0x06	
		AES_ENCRYPTION_MIC_128	0x07	
		Key Id Mode of this data frame:		
		Key Id Mode	Value	
KeyIdMode	1	NOT_USED	0x00	
		KEY 1BYTE INDEX	0x01	

KEY_4BYTE_INDEX

KEY_8BYTE_INDEX

Key Index of this data frame.

0x02

0x03

3.5.2.2 MAC_ASSOCIATE_IND


1

Description:

KeyIndex

This callback is called by the MAC to send (on behalf of the next higher layer) an association indication message.

Usage:



Attribute	Length (byte)	Description
DeviceExtendedAddress	8	Extended address of the device
Capabilities	1	Specifies the operating capabilities of the device being directly joined. Bit weighted values follow: Bit: 0 – Alternate PAN Coordinator 1 – Device type: 1- ZigBee Router; 0 – End Device 2 – Power Source: 1 Main powered 3 – Receiver on when Idle 4 – Reserved 5 – Reserved 6 – Security capability 7 – Reserved
KeySource	8	Key Source of this data frame.

Security Level of this data frame:

SecurityLevel 1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

KeyIdMode

Key Id Mode	Value
NOT_USED	0x00
KEY_1BYTE_INDEX	0x01
KEY_4BYTE_INDEX	0x02
KEY_8BYTE_INDEX	0x03

KeyIndex 1 Key Index of this data frame.

1


3.5.2.3 MAC_ASSOCIATE_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) an association confirmation message.

Usage:





TICLIDATES.				
Attribute	Length (byte)	Description		
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).		
DeviceShortAddress	2	Short address of the device		
KeySource	8	Key Source of this data frame.		
		Security Level of this data frame:		
		Security Level	Value	
		NO_SECURITY	0x00	
		MIC_32_AUTH	0x01	
SecurityLevel	1	MIC_64_AUTH	0x02	
·		MIC_128_AUTH	0x03	
		AES_ENCRYPTION	0x04	
		AES_ENCRYPTION_MIC_32	0x05	
		AES_ENCRYPTION_MIC_64	0x06	
		AES_ENCRYPTION_MIC_128	0x07	

Key Id Mode of this data frame:


		Key Id Mode	Value
KeyIdMode	1	NOT_USED	0x00
		KEY_1BYTE_INDEX	0x01
		KEY_4BYTE_INDEX	0x02
		KEY_8BYTE_INDEX	0x03

KeyIndex 1 Key Index of this data frame.

3.5.2.4 MAC_BEACON_NOTIFY_IND

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC beacon notify indication.

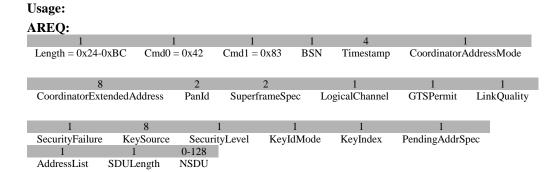

	Length	_		
Attribute	(byte)	Desc	ription	
BSN	1	BSN		
Timestamp	4	Timestamp of the message		
		Address mode of the coordinator		
		Mode	Value	Description
		ADDRESS_NOT_PRESENT	0x00	Address Not Present
CoordinatorAddressMode	1	GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast
CoordinatorExtendedAddress	8	Extended address of the coordinat	or	
PanId	2	Pan Id of the device		
SuperframeSpec	2			
LogicalChannel	1	Current logical channel		
GTSPermit	1	TRUE/FALSE - Permit/Not perm	it GTS	
LinkQuality	1	Link quality of the message		
SecurityFailure	1	_		
KeySource	8	Key Source of this data frame.		

Security Level of this data frame:

SecurityLevel 1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

KeyIdMode	1

Key Id Mode	Value
NOT_USED	0x00
KEY_1BYTE_INDEX	0x01
KEY_4BYTE_INDEX	0x02
KEY_8BYTE_INDEX	0x03

KeyIndex	1
PendingAddrSpec	1
AddressList	1
SDULength	1
NSDU	0-128

Key Index of this data frame.

List of address associate with the device Beacon Length Beacon payload

3.5.2.5 MAC_DATA_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC data confirmation.

Usage:





Attributes:

rater in accs.		
Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).
Handle	1	Handle of the message
Timestamp	4	64bit timestamp of the message
Timestamp2	2	16bit timestamp of the message


3.5.2.6 MAC_DATA_IND

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC data indication.

Usage:





ı	1	8	1	1	1	1	0-128
	DSN	KevSource	SecurityLevel	KevIdMode	KevIndex	Length	Data

A

ttributes:					
Attribute Length (byte)		Description			
		Source address mode			
		Mode	Value	Description	
		ADDRESS_NOT_PRESENT	0x00	Address Not Present	
SrcAddrMode	1	GROUP_ADDRESS	0x01	Group address	
31011441111040	-	ADDRESS 16 BIT	0x02	Address 16 bit	
		ADDRESS_64_BIT	0x03	Address 64 bit	
		BROADCAST	0xFF	Broadcast	
G A 11	0	C 11			
SrcAddr	8	Source address			
DstAddrMode	1	Destination address mode			
DstAddr	8	Destination address			
Timestamp	4	32bit timestamp of the message			
Timestamp2	2	16bit timestamp of the message			
SrcPanId	2	Pan Id of the source address			
DstPanId	2	Pan Id of the destination address			
LinkQuality	1	Link quality			
Correlation	1	Correlation			
RSSI	1	RSSI			
DSN	1	DSN			
KeySource	8	Key Source of this data frame.			
		Security Level of this data frame:		_	
		Security Level	Value		
		NO_SECURITY	0x00		
		MIC_32_AUTH	0x01		
SecurityLevel	1	MIC_64_AUTH	0x02		
		MIC_128_AUTH	0x03		
		AES_ENCRYPTION	0x04		
		AES_ENCRYPTION_MIC_32	0x05		
		AES_ENCRYPTION_MIC_64	0x06		
		AES_ENCRYPTION_MIC_128	0x07		
		Key Id Mode of this data frame:			
		Key Id Mode	Value		
KeyIdMode	1	NOT_USED	0x00		
		KEY_1BYTE_INDEX	0x01		
			0x02		
		KEY_8BYTE_INDEX	0x03]	
KevIndex	1	Key Index of this data frame.			
	1				
_		2			
KeyIndex Length Data	1	KEY_1BYTE_INDEX KEY_4BYTE_INDEX	0x01 0x02		

MAC_DISASSOCIATE_IND 3.5.2.7

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC disassociation indication.

Usage:

AREQ:

·					
1	1	1	8	1	8
Length = $0x14$	Cmd0 = 0x42	Cmd1 = 0x86	ExtendedAddress	DisassociateReason	KeySource

1	1	1
SecurityLevel	KeyIdMode	KeyIndex

Attributes:

Attribute	Length (byte)	Desc	ription	
ExtendedAddress	8	Extended address of the device leavi	ng the netwo	rk
		Reason of the disassociation:		
DisassociateReason	1	Reason		Value
		Coordinator wishes the device to o	lisassociate	0x01
		Device itself wishes to disassociat	e	0x02
KeySource	8	Key Source of this data frame.		
		Security Level of this data frame:		
		Security Level	Value	
		NO_SECURITY	0x00	
		MIC_32_AUTH	0x01	
SecurityLevel	1	MIC_64_AUTH	0x02	
		MIC_128_AUTH	0x03	
		AES_ENCRYPTION	0x04	
		AES_ENCRYPTION_MIC_32	0x05	
		AES_ENCRYPTION_MIC_64	0x06	
		AES_ENCRYPTION_MIC_128	0x07	
		Key Id Mode of this data frame:		
		Key lu Mode of this data frame.		
		Key Id Mode	Value	
KeyIdMode	1	NOT_USED	0x00	
		KEY_1BYTE_INDEX	0x01	
		KEY_4BYTE_INDEX	0x02	
		KEY_8BYTE_INDEX	0x03	
KeyIndex	1	Key Index of this data frame.		

3.5.2.8 MAC_DISASSOCIATE_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC disassociate confirm.

Usage:



1	1	1	1	1	8	2
Length = $0x0C$	Cmd0 = 0x42	Cmd1 = 0x87	Status	DeviceAddrMode	DeviceAddr	DevicePanId

Attribute	Length (byte)	Description			
Status	1	This field indicates either SUCCE	SS (0) or I	FAILURE (1).	
		Address mode of the device			
		Mode	Value	Description	
		ADDRESS_NOT_PRESENT	0x00	Address Not Present	
DeviceAddrMode	1	GROUP_ADDRESS	0x01	Group address	
		ADDRESS_16_BIT	0x02	Address 16 bit	
		ADDRESS_64_BIT	0x03	Address 64 bit	
		BROADCAST	0xFF	Broadcast	
DeviceAddr	8	Address of the device		_	
DevicePanId	2	Pan Id of the device			

3.5.2.9 MAC_ORPHAN_IND

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC orphan indication.

Usage:





8	1	1	1
KeySource	SecurityLevel	KeyIdMode	KeyIndex

Attributes:

Attribute	Length (byte)	Description
ExtendedAddr	8	Extended address of the orphan device
KeySource	8	Key Source of this data frame.
		Security Level of this data frame:

		Security Level	Value
		NO_SECURITY	0x00
		MIC_32_AUTH	0x01
SecurityLevel	1	MIC_64_AUTH	0x02
		MIC_128_AUTH	0x03
		AES_ENCRYPTION	0x04
		AES_ENCRYPTION_MIC_32	0x05
		AES_ENCRYPTION_MIC_64	0x06
		AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:


		Key Id Mode	Value
KeyIdMode	1	NOT_USED	0x00
		KEY_1BYTE_INDEX	0x01
		KEY_4BYTE_INDEX	0x02
		KEY_8BYTE_INDEX	0x03
KeyIndex	1	Key Index of this data frame.	

3.5.2.10 MAC_POLL_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC poll confirmation.

Usage:



Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.5.2.11 MAC_SCAN_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC scan confirmation.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	D	escription	
Status	1	This field indicates either	SUCCESS	S (0) or FAILURE (1).
ED	1	ED max energy.		
ScanType	1	Specifies the scan type: Scan Type ENERGY_DETECT ACTIVE PASSIVE ORPHAN	Value 0x00 0x01 0x02 0x03	
ChannelPage	1	Channel Page		
UnscannedChannelList	4	List of un-scanned chann	els	
ResultListCount	1	Number of item in the res	sult list	
ResultListMaxLength	1	Max length of the result l	list in bytes	
ResultList	0-128	Result list	•	


3.5.2.12 MAC_COMM_STATUS_IND

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC communication indicator.

Usage:

AREQ:



Attribute	Length (byte)	Desc	ription	
Status	1	This field indicates either SUCCE	ESS (0) or I	FAILURE (1).
		Destination address mode		
		Mode	Value	Description
		ADDRESS_NOT_PRESENT	0x00	Address Not Present
DstAddrMode	1	GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast
SrcAddr	8	Source address		
DstAddr	8	Destination address		
250.1001	3	2 00000000		

Timestamp	4	Timestamp of the message
DevicePanId	2	Pan Id of the device that generate the indication
Reason	1	Reason for this communication indication.
KeySource	8	Key Source of this data frame.

Security Level of this data frame:

SecurityLevel	1

Security Level	Value
NO_SECURITY	0x00
MIC_32_AUTH	0x01
MIC_64_AUTH	0x02
MIC_128_AUTH	0x03
AES_ENCRYPTION	0x04
AES_ENCRYPTION_MIC_32	0x05
AES_ENCRYPTION_MIC_64	0x06
AES_ENCRYPTION_MIC_128	0x07

Key Id Mode of this data frame:

KeyIdMode 1

Key Id Mode	Value
NOT_USED	0x00
KEY_1BYTE_INDEX	0x01
KEY_4BYTE_INDEX	0x02
KEY_8BYTE_INDEX	0x03

KeyIndex 1 Key Index of this data frame.


3.5.2.13 MAC_START_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC start confirmation.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).


3.5.2.14 MAC_RX_ENABLE_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC Rx enable confirmation.

Usage:

AREQ:



Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.5.2.15 MAC_PURGE_CNF

Description:

This callback is called by the MAC to send (on behalf of the next higher layer) a MAC purge confirmation.

Usage:



Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).
Handle	1	Handle of this message

3.6 MT_NWK

Not supported.

3.7 MT SAPI

This interface allows tester to interact with the simple API interface.


3.7.1 MT_SAPI Commands

3.7.1.1 ZB_SYSTEM_RESET

Description:

This command will reset the device by using a soft reset (i.e. a jump to the reset vector) vice a hardware reset (i.e. watchdog reset.) This is especially useful in the CC2531, for instance, so that the USB host does not have to contend with the USB H/W resetting (and thus causing the USB host to re-enumerate the device which can cause an open virtual serial port to hang.)

Usage:



Attributes:

None


3.7.1.2 ZB_START_REQUEST

Description:

This command starts the ZigBee stack. When the ZigBee stack starts, the device reads configuration parameters from nonvolatile memory and the device joins its network. The ZigBee stack calls the zb_StartConfirm callback function when the startup process completes. After the start request process completes, the device is ready to send, receive, and route network traffic.

Usage:


SREQ:



Attributes:

None

SRSP:



Attributes:

None

3.7.1.3 ZB_PERMIT_JOINING_REQUEST

Description:

This command is used to control the joining permissions and thus allows or disallows new devices from joining the network.

Usage:

SREQ:

Byte: 1	1	1	2	1
Length = $0x03$	Cmd0 = 0x26	Cmd1 = 0x08	Destination	Timeout

Attributes:

Attribute	Length (byte)	Description
Destination	2	The destination parameter indicates the address of the device for which the joining permissions should be set. This is usually the local device address or the special broadcast address that denotes all routers and coordinator (0xFFFC). This way the joining permissions of a single device or the whole
Timeout	1	network can be controlled. Indicates the amount of time in seconds for which the joining permissions should be turned on. If timeout is set to 0x00, the device will turn off the joining permissions indefinitely. If it is set to 0xFF, the joining permissions will be turned on indefinitely.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.7.1.4 ZB_BIND_DEVICE

Description:

This command establishes or removes a 'binding' between two devices. Once bound, an application can send messages to a device by referencing the commandId for the binding.

Usage:


SREQ:



Attributes:

Attribute	Length (byte)	Description
Create	1	TRUE to create a binding, FALSE to remove a binding.
CommandId	2	The Identifier of the binding
Destination	8	Specifies the 64-bit IEEE address of the device to bind to.

SRSP:



Attributes:

None

3.7.1.5 ZB_ALLOW_BIND

Description:

This command puts the device into the Allow Binding Mode for a given period of time. A peer device can establish a binding to a device in the Allow Binding Mode by calling zb_BindDevice with a destination address of NULL.

Usage:


SREQ:



Attributes:

Attribute	Length (byte)	Description
Timeout	1	The number of seconds to remain in the allow binding mode. Valid values range from 1 through 65. If 0, the Allow Bind mode will be set false without timeout. If greater than 64, the Allow Bind mode will be true.

SRSP:



Attributes:

None

3.7.1.6 ZB_SEND_DATA_REQUEST

Description:

This command initiates transmission of data to a peer device.

Usage:


SREQ:



Attribute	Length (byte)	Description
Destination	2	The destination of the data. The destination can be one of the following: - 16-Bit short address of device [0-0xfffD] - ZB_BROADCAST_ADDR sends the data to all devices in the network. - ZB_BINDING_ADDR sends the data to a previously bound device.

CommandId 2	2	The command Id to send with the message. If the ZB_BINDING_ADDR destination is
	used, this parameter also indicates the binding to use.	
Handle	1	A handle used to Identify the send data request.
Ack	1	TRUE if requesting acknowledgement from the destination.
Radius	1	The max number of hops the packet can travel through before it is dropped.
Len	1	Specifies the size of the Data buffer in bytes.
Data	0-84	Data

SRSP:



Attributes:

None

3.7.1.7 ZB_READ_CONFIGURATION

Description:

This command is used to get a configuration property from non-volatile memory.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
ConfigId	1	Specifies the Identifier for the configuration property.

SRSP:

Byte: 1	1	1	1	1	1	0-128
Length = 0x03-0x83	Cmd0 = 0x66	Cmd1 = 0x04	Status	ConfigId	Len	Value

Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).
ConfigId	1	Specifies the Identifier for the configuration property.
Len	1	Specifies the size of the Value buffer in bytes.
Value	0-128	Buffer to hold the configuration property.

3.7.1.8 ZB_WRITE_CONFIGURATION

Description:

This command is used to write a Configuration Property to non-volatile memory.

Usage:

SREQ:

Byte: 1	1	1	1	1	1-128
Length = 0x03-0x83	Cmd0 = 0x26	Cmd1 = 0x05	ConfigId	Len	Value

Attribute	Length (byte)	Description
ConfigId	1	The Identifier for the configuration property
Len	1	Specifies the size of the Value buffer in bytes.
Value	1-128	The buffer containing the new value of the configuration property.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x66	Cmd1 = 0x05	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.7.1.9 ZB_GET_DEVICE_INFO

Description:

This command retrieves a Device Information Property.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
Param	1	The Identifier for the device information.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Param	1	The Identifier for the device information.
Value	2	A buffer to hold the device information

3.7.1.10 ZB_FIND_DEVICE_REQUEST

Description:

This command is used to determine the short address for a device in the network. The device initiating a call to zb_FindDeviceRequest and the device being discovered must both be a member of the same network. When the search is complete, the zv_FindDeviceConfirm callback function is called.


SREQ:



Attributes:

Attribute	Length (byte)	Description
SearchKey	8	Specifies the value to search on.

SRSP:



Attributes:

None

3.7.2 MT_SAPI Callbacks

3.7.2.1 ZB_START_CONFIRM

Description:

This callback is called by the ZigBee stack after a start request operation completes.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.7.2.2 ZB_BIND_CONFIRM

Description:

This callback is called by the ZigBee stack after a bind operation completes.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
CommandId	2	The command Id of the binding being confirmed.
Status	1	Specifies the status of the bind operation.

3.7.2.3 ZB_ALLOW_BIND_CONFIRM

Description:

This callback indicates another device attempted to bind to this device.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
Source	2	Contains the address of the device attempted to bind to this device.

3.7.2.4 ZB_SEND_DATA_CONFIRM

Description:

This callback indicates the data has been sent.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
Handle	1	Specifies the handle.
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.7.2.5 ZB_RECEIVE_DATA_INDICATION

Description:

This callback is called asynchronously by the ZigBee stack to notify the application when data is received from a peer device.

Usage:

AREQ:

1	1	1	2	2	2	0-84
Length = $0x06-5A$	Cmd0 = 0x46	Cmd1 = 0x87	Source	Command	Len	Data

Attributes:

Attribute	Length (byte)	Description
Source	2	Specifies the short address of the peer device that sent the data.
Command	2	The command Id associated with the data.
Len	2	Specifies the number of bytes in the Data parameter.
Data	0-84	The data sent by the peer device.

3.7.2.6 ZB_FIND_DEVICE_CONFIRM

Description:

This callback is called by the ZigBee stack when a find device operation completes.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
SearchType	1	The type of search that was performed.
SearchKey	2	Value that the search was executed on.
Result	8	The result of the search.

3.8 MT_SYS

This interface allows the tester to interact with the target at system level such as reset, read/write memory, read/write extended address, etc.

3.8.1 MT_SYS Commands

3.8.1.1 SYS_RESET_REQ

Description:

This command is sent by the tester to reset the target device

Usage:

AREQ:

1 1		1	1
Length = $0x01$	Cmd0 = 0x41	Cmd1 = 0x00	Type

Attributes:

Attribute	Length (byte)	Description
Туре	1	This command will reset the device by using a hardware reset (i.e. watchdog reset) if 'Type' is zero. Otherwise a soft reset (i.e. a jump to the reset vector) is done. This is especially useful in the CC2531, for instance, so that the USB host does not have to contend with the USB H/W resetting (and thus causing the USB host to re-enumerate the device which can cause an open virtual serial port to hang.)

3.8.1.2 SYS_PING

Description:

This command issues PING requests to verify if a device is active and check the capability of the device.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x01

Attributes:

None

SRSP:

1 1		1	2
Length = $0x02$	Cmd0 = 0x61	Cmd1 = 0x01	Capabilities

Attributes:

ttributes:		
Attribute	Length (byte)	Description

This field represents the interfaces that this device can handle (compiled into the device). Bit weighted and defined as:

Capabilities 2

Capability	Value
MT_CAP_SYS	0x0001
MT_CAP_MAC	0x0002
MT_CAP_NWK	0x0004
MT_CAP_AF	0x0008
MT_CAP_ZDO	0x0010
MT_CAP_SAPI	0x0020
MT_CAP_UTIL	0x0040
MT_CAP_DEBUG	0x0080
MT_CAP_APP	0x0100
MT_CAP_ZOAD	0x1000

3.8.1.3 SYS_VERSION

Description:

This command is used to request for the device's version string.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x02

Attributes:

None

SRSP:

1	1	1	1	1	1	1	1
Length = $0x05$	Cmd0 = 0x61	Cmd1 = 0x02	TransportRev	Product	MajorRel	MinorRel	MaintRel

Attributes:

Attribute	Length (byte)	Description
TransportRev	1	Transport protocol revision
Product	1	Product Id
MajorRel	1	Software major release number
MinorRel	1	Software minor release number
MaintRel	1	Software maintenance release number

3.8.1.4 SYS_SET_EXTADDR

Description:

This command is used to set the extended address of the device.

Usage:

SREQ:

1	1	1	8
Length = $0x08$	Cmd0 = 0x21	Cmd1 = 0x03	ExtAddress

Attribute	Length (byte)	Description
ExtAddress	8	The device's extended address.

SRSP:

SILSI.					
1 1		1	1		
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x03	Status		

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (1) or Failure (0)

3.8.1.5 SYS_GET_EXTADDR

Description:

This command is used to get the extended address of the device.

Usage:

SREQ:

1	1	1	
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x04	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (1) or Failure (0)

SRSP:

1	1	1	8	
Length = $0x08$	Cmd0 = 0x61	Cmd1 = 0x04	ExtAddress	

Attributes:

Attribute	Length (byte)	Description	ı
ExtAddress	8	The device's extended address	

3.8.1.6 SYS_RAM_READ

Description:

This command is used by the tester to read a single memory location in the target RAM. The command accepts an address value and returns the memory value present in the target RAM at that address.

Usage:

SREQ:

1 1		1	2	1
Length = $0x03$	Cmd0 = 0x21	Cmd1 = 0x05	Address	Len

Attributes:

Attribute	Length (byte)	Description
Address	2	Address of the memory that will be read.
Len	1	The number of bytes that will be read from the target RAM.

SRSP:

1	1	1	1	1	0-128
Length = $0x02-0x82$	Cmd0 = 0x61	Cmd1 = 0x05	Status	Len	Value

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).
Len	1	The number of bytes that will be read from the target RAM.
Value	0-128	The value read from the target RAM.

3.8.1.7 SYS_RAM_WRITE

Description:

This command is used by the tester to write to a particular location in the target RAM. The command accepts an address location and a memory value. The memory value is written to the address location in the target RAM.

Usage:

SREQ:

1	1	1	2	1	1-128
Length = 0x04-0x84	Cmd0 = 0x21	Cmd1 = 0x06	Address	Len	Value

Attributes:

Attribute	Length (byte)	Description
Address	2	Address of the memory that will be read.
Len	1	The number of bytes that will be read from the target RAM.
Value	1-128	The value written to the target RAMS.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x06	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.8 SYS_OSAL_NV_READ

Description:

This command is used by the tester to read a single memory item from the target non-volatile memory. The command accepts an attribute Id value and data offset and returns the memory value present in the target for the specified attribute Id.

Usage:

SREQ:

1	1	1	2	1
Length = $0x03$	Cmd0 = 0x21	Cmd1 = 0x08	Id	Offset

Attributes:

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.
Offset	1	Number of bytes offset from the beginning or the NV value.

SRSP:

1	1	1	1	1	0-248
Length = $0x02-0xFA$	Cmd0 = 0x61	Cmd1 = 0x08	Status	Len	Value

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).
Len	1	Length of the NV value.
Value	0-248	Value of the NV item.

3.8.1.9 SYS_OSAL_NV_WRITE

Description:

This command is used by the tester to write to a particular item in non-volatile memory. The command accepts an attribute Id, data offset, data length, and attribute value. The attribute value is written to the location specified for the attribute Id in the target.

Usage:

SREQ:

1	1	1	2	1	1	1-246
Length = $0x04-0xFA$	Cmd0 = 0x21	Cmd1 = 0x09	Id	Offset	Len	Value

Attributes:

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.
Offset	1	Number of bytes offset from the beginning or the NV value.
Len	1	Length of the NV value.
Value	0-246	Value of the NV item.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x09	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.10 SYS_OSAL_NV_ITEM_INIT

Description

This command is used by the tester to create and initialize an item in non-volatile memory. The NV item will be created if it does not already exist. The data for the new NV item will be left uninitialized if the *InitLen* parameter is zero. When *InitLen* is non-zero, the data for the NV item will be initialized (starting at offset of zero) with the values from *InitData*. Note that it is not necessary to initialize the entire NV item (*InitLen* < *ItemLen*). It is also possible to create an NV item that is larger than the maximum length *InitData* – use the SYS_OSAL_NV_WRITE command to finish the initialization.

Usage

SREQ:

1	1	1	2	2	1	0-245
Length = $0x04-0xFA$	Cmd0 = 0x21	Cmd1 = 0x07	Id	ItemLen	InitLen	InitData

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.
ItemLen	2	Number of bytes in the NV item.
InitLen	1	Number of bytes in the initialization data.
InitData	0-245	Value of the initialization data.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x07	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	0x00 = Item already exists, no action taken
		0x09 = Success, item created and initialized
		0x0A = Initialization failed, item not created

3.8.1.11 SYS_OSAL_NV_DELETE

Description

This command is used by the tester to delete an item from the non-volatile memory. The *ItemLen* parameter must match the length of the NV item or the command will fail. Use this command with caution – deleted items cannot be recovered.

Usage

SREQ:

1	1	1	2	2
Length = $0x04$	Cmd0 = 0x21	Cmd1 = 0x12	Id	ItemLen

Attributes:

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.
ItemLen	2	Length of the NV item.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x12	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	0x00 = Success, the item was deleted
Status	1	0x09 = No action taken, item did not exist
		0x0A = Failure, item was not deleted
		0x0C = Bad length, item was not deleted

3.8.1.12 SYS_OSAL_NV_LENGTH

Description

This command is used by the tester to get the length of an item in non-volatile memory. A returned length of zero indicates that the NV item does not exist.

Usage

SREQ:

SILLQ.			
1	1	1	2
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x13	Id

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.

SRSP:

1	1	1	2
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x13	Length

Attributes:

Attribute	Length (byte)	Description
Length	2	0x0000 = item does not exist
		0x0001-0xNNNN = number of bytes in NV item

3.8.1.13 SYS_OSAL_START_TIMER

Description

This command is used by the tester to start a timer event. The event will expired after the indicated amount of time and a notification will be sent back to the tester.

Usage

SREQ:

1	1	1	1	2
Length = $0x03$	Cmd0 = 0x21	Cmd1 = 0x0A	Id	Timeout

Attributes:

Attribute	Length (byte)	Description
Id	1	The Id of the timer event (0-3)
Timeout	2	Amount of time it will take before the event expired in milliseconds.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x0A	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.14 SYS_OSAL_STOP_TIMER

Description:

This command is used by the tester to stop a timer event.

Usage:

SREQ:

1	1	1	1
Length = $0x01$	Cmd0 = 0x21	Cmd1 = 0x0B	Id

Attributes:

Attribute	Length (byte)	Description
Id	1	The Id of the timer event (0-3).

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x0B	Status

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.15 SYS RANDOM

Description:

This command is used by the tester to get a random 16-bit number.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x0C

Attributes:

None

SRSP:

5161				
1	1	1	2	
Length = $0x02$	Cmd0 = 0x61	Cmd1 = 0x0C	Value	

Attributes:

Attribute	Length (byte)	Description
Value	2	The random value.

3.8.1.16 SYS_ADC_READ

Description

This command reads a value from the ADC based on specified channel and resolution.

Usage

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x0D	Channel	Resolution

Attributes:

Attribute Length (byte) Description

The channel of the ADC that will be used.

Channel 1

Channel	Value
AIN0	0x00
AIN1	0x01
AIN2	0x02
AIN3	0x03
AIN4	0x04
AIN5	0x05
AIN6	0x06
AIN7	0x07
Temperature Sensor	0x0E
Voltage Reading	0x0F

Resolution of the reading. This can be 8-bit, 10-bit, 12-bit or 14-bit.

Resolution 1

Resolution	Value
8-bit	0x00
10-bit	0x01
12-bit	0x02
14-bit	0x03

SRSP:

1 1		1	2
Length = $0x02$	Cmd0 = 0x61	Cmd1 = 0x0D	Value

Attributes:

Attribute	Length (byte)	Description
Value	2	Value of the ADC reading based on the specified information.

3.8.1.17 **SYS_GPIO**

Description

This command is used by the tester to control the 4 GPIO pins on the CC2530-ZNP build.

Usage

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x0E	Operation	Value

Operation -1 byte - specifies the type of operation to perform on the GPIO pins. It can take the values, shown in the table below, with effects dictated by the bit values of the value parameter:

Attributes:

Attibutes.	
Operation	Description
Set direction (0x00)	Configure the direction of the GPIO pins. A value of 0 in a bit position configures
	the corresponding GPIO pin as an Input while a value of 1 configures it as Output.
Set Input mode (0x01)	Configure the Input mode of the GPIO pins. A value of 0 in a bit position
	configures it as pull-up mode while a 1 configures it in tri-state Input mode. (Note:
	P1_0 and P1_1 of the CC2530 can only be set in tri-state input mode).
Set (0x02)	A value of 1 in a bit position will set the corresponding GPIO pin (writes a 1).
Clear (0x03)	A value of 0 in a bit position will clear the corresponding GPIO pin (writes a 0).
Toggle (0x04)	A value of 1 in a bit position will toggle the corresponding GPIO pin.
Read (0x05)	Reads the GPIO pins.

SRSP:

1	1	1	2
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x0E	Value

Attributes:

Attribute	Length (byte)	Description
Value	1	The value read from the GPIO pins.

3.8.1.18 SYS_STACK_TUNE

Description

This command is used by the tester to tune stack parameters and adjust performance at runtime.

Usage

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x0F	Operation	Value

Attributes:

The tuning operation to be executed according to the STK_Tune_t enumeration:

Operation	Value
Set the transmitter power level according to the value of the Value parameter	0x00
which should correspond to the valid values specified by the	
ZMacTransmitPower_t enumeration (0xFD – 0x16)	
Set RxOnWhenIdle off/on if the value of Value is 0/1; otherwise return the	0x01
current setting of RxOnWhenIdle.	

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x0F	Value

Attributes:

Attribute	Length (byte)	Description
Value	1	Applicable status of the tuning operation

3.8.1.19 SYS_SET_TIME

Description

This command is used by the tester to set the target system date and time. The time can be specified in "seconds since 00:00:00 on January 1, 2000" or in parsed date/time components.

Usage

SREQ:

1	1	1	4	1	1	1
Length = $0x0B$	Cmd0 = 0x21	Cmd1 = 0x10	UTCTime	Hour	Minute	Second

1	1	2
Month	Day	Year

Attributes:

ittlibutes.				
Attribute	Length (bytes)	Description		
UTCTime	4	Number of seconds since 00:00:00 on January 1, 2000. Set this parameter to zero to use date/time attributes below.		
Hour	1	Hour of the day (0-23)		
Minute	1	Minute of the hour (0-59)		
Second	1	Second of the minute (0-59)		
Month	1	Month of the year (1-12)		
Day	1	Day of the month (1-31)		
Year	2	Year (2000-)		

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x10	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.20 SYS_GET_TIME

Description:

This command is used by the tester to get the target system date and time. The time is returned in "seconds since 00:00:00 on January 1, 2000" and parsed date/time components.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x11

Attributes:

None

SRSP:

1	1	1	4	1	1	1
Length = $0x0B$	Cmd0 = 0x61	Cmd1 = 0x11	UTCTime	Hour	Minute	Second

1	1	2
Month	Day	Year

Attributes:

Attribute	Length (bytes)	Description
UTCTime	4	Number of seconds since 00:00:00 on January 1, 2000.
Hour	1	Hour of the day (0-23)
Minute	1	Minute of the hour (0-59)
Second	1	Second of the minute (0-59)
Month	1	Month of the year (1-12)
Day	1	Day of the month (1-31)
Year	2	Year (2000-)

3.8.1.21 SYS_SET_TX_POWER

Description:

This command is used by the tester to set the target system radio transmit power. The returned TX power is the actual setting applied to the radio – nearest characterized value for the specific radio.

Usage:

SREQ:

1	1	1	1
Length = $0x01$	Cmd0 = 0x21	Cmd1 = 0x14	TX Power

Attributes:

Attribute	Length (bytes)	Description
TX Power	1	Requested TX power setting, in dBm.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x14	TX Power

Attributes:

Attribute	Length (byte)	Description
TX Power	1	Actual TX power setting, in dBm.

3.8.1.22 SYS_ZDIAGS_INIT_STATS

Description:

This command is used to initialize the statistics table in NV memory.

Usage:

SREQ:

e -				
1	1	1		
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x17		

Attributes:

None

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x17	Status

Attributes:

Attribute	Length (byte)	Description	
Status	1	Status is either Success (0) or Failure (1).	

3.8.1.23 SYS_ZDIAGS_CLEAR_STATS

Description:

This command is used to clear the statistics table. To clear data in NV (including the Boot Counter) the clear NV flag shall be set to TRUE.

Usage:

SREQ:

1	1	1	1
Length = $0x01$	Cmd0 = 0x21	Cmd1 = 0x18	clearNV

Attributes:

1101100				
Attribute	Length (bytes)	Description		
clearNV	1	TRUE – Clears statistics in NV memory including Boot Counter. FALSE – Clears statistics in RAM only. Boot Counter is preserved.		

SRSP:

1	1	1	4
Length = $0x04$	Cmd0 = 0x61	Cmd1 = 0x18	SysClock

Attributes:

Attribute	Length (byte)	Description	
SysClock	4	Milliseconds since last reset.	

3.8.1.24 SYS_ZDIAGS_GET_STATS

Description:

This command is used to read a specific system (attribute) ID statistics and/or metrics value.

Usage:

SREQ:

1	1	1	2
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x19	AttributeID

Attribute	Length (bytes)	Description

AttributeID 2 System Diagnostics (ZDiags) attribute ID, as defined in ZDiags.h module.

SRSP:

1	1	1	4
Length = $0x04$	Cmd0 = 0x61	Cmd1 = 0x19	AttributeValue

Attributes:

Attribute	Length (byte)	Description	
AttributeValue	4	Value of the requested attribute.	

3.8.1.25 SYS_ZDIAGS_RESTORE_STATS_NV

Description:

This command is used to restore the statistics table from NV into the RAM table.

Usage:

SREQ:

I	1	1	1
	Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x1A

Attributes:

None

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x1A	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.1.26 SYS_ZDIAGS_SAVE_STATS_TO_NV

Description:

This command is used to save the statistics table from RAM to NV.

Usage:

SREO:

1	1	1
Length = $0x00$	Cmd0 = 0x21	Cmd1 = 0x1B

Attributes:

None

SRSP:

1	1	1	4
Length = $0x04$	Cmd0 = 0x61	Cmd1 = 0x1B	SysClock

ittibutes.				
Attribute	Length (byte)	Description		
SysClock	4	Milliseconds since last reset		

3.8.1.27 SYS_NV_CREATE

Description:

This command is used to attempt to create an item in non-volatile memory.

Usage:

SREQ:

1	1	1	1	2	2	4
Length = $0x09$	Cmd0 = 0x21	Cmd1 = 0x30	SysID	ItemID	SubID	Length

Attributes:

Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item
Length	4	Number of bytes in the NV item

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x30	Status

Attributes:

Attribute	Length (byte)		Description	
Status	1	Status of NV create		

3.8.1.28 SYS_NV_DELETE

Description:

This command is used to attempt to delete an item in non-volatile memory.

Usage:

SREQ:

1	1	1	1	2	2
Length = $0x05$	Cmd0 = 0x21	Cmd1 = 0x31	SysID	ItemID	SubID

Attributes:

Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x31	Status

Attribute	Length (byte)	Description
Status	1	Status of NV delete

3.8.1.29 SYS_NV_LENGTH

Description:

This command is used to get the length of an item in non-volatile memory.

Usage:

SREQ:

1	1	1	1	2	2
Length = $0x05$	Cmd0 = 0x21	Cmd1 = 0x32	SysID	ItemID	SubID

Attributes:

I I COL IN GUEST		
Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item

SRSP:

1 1		1	1	
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x32	Length	

Attributes:

Attribute	Length (byte)	Description	
Length	1	Length of NV Item	

3.8.1.30 **SYS_NV_READ**

Description:

This command is used to read an item in non-volatile memory.

Usage:

SREQ:

1	1	1	1	2	2	2	1
Length = 0x08	Cmd0 = 0x21	Cmd1 = 0x33	SysID	ItemID	SubID	Offset	Length

Attributes:

Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item
Offset	2	Offset into NV
Length	1	Length of data to read

SRSP:

1	1	1	1	1	0-240
Length = $0x03$ -	Cmd0 = 0x61	Cmd1 = 0x33	Status	Length	Value
0xF3				_	

Attribute	Length (byte)	Description
Status	1	Status of read
Length	1	Length of NV Item
Value	0-240	Value of the NV Item read

3.8.1.31 SYS_NV_WRITE

Description:

This command is used to write an item in non-volatile memory

Usage:

SREQ:

I	1	1	1	1	2	2	2	2	0-240
Ī	Length = 0x09-0xF9	Cmd0 = 0x21	Cmd1 = 0x34	SysID	ItemID	SubID	Offset	Length	Value

Attributes:

Attitibutes.		
Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item
Offset	2	Offset into NV
Length	1	Length of data to read
Value	0-240	Data Bytes to be written to NV item

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x34	Status

Attributes:

Attribute	Length (byte)		Description	
Status	1	Status of NV write		

3.8.1.32 SYS_NV_UPDATE

Description:

This command is used to update an item in non-volatile memory

Usage:

SREQ:

1	1	1	1	2	2	2	0-240
Length = $0x07$ - $0xF7$	Cmd0 = 0x21	Cmd1 = 0x35	SysID	ItemID	SubID	Length	Value

Attributes:

rice in accs.		
Attribute	Length (bytes)	Description
SysID	1	System ID of the NV item
ItemID	2	Item ID of the NV item
SubID	2	Sub ID of the NV item
Length	1	Length of data to read
Value	0-240	Data Bytes to be written to NV item

SRSP:

1	1	1	1	
Length = $0x04$	Cmd0 = 0x61	Cmd1 = 0x35	Status	

Attribute	Length (byte)	Description	
Status	1	Status of NV Update	

3.8.1.33 SYS_NV_COMPACT

Description:

This command is used to compact the active page in non-volatile memory

Usage:

SREQ:

1 1		1	2	
Length = $0x02$	Cmd0 = 0x21	Cmd1 = 0x36	Threshold	

Attributes:

Attribute	Length (bytes)	Description		
Threshold	2	Compaction occurs when NV bytes are less than this value		

SRSP:

1 1		1	1	
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x36	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status of compaction of active page

3.8.1.34 SYS_OSAL_NV_READ_EXT

Description:

This command is used by the tester to read a single memory item from the target non-volatile memory. The command accepts an attribute Id value and data offset and returns the memory value present in the target for the specified attribute Id.

Usage:

SREO:

1 1		1	2	2	
	Length = $0x03$	Cmd0 = 0x21	Cmd1 = 0x08	Id	Offset

Attributes:

Attribute	Length (byte)	Description
Id	2	The Id of the NV item.
Offset	2	Number of bytes offset from the beginning or the NV value.

SRSP:

1	1	1	1	1	0-248
Length = $0x02-0xFA$	Cmd0 = 0x61	Cmd1 = 0x08	Status	Len	Value

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).
Len	1	Length of the NV value.
Value	0-248	Value of the NV item.

3.8.1.35 SYS_OSAL_NV_WRITE_EXT

Description:

This command is used by the tester to write to a particular item in non-volatile memory. The command accepts an attribute Id, data offset, data length, and attribute value. The attribute value is written to the location specified for the attribute Id in the target.

Usage:

SREQ:

1	1	1	2	2	1	1-246
Length = $0x04-0xFA$	Cmd0 = 0x21	Cmd1 = 0x09	Id	Offset	Len	Value

Attributes:

Attribute	Length (byte)	Description	
Id	2	The Id of the NV item.	
Offset	2	Number of bytes offset from the beginning or the NV value.	
Len	1	Length of the NV value.	
Value	0-246	Value of the NV item.	

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x61	Cmd1 = 0x09	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.8.2 MT_SYS Callbacks

3.8.2.1 SYS_RESET_IND

Description

This callback is sent by the device to indicate that a reset has occurred.

Usage

AREQ:

	1	1	1	1	1	1
	Length = $0x06$	Cmd0 = 0x41	Cmd1 = 0x80	Reason	TransportRev	ProductId

1	1	1
MajorRel	MinorRel	HwRev

Attributes:

tti ibutes.		
Attribute	Length (byte)	Description

Reason for the reset.

D	1	Resolution	Value
Reason	1	Power-up	0x00
		External	0x01
		Watch-dog	0x02

TransportRev 1 Transport protocol revision.

Product 1 Major release number.

MinorRel 1 Minor release number.

HwRev 1 Hardware revision number.

3.8.2.2 SYS_OSAL_TIMER_EXPIRED

Description:

This callback is sent by the device to indicate that a specific timer has been expired.

Usage:

AREQ:

1	1	1	1
Length = $0x01$	Cmd0 = 0x41	Cmd1 = 0x81	Id

Attributes:

Attribute	Length (byte)	Description
Id	1	The Id of the timer event (0-3)

3.9 MT_UART

This interface handles communication between the target and Z-Tool. Tester has no direct control over this interface. There is no direct command for the tester to interact with this interface.

3.10 MT_UTIL

This interface provides tester supporting functionalities such as setting PanId, getting device info, getting NV info, subscribing callbacks...etc.

3.10.1 MT_UTIL Commands

3.10.1.1 UTIL_GET_DEVICE_INFO

Description:

This command is sent by the tester to retrieve the device info.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x27	Cmd1 = 0x00

Attributes:

None

SRSP:

1	1	1	1	8	2	1
Length = $0x02$	Cmd0 = 0x67	Cmd1 = 0x00	Status	IEEEAddr	ShortAddr	DeviceType

1	1	0-128
DeviceState	NumAssocDevices	AssocDeviceList

Attibutes.		
Attribute	Length (byte)	Description
Status	1	Status is a one byte field and is either success (0) or fail (1). The fail status is returned if the address value in the command message was not within the valid range.
IEEEAddr	8	IEEE address of the device
ShortAddr	2	Short address of the device
DeviceType	1	Indicates device type, where bits 0 to 2 indicate the capability for the device to operate as a coordinator, router, or end device, respectively.
DeviceState	1	Indicates the state of the device with different possible states as shown below:

0x00: Initialized - not started automatically 0x01: Initialized - not connected to anything

0x02: Discovering PAN's to join

0x03: Joining a PAN

0x04: Rejoining a PAN, only for end devices

0x05: Joined but not yet authenticated by trust center

0x06: Started as device after authentication

0x07: Device joined, authenticated and is a router

0x08: Starting as ZigBee Coordinator

0x09: Started as ZigBee Coordinator

0x0A: Device has lost information about its parent

NumAssocDevices 1 Specifies the number of devices being associated to the target device.

AssocDevicesList Array Array of 16-bits specifies the network address associated with the device.

3.10.1.2 UTIL_GET_NV_INFO

Description:

This command is used by the tester to read a block of parameters from non-volatile storage of the target device.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x27	Cmd1 = 0x01

Attributes:

None

SRSP:

1	1	1	1	8	4	2
Length = $0x20$	Cmd0 = 0x67	Cmd1 = 0x01	Status	IEEEAddr	ScanChannels	PanId

ı	1	16
	SecurityLevel	PreConfigKey

Attributes:

Tittibutes.		
Attribute	Length (byte)	Description
Status	1	A value of zero indicates success. Failure is indicated by a non-zero value, representing a bit mask of each item that failed to be retrieved from NV memory. Bit0 is used for the first item (IEEEAddress), bit1 for the second item (ScanChannels), and so forth. Data values for failed items are returned as one or more bytes of 0xFF, the typical value read from erased NV memory.
IEEEAddr	8	IEEE address of the device
ScanChannels	4	This represents a bit-mask of channels to be scanned when starting the device.
PanId	2	Specifies the Pan Id to start or join. Set to 0xFFFF to select a PAN after scanning.
SecurityLevel	1	This specifies the network messaging security level, zero disables security.
PreConfigKey	16	This specifies the pre-configured security key.

3.10.1.3 UTIL_SET_PANID

Description:

Store a PanId value into non-volatile memory to be used the next time the target device resets.

Usage:

SREQ:

1	1	1	2
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x02	PanId

Attribute	Length (byte)	Description
PanId	2	PanId that will be set

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x02	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.4 UTIL_SET_CHANNELS

Description:

This command is used to store a channel select bit-mask into non-volatile memory to be used the next time the target device resets.

Usage:

SREQ:

1	1	1	4
Length = $0x04$	Cmd0 = 0x27	Cmd1 = 0x03	Channels

Attributes:

Attribute	Length (byte)	Description
Channels	4	A bit-mask representing the channel(s) to scan the next time the target device resets.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x03	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.5 UTIL_SET_SECLEVEL

Description:

This command is used to store a security level value into non-volatile memory to be used the next time the target device resets

Usage:

SREQ:

	1	1	1	1
	Length = $0x01$	Cmd0 = 0x27	Cmd1 = 0x04	SecLevel

Attribute	Length (byte)	Description
SecLevel	1	Security level to use the next time the target device resets. Zero is used to disable security.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x04	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.6 UTIL_SET_PRECFGKEY

Description:

This command is used to store a pre-configured key array into non-volatile memory to be used the next time the target device resets.

Usage:

SREQ:

1	1	1	16
Length = $0x10$	Cmd0 = 0x27	Cmd1 = 0x05	PreCfgKey

Attributes:

Attribute	Length (byte)	Description
PreCfgKey	16	An array representing the pre-configured key to use the next time the target device resets.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x05	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.7 UTIL_CALLBACK_SUB_CMD

Description:

This command subscribes/unsubscribes to layer callbacks. For particular subsystem callbacks to work, the software must be compiled with a special flag that is unique to that subsystem to enable the callback mechanism. For example to enable ZDO callbacks, MT_ZDO_CB_FUNC flag must be compiled when the software is built. For complete list of callback compile flags, check section 1.2 or "Z-Stack Compile Options" document.

Usage:

SREQ:

1	1	1	2	1
Length = $0x03$	Cmd0 = 0x27	Cmd1 = 0x06	SubsystemId	Action

Attribute	Length (byte)	Description

Subsystem Id of the expected layer

SubsystemId

Subsystem	Id
MT_SYS	0x0100
MT_MAC	0x0200
MT_NWK	0x0300
MT_AF	0x0400
MT_ZDO	0x0500
MT_SAPI	0x0600
MT_UTIL	0x0700
MT_DEBUG	0x0800
MT_APP	0x0900
ALL SUBSYSTEM	0xFFFF

Action 1 0: Disable, 1: Enable

2

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x06	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.8 UTIL_KEY_EVENT

Description:

Sends key and shift codes to the application that registered for key events. The keys parameter is a bit mask, allowing for multiple keys in a single command. The return status indicates success if the command is processed by a registered key handler, not whether the key code was used. Not all applications support all key or shift codes but there is no indication when a key code is dropped.

Usage:

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x07	Keys	Shift

Attributes:

Attribute	Length (byte)	Description
Keys	1	Key code bit mask:
		0x01: key 1
		0x02: key 2
		0x04: key 3
		0x08: key 4
		0x10: key 5
		0x20: key 6
		0x40: key 7
		0x80: key 8
Shift	1	0: No shift, 1: Shift

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x07	Status

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.9 UTIL_TIME_ALIVE

Description:

This command is used by the tester to get the board's time alive.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x27	Cmd1 = 0x09

Attributes:

None

SRSP:

1	1	1	4
Length = $0x04$	Cmd0 = 0x67	Cmd1 = 0x09	Seconds

Attributes:

Attribute	Length (byte)	Description
Seconds	4	The time of the board's live in seconds

3.10.1.10 UTIL_LED_CONTROL

Description:

This command is used by the tester to control the LEDs on the board.

Usage:

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x0A	LedId	Mode

Attributes:

multiputes.		
Attribute	Length (byte)	Description
Laded	1	The LED number
Mode	1	0: OFF. 1: ON

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x0A	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.11 UTIL_LOOPBACK

Description:

This command is used by the tester to test data buffer loopback.

Usage:

SREQ:

1	1	1	0 - 250
Length = 0x00 - 0xFA	Cmd0 = 0x27	Cmd1 = 0x10	Data

Attributes:

Attribute	Length (byte)	Description
Data	0 - 250	The data bytes to be looped back.

SRSP:

1	1	1	0 - 250
Length = 0x00 - 0xFA	Cmd0 = 0x67	Cmd1 = 0x10	Data

Attributes:

Attribute	Length (byte)	Description
Data	0 - 250	The looped back data bytes.

3.10.1.12 UTIL_DATA_REQ

Description:

This command is used by the tester to effect a MAC MLME Poll Request.

Usage:

SREO:

2111			
1	1	1	1
Length = $0x01$	Cmd0 = 0x27	Cmd1 = 0x11	SecurityUse

Attributes:

Attribute	Length	Description
SecurityUse	1	TRUE to request MAC security, but not used for now.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x11	Status

Attributes:

Attribute	Length	Description
Status	1	A MAC status value from ZComDef.h. but only ZMacSuccess for now.


3.10.1.13 UTIL_SRC_MATCH_ENABLE

Description:

This command is used to enable AUTOPEND and source address matching.

Usage:

SREQ:



Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x20	Status

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.14 UTIL_SRC_MATCH_ADD_ENTRY

Description:

This command is used to add a short or extended address to the source address table.

Usage:

SREQ:

~ ~ .				
Byte: 1	1	1	1	8
Length = $0x0B$	Cmd0 = 0x27	Cmd1 = 0x21	AddressMode	Address

Attributes:

Attribute	Length (byte)	Description			
		Mode	Value	Description	
AddressMode	1	ADDRESS_16_BIT	0x02	Address 16 bit	
		ADDRESS_64_BIT	0x03	Address 64 bit	
Address	8	Address of the device that wil the address mode.	l be added - C	an be short or extended depends	
PanId	2	PAN Id of the device. Only use when the address is a short address.			

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.10.1.15 UTIL_SRC_MATCH_DEL_ENTRY

Description:

This command is used to delete a short or extended address from the source address table.

Usage:

SREQ:



Attributes:

Length (byte)		Descript	ion
1	Mode ADDRESS_16_BIT ADDRESS_64_BIT	0x02 0x03	Description Address 16 bit Address 64 bit
8 2	address mode.		•
	1	Mode ADDRESS_16_BIT ADDRESS_64_BIT Address of the device that will be address mode.	$ \begin{array}{c cccc} & Mode & Value \\ \hline 1 & ADDRESS_16_BIT & 0x02 \\ \hline ADDRESS_64_BIT & 0x03 \\ \hline \\ 8 & Address of the device that will be deleted - C$

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x22	Status

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.16 UTIL_SRC_MATCH_CHECK_SRC_ADDR

Description:

This command is used to check if a short or extended address is in the source address table.

Usage:

SREO:

~ ~ .					
Byte: 1	1	1	1	8	2
Length = $0x0B$	Cmd0 = 0x27	Cmd1 = 0x23	AddressMode	Address	PanId

Attributes:

Attribute	Length (byte)	Description				
		Mode	Value	Description		
AddressMode	1	ADDRESS_16_BIT	0x02	Address 16 bit		
		ADDRESS_64_BIT	0x03	Address 64 bit		
Address PanId	8 2	Address of the device that will address mode. PAN Id of the device. Only us			depends on the	

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x23	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.17 UTIL_SRC_MATCH_ACK_ALL_PENDING

Description:

This command is used to enable/disable acknowledging all packets with pending bit set.

Usage:

SREO:



Attributes:

Attribute	Length (byte)	Description
Option	1	TRUE - acknowledging all packets with pending field set. FALSE - Otherwise

SRSP:



Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.18 UTIL_SRC_MATCH_CHECK_ALL_PENDING

Description:

This command is used to check if acknowledging all packets with pending bit set is enabled.

Usage:

SREQ:

•		
Byte: 1	1	1
Length = $0x00$	Cmd0 = 0x27	Cmd1 = 0x25

Attributes: None

SRSP:

Byte: 1	1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x25	Status	Value

Attributes:

Attribute	Length (byte)	Description	
Status	1	Status is either Success (0) or Failure (1).	
Value	1	TRUE - acknowledging all packets with pending bit set is enabled. FALSE – otherwise.	

3.10.1.19 UTIL_ADDRMGR_EXT_ADDR_LOOKUP

Description:

This command is a proxy call to the AddrMgrEntryLookupExt() function.

Usage:

SREQ:

1	1	1	8	
Length = $0x08$	Cmd0 = 0x27	Cmd1 = 0x40	ExtAddr	

Attributes:

Attribute	Length (byte)	Description	
ExtAddr	8	Extended Address (LSB-MSB) of the device for which to lookup the Network Address.	

SRSP:

1	1	1	2
Length = $0x02$	Cmd0 = 0x67	Cmd1 = 0x40	NwkAddr

Attributes:

Attribute	Length (byte)	Description
Nwk Addr	2	Network Address (LSB-MSB) of the device that corresponds to the Extended Address
INWKAGGI	sent as a parameter in the request.	sent as a parameter in the request.

3.10.1.20 UTIL_ADDRMGR_NWK_ADDR_LOOKUP

Description:

This command is a proxy call to the AddrMgrEntryLookupNwk() function.

Usage:

SREQ:

1	1	1	2
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x41	NwkAddr

Attribute	Length (byte)	Description	
NwkAddr	2	Network Address (LSB-MSB) of the device for which to lookup the Extended Address.	

SRSP:

1	1	1	8
Length = $0x08$	Cmd0 = 0x67	Cmd1 = 0x41	ExtAddr

Attributes:

Attribute	Length (byte)	Description
ExtAddr	8	Extended Address (LSB-MSB) of the device that corresponds to the Network Address sent
EXIAGUI	O	as a parameter in the request.

3.10.1.21 UTIL_APSME_LINK_KEY_DATA_GET

Description:

This command retrieves APS link key data, Tx and Rx frame counters.

Usage:

SREQ:

1	1	1	8
Length = $0x08$	Cmd0 = 0x27	Cmd1 = 0x44	ExtAddr

Attributes:

Attribute	Length (byte)	Description
ExtAddr	8	The extended address for which to get the link key data.

SRSP:

1	1	1	1	16	4	4
Length = $0x19$	Cmd0 = 0x67	Cmd1 = 0x44	Status	SecKey	TxFrmCntr	RxFrmCntr

Attributes:

Attribute	Length (byte)	Description
Status	1	The ZStatus_t returned by the proxy call to APSME_LinkKeyNVIdGet().
SecKey	16	On success, the security key looked up; otherwise N/A.
TxFrmCntr	4	On success, the TX frame counter; otherwise N/A.
RxFrmCntr	4	On success, the RX frame counter, otherwise N/A.

3.10.1.22 UTIL_APSME_LINK_KEY_NV_ID_GET

Description:

This command is a proxy call to the APSME_LinkKeyNvIdGet() function.

Usage:

SREQ:

1	1	1	8
Length = $0x08$	Cmd0 = 0x27	Cmd1 = 0x45	ExtAddr

Attributes:

Attribute	Length (byte)	Description	1			
ExtAddr	8	The extended address for which to get the link key NV Id.				

1	1	1	1	2
Length = $0x03$	Cmd0 = 0x67	Cmd1 = 0x45	Status	LinkKeyNvId

Attribute	Length (byte)	Description
Status	1	Status of proxy call to APSME_LinkKeyNvIdGet().
LinkKeyNvId	2	On success, link key NV ID. Otherwise 0xFFFF

3.10.1.23 UTIL_APSME_REQUEST_KEY_CMD

Description:

This command is used to send a request key to the Trust Center from an originator device who wants to exchange messages with a partner device.

Usage:

SREQ:

1	1	1	2
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x4B	PartnerAddr

Attributes:

Attribute	Length (byte)	Description
PartnerAddr	8	Specifies the extended address of the partner device the originator wants to exchange messages with.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x4B	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.10.1.24 UTIL_ASSOC_COUNT

Description:

This command is a proxy call to the AssocCount() function.

Usage:

SREQ:

1	1	1	1	1
Length = $0x02$	Cmd0 = 0x27	Cmd1 = 0x48	StartRelation	EndRelation

Attributes:

Attribute	Length (byte)	Description	o n
	- B. (-1)	A valid node relation from AssocList.h:	
		// Node Relations	
		#define PARENT	0
StartRelation		#define CHILD RFD	1
	1	#define CHILD RFD RX IDLE 2	2
	1	#define CHILD FFD	3
		#define CHILD FFD RX IDLE	4
		#define NEIGHBOR	5
		#define OTHER	6
		The node relation at which to start coun	ting.
EndRelation	1	Same as StartRelation, but the node rela	tion at which to stop counting.

1	1	1	2
Length = $0x02$	Cmd0 = 0x67	Cmd1 = 0x48	Count

Attribute	Length (byte)	Description
Count	2	The count returned by the proxy call to AssocCount().

3.10.1.25 UTIL_ASSOC_FIND_DEVICE

Description:

This command is a proxy call to the AssocFindDevice() function.

Usage:

SREQ:

1	1	1	1
Length = $0x01$	Cmd0 = 0x27	Cmd1 = 0x49	Number

Attributes:

	200120 00000				
Attribute	Length (byte)	Description			
Number	1	Nth active entry in the device list.			

SRSP:

1	1	1	18
Length = $0x12$	Cmd0 = 0x67	Cmd1 = 0x49	Device

Attributes:

Attribute	Length (byte)	Description	
Device	18	The packed (LSB-MSB) associated_devices_t structure returned by the proxy call to AssocFindDevice(). The device short address is set to INVALID_NODE_ADDR to indicate failure.	

3.10.1.26 UTIL_ASSOC_GET_WITH_ADDRESS

Description:

This command is a proxy call to the AssocGetWithAddress() function.

Usage:

SREQ:

1	1	1	8	2
Length = $0x0A$	Cmd0 = 0x27	Cmd1 = 0x4A	ExtAddr	NwkAddr

Attributes:

Attribute Length (byte)			Description
	ExtAddr	8	The extended address to use for the lookup or all zeroes to use the NwkAddr for the lookup.
	NwkAddr	2	Network Address (LSB-MSB) to use for the lookup if the ExtAddr is all zeroes.

SRSP:

1	1	1	18
Length = $0x12$	Cmd0 = 0x67	Cmd1 = 0x4A	Device

1101100				
Attribute	Length (byte)	Description		
Device	18	The packed (LSB-MSB) associated_devices_t structure returned by the proxy call to AssocGetWithAddress (). The device short address is set to INVALID_NODE_ADDR to indicate failure.		

3.10.1.27 UTIL_BIND_ADD_ENTRY

Description:

This command is a proxy call to the bindAddEntry() function.

Usage:

SREQ:

1	1	1	1	8
Length = $0x0D-0x13$	Cmd0 = 0x27	Cmd1 = 0x4D	AddrMode	DstAddr

1	1	2-8
DstEndpoint	NumClusterIds	ClusterIds

Attributes:

ratti ibutto.		
Attribute	Length (byte)	Description
AddrMode	1	The destination address mode according to the afAddrMode_t enumeration in AF.h.
DstAddr	8	If AddrMode is afAddr64Bit, the 8-byte extended destination address; otherwise the 2-byte network destination address.
DstEndpoint	1	Binding entry destination endpoint.
NumClusterIds	1	Specifies the number of IDs in the ClusterIds list.
ClusterIds	2-8	Contains the cluster IDs.

SRSP:

1	1	1	14
Length = $0x0E$	Cmd0 = 0x67	Cmd1 = 0x4D	BindEntry

Attributes:

110011b decibi			
Attribute	Length (byte)	Description	
BindEntry	14	The packed (LSB-MSB) BindingEntry_t structure returned by the proxy call to bindAddEntry(). The dstIdx in the BindEntry is set to INVALID_NODE_ADDR to indicate failure	

3.10.1.28 UTIL_ZCL_KEY_EST_INIT_EST

Description:

 $This\ command\ is\ a\ proxy\ call\ to\ zclGeneral_KeyEstablish_InitiateKeyEstablishment().$

Usage:

SREQ:

1	1	1	1	1	1	1	8
Length = $0x0C$	Cmd0 = 0x27	Cmd1 = 0x80	TaskId	SeqNum	EndPoint	AddrMode	Addr

Attribute	Length (byte)	Description
TaskId	1	The OSAL Task Id making the request.
SeqNum	1	The sequence number of the request.
EndPoint	1	The endpoint on the partner.
AddrMode	1	The address mode to the partner according to the afAddrMode_t enumeration in AF.h.
Addr	8	If AddrMode is afAddr64Bit, the 8-byte extended address of the partner; otherwise the 2-byte network address of the partner.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x67	Cmd1 = 0x80	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	The ZStatus_t returned by the proxy call to zclGeneral_KeyEstablish_InitiateKeyEstablishment().

3.10.1.29 UTIL_ZCL_KEY_EST_SIGN

Description:

This command is a proxy call to zclGeneral_KeyEstablishment_ECDSASign().

Usage:

SREQ:

1	1	1	1	1
Length = $0x0C$	Cmd0 = 0x27	Cmd1 = 0x81	InputLen	Input

Attributes:

Attribute	Length (byte)		Description	
InputLen	1	The length of the input data.		
Input	InputLen	The input data.		

SRSP:

1	1	1	1	42
Length = $0x2B$	Cmd0 = 0x67	Cmd1 = 0x81	Status	Key

Attributes:

Attrib	ute Length (byte)	Description
Status	1	The ZStatus_t returned by the proxy call to zclGeneral_KeyEstablishment_ECDSASign ().
Key	42	The output key on success.

3.10.1.30 UTIL_SRNG_GEN

Description:

This command is used to generate Secure Random Number. It generates 1,000,000 bits in sets of 100 bytes. As in 100 bytes of secure random numbers are generated until 1,000,000 bits are generated. 100 bytes are generated 1250 times. So 1250 SRSPs are generated. MT_SRNG has to be defined to include this API.

Usage:

SREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x27	Cmd1 = 0x4C

1	1	1	0x64
Length = $0x64$	Cmd0 = 0x67	Cmd1 = 0x4C	Secure Random Numbers

3.10.2 MT_UTIL Callbacks

3.10.2.1 UTIL_SYNC_REQ

Description:

This is an asynchronous request/response handshake.

Usage:

AREQ:

1	1	1
Length = $0x00$	Cmd0 = 0x47	Cmd1 = 0xE0

3.10.2.2 UTIL_ZCL_KEY_ESTABLISH_IND

Description:

This is the RPC proxy indication for a ZCL_KEY_ESTABLISH_IND.

Usage:

AREO:

1	1	1	1	1	1	1	2
Length = $0x06$	Cmd0 = 0x47	Cmd1 = 0xE1	TaskId	Event	Status	WaitTime	Suite

Attributes:

Attibutes.		
Attribute	Length (byte)	Description
TaskId	1	The OSAL Task Id registered to receive this indication (see UTIL_ZCL_KEY_EST_INIT_EST).
Event	1	The OSAL message event.
Status	1	The OSAL message status.
WaitTime	1	The wait time.
Suite	2	The key establishment suite.

3.11 MT_VERSION

This interface contains information about the release version of the software. There is no direct command for tester to interact with this interface.

3.12 MT ZDO

This interface allows the tester to issue commands to the ZDO layer in the target and receive responses. Each of these messages has a corresponding message that is returned by the target. The response message only indicates that the command message was received and executed. The result of the command execution will be conveyed to the tester via a callback message interface.

3.12.1 MT_ZDO Commands

3.12.1.1 ZDO_NWK_ADDR_REQ

Description:

This message will request the device to send a "Network Address Request". This message sends a broadcast message looking for a 16 bit address with a known 64 bit IEEE address. You must subscribe to "ZDO Network Address Response" to receive the response to this message. Check section 3.0.1.7 for more details on callback subscription. The response message listed below only indicates whether or not the message was received properly.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Desc	ription	
IEEEAddress	8	64 bit IEEE address of the device.		
		Value that the search was executed on.		
ReqType	1	Type	Value	
		Single Device response	0x00	
		Extended, include associated devices	0x01	
StartIndex	1	Starting index into the list of children. The too large for one message.	nis is used t	o get more of the list if the list is

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.2 ZDO_IEEE_ADDR_REQ

Description:

This command will request a device's IEEE 64-bit address. You must subscribe to "ZDO IEEE Address Response" to receive the data response to this message. The response message listed below only indicates whether or not the message was received properly.

Usage:

SREO:



Attribute	Length (byte)	Description
ShortAddr	2	Specifies the short address of the device.

Value that the search was executed on.

ReqType 1

Туре	Value
Single Device response	0x00
Extended, include associated devices	0x01

StartIndex 1

Starting index into the list of children. This is used to get more of the list if the list is too large for one message.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.3 ZDO_NODE_DESC_REQ

Description:

This command is generated to inquire about the Node Descriptor information of the destination device.

Usage

SREQ:



Attributes:

Attribute	Length (byte)	Description	
DstAddr	2	Specifies NWK address of the device generating the inquiry.	
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.	

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.4 ZDO_POWER_DESC_REQ

Description:

This command is generated to inquire about the Power Descriptor information of the destination device.

Usage:

SREO:



Attribute	Length (byte)	Description	
DstAddr	2	Specifies NWK address of the device generating the inquiry.	
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.	

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x03	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.5 ZDO_SIMPLE_DESC_REQ

Description:

This command is generated to inquire as to the Simple Descriptor of the destination device's Endpoint.

Usage:

SREO:

Byte: 1	1	1	2	2	1
Length = $0x05$	Cmd0 = 0x25	Cmd1 = 0x04	DstAddr	NWKAddrOfInterest	Endpoint

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies NWK address of the device generating the inquiry.
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.
Endpoint	1	Specifies the application endpoint the data is from.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x04	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.6 ZDO_ACTIVE_EP_REQ

Description:

This command is generated to request a list of active endpoint from the destination device.

Usage:

SREQ:

~ ~.				
Byte: 1	1	1	2	2
Length = $0x04$	Cmd0 = 0x25	Cmd1 = 0x05	DstAddr	NWKAddrOfInterest

Attribute	Length (byte)	Description
DstAddr	2	Specifies NWK address of the device generating the inquiry.
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.

SRSP:

Byte: 1	1	1	1	
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x05	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.7 ZDO_MATCH_DESC_REQ

Description:

This command is generated to request the device match descriptor.

Usage:

SREQ:



1	0-32	1	0-32
NumInClusters	InClusterList	NumOutClusters	OutClusterList

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies NWK address of the device generating the inquiry.
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.
ProfileId	2	Specifies the profile Id of the device
NumInClusters	1	Specifies the number of Id's in the InClusterList.
InClusterList	0-32	Contains the input cluster Id's.
NumOutClusters	1	Specifies the number of Id's in the OutClusterList.
OutClusterList	0-32	Contains the output cluster Id's.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.8 ZDO_COMPLEX_DESC_REQ

Description:

This command is generated to request for the destination device's complex descriptor.

Usage:

SREQ:

Byte: 1	1	1	2	2
Length = $0x04$	Cmd0 = 0x25	Cmd1 = 0x07	DstAddr	NWKAddrOfInterest

Attribute	Length (byte)	Description		
DstAddr	2	Specifies NWK address of the device generating the inquiry.		
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.		

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x07	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.9 ZDO_USER_DESC_REQ

Description:

This command is generated to request for the destination device's user descriptor.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies NWK address of the device generating the inquiry.
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.10 ZDO_END_DEVICE_ANNCE

Description:

This command will cause the device to issue an "End device announce" broadcast packet to the network. This is typically used by an end-device to announce itself to the network.

Usage:

SREQ:



Attribute	Length (byte)	Description			
NwkAddr	2	Specifies network address of the device generating the request.			
IEEEAddr	8	Specifies the 64 bit IEEE Address of the device being announced.			
Capabilites	1	Specifies MAC capabilities Bit: 0 – Alternate PAN Coordinator 1 – Device type: 1- ZigBee Router; 0 – End Device 2 – Power Source: 1 Main powered 3 – Receiver on when Idle 4 – Reserved 5 – Reserved			
		6 – Security capability			

7 - Reserved



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.11 ZDO_USER_DESC_SET

Description:

This command is generated to write a User Descriptor value to the targeted device.

Usage:

SREQ:

1	1	1	2	2	1	0-16
Length = 0x05-0x15	Cmd0 = 0x25	Cmd1 = 0x0B	DstAddr	NWKAddrOfInterest	Len	UserDescriptor

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies network address of the device generating the set request.
NWKAddrOfInterest	2	Specifies NWK address of the destination device being queried.
Len	1	Specifies the length of the user descriptor.
UserDescriptor	0-16	User descriptor array (can be up to 16 bytes).

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.12 ZDO_SERVER_DISC_REQ

Description:

The command is used for local device to discover the location of a particular system server or servers as indicated by the ServerMask parameter. The destination addressing on this request is 'broadcast to all RxOnWhenIdle devices'.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
ServerMask	2	Specifies the system server capabilities of the device.



Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.13 ZDO_END_DEVICE_BIND_REQ

Description:

This command is generated to request an End Device Bind with the destination device.

Usage:

SREQ:



2	1	0-32	1	0-32
ProfileId	NumInClusters	InClusterList	NumOutClusters	OutClusterList

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies NWK address of the device generating the inquiry.
		Specifies Specifies local coordinator's short address. In the case of source
LocalCoordinator	2	binding, it's the short address of the source address
IEEE	8	Local coordinator's IEEE address
Endpoint	1	Device's endpoint.
ProfileId	2	Specifies the profile Id of the device.
NumInClusters	1	Specifies the number of Id's in the InClusterList.
InClusterList	0-32	Contains the input cluster Id's.
NumOutClusters	1	Specifies the number of Id's in the OutClusterList.
OutClusterList	0-32	Contains the output cluster Id's.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.14 ZDO_BIND_REQ

Description:

This command is generated to request a Bind.

Usage:





Attribute Length (byte) Description

DstAddr	2	Specifies the destination address of the device generating the bind request
SrcAddress	8	64 bit Binding source IEEE address
SrcEndpoint	1	Specifies the binding source endpoint.
ClusterId	2	Specifies the cluster Id to match in messages.

Specifies destination address mode

		Mode	Value	Description
DstAddrMode	1	ADDRESS_NOT_PRESENT	0x00	Address Not Present
DStAuui Moue		GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast

DstAddress 8/2 Binding destination IEEE address. Not to be confused with DstAddr.

Specifies the binding destination endpoint. It is used only when DstAddrMode is 64 bits extended address

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.15 ZDO_UNBIND_REQ

Description:

This command is generated to request a un-bind.

Usage:

SREQ:



1	2/8	0/1
DstAddrMode	DstAddress	DstEndpoint

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies destination address of the device generating the bind request.
SrcAddress	8	Specifies 64 bit Binding source IEEE address.
SrcEndpoint	1	Specifies the binding source endpoint.
ClusterI	2	Specifies cluster Id to match in messages.

Specifies 64 bit Binding destination address mode:

		3		
		Mode	Value	Description
DstAddrMode	1	ADDRESS_NOT_PRESENT	0x00	Address Not Present
DStAudi Mode	1	GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast
DstAddress DstEndpoint	8 1	Specifies 64 bit Binding destinat confused with DstAddr. Specifies the binding destination		ddress. Not to be

SRSP:

1	1	1	1	
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x22	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.16 ZDO_MGMT_NWK_DISC_REQ

Description:

This command is generated to request the destination device to perform a network discovery.

Usage:

SREQ:

1	1	1	2	4	1	1
Length = $0x08$	Cmd0 = 0x25	Cmd1 = 0x30	DstAddr	ScanChannels	ScanDuration	StartIndex

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies the network address of the device performing the discovery

Specifies the Bit Mask for channels to scan:

		Channel	Value
		NONE	0x00000000
		ALL_CHANNELS	0x07FFF800
		CHANNEL 11	0x00000800
		CHANNEL 12	0x00001000
		CHANNEL 13	0x00002000
		CHANNEL 14	0x00004000
		CHANNEL 15	0x00008000
a a 1		CHANNEL 16	0x00010000
ScanChannels	4	CHANNEL 17	0x00020000
		CHANNEL 18	0x00040000
		CHANNEL 19	0x00080000
		CHANNEL 20	0x00100000
		CHANNEL 21	0x00200000
		CHANNEL 22	0x00400000
		CHANNEL 23	0x00800000
		CHANNEL 24	0x01000000
		CHANNEL 25	0x02000000
		CHANNEL 26	0x04000000

ScanDuration 1 Specifies the scanning time.

Specifies where to start in the response array list. The result may contain more StartIndex 1 entries than can be reported, so this field allows the user to retrieve the responses

anywhere in the array list.

SRSP:



Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.12.1.17 ZDO_MGMT_LQI_REQ

Description:

This command is generated to request the destination device to perform a LQI query of other devices in the network.

Usage:

SREQ:



Attributes:

I I COLINGE CON		
Attribute	Length (byte)	Description
DstAddr	2	Specifies the network address of the device generating the query.
		Specifies where to start in the response array list. The result may contain more
StartIndex	1	entries than can be reported, so this field allows the user to retrieve the responses
		anywhere in the array list.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x31	Status

Attributes:

Attribute Length (byte)		Description		
Status	1	Status is either Success (0) or Failure (1).		

3.12.1.18 ZDO_MGMT_RTG_REQ

Description:

This command is generated to request the Routing Table of the destination device.

Usage:

SREQ:

Byte: 1	1	1	2	1
Length = $0x03$	Cmd0 = 0x25	Cmd1 = 0x32	DstAddr	StartIndex

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies the network address of the device generating the query.
		Specifies where to start in the response array list. The result may contain more
StartIndex	1	entries than can be reported, so this field allows the user to retrieve the responses
		anywhere in the array list.

SRSP:

Byte: 1	1	1	1	ı		
I = 0x01	Cmd0 = 0x65	Cmd1 = 0x32	Status			

Attribute	Length (byte)	Description		
Status	1	Status is either Success (0) or Failure (1).		

3.12.1.19 ZDO_MGMT_BIND_REQ

Description

This command is generated to request the Binding Table of the destination device.

Usage

SREQ:

Byte: 1	1	1	2	1
Length = $0x03$	Cmd0 = 0x25	Cmd1 = 0x33	DstAddr	StartIndex

Attributes:

Attribute	Length (byte)	Description
DstAddr	2	Specifies the network address of the device being queried.
		Specifies where to start in the response array list. The result may contain more entries
StartIndex	1	than can be reported, so this field allows the user to retrieve the responses anywhere in
		the array list.

SRSP:



Attributes:

Attribute	Length (byte)	Description		
Status	1	Status is either Success (0) or Failure (1).		

3.12.1.20 ZDO_MGMT_LEAVE_REQ

Description:

This command is generated to request a Management Leave Request for the target device.

Usage:

SREQ:

1	1	1	2	8	1
Length = $0x0B$	Cmd0 = 0x25	Cmd1 = 0x34	DstAddr	DeviceAddr	RemoveChildren_Rejoin

Attributes:

Attribute	Length (byte)	Description			
DstAddr	2	Specifies the network address of the device generating the request.			
DeviceAddress	8	Specifies the 64 bit IEEE Address of the target device you want to leave.			
DChildren D.i.i.	1	Specifies actions to be performed by device when leaving the network: Bit 0: rejoin			
RemoveChildren_Rejoin	1	Bit 1: remove children			

SRSP:



Attribute	Length (byte)	Description	
Status	1	Status is either Success (0) or Failure (1).	

3.12.1.21 ZDO_MGMT_DIRECT_JOIN_REQ

Description:

This command is generated to request the Management Direct Join Request of a designated device.

Usage:

SREQ:

Byte: 1	1	1	2	8	1
Length = 0x0B	Cmd0 = 0x25	Cmd1 = 0x35	DstAddr	DeviceAddr	CapInfo

Attributes:

Attributes:		
Attribute	Length (byte)	Description
DstAddr	2	Network address of the device to which the device specified in DeviceAddress is to join.
DeviceAddress	8	The 64 bit IEEE Address of the device you want to be joined to the device at DstAddr.
CapInfo	1	Specifies the operating capabilities of the device being directly joined. Bit weighted values follow: Bit: 0 – Alternate PAN Coordinator 1 – Device type: 1- ZigBee Router; 0 – End Device 2 – Power Source: 1 Main powered 3 – Receiver on when Idle 4 – Reserved 5 – Reserved 6 – Security capability 7 – Reserved

SRSP:

5151				
Byte: 1	1	1	1	
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x35	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.22 ZDO_MGMT_PERMIT_JOIN_REQ

Description:

This command is generated to set the Permit Join for the destination device.

Usage:

SREQ:

1	1	1	1	2	1	1
Length = $0x05$	Cmd0 = 0x25	Cmd1 = 0x36	AddrMode	DstAddr	Duration	TCSignificance

-			
	Attribute	Length (byte)	Description
	AddrMode		Destination address type: 0x02 – Address 16 bit, 0xFF – Broadcast.
	DstAddr	2	Specifies the network address of the destination device whose Permit Join information is to be modified.
	Duration	1	Specifies the duration to permit joining. $0 = \text{join disabled. } 0xff = \text{join enabled.}$ $0x01-0xfe = \text{number of seconds to permit joining.}$
	TCSignificance	1	Trust Center Significance.

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.23 ZDO_MGMT_NWK_UPDATE_REQ

Description:

This command is provided to allow updating of network configuration parameters or to request information from devices on network conditions in the local operating environment.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)		Description	
DstAddr	2	Short address of the destination device(s). The destination addressing on this primitive can be unicast or broadcast to all devices for which macRxOnWhenIdle=TRUE (i.e., 0xFFFD)		
		Destination address mode:	Value	Description
5.444		ADDRESS_NOT_PR		Address Not Present
DstAddrMode	1	GROUP_ADDRESS	0x01	Group address
		ADDRESS_16_BIT	0x02	Address 16 bit
		ADDRESS_64_BIT	0x03	Address 64 bit
		BROADCAST	0xFF	Broadcast

A bitmap indicating which channels are to be scanned:

		Channel	Value
		NONE	0x00000000
		ALL_CHANNELS	0x07FFF800
		CHANNEL 11	0x00000800
		CHANNEL 12	0x00001000
		CHANNEL 13	0x00002000
		CHANNEL 14	0x00004000
		CHANNEL 15	0x00008000
ChannelMask	4	CHANNEL 16	0x00010000
		CHANNEL 17	0x00020000
		CHANNEL 18	0x00040000
		CHANNEL 19	0x00080000
		CHANNEL 20	0x00100000
		CHANNEL 21	0x00200000
		CHANNEL 22	0x00400000
		CHANNEL 23	0x00800000
		CHANNEL 24	0x01000000
		CHANNEL 25	0x02000000
		CHANNEL 26	0x04000000

ScanDuration 1 A value used to calculate the length of time to spend scanning each channel

ScanCount 1 This field represents the number of energy scans to be conducted and reported Indicates the NWK address for the device with the Network Manager bit set in its Node Descriptor

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.12.1.24 ZDO_MSG_CB_REGISTER

Description:

This command registers for a ZDO callback (see reference [3], "6. ZDO Message Requests" for example usage).

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
ClusterId	2	Specifies the ZDO Cluster Id for which to receive a ZDO callback.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Return value of the call to ZDO RegisterForZDOMsg().

3.12.1.25 ZDO_MSG_CB_REMOVE

Description:

This command removes a registration for a ZDO callback (see reference [3], "6. ZDO Message Requests" for example usage).

Usage:

SREQ:

1	1	1	2
Length = $0x02$	Cmd0 = 0x25	Cmd1 = 0x3F	ClusterId

Attribute	Length (byte)	Description
ClusterId	2	Specifies the ZDO Cluster Id for which to receive a ZDO callback.

SRSP:

1	1	1	1	
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x3F	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Return value of the call to ZDO_RemoveRegisteredCB ().

3.12.1.26 ZDO_STARTUP_FROM_APP

Description:

This command starts the device in the network.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
StartDelay	2	Specifies the time delay before the device starts.

SRSP:



Attributes:

I I COLINGE COST		
Attribute	Length (byte)	Description
		0x00 - Restored network state
Status	1	0x01 – New network state
		0x02 – Leave and not Started

3.12.1.27 ZDO_STARTUP_FROM_APP_EX

Description:

Extended version of ZDO to indicate to router devices to create a distributed network.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
StartDelay	1	Specifies the time delay before the device starts.
		Flag for ZR devices to indicate to create a
Mode	1	distributed network if set to TRUE, if set to
		FALSE or send to ZC or ZED has the same
		effect as non-extended interface.



Attribute	Length (byte)	Description
Status	1	0x00 – Restored network state 0x01 – New network state

3.12.1.28 ZDO_SET_LINK_KEY

Description:

This command sets the application link key for a given device.

Usage:

SREQ:

•					
1	1	1	2	8	16
Length = $0x1A$	Cmd0 = 0x25	Cmd1 = 0x23	ShortAddr	IEEEAddr	LinkKeyData

Attributes:

multipates.		
Attribute	Length (byte)	Description
ShortAddr	2	Specifies the short address of the pair device of the link key.
IEEEAddr	8	Specifies the IEEE address of the pair device of the link key
LinkKeyData	16	128 bit link key data of the device.

SRSP:

1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x23	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	0x00 – Success 0x01 – Fail to add to address manager. 0x11 – Security manager key table full

3.12.1.29 ZDO_REMOVE_LINK_KEY

Description:

This command removes the application link key of a given device.

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
IEEEAddr	8	Specifies the IEEE address of the pair device of the link key

1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x24	Status

Attribute	Length (byte)	Description
Status	1	0x00 – Success 0xC8 – Unknown device.

3.12.1.30 ZDO_GET_LINK_KEY

Description:

This command retrieves the application link key of a given device.

Usage:

SREQ:

1	1	1	8
Length = $0x08$	Cmd0 = 0x25	Cmd1 = 0x25	IEEEAddr

Attributes:

Attribute	Length (byte)	Description
IEEEAddr	8	Specifies the IEEE address of the pair device of the link key

SRSP:

1	1	1	1	8	16
Length = $0x19$	Cmd0 = 0x65	Cmd1 = 0x25	Status	IEEEAddr	LinkKevData

Attributes:

Attribute	Length (byte)	Description
Status	1	0x00 – Success
Status	1	0xC8 – Unknown device.
IEEEAddr	8	IEEE address of the device
LinkKeyData	16	Link key data of the device.

3.12.1.31 ZDO_NWK_DISCOVERY_REQ

Description:

This command is used to initiate a network discovery (active scan).

Usage:

SREQ:

DILL Q.				
Byte: 1	1	1	4	1
Length = $0x05$	Cmd0 = 0x25	Cmd1 = 0x26	Scan Channels	Scan Duration

Attributes:

Attribute Length (byte) Description

Bit mask for channels to scan. Type: ZIGBEE_CHANNELS

		Channel	Value
		NONE	0x00000000
		ALL_CHANNELS	0x07FFF800
		CHANNEL 11	0x00000800
Scan Channels	4	CHANNEL 12	0x00001000
		CHANNEL 13	0x00002000
		CHANNEL 14	0x00004000
		CHANNEL 15	0x00008000
		CHANNEL 16	0x00010000
		CHANNEL 17	0x00020000

CHANNEL 18	0x00040000
CHANNEL 19	0x00080000
CHANNEL 20	0x00100000
CHANNEL 21	0x00200000
CHANNEL 22	0x00400000
CHANNEL 23	0x00800000
CHANNEL 24	0x01000000
CHANNEL 25	0x02000000
CHANNEL 26	0x04000000

Scan Duration 1 A value used to calculate the length of time to spend scanning each

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x26	Status

Attributes:

Attribute	Length (byte)	Description
		Success (0)
		Invalid_Parameter (0x02).
Status	1	ZNwkInvalidRequest (0xC2) if the device is already on a network. User ZDO_MGMT_NWK_DISC_REQ instead. Or leave the network first, then initiate the request.
		MAC_SCAN_IN_PROGRESS (0xFC) if a channel change is in progress.
		MAC_NO_RESOURCE (0x1A) if the operation could not complete because no memory resource were available.

3.12.1.32 ZDO_JOIN_REQ

Description:

This command is used to request the device to join itself to a parent device on a network.

Usage:

SREQ:

Byte: 1	1	1	1	2
Length = 0x0F	Cmd0 = 0x25	Cmd1 = 0x27	Logical Channel	Pan ID
8	2	1	1	
Extended Pan ID	Chosen Parent	Parent Depth	Stack Profile	

Attribute	Length (byte)	Description
Logical Channel	1	Channel where the PAN is located
Pan ID	2	Id of PAN to join
Extended Pan ID	8	64-bit extended PAN ID (ver. 1.1 only). If not v1.1 or don't care, use all $0xFF$
Chosen Parent	2	Short address of the parent device chosen to join
Parent Depth	1	Depth of the parent

Stack Profile 1 Stack profile of the network to join

SRSP:

Byte: 1	1	1	1
Length = 0x01	Cmd0 = 0x65	Cmd1 = 0x27	Status

Attributes:

Attribute	Length (byte)	Description
		Success (0)
Status	1	ZNwkInvalIdRequest (0xC2) if device is already on a network. Leave the network first, then try to join again.
		ZNwkNotPermitted (0xC3) if chosen router is not a valid short address.

3.12.1.33 ZDO_SET_REJOIN_PARAMETERS

Description:

This command is used to set rejoin backoff duration and rejoin scan duration for an end device

Usage:

SREO:

Destar 1	1	1	4	4
Byte: 1	1	1	4	4
Lanath - Ov00	$C_{md0} = 0_{m}25$	Cmd1 - 0v26	Dealroff Dynation	Coon Dunation
Length = $0x08$	Cmd0 = 0x25	Cmd1 = 0x26	Backoff Duration	Scan Duration

Attributes:

Attribute	Length (byte)	Description
Backoff Duration	4	Rejoin backoff duration for end device
Scan Duration	4	Rejoin scan duration for end device

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Success (0)

3.12.1.34 ZDO_SEC_ADD_LINK_KEY

Description:

This command handles the ZDO security add link key extension message.

Usage: SREO:

SKEQ.					
Byte: 1	1	1	2	8	16

 $Length = 0x1A \qquad Cmd0 = 0x25 \qquad Cmd1 = 0x42 \qquad Short \ Address \qquad Extended \ Adress \qquad Key$

Attributes:

Attribute	Length (byte)	Description
Short Address	2	short address of the partner device
Extended Address	8	extended address of the partner device
Key	16	Link key

SRSP:

Byte: 1	1	1	1	
Length = 0x01	Cmd0 = 0x65	Cmd1 = 0x42	Status	

Attributes:

Attribute	Length (byte)	Description	
Status	1	Success (0) or Failure(1)	

3.12.1.35 ZDO_SEC_ENTRY_LOOKUP_EXT

Description:

This command handles the ZDO security entry lookup extended extension message.

Usage:

SREQ:

Byte: 1	1	1	8	5
Length = $0x013$	Cmd0 = 0x25	Cmd1 = 0x43	Extended Adress	Entry

Attributes:

Attribute	Length (byte)	Description	
Extended Address	8	extended address	
entry	5	Valid entry	

Byte: 1	1	1	2	2	1
Length = 0x05	Cmd0 = 0x65	Cmd1 = 0x42	AMI	KeyNVID	Authentication option

Attribute	Length (byte)	Description
AMI	2	Address manager index
KeyNVID	2	Index to link key table in NV
Authentication option	1	Authentication option for device

3.12.1.36 ZDO_SEC_DEVICE_REMOVE

Description:

This command handles the ZDO security remove device extended extension message.

Usage:

SREQ:

Byte: 1	1	1	8
Length = $0x08$	Cmd0 = 0x25	Cmd1 = 0x44	Extended Adress

Attributes:

Attribute	Length (byte)	Description	
Extended Address	8	extended address	

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status of device remove

3.12.1.37 ZDO_EXT_ROUTE_DISC

Description:

This command handles the ZDO route discovery extension message.

Usage:

SREQ:

Byte: 1	1	1	2	1	1
Length = 0x04	Cmd0 = 0x25	Cmd1 = 0x45	Destination Address	Options	Radius

Attributes:

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x45	Status

Attribute	Length (byte)	Description
Status	1	Status of route discovery

3.12.1.38 ZDO_EXT_ROUTE_CHECK

Description:

This command handles the ZDO route check extension message.

Usage:

SREO:

Byte: 1	1	1	2	1	1
Length = $0x04$	Cmd0 = 0x25	Cmd1 = 0x46	Destination Address	RTStatus	Options

Attributes:

Attribute	Length (byte)	Description
Destination Address	2	Destination address
RtStatus	1	Status value for routing entries
Options	1	Route options

SRSP:

Byte: 1	1	1	1	
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x46	Status	

Attributes:

Attribute	Length (byte)	Description
Status	1	Status of route check

3.12.1.39 ZDO_EXT_REMOVE_GROUP

Description:

This command handles the ZDO extended remove group extension message.

Usage:

SREQ:

Byte: 1	1	1	1	2
Length = 0x03	Cmd0 = 0x25	Cmd1 = 0x47	Endpoint	GroupID

Attributes:

Attribute	Length (byte)	Description
Endpoint	1	Endpoint to look for
GroupID	2	ID to look for group

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x47	Status

3.12.1.40 ZDO_EXT_REMOVE_ALL_GROUP

Description:

This command handles the ZDO extended remove all group extension message.

Usage:

SREO:

222			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x25	Cmd1 = 0x48	Endpoint

Attributes:

Attribute	Length (byte)	Description	
Endpoint	1	Endpoint to look for	

SRSP:

Byte: 1	1	1	1
Length = 0x01	Cmd0 = 0x65	Cmd1 = 0x48	Status

Attributes:

Attribute	Length (byte)	Description	
Status	1	Status of remove all groups	

3.12.1.41 ZDO_EXT_FIND_ALL_GROUPS_ENDPOINT

Description:

This command handles the ZDO extension find all groups for endpoint message

Usage:

SREQ:

DILL Q.				
Byte: 1	1	1	1	2
Length = $0x03$	Cmd0 = 0x25	Cmd1 = 0x49	Endpoint	GroupList

Attribute	Length (byte)	Description	
Endpoint	1	Endpoint to look for	
GroupList	2	List to hold group IDs	

SRSP:

Byte: 1	1	1	1+2*(number of groups)
Length = 0x01+2*(number of groups)	Cmd0 = 0x65	Cmd1 = 0x49	Groups

Attributes:

Attribute	Length (byte)	Description
Groups	1+2*(number of groups)	Number of groups copied to group list

3.12.1.42 ZDO_EXT_FIND_GROUP

Description:

This command handles the ZDO extension find group message

Usage:

SREQ:

Byte: 1	1	1	1	2
Length = 0x03	Cmd0 = 0x25	Cmd1 = 0x4A	Endpoint	GroupID

Attributes:

Attribute	Length (byte)	Description
Endpoint	1	Endpoint to look for
GroupID	2	Group ID

SRSP:



Attributes:

Attribute	Length (byte)	Description
Group	0-18	Group information

3.12.1.43 ZDO_EXT_ADD_GROUP

Description:

This command handles the ZDO extension add group message.

Usage:

SREQ:

Byte: 1	1	1	1	2	16
Length = $0x013$	Cmd0 = 0x25	Cmd1 = 0x4B	Endpoint	GroupID	GroupName

Attribute	Length (byte)	Description	
Endpoint	1	Endpoint to look for	
GroupID	2	Group ID	
GroupName	16	Group name	

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x4B	Status

Attributes:

Attribute	Length (byte)	Description	
Status	1	Status of adding group	

3.12.1.44 ZDO_EXT_COUNT_ALL_GROUPS

Description:

This command handles the ZDO extension count all groups message.

Usage:

SREQ:

Byte: 1	1	1
Length = $0x00$	Cmd0 = 0x25	Cmd1 = 0x4C

Attributes:

Attribute	Length (byte)	Descrip	tion
None			
SRSP:			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x4C	Status

Attributes:

Attribute	Length (byte)	Description	
Status	1	Total number of groups	


3.12.1.45 ZDO_EXT_RX_IDLE

Description:

This command handles the ZDO extension Get/Set RxOnIdle to ZMac message

Usage:

SREQ:



Attributes:

Attribute	Length (byte)	Description
SetFlag	1	Set or get the value
SetValue	1	Value to be set to ZMac message

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x4D	Status

Attribute	Length (byte)	Description
tatus	1	Status of get or set value

3.12.1.46 ZDO_EXT_UPDATE_NWK_KEY

Description:

This command handles the ZDO security update network key extension message.

Usage:

SREQ:

Byte: 1	1	1	2	1	128
Length = $0x083$	Cmd0 = 0x25	Cmd1 = 0x4E	Destination Address	KeySeqNum	Key

Attributes:

Attribute	Length (byte)	Description
DestinationAddress	2	Destination address
KeySeqNum	1	Key Sequence number
Key	128	Network key

SRSP:

SKSI:			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x4E	Status

Attributes:

Attribute Length (byte)	Description
Status 1	Status of key undate

3.12.1.47 ZDO_EXT_SWITCH_NWK_KEY

Description:

This command handles the ZDO security switch network key extension message.

Usage:

SREQ:

Byte: 1	1	1	2	1
Length = $0x03$	Cmd0 = 0x25	Cmd1 = 0x4F	Destination Address	KeySeqNum

Attributes:

Attribute	Length (byte)	Description
DestinationAddress	2	Destination address
KeySeqNum	1	Key Sequence number

SRSP:



Attributes:

Attribute Length (byte)	Attribute	Description
Status 1	Status	Status of key switch

3.12.1.48 ZDO_EXT_NWK_INFO

Description:

This command handles the ZDO extension network message.

SREQ:

Attributes:

Attribute	Length (byte)	Description	
None			

SRSP:

Byte: 1		1	1	2	2	2	8	8	2
Length 0x18	=	Cmd0 = 0x65	Cmd1 = 0x50	Short Address	PAN ID	Parent address	Extended PAN ID	Extended Parent Address	Channel

Attributes:

Attribute		Length (byte)	Description	
Short Address		2	Short address	
PAN ID 2		2	PAN ID	
Parent Address		2	Parent address	
Extended PAN I	D	8	Extended PAN ID	
Extended F Address	Parent	8	IEEE address of parent	
Channel		2	Current channel	

3.12.1.49 ZDO_EXT_SEC_APS_REMOVE_REQ

Description:

This command handles the ZDO extension Security Manager APS Remove Request message.

Usage:

SREQ:

DILL Q.					
Byte: 1	1	1	2	8	2
Length = $0x0c$	Cmd0 = 0x25	Cmd1 = 0x51	NWK Address	Extended Address	Parent address

Attributes:

Attribute	Length (byte)	Description
NWK Address	2	Device's network address
Extended Address	8	IEEE address of device
Parent Address	2	Parent's network address

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x65	Cmd1 = 0x51	Status

Attribute	Length (byte)	Description
Status	1	Status of removing device from the network

3.12.1.50 ZDO_FORCE_CONCENTRATOR_CHANGE

Description:

This command forces a network concentrator change by resetting zgConcentratorEnable and zgConcentratorDiscoveryTime from NV and set nwk event.

Usage:

SREO:

~ •		
Byte: 1	1	1
Length = $0x00$	Cmd0 = 0x25	Cmd1 = 0x52

Attributes:

Description

Attribute None

3.12.1.51 ZDO_EXT_SET_PARAMS

Description:

This command set parameters not settable through NV.

Length (byte)

Usage:

SREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x25	Cmd1 = 0x53	useMulticast

Attributes:

Attribute	Length (byte)	Description
useMulticast	1	Set or reset the use of multicast

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status of use of multicast

3.12.1.52 ZDO_NWK_ADDR_OF_INTEREST_REQ

Description:

This command handles ZDO network address of interest request.

Usage:

SREQ:

Byte: 1	1	1	2	2	1
Length = $0x05$	Cmd0 = 0x25	Cmd1 = 0x29	destAddr	nwkAddrofIntere	cmd

Attributes:

Attribute	Length (byte)	Description
destAddr	2	Destination Address
nwk Addrof Interest	2	16 bit network address of interest
cmd	1	A valid cluster ID as specified by the Profile

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	AF status

3.12.2 MT_ZDO Callbacks


3.12.2.1 ZDO_NWK_ADDR_RSP

Description:

This command is issued by the tester to return the results from a ${\tt ZDO_NWK_ADDR_REQ}$.

Usage

AREQ:



1	1	0-70
StartIndex	NumAssocDev	AssocDevList

Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS or FAILURE.
IEEEAddr	8	64 bit IEEE address of source device.
NwkAddr	2	Specifies the short network address of responding device.
StartIndex	1	Specifies the starting index into the list of associated devices for this report.
NumAssocDev	1	Specifies the number of associated devices.
AssocDevList	0-70	Contains the list of network address for associated devices. This list can be a partial list if the entire list doesn't fit into a packet. If it is a partial list, the starting index is StartIndex.

3.12.2.2 ZDO_IEEE_ADDR_RSP

Description:

This callback message is in response to the ZDO IEEE Address Request.

AREQ:



Attributes:

Attribute	Length (byte)	Description
Status	1	This field indicates either SUCCESS or FAILURE.
IEEEAddr	8	64 bit IEEE address of source device.
NwkAddr	2	Specifies the short network address of responding device.
StartIndex	1	Specifies the starting index into the list of associated devices for this report.
NumAssocDev	1	Specifies the number of associated devices.
AssocDevList	0-70	Contains the list of network address for associated devices. This list can be a partial list if the entire list doesn't fit into a packet. If it is a partial list, the starting index is StartIndex.


3.12.2.3 ZDO_NODE_DESC_RSP

Description:

This callback message is in response to the ZDO Node Descriptor Request.

Usage:

AREQ:

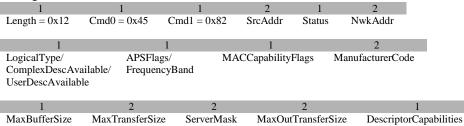

Attribute	Length (byte)	Description		
SrcAddr	2	The message's source network address.		
Status	1	This field indicates either SUCCESS or FAILURE.		
NWKAddrOfInterest	2	Device's short address of this Node descriptor		
		Logical Type: Bit 0-2 –		
LogicalType/ ComplexDescriptorAvailable/ UserDescriptorAvailable	1	Description Value ZigBee Coordinator 0 ZigBee Router 1 ZigBee End Device 2 ComplexDescriptorAvailable: Bit 3 – Indicates if complex descriptor is available for the node UserDescriptorAvailable: Bit 4 – Indicates if user descriptor is available for the node Reserved: Bit 5-7 – Reserved for future use		
APSFlags/FrequencyBand	1	APSFlags – Bit 0-4 – Node Flags assigned for APS. For V1.0 all bits are reserved. NodeFrequencyBand – Bit 5-7 – Identifies node frequency band capabilities		

Capability flags stored for the MAC:

		Description	Value
		CAPINFO_DEVICETYPE_RFD	0x00
		CAPINFO_ALTPANCOORD	0x01
MacCapabilitiesFlags	1	CAPINFO_DEVICETYPE_FFD	0x02
		CAPINFO_POWER_AC	0x04
		CAPINFO_RCVR_ON_IDLE	0x08
		CAPINFO_SECURITY_CAPABLE	0x40
		CAPINFO_ALLOC_ADDR	0x80
ManufacturerCode	2	Specifies a manufacturer code that is allocate ZigBee Alliance, relating to the manufacture	•

ManufacturerCode

2 ZigBee Alliance, relating to the manufacturer to the device.

MaxBufferSize

1 Indicates size of maximum NPDU. This field is used as a high level indication for management.

MaxInTransferSize

2 Indicates maximum size of Transfer up to 0x7fff (This field is reserved in version 1.0 and shall be set to zero).

Bit 0 - Primary Trust Center

1 - Backup Trust Center

2 - Primary Binding Table Cache

3 - Backup Binding Table Cache

4 - Primary Discovery Cache

5 - Backup Discovery Cache

MaxOutTransferSize 2 Indicates maximum size of Transfer up to 0x7fff (This field is reserved in version 1.0 and shall be set to zero).

DescriptorCapabilities 1 Specifies the Descriptor capabilities


3.12.2.4 ZDO_POWER_DESC_RSP

Description:

This callback message is in response to the ZDO Power Descriptor Request.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Specifies the message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Specifies Device's short address that this response describes.
CurrentPowerMode/AvailablePowerSources	1	- CurrentPowerMode: bits 3-0 - AvailablePowerSources: bits 7-4
CurrentPowerSource/CurrentPowerSourceLevel	1	- CurrentPowerSource: bits 3-0 - CurrentPowerSourceLevel: bits 7-4

3.12.2.5 ZDO_SIMPLE_DESC_RSP

Description:

This callback message is in response to the ZDO Simple Descriptor Request





DeviceId

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Specifies the message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Specifies Device's short address that this response describes.
Len	1	Specifies the length of the simple descriptor
Endpoint	1	Specifies Endpoint of the device
ProfileId	2	The profile Id for this endpoint.
DeviceId	2	The Device Description Id for this endpoint.
		Defined as the following format
DeviceVersion	1	0 – Version 1.00
		0x01-0x0F – Reserved.
NumInClusters	1	The number of input clusters in the InClusterList.
InClusterList	0-32	List of input cluster Id's supported.
NumOutClusters	1	The number of output clusters in the OutClusterList.
OutClusterList	0-32	List of output cluster Id's supported.

3.12.2.6 ZDO_ACTIVE_EP_RSP

Description:

This callback message is in response to the ZDO Active Endpoint Request.

Usage:





0-77 ActiveEPList

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Device's short address that this response describes.
ActiveEPCount	1	Number of active endpoint in the list
ActiveEPList	0-77	Array of active endpoints on this device.

${\bf ZDO_MATCH_DESC_RSP}$ 3.12.2.7

Description:

This callback message is in response to the ZDO Match Descriptor Request.

AREQ:



0-77 MatchList

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Device's short address that this response describes.
MatchLength	1	The count of endpoints on the remote device that match the request criteria
MatchList	0-77	List of bytes, each represents an 8 bit endpoint

3.12.2.8 ZDO_COMPLEX_DESC_RSP

Description:

This callback message is in response to the ZDO Complex Descriptor Request.

Usage:

AREQ:



0-77 ComplexList

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Device's short address that this response describes.
ComplexLength	1	Length of the complex descriptor.
ComplexDescriptor	0-77	Array of bytes contains the complex descriptor.

3.12.2.9 ZDO_USER_DESC_RSP

Description:

This callback message is in response to the ZDO User Descriptor Request.

Usage:

AREQ:

1	1	1	2	1	2	1	0-77
Length = 0x06-0x16	Cmd0 = 0x45	Cmd1 = 0x88	SrcAddr	Status	NwkAddr	Len	UserDescriptor

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Device's short address that this response describes.
UserLength	1	Length of the complex descriptor.
UserDescriptor	0-77	Array of bytes contains user descriptor.


3.12.2.10 ZDO_USER_DESC_CONF

Description:

This confirmation notifies the user when the device receives a user descriptor.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS or FAILURE.
NWKAddr	2	Device's short address that this response describes.

3.12.2.11 ZDO_SERVER_DISC_RSP

Description:

This callback message is in response to the ZDO System Service Discovery Request. Upon receiving the request, remote devices shall compare the ServerMask parameter to the Server Mask field in their own Node descriptor. If no bits are found to match, no action is taken.

Usage:

AREQ:

1	1	1	2	1	2
Length = $0x05$	Cmd0 = 0x45	Cmd1 = 0x8A	SrcAddr	Status	ServerMask

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS (0) or FAILURE (1). Each bit signifies one system server capability of the node. The bit setting is defined in the following table:

		Bit Number	Assignment
		0	Primary Trust Center
		1	Backup Trust Center
Server Mask	2	2	Primary Binding Table Cache
		3	Backup Binding Table Cache
		4	Primary Discovery Cache
		5	Backup Discovery Cache
		6–15	Reserved

3.12.2.12 ZDO_END_DEVICE_BIND_RSP

Description:

This callback message is in response to the ZDO End Device Bind Request.

AREQ:



Attributes:

Attribute	Length (byte)	Description		
SrcAddr	2	The message's source network address.		
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).		

3.12.2.13 ZDO_BIND_RSP

Description:

This callback message is in response to the ZDO Bind Request.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description		
SrcAddr	2	The message's source network address.		
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).		

3.12.2.14 ZDO_UNBIND_RSP

Description:

This callback message is in response to the ZDO Unbind Request.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	The message's source network address.
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).


3.12.2.15 ZDO_MGMT_NWK_DISC_RSP

Description:

This callback message is in response to the ZDO Management Network Discovery Request.

Usage:

AREQ:



Attribute	Lengt h (byte)	Description			
SrcAddr	2	Source address of the message.			
Status	1	This field indicates either SUCCESS or FAILURE.			
NetworkCount	1	Total number of entries available in the device.			
StartIndex	1	Where in the total number of entries this response starts.			
NetworkListCou nt	1	Number of entries in this response.			

An array of NetworkList items. NetworkListCount contains the number of items in this table

NetworkList List

Name	Size	Description
PAN ID/Extended PAN	2 bytes	PAN ID of the neighbor device
ID		
Logical Channel	1 byte	The current logical channel occupied by the
		network.
Stack Profile / ZigBee	1 byte	StackProfile: bits 3-0
Version		ZigBeeVersion: bits 7-4
		A ZigBee stack profile Identifier indicating
		stack profile in use in the discovered networ
		The version of the ZigBee protocol in use in
		the discovered network.
Beacon Order / Super	1 byte	BeaconOrder: bits 3-0
frame Order	,	SuperframeOrder: bits 7-4
Permit Joining	1 byte	Permit joining flag

3.12.2.16 ZDO_MGMT_LQI_RSP

Description:

This callback message is in response to the ZDO Management LQI Request.

Usage:

AREQ:



NeighborTableListCount NeighborTableListRecords

Attribute	Length (byte)	Description	
SrcAddr	2	Source address of the message.	
Status	1	This field indicates either SUCCESS or FAILURE.	
NeighborTableEntries	1	Total number of entries available in the device.	
StartIndex	1	Where in the total number of entries this response starts.	
NeighborLqiListCount	1	Number of entries in this response.	

An array of NeighborLqiList items. NeighborLQiCount contains the number of items in this table.

Size Description Name Extended PAN ID of the ExtendedPanID 8 bytes neighbor device 8 bytes ExtendedAddress Network extended address NetworkAddress 2 bytes Device short address DeviceType/ 1 byte DeviceType: bits 1-0 RxOnWhenIdle/ RxOnWhenIdle: bits 3-2 Relationship: bits 6-4 Relationship PermitJoining PermitJoining: bits 1-0 1 byte Depth 1 byte LQI 1 byte

> 0x03 Inactive 0x04 – 0x07 Reserved

Next hop network address

2 bytes

NeighborLqiList 0-66

3.12.2.17 ZDO_MGMT_RTG_RSP

Description:

This callback message is in response to the ZDO Management Routing Table Request.

Usage:

AREQ:



1 0-75
RoutingTableListCount RoutingTableListRecords

Attributes:

Attributes:						
Attribute	Length (byte)		Descri	ption		
SrcAddr	2	Source address of the message.				
Status	1	This field indicates e	ither SUCC	ESS or FAILURE.		
RoutingTableEntries	1	Total number of entr	ies available	e in the device.		
StartIndex 1		Where in the total nu	mber of ent	ries this response starts.		
RoutingTableListCount	1	Number of entries in this response. An array of RtgList items. RtgListCount contains the number of items in this table.				
		Name	Size	Description		
		Destination	2 bytes	Network destination		
		Address		address		
		Status	1 byte	Route status: bits 2-0		
RoutingTableList	0-75			0x00 Active 0x01 Discovery Underway 0x02 Discovery Failed		

Next Hop

3.12.2.18 ZDO_MGMT_BIND_RSP

Description:

This callback message is in response to the ZDO Management Binding Table Request.

Usage:

AREQ:



1 0-75
BindingTableListCount BindingTableListRecords

Attributes:

1 I COLIN GEODE		
Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).
BindTableEntries	1	Total number of entries available in the device.
StartIndex	1	Where in the total number of entries this response starts.
BindTableListCount	1	Number of entries in this response.

An array of BindList items. BindListCount contains the number of items in

		Name	Size	Description
		SrcAddr	8 bytes	Binding Entry's source IEEE address
		SrcEndpoint	1 byte	Binding Entry's source endpoint
		ClusterId	1 byte	Message Id in binding table
BindTableList	List	DstAddrMode	1 byte	Address mode for binding entry's
Dilid rabicList	List			destination address
		DstAddr	8 bytes	Binding Entry's destination IEEE address
		DstEndpoint	1 byte	Binding Entry's destination endpoint. For
				V1.1, this field is only present when the
				DestAddrMode is 64-bits extended
				address.

3.12.2.19 ZDO_MGMT_LEAVE_RSP

Description:

This callback message is in response to the ZDO Management Leave Request.

Usage:

AREQ:

Byte: 1	1	1	2	1
Length = $0x03$	Cmd0 = 0x45	Cmd1 = 0xB4	SrcAddr	Status

Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.12.2.20 ZDO_MGMT_DIRECT_JOIN_RSP

Description:

This callback message is in response to the ZDO Management Direct Join Request.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.12.2.21 ZDO_MGMT_PERMIT_JOIN_RSP

Description:

This callback message is in response to the ZDO Management Permit Join Request.

Usage:

AREO:



Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message.
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.12.2.22 ZDO_STATE_CHANGE_IND

Description:

This callback message indicates the ZDO state change.

Usage:

AREQ:



Attributes:

Attribute	Length (byte)	Description
State	1	Specifies the changed ZDO state.

3.12.2.23 ZDO_END_DEVICE_ANNCE_IND

Description:

This callback indicates the ZDO End Device Announce.

AREQ:

•							
Byte: 1	1	1	2	2	8	1	ı
Length = $0x0D$	Cmd0 = 0x45	Cmd1 = 0xC1	SrcAddr	NwkAddr	IEEEAddr	Capabilites	

Attributes:

11011000000		
Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message.
NwkAddr	2	Specifies the device's short address.
IEEEAddr	8	Specifies the 64 bit IEEE address of source device.
Capabilites	1	Specifies the MAC capabilities of the device. Bit: 0 – Alternate PAN Coordinator 1 – Device type: 1- ZigBee Router; 0 – End Device 2 – Power Source: 1 Main powered 3 – Receiver on when Idle 4 – Reserved 5 – Reserved 6 – Security capability 7 – Reserved

3.12.2.24 ZDO_MATCH_DESC_RSP_SENT

Description:

This callback indicates that Match Descriptor Response has been sent.

Usage:

AREQ:

Byte: 1	1	1	2
Length = $0x04-0$	x44 $Cmd0 = 0$	x45 Cmd1 = $0xC2$	2 NwkAddr
-			
1	0-32	1	0-32
NumInClusters	InClusterList	NumOutClusters	OutClusterList

Attributes:

11ttl ID atto		
Attribute	Length (byte)	Description
NwkAddr	2	Specifies the device's short address
NumInClusters	1	The number of input clusters in the InClusterList.
InClusterList	0-32	List of input cluster Id's supported.
NumOutClusters	1	The number of output clusters in the OutClusterList.
OutClusterList	0-32	List of output cluster Id's supported.

3.12.2.25 ZDO_STATUS_ERROR_RSP

Description:

This message is the default message for error status.

Usage:

AREQ:

inte Q.				
Byte: 1	1	1	2	1
Length = 0x04-0x44	Cmd0 = 0x45	Cmd1 = 0xC3	SrcAddr	Status

Attribute	Length (byte)	Description
SrcAddr	2	Source address of the message
Status	1	This field indicates either SUCCESS (0) or FAILURE (1).

3.12.2.26 ZDO_SRC_RTG_IND

Description:

This message is an indication to inform host device the receipt of a source route to a given device.

Usage:

AREQ:

Byte: 1	1	1	2	1	2N
Length = 0x04-0x44	Cmd0 = 0x45	Cmd1 = 0xC4	dstAddr	Relay Count (N)	Relay List

Attributes:

Titti ibutes.		
Attribute	Length (byte)	Description
DstAddr	2	Short address of the destination of the source route
Relay Count	1	This field indicates number of devices in the relay list of the source route.
Relay List	2N	This field contains the list of devices in the relay list of the source route. It includes a two bytes short address for each device.

3.12.2.27 ZDO_BEACON_NOTIFY_IND

Description:

This message is an indication to inform host device the receipt of a beacon notification.

Usage:

AREQ:

•					
Byte: 1	1	1	1	N*21	
Length $= 21$	Cmd0 = 0x45	Cmd1 = 0xC5	BeaconCount	BeaconList	

Attributes:

Attribute	Length (byte)	Description
BeaconCount	1	Number of beacons in the packet.
		An array of BeaconList items. BeaconCount contains the number of
		items in this table.

BeaconList (N is BeaconCount)

Name	Size	Description
Source Address	2	Short address of the source device of the beacon
Pan ID	2	ID of the PAN
Logical Channel	1	Channel where the PAN is located.
Permit Joining	1	Flag to indicate whether the device accept association.
Router Capacity	1	Flag to indicate whether the device accept other router to associate
Device Capacity	1	Flag to indicate whether the device accept other device to associate
Protocol Version	1	Version of the ZigBee protocol. Value '1' represents ZigBee 2004. Value '2' represents ZigBee 2006/2007

Stack Profile	1	Stack profile of the PAN: Stack Profile 1 for ZigBee and Stack Profile 2 for ZigBee Pro.
LQI	1	LQI (Link quality indicator) measurement of the beacon.
Depth	1	Depth of the source device, i.e. number of hops from the device to the ZigBee coordinator.
Update ID	1	Update ID of the device.
Extended Pan ID	8	64 bit extended Pan ID of the Pan.

3.12.2.28 ZDO_JOIN_CNF

Description:

This message is an indication to inform host device the result of a ZDO join request.

Usage:

AREQ:

Byte: 1	1	1	1	2	2
Length = $0x05$	Cmd0 = 0x45	Cmd1 = 0xC6	status	Device	Parent
				Address	Address

Attributes:

Attibutes.		
Attribute	Length (byte)	Description
		Return status of the join request:
Status	1	Success (0)
Status	1	ZMAC_NO_ACK (0xE9) if the chosen parent device dId
		not respond to the association request.
Device Address	2	Short address of the device.
Parent Address	2	Short address of the parent device

3.12.2.29 ZDO_NWK_DISCOVERY_CNF

Description:

This message is an indication to inform host device the completion of network discovery scan.

Usage:

AREQ:

•			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x45	Cmd1 = 0xC7	status

Attributes:		
Attribute	Length (byte)	Description
		Return status of the network discovery.
		Success (0)
Status	1	ZMAC_NO_BEACON (0xEA)
		ZMAC_INVALID_PARAMETER (0xE8) if input
		parameter is out of valid range.

3.12.2.30 ZDO_LEAVE_IND

Description:

This message is an indication to inform the host of a device leaving the network.

Usage:

AREQ:

Byte: 1	1	1	2	8	1	1	1
Length=0x0D	Cmd0=0x45	Cmd1=0xC9	SrcAddr	ExtAddr	Request	Remove	Rejoin

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Short address (LSB-MSB) of the source of the leave indication.
ExtAddr	8	Extended address (LSB-MSB) of the source of the leave indication.
Request	1	Boolean, TRUE = request, FALSE = indication.
Remove	1	Boolean, TRUE = remove children.
Rejoin	1	Boolean, TRUE = rejoin.

3.12.2.31 ZDO_MSG_CB_INCOMING

Description:

This message is a ZDO callback for a Cluster Id that the host requested to receive with a ZDO_MSG_CB_REGISTER request.

Usage:

AREO:

mey.					
Byte: 1	1	1	2	1	2
Length = 0x09-Max MTU length	Cmd0 = 0x45	Cmd1 = 0xFF	SrcAddr	WasBroadcast	ClusterId

1	1	2	0-Max MTU length
SecurityUse	SeqNum	MacDstAddr	Data

Attributes:

Attribute	Length (byte)	Description
SrcAddr	2	Short address (LSB-MSB) of the source of the ZDO message.
WasBroadcast	1	This field indicates whether or not this ZDO message was broadcast.
ClusterId	2	The ZDO Cluster Id of this message.
SecurityUse	1	N/A – not used.
SeqNum	1	The sequence number of this ZDO message.
MacDstAddr	2	The MAC destination short address (LSB-MSB) of the ZDO message.
Data	0-Max MTU length.	The data that corresponds to the Cluster Id of the message (see reference [4], "ZDO Parsing Functions" for information on parsing the data that corresponds to each ZDO Cluster Id).

3.12.2.32 ZDO_TC_DEV_IND

Description:

This message is a ZDO callback for TC Device Indication.

AREQ:

Byte: 1	1	1	2	8	2
Length = $0x0C$	Cmd0 = 0x45	Cmd1 = 0xCA	SrcNwkA	SrcIEEEAddr	Parent
			ddr		Nwk Addr

Attributes:

1 I COL IN GUEST		
Attribute	Length (byte)	Description
SrcNwkAddr	2	Source network Address.
WasBroadcast	8	IEEE Address of the source
ParentNwkAddr	2	Network address of the parent

3.12.2.33 ZDO_PERMIT_JOIN_IND

Description:

This message is a ZDO callback for Permit Join Indication.

Usage:

AREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x45	Cmd1 = 0xCB	PermitJoinDuration

Attributes:

Attribute	Length (byte)	Description
Permit Join Duration	1	Duration for which joining is permitted

3.13 MT_APP_CONFIG

This interface allows the tester to issue commands to configure some parameters of the device, trust center and BDB subsystem.

3.13.1 MT_APP_CONFIG Commands

3.13.1.1 APP CNF SET NWK FRAME COUNTER

Description:

This message sets the network frame counter to the value specified in the Frame Counter Value. For projects with multiple instances of frame counter, the message sets the frame counter of the current network.

Usage:

This message should only be use for debugging purposes. Changing the network frame counter in a production device, may cause the failures in the authentication process with other devices in the network.

SREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0xFF	Frame Counter Value

Attribute	Length (byte)	Description
Frame Counter Value	4	Set the network frame counter to the specified value

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.13.1.2 APP_CNF_SET_DEFAULT_REMOTE_ENDDEVICE _TIMEOUT

Description:

Sets the default value used by parent device to expire legacy child devices.

Usage:

SREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x01	Timeout Index

Attributes:

multiputes.				
Attribute	Length (byte)		Des	cription
		Specifies	the number of	seconds until
Timeout Index	1		according to the	
	_			
		0x00	10 seconds	S
		0x01	2 minutes	
		0x02	4 minutes	
		0x03	8 minutes	
		0x04	16 minutes	S
		0x05	32 minutes	S
		0x06	64 minutes	S
		0x07	128 minut	es
		0x08	256 minute	es (Default)
		0x09	512 minute	es
		0x0A	1024 minu	ites
		0x0B	2048 minu	ites
		0x0C	4096 minu	ites
		0x0D	8192 minu	ites
		0x0E	16384 min	
SRSP:		ONOL	1030111111	idios
	1		1	1
Byte: 1	1		1	1
Length = $0x01$	Cmd0 = 0x6	F C	md1 = 0x01	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Invalid Parameter (2).

3.13.1.3 APP_CNF_SET_ENDDEVICETIMEOUT

Description:

Sets in ZED the timeout value to be send to parent device for child expiring.

SREO:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x02	Timeout Index

Attributes:

Attributes:				
Attribute	Length (byte)		Des	cription
		Specifie	s the number of	seconds until the time
Timeout Index	1	expires,	according to the	next list:
		0x00	10 seconds	3
		0x01	2 minutes	
		0x02	4 minutes	
		0x03	8 minutes	
		0x04	16 minutes	3
		0x05	32 minutes	3
		0x06	64 minutes	
		0x07	128 minute	es
		0x08	256 minute	es (Default)
		0x09	512 minute	es
		0x0A	1024 minu	tes
		0x0B	2048 minu	tes
		0x0C	4096 minu	tes
		0x0D	8192 minu	tes
		0x0E	16384 min	utes
SRSP:				
Byte: 1	1		1	1
Length = $0x01$	Cmd0 = 0x6	F (Cmd1 = 0x02	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Invalid Parameter (2).

3.13.1.4 APP_CNF_SET_ALLOWREJOIN_TC_POLICY

Description:

Sets the AllowRejoin TC policy.

Usage:

SREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x03	Allow Rejoin

Attributes:

multiputes.		
Attribute	Length (byte)	Description
Allow Rejoin	1	This value specifies whether or not the Trust Center allows devices to rejoin.

SRSP:



Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.13.1.5 APP_CNF_BDB_START_COMMISSIONING

Description:

Set the commissioning methods to be executed. Initialization of BDB is executed with this call, regardless of its parameters.

Usage:

SREQ:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x05	Commissioning
			mode

Attributes:

Attribute	Length (byte)	Description
Commissioning Mode	1	This value specifies the commissioning mode according to this list: 0x00 Initialization 0x01 TouchLink 0x02 Network Steering 0x04 Network Formation 0x08 Finding and Binding

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).


3.13.1.6 APP_CNF_BDB_SET_CHANNEL

Description:

Sets BDB primary or secondary channel masks.

Usage:

SREQ:



Attribute	Length (byte)]	Description
isPrimary	1	This value specifies if the present channel set is either primary or secondary.	
Channel	4	This is the value of the channel set according to the following list of masks.	
		Channel 11	0x00000800
		Channel 12	0x00001000
		Channel 13	0x00002000
		Channel 14	0x00004000
		Channel 15	0x00008000
		Channel 16	0x00010000
		Channel 17	0x00020000
		Channel 18	0x00040000
		Channel 19	0x00080000

Channel 20	0x00100000
Channel 21	0x00200000
Channel 22	0x00400000
Channel 23	0x00800000
Channel 24	0x01000000
Channel 25	0x02000000
Channel 26	0x04000000

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x6F	Cmd1 = 0x08	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.13.1.7 APP_CNF_BDB_ADD_INSTALLCODE

Description:

Add a preconfigured key (plain key or IC) to Trust Center device.

Usage:

SREO:

Byte: 1	1	1	1
Length = $0x19-0x1B$	Cmd0 = 0x2F	Cmd1 = 0x04	installCodeFormat
8	16-18		
IEEEAddress	installCode		

Attributes:

Attribute	Length (byte)		Description	
		This value specifie	es the format in which the install code is	
installCodeFormat	1	being added. The following list contains the values		
		corresponding to the supported formats:		
		0x01	Install Code + CRC	
		0x02	Key derived from Install Code	
IEEEAddress	8	Full IEEE address	for the device joining the network	
installCode	16-18	8 16 Bytes for the Key derived from the IC		
		18 Bytes for the Install Code +CRC		

SRSP:

DIADI .			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x6F	Cmd1 = 0x04	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status values: 0x00 Success 0x01 Failure (IC not supported) 0x02 Invalid parameter (bad CRC)

3.13.1.8 APP_CNF_BDB_SET_TC_REQUIRE_KEY_EXCHANGE

Description:

Sets the policy flag on Trust Center device to mandate or not the TCLK exchange procedure.

SREQ:

•			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x09	bdbTrustCenterRequireKeyExchange

Attributes:

Attibutes.		
Attribute	Length (byte)	Description
bdbTrustCenterRequireKeyExchange	1	The bdbTrustCenterRequireKeyExchange attribute specifies whether the Trust Center requires a joining device to exchange its initial link key with a new link key generated by the Trust Center. If bdbTrustCenterRequireKeyExchange is equal to TRUE, the joining node must undergo the link key exchange procedure; failure to exchange the link key will result in the node being removed from the network. If bdbTrustCenterRequireKeyExchange is equal to FALSE, the Trust Center will permit the joining node to remain on the network without exchanging its initial link key. This attribute is used by ZigBee coordinator nodes.

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.13.1.9 APP_CNF_BDB_SET_JOINUSESINSTALLCODEKEY

Description:

Sets the policy to mandate or not the usage of an Install Code upon joining.

Usage:

SREQ:

2			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x2F	Cmd1 = 0x06	bdbJoinUsesInstallCodeKey

Attribute	Length (byte)	Description
bdbJoinUsesInstallCodeKey	1	If it is equal to TRUE and the installation code derived link key is not stored, the Trust Center SHALL terminate the procedure for adding a new node into the network. If bdbJoinUsesInstall-CodeKey is equal to TRUE and the installation code derived link key is stored, the Trust Center SHALL first find the entry in apsDeviceKeyPairSet that corresponds to the joining node and then overwrite the LinkKey entry with the installation code derived link key and set the KeyAttributes field to PROVISIONAL KEY. The Trust Center MAY then

set OutgoingFrame-Counter to 0 and SHALL set IncomingFrameCounter to 0. If bdbJoinUsesInstallCodeKey is equal to FALSE, the Trust Center SHALL first find the entry in apsDeviceKeyPairSet that corresponds to the joining node and then overwrite the LinkKey entry with the default global Trust Center link key and set the KeyAttributes field to PROVISIONAL_KEY. The Trust Center MAY then set OutgoingFrameCounter to 0 and SHALL set IncomingFrameCounter to 0.

SRSP:

TEDI •			
Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x6F	Cmd1 = 0x06	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status is either Success (0) or Failure (1).

3.13.1.10 APP_CNF_BDB_SET_ACTIVE_DEFAULT_CENTRALIZED_K EY

Description:

On joining devices, set the default key or an install code to attempt to join the network.

Usage:

SREO:

DILLY.			
Byte: 1	1	1	1
Length = $0x13$	Cmd0 = 0x2F	Cmd1 = 0x07	useGlobal
18			
InstallCode			

Attributes:

11011100000		
Attribute	Length (byte)	Description
useGlobal	1	This parameter defines whether the device joining the network will use a Default Global Key (if set to TRUE) or an Install Code (if set to FALSE).
InstallCode	18	Value of the Install Code + CRC

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x6F	Cmd1 = 0x07	Status

Attributes:

atti ibutes.		
Attribute	Length (byte)	Description
Status	1	Status values: 0x00 Success 0x01 Failure (IC not supported)
		0x02 Invalid Parameters (bad CRC)

3.13.1.11 APP_CNF_BDB_ZED_ATTEMPT_RECOVER_NWK

Description:

Instruct the ZED to try to rejoin its previews network. Use only in ZED devices.

Usage: SREQ: 1 1 1 1 Length = 0x00 Cmd0 = 0x2F Cmd1 = 0x0A

Attributes:

SRSP:



Attributes:

Attribute	Length (byte)	Description
Status	1	Status values: 0x00 Success 0x01 Failure (Device not ZED or doesn't have network parameters)

3.13.2 MT_APP_CONFIG Callbacks


3.13.2.1 APP_CNF_BDB_COMMISIONING_NOTIFICATION

Description:

Callback to receive notifications from BDB process.

Usage:

AREQ:



Attribute	Length (byte)	Description
		Status of the commissioning mode being notified:
		0x00 BDB_COMMISSIONING_SUCCESS
		0x01 BDB_COMMISSIONING_IN_PROGRESS
		0x02 BDB_COMMISSIONING_NO_NETWORK
		0x03 BDB_COMMISSIONING_TL_TARGET_FAILURE
		0x04 BDB_COMMISSIONING_TL_NOT_AA_CAPABLE
		0x05 BDB_COMMISSIONING_TL_NO_SCAN_RESPONSE
Status	1	0x06 BDB_COMMISSIONING_TL_NOT_PERMITTED
Status	1	0x07 BDB_COMMISSIONING_TCLK_EX_FAILURE
		0x08 BDB_COMMISSIONING_FORMATION_FAILURE
		0x09 BDB_COMMISSIONING_FB_TARGET_IN_PROGRESS
		0x0A BDB_COMMISSIONING_FB_INITITATOR_IN_PROGRESS
		0x0B BDB_COMMISSIONING_FB_NO_IDENTIFY_QUERY_RESPONSE
		0x0C BDB_COMMISSIONING_FB_BINDING_TABLE_FULL
		0x0D BDB_COMMISSIONING_NETWORK_RESTORED
		0x0E BDB_COMMISSIONING_FAILURE
		Commissioning mode for which the notification is done and to which the status
		is related:
Commissioning	1	0x00 BDB_COMMISSIONING_INITIALIZATION
mode	1	0x01 BDB_COMMISSIONING_NWK_STEERING
		0x02 BDB COMMISSIONING FORMATION
		0x03 BDB_COMMISSIONING_FINDING_BINDING

Remaining

modes

0x04 BDB_COMMISSIONING_TOUCHLINK 0x05 BDB_COMMISSIONING_PARENT_LOST

Bitmask of the remaining commissioning modes after this notification:

0x01 BDB_COMMISSIONING_MODE_INITIATOR_TL 0x02 BDB_COMMISSIONING_MODE_NWK_STEERING 0x04 BDB_COMMISSIONING_MODE_NWK_FORMATION

commissioning 0x08 BDB_COMMISSIONING_MODE_FINDING_BINDING 0x10 BDB_COMMISSIONING_MODE_INITIALIZATION

0x20 BDB_COMMISSIONING_MODE_PARENT_LOST

3.14 MT_GREENPOWER

This interface allows a host processor to interact with Green Power devices and Green Power infrastructure.

3.14.1 MT_GP Commands

GP_DATA_REQ 3.14.1.1

Description:

Callback to receive notifications from BDB process.

Usage:

SREO

~ ~						
Byte: 1	1	1	1	1	1	4
Length = $0x17$ -	Cmd0 = 0x35	Cmd1 = 0x01	Action	TxOptions	Application ID	SrcID
0x8C						

8	1	1	1	0-116	1	3
GPD IEEE address	EndPoint	GPD	GPD	GPD ASU	GPEP handle	gpTxQueueEntry-
		Command ID	ASU			Lifetime
			Length			

Attribute	Length (byte)	Range	Description
Action	1	TRUE/FALSE	TRUE: add GPDF into the queue FALSE: remove GPDF from queue
TxOptions	1	AnyValid	The transmission options for this GPDF. These are a bitwise OR of one or more of the following: b0 = Use gpTxQueue b1 = Use CSMA/CA b2 = Use MAC ACK b3-b4 = GPDF frame type for Tx (can take non-reserved values as defined in Table 10) b5 = Tx on matching endpoint b6 - b7 - reserved
Application ID	1	0x00, 0x02	ApplicationID of the GPD to which the ASDU will be sent; ApplicationID 0x00 indicates the usage of the SrcID; ApplicationID 0x02 indicates the usage of the GPD IEEE address.
SrcID	4	0x00000000 - 0xfffffff	The identifier of the GPD entity to which the ASDU will be sent if ApplicationID = 0b000.

GPD IEEE address	8	Any valid	The identifier of the GPD entity to which the ASDU will be sent if ApplicationID = 0b010.
Endpoint	1	0x00 - 0xf0, 0xff	The identifier of the GPD endpoint used in combination with the GPD IEEE address if ApplicationID = 0b010. If ApplicationID = 0b000 this parameter is ignored.
GPD Command ID	1	0x00- 0xff	The identifier of the command, within the GP specification, which defines the application semantics of the ASDU.
GPD ASDU Length	1	0x00 - (aMaxMACFrameSize - 9)	The number of octets in the transmitted GPD ASDU.
GPD ASDU	GPD ASU Length	-	The sequence of octets forming the transmitted GPD ASDU.
GPEP handle	1	0x00-0xff	The handle used between Green Power EndPoint and dGP stub, to match the request with the confirmation.
gpTxQueueE ntry- Lifetime	3	0x000000-0xffffff	The lifetime of this packet in the gpTxQueue, in milliseconds. 0x000000 indicates immediate transmission. 0xffffff indicates infinity. In a Basic Proxy/Sink, the default lifetime MAY be 0xffffff.

SRSP:

Byte: 1	1	1	1
Length = $0x01$	Cmd0 = 0x75	Cmd1 = 0x01	Status

Attributes:

Attribute	Length (byte)	Description
Status	1	Status values: 0x00 Success 0x01 Failure (Out of memory) 0x02 Invalid Parameters (Invalid App ID)

3.14.1.2 **GP_SEC_RSP**

Description:

This message provides a mechanism for the Green Power EndPoint to provide security data into the dGP stub.

Usage:

SREQ

Byte: 1	1	1	1		1	1	4
Length = 0x26	Cmd0 = 0x3	Cmd1 = 0x02	Status	dGP st	tub handle	ApplicationID	SrcID
8	1	1	1		16	4	
GPD IEEE address	EndPoint	GPDFScurityLevel	GPDFKe	уТуре	GPDKey	GPDSecurityFram	neCounter

Attribute	Length (byte)	Range	Description
Status	1	Any valid	The status code, as returned by the Green Power EndPoint. The following are supported: MATCH DROP_FRAME PASS_UNPROCESSED TX_THEN_DROP

dGP stub handle	1	0x00-0xff	The handle used between dGP stub and the higher layers, to match the request with the response.
Application ID	1	0x00, 0x02	ApplicationID of the GPD entity from which the ASDU was received. ApplicationID 0x00 indicates the usage of the SrcID; ApplicationID 0x02 indicates the usage of the GPD IEEE address.
SrcID	4	0x00000001 - 0xfffffffe	The identifier of the GPD entity from which the ASDU was received if Application ID $= 0b000$.
GPD IEEE address	8	Any valid	The identifier of the GPD entity from which the ASDU was received if Application ID = $0b010$.
Endpoint	1	0x00 - 0xf0, 0xff	The identifier of the GPD endpoint used in combination with the GPD IEEE address if ApplicationID = 0b010. If ApplicationID = 0b000 this parameter is ignored.
GPDFSecurityL evel	1	0x00 - 0x07	The security level to be used for GPDF security processing.
GPDFKeyType	1	Any valid	The security key type to be used for GPDF security processing.
GPD Key	16	Any valid	The security key to be used for GPDF security processing.
GPD security frame counter	4	Any valid	The security frame counter value to be used for GPDF security processing.
SRSP:			
Byte: 1		•	1
Length = $0x01$	C	md0 = 0x75 Cmd1	= 0x02 Status

Attribute	Length (byte)	Description
Status	1	Status values: 0x00 Success 0x01 Failure (Out of memory) 0x02 Invalid Parameters (Invalid App ID)

3.14.2 MT_GP Callbacks

3.14.2.1 GP_DATA_CNF

Description:

Green power confirm is a message that provides a mechanism for the Green Power EndPoint in the host processor to understand the status of a previous request to send a GPDF.

Usage:



Attribute	Length (byte)	Range	Description
Status	1	Any valid	Status code, as returned by the MAC layer (see Table 28 of [15]).
GP MPDU	1	0x00 - 0xff	The handle used between dGP/dLPED stub and cGP stub, to match the request with the confirmation.


3.14.2.2 GP_SEC_REQ

Description:

This message provides a mechanism for dGP stub to request security data from the Green Power EndPoint in the host processor.

Usage:





1	1	1	1, 4	1
Endpoint	GPDFScurityLevel	GPDFKeyType	GPD Security Frame Counter	dGP stub handle

Attribute	Length (byte)	Range	Description
ApplicationID	1	0x00, 0x02	ApplicationID of the GPD entity from which the ASDU was received. ApplicationID 0x00 indicates the usage of the SrcID; ApplicationID 0x02 indicates the usage of the GPD IEEE address.
SrcID	4	0x00000001 - 0xfffffffe	The identifier of the GPD entity from which the ASDU was received if ApplicationID = $0b000$.
GPD IEEE address	8	Any valid	The identifier of the GPD entity from which the ASDU was received if ApplicationID = 0b010.
EndPoint	1	0x00 - 0xf0, 0xff	The identifier of the GPD endpoint used in combination with the GPD IEEE address if ApplicationID = 0b010. If ApplicationID = 0b000 this parameter is ignored.
GPDFSecurity Level	1	0x00, 0x02 - 0x03	The security level, corresponding to the received MPDU.
GPDFKey Type	1	0x00 - 0x01	The security key type, corresponding to the received MPDU.
GPD Security Frame Counter	1, 4	As specified by the GPDF Security Level parameter	The security frame counter value corresponding to the received MPDU.
dGP stub handle	1	0x00-0xff	The handle used between dGP stub and the higher layers, to match the request with the response.

3.14.2.3 **GP_DATA_IND**

Description:

This message provides a mechanism for identifying and conveying a received GPDF to the Green Power EndPoint in the host processor.

Usage:





2	2, 8	1	2	2, 8	1	0-116
SrcPANID	SrcAddress	DstAddrMode	DstPANId	DstAddress	GP MPDU Length	GP MPDU

Attributes:			
Attribute	Length (byte)	Range	Description
Status	1	Any Valid	Status code, as returned by dGP stub. It can have the following values: SECURITY_SUCCESS NO_SECURITY COUNTER_FAILURE AUTH_FAILURE UNPROCESSED
RSSI	1	0x00 - 0xff	The RSSI delivered by the MAC on receipt of this frame.
Link Quality	1	0x00 - 0xff	The LQI delivered by the MAC on receipt of this frame.
SeqNumber	1	0x00 - 0xff	The sequence number from MAC header of the received MPDU.
SrcAddrMode	1	0x00 - 0x03	The source addressing mode for this primitive corresponding to the received MPDU. This value can take one of the following values: $0 \times 00 = \text{no}$ address (SrcPANId and SrcAddress omitted). $0 \times 01 = \text{reserved}$. $0 \times 02 = 16$ bit short address. $0 \times 03 = 64$ bit extended address.
SrcPANId	2	0x0000 - 0xffff	The 16-bit PAN identifier of the GPD entity from which the ASDU was received.
		As specified by the	1255 6 1145 166611641
SrcAddress	2, 8	SrcAddrMode parameter	The device address of the GPD entity from which the ASDU was received.
DstAddrMode	1	0x01 - 0x03	The addressing mode for the destination address used in this primitive. This parameter can take one of the values from the following list: $0 \times 00 = \text{no address (DstPANId and DstAddress omitted)} \\ 0x01 = \text{reserved} \\ 0x02 = 16\text{-bit NWK address, normally the broadcast address} \\ 0xffff \\ 0x03 = 64\text{-bit extended address}$
DstPANId	2	0x0000 - 0xffff	The 16-bit PAN identifier of the entity or entities to which the ASDU is being transferred or the broadcast PAN ID 0xffff.
DstAddress	2, 8	As specified by the DstAddrMode parameter	The address of the entity or entities to which the ASDU is being transferred or the broadcast address 0xffff.
GP MPDU Length	1	0x00 – (aMaxMACFrameSi ze - 9)	The number of octets in the received GP MPDU.

GP MPDU

0 - 116

The sequence of octets forming the received GP MPDU.