Chapter 6
Wireless and Mobile Networks

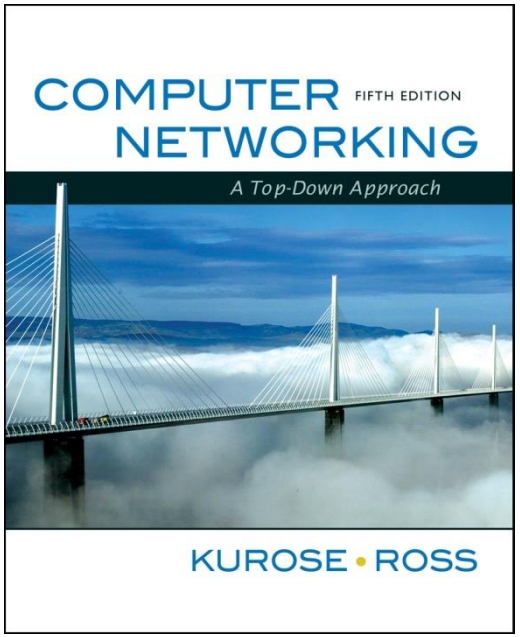

Computer Networking: A Top Down Approach 5th edition.
Jim Kurose, Keith Ross
Addison-Wesley, April 2009.

Chapter 6: Wireless and Mobile Networks

Background:

- # wireless (mobile) phone subscribers now exceeds # wired phone subscribers!
- computer nets: laptops, palmtops, PDAs, Internet-enabled phone promise anytime untethered Internet access

- two important (but different) challenges
  - *wireless:* communication over wireless link

Chapter 6 outline

6.1 Introduction

6.9 Summary

Wireless

- 6.2 Wireless links, characteristics
- 6.3 IEEE 802.11 wireless LANs ("wi-fi")

Elements of a wireless network

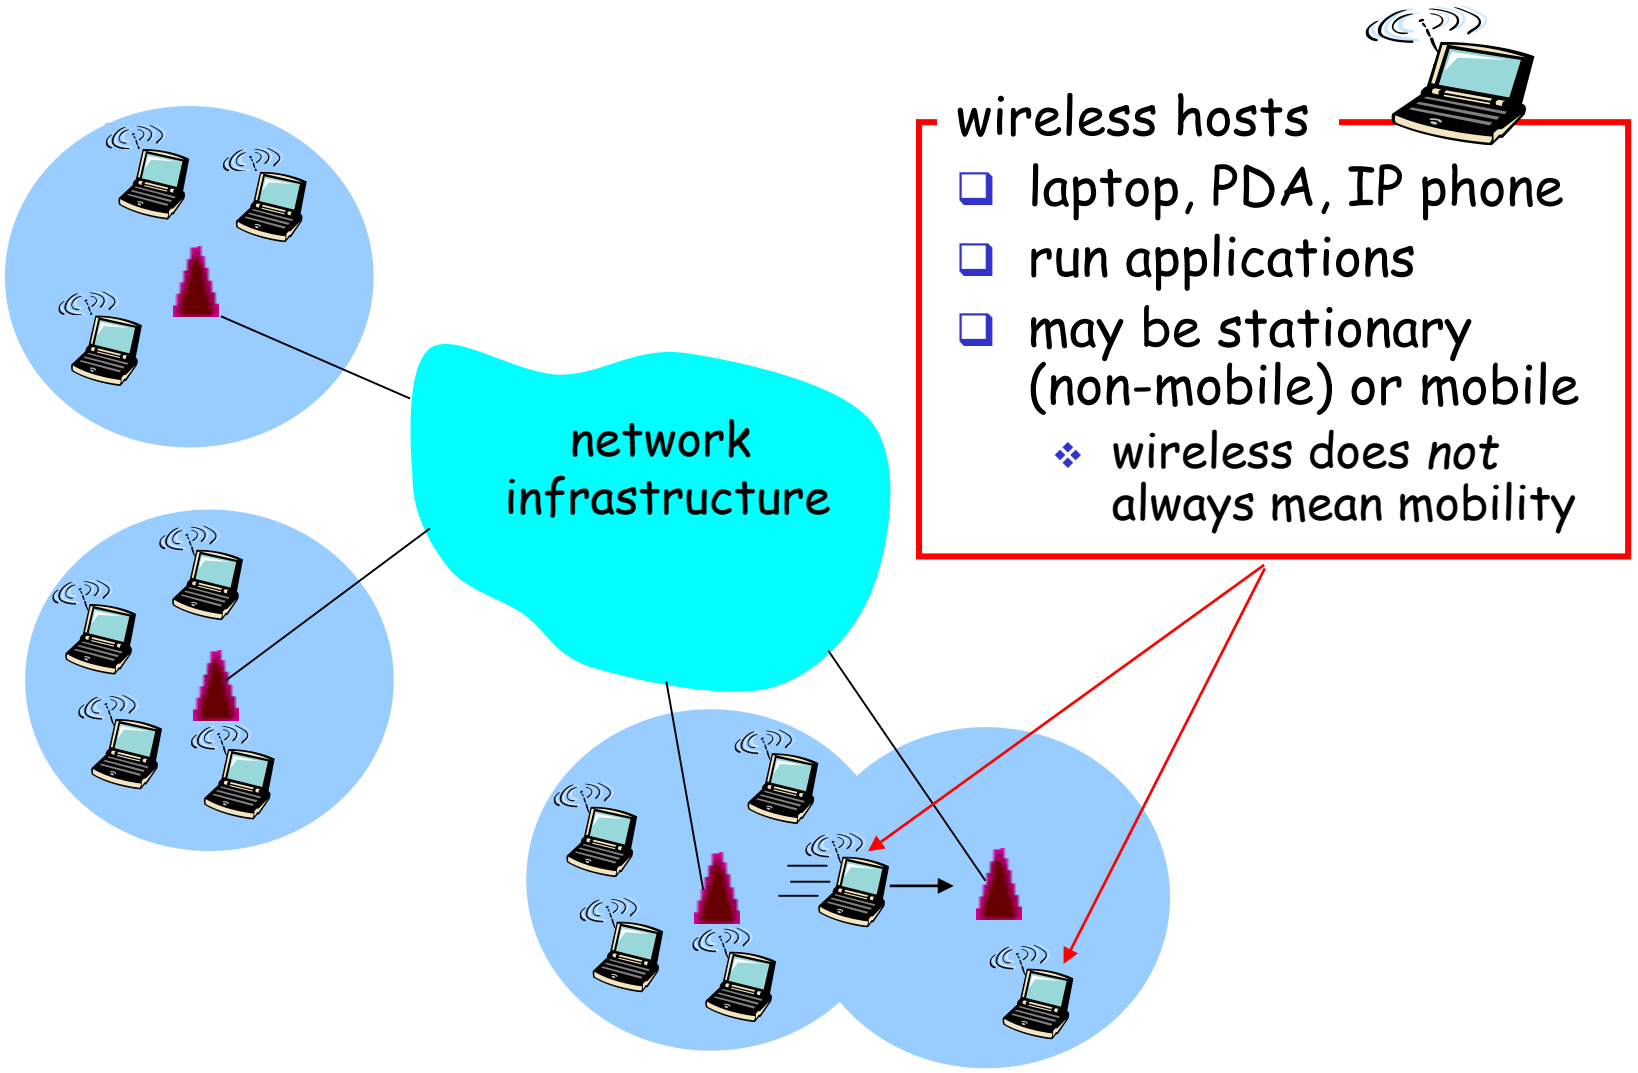

Elements of a wireless network

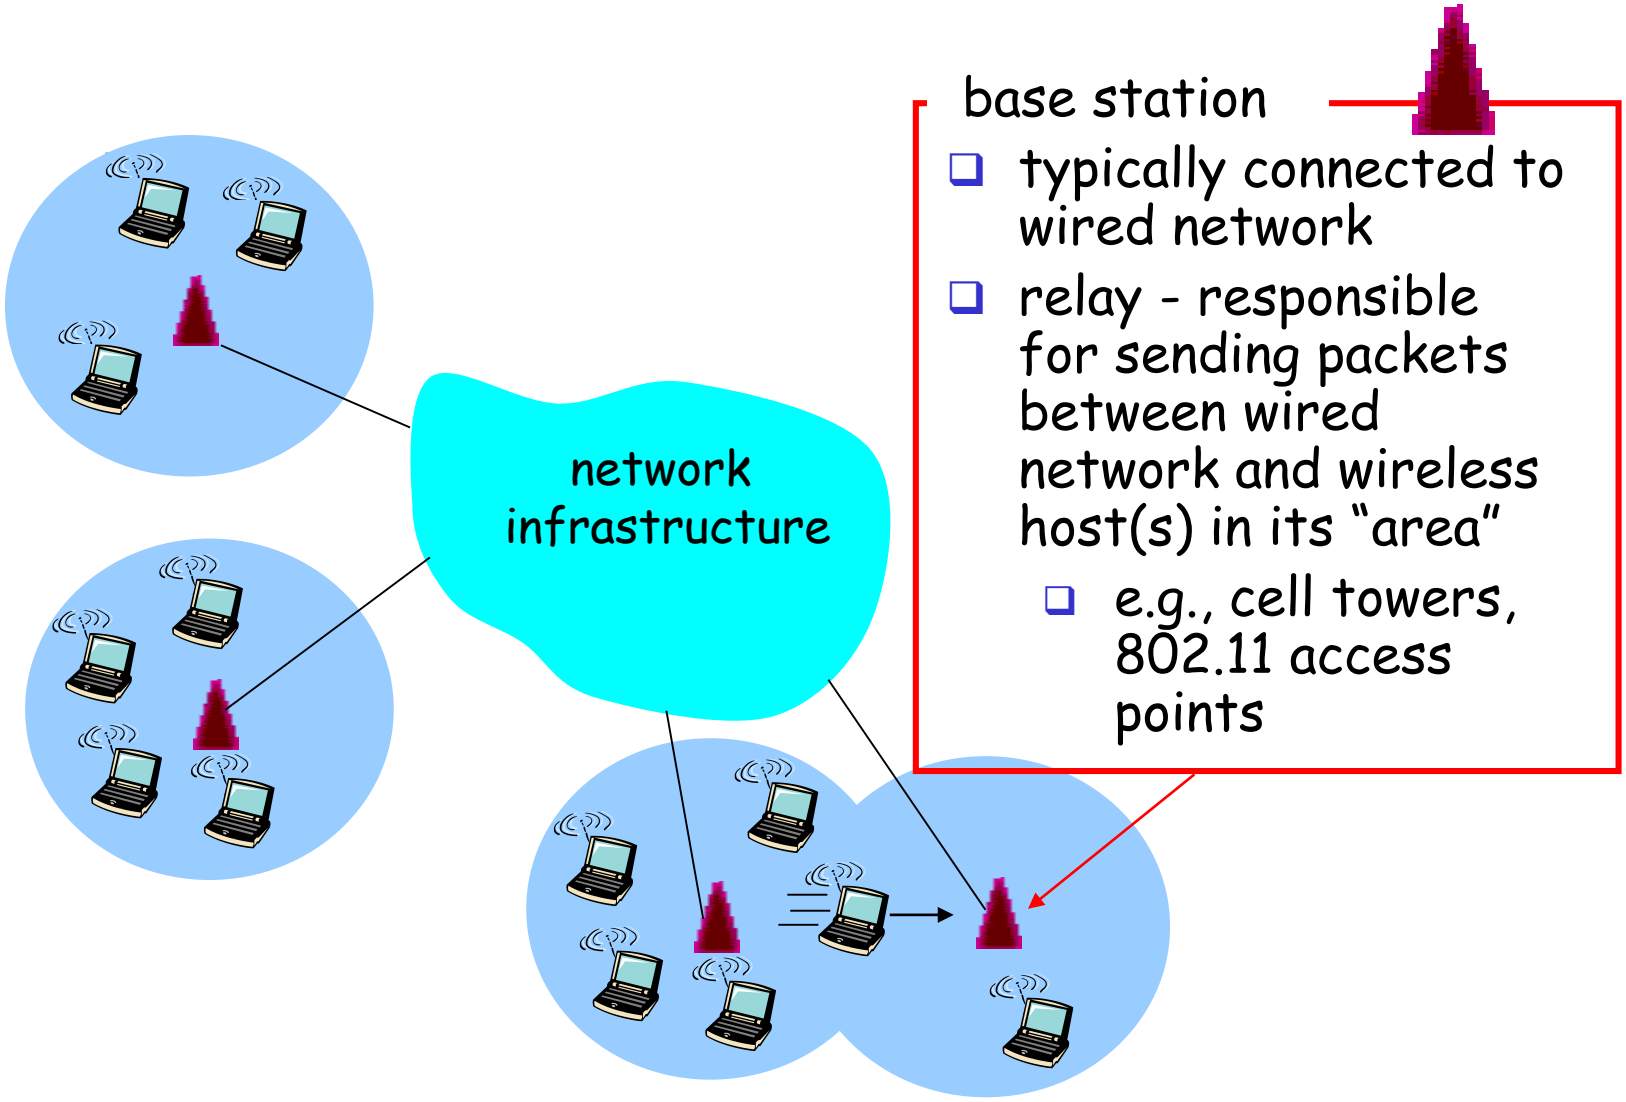

Elements of a wireless network

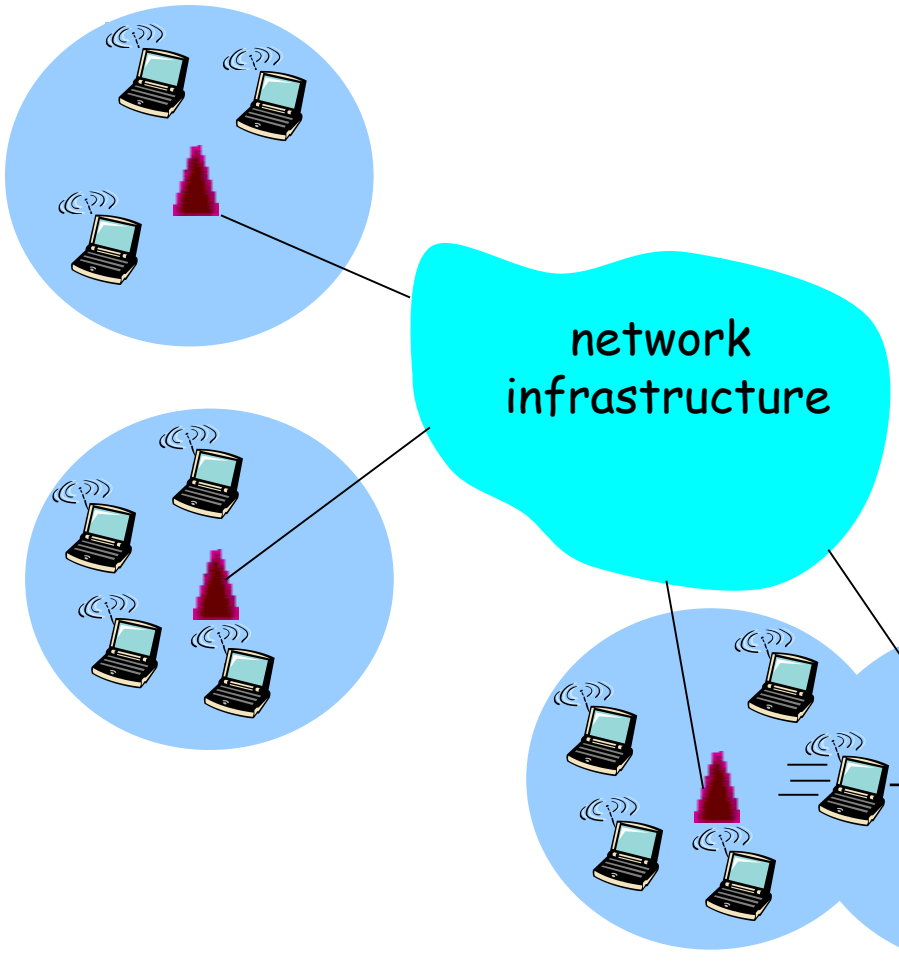

wireless link

- typically used to connect mobile(s) to base station
- also used as backbone link
- multiple access protocol coordinates link access
- various data rates, transmission distance

Elements of a wireless network

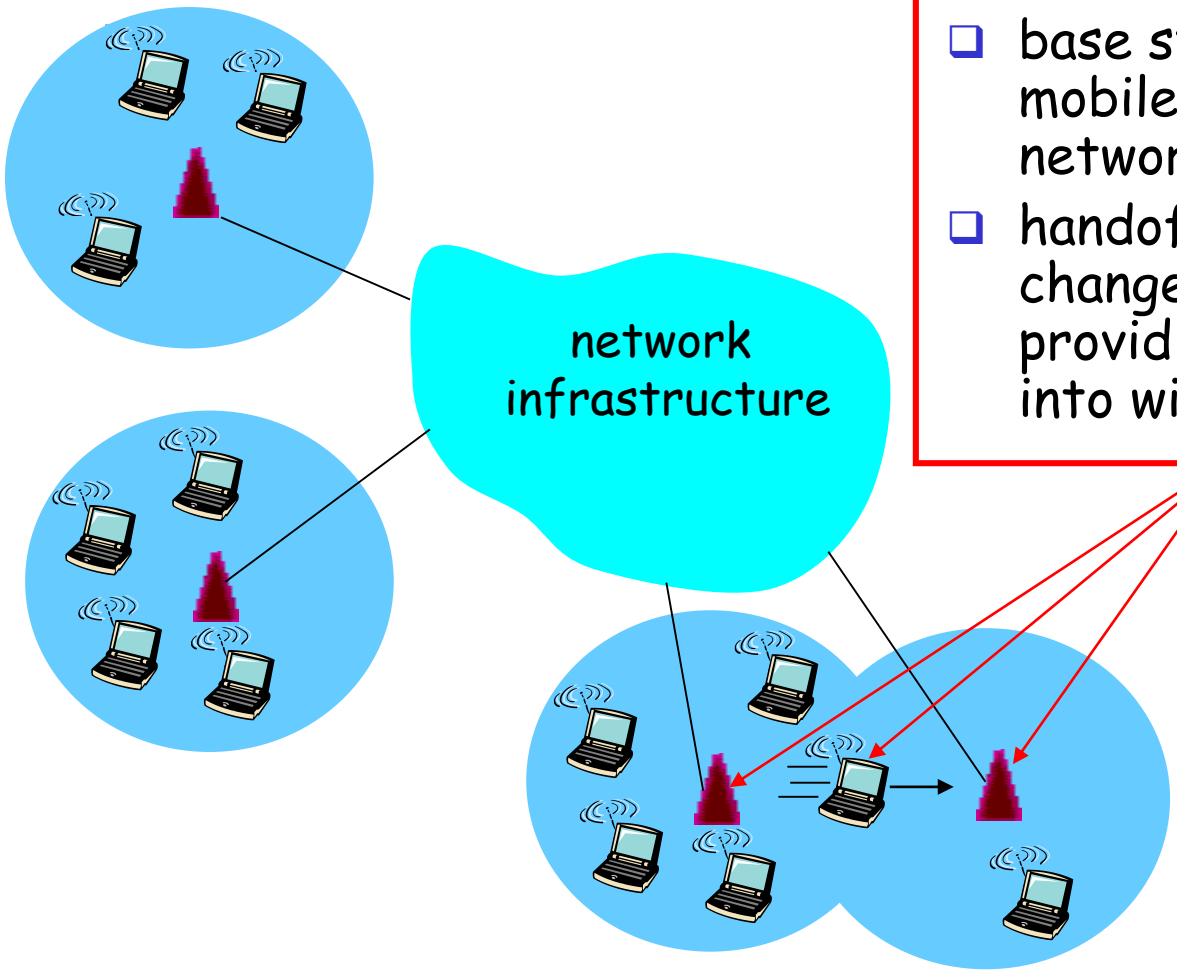

infrastructure mode

- base station connects mobiles into wired network
- handoff: mobile changes base station providing connection into wired network

Elements of a wireless network

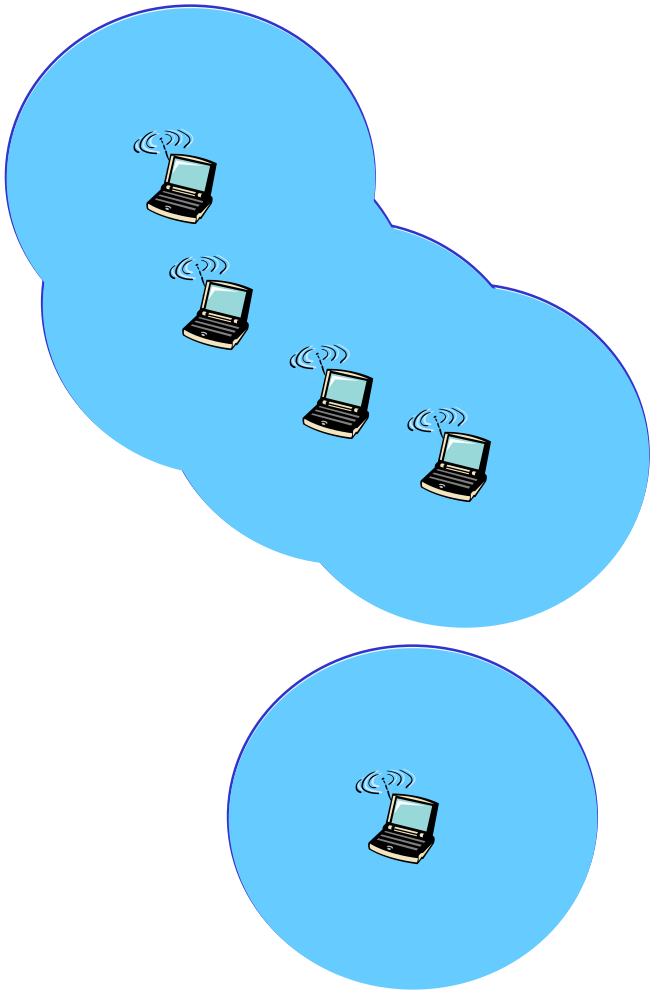

ad hoc mode

- no base stations
- nodes can only transmit to other nodes within link coverage
- nodes organize themselves into a network: route among themselves

Chapter 6 outline

6.1 Introduction

Wireless

- 6.2 Wireless links, characteristics
- 6.3 IEEE 802.11 wireless LANs ("wi-fi")

Wireless Link Characteristics (1)

Differences from wired link ….

- decreased signal strength: radio signal attenuates as it propagates through matter (path loss)
- interference from other sources: standardized wireless network frequencies (e.g., 2.4 GHz) shared by other devices (e.g., phone); devices (motors) interfere as well
- multipath propagation: radio signal reflects off objects ground, arriving at destination at slightly different times

…. make communication across (even a point to point) wireless link much more "difficult"

Wireless Link Characteristics (2)

- SNR: signal-to-noise ratio
  - larger SNR – easier to extract signal from noise (a "good thing")
- *SNR versus BER tradeoffs*
  - *given physical layer:* increase power -> increase SNR->decrease BER
  - *given SNR:* choose physical layer that meets BER requirement, giving highest thruput
    - SNR may change with mobility: dynamically adapt physical layer (modulation technique, rate)

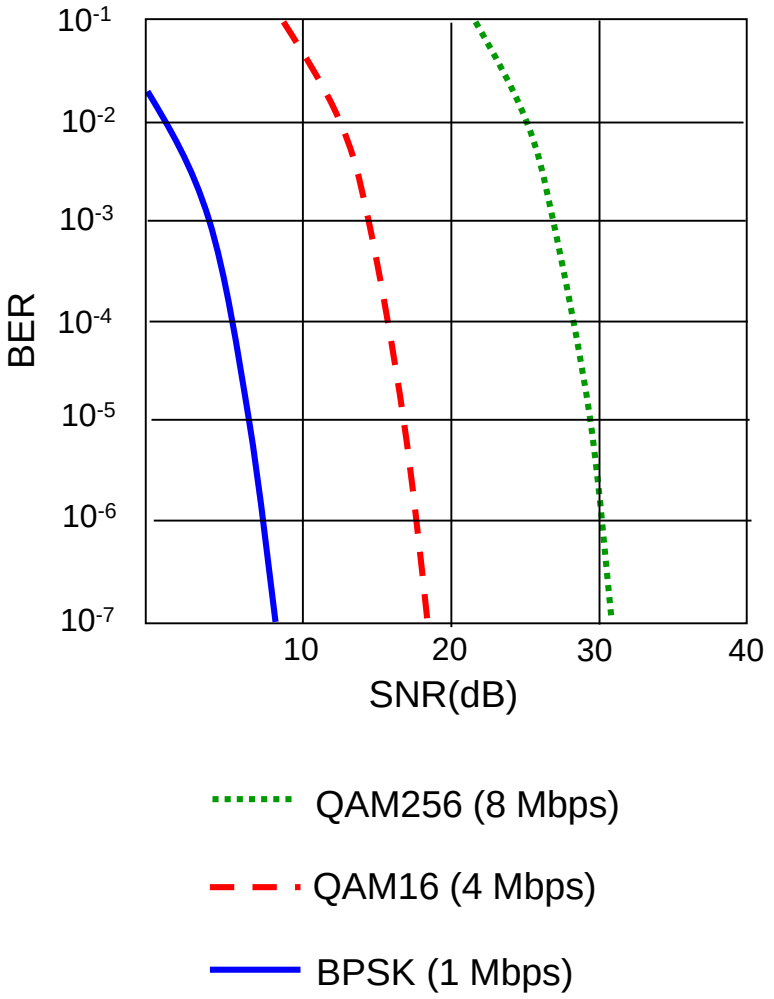

Wireless network characteristics

Multiple wireless senders and receivers create additional problems (beyond multiple access):

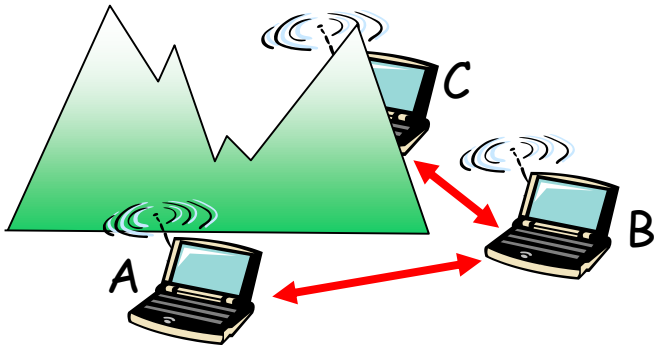

Hidden terminal problem

- B, A hear each other
- B, C hear each other
- A, C can not hear each other

means A, C unaware of their interference at B

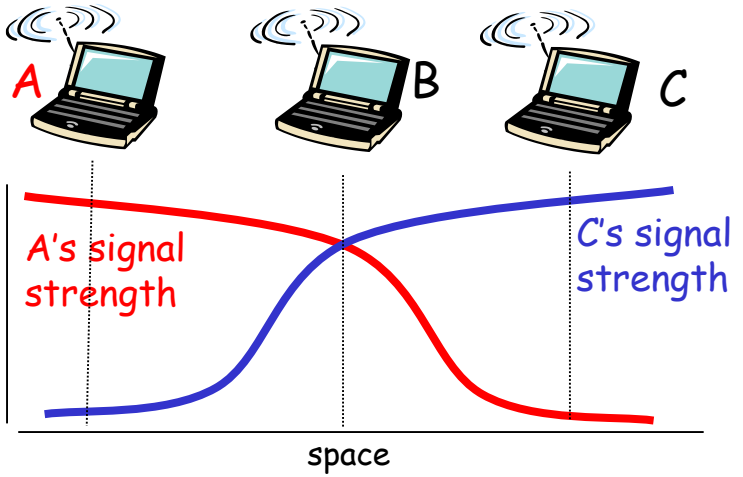

Signal attenuation:

- B, A hear each other
- B, C hear each other
- A, C can not hear each other interfering at B

Chapter 6 outline

6.1 Introduction

Wireless

- 6.2 Wireless links, characteristics
- 6.3 IEEE 802.11 wireless LANs ("wi-fi")

IEEE 802.11 Wireless LAN

- 802.11b
  - 2.4-2.5 GHz unlicensed spectrum
  - up to 11 Mbps
  - direct sequence spread spectrum (DSSS) in physical layer
    - all hosts use same chipping code
- 802.11a
  - 5-6 GHz range
  - up to 54 Mbps
- 802.11g
  - 2.4-2.5 GHz range
  - up to 54 Mbps
- 802.11n: multiple antennae
  - 2.4-5 GHz range
  - up to 200 Mbps

- all use CSMA/CA for multiple access
- all have base-station and ad-hoc network versions

802.11 LAN architecture

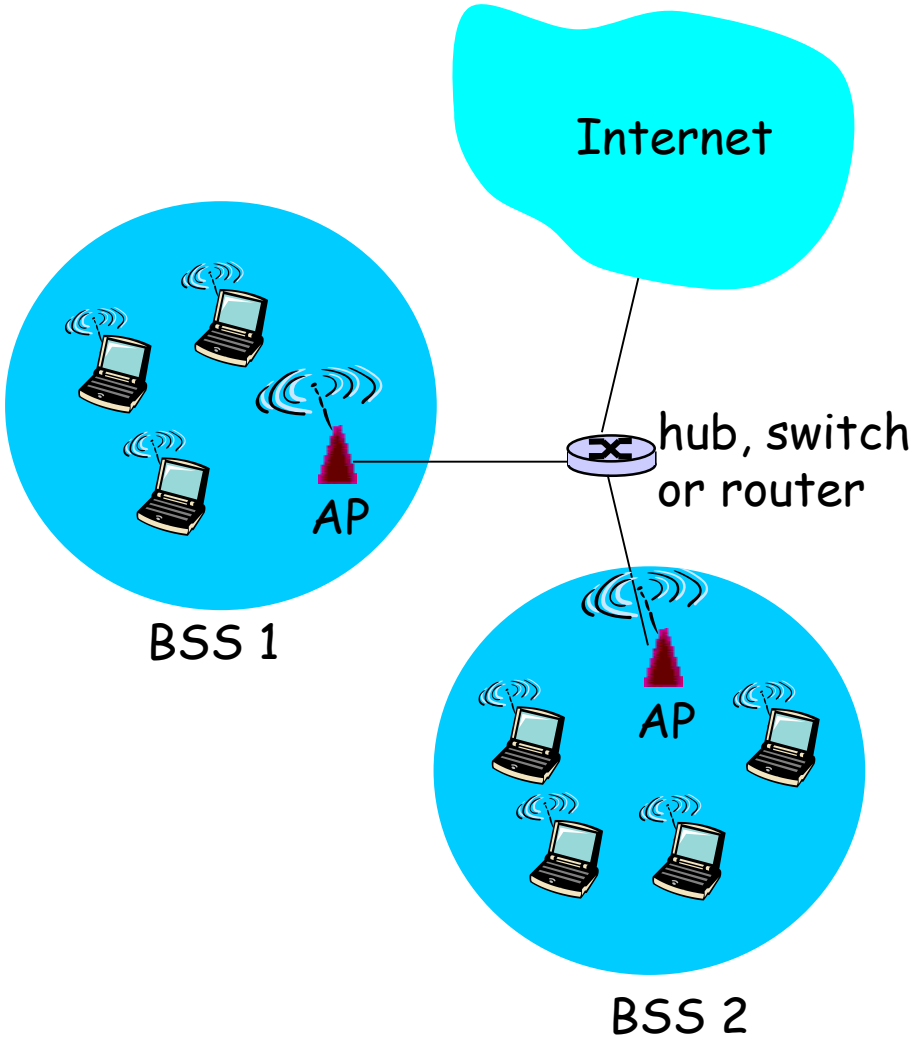

- wireless host communicates with base station
  - base station = access point (AP)
- Basic Service Set (BSS) (aka "cell") in infrastructure mode contains:
  - wireless hosts
  - access point (AP): base station

802.11: Channels, association

- 802.11b: 2.4GHz-2.485GHz spectrum divided into 11 channels at different frequencies
  - AP admin chooses frequency for AP
  - interference possible: channel can be same as that chosen by neighboring AP!
- host: must *associate* with an AP
  - scans channels, listening for *beacon frames* containing AP's name (SSID) and MAC address
  - selects AP to associate with
  - may perform authentication [Chapter 8]
  - will typically run DHCP to get IP address in AP's subnet

802.11: passive/active scanning

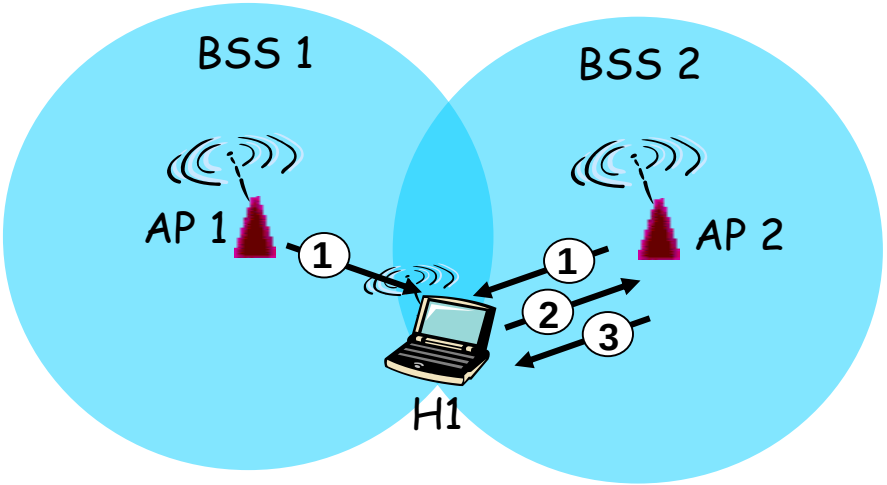

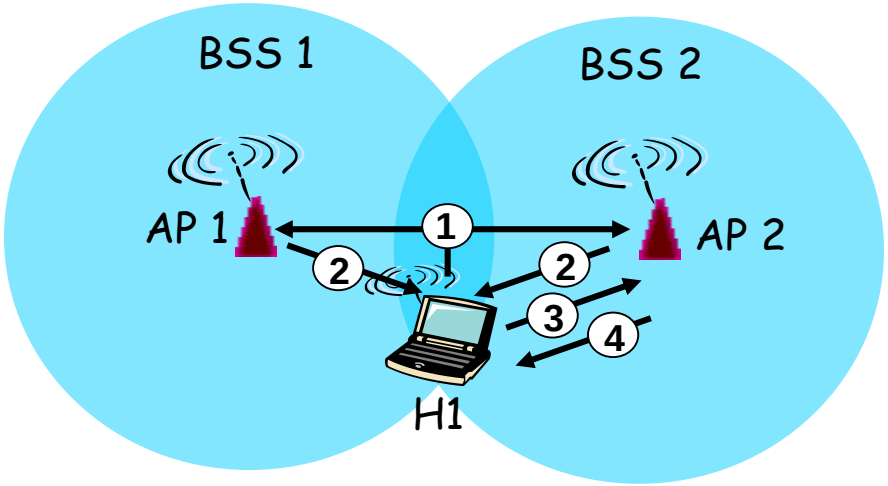

Passive Scanning:

(1) beacon frames sent from APs
(2) association Request frame sent: H1 to selected AP
(3) association Response frame sent: H1 to selected AP

Active Scanning:

(1) Probe Request frame broadcast from H1
(2) Probes response frame sent from APs
(3) Association Request frame sent: H1 to selected AP
(4) Association Response frame sent: H1 to selected AP

IEEE 802.11: multiple access

- avoid collisions: 2+ nodes transmitting at same time
- 802.11: *CSMA - sense before transmitting*
  - don't collide with ongoing transmission by other node
- 802.11: *no* collision detection!
  - difficult to receive (sense collisions) when transmitting due to weak received signals (fading)
  - can't sense all collisions in any case: hidden terminal, fading
  - goal: *avoid collisions:* CSMA/C(ollision)A(voidance)

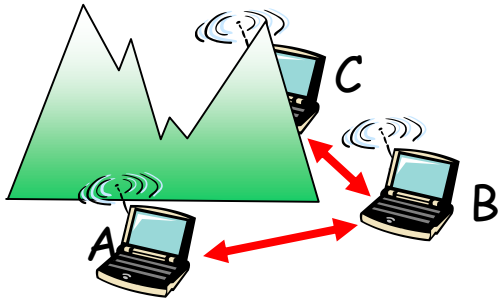

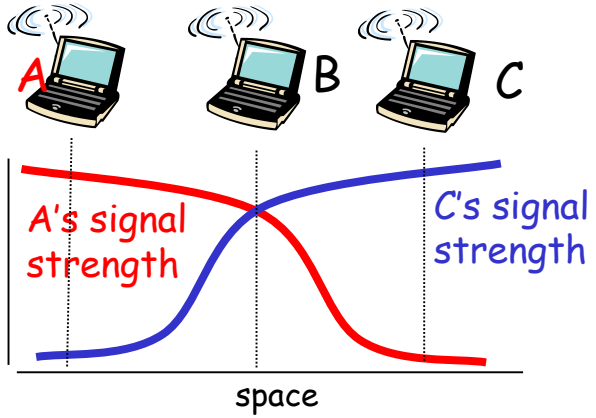

IEEE 802.11 MAC Protocol: CSMA/CA

802.11 sender

1 if sense channel idle for **DIFS** then

transmit entire frame (no CD)

2 if sense channel busy then

start random backoff time

timer counts down while channel idle

transmit when timer expires

if no ACK, increase random backoff interval, repeat 2

802.11 receiver

- if frame received OK

return ACK after **SIFS** (ACK needed due to hidden terminal problem)

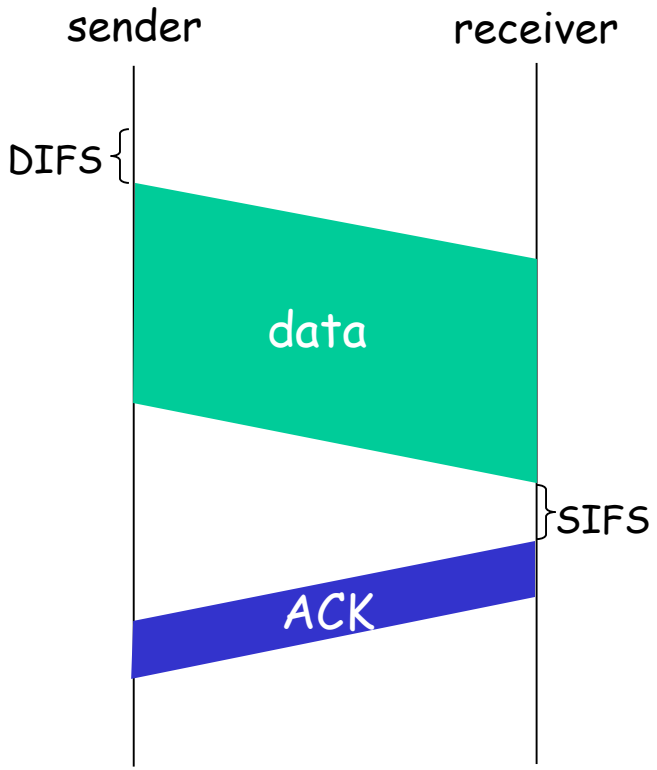

Basic access in absence of collisions

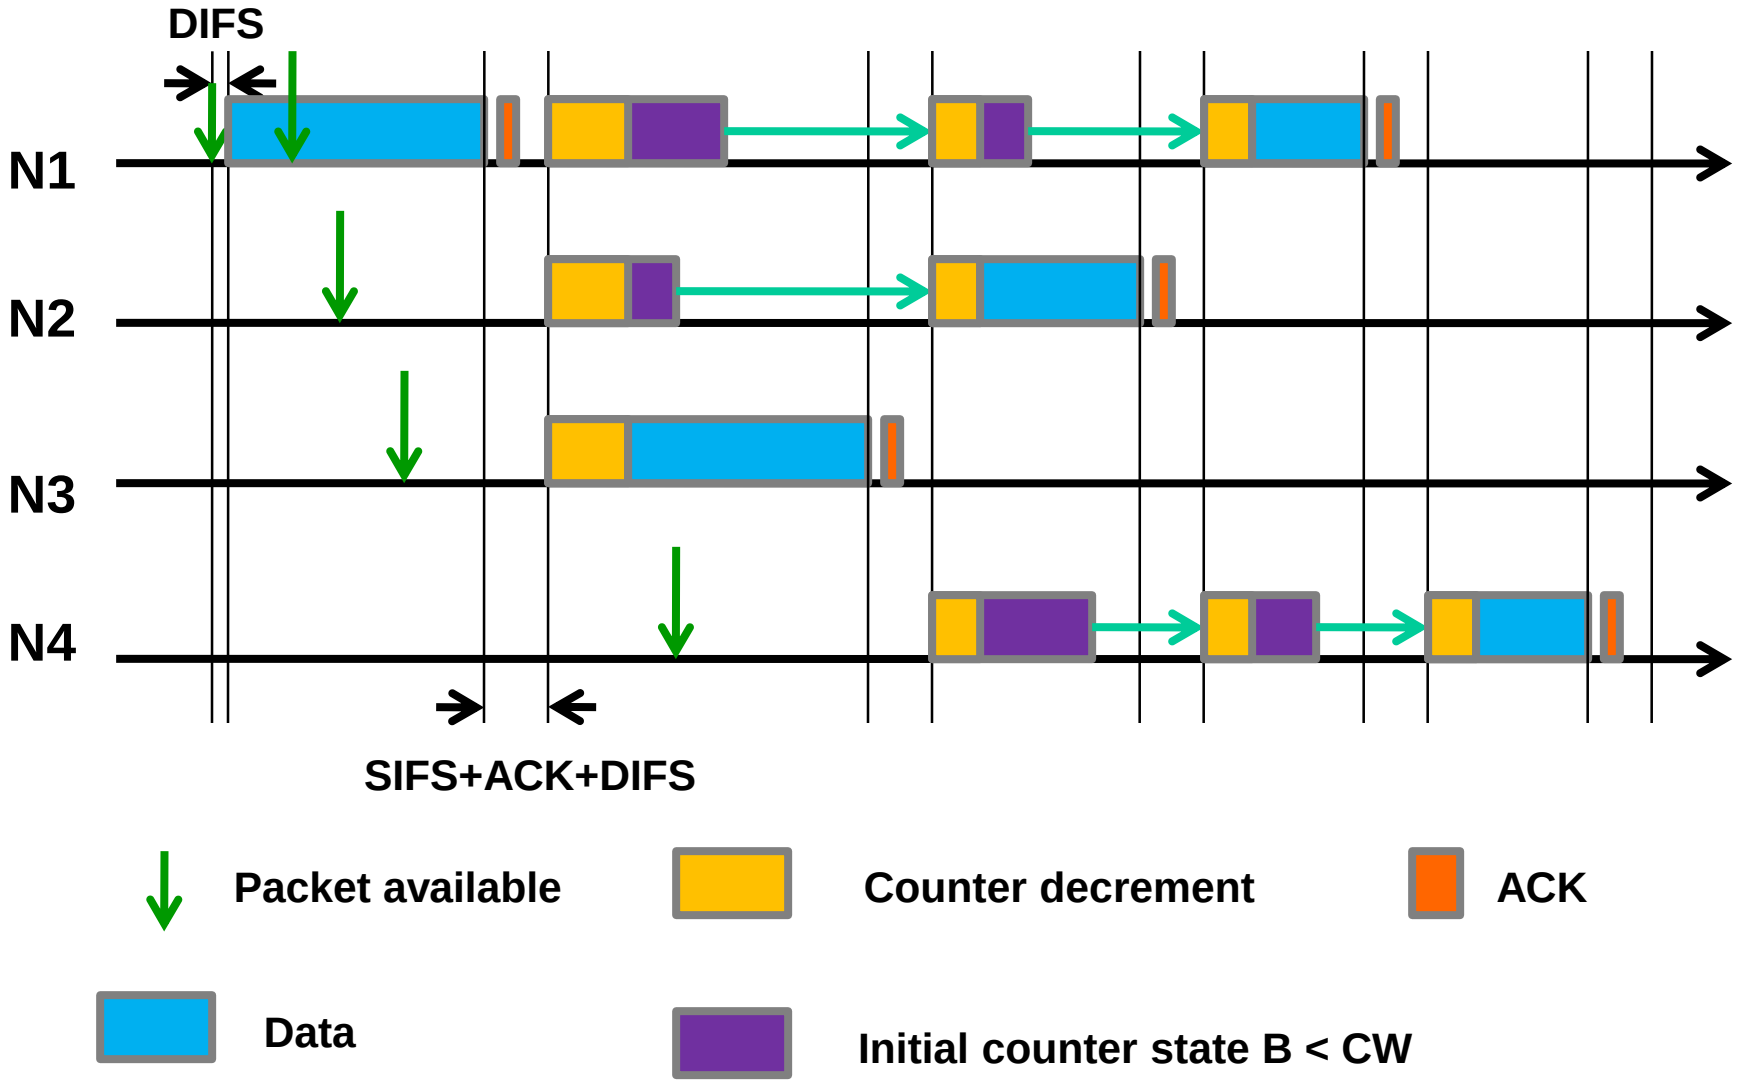

Binary random backoff

- initial counter state:
  - $B = U[0, CW - 1]$
- contention window size:

$$CW = \begin{cases} 2^k CW_{\min} & k < \hat{k} \\ CW_{\max} & k \geq \hat{k} \end{cases}$$

- example: 802.11b DSSS

CW_{min}	32
$\hat{k}$	5
CW_{max}	1024

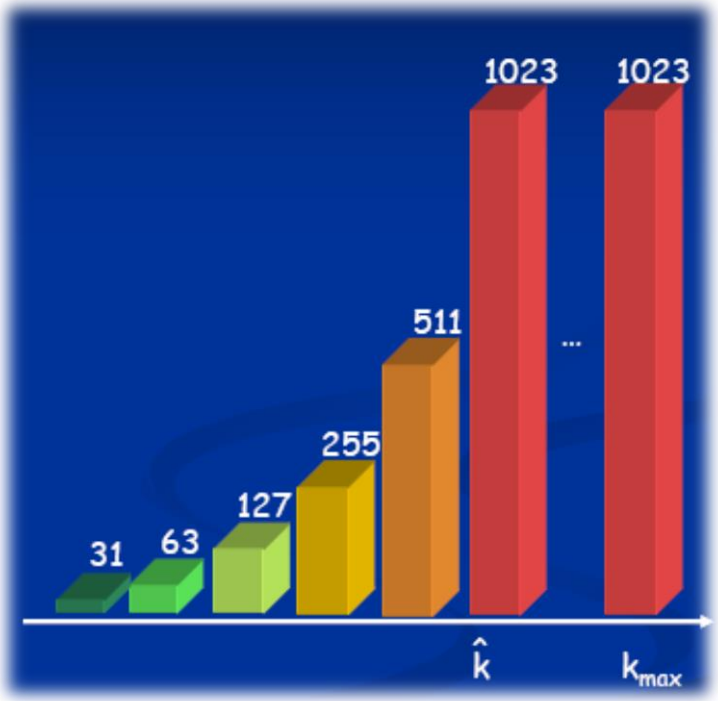

Avoiding collisions (more)

idea: allow sender to "reserve" channel rather than random access of data frames: avoid collisions of long data frames

- sender first transmits *small* request-to-send (RTS) packets to BS using CSMA
  - RTSs may still collide with each other (but they're short)
- BS broadcasts clear-to-send CTS in response to RTS
- CTS heard by all nodes
  - sender transmits data frame
  - other stations defer transmissions

avoid data frame collisions completely using small reservation packets!

RTS/CTS access method

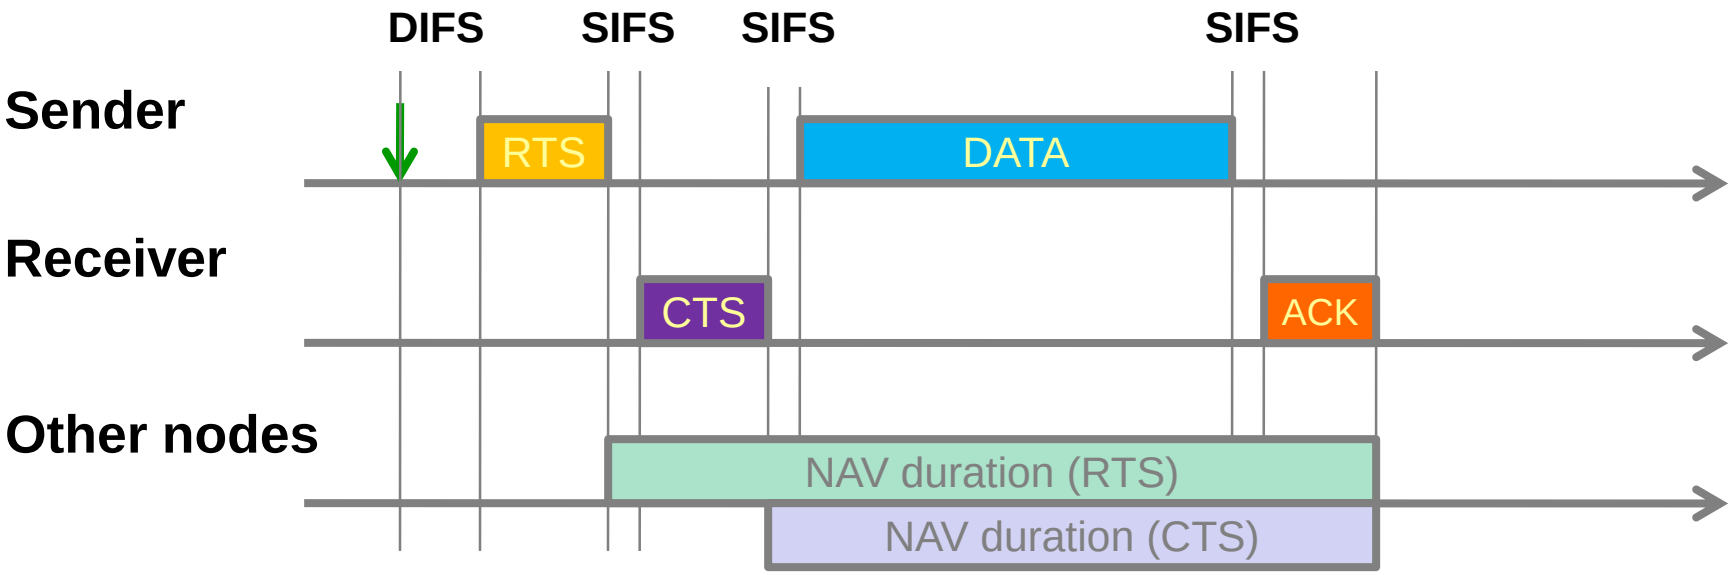

Collision Avoidance: RTS-CTS exchange

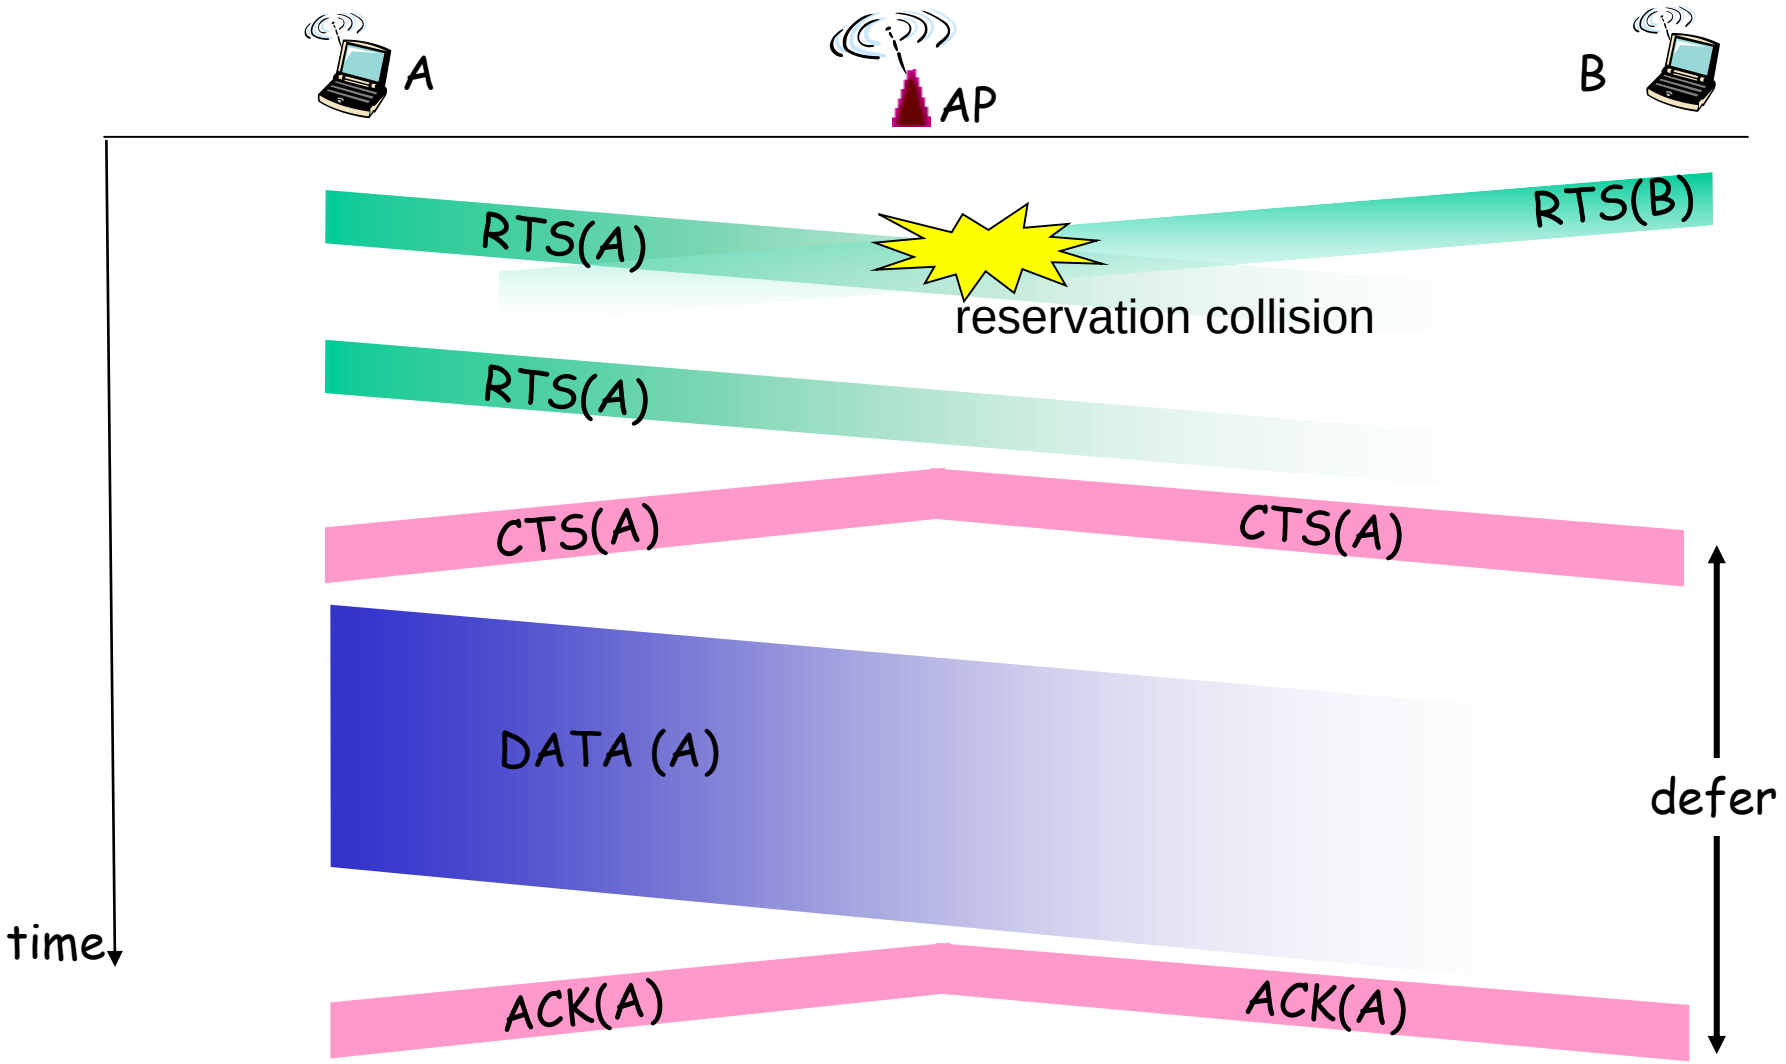

802.11 frame: addressing

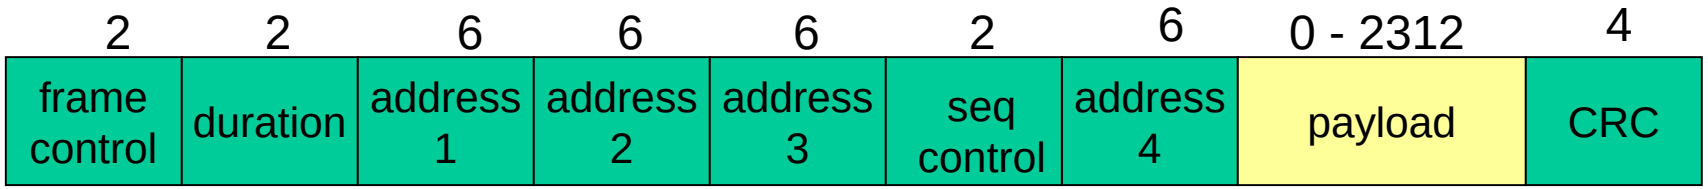

Address 1: MAC address of wireless host or AP to receive this frame

Address 2: MAC address of wireless host or AP transmitting this frame

Address 3: MAC address of router interface to which AP is attached

Address 4: used only in ad hoc mode

802.11 frame: addressing

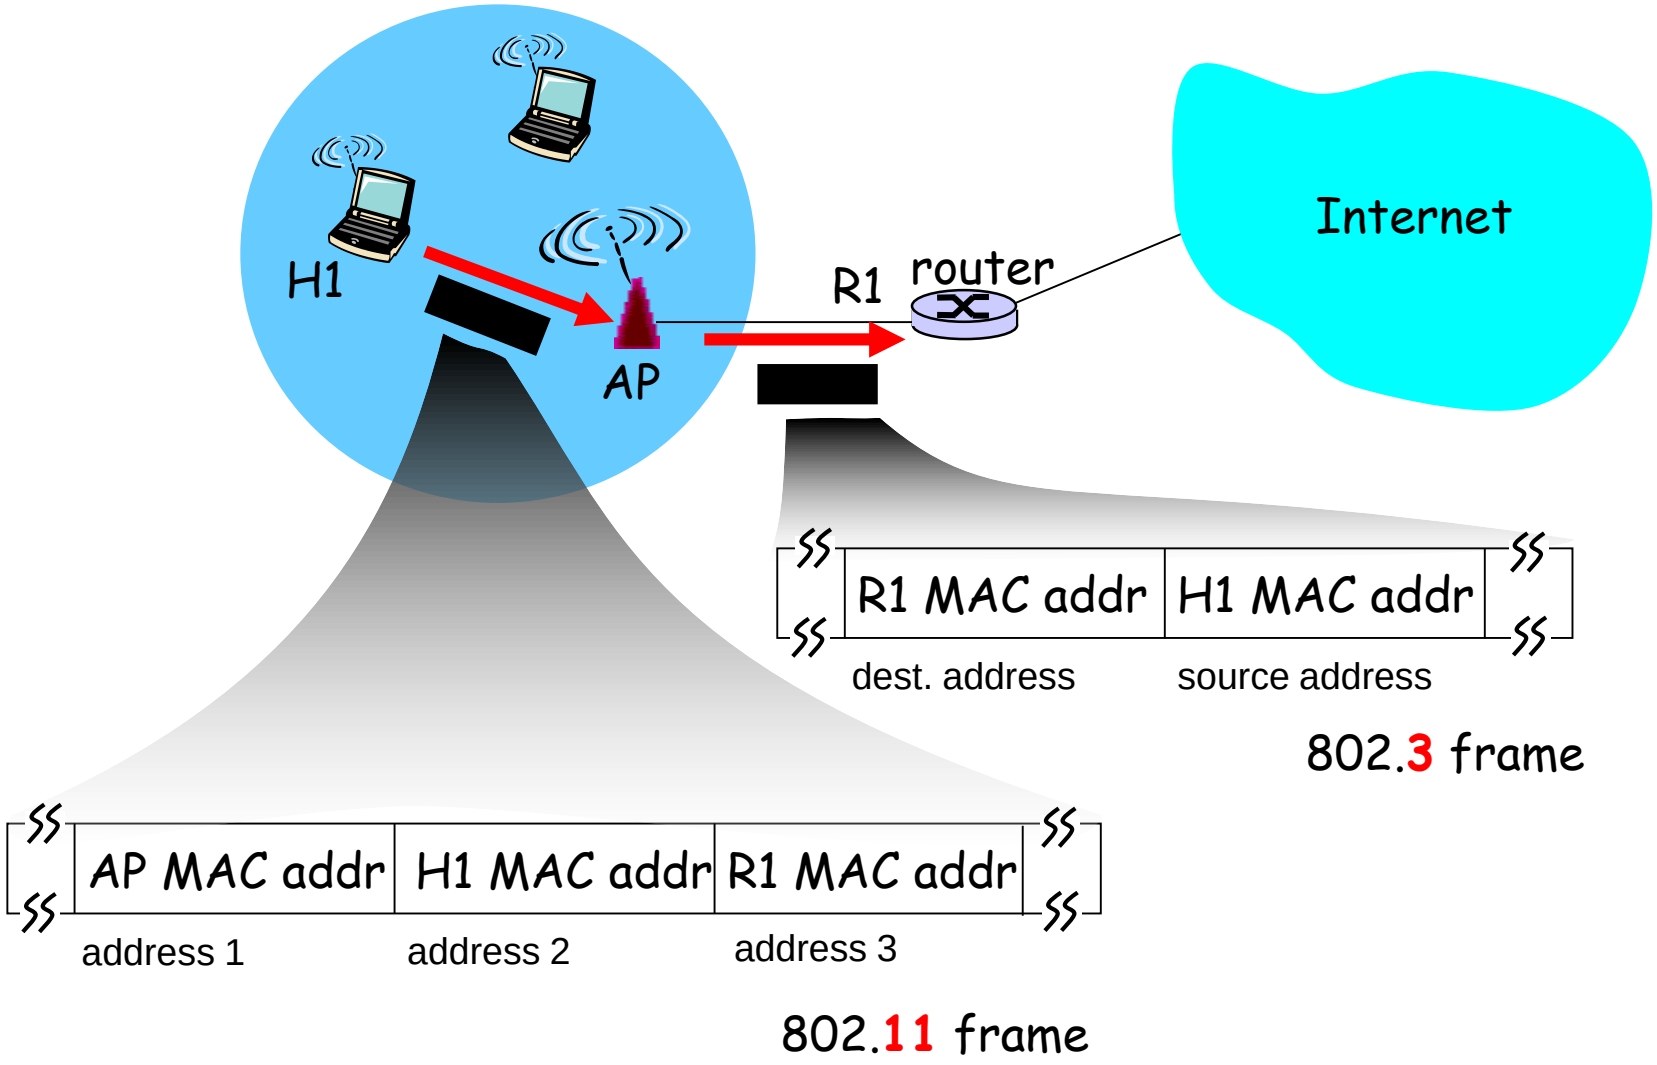

802.11 frame: more

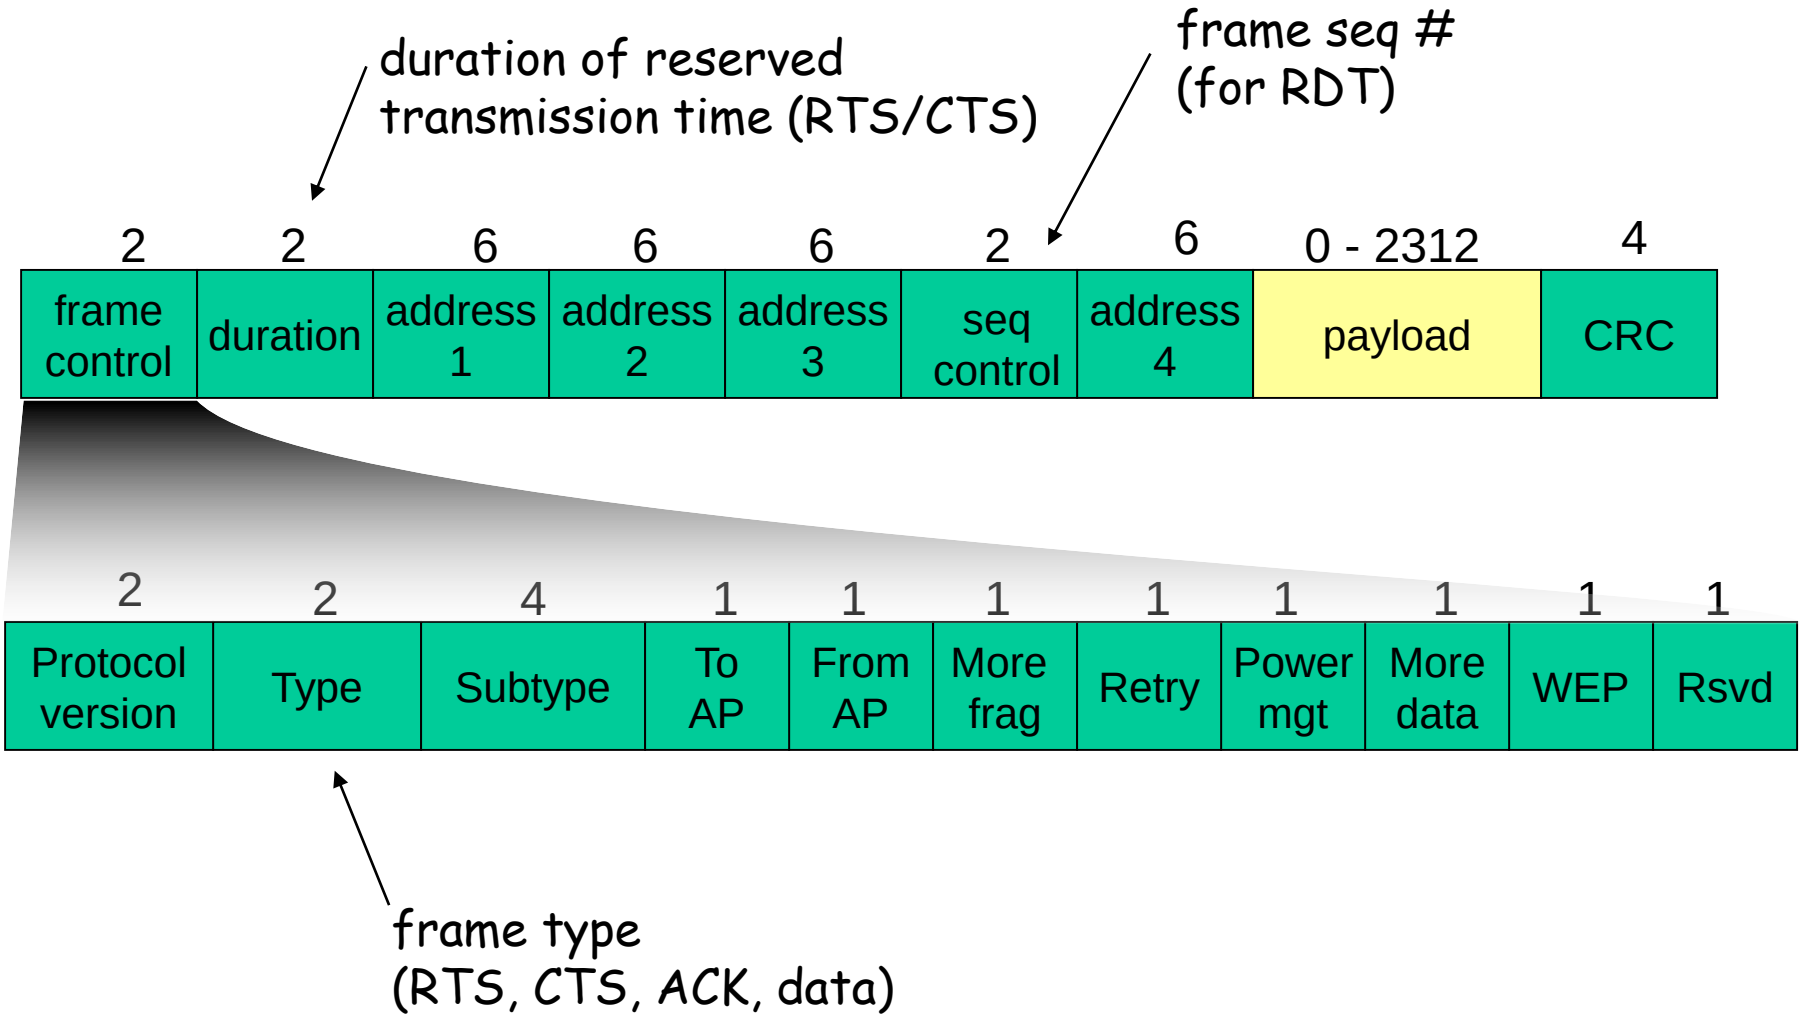

802.11: mobility within same subnet

- H1 remains in same IP subnet: IP address can remain same
- switch: which AP is associated with H1?
  - self-learning (Ch. 5): switch will see frame from H1 and "remember" which switch port can be used to reach H1

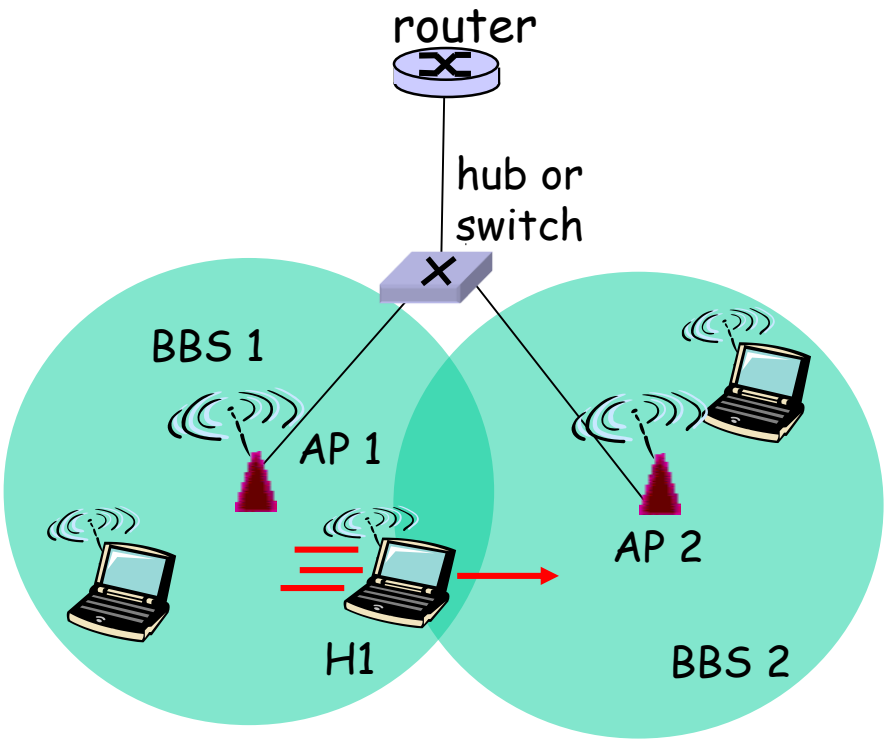

Chapter 6 Summary

Wireless

- wireless links:
  - capacity, distance
  - channel impairments
- IEEE 802.11 ("wi-fi")
  - CSMA/CA reflects wireless channel characteristics