

MAVLINK / TELEMETRY OVER ELRS

firmware of RX and TX > 3.5.1

backpack flash 1.5.1 in TX


after this you will get mavlink protocol option in tx as well as rx.

TX configuration when RX is off : Sys>ExpressLRS


step1. change packet rate to 333HZ




step2. Change Link mode to MAVLink

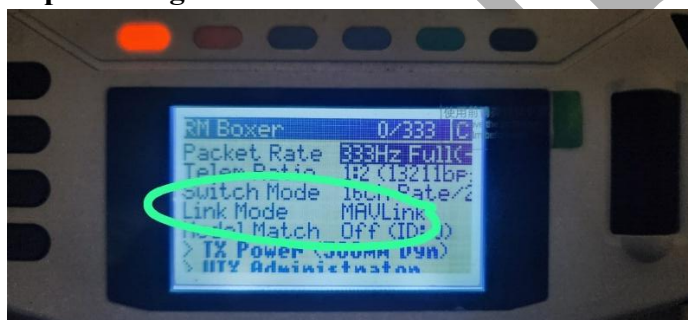


step3. Backpack>Telemetry>WIFI

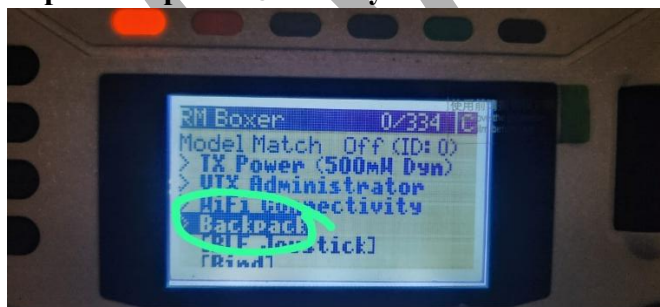

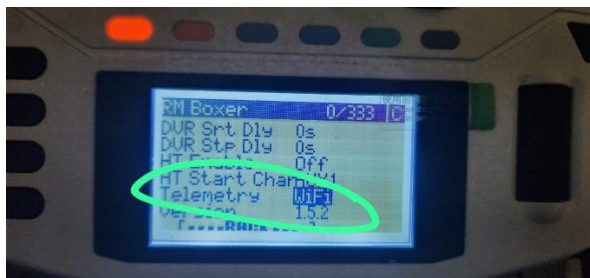


TX configuration when RX is on

Step1. Sys>ExpressLRS>Other Devices> RM ER8(#click on rx name)>Protocol>MAVLink

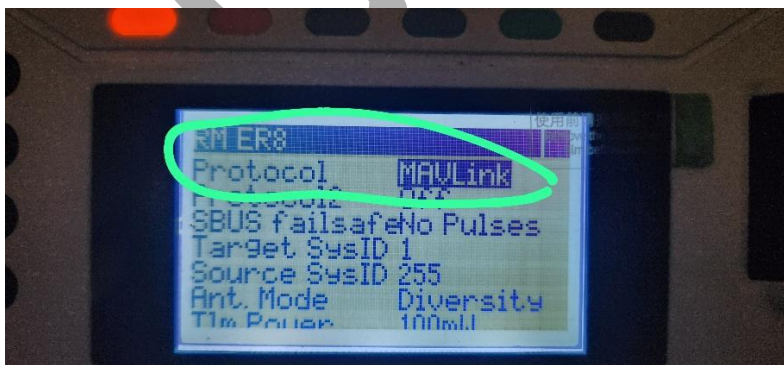

step2. Wifi connectivity>enable backpack wifi

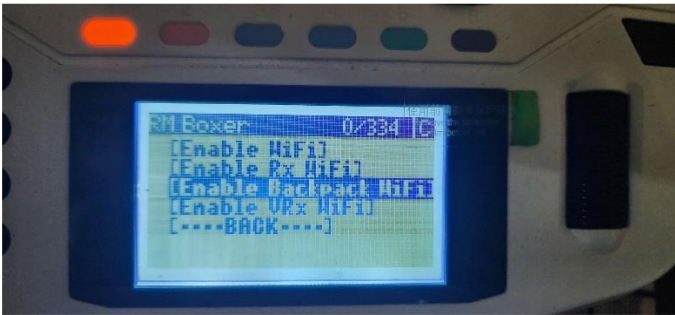

MISSION PLANNER Configurations

set these params according to below snippets

RC_OPTIONS	288	32			RC input options
RSSI_TYPE	5	0		TelemetryRadioRSSI	Radio Receiver RS
SERIAL5_BAUD	460	57		1:1200 2:2400 4:4800	The baud connect
SERIAL5_OPTIONS	0	0			Control o Half Dupl RX and T
SERIAL5_PROTOCOL	2	-1		MAVLink2	Control w

The first connection will take longer, subsequent connections will be faster.