


Bottom copper DON'T mirror this! (not needed for bottom layer)

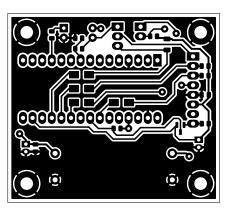


top fab Mirrored (for thermotransfering)

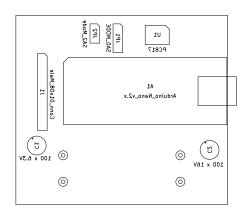

With small holes for drilling (usefull for hand drilling)

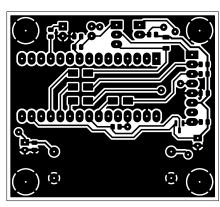

top fab

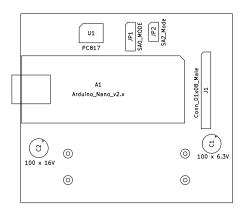

Mirrored bottom silkscreen (for assembly assistance)

