

Manual

Rev. A2



Document Change History

Revision	Date	Change
A1	2015.12.07	Documentation for first public release (v1.0.0) of VVC Framework
A2	2016.01.20	Updated for open source release (v1.0.1) of VVC Framework. Removed section 1.4 Encrypted Code since the code is open source now.

Acronyms and Abbreviations

Acronym / Abbreviation	Definition
	Bus Functional Model - Basically a set of procedures that as a total can mimic the behaviour of a physical interface like a UART or AXI4-Lite.
BFM	- A BFM for a UART would typically consist of minimum two procedures: Transmit() and Receive(). Additional procedures could be added, like Expect(), which would typically call Receive() and check the received data against the expected data.
	 BFMs here are only meant to feed or get data in/out of a physical interface via a given legal variant of the required protocol. Hence protocol checking is not included unless otherwise noted.
CDM	Command Distribution Method In VVC FRAMEWORK this is almost the same as a BFM, with one single difference. The BFM is executed towards the physical DUT immediately, whereas a CDM is always used to only distribute executable commands to a VVC for execution there (often via BFM inside the VVC) – immediately or later. Hence a CDM is never wiggling signals on a physical DUT.
DUT	Device Under Test (meaning Verification in this case)
PIF	Processor InterFace
SBI	Simple Bus Interface. A single cycle bus interface as simple as can be, using CS, ADDR, RD, WR, RD_DATA, WR_DATA and optional READY.
ТВ	TestBench
UART	Universal Asynchronous Receiver/Transmitter
UVVM	Universal VHDL Verification Methodology
VIP	Verification IP. Used as a common notation for all types of verification IP. Often includes a BFM and VVC. May also include additional verification IP.
VVC	VHDL Verification Component

UVVM VVC Framework Manual



About Bitvis

Bitvis was founded in 2012 as a Design Centre highly specialized in FPGA and embedded software development. Today we are the leading independent design centre in Norway within our field.

Bitvis is helping customers with development of Embedded software and FPGA. We help in any part of the process – from concept to final product. Clients range from subsea applications to industrial and consumer markets, via military, encryption and within communication all the way into space.

Bitvis takes pride in sharing our knowledge and experience within the embedded systems community and universities. We also regularly give presentations at various seminars – like FPGA-forum in Trondheim and the FPGAworld Conference in Stockholm. For the industry we have our 'Accelerating FPGA Development' course, but we also give technical presentations on specific issues to selected customer on-site.

To improve the quality and reduce the development time, Bitvis is continuously developing Tools and IP. These Tools and IP allow Bitvis to perform a much better service for our customers, and they also make it possible for our customers to improve their own development projects.

UVVM VVC Framework, as presented herein is the natural superstructure to our UVVM Utility Library for FPGA and ASIC verification.

(UVVM Utility library is an open source VHDL library that provides a structured logging and alert mechanism for making good simulation transcripts, progress reports and log-files. It also provides checking and await procedures allowing far more efficient development of testbenches, resulting in saved time and a better product.)

About UVVM VVC Framework

UVVM VVC Framework is an optional part of UVVM (Universal VHDL Verification Methodology) and provides support to implement a very structured testbench architecture. This architecture allows significant efficiency improvement for the verification of modules or FPGAs with two or more interfaces, where these interfaces need to be controlled or monitored simultaneously – typically in order to reach corner cases inside the DUT (Device Under Test) – or just to get a better overview and control over your stimuli, checkers and monitors.

VVC Framework will be used as a short form for UVVM VVC Framework. Similarly Utility Library (or sometimes UVVM Util) will be used as a short form for UVVM Utility Library.

VVC Framework was originally intended as a system and methodology to detect cycle related corner cases by allowing skewing of actions on one interface with respect to another in an easily understandable manner. This resulted in the testbench architecture and mechanisms needed to support the very structured simultaneous control of stimuli and checks on multiple interfaces.

The significantly improved testbench overview, maintainability, extendibility and reuse friendliness of this system has however also proved to be extremely valuable to detect

Manual



most other types of corner cases. Thus VVC FRAMEWORK is an excellent platform for verifying any complex VHDL based module or FPGA.

Please see the attached PowerPoint 'The_critically_missing_VHDL_TB_feature.ppsx' for a presentation on cycle related corner cases and the need for a far more structured verification approach.

Prior to VVC FRAMEWORK, verification of delta cycle related corner cases was handled as follows:

- In many cases not handled at all, but ignored due either to lack of knowledge or ignoring the problem - just hoping or assuming that the design is correct by construction
- Hoping or assuming the corner cases will be detected in the lab
- Making an ad-hoc, unstructured testbench
- Making a relatively structured, but far too complex testbench over which it is really difficult to get a good overview

There were in fact no good solutions that provided a good structure, a good sequencer-VVC communication, a good overview and a good methodology.

The consequences of this have been:

- Inefficient testbench development, extensions, modifications
- Difficult to reuse TB parts in a project or to share the TB itself
- High risk of missing critical corner cases

With VVC FRAMEWORK this has changed and we can now achieve:

- Major time saving (several man-weeks or man-months for medium complexity FPGAs)
- Significant quality improvement for end product
- A new world for overview, maintainability, extendibility and reuse

The PowerPoint presentation referenced above is assumed read before going further in this manual.

Please note that VVC Framework is using UVVM Utility Library (UVVM Util) as a basic testbench infrastructure with support for logging, alert handling, verbosity control, checkers, awaits, etc. UVVM Util is provided with the full VVC FRAMEWORK download, but may also be downloaded separately – to make it simpler for users who do not need the full VVC FRAMEWORK.

UVVM License and Disclaimer may be found in section 5

Manual



Table of Contents

DOCL	JMENT CHANGE HISTORY	2
ACRO	NYMS AND ABBREVIATIONS	2
ABOU	IT BITVIS	3
ABOU	IT UVVM VVC FRAMEWORK	3
1	QUICK START GUIDE	7
1.1	Installation	. 7
1.1.1	System Requirements	. 7
1.1.2	Bundled Libraries	. 7
1.1.3	Installing and compiling VVC FRAMEWORK	. 8
1.2	Support	. 9
1.3	Troubleshooting	. 9
1.4	Patents	. 9
2	UNDERSTANDING THE VVC FRAMEWORK	10
2.1	Prerequisites	10
2.2	Understanding the VVC FRAMEWORK testbench architecture	10
2.2.1	Test harness and hierarchy	11
2.2.2	VVC FRAMEWORK initialisation process	11
2.3	Understanding the VVC FRAMEWORK test sequencer	11
2.3.1	Command Distribution Methods (CDM) vs BFM	11
2.3.2	Target VVC for CDMs	12
2.3.3	Queuing	14
2.3.4	Test sequencer example	14
2.4	Test sequencer considerations	16
2.5	Understanding the sequencer-VVC communication	16
2.5.1	Signalling between sequencer and VVCs	17
2.5.2	Distributing a command from the sequencer	18
2.6	Sequencer direct access to VVC configuration and status	19
3	USING THE VVC FRAMEWORK	20
3.1	Prerequisites	20
3.2	Making your own testbench architecture	20
3.3	Making your own VVC FRAMEWORK test sequencer	20
3.4	Making your own VVC and VVC methods	20
3.5	Library and package hierarchy for VVCs	21
3.6	Library and package hierarchy for the central test sequencer	23

Manual



3./	More on CDMs	. 24
3.8	Other implementation details	. 24
	DEBUGGING	
	Increasing the verbosity	
4.2	Recommended verbosity	. 25
	For regression tests	
4.2.2	Programme Progra	. 25
4.2.3	For detailed debugging	. 26
5	LICENSE	.27
5.1	BITVIS VVC FRAMEWORK LICENSE AGREEMENT	. 27
5.2	BITVIS UVVM Utility Library LICENSE AGREEMENT	. 27

Manual



1 Quick Start Guide

This Quick Start Guide will briefly guide you through the installation process. For detailed technical reference see section 2.

1.1 Installation

1.1.1 System Requirements

There are no system requirements other than a VHDL 2008 compatible simulator.

Note:

UVVM requires a VHDL 2008 compatible simulator. Currently only the simulators from Aldec and Mentor Graphics have sufficient VHDL 2008 support.

UVVM has been tested with the following simulators:

- Modelsim version 10.3d
- Riviera-PRO version: 2015.10.85

It should be notes that Python 3 is required if you want to execute the vvc_generator or vvc_name_modifier script to make new VVCs in a simple way.

1.1.2 Bundled Libraries

VVC FRAMEWORK is bundled with libraries as listed in Table 1.

Table 1 Libraries bundled with VVC FRAMEWORK.

Library	Description	Location	
	UVVM Utility Library is an open source VHDL test bench (TB) infrastructure library for verification of FPGA and ASIC. Used by VVC FRAMEWORK as a common testbench infrastructure.		
UVVM Utility Library	For more information on UVVM Utility Library and latest release please visit http://www.bitvis.no/products/bitvis-utility-library/	<install_dir>/uvvm_util</install_dir>	
	For UVVM v0.2.0 the UVVM Utility Library is compatible with Bitvis Utility Library (for VHDL 2008), and hence the current documentation for Bitvis Utility Library still applies.		
	New features of UVVM Utility Library will be described soon.		
UVVM VVC Framework	The library for the VVC Framework with the functionality described in this document.	<install_dir>/uvvm_vvc_framework</install_dir>	

Manual



bitvis_vip_sbi	VIP including a BFM and VVC for a simple bus interface (SBI). This VVC is intended as a template for writing new VVCs and for understanding the VVC functionality. This library is also used in the provided testbench example.	<install_dir>/bitvis_vip_sbi</install_dir>
bitvis_vip_uart	VIP including a BFM and VVC for a simple UART interface. This VVC may be used as a template for writing new VVCs for multichannel interfaces. This library is also used in the provided testbench example.	<install_dir>/bitvis_vip_uart</install_dir>
bitvis_uart	This is a simple UART design that is being used as a DUT for the provided example testbench	<install_dir>/bitvis_uart</install_dir>
(bitvis_vip_axilite) Will be released early 2016	VIP including BFM and VVC. This simple AXI4-Lite BFM and VVC is provided as a kick start for users to make their own testbenches using VVC FRAMEWORK, as many designs today have an AXI4-lite interface. Note: The BFM is only available as a part of the VVC. Protocol checking not included)	<install_dir>/bitvis_vip_axilite</install_dir>
(bitvis_vip_avalon_mm) Will be released early 2016	VIP including BFM and VVC. This simple Avalon MM BFM and VVC is provided as a kick start for users to make their own testbenches using VVC FRAMEWORK, as many designs today have an Avalon MM interface. Note: The BFM is only available as a part of the VVC. Protocol checking not included)	<install_dir>/bitvis_vip_avalon_mm</install_dir>

1.1.3 Installing and compiling VVC FRAMEWORK

- 1. Download the VVC Framework zip-file from www.bitvis.no/products (The beta version requires you to send a request)
- 2. Extract the downloaded zip-file to a directory of your choice, making sure that all the directories for the various parts of VVC FRAMEWORK, VVCs and Testbench are located as given in the table above
- 3. Compile all files as given in the respective QuickReferences for all parts of the VVC FRAMEWORK and VVCs (*1)

If you want to run the provided testbench also do the following:

- 4. Compile the DUT and TB for the UART as given in the compile scripts there (*1)
- 5. Elaborate and Run the testbench for the UART. (*1)
- *1: For Modelsim users all compilation, elaboration and running the simulation could be handled automatically by running the provided scripts in the various directories. In the script catalogue of the UART there are hierarchical scripts to run all necessary scripts. If you import the .mpf-file in the UART sim-directory the script files will be shown inside

Manual



the Modelsim project environment, and all you have to do is to right click the scripts and execute them.

1.2 Support

For support or bug reports please send email to **support@bitvis.no**.

1.3 Troubleshooting

Table 2 List of known issues and solutions

Problem	Reason	Solution

1.4 Patents

There are patent issues pending for several parts of VVC FRAMEWORK.



2 Understanding the VVC Framework

Anyone using this system should read this part prior to making any modifications to the provided examples and definitely before making your own VVC FRAMEWORK based testbench.


2.1 Prerequisites

It is strongly recommended before you commence that:

 You have gone through the introduction PowerPoint presentation for VVC FRAMEWORK See 'The_critically_missing_VHDL_TB_feature.ppsx'

2.2 Understanding the VVC FRAMEWORK testbench architecture

The VVC FRAMEWORK testbench architecture is simple to understand (see the two different testbench approaches in Figure 1.

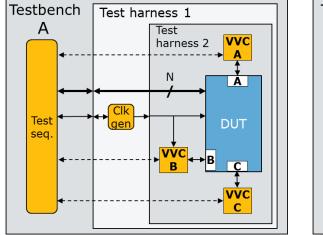

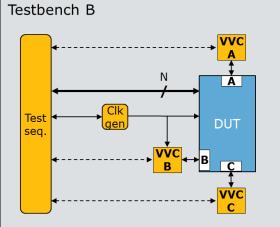


Figure 1: Testbench architecture

In both testbenches the interfaces on the DUT (here A, B, C) are connected to the corresponding verification components (VVCs A, B, C) as any other inter entity connections. Any support process like for instance a clock generator is connected to the DUT as normal. The clock generator could be totally independent - or controlled from the sequencer as indicated here.

The figure shows a DUT with three different interfaces. In lots of systems the DUT may have several instances of the same interface, e.g. interface B. In this case two dedicated instances of VVC B (VVC_B, instance 1 and 2) must be connected to the two DUT B interfaces (B, instance 1 and 2). To differentiate between different instances of the same VVC an "Instance index" is applied as a generic input to the VVC, such that in this case one would be instance 1 and the other instance 2.

Manual



Note that no explicit connection is needed from the sequencer to the VVCs down the hierarchy – as these connections are global. They are shown as dotted lines in the figure.

2.2.1 Test harness and hierarchy

In testbench A, a test harness hierarchy is implemented to include the complete verification environment other than the sequencer. Testbench A indicates that you may indeed apply any hierarchy you want, or you can skip it all together as shown in testbench B. The global connections between the sequencer and the VVCs allow any hierarchy to be very easily added or removed. The ideal testbench would be one where all DUT interfaces are controlled via VVCs. In such a testbench there would be no signal between the hierarchical levels in the testbench, and the only signals needed would be the ones connecting the VVCs to the DUT.

The test sequencer communicates with the VVCs via global connections defined in VHDL packages. This will be explained in section 2.5. At this moment it is important to understand that via this communication the sequencer may distribute various commands to any VVC, and that there is a command queue inside all VVCs. These queues allow the sequencer to distribute lots of commands at the same time to the same VVC, and the commands will be executed by the VVC in the order they have been received from the sequencer; one following the other, immediately after the previous command has been executed.

2.2.2 VVC FRAMEWORK initialisation process

The concurrent procedure 'initialize_uvvm' is required to assure that the initialisation of the complete system is handled properly. This affects the VVC initialisation and handshake setup, and also assures that the different parts of VVC FRAMEWORK are synchronized at the start. The procedure may be located anywhere in the testbench, but it is recommended to do this somewhere in the test harness or at the upper most level in the testbench. (As it is a concurrent procedure it must be located in an architecture – as a process. I.e. not inside a process)

2.3 Understanding the VVC FRAMEWORK test sequencer

In a really simple testbench the central test sequencer will handle all the DUT interfaces directly. This would be like testbench B in Figure 1, but without the VVCs. Hence the indicated N signals would also connect to DUT interfaces A, B and C directly.

2.3.1 Command Distribution Methods (CDM) vs BFM

Hopefully even a simple testbench will be using BFMs to access the interfaces, - as any other approach would be extremely inefficient. A simple BFM procedure call for writing to a register inside the DUT via a bus interface could typically look like the code in Figure 2.

sbi write(C ADDR BAUDRATE, C BAUDRATE 10M); -- E.g. C_ADDR_BAUDRATE= x"1A",C_BAUDRATE_10M= x"15"

Figure 2: BFM procedure for writing to a register

This procedure when called from the sequencer will wiggle the signals of the bus interface on the DUT such that the data C_BAUDRATE is written into the register at

Manual



address C_ADDR_BAUDRATE. It should be noted that while this BFM procedure is executing, the sequencer cannot do anything - as it must now just wait until the BFM procedure is finished.

To do exactly the same using a VVC FRAMEWORK based testbench with VVCs, almost exactly the same command may be called from the sequencer, as shown in Figure 3. The only difference is the additional first parameters; - the 'target' for the command – consisting of a signal triggering the VVC and an instance number. This target specifies to where (which VVC) the command is to be distributed. The trigger signal (here 'SBI_VVCT' is given the VVC name (here 'SBI_VVC') extended by 'T' for 'Target'

sbi_write(SBI_VVCT,1, C_ADDR_BAUDRATE, C_BAUDRATE_10M);

Figure 3: CDM for writing to a register

In VVC FRAMEWORK we call this procedure a 'CDM' (Command Distribution Method) just to differentiate it from a BFM procedure. The CDMs are also called 'sequencer methods'.

The result of this method will be exactly the same as for the BFM and executed at exactly the same time towards the DUT, - because all this method does is to request the VVC (SBI_VVC) to execute the corresponding BFM procedure towards the DUT.

It should be noted that all examples of BFMs and CDMs from Bitvis are slightly more advanced than the minimum BFM/CDM examples above. Our procedures have a mandatory message parameter that is used both as a comment in the sequencer code and as a transcript/log as a progress report. Our BFM/CDMs also have built in synchronization, logging, verbosity control, etc, but the implementation complexity of these features is hidden for the users and just provide more flexibility and higher value.

2.3.2 Target VVC for CDMs

As shown above for the sbi_write() CDM the target for this method is instance number 1 of SBI_VVC. I.e. the command sbi_write() with the given parameters will be distributed to SBI_VVC instance 1. The instance number of the VVC is set as a generic parameter on the VVC when instantiating it in the test harness.

Please note that some VVCs like for instance the UART has multiple channels (Rx and Tx) that operate independently. This means that a separate interpreter, queue and executor is needed for each channel, hence basically these channels need totally separate VVCs as illustrated in Figure 4. These channels however, are almost always used as a set of receiver and transmitter, and thus it makes sense to wrap the two VVCs into a single UART VVC as shown in Figure 5. Luckily from a testbench and test sequencer point of view there is no difference – as the harness can be changed as you wish and the sequencer is still connected to the leaf VVCs via the global signals.



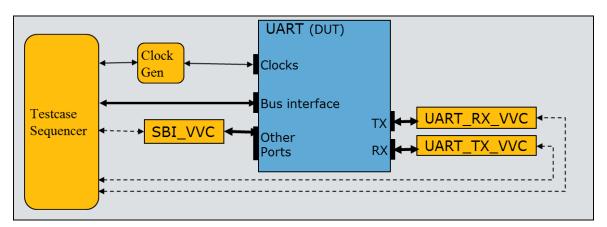


Figure 4: UART testbench using separate RX and TX VVCs

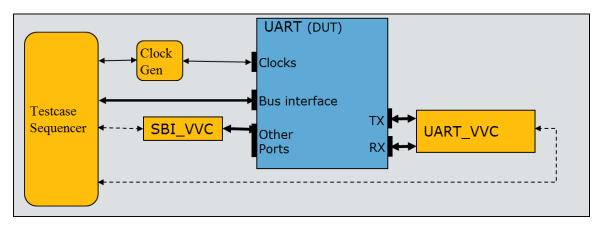


Figure 5: UART testbench using a single UART VVC

In order to support this clustering of "leaf-VVCs" into a "super-VVC", VVC FRAMEWORK allows an optional extension of the target "address" to also include the channel name.

This means that SBI_VVC, which has no channels, has a target address of VVC target signal + instance number (e.g. `SBI_VVCT, 1'), whereas UART_VVC has a target address of VVC target signal + instance number + channel name (e.g. `UART_VVCT, 1, RX', see Figure 7). Please note though that a VVC implementer has the freedom to use the channel specification as shown or set the target address as e.g. `UART_RX_VVCT, 1'. There is no limitation on this in VVC FRAMEWORK.

Example target variants in VVC FRAMEWORK (note: Shaded variants are not available in the current version, but will be available soon) are shown in Figure 6.



1. SBI_VVCT, 1	Instance number 1 of SBI_VVC
2. UART_VVCT, 4, TX	Channel Tx on Instance number 4 of UART_VVC
3. UART_VVCT, 3	Both channels on Instance number 3 of UART_VVC
4. UART_VVCT, C_ALL_INSTANCES	All instances of UART_VVC (constant = -1)
5. VVC BROADCAST, -1	All instances of all VVCs (-1 : All instances)

Figure 6: Target options for a channel based VVC

2.3.3 Queuing

The only functional difference between calling a BFM (from inside the central sequencer) vs a CDM - seen from a black box point of view, is that the CDM will have to wait in a queue locally inside the VVC until all previously entered commands in that queue have been executed. If no command is pending (in the queue) and no command is currently being executed towards the DUT via this VVC, then the CDM and BFM behave exactly the same.

The command distribution from the sequencer to the VVCs explained above means the sequencer may distribute commands to multiple VVCs at the same time. This because the actual distribution of commands is not consuming any time, but happens instantaneously. This allows the sequencer to initiate accesses on several DUT interfaces simultaneously.

For BFMs another BFM-call would not have been possible at all from the sequencer, and would thus have blocked the sequencer from doing anything else. Process-based BFMs might have allowed queuing of commands, but often with a terrible overview of what is actually happening in the system.

The queuing mechanism inside the VVC allows the sequencer to distribute (again in zero time) a sequence of commands to any given VVC for back to back queued execution.

Every single CDM is given a unique command index, counting from 1 upwards for every CDM called from the central test sequencer. The actual index for a given command is available from 'shared_cmd_idx' immediately after distribution of that command. This index may be used for various purposes by the sequencer. One example could be to fetch the result of a CDM, e.g. for a read-command, to check if a command has been executed, and to wait for a given command to complete. The latter is handled by the CDM 'await_completion()'. This CDM will stall the sequencer until a previous indexed CDM (or all previous CDMs) to a given VVC has been executed on that VVC. This mechanism is excellent for synchronization of events inside the testbench.

2.3.4 Test sequencer example

We can illustrate the test sequencer operation by considering a UART testbench as shown in Figure **4** or Figure **5**. Note that the VVCs are emulating the environment and thus the VVC Tx channel is connected to the DUT Rx.

Manual



Now let us interpret the test sequencer example shown in Figure 7.

We can see that all the procedure calls are CDMs, i.e. distribution of commands to the VVCs. This can be seen directly from the command syntax - as all the procedure calls start by specifying the target in the first parameters. In the figure the targets have been marked as red to clearly differentiate between target parameters and the other following parameters.

Figure **8** shows the timing diagram for the VVCs execution activity and the interface towards the DUT. Please note the spacer symbols in the figure, and that the access time relations are not as indicated by the widths shown in the figure. (E.g. the SBI access is in reality much shorter compared to the UART access.)

Simple test sequencer example for the UART TB: sbi write(SBI VVCT, 1, C ADDR TX, x"2A", "Uart TX"); 2 uart_expect(UART VVCT, 1, RX, x"2A", "From DUT TX"); uart transmit(UART VVCT,1,TX, x"C1");-- into DUT RX insert delay(UART VVCT, 1, TX, 2*C BIT PERIOD); 5 uart transmit(UART VVCT, 1, TX, x"C2"); await completion(UART VVCT, 1, RX); 6 7 await completion (UART VVCT, 1, TX); sbi_check(sbi_check(C ADDR RX, x"C1", "Uart RX"); 8 SBI VVCT, 1, SBI VVCT, 1, C ADDR RX, x"C2", "Uart RX"); 9 10 await completion (SBI VVCT, 1

Figure 7: UART TB test sequencer




Figure 8: Timing diagram for Simple test sequencer example above

On lines 1-3 in the example the sequencer is distributing a single command to each of three different destinations, SBI_VVC 1, UART_VVC 1 RX and UART_VVC 1 TX. This distribution is non time consuming. All the "leaf-VVCs" have now received one command each, and will start execution immediately.

Line 4 - insert_delay() - is put into the execution queue for UART_VVC,1,TX after the transmit command given in line 3. Then another transmit command (line 5) is distributed to the same queue. Hence after line 5 the queue inside UART_VVC,1,TX has 3 commands pending (lines 3,4,5).

Manual



On line 6 the sequencer stops running non time consuming commands as it initiates await_completion(). This CDM is not allowed to finish until UART_VVC,1,RX has executed all pending commands towards the DUT, i.e. until uart_expect() has completed. This of course is a time consuming command, executed as a BFM from the VVC towards the DUT. And once time is starting to run, all queued commands will execute – in parallel if on different interfaces, or in order if on the same interface.

In the timing diagram this can be seen as immediate activity on all VVC interfaces. SBI_VVC and UART_TX_VVC start transmission immediately (initiated by lines 1 and 3), while UART_RX_VVC starts waiting for data immediately (initiated by line 2), and receiving data soon after the SBI_WRITE is completed.

As soon as UART_VVC,1,RX has completed its byte reception, it is finished – as there are no more commands in its queue. This corresponds to the end of the uart_expect transaction in the timing diagram. The await_completion() command is then allowed to finish and the sequencer may continue to line 7. UART_VVC,1,TX will wait for 2*C_BIT_PERIOD from completion of the first transfer to the start of the next – due to the insert_delay() command. When the second transmit is completed the sequencer is allowed to continue to line 8.

At this stage we know that there is no more pending activity in the UART VVC, and that one byte has been received and two bytes transmitted. We also know that the sbi_write() (line 1) has been executed – as otherwise the uart_expect() would have failed.

Finally two sbi_check() commands are distributed to SBI_VVC,1 to check that the two bytes from lines 3 and 5 have been successfully received. They should now be available in the UART receive buffer of the DUT – ready to read via the CPU interface.

Again the distribution of commands is non time consuming until the await_completion() in line 10, which doesn't finish until both sbi_check() commands have been executed.

The sequencer itself does not perform any checks in this example. It just distributes commands to the VVCs and allows them to handle the command executions autonomously. Thus the VVCs will do the requested checking and potentially write a positive acknowledge to the log and simulation transcript. If the check fails the VVC will scream out loud and stop the simulation if set up to do so.

2.4 Test sequencer considerations

The above test sequencer example was of course just a very small piece of code to illustrate how to read and understand the sequence of events.

The example code would be part of a test sequencer process with local declarations and potentially an initial setup section. An example of a complete testbench and test sequencer can be found for the UART in 'bitvis_uart/tb/uart_vvc_tb.vhd'.

An advanced testbench for a complex DUT would typically have more advanced procedures handling verification at a higher level, but the example shown in this document and in the provided example is intended as a simple example on using VVC FRAMEWORK and its provided functionality.

2.5 Understanding the sequencer-VVC communication

In the previous sections it was explained that the sequencer methods were used to distribute commands to the VVC for execution there. Thus the name CDM.

UVVM VVC Framework Manual



This section will explain how this is possible and partially also how this is implemented.

2.5.1 Signalling between sequencer and VVCs

Before explaining the communication, it is important to first get an overview of signals and variables used in this communication. This can be found in the table below.

Name	Signal/ variable	Туре	Direction	Comment
<name>_VVCT e.g. SBI_VVCT</name>	global signal	record	Seq -> VVC	Trigger and target specification for a given command. Always used as the first parameter in any CDM. - trigger (std_logic) - vvc_name (string) - vvc_instance_idx (natural) - vvc_channel (t_channel) (optional) Note that this signal has the same name as the corresponding VVC – extended by 'T' for 'Target'. Note also that this signal does not follow our conventions for global signals (global_* in lower case). This is because we want this to stand out clearly in the CDM call – as a target identifier.
VVC_BROADCAST	global signal	std_logic	Seq -> VVC	Trigger all VVC simultaneously for a given command. Otherwise the same as for <name>_VVCT. *** To be implemented in Q1-2016</name>
shared_vvc_cmd	shared variable	record	Seq -> VVC	All fields required to specify any command for the given VVC - operation (e.g. write, read, check,) - address (std_logic_vector) - data (std_logic_vector) - alert_level (t_alert_level) etc This variable is "hidden" for the sequencer as the test case writer does not need to see it. Used by the handshake, methods and VVCs.
global_vvc_ack	global signal	std_logic	VVC -> Seq	Acknowledge that the command has been received and either queued or handled immediately (if required). This variable is "hidden" for the sequencer as the test case writer does not need to see it. Used by the handshake and VVCs.
shared_vvc_response	shared variable	record	VVC -> Seq	Fields required to let the sequencer know the result of a command – if needed - data (std_logic_vector) - transaction_result (t_transaction_result) etc This variable is "hidden" for the sequencer as



the test case writer does Used by the handshake,	

Table 3: Signaling between Test sequencer and VVCs

2.5.2 Distributing a command from the sequencer

Take the sequencer excerpt shown in Figure 7 as an example. In line 1 an sbi_write() command is to be distributed to SBI_VVC instance 1.

In brief the following steps are executed:

(please note that this is a simplified sequence. More details are given in section 3.7)

- The procedure (CDM) is called from the test sequencer sbi_write(SBI_VVCT, 1, C_ADDR_TX, x"2A", "Uart TX");
- 2. The actual CDM procedure (sbi_write) will then set up the target signal SBI_VVCT and the command record shared_vvc_cmd
 - a. SBI_VVCT trigger is set
 - b. SBI_VVCT target info is assigned (VVC name, instance, channel)
 - c. shared_vvc_cmd is assigned with the parameters of the CDM
 (Operation := write, Address := C_ADDR_TX, Data := x"2A",
 message := "Uart TX")
- 3. Signal SBI_VVCT is a global signal and thus any VVC of this type will see the signal and detect the trigger.
 The VVC will then check the target to see if this matches. Hence instance 2 of SBI_VVC will detect the trigger, but ignore the command since the instance number does not match. SBI_VVC 1 on the other hand will match the target and accept the command.
- 4. When SBI_VVC 1 has accepted this command, it will put the contents of shared_vvc_cmd onto the queue to be fetched for execution as soon as possible. At the same time SBI_VVC will set the global acknowledge signal global_vvc_ack to '1' to complete the handshake with the sequencer method (CDM).
- 5. The CDM will detect the acknowledge signal and finish. The sequencer may then continue.

The above sequence is performed for every single CDM – with just a few exceptions:

- Some CDMs are not put onto the queue, but executed immediately inside the VVC. Otherwise they are exactly the same. Examples of such commands are flush_queue() and terminate_current_command().
- The await_completion method (line 6 in Figure 7) is treated the same way as the exception above. Hence not put on the queue, but executed immediately. The difference however, from the immediate execution above is that this command will not finish immediately if it has to wait for completion, i.e. no pending commands. The command in line 6 will not set the acknowledge signal until the complete VVC is finished, and hence it is potentially time consuming; thus the name await *.

Manual



- As the await_completion() CDM is potentially time consuming it also allows time to run in general. That means the VVCs may start executing pending commands.

2.6 Sequencer direct access to VVC configuration and status

The configuration and access records given in the quick references are directly available from the sequencer – as shared variables.

Hence the sequencer may configure a VVC directly as

```
shared_<vvc-name>_config(instance-num).<field-name> := <whatever>;
e.g. shared_sbi_vvc_config(1).clock_period := 10 ns;
```

And status may be read directly as

```
<variable/signal> := shared_<vvc-name>_status(instance-num).<field-name>;
e.g. my_integer := shared_sbi_vvc_status(2).current_cmd_idx;
```



3 Using the VVC Framework

3.1 Prerequisites

It is strongly recommended before you commence that:

- 1. You understand the overall concepts and functionality of the UVVM Utility Library. See uvvm_util/doc (Bitvis Utility Library docs still apply)
- 2. You have understood the previous section (2) in this document 'Understanding the VVC Framework'.

3.2 Making your own testbench architecture

As explained in section 2.2 the architecture may be implemented in a very structured and simple manner – with a good overview.

First make your normal simple testbench and simple test harness as you like – as a starting point. Then all you have to do to structure it properly using VVCs in a good testbench architecture, is to connect each VVC to the corresponding interface on the DUT – as any other inter entity (or component) connection. Then you assign values to the generics of your VVC instantiations wherever the default is not wanted.

Note that you need to include 'initialize_uvvm;' in your testbench - as a concurrent procedure, and you should include wait_for_uvvm_init() as your first statement in your test case sequencer. You do of course need to include the necessary libraries.

(See 'bitvis_uart/tb/uart_vvc_th|tb.vhd' as examples)

3.3 Making your own VVC FRAMEWORK test sequencer

You must of course know which VVCs are connected to your DUT. This you can find out by looking at the testbench architecture, or you can start running your testbench (even without a sequencer) and it will report all connected VVCs, their instance numbers and channel (if applicable), provided constructor messages have not been disabled.

Then all you have to do is to call a sequence of CDMs with relevant parameters – as shown in Figure 7 or in the UART example in 'bitvis uart/tb/uart vvc tb.vhd'.

You can find all available CDMs in the quick references for VVC FRAMEWORK methods (common methods for all VVCs) and for each individual VVC. If you are using non Bitvis VVCs (your own or third party) a quick reference may not be available. If so you can find the methods under <vvc-directory>/src/vvc methods pkg.vhd.

If something doesn't work as expected - turn on more verbosity (see chapter 4)

3.4 Making your own VVC and VVC methods

Remember that it is always assumed that you have all the required BFM procedures available prior to making a VVC. These procedures are critical for any type of testbench, and should thus always be implemented at an early stage in the verification process.

To make your own VVC then first run the Python script uvvm_vvc_framework\script\vvc_generator\vvc_generator.py.

Manual



This will generate a new VVC based on a non-channel or channel based VVC depending on your selection. Then go through the generated files and make the necessary modification. Please see uvvm_vvc_framework\doc\VVC_Implementation_Guide.pdf for information on the various files.

If something doesn't work as expected – turn on more verbosity (see chapter 4).

3.5 Library and package hierarchy for VVCs

This chapter is only meant to be read if you really need to understand the details of the system. It is not at all needed for anyone just writing testcases (test sequencers), and for VVC designers it is only of interest if you want to understand the exact relation between the various VHDL packages. This section requires good VHDL knowledge.

Any VVC is based on a VVC entity with an interpreter, a queue and an executor as the main command handling blocks. To simplify understanding and re-use, most implementation details are located in packages. These packages may basically be divided into three categories.

- 1. 'VVC dedicated packages' (functions, procedures, types, constants, global signals and shared variables):
 - Functionality that is dedicated for a given VVC, where the implementation is targeted at the needs of this specific VVC. E.g. the uart_receive CDM and the shared_vvc_cmd containing all UART_VVC specific record fields.
 - Such packages are located under the relevant VVC and are compiled to the library of that VVC.
 - Marked as light yellow in Figure 9.
- 2. 'VVC Framework Library':
 - Functionality that is common for all (or most) VVCs, and is independent of VVC dedicated definitions/declarations.
 - Such packages are located under the UVVM_VVC_Framework directory and are compiled to the uvvm_vvc_framework library.
 - Shown partly Figure 9 in blue. These two packages are referenced by lots of other packages in the VVC libraries. There are more packages in this library, but these are only referenced by these two packages, and not by the VVC related packages.
- "VVC FRAMEWORK target dependent packages"
 Functionality that is common for all (or most) VVCs, but is dependent on VVC dedicated definitions/declarations.
 - Such packages are located under the UVVM_VVC_Framework directory as their contents are common, but they are compiled into VVC libraries as they depend on other compiled packages in their respective VVC library.
 - Shown in Figure 9 as orange to indicate that the packages are located under UVVM VVC Framework, but compiled into a dedicated VVC



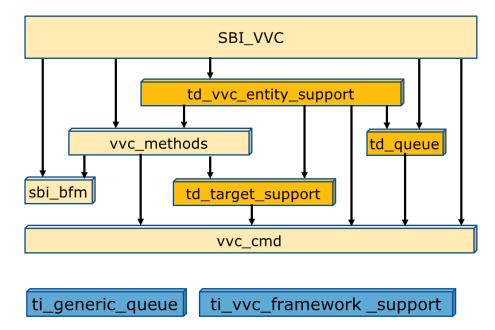


Figure 9: VVC Package organisation

The two first package categories are quite normal in any system – with local and common support for various functionality. The third package category is a bit different. The actual files and thus package contents are the same across all VVCs - for the simple reason that they all need the same functionality support - like for instance procedure 'fetch_command_and_prepare_executor()' inside 'td_vvc_entity_support_pkg'. However, as the actual commands are specific to each individual VVC, and this procedure is fetching these commands, the command type must be known for the procedure and thus also for the package. Hence 'td_vvc_entity_support_pkg' must reference 'vvc_cmd_pkg' in which the command type is defined for this specific VVC. For 'td_vvc_entity_support_pkg' to be single source for all VVCs, this package must reference 'vvc_cmd_pkg' in its own local library (work). Thus they must both be compiled into the same VVC library.

You will find that the VVC Framework packages that are target independent – i.e. as normal support packages, are located under the src directory as you would expect. These packages are compiled into the UVVM_VVC_framework library as they are used as common support files for the complete system. These packages have been prefixed with 'ti' to indicate that they are target independent.

The VVC Framework packages that are target dependent – i.e. common support packages that depend on VVC-dedicated declarations in a VVC library, are located under directory 'src_target_dependent' to clearly show that these packages are different. These packages are compiled into all VVC libraries and reference for instance the 'vvc_cmd_pkg' available in the that library. These packages have been prefixed with 'td' to indicate that they are target dependent.

Note that most packages and components reference the UVVM Util Library and UVVM VVC Framework library for common functionality. The dependency on these libraries are not shown in the figures – to simplify the overview.



3.6 Library and package hierarchy for the central test sequencer

The central test sequencer must have access to all available methods for every VVC in the testbench. The package 'vvc_methods' provides all the VVC dedicated methods for that VVC.

Figure 9 shows all the packages needed for the VVC to compile, whereas Figure 10 shows all packages compiled into the VVC library.

'td_vvc_framework_common_methods' is a package located under the uvvm_vvc_framework directory – as the code is common for all VVCs, but it is compiled into each VVC because it depends on declarations in each specific VVC library.

For every VVC the sequencer must include both 'vvc_methods' and 'td_vvc_framework_common_methods' to get access to both VVC dedicated and general commands for each VVC. Figure 11 shows that for a test harness with three VVCs A, B and C, the sequencer must include 3*2 packages.

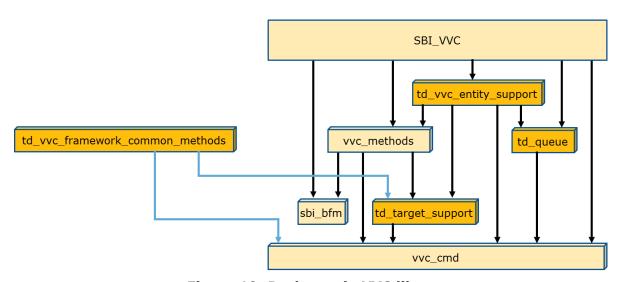


Figure 10: Packages in VVC library

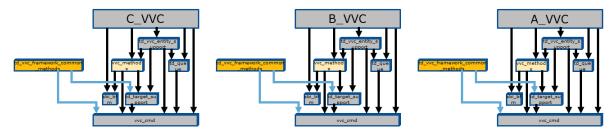


Figure 11: Packages referenced by central sequencer

Manual



3.7 More on CDMs

The actual procedure calls of the CDMs are quite simple, as shown in the example for the SBI ('vvc_methods_pkg').

- 1. First the defaults are set for shared_vvc_cmd to ensure that everything is set to passive values prior to setting the values needed for this CDM.
- 2. Next 'set_general_target_and_command_fields()' sets the VVC target signal SBI_VVCT with the correct instance number and channel if needed. Also 'shared_vvc_cmd' is set up with general parameters as given in the procedure call
- 3. Then 'shared_vvc_cmd' is updated with VVC dedicated fields (SBI: Addr + data).
- 4. Finally the communication with the VVC is initiated by calling 'send_command_to_vvc()' which does the following:
 - a. Increments 'shared_cmd_idx'.
 This shared variable is visible for the sequencer, so that any CDM may be properly identified for instance for fetching the result of a given CDM.
 - b. The trigger of the VVC target signal is set
 - c. Waits for the acknowledge signal from the target VVC with a timeout.
 - d. Deactivates the trigger of the VVC target signal.

3.8 Other implementation details

1. For explanation on the procedures used inside the VVCs, see comments in 'vvc_support_pkg'.



4 Debugging

The example VVCs, BFMs and Testbench show how one should always write log messages to allow good simulation progress reports, and write checks to provide good alert handling and mismatch reports.

These mismatch reports and log messages are vital when trying to debug your design or testbench.

4.1 Increasing the verbosity

There are several ways of increasing the verbosity of your testbench – provided you have followed the examples of the attached VVC FRAMEWORK example testbench under 'bitvis uart/tb/'.

(For targets see section 2.3.2, For IDs see 'UVVM Util/src/adaptations pkg.vhd')

- 1. Controlling verbosity via the test sequencer
 - a. Brute force:
 enable_log_msg(<target>, ALL_MESSAGES), or
 disable_log_msg(<target>, ALL_MESSAGES)
 - b. Selected:
 enable_log_msg(<target>, <ID>), or
 disable_log_msg(<target>, <ID>)
 - c. Any combination of the above
- $2. \ \ Controlling \ verbosity \ via \ default \ setup \ in \ `UVVM_Util/src/adaptations_pkg.vhd'$

```
constant C_VVC_MSG_ID_PANEL_DEFAULT - for all VVCs and constant C_MSG_ID_PANEL_DEFAULT - for all sequencer logs
```

In general it is a good idea to have maximum verbosity when starting to develop a testbench or a VVC.

Hint: It might be a good idea to always run with a high verbosity, and then just filter on the log after simulation. The IDs and Scopes yield excellent filtering opportunities.

4.2 Recommended verbosity

4.2.1 For regression tests

Enable log headers only – as they should reflect your specification

4.2.2 For simple overview on sequence of events – but not debugging

Keep only log headers and a single occurrence of any command

```
Alt.1: ID_LOG_HDR(*1) + ID_SEQUENCER + ID_BFM/IMMEDIATE_CMD in every VVC
```

Alt.2: ID_LOG_HDR(*1) + ID_SEQUENCER + ID_UVVM_SEND CMD

Alt.3: Both above.

(*1): ID LOG HDR, ID LOG HDR XL, ID LOG HDR LARGE depending on your usage.

UVVM VVC Framework Manual



4.2.3 For detailed debugging

The simplest alternative is to turn on all verbosity for the problem at hand:

E.g. full global verbosity (not specifying any VVC) and full verbosity for the relevant VVCs. Full verbosity is set using a special ID of 'ALL_MESSAGES'.

If this is too much, either try to disable irrelevant IDs or do it all the other way around by starting with alt. 3 in the previous chapter and enable more IDs as required.



5 License

Note that there are two different licenses:

BITVIS UVVM LICENSE AGREEMENT applies to the complete UVVM system, except UVVM Utility Library, whereas BITVIS UVVM Utility Library LICENSE AGREEMENT applies to the UVVM Utility library only.

The reason for this differentiation is to allow more flexibility for the UVVM Utility library.

5.1 BITVIS VVC FRAMEWORK LICENSE AGREEMENT

Bitvis grants to You a nonexclusive, non-transferable, worldwide, fully paid-up license under Bitvis' copyrights to

- a) use, copy and modify the Software internally for Your own development and maintenance purposes.
- b) distribute your own extensions to the Software, including, but not limited to VVCs.
- c) copy and distribute the end-user documentation which may accompany the Software, but only in association with the Software, and without modifications to the documentation.

Except as expressly stated in this Agreement, no license or right is granted to You directly or by implication, inducement, estoppel or otherwise. You do not have any rights to use any Bitvis trademarks or logos.

OWNERSHIP OF SOFTWARE AND COPYRIGHTS.

Title to all copies of the Software remains with Bitvis. The Software is copyrighted and protected by law. You may not remove any copyright notices from the Software. Bitvis may make changes to the Software, or to items referenced therein, at any time and without notice, but is not obligated to support or update the Software. Except as otherwise expressly provided, Bitvis grants no express or implied right under Bitvis' patents, copyrights, trademarks, or other intellectual property rights.

VVC FRAMEWORK AND ANY PART THEREOF ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM,

DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH VVC FRAMEWORK.

Bitvis may terminate this Agreement at any time if you violate its terms.

Upon termination, you will immediately destroy the Software.

5.2 BITVIS UVVM Utility Library LICENSE AGREEMENT

Copyright (c) 2016 by Bitvis AS. All rights reserved.

Manual



A free license is hereby granted, free of charge, to any person obtaining a copy of this VHDL code and associated documentation files (for 'UVVM Utility Library'), to use, copy, modify, merge, publish and/or distribute - subject to the following conditions:

- This copyright notice shall be included as is in all copies or substantial portions of the code and documentation
- The files included in UVVM Utility Library may only be used as a part of this library as a whole
- The License file may not be modified
- The calls in the code to the license file ('show_license') may not be removed or modified.
- No other conditions whatsoever may be added to those of this License

UVVM UTILITY LIBRARY AND ANY PART THEREOF ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH UVVM UTILITY LIBRARY.