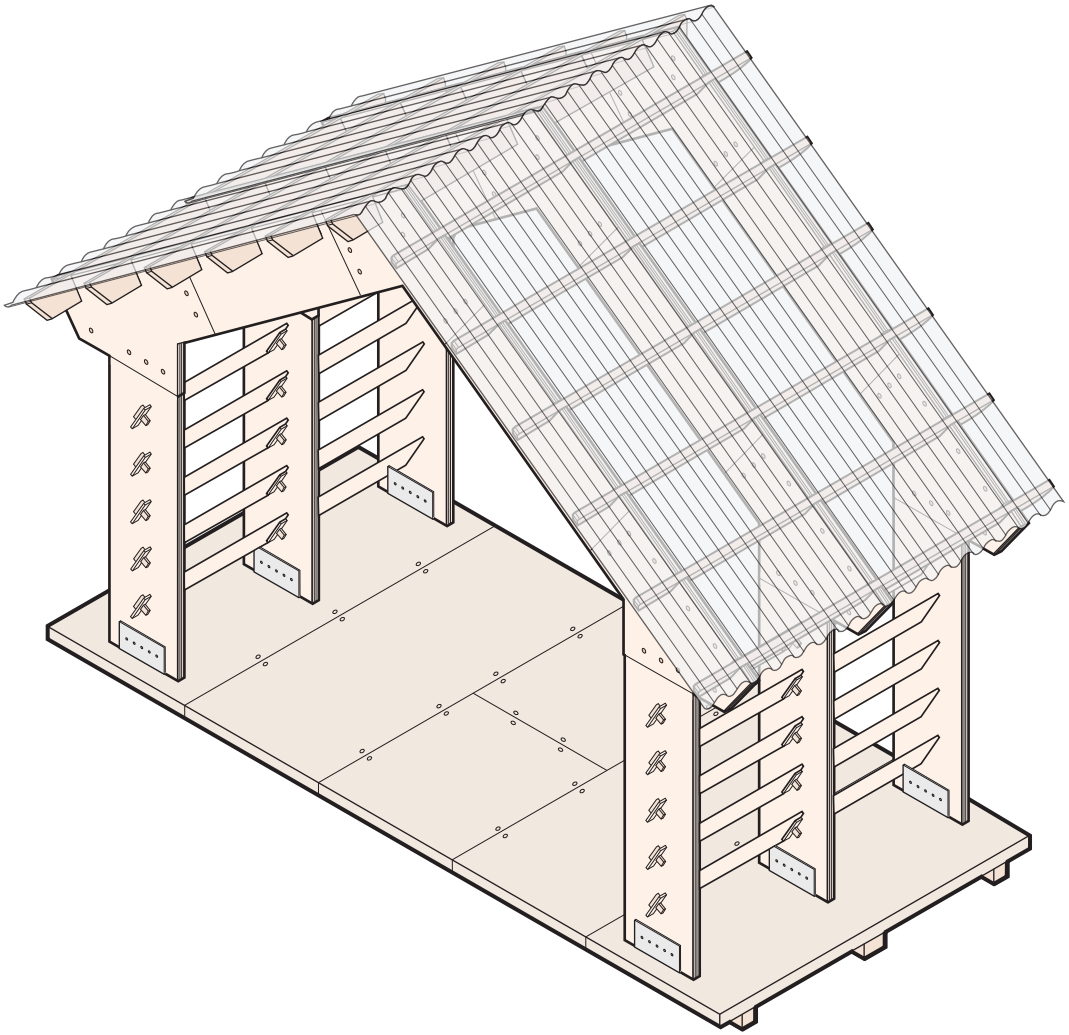


Pavilion Construction Assembly

2025 Timber Tectonics in the Digital Age

UO &OSU

Table of Contents

Kit of Parts ——— 3.


Prefabrication ——— 6.

On Site - Foundation ——— 11.

On Site - Construction ——— 12.


Completion ——— 21.

Kit of Parts

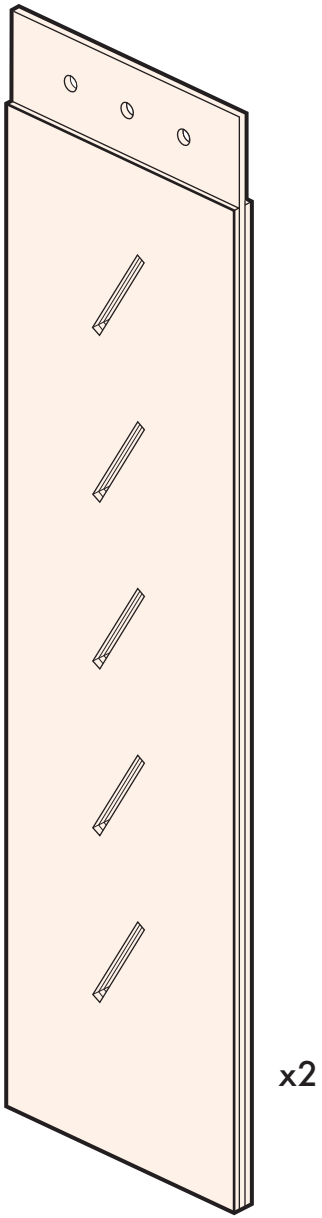


x2

Typical End Column 1

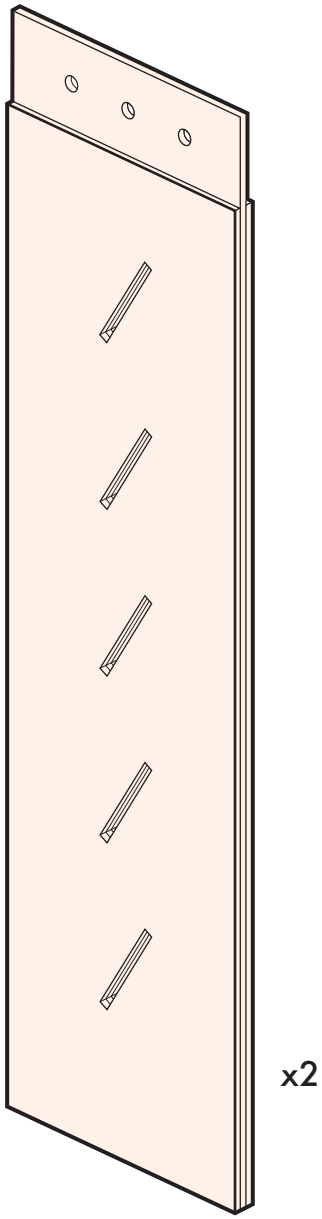


x2

Typical End Column 2

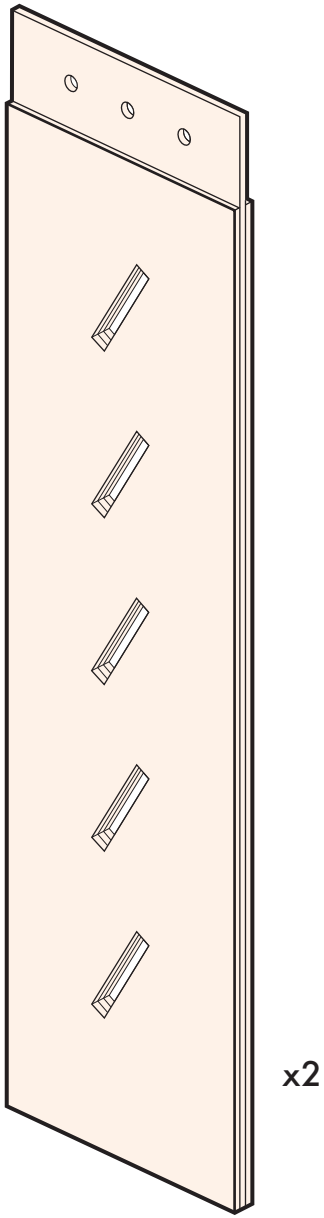


x2

Typical Middle Column

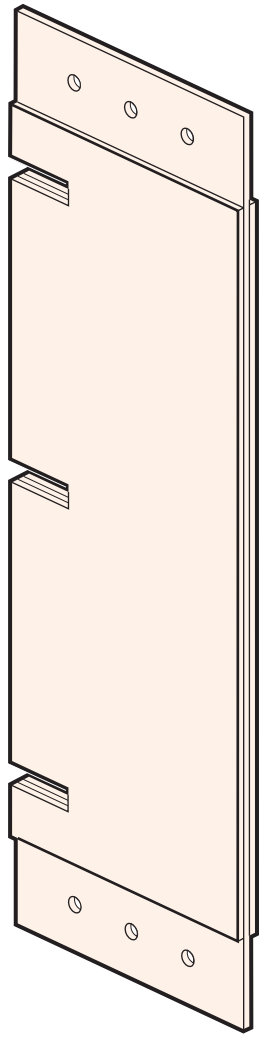

x6

Typical Roof Beam




x12

Typical Roof Purlin
(made from 2x6)




x40

T-Pin

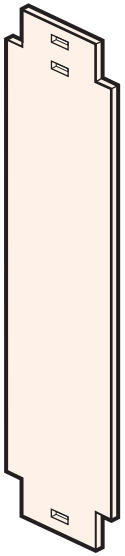


x20

Wall Panel

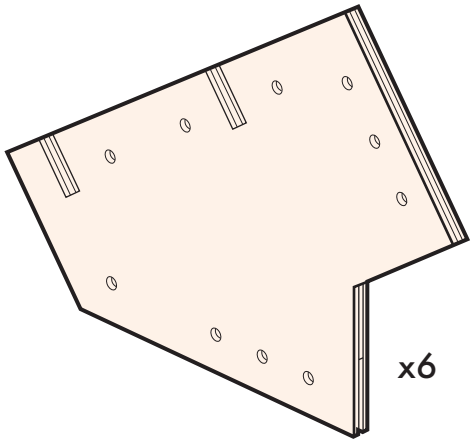


x6

Side Angle Module

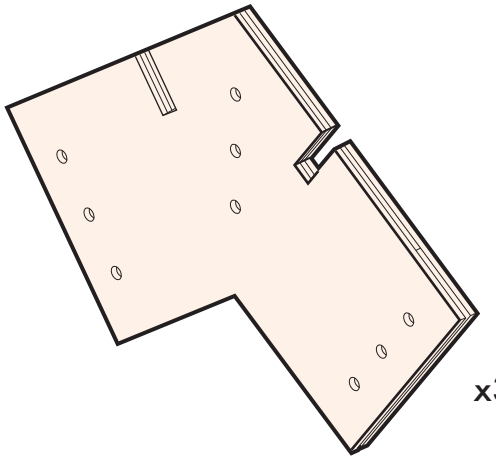


x3

Top Angle Module

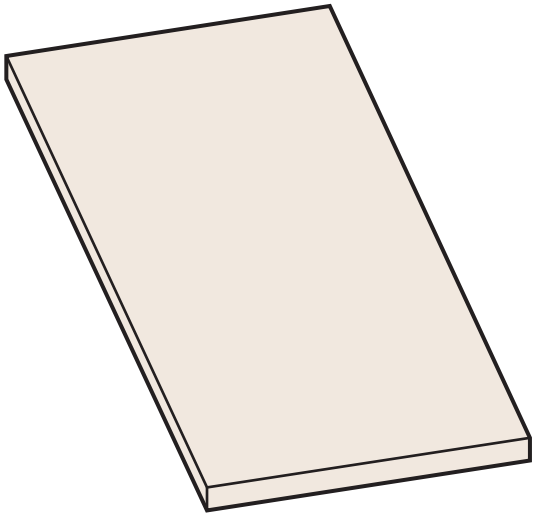


x4

3′-0″ x 7′-0″ MPP

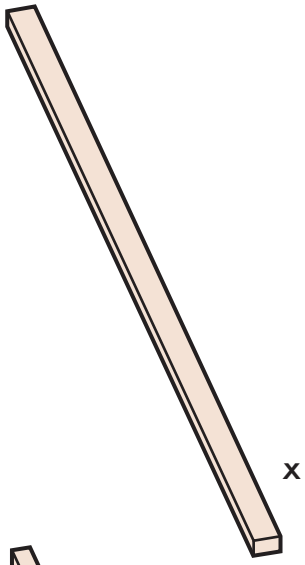


x1

4x6x15′

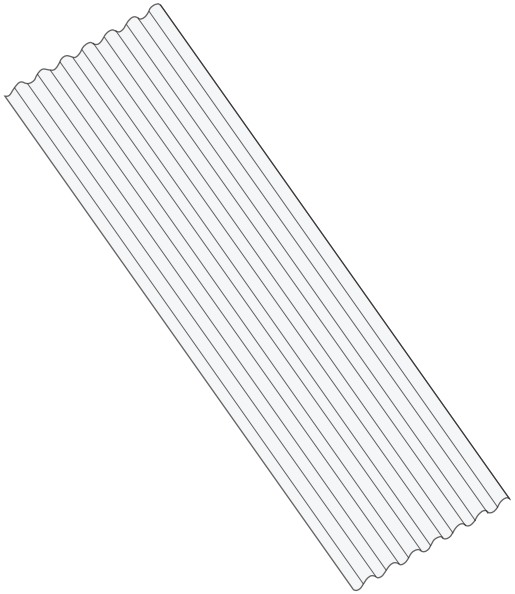


x4

Fiberglass Roof Enclosure

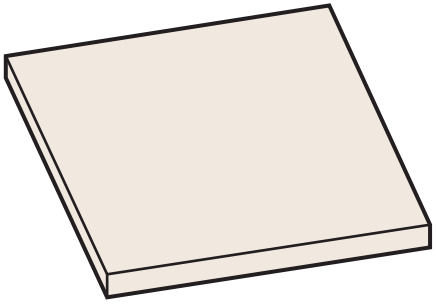


x2

3′-0″ x 3′-6″ MPP

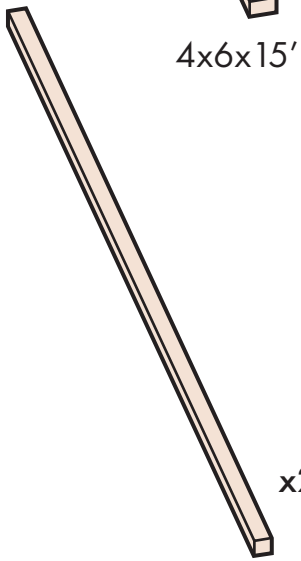

x2

4x4x15

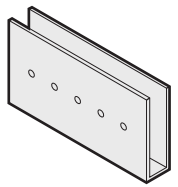


x6

U - Channel Brackets


Prefabrication

1.

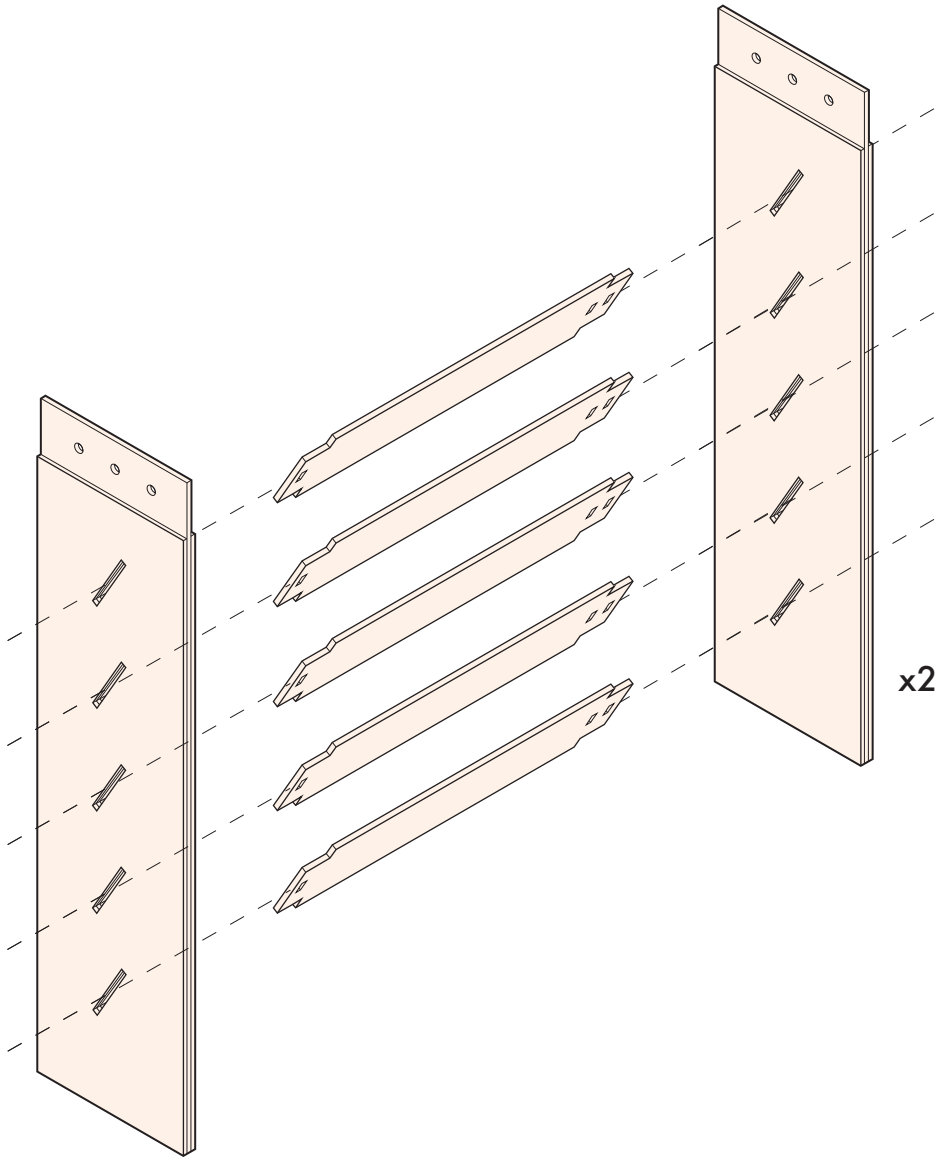


Slide five wall panels into a typical edge column 1 and a typical middle column

2.

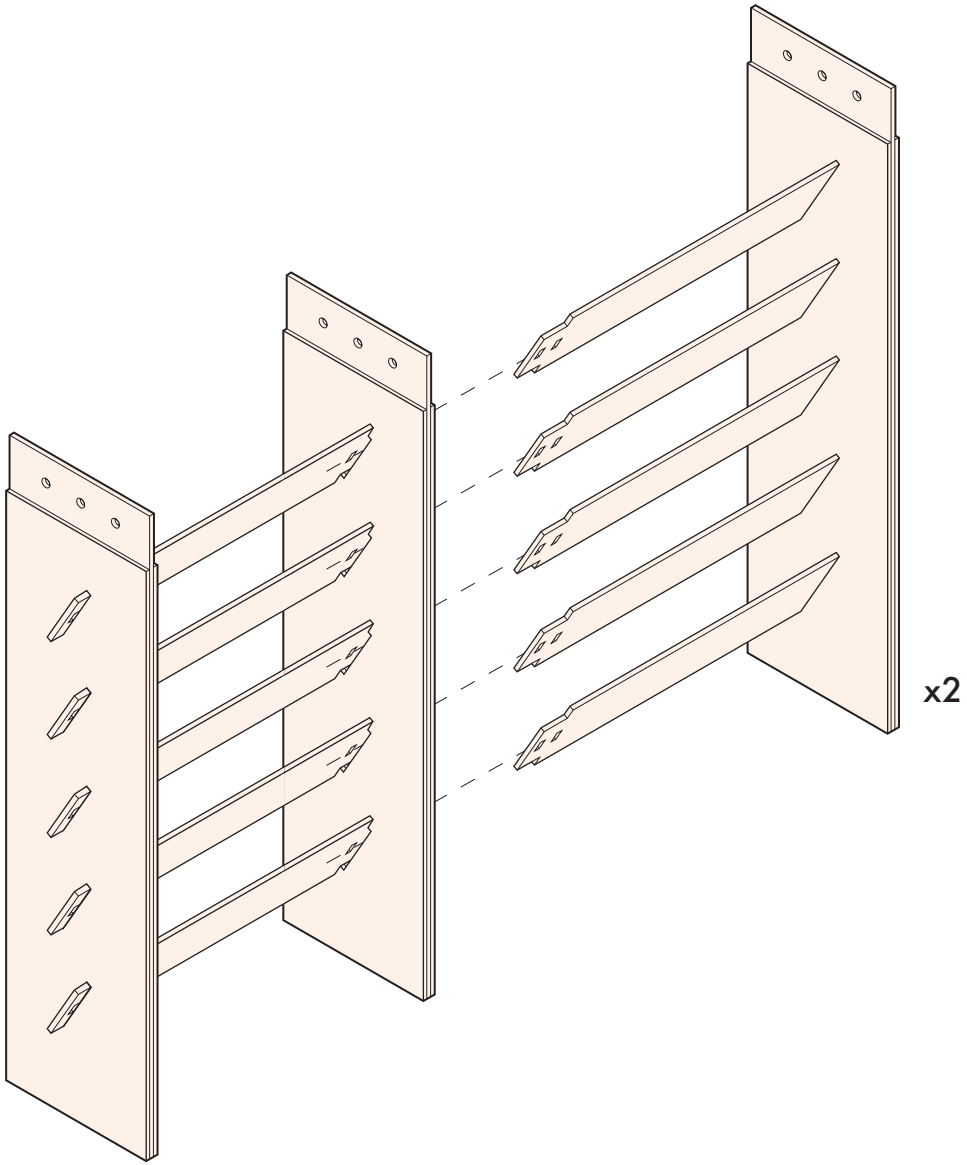


Slide a wall panel connected to a typical edge column 2 into a completed partial wall from step 1

3.

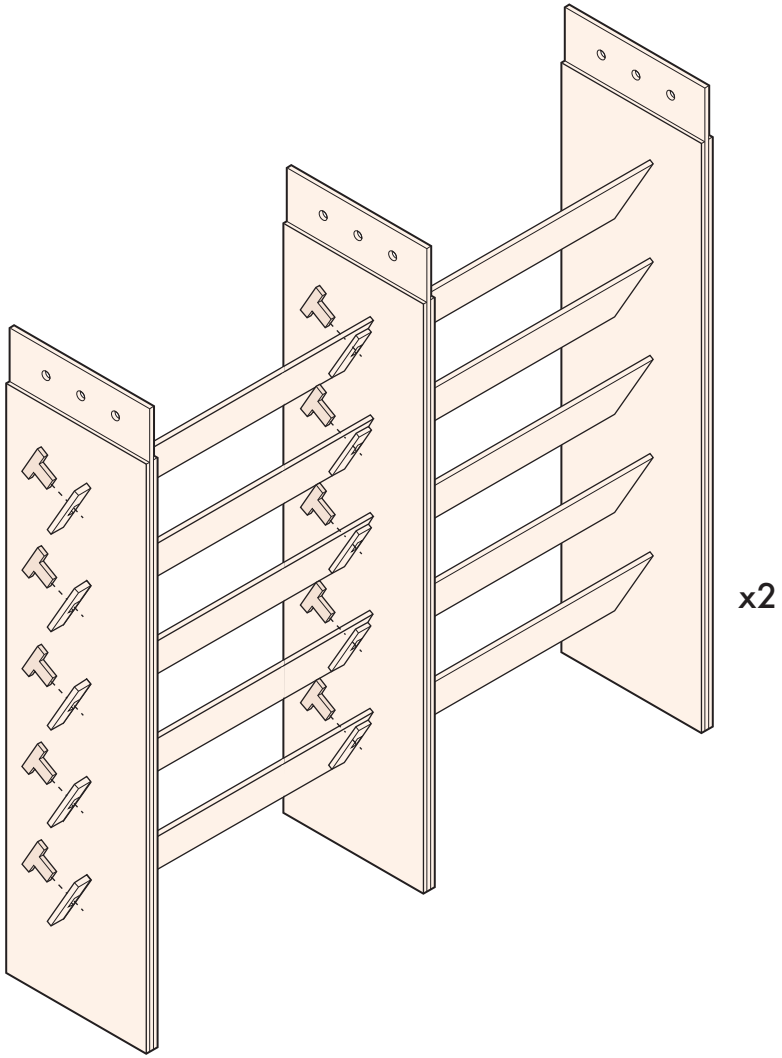


Slide twenty T-pins into each of the wall panel holes to secure them in place

4.

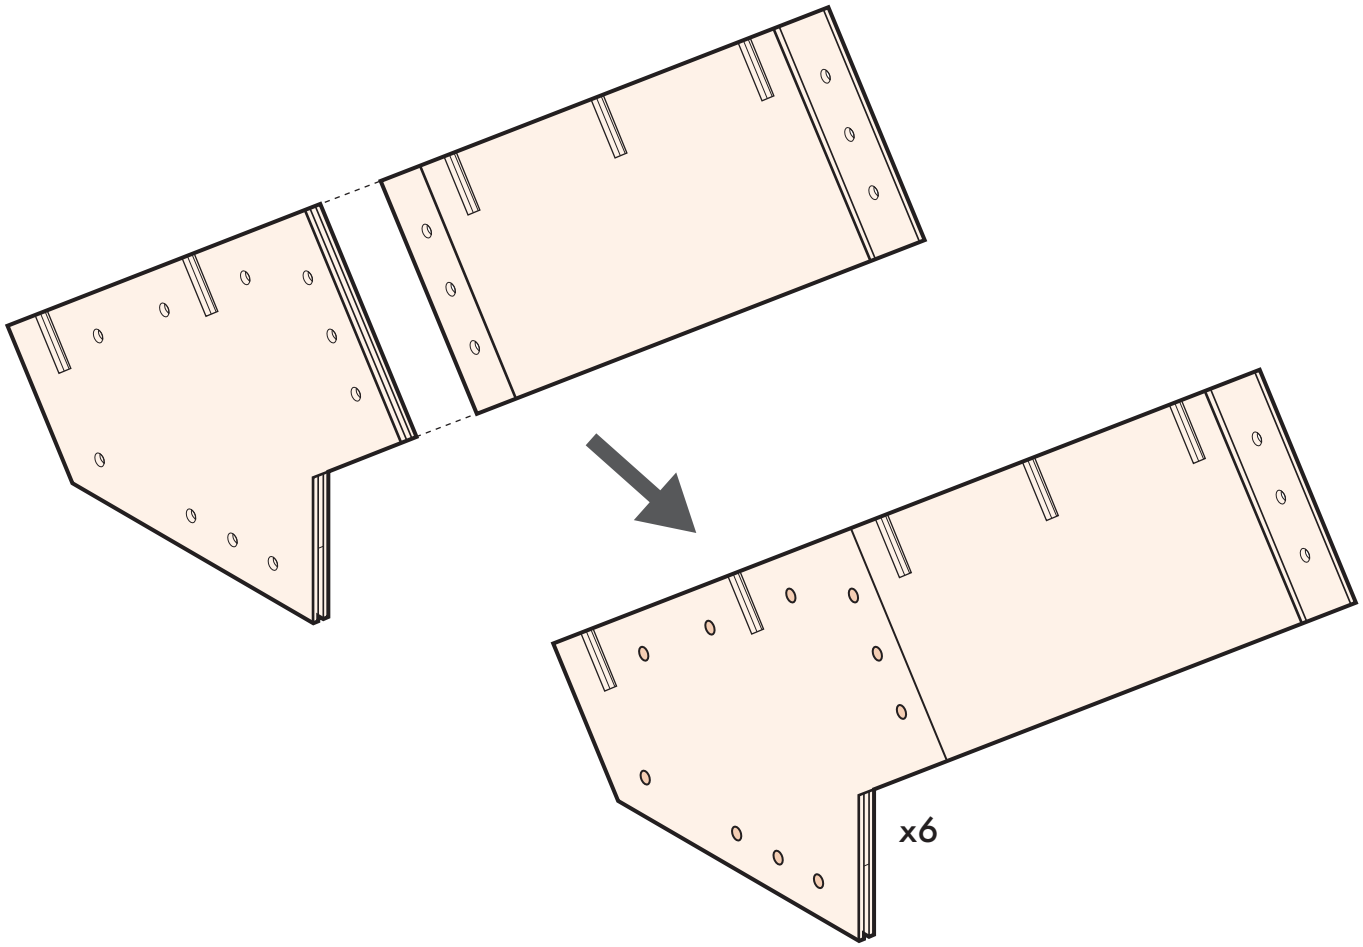


Slide a typical column into a side angle module. Secure with dowels

5.

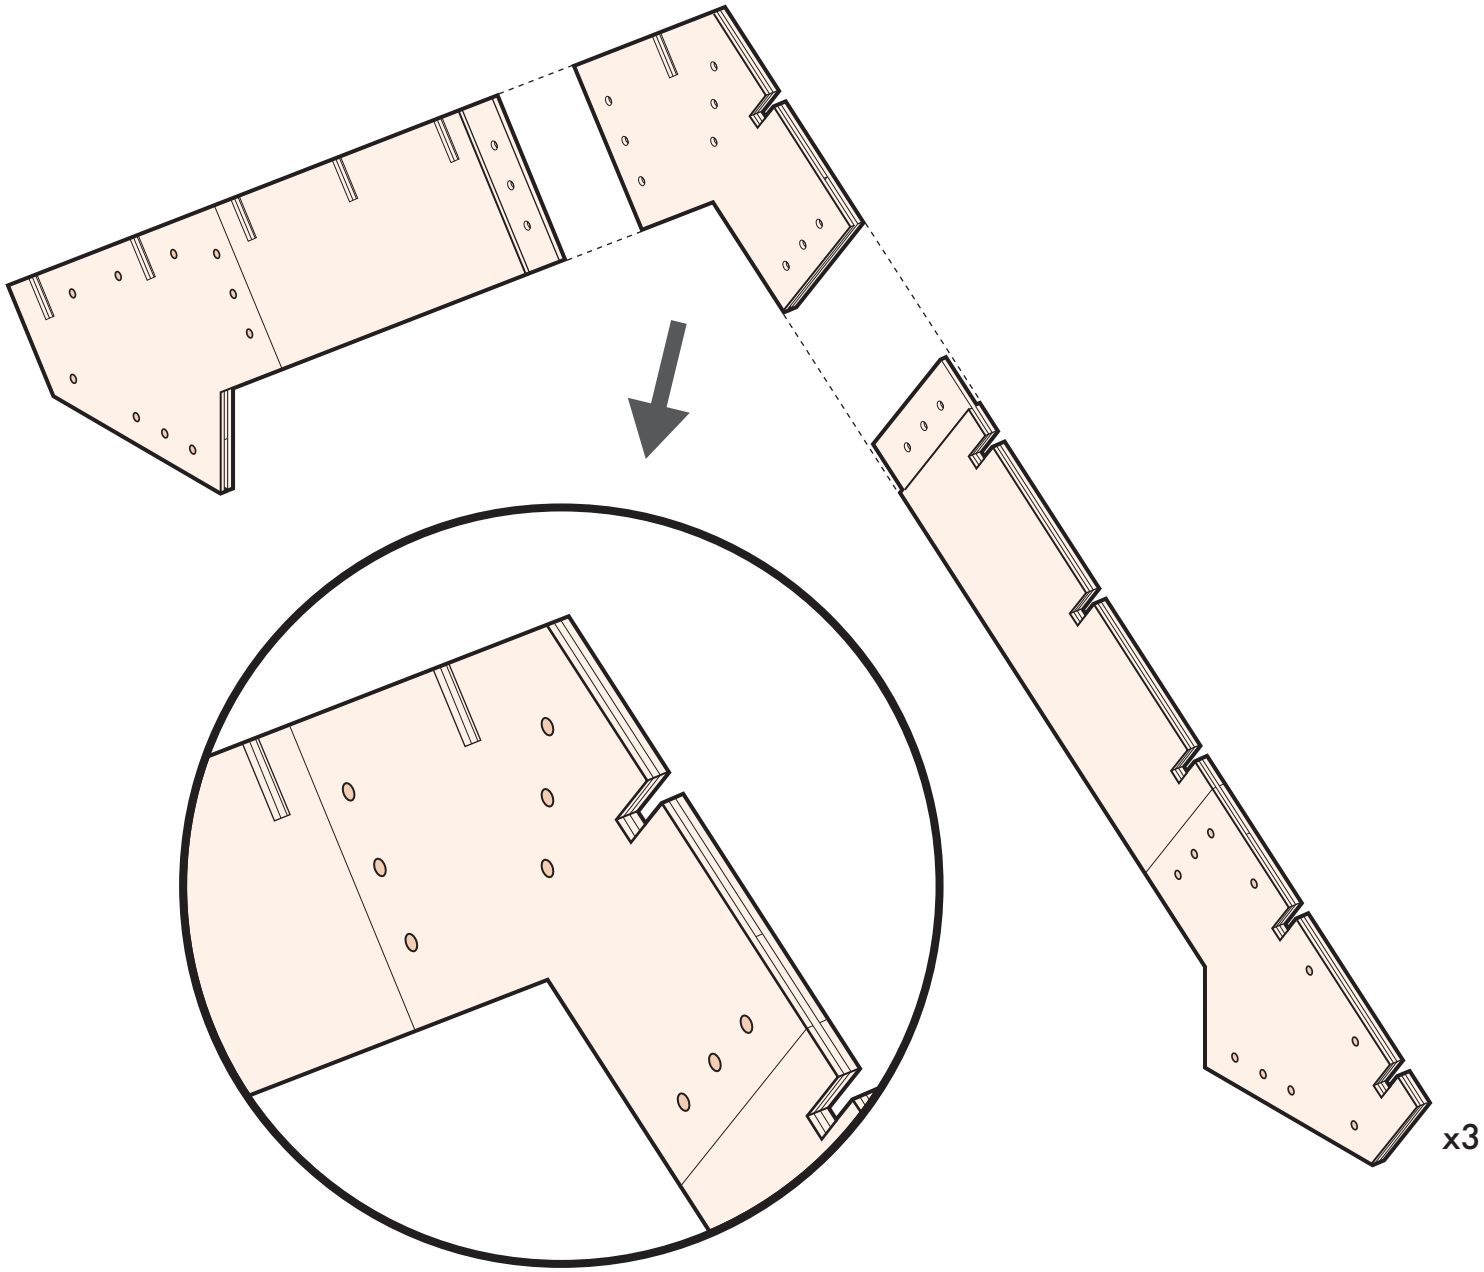


Slide two modules constructed from step 5 into a top angle module. Secure with dowels


Transportation

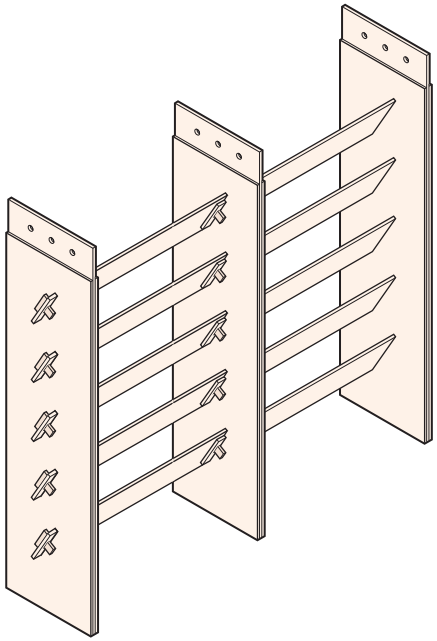

x2

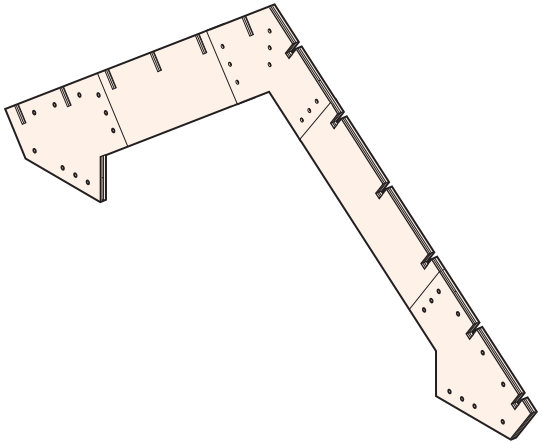


x3

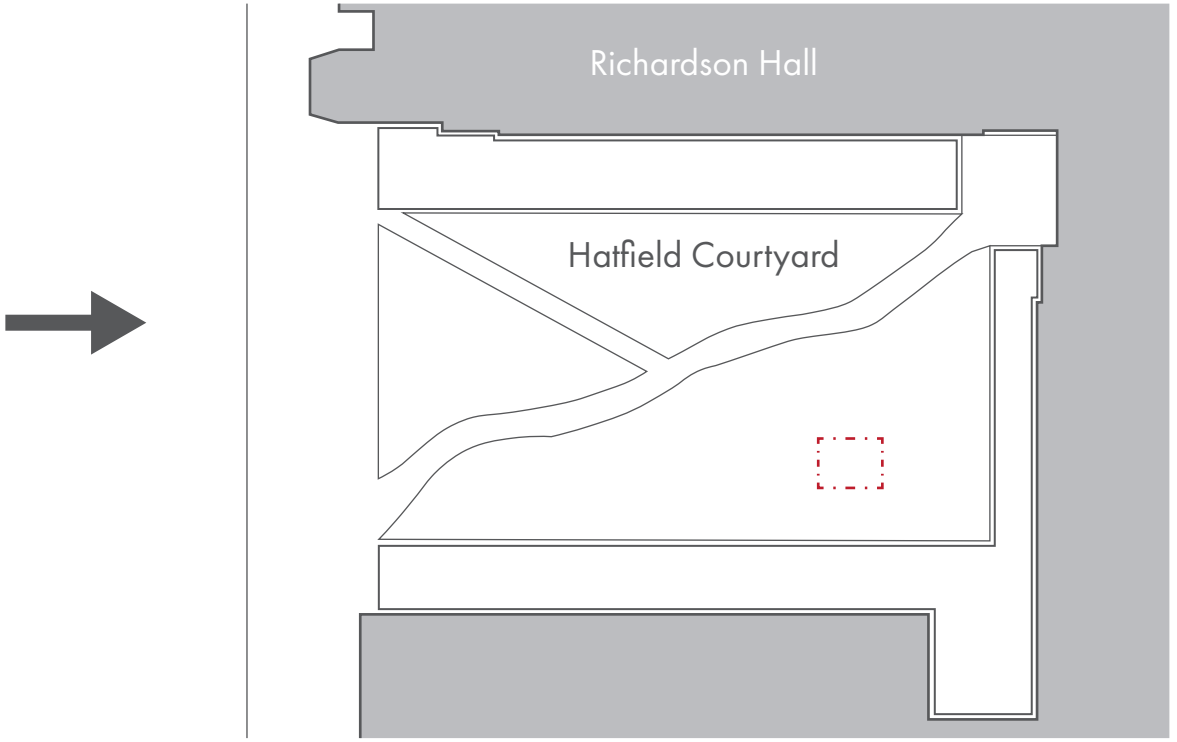


Transport the prefabricated walls and frame tops to site. Each prefabricated element can be carried by 3-4 people

On Site - Foundation

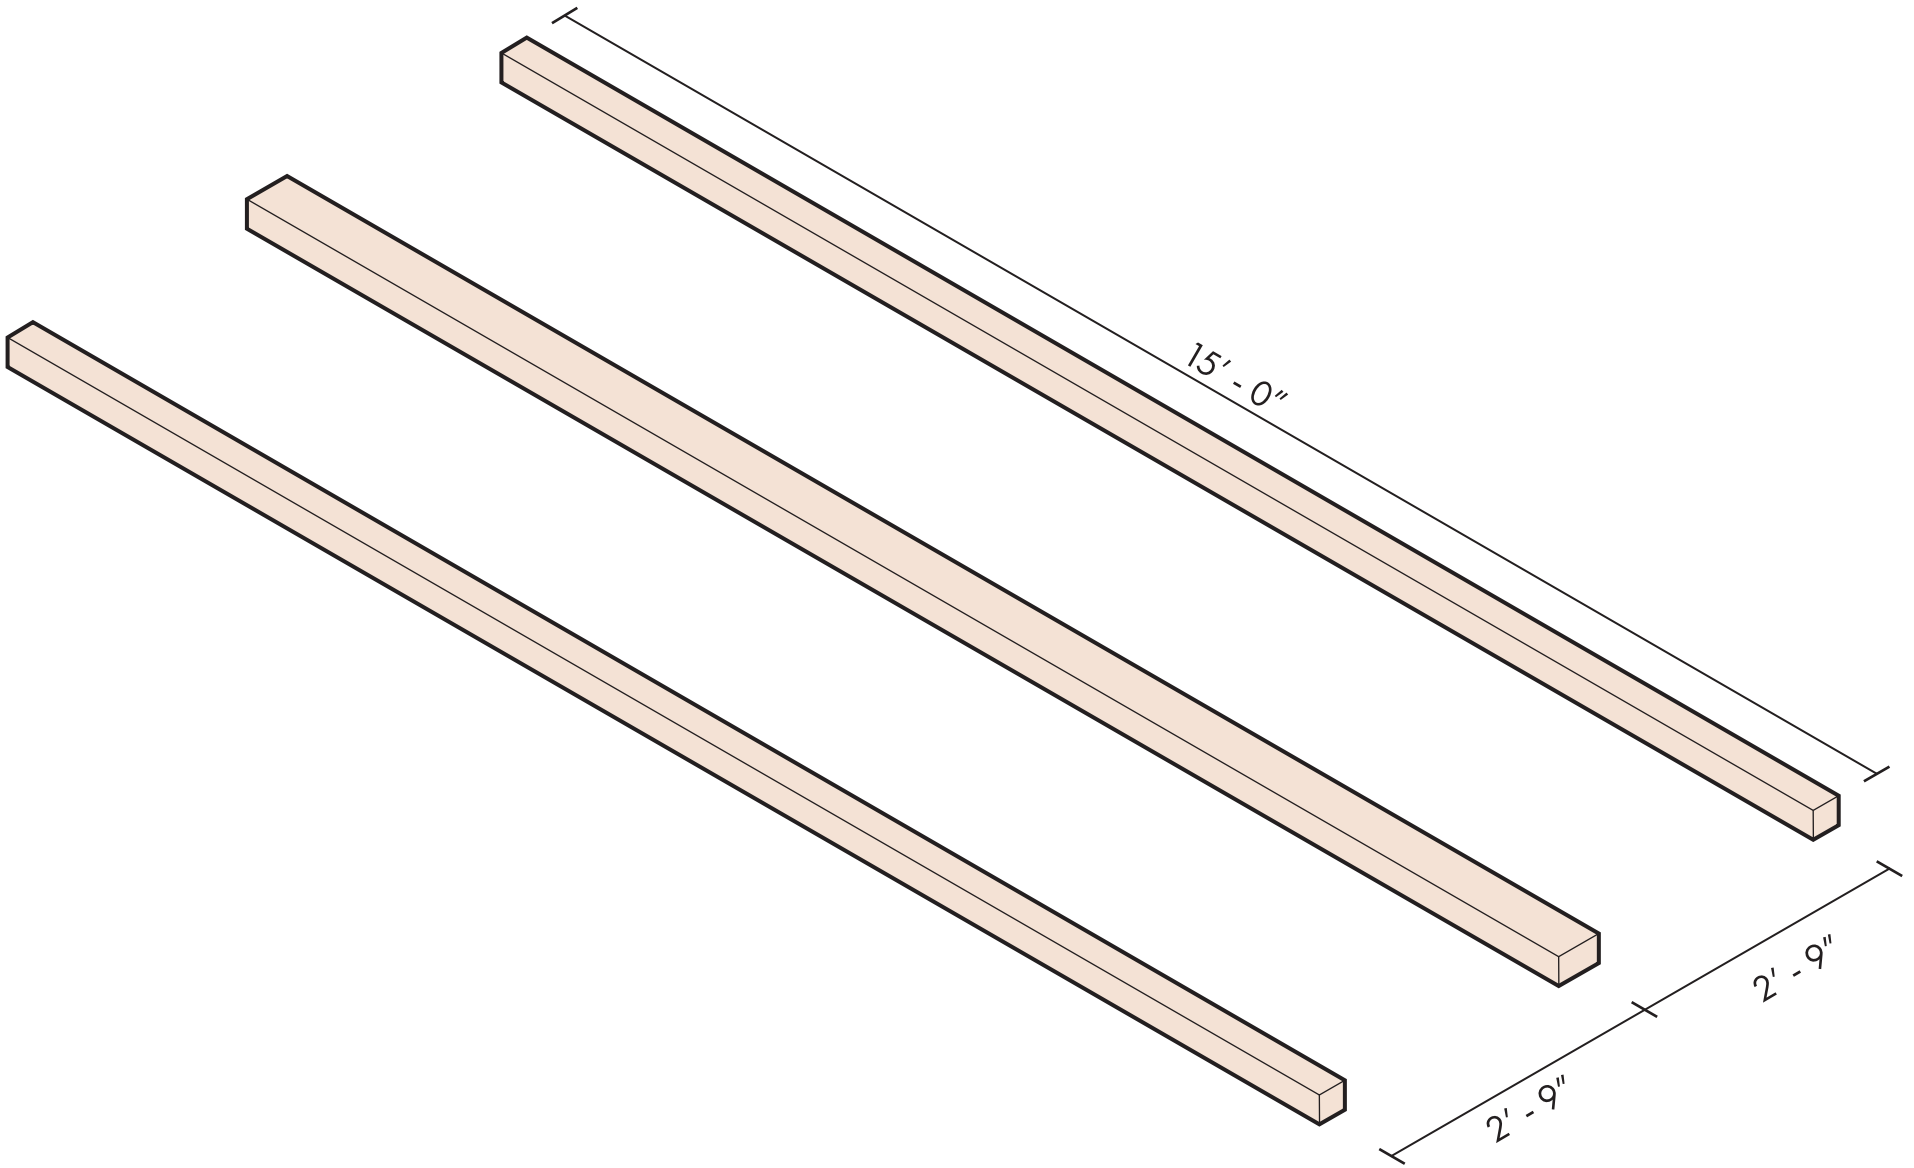


Lay the two 4x4s on either end of the 4x6 by 2'-9"

8.

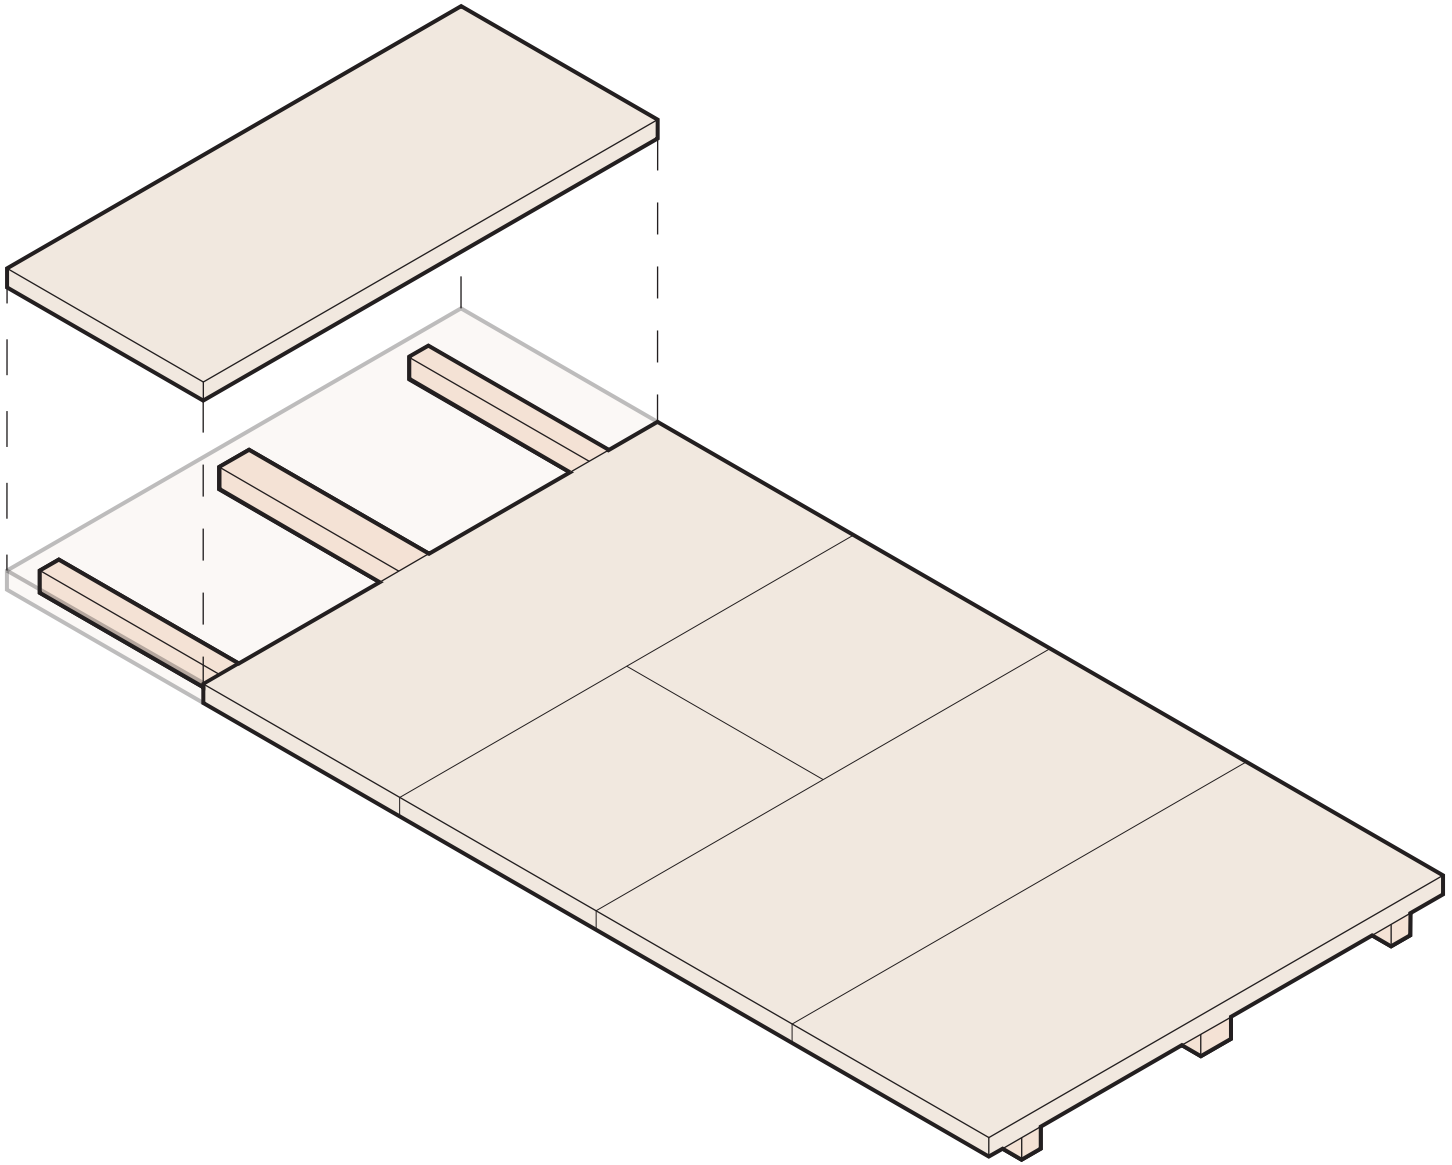


Lay the four 3’x7’ MPP on top of the 4xs with the two 3’x3.5’ MPP in the center

9.

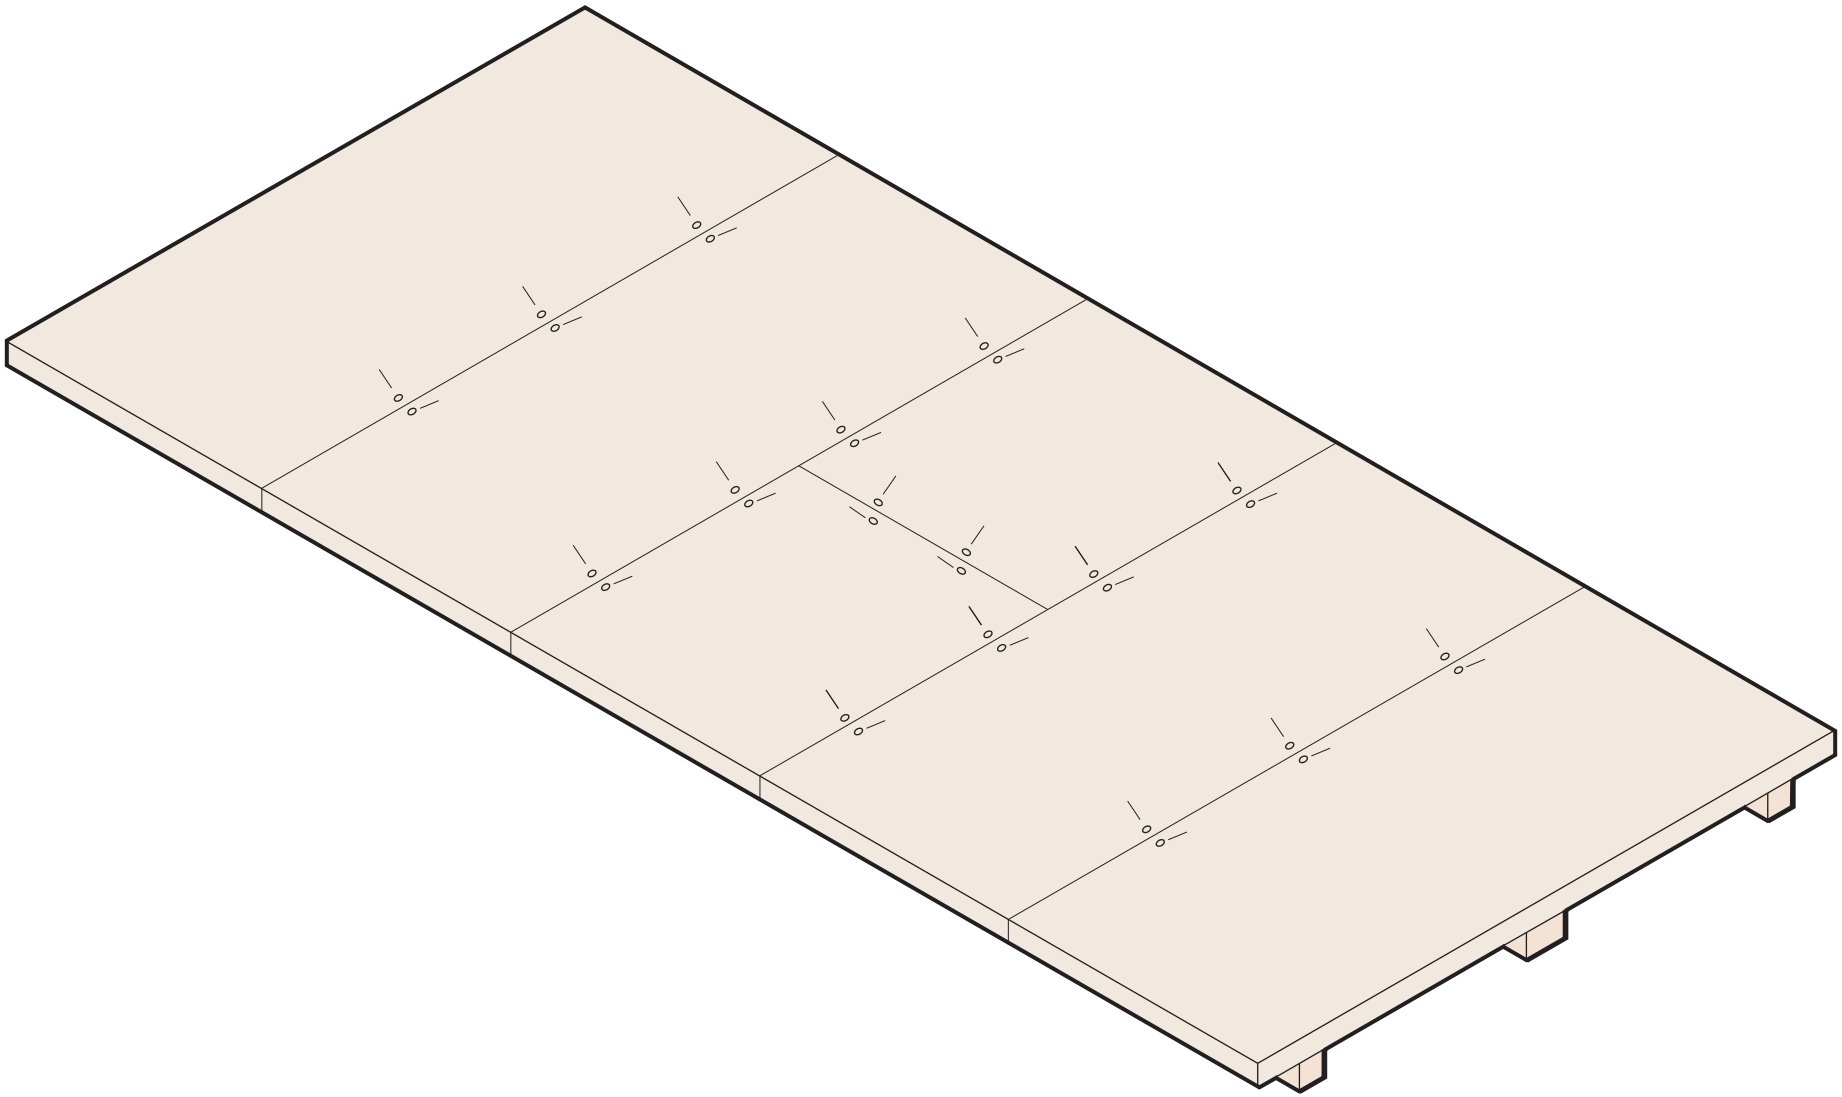


With 32 screws, screw diagonaly into the MPP to secure each panel to one another

10.

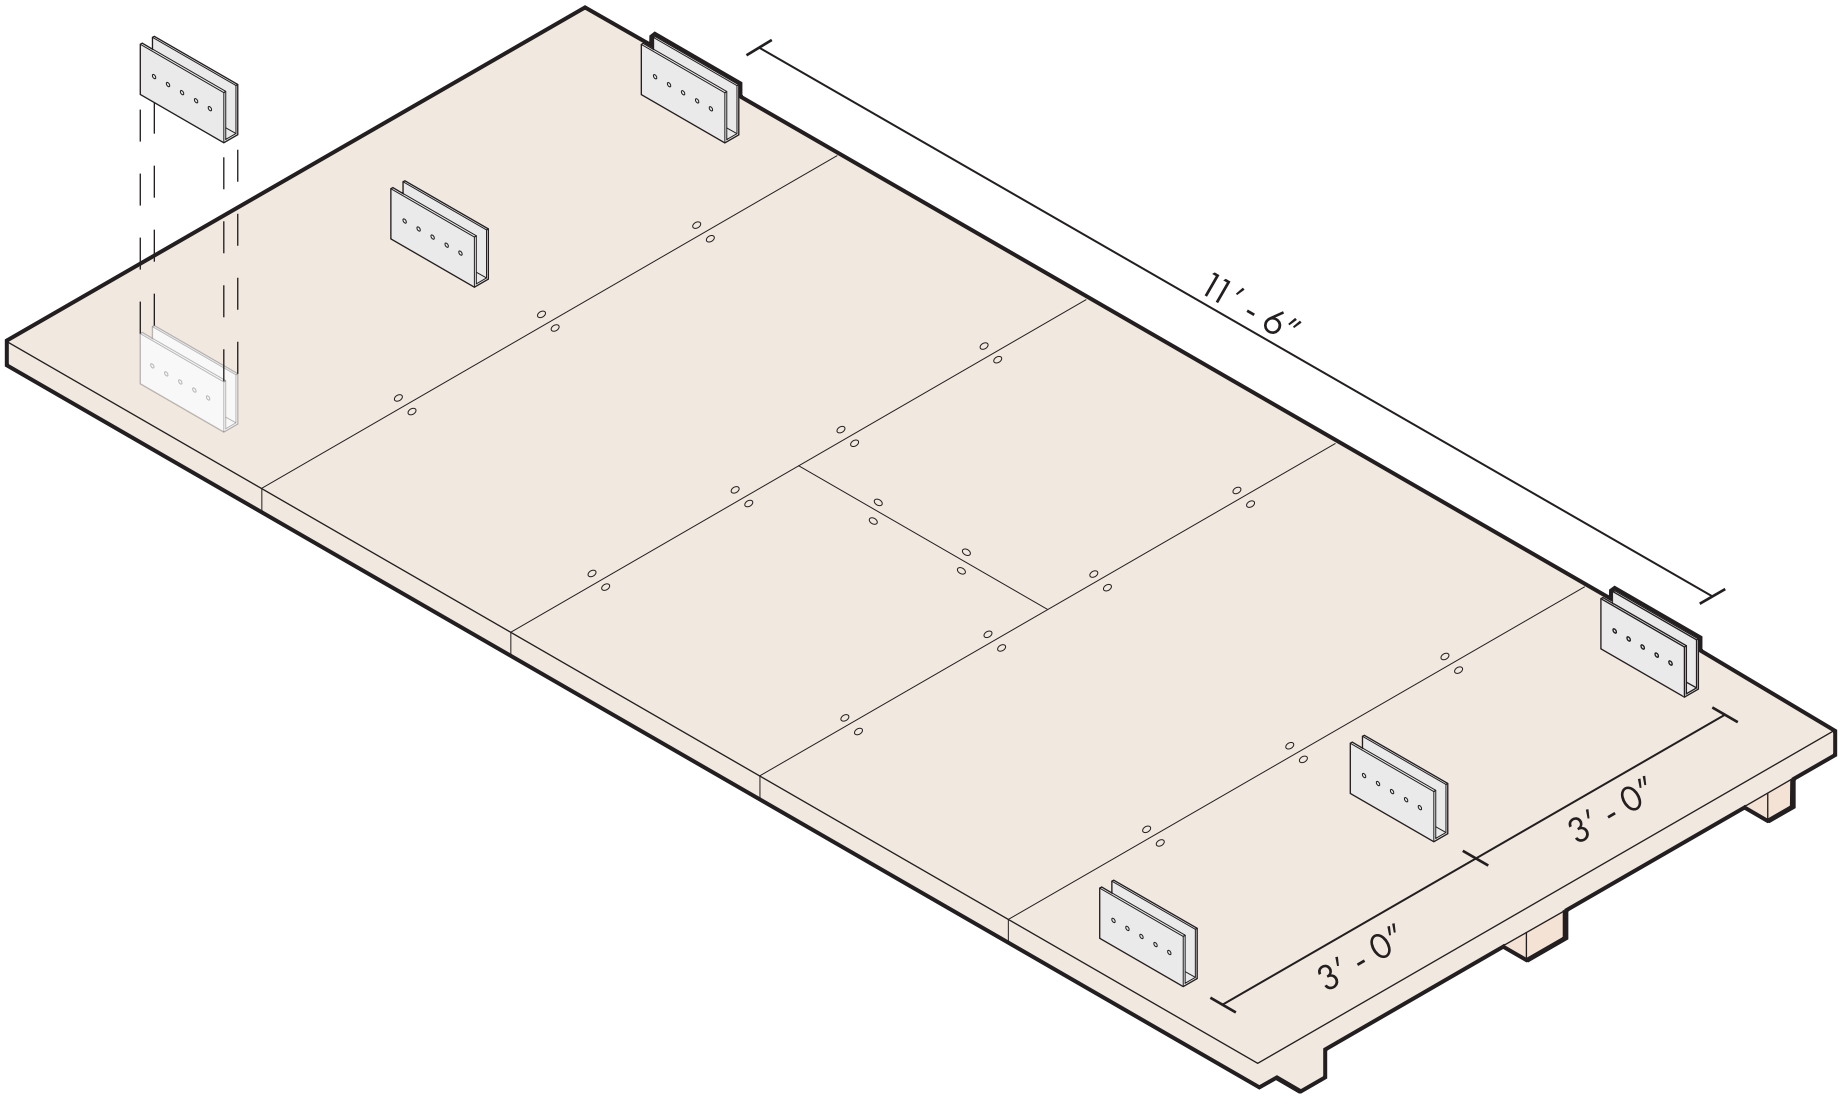


Secure six U-channel connectors into two rows of three spaced 11′-6″ from one another. Space the connectors 3′ in both rows

11.

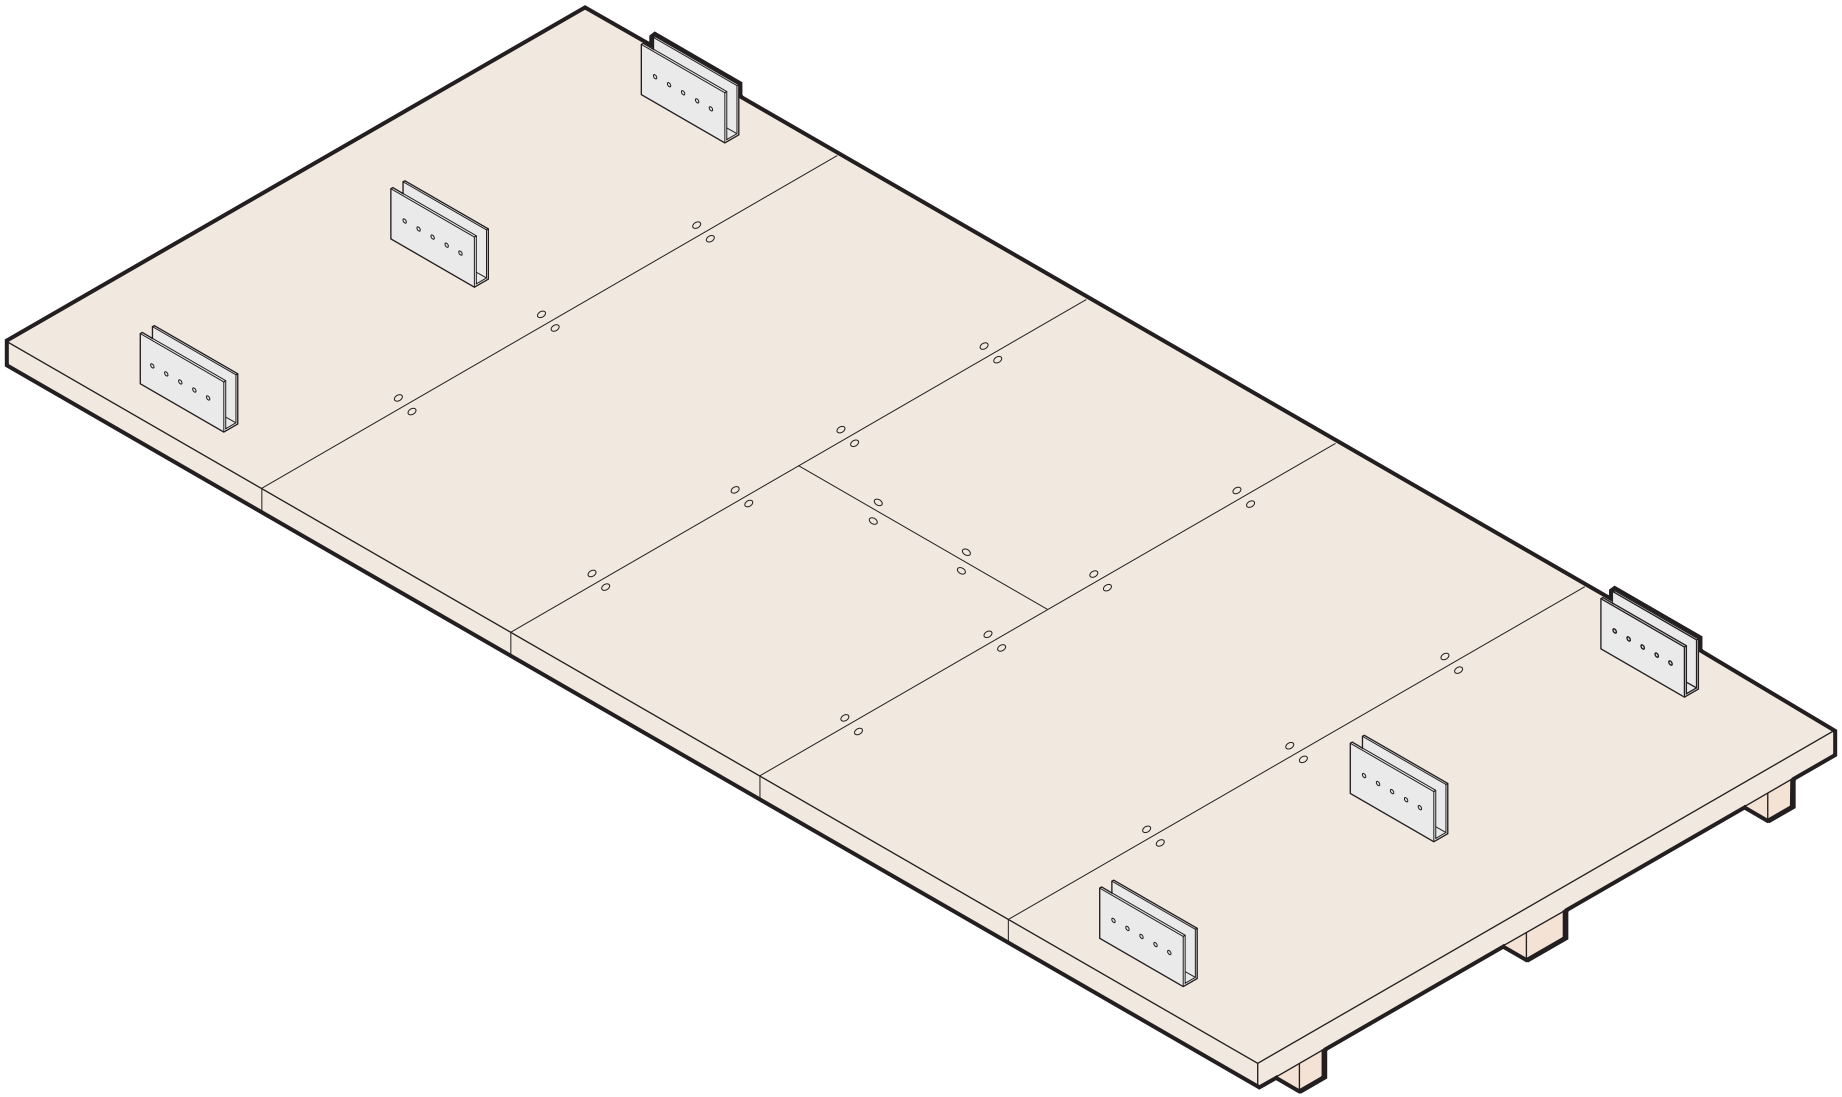


Foundation complete


On Site - Construction

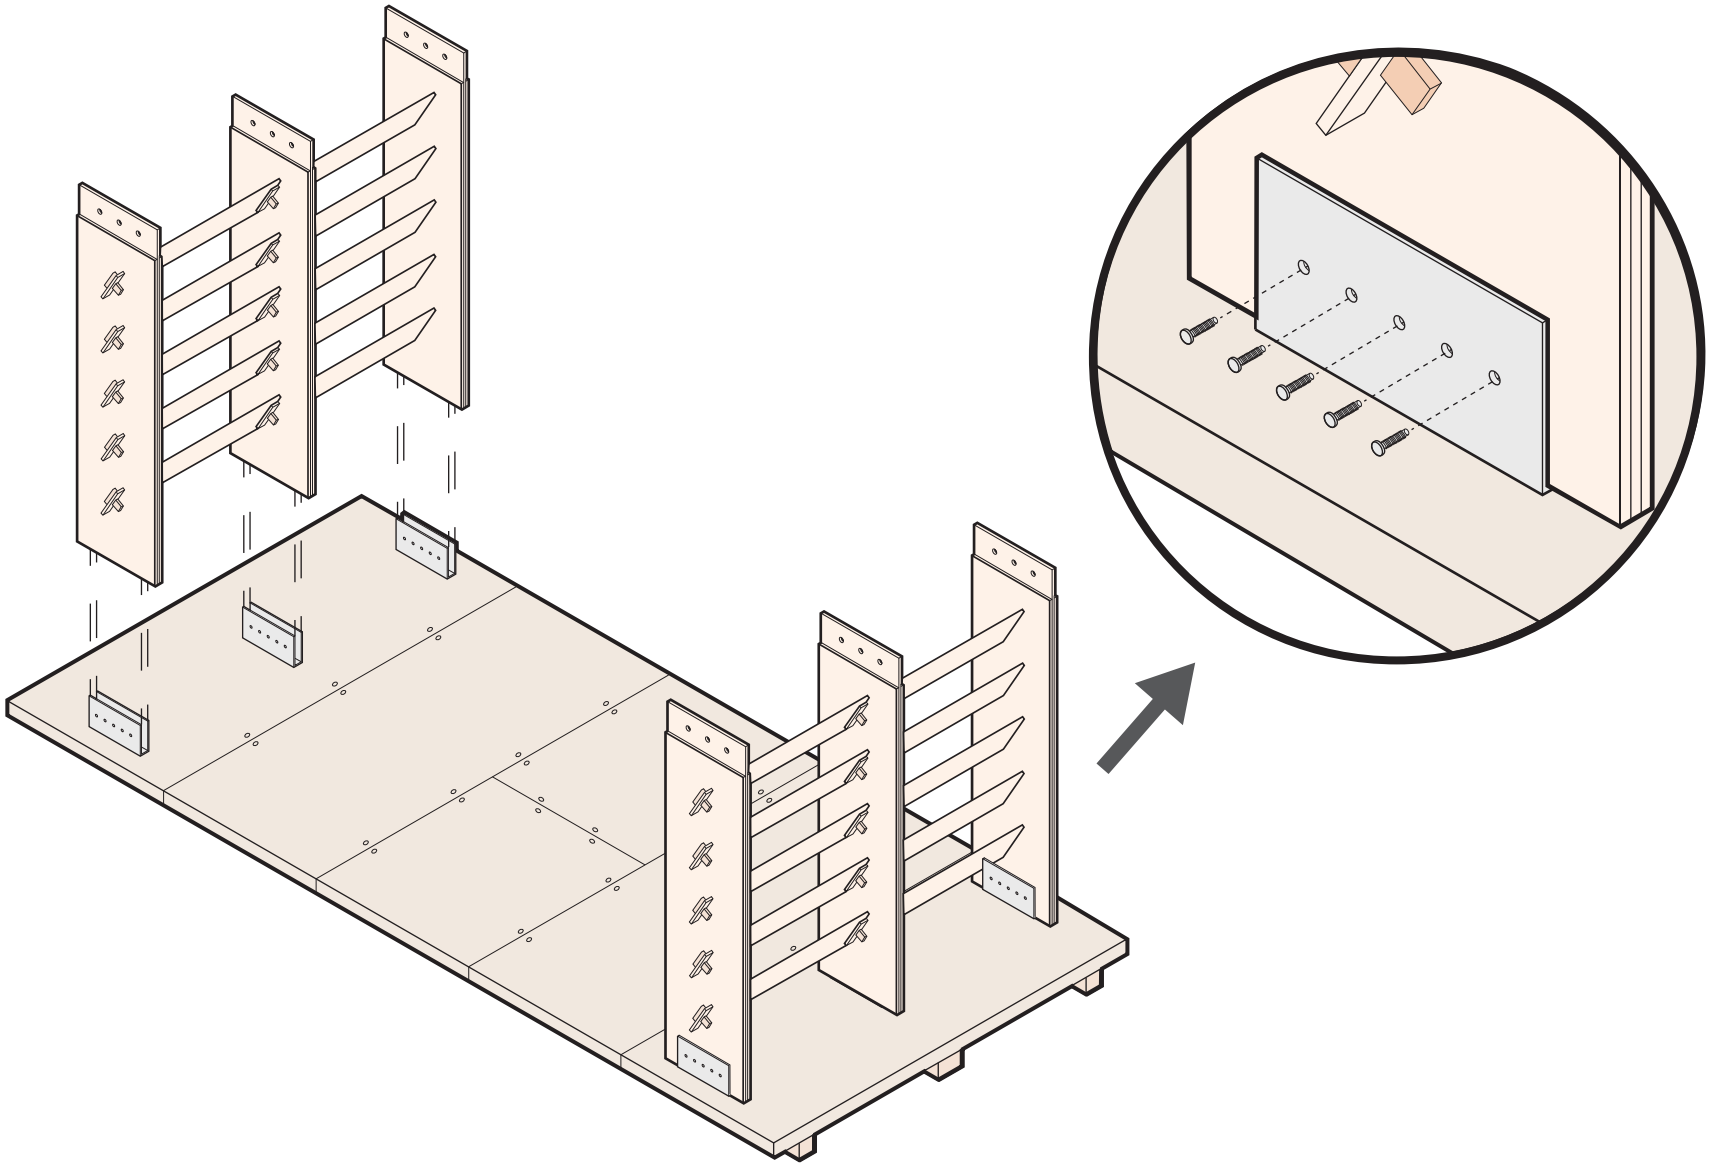


Place the prefabricated wall modules into the U-channel connecters. Secure each column with five bolts

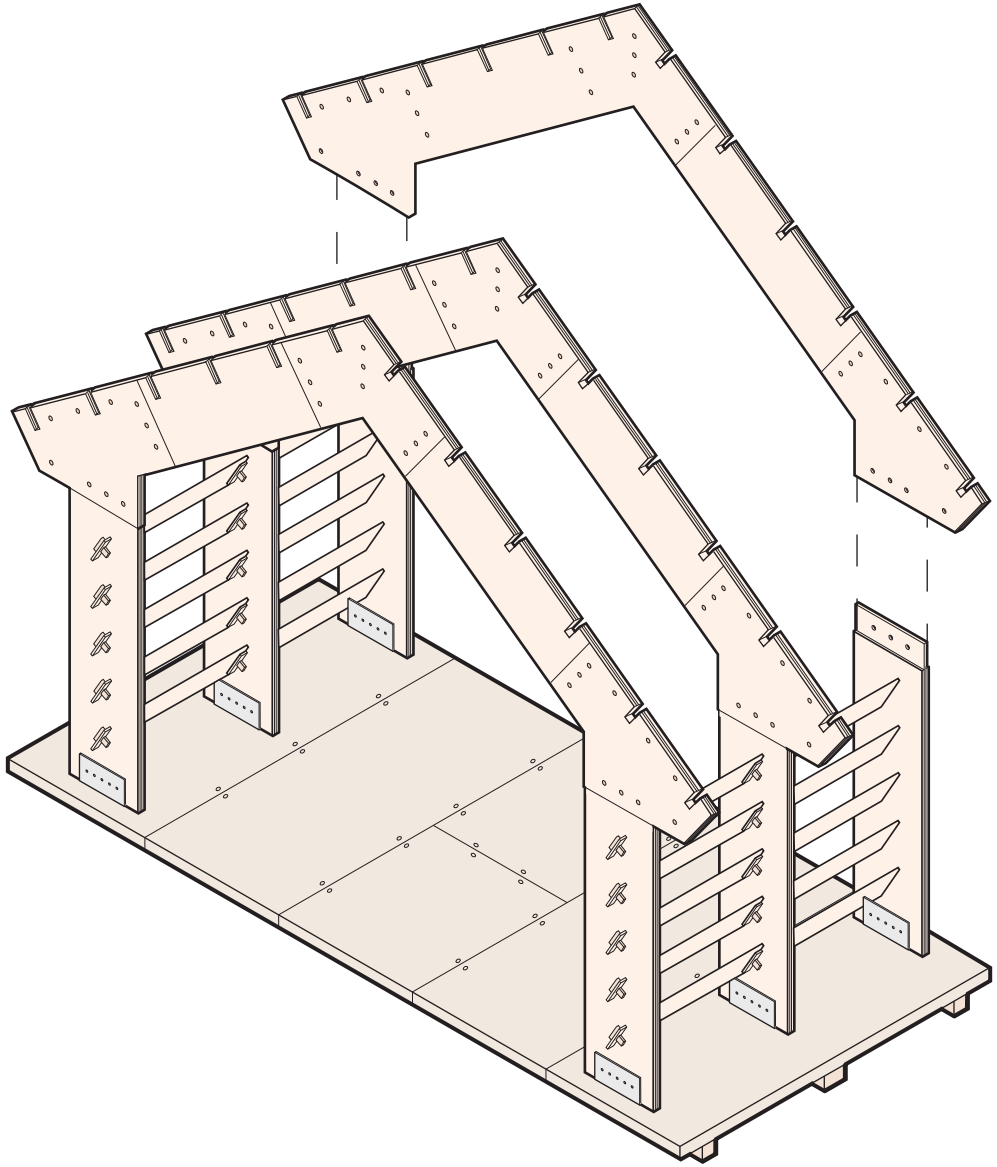


Place each of the frame tops on the columns. Secure with dowels

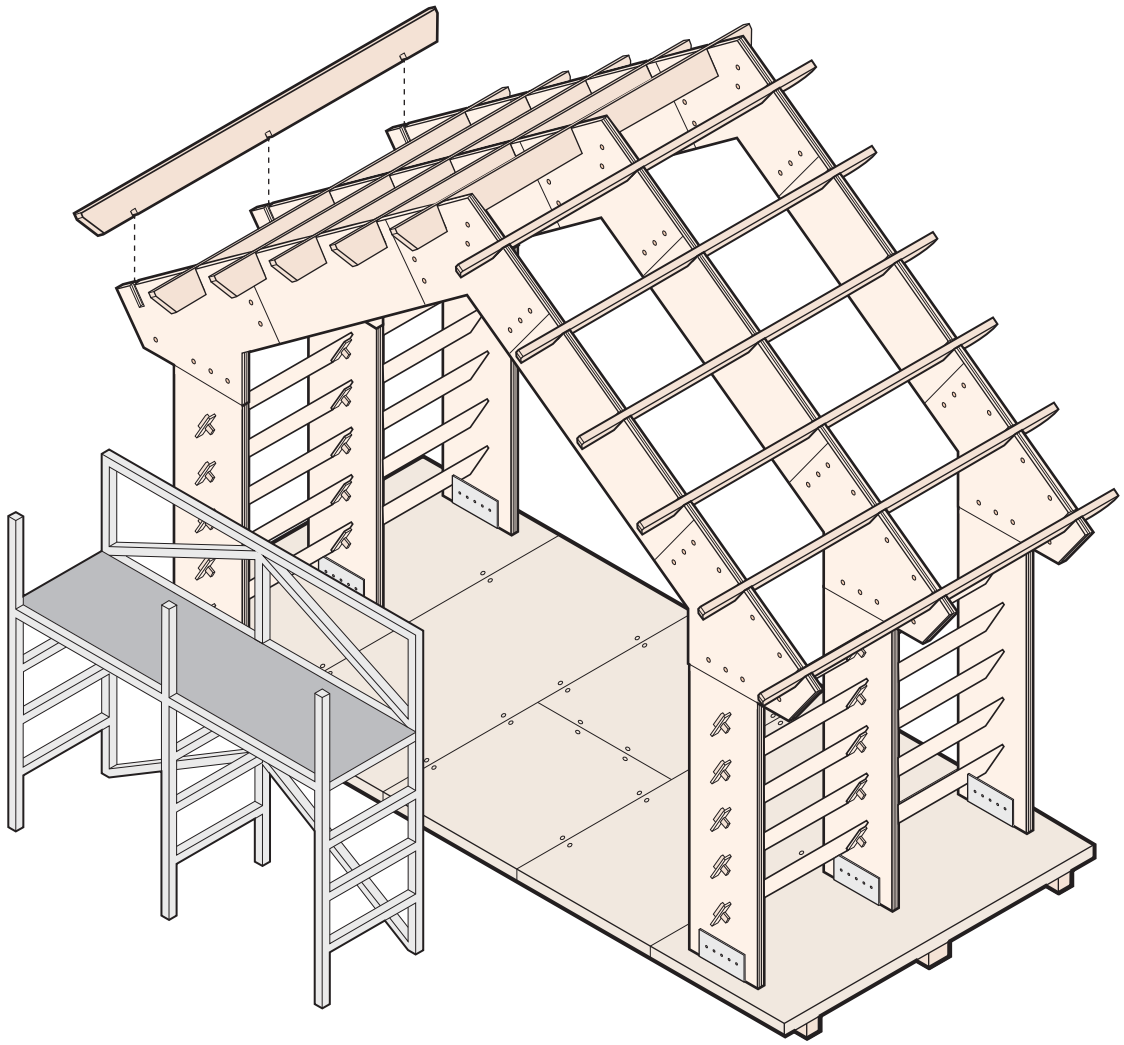

Hammer in place the twelve 2x6 purlins into the gaps in the frames. Use scaffolding to achieve additional height

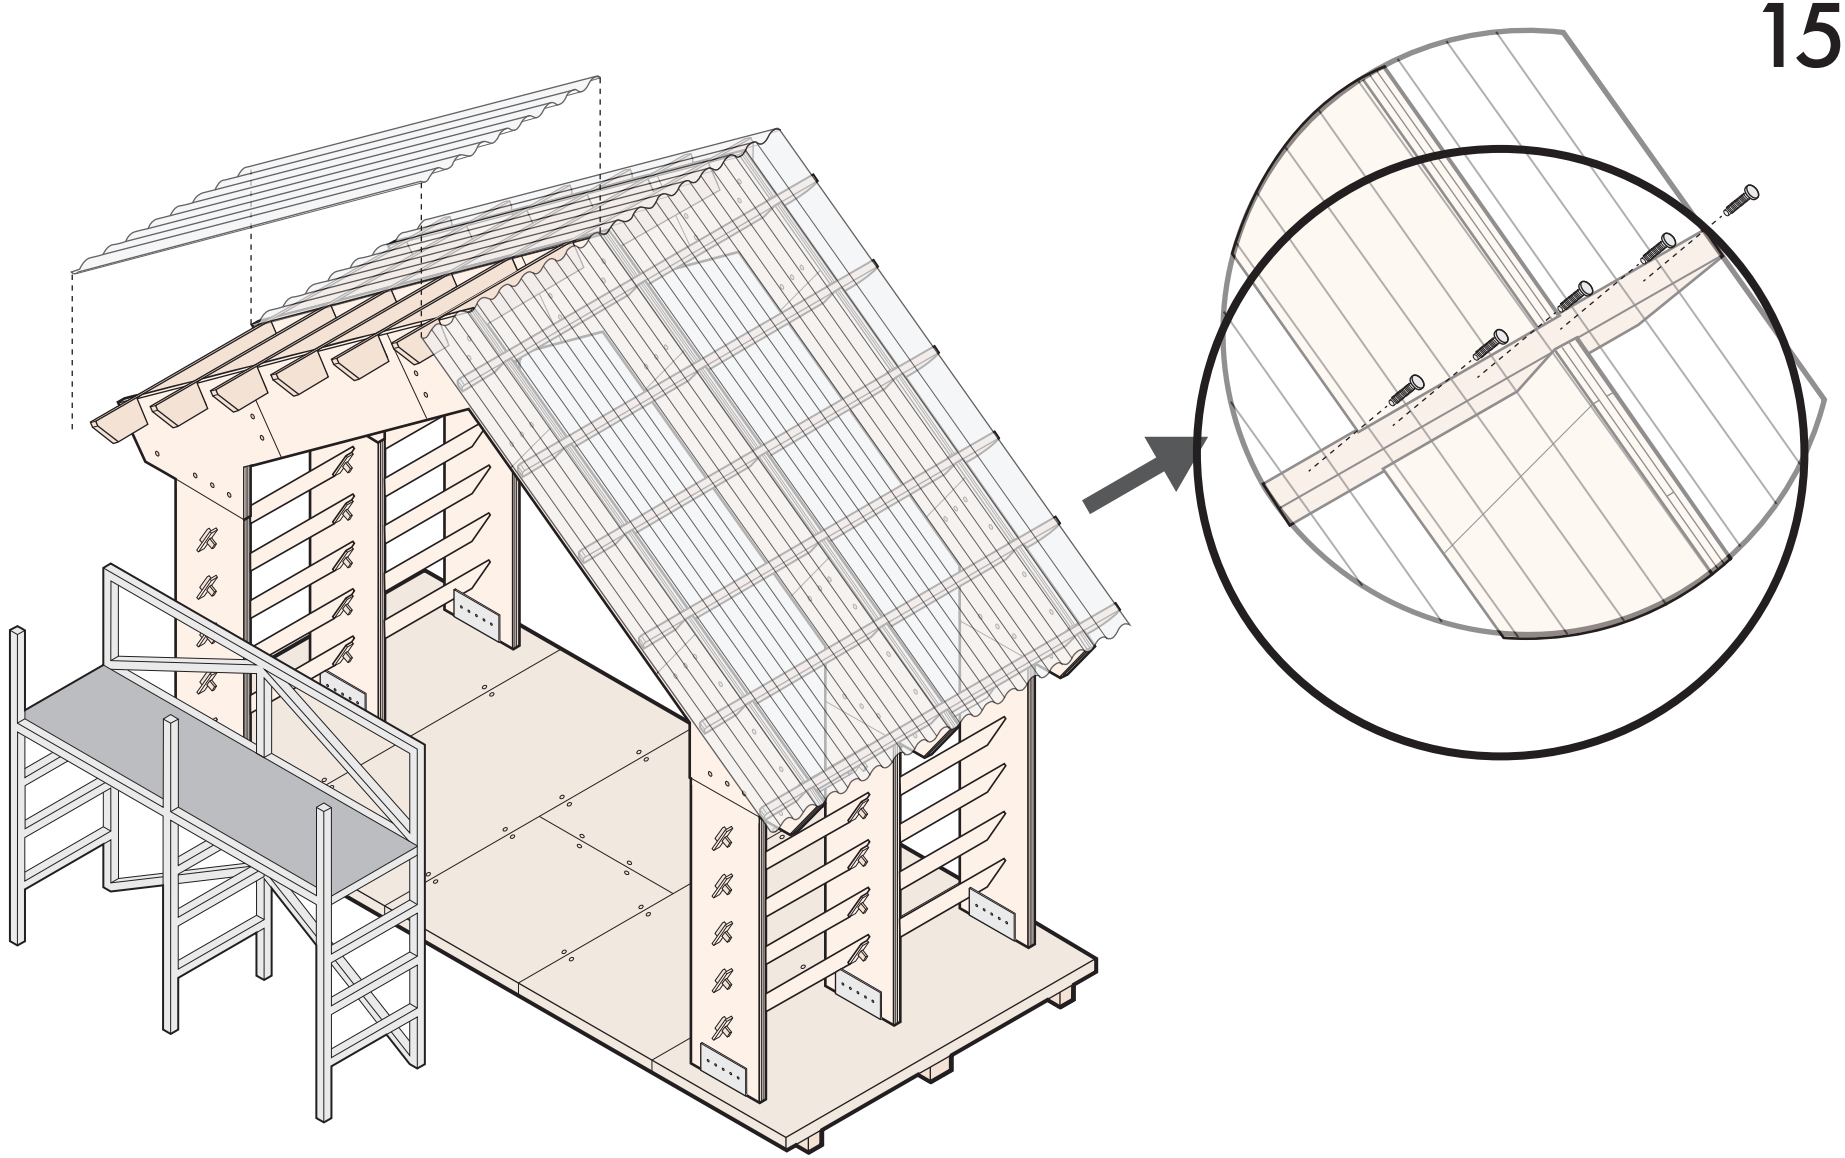

Screw Fiberglass roof panels into the purlins at each “valley”. Use scaffolding to achieve additional height

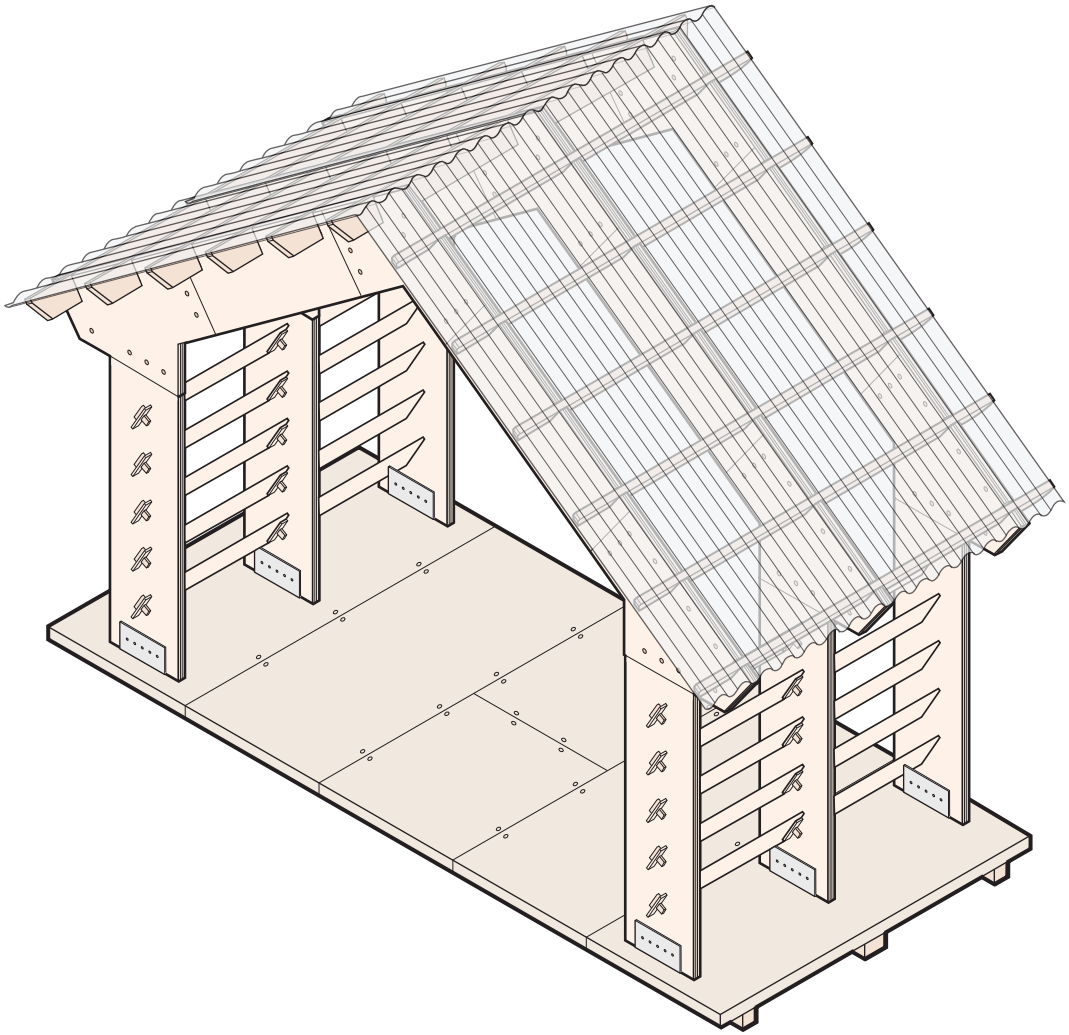

Structure complete