

The FLAVIA® Creation 300 TECHNICAL MANUAL

Document No: 70-41-3584 Rev. 1

SKU: 18000587



Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 1 of 86
-------	----------	-----------------------------------	--------------

Date	Issue	Section	Modifications and/or additions	Signature
Jan 2022	1	All	First Issue	BA

Contents

1)	General Information.....	5
1.1	Overview	5
1.1	Safe Working Practices.....	5
1.2	Machine Specifications	8
1.3	Software Revision History.....	9
1.4	Software Updates	9
1.4.1	Software Update with IOT/ Telemeter Module	10
1.4.2	Software Update with USB Stick	10
2	Installation.....	14
2.1	Client information	14
2.2	Overview	15
2.3	Tools required for installation.....	16
2.4	Installation sequence	17
2.5	Key operator training.....	21
2.6	Moving the brewer	25
2.7	Optional Modules	27
2.7.1	FLAVIA® CHILL REFRESH™ (NA region only).....	28
2.7.2	Enabling Optional Module.....	29
2.7.3	Other Optional Kit – Mains Water Connection Kit	30
2.7.4	Other Optional Kit – Ambient Connection Kit	30
3	Water System Schematic	36
4	PCBA Cable Connections	38
5	Maintenance Recommendations.....	43
5.1	IOT Module Replacement.....	43
5.2	PCBA Change.....	47
5.3	Filtration / Filter Recommendations	49
5.4	Drain Procedure	51
5.5	Descale Procedure	54
5.6	Flush Procedure.....	55
5.7	Ambient Water Calibration Procedure	57
5.8	Hot Drink Calibration Procedure	59
5.9	Operator Mode.....	61
5.9.1	'Operator Settings' Menu Tree.....	62
5.9.2	Regions & Languages.....	63
5.9.3	Site Preferences	63
5.9.4	Maintenance	64
5.9.5	Networks	65
5.9.6	Sales & Audits.....	65

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 3 of 86
-------	----------	-----------------------------------	--------------

	Error Messages and Events	66
5.10	66	
5.10.1	Error Messages Details / Fix.....	67

1) General Information

1.1 Overview

This service manual covers the current models of the FLAVIA® Creation 300. These models can be distinguished from previous FLAVIA® models by their appearance and serial numbers.

Serial number labels are in various locations including under the brewer and behind the drip tray. It contains two codes, the product number, and the machine serial number, in the following format:

<Product number> <Machine serial number>

For example: **18000587 000001**

The **Product Number** is defined number for NA market.

The **Machine Serial Number** is a unique incrementing sequential number, starting at '00000001', that is **not** zeroed if the Machine Version or Country variant changes. For example:

18000587 00035657 would proceed 18000587 **00035658**

This manual is designed to act as a ready reference for Service Engineers who have received formal technical training in these models.

1.1 Safe Working Practices

Electrical Safety

- ☒ **Do** isolate the machine from the electrical supply before attempting any repair where there is any exposed connector at a potential of more than 50 V AC.
- ☒ **Do** verify that the machine is electrically safe by suitable testing after completion of a repair.
- ☒ **Do not** under any circumstances, modify or bypass safety circuits.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 5 of 86
-------	----------	-----------------------------------	--------------

-  **Do not** attempt to repair conductors in any heater element circuit. Replace the affected loom complete.
-  **Do not** leave unattended any machine that is switched ON with its external covers removed.

Earthing Installation



DANGER Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance without undertaking official training from Lavazza Professional.

WARNING

Electric Shock Hazard

Improper earthing can result in electric shock.

This appliance must be earthed. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing a current path for the fault current. This appliance is fitted with an earthed plug and power cord. The plug must be plugged into an outlet that is earthed and has the correct Live/Neutral polarity.

Service engineers should consult a qualified electrician if any doubt exists as to whether the electrical supply outlet is correctly installed.

1. A power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. This cord is 1.9m for NA brewers.
2. Lavazza Professional advises against the use of extension leads as they could present the risk of a trip or fire hazard.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 6 of 86
-------	----------	-----------------------------------	--------------

General Safety

- ☒ **Do not** work on a machine without the client's knowledge.
- ☒ **Do not** obstruct passageways.
- ☒ **Do** clear up any water spillage as soon as they occur.
- ☒ **Do** familiarize yourself and comply with the client's own health and safety requirements.
- ☒ **Do** clear away any packaging, litter, etc., when the work is completed. Observe any recycling requirements in force.

Hygiene

- ☒ **Do not** allow water or food contact components to become soiled.
- ☒ **Do not** use proprietary cleaning agents on or near water or food contact components.
- ☒ **Do not** smoke while in the vicinity of the machine.
- ☒ **Do** maintain the highest standards of personal hygiene.
- ☒ **Do** wash your hands thoroughly prior to any work on the machine.
- ☒ **Do** leave the machine clean when you have finished.
- ☒ **Do** use only Lavazza Professional genuine replacement components to prevent possible tainting of the drinks.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 7 of 86
-------	----------	-----------------------------------	--------------

1.2 Machine Specifications


Weight (kg)		6.3kg / 13.9lbs	
Height (mm/inches)		421mm / 16.6"	
Width (mm)		210mm / 8.3"	
Depth (mm)		450mm / 17.7"	
Power Supply (V AC)		120V - 60 Hz (NA)	
Typical Current (A)		13A (NA)	
Rated Power Input (W)		1440 W	
Nominal water heater temperature (deg C)		92 – 96	
Typical drink temperature in paper cup (deg C)		76	
Recommended Drink Volumes (ml) with pack	NA	Reg. Tea / Coffee: 207 / 7 oz Espresso: 89 / 3 oz Tea: 207 / 7 oz Choco: 170 / 6 oz Cappuccino: 234 (excl. foam)	
Cycle Time (sec)		Standard:	75
		2-pack:	93
Water source option		Jug fill (should us with filtered water or descaled regularly)	
		Mains water connected (should us with filtered water or descaled regularly)	
Water supply requirements *Only for mains water connected units		Cold potable sodium free water via External drinking water carbonate hardness filter (required)	
		Minimum Flow Rate	2.0 L/min (0.53 US gal/min)
		Dynamic water pressure	Min. 1 bar/ 15 psi Max. 6.8 bar /100 psi

1.3 Software Revision History

The history of production release versions of software for each of the two control systems in the FLAVIA® C300 is as follows:

Firmware Version	Date	Software Version	Description
UI	24/01/23	2.0	Production machine latest software release.
Brewer	24/01/23	5.0	
Telemeter	24/01/23	1.4.0.0	

The Software versions can be found in “Settings” page. To find this page press and hold top left corner of the display.

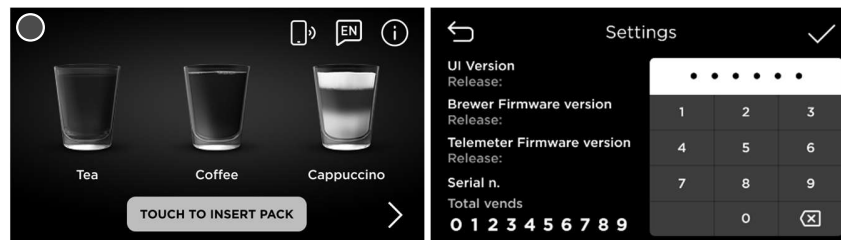

Please make sure that the brewer has the latest software release. If you see any older revision compared to table above, update the brewer by following procedures in section 1.4.

1.4 Software Updates

Brewer has three SW versions which can be updated with only an internet connection, USB stick, or both. Please check the table below for the update options.

	Internet Connection	USB
UI	NOK	OK
Brewer	OK	OK
Telemeter	OK	OK

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 9 of 86
-------	----------	-----------------------------------	--------------

If brewer connected to internet,

- Telemeter firmware can update itself. Therefore, no action is needed.
- Brewer firmware can be update by IOT module via internet connection. Therefore, no action is needed.
- UI firmware only can be updated by USB stick.

If brewer isn't connected to internet,


- Telemeter firmware can't be updated manually and need internet connection to download the latest IOT firmware version.
- Brewer firmware can be update by USB stick. Please follow the USB software update steps down below.
- UI firmware can be update by USB stick. Please follow the USB software update steps sown below.

1.4.1 Software Update with IOT/ Telemeter Module

IOT module updates brewer and telemeter module SW automatically. No action needed.

1.4.2 Software Update with USB Stick

Brewer has 2 USB slot at its back panel in case of any UI And Brewer software updates. Display USB slot for UI on left and PCBA USB slot for software updates on the right.

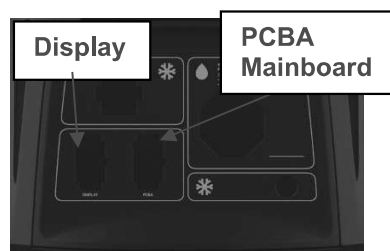



Caution: Do not move a brewer when the cold tank is full of water! Please check and follow the Section 2.6 before moving the brewer.

Please note that all of USB brands and capacities may not be suitable for USB stick update. Please use the recommended brands and sizes for Brewer and UI SW update.

- SanDisk 16GB / SanDisk 32GB
- HP 16GB / HP 32GB
- PNY 16GB
- Kingston 32GB
- Integral 32GB

Please follow the steps below for manual software updates.

- Plug the USB stick into computer.
- Make sure that USB is empty. If not, please clear up the space.
- UI SW
 - Unzip the file
 - Drag and drop the files into USB.
 - There will be 2 files like below.

Name




project.chk



Project_Image.img

- PCBA SW
 - Change the PCBA SW file name to **app.bin** (check below)
 - Drag and drop the files into USB.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 11 of 86
-------	----------	-----------------------------------	---------------

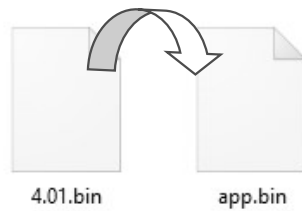

The images are reference only.

- At the end the updates USB stick folder should be like below and it should have 3 folders.



- Make sure that you ejected the USB stick before removing from computer.



- Unplug the main power cable to turn off the brewer.
- Unplug the PCBA USB dust cover.



- Insert the USB stick to that slot
- Plug the brewer main power cable to turn on brewer.
- Brewer will turn on and start updating.



- Brewer will inform you via display when the update is finished.
- Unplug the main electricity cable to turn off the brewer.
- Remove the USB stick from slot.
- Plug back the PCBA USB protection rubber
- Unplug the DISPLAY USB protection rubber



- Plug the brewer main electricity cable to turn on brewer.
- Brewer will turn on and start updating.
- Brewer will inform you via display when the update is finished.
- Unplug the main electricity cable to turn off the brewer.
- Remove the USB stick from slot.
- Plug back the DISPLAY USB protection rubber
- Plug back the main electricity cable to turn on the brewer.

2 Installation

2.1 Client information

Checklist

- Intended machine location.
- Place on a stable surface and place out of the reach of children.
- Whereabouts of machine to be installed and product.
- Name of key operator and relief key operator (the persons responsible for cleaning and filling the machine).
- What level of drinks audit, if any, will be required?
- Availability of client and key operator(s) for demonstration and training.
- Any special circumstances, e.g., safety requirements.
- Advise the client of the time taken for installation and the key operator(s) training requirements.

Check that the following services are available:

- Potable water supply with between 1 and 6.8 bar pressure terminated within 0.8 m of the machine by an accessible stopcock.
- The stopcock should be terminated with the following connection:
 $\frac{3}{4}$ " BSP x $\frac{1}{4}$ " BSP push fitting (WRAS approved or equivalent) isolation valve.
- Electrical supply mains terminated within 1.5 meters of the machine by an accessible switched socket with suitable current rating (values dependent on region. See Section 1.3 for details).

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 14 of 86
-------	----------	-----------------------------------	---------------

Services must be accessible without moving the machine.

2.2 Overview

Safety compliance warning!

All electrical and plumbing directives in this section are mandatory in the UK only but are recommended as good practice in non-UK countries. If in any doubt, please follow local guidelines.

Overview

- 1) Check for transit damage.
- 2) Remove the packaging materials from the machine.
- 3) Ensure the machine is fitted to a stable, level surface
- 4) Do not install where a water jet could be used.

Electrical Supply

You will need to connect to a suitable switched electrical supply to meet the requirements for isolation of electrical equipment. (Refer to rating label on rear of machine or user guide.)

Do not connect any other appliances to the socket that your C300 is connected to.

Your brewer comes with mains lead and has a ground wire with an earth plug. Only this lead should be used - no old leads should be re-used.

The plug must be plugged into an outlet that is properly installed and earthed.

Plumbed Systems

A plumbed brewer will need mains drinking water supply.
A stopcock should be terminated with the following connection:

$\frac{3}{4}$ " BSP x $\frac{1}{4}$ " BSP push fitting (WRAS approved or equivalent)

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 15 of 86
-------	----------	-----------------------------------	---------------

isolation valve.

An in-line taste, odour, and hardness filter should be fitted on the mains water supply to this machine (not supplied) to achieve the best possible taste and quality from our drinks. Otherwise, brewer should be descaled regularly which will requested by brewer automatically. This will also avoid premature failure due to scale related deposits.

Water pressure must be between 6.8 bar (100 psi / 0.68 MPa) and 1 bar (14.5 psi / 0.1 MPa).

Brewer to be connected to a potable cold-water supply or used with jug filled water (preferable filtered). Chemically softened water is not suitable for use with this product.

NOTICE:

- Do not use water that has come from a water softener or contains sodium.
- Install in accordance with local plumbing regulations.
- Jointing compound should not be used in the water supply to the system, as this will affect drink flavour, only use PTFE tape if require.
- Do not locate the water supply above the mains power socket.
- Any questions, please consult a qualified electrician or plumber.
- We draw your attention to the requirements of the Water Supply (Water Fittings) Regulations 1999.
- Please stick the French version mains water connection sticker for Canada.

2.3 Tools required for installation

Recommended tools

Torque spanner @ 3 Nm (3 in-lbs.) with 32mm (3/4 in) open-ended attachment

John Guest ring attachment

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 16 of 86
-------	----------	-----------------------------------	---------------

Adjustable Spanner 10 Inch

10mm ring spanner

Adjustable Water Pump pliers

Phillips No.1 screwdriver

Phillips No.2 screwdriver

RCD Adapter

Safe Knife

Mains Polarity Tester

Paper towels

5-litre Bucket

¼ inch Plastic Tubing Cutter

The FLAVIA® C300 Technical Manual

The FLAVIA® C300 Online User Guide

2.4 Installation sequence

This sequence covers the installation of the FLAVIA® Creation 300.

Installing Plumbed-in Machines

- Locate hose and water blocker. If replacing an existing machine, be sure to use a new hose and water blocker.
- 
 - Confirm water blocker is set at mark 2. This will prevent an excess of 10 liters of water flooding the premises.
 - Ensure that the hose is new and not re-used.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 17 of 86
-------	----------	-----------------------------------	---------------

- Connect water blocker to water supply via stopcock, fit 15mm to 3/4" BSP brass fitting found in the packing kit if necessary.
-
- Check clients supply is safe, secure and not leaking before making any connections.
 - If it is necessary to use the brass fitting, ensure a new compression olive is fitted as reused ones can cause leaks.
- Tighten water blocker with 32mm open-ended torque spanner if available.
 - Ensure spanner is calibrated and set to 3Nm
 - Connect the straight end of the hose to the water blocker and torque with John Guest attachment.
 - Ensure there is an in-line water filter (if not, please install an in-line water filter)
 - Turn on mains water supply and flush approximately 25 liters (6.5 gallons) of water through the customer's pipe work into waste bucket until the water runs clear.
 - Ensure water runs clear to prevent contaminating the machine tanks.
 - Connect the hose to the machine inlet valve; tighten with John Guest attachment and torque spanner.
 - Turn on the water supply and check water blocker and inlet valve connections for leaks.
 - Please use the French mains water connection sticker
 - Test mains electrical supply.
 - Please follow the on-screen prompts and enter the following information:
 - a. Select Language
 - b. Select Country
 - c. Ensure the customer reads and accepts the End-User License Agreement
 - d. Enter Location Information

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 18 of 86
-------	----------	-----------------------------------	---------------

- e. Site preferences -
 - i. Water Source- two options available, “plumbed-in” or “jug fill”.
 - Please select “plumbed-in” for mains water connected units
 - Please select “jug-fill” for not mains water connected units
 - ii. Energy Saving- This comes default set to 4 hours but can be turned off or adjusted to fit your client’s needs.
 - iii. Time zone – Please choose the suitable option for that location
 - iv. Cold water – Please choose the suitable option for that location
 - If unit has ambient water connection kit, then choose “Ambient water kit”
 - If unit connected to Flavia Chill Refresh, then choose “Flavia Chill Refresh”
 - If unit is as it is produced, then choose “None”

Please note: If C300 connected to Flavia Chill Refresh, brewer should be connected to mains water.

The brewer will attempt to connect to the internet and download the latest Telemeter and Brewer software revisions after installation.

- The brewer will ask you to perform flush. This process runs water through the pump, thermoblock and the dispensing water system.
- Flushing the Brewer

Follow the interactive video on screen that will include the following steps:

 - a. Please add water for jug fill units until max line.
 - b. Remove the drip tray
 - c. Place a suitable container (preferable 4 lt / 1 gallon) to capture the flushed water. Water will be flushed from injector and jet nozzle (on the left of the brew chamber.)

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 19 of 86
-------	----------	-----------------------------------	---------------

- d. Please press “Pause” whenever you need to stop or drain the container.
- e. The flush cycle will automatically stop once it is complete.
- f. After the flush, please put back the drip tray back into its location.
- g. The brewer will require less than 1 minute to heat the water.

Please note: Flushing the brewer can also be done at any time from the Operator Menu.

It is recommended that a flush procedure be performed if the brewer has been in storage, shut down for more than 5 days, or the water system has been worked on.

Once the flush is completed, the brewer will show you the main drink screen (please see example image below).



Main Drink Screen Example

Please note that all the brewer’s installation settings can also be found in the Operator Settings.

- Vend a coffee by either touching the coffee selection or clicking the “Touch to Insert Pack” button or inserting a coffee pack. The C300 is equipped with a bar code scanner and can identify what type of pack is inserted.
- Re-check all the leak points (Shut-off valve, water line, and inlet valve adapter).
- Setup the Merchandiser; label with packs and fill.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 20 of 86
-------	----------	-----------------------------------	---------------

- Vend a hot water and check the drink for taint.
 - Vend a 7 oz coffee and check the drink for taint.
 - Confirm that NO bad tastes are present
 - If any bad tastes are detected, drain the cold tank, refill and flush hot tank using Hot Water button.
- 
- Disconnect the RCD adapter from the mains power outlet and re-connect the mains plug into the mains supply.
 - Fit a Sales Service enquiry sticker adjacent to serial number behind the drip tray. If it is visible once you put the drip tray back, please fit it bottom of the brewer.

2.5 Key operator training

The FLAVIA® C300 can prepare Filter Coffees, Teas and Chocolates as well as specialty drinks like Frothy Cappuccinos, Lattes and Mochas. Milk based beverages can be created using a user's own milk, their own milk substitute or by using a Fresh pack such as Real Milk Froth. When a milk-based beverage is selected, the brewer will prompt for the relevant actions. Note that this functionality is configurable via the "Drinks / Packs" section within the operator menus

Training steps

Train the key operators in the operation of the machine, using the User Guide as a script. It is in the installer's interests to ensure this training is effective, otherwise preventable machine breakdowns may occur.

1. Introduce key operator to C300 and demonstrate how to isolate power and water. Give an overview of the machine, i.e., the touchscreen, the barcode scanner and pack recognition, etc.
2. Point out important elements of the brewer so that the customer understands the proper names and functions of these parts.
3. Using the User Guide, go through the "Daily Care" and "Weekly Care"



- Allow customer to demonstrate back to you, to check

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 21 of 86
-------	----------	-----------------------------------	---------------

their understanding.

Demonstrate...

- a. How to prepare and vend a drink. Include information about pack recognition with the bar code scanner.
- b. Drink selection via the drinks menu or by inserting a pack.
- c. The removal of the cup-stand for larger travel mugs (please refer to the User Guide).
- d. Pack door cleaning.
- e. Brew chamber cleaning.
- f. Cleaning the bar code scanner lens.
- g. Cleaning the drip-tray and the proper assembly of the cup stand.
- h. Draining the cold-water tank.
- i. Flushing the brewer.
- j. Descaling the brewer.
- k. Stocking the merchandiser and changing selection labels.
- l. How to update brewer with USB stick

Note:



Please make sure the fresh pack door is open before wiping or cleaning the display. Otherwise, brewer might start vending hot water with an

For daily cleaning steps d – e – g should be performed.

For daily weekly cleaning d – e – f – g should be performed.

For monthly cleaning d – e – f – g – j should be performed.

*Descaling (j) procedure has draining (h) and flushing (i) steps. However, draining (h) and flushing (i) procedures can be done separately.

Configure Energy Saving Mode

To conserve energy, the brewer can be configured to switch to an energy saving standby mode after a specific time of inactivity. To configure the energy saving mode:

1. Enter Operator menu by holding your finger in the top left corner of the screen for about 5 seconds.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 22 of 86
-------	----------	-----------------------------------	---------------

2. Enter password 3-3-3-3 and touch “ok”.
3. Select Site Preferences and then Energy Saving.
4. Select the time for the brewer to enter energy saving mode.
5. Touch the back button in the top left-hand corner until you see the drink’s menu.

If the brewer is inactive for the specific time set, it will enter energy saving mode. In this mode the thermoblock and display will be switched off. The LED light on the top of the display will blink. Touch anywhere on the screen and it will exit energy saving mode. The brewer screen will say “Please wait while the water heats up” and in approximately less than a minute the drinks menu will appear.

Set Operator Password

The operator menu of the brewer can be password protected to prevent unauthorized access. To set a new password:

1. Enter Operator menu by holding your finger in the top left corner of the screen for about 5 seconds.
2. Enter password 3-3-3-3 and hit “ok”.
3. Click on Site Preferences and then Password.
4. Select the 4-digit password that you would like to replace the default with.
5. Press the back button in the top left-hand corner until you see the drink’s menu.

Note:



If a password is lost or forgotten, only a service engineer can reset it. Changing the Operator Menu password is not recommended.

All machines:

1. Wipe clean the machine exterior. (Please make sure the fresh pack door is wipe wiping the display to avoid drink vending by mistake like hot water, drinks with fresh milk etc.)
2. Ensure the machine is left to Customer’s requirements.
3. Ensure the key operator is aware of the troubleshooting section of the guide and instruct in the repairs possible by the key operator.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 23 of 86
-------	----------	-----------------------------------	---------------

Demonstration

If possible, demonstrate to the client that the machine installation is complete and that the key operator(s) has been trained. Confirm that they are satisfied.

Demonstrate machine operation to general users, if possible, to 'get people using the machine'.

Notes on this section

- Some differences in menus may be apparent, depending on the version of software fitted to the machine, and configuration selections made within the menus.
- If in any doubt, contact Lavazza Professional technical help desk for further information.

Filter Change

An in-line taste and odour filter should be fitted on the mains water supply to this machine (not supplied) to achieve the best possible taste and quality from our drinks. This will also avoid premature failure due to scale related deposits.

However, brewer can be used with unfiltered water with a regular descale process. Please check section 6.1 for Descaling procedure.

Lavazza NA recommends Everpure EV961836 / 2CB-GW Filter Cartridge with Everpure EV9259-14 QL3B Single Filter Head - 3/8" NP for mains water filter

When changing the filter, no matter the type installed, follow the general instructions laid out below:

- Turn off the mains water supply either at the wall or using the inbuilt shut off, if your filter head has one
- Place a container underneath the drain line of the filter head
- Relieve the pressure by opening the drain valve until empty
 - Some filter heads also have buttons which enable even more pressure to be released, please follow the

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 24 of 86
-------	----------	-----------------------------------	---------------

- instructions on your replacement filter if unsure
- Remove the current filter either by pulling up the lever on the head and then pulling out the filter or by unscrewing the filter
 - Insert your new filter and lower the lever or screw in until the filter is held securely
 - Flush through the filter the amount of water or minutes as labelled on the instructions on the cartridge
 - Your filter has been successfully replaced and the C300 is ready to use

General Operations

For general operations please use online user guide. You can use the QR code to (Refer to online user guide)



2.6 Moving the brewer

Note: Do not move a brewer when the cold tank is full of water!

Drain, Disconnect and Move

- 1) Turn the brewer off by unplugging the brewer from the electrical outlet.
- 2) For mains water connected units
 - a) Follow the water line in the back of the brewer until you find the shut-off valve and turn the valve to off.
 - b) Remove the water inlet valve adapter from the back of the brewer (adjustable water pump pliers may be needed to loosen the adapter).

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 25 of 86
-------	----------	-----------------------------------	---------------

- 3) Remove the cup stand in order to access the cold tank drain on the left-hand side (cover marked in red). Please see the example picture below:



- 4) Remove the red cover and pull the cover towards you. The cold tank drain tube is attached to this. Drain the cold tank completely. Any suitable container can be used to as a draining bucket.
- 5) Replace the cold tank drain tube cap and clip the cover back into its original location.

If the brewer is being moved to a new site, the hot tanks must also be drained using the following procedure.

Ensure that you put a suitable receptacle for hot water under the injector.



CAUTION – the drained water will be hot

- 6) Draining the water system and thermoblock

CAUTION – Please make sure that the fresh pack door is closed thought out all process

- Re-power the brewer.
- Press and hold the top left corner for five seconds.
- Enter 1-4-4-1 to go into “Technician Settings” and then “Engineering Menu”
- Move into the menu by using the arrows on the bottom two sides.
- Select “Injector” and set to position to “Down”
- Press return button on the top left corner once,

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 26 of 86
-------	----------	-----------------------------------	---------------

CAUTION – Water will be drained from injector and the drained water will be hot

- g) Select “Divert Valve” and set to position to “Hot to inject”
 - h) Press return button on the top left corner once,
 - i) Select “Water Pump” and set to position to “Turn On”
 - j) Please drain the thermoblock until water stops coming from injector.
 - k) Press return button on the top left corner once,
 - l) Select “Air Pump” and set to position to “Turn On” for 10 seconds

 - m) Press return button on the top left corner once,
 - n) Select “Divert Valve” and set to position to “Hot to Jet”
 - o) Press return button on the top left corner once,
 - p) Select “Air Pump” and set to position to “Turn On” for 10 seconds
 - q) Press return button on the top left corner until you see the drink’s menu.
 - r) Open the fresh pack door and wipe down inside of the door and brew chamber.
 - s) Make sure that the cup stand is drained, cleaned.
- 7) Power down the brewer.
- 8) The brewer may now be moved safely. You may find it convenient to carry the drip-tray separately.

2.7 Optional Modules

FLAVIA® Creation 300™ comes with mains water connection kit attached. It can be used as jug fill unit or can be connected to mains water.

The FLAVIA® CHILL REFRESH™ is the only optional attachment module for the FLAVIA® Creation 300™. This module was created to enhance the usability and functionality of the FLAVIA® Creation 300™.

Note

- 1) **The FLAVIA® Creation 300™ is not compatible with any other modules.**
- 2) **The FLAVIA® Creation 300™ must connected to mains water if**

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 27 of 86
-------	----------	-----------------------------------	---------------

it's connected to FLAVIA® CHILL REFRESH™.



**FLAVIA
CREATION 300**

**FLAVIA
CHILL REFRESH**

**2.7.1 FLAVIA®
CHILL**

REFRESH™ (NA region only)

The FLAVIA® CHILL REFRESH™ is a cold module attachment to the C300. It was designed to add options and versatility to the C300 giving customers the ability to brew both hot and cold single serve beverages from one easy to use platform. The CHILL™ REFRESH allows customers to brew the following beverages:

- Cold Brew Coffee
- Iced Coffee
- Iced Teas
- Infused Waters

Installation of the FLAVIA® CHILL REFRESH™ must be done by a trained distributor technician/installer. Installation and safety instructions can be found in the FLAVIA® CHILL REFRESH™ Technical/Service Guide DOC-004242. Setup and care of the FLAVIA® CHILL REFRESH™ can be found in the FLAVIA® CHILL REFRESH™ User Guide available [here](#) or via the QR code below



Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 28 of 86
-------	----------	-----------------------------------	---------------

2.7.2 Enabling Optional Module

The following instructions are required to configure the C300 once an option module has been installed.

1. To select and enable your option C300 Module:
 - a. Enter Technician settings by holding your finger in the top left corner of the screen for about 5 seconds.
 - b. Enter password 1-4-4-1 and press check on the top right corner.
 - c. Click on "Water source settings".
 - d. Click on the "Water source".
 - e. Select "Plumbed-In"
 - f. Back out of the menus using the back arrow in the top left-corner of the screen.
 - g. Click on "Water source settings".
 - h. Click on the "Cold water".
 - i. Select "Flavia Chill Refresh"
 - j. Back out of the menus using the back arrow in the top left-corner of the screen.
 - k. Click on "Water filter".
 - l. If a filter is connected to mains water connection route, then select "Yes". If not, then select "No".
 - m. Select "Flavia Chill Refresh"
 - n. Press return button on the top left corner until you see the drink's menu.

Please Note, when enabling CHILL REFRESH™ please reference CHILLREFRESH™ User Guide "Adding Cold Drinks to the Main Brewer Menu" for instructions on adding the cold drinks to the drink's carousel.

2. To select and enable cold drinks:
 - a. Enter "Operator settings" menu by holding your finger in the top left corner of the screen for about 5 seconds.
 - b. Enter password 3-3-3-3 and press check on the top right corner.
 - c. Click on "Site preferences".
 - d. Click on "Drinks / Packs".

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 29 of 86
-------	----------	-----------------------------------	---------------

- e. Turn on the Cold drinks by using toggle button.
- f. Press return button on the top left corner until you see the drink's menu.

2.7.3 Other Optional Kit – Mains Water Connection Kit

FLAVIA® Creation 300™ comes with mains water connection kit attached. It can be used as jug fill unit or can be connected to mains water. After you follow 2.4 installation sequence, follow the instruction below to enable you kit:

- a. Enter Technician settings by holding your finger in the top left corner of the screen for about 5 seconds.
- b. Enter password 1-4-4-1 and press check on the top right corner.
- c. Click on "Water source settings".
- d. Click on the "Water source".
- e. Select "Plumbed-In"
- f. Back out of the menus using the back arrow in the top left-corner of the screen until you see the main drink's menu.


2.7.4 Other Optional Kit – Ambient Connection Kit

After you follow the 2.6 Moving Brewer sequence, follow the instruction below to fit the ambient kit:

To attach ambient water connection kit:

- a. Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
- b. Remove the two screws underneath the screen of the C300

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 30 of 86
-------	----------	-----------------------------------	---------------

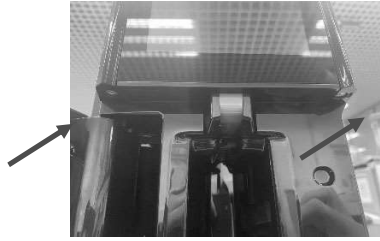

- c. Unclip and remove the screen surround



- d. Remove the top panel of the C300.



- e. Remove the 3 screws on the back panel



- f. Slide up the back panel and place aside




- g. Press down the lever on the left-hand panel to unclip from the front and slide backwards.




- h. Repeat this for the right-hand panel
- i. On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.



- j. Remove the mains water connection kit cables from main PCBA board (P502)

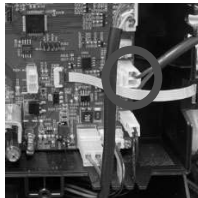

- k. Remove any connectors attached to the inlet on the back of the C300
- l. Remove the two screws on the mains water connection kit.

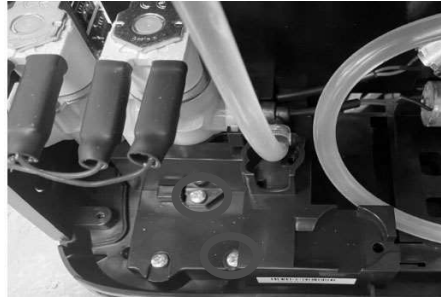

- m. Press down on the latch and slide the mains water connection kit out of the cassis




- n. Remove the two screws on the underside of the plastic moulding




- o. Snip the cable tie and remove the pipe attached to the 90° elbow



- p. Attach the ambient water connection kit the mains water connection kit and secure with provided metal clip

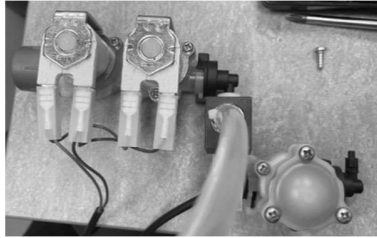

- q. Refit the components on the plastic base and secure with provided screws

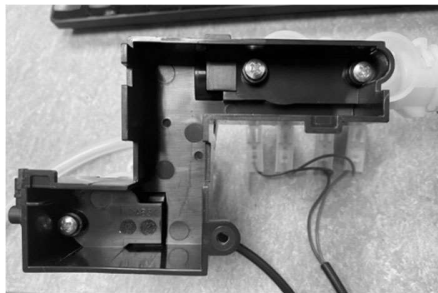

- r. Attach the connectors to the PCBA (mains inlet to P502 & solenoid valve to P503)

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 34 of 86
-------	----------	-----------------------------------	---------------



CAUTION – Before closing the PCBA cover please push all cable connector to PCBA and make sure that all connectors are connected.

- s. Refit the components on the plastic base and tighten the screws



- t. Reattach all covers

The following instructions are required to configure the C300 once an option module has been installed.


- Power on the C300, enter the password screen and enter code “1-4-4-1”
- Click on “Water source settings”.
- Click on “Cold Water”
- Select “Ambient water kit”
- Exit menus
- The C300 is now setup and ready to use the ambient kit

Please perform ambient water calibration procedure in section 5.7.


Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 35 of 86
-------	----------	-----------------------------------	---------------

3 Water System Schematic

DOC-003991 - C300 Water System Diagram and Leakage Test Rev_E

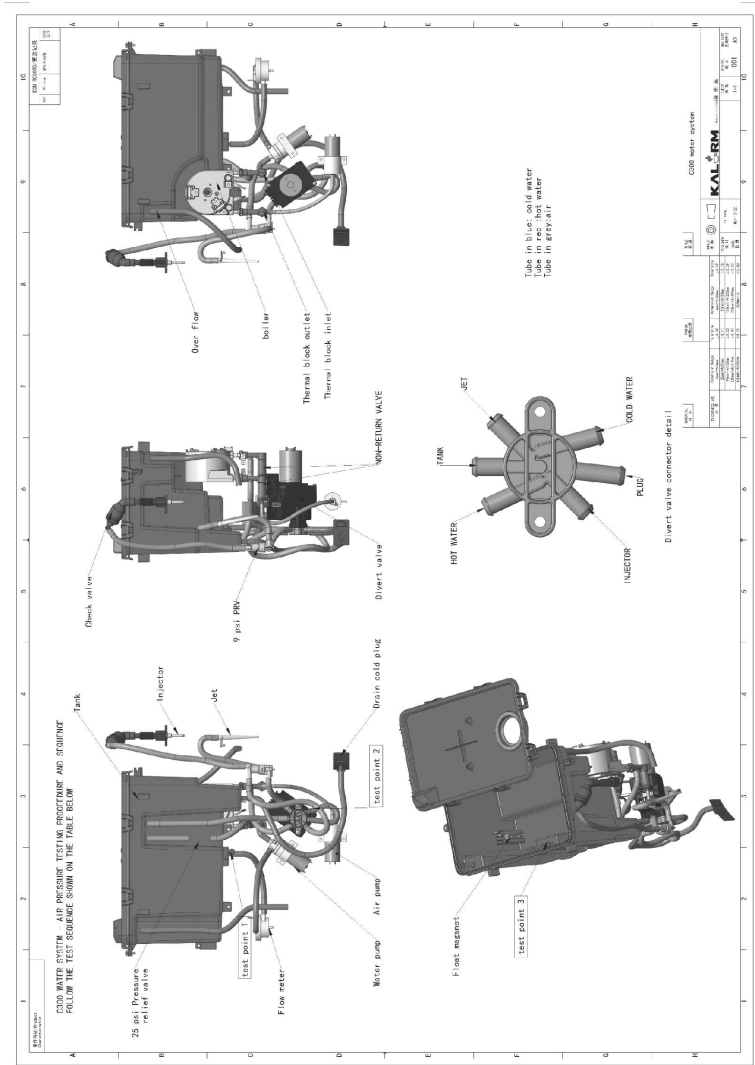


4 PCBA Cable Connections

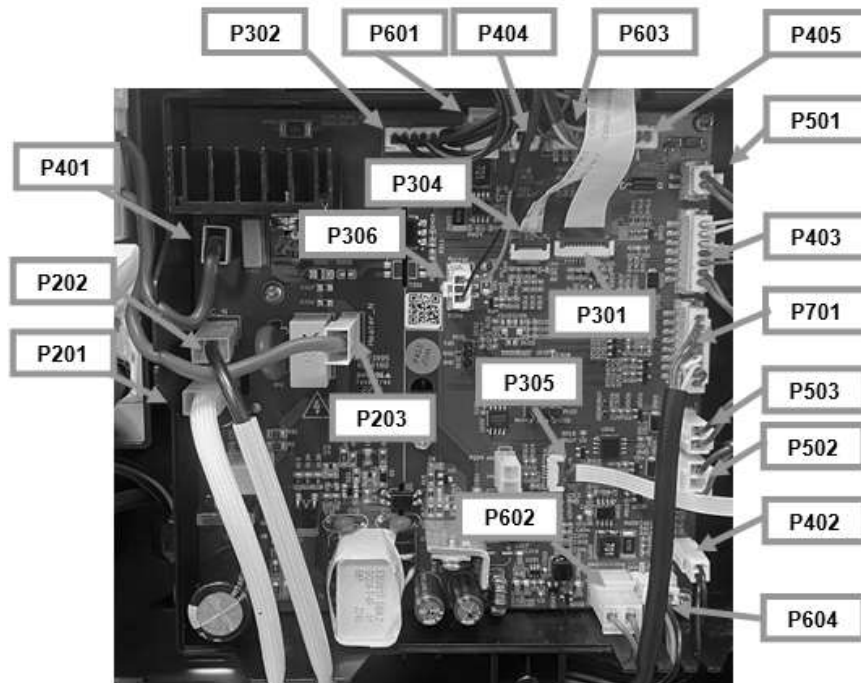


Connector Code	Description
P201	AC Live (white)
P202	AC Neutral (black)
P203	Heater Neutral (blue)
P301	LCD Screen
P302	IOT Module
P304	Barcode Scanner
P305	Programming
P306	Barcode Fan
P401	Heater Live (brown)
P402	Thermoblock Thermostat
P403	Water Level, Flow Meter, Water Pump
P404	Light Emitting Diode
P405	Pack Detect
P501	Air Pump
P502	Inlet Valve
P503	T Valve
P601	Injector Motor
P602	Divert Motor
P603	Inject Detect
P604	Divert Detect
P701	Cold Module

Cable Management:
Water system to PCBA

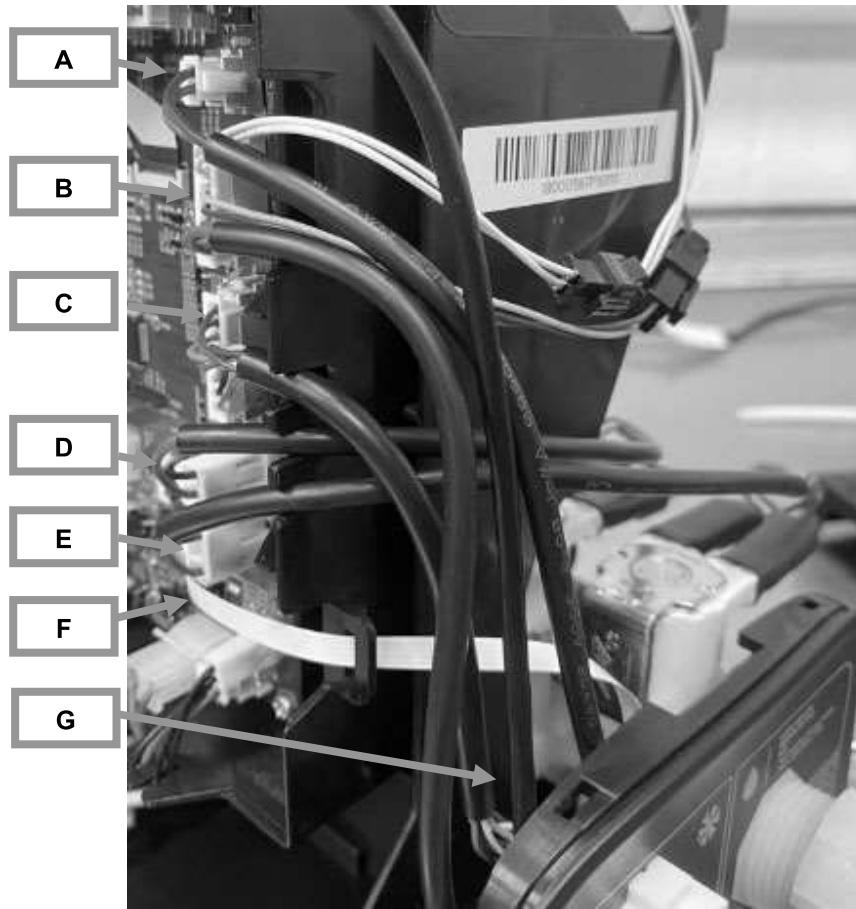

Loom	Part
A	Air Pump
B	Water Level, Flow Meter, Water Pump
C	Cold Module
D	T-Valve
E	Inlet Valve
F	Programming
G	USB Extension

PCBA to front Panel

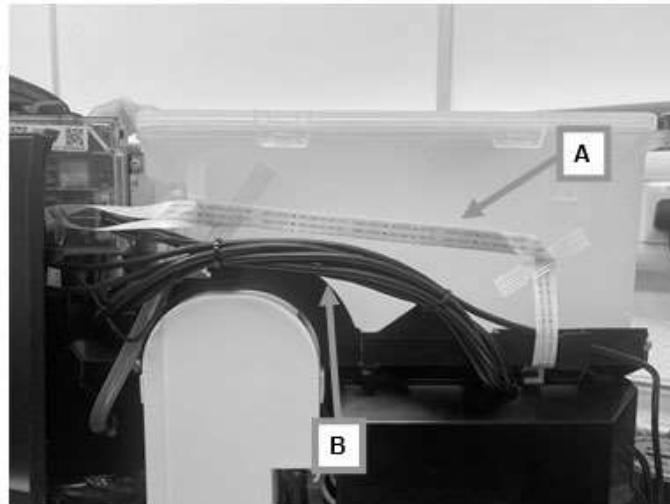

Loom Bundle	Parts included	How is it attached?
A	- Barcode scanner - LCD screen	Taped to side of water tank
B	- IOT Module - Barcode Fan - Injector Motor - Injector Detect - Pack Detect - LED - USB Extension between screen and update board on back panel	Cable tied to chassis

5 Maintenance Recommendations

5.1 IOT Module Replacement

- a. Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
- b. Remove the two screws underneath the screen of the C300



- c. Unclip and remove the screen surround



- d. Remove the top panel of the C300.



- e. Remove the 3 screws on the back panel



- f. Slide up the back panel and place aside




- g. Press down the lever on the right-hand panel to unclip from the front and slide backwards.



- h. On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.



- i. Disconnect the IOT Module loom from the PCBA

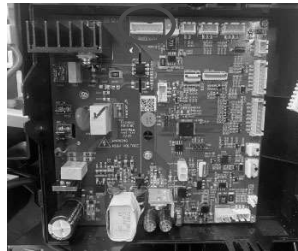

- j. Remove the two screws holding in the IOT Module



- k. Cut the cable ties holding the IOT loom onto the chassis
l. Remove the IOT module
m. Insert a new IOT module
n. Connect it to the C300 with the screws removed in step j
o. Insert the IOT loom into port P302
p. Gather up all the looms in loom bundle B (as described in section 4) and recable tie these to the chassis
q. Replace all covers removed in steps b-h

CAUTION – Before closing the PCBA cover please push all cable connector to PCBA and make sure that all connectors are connected.

- r. PAT test the brewer to make sure all electrical components have been connected correctly
s. The brewer is now ready to turn on

Please follow the steps below to

- a. Take the serial number of the IOT module that has been written on the module



- b. Take the serial number of the brewer which you can find
c. Share the details with the Lavazza IOT support agent to register and connect brewer.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 46 of 86
-------	----------	-----------------------------------	---------------

5.2 PCBA Change

- a. Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
- b. Remove the two screws underneath the screen of the C300




- c. Unclip and remove the screen surround



- d. Remove the top panel of the C300.



- e. Remove the 3 screws on the back panel

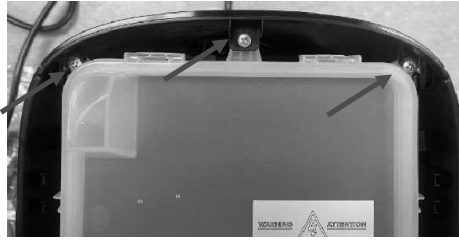

- f. Slide up the back panel and place aside




- g. Press down the lever on the right-hand panel to unclip from the front and slide backwards.



- h. On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.



- i. Disconnect all looms from the PCBA
- j. Remove the 4 screws that hold the PCBA onto the chassis

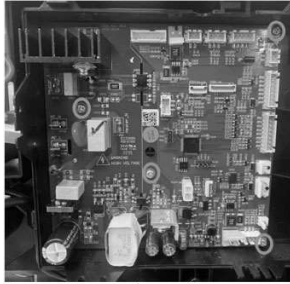

- k. Remove the PCBA
- l. Insert the replacement so that the hole in the center of the PCBA lines up with the plus shaped extrusion on the chassis
- m. Insert and redo the screws removed in step j
- n. Reattach all the disconnected looms. (See section 4 if unsure)
- o. Replace all covers removed in steps b-h

CAUTION – Before closing the PCBA cover please push all cable connector to PCBA and make sure that all connectors are connected.

- p. PAT test the brewer to make sure all electrical components have been connected correctly
- q. The brewer is now ready to turn on

5.3 Filtration / Filter Recommendations

An in-line taste, odour, and hardness filter should be fitted on the mains water supply to this machine (not supplied) to achieve the best possible taste and quality from our drinks. This will also avoid premature failure due to scale related deposits.

However, brewer can be used unfiltered water with regular descale process. Please check section 6.1 for Descaling procedure.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 49 of 86
-------	----------	-----------------------------------	---------------

Lavazza NA recommends ever pure 2CB-GW filter with filter head QL3B for mains water filter. Please check section 2.5 for filtration change procedure.
Common Procedures

Boil Water Notice

If a 'Boil Water Advisory' notice is issued by the mains water supplier, the machine must be sanitised. Please follow the procedures below,


- 1) For ambient connected units, please follow "LTM-00153 C300 AMBIENT KIT SANITISATION PROCEDURE" procedure
- 2) For Flavia Chill Refresh connected, please see Flavia Chill Refresh SANITISATION PROCEDURE" detailed in the CHILL REFRESH Technical manual DOC-004242
- 3) For mains connected or jug fill nits, please perform drain, flush and descale brewer by following the steps in 5.4, 5.6, 5.5.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 50 of 86
-------	----------	-----------------------------------	---------------


5.4 Drain Procedure

To drain the unit:


- Remove Drip Tray
- Remove drain plug by pulling the red cover to the left to dislodge the cover
- Pull the cover outwards (the drain tube is connected to the plug; do not pull the drain with force to avoid damage)
- Place container of ~5L (Slightly more than max capacity of tank) under the drain tube before removing the drain plug
- Allow all water to drain out before replacing the red drain plug
- Push drain tube back inside unit and slide drain cover back into place
- Return Drip Tray
- To drain hot water left in the water system, press and hold the top left corner of the display and type 1441.

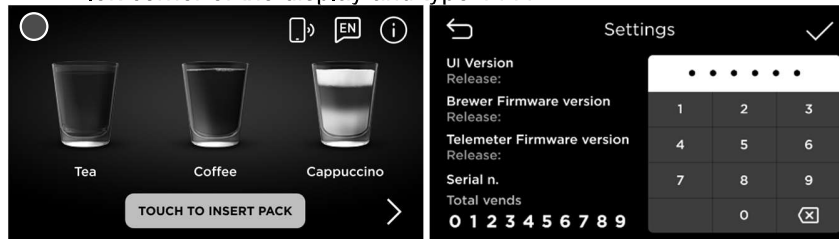


- Go into Engineering menus.

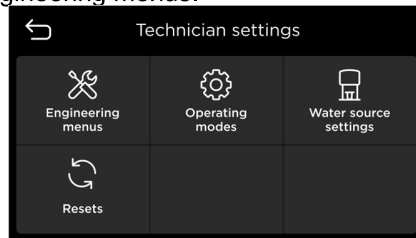

- j) Find the injector by using arrows on the bottom of the page and go into it and set it to down position.

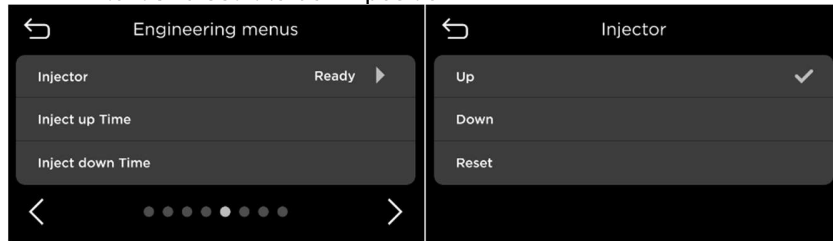


- k) Go back to main menu by using back button on the top left corner.

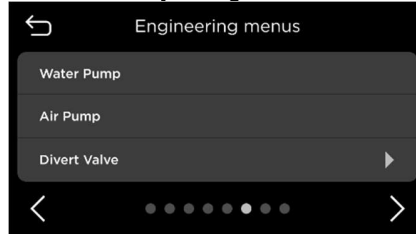

- l) Find the divert valve and go into that section.
m) Set the divert valve to "hot to injector".




- n) Place a cup under the brew chamber.
o) Go back to main menu and find the water pump and turn on.

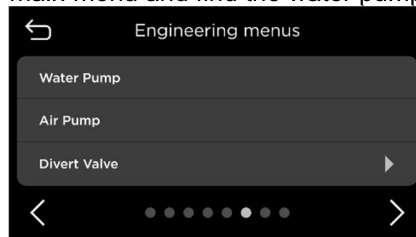

- p) When the water flow stops turn off the water pump.

- q) Go back to main menu by using back button on the top left corner.
- r) Find the air pump and turn on.

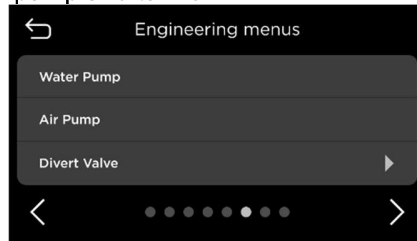

- s) When the water flow stops turn off the air pump.
- t) Go back to main menu by using back button on the top left corner.
- u) Find the divert valve by using arrows on the bottom of the page and go into it and set it to "hot to jet".
- v) Go back to main menu and find the water pump and turn on.
- w) Water will be dispensed from jet.
- x) When the water flow stops turn off the water pump.
- y) Go back to main menu by using back button on the top left corner.
- z) Find the air pump and turn on. When the water flow stops turn off the air pump and exit from "Engineering Menu".

5.5 Descale Procedure


It is Lavazza recommended to use descalers but follow the instructions on the specific descalers solutions you are using to make sure the right concentration of solution is in the system.

Lavazza recommended descalers;


- DEZCAL Liquid – Product Code: 15-DLQ1
- DEZCAL Powder – Product Code: 15-DZP-UX900

If the descale message has appeared on the screen, follow steps 3-x below
If you would like to descale early, then please follow all steps below:


1) Press and hold the top left corner of the display and type 3333.

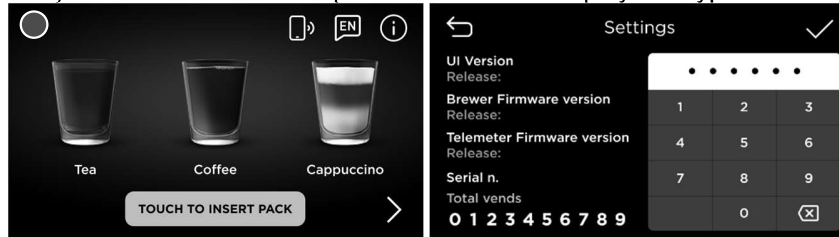

2) Go into maintenance menu and click Descaling.

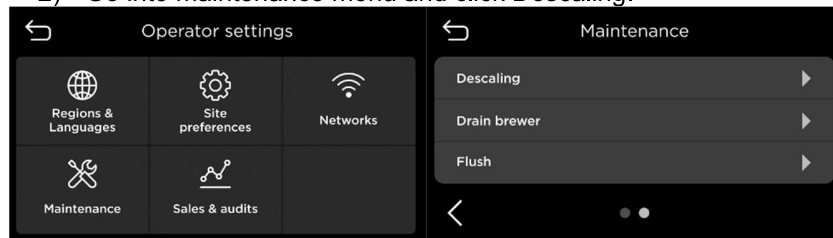

3) The UI will show the descale pop up

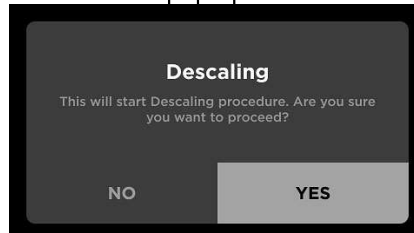


Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 54 of 86
-------	----------	-----------------------------------	---------------

- 4) Click yes
- 5) The unit will then get you to drain down the brewer as in section 5.4
- 6) The unit will then ask for the descale solution to be added to the tank. Add this and then wait the corresponding amount of time as instructed on the descaler packaging. As the tank will be empty at this stage you may need to add 500ml of water back into the tank to allow for the descale solution to be at the right concentration.
- 7) The C300 will then prompt to drain for a second time
- 8) The system will then prompt for a flush to be performed so that no descale solution is left in the unit. This can be found in the section 5.6.
- 9) Once the flush has been completed, the C300 is then ready to vend once again.


5.6 Flush Procedure

Please follow the steps below,

- 4) Press and hold the top left corner of the display and type 3333.

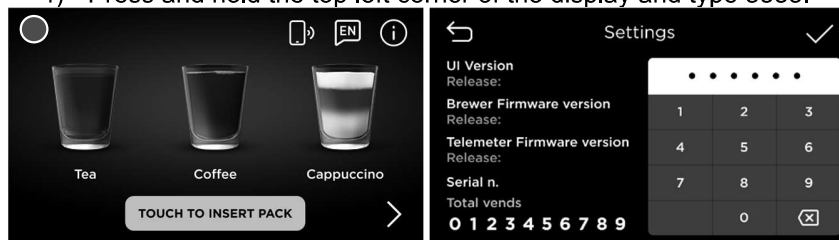


- 5) Go into maintenance menu and click Flush.

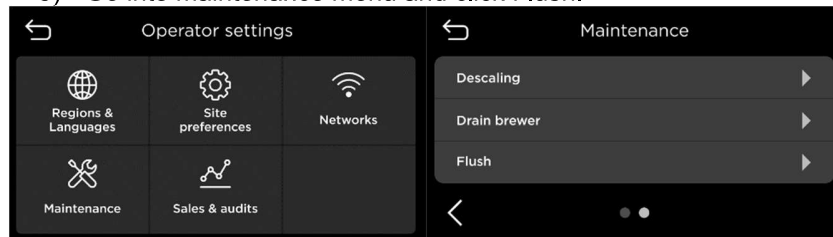

- 6) The UI guide you the following steps.
- 7) Remove the drip tray and place a suitable container

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 55 of 86
-------	----------	-----------------------------------	---------------

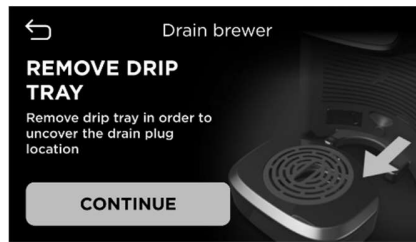

For mains water fill units please top up the cold water tank until max level. Preferable use filtered water.


- 8) For jug fill units please fill the cold water tank until max level.
Preferable use filtered water.



- 9) Press Continue
10) System will start flushing around 4lt (0.9 gallon) water.




- 11) You can press pause to stop flushing and press continue if it is needed.

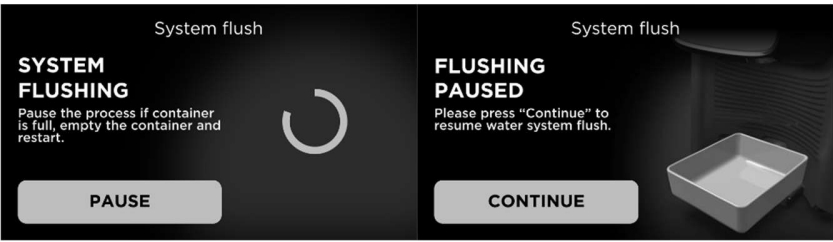


5.7 Ambient Water Calibration Procedure

Please follow the steps below,

- 1) Press and hold the top left corner of the display and type 3333.

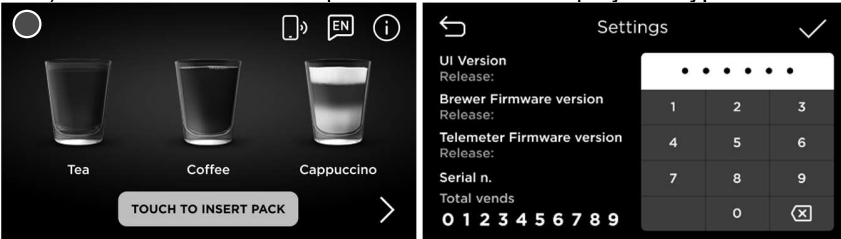


- 2) Go into maintenance menu and click Calibrate ambient water drink.

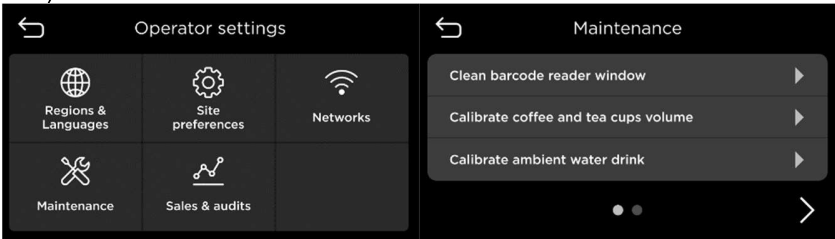


- 3) Place a cup and press start. Brewer will vend a water to cup.




- 4) Measure the volume with a scale or measuring cylinder and enter the value.

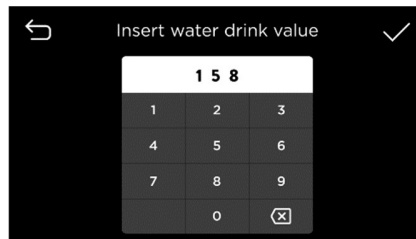

You need to repeat steps 3 and 4 twice.

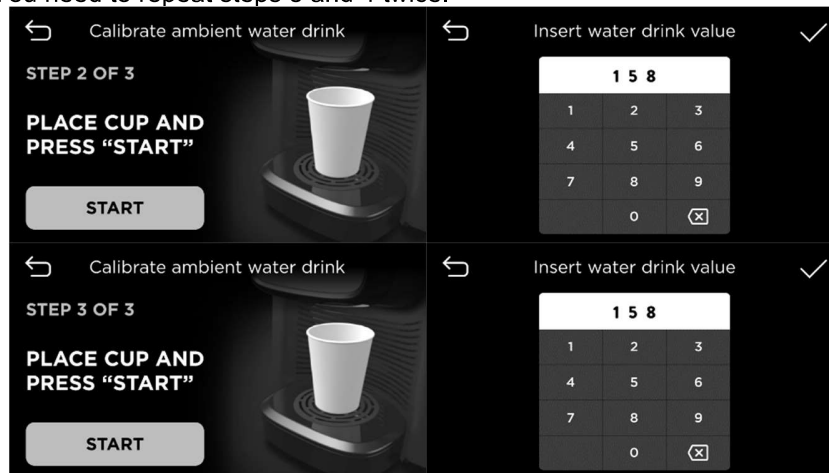

- 5) After the third one brewer make the calibration and inform when it is completed.

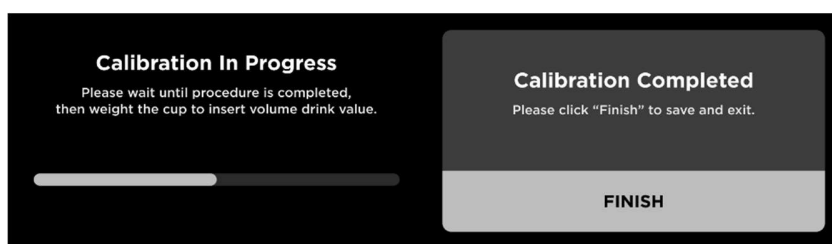


- 6) Please vend a couple of ambient drink to check volume whether you need to perform calibration procedure again or not.

Note: Ambient drink volumes may vary due to mains water pressure. Therefore, $\pm 10 - 15\%$ variation drink volume variation, compare to displayed volume on screen, can be acceptable.


5.8 Hot Drink Calibration Procedure

Please follow the steps below,

- 1) Press and hold the top left corner of the display and type 3333.

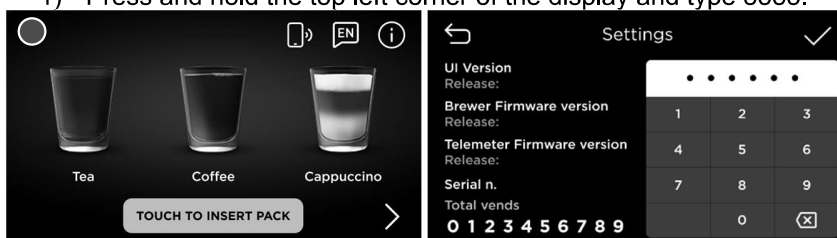


- 2) Go into maintenance menu and click Calibrate ambient water drink.

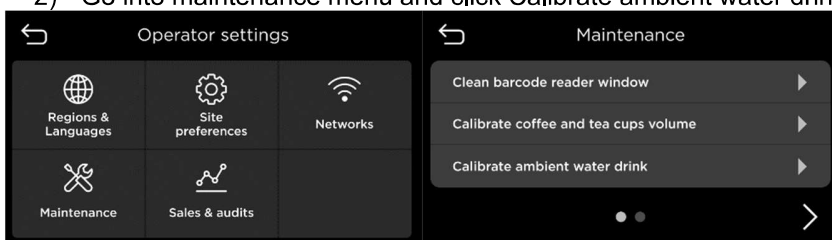


- 3) Place a cup and press start. Brewer will vend a water to cup.




- 4) Measure the volume with a scale or measuring cylinder and enter the value in ml.

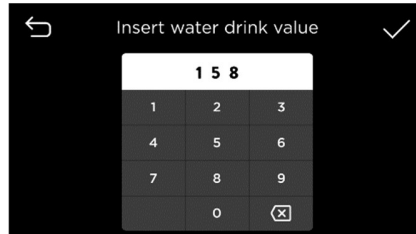

You need to repeat steps 3 and 4 twice.

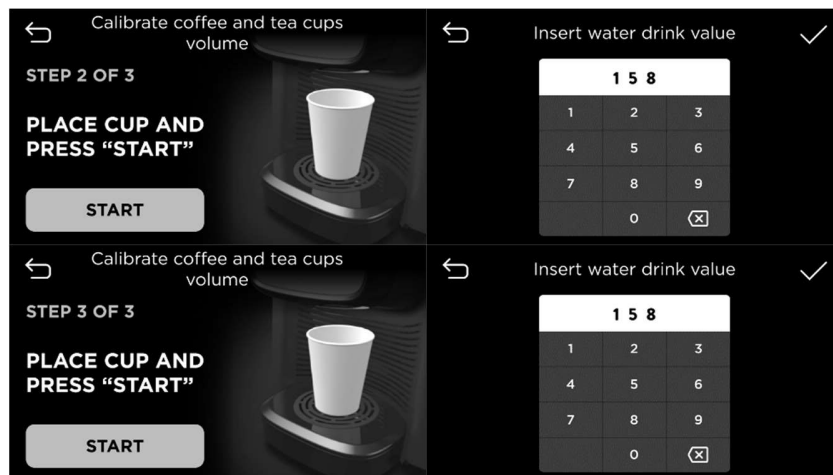

- 5) After the third one brewer make the calibration and inform when it is completed.

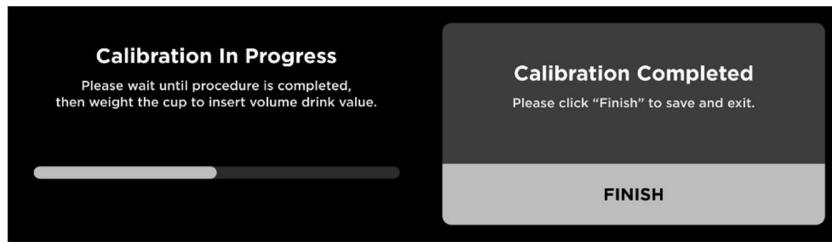

- 6) Please vend a couple of hot drinks to check volume whether you need to perform calibration procedure again or not.

Note: Hot drink volumes controlled with flow meter. Therefore, $\pm 8\%$ variation drink volume variation, compare to displayed volume on screen, can be acceptable.

5.9 Operator Mode

This section describes the menus available in 'Operator Mode'. These menus are one of three sets of menus available in the 'Menu Mode' of operation of the FLAVIA® Creation 300.

The Brewer has two modes of operation: '**Vend Mode**' (for drinks vending) and '**Menu Mode**' (for operator/engineer audit, setup and test). The Brewer always powers-up into Vend Mode; **to enter Menu Mode**, press the top left corner of the screen for at least 5 seconds and the LCD display will then change to show the default audit menu. To exit Menu Mode, press the Arrow in the top left of the screen.

To access the 'Operator Settings' menu, enter the 'Operator Mode' password. The default 'Operator Mode' password is '3333' and press 'OK'. This default password can be changed to a user-defined 4-6 digit number - see Section **Error! Reference source not found.**4. If the wrong password is entered, press the 'Del' key and retry (there is no need to exit the menu screen first).

The Operator Settings menu allows the key operator to read the Brewer's audits, to reset its interim audits and to perform maintenance tasks.

The menus are laid out in a contextual graphical interface and can be

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 61 of 86
-------	----------	-----------------------------------	---------------

navigated by touching the relevant icon. To return to the previous menu, press the left facing arrow in the top left corner of the screen.

5.9.1 'Operator Settings' Menu Tree

- Regions & Languages
 - Country
 - Language
 - Alt. Consumer Languages
 - Operator Language
 - Time Zone
- Site Preferences
 - Cups
 - Password
 - Drinks / Packs
 - Chocolate
 - Froth Packs
 - Cold
 - Energy Saving
 - Never
 - 30 minutes
 - 1 hour
 - 2 hours
 - 3 hours
 - 4 hours
 - 5 hours
 - Service Request
 - Report low stock
 - Report faults
 - Report mess
- Networks
 - IOT configuration
 - Claim Brewer
- Maintenance
 - Clean barcode reader window
 - Calibrate coffee and tea cup volume
 - Calibrate ambient water drink
 - Descaling
 - Drain brewer
 - Flush
- Sales & Audits
 - Interim Audits
 - Reset
 - Running Audits

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 62 of 86
-------	----------	-----------------------------------	---------------

5.9.2 Regions & Languages

Country	Set the country in which the brewer is located
Consumer Language	Set the language to be displayed as default in 'Vend Mode'
Alt. Consumer Languages	Set the alternate languages to be available in 'Vend Mode'
Operator Language	Set the language to be displayed in 'Operator Mode'
Time Zone	Set the local time-zone

5.9.3 Site Preferences

Cups

Default Volume	Set the default drink volume (fl. Oz) for a Hot vend
----------------	--

Password

Operator Password	Enter the desired Operator Password. This must be 4 digits long.
-------------------	--

Drinks & Packs

Milk Froth	<u>Toggle button off</u> Real Milk Only: Only milk supplied in a consumer's cup may be used <u>Toggle button on</u> Pack and Milk: Both sources of Milk may be used (Milk supplied in FreshPacks and milk supplied in a consumer's cup)
Chocolate	<u>Toggle button off</u> Chocolate drinks are inactive <u>Toggle button on</u> Chocolate drinks are active
Cold	<u>Toggle button off</u> Cold drinks are inactive <u>Toggle button on</u> Cold drinks are active

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 63 of 86
-------	----------	-----------------------------------	---------------

Energy Saving

Energy Saving Timeout	Set the duration of inactivity after which the brewer will enter Energy Saving mode. In normal operation the brewer will maintain a ready-to-vend water temperature by periodically powering the boilers. In energy saving mode, the water temperature will be allowed to fall. On waking, the brewer will display a please wait screen while the boilers come up to temperature.
-----------------------	--

Service Request

Report Low Stock	Enable low stock reports to be sent via IoT
Report Faults	Enable brewer fault reports to be sent via IoT
Report Mess	Enable brewer mess reports to be sent via IoT

5.9.4 Maintenance

Clean the barcode reader window	Display the cleaning sequence for the barcode reader lens
Calibrate coffee and tea cups volume	Display the hot drink calibration sequence for the brewer. Brewers comes with right calibration doesn't have to be performed. Please use this function in case of part water system part replacement or incase fault volume
Calibrate ambient water drink	This function should be performed after ambient water upgrade kit installed. Display the ambient drink calibration sequence for the brewer. Please make sure that you are using cold cups and scale for measurement.
Descaling	Display the descaling sequence for the brewer. Please follow the brewer guidance.
Drain Brewer	Display the draining sequence for the brewer. Please follow the brewer guidance.
Flush Brewer	Begin a brewer flushing cycle. Once pressed, a confirmation menu will be shown. Following confirmation, water will be flushed through either the jet or the injector. Ensure a receptacle of >4l is in position to collect the flushed water.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 64 of 86
-------	----------	-----------------------------------	---------------

5.9.5 Networks

Network Status

IOT configurations	The status of the connection to the IoT service is shown with either: a red cross – indicating no connection; or green tick – indicating a successful
--------------------	---

IoT Configuration

IoT Enabled	Enable the IoT service
Device ID	Displays the unique Device ID
Registered	Indicates if the brewer is registered with the IoT service
IoT Environment	Displays the IoT service the brewer is connected to. This should read 'PROD'

5.9.6 Sales & Audits

Interim Audits

Number of Vends	A counter indicating the number of total vends (excluding hot water) since the counter was last reset.
Number of Packs	A counter indicating the number of total packs used since the counter was last reset.
Reset	Press to reset the Interim Audit counters

Running Audits

Number of Vends	A non-resettable counter indicating the number of total vends (excluding hot water).
Number of Packs	A non-resettable counter indicating the number of total packs used.

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 65 of 86
-------	----------	-----------------------------------	---------------

5.10 Error Messages and Events

PROBLEM	REASON	SOLUTION
ERROR 049 OR "Thermal Block Temperature High" message displayed	Thermoblock temperature is too high.	Please wait to brewer cool down. Then press the "Retry" button. Brewer should resolve problem and continue vending after the fault.
"Please add water" message displayed	The internal cold- water tank of the brewer is empty.	Make sure cold-water tank of the brewer is filled water fully and properly (filtered preferable). Follow on-screen instructions.
"Auto inletting water" message displayed	The internal cold- water tank of the brewer is filling up	If the message persists for more than 20 seconds, check that the water supply is turned on, and that the delivery pipe is not kinked.
"Check water connection" message displayed	The internal cold- water tank of the brewer is attempting to fill up	Check that the water supply is turned on and that the delivery pipe is not kinked. Then press the "Retry" button
"Descaling Warning" message displayed	The water system needs descaling.	Please use the advised descale solution and follow on-screen instructions.
"Please wait while the water heats up" message displayed	The water is heating up	If message stays on for more than 20 minutes, please switch off brewer and contact your beverage distributor Message may stay on for more than 20 minutes only after first installation
"Cold Drink Unavailable" message displayed	Cold module error.	Please check Flavia Chill Refresh LED light if it is flashing red, please restart your units. Then retry.
	Cold water is not ready.	Please check Flavia Chill Refresh LED light if it is flashing white, please wait 45 mins until Flavia Chill Refresh cools down. If the message persists for more than 20 mins, please restart your units. Then retry.
	Cold water is not ready.	Please check Flavia Chill Refresh LED light. If it is not on, make sure chill unit is on.

“ERROR 321: Injector Stuck	Brewer pack injector is stuck.	Please press “RETRY” button to fix it. If the message persists, please restart your unit. If you can't resolve the problem. Turn off the brewer and check injector connections.
“ERROR 377: Flow Meter Error” “ERROR 351: Divert valve Stuck” “ERROR 391: PCBA Error” “ERROR E358: Thermal Block Open” “ERROR E358: NTC Short Circuit Error” “ERROR E356: NTC Open Circuit Error”	The brewer probably has malfunctioned component	Please restart your brewer.

If restart doesn't resolve the problem, please follow the procedures below.

5.10.1 Error Messages Details / Fix

5.10.1.1 “ERROR 377: Flow Meter Error”

This error means that the flow meter is fault and needs replacement. Please follow the steps below,

- Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
- Remove the two screws underneath the screen of the C300

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 67 of 86
-------	----------	-----------------------------------	---------------



- Unclip and remove the screen surround



- Remove the top panel of the C300.



- Remove the 3 screws on the back panel



- Slide up the back panel and place aside



- Press down the lever on the left-hand panel to unclip from the front and slide backwards.



- Repeat this for the right-hand panel
- Unplug the flowmeter connector



- Take out the flowmeter by twisting away from the chassis.



- Cut the two cable ties holding the flow meter in place and remove the pipes



- Replace the flow meter with the new one making sure that the pipe from the bottom of the tank connects to the lower section of the flow meter and the pipe between the flow meter and the water pump connects to the upper section
- Insert the flow meter back into the mount on the chassis

- Redo the cable ties
- Plug the connector back in




- Follow the steps back to fit the covers.
- Perform a Flush procedure. (Please check section 5.6)
- Perform 3 / 5 / 7 / 9 oz coffee vends and check volumes.
- If you observe volume problem, please follow hot drink calibration procedure in section 5.8.

5.10.1.2 “ERROR 351 Divert valve Stuck”


This error means that the divert valve is stuck in its position and the rotary disk cannot be able rotate. Please check the divert valve by following the steps below,

- a) Press and hold the top left corner of the display and type 1441.


Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 71 of 86
-------	----------	-----------------------------------	---------------

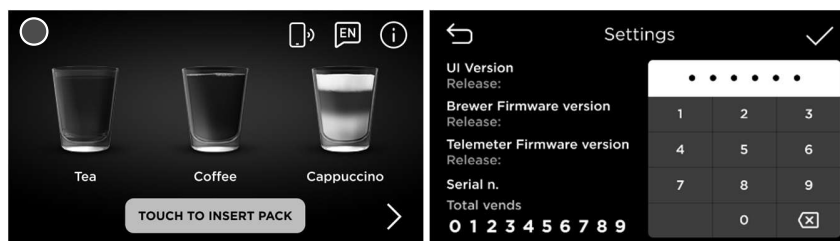


b) Go into Engineering menus.

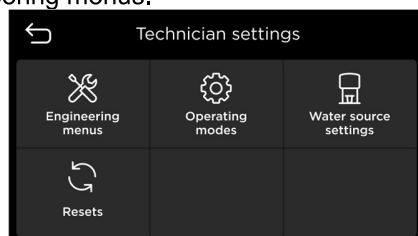

c) Find the divert valve by using arrows on the bottom of the page and go into it.

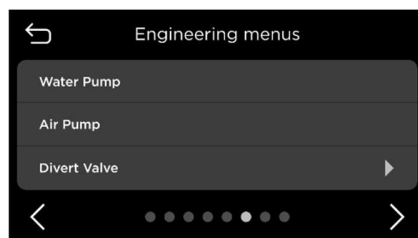

d) Change the divert valve position by clicking the positions. You should hear rotating sound from brewer.

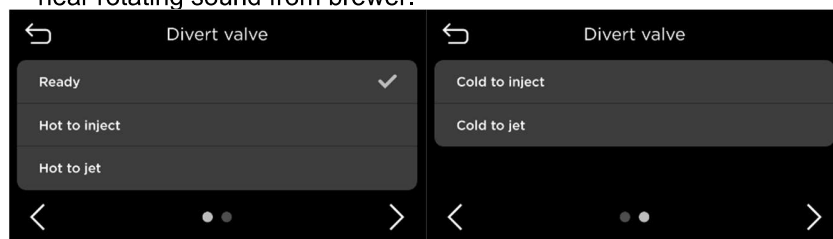

- i. If you heard divert valve motor sound, please perform descale procedure by following section 5.5 and perform a drink. You can exit from engineering menu by using back button on the top left corner.
If descaling doesn't solve the problem, the divert valve likely to block and need a replacement. Please replace the divert valve by following the steps below.
- ii. If you didn't hear divert valve motor sound, check the divert valve motor cable connection. If you don't see any connection problem, please replace the divert valve by following the steps below.
 - Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
 - Remove the two screws underneath the screen of the C300




- Unclip and remove the screen surround



- Remove the top panel of the C300.



- Remove the 3 screws on the back panel

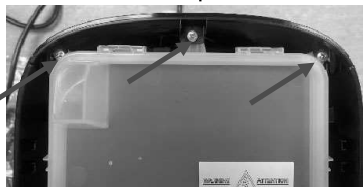

- Slide up the back panel and place aside




- Press down the lever on the left-hand panel to unclip from the front and slide backwards.



- Repeat this for the right-hand panel
- On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.




- Remove the divert vale cable and divert detect from PCBA board.
P602 & P604

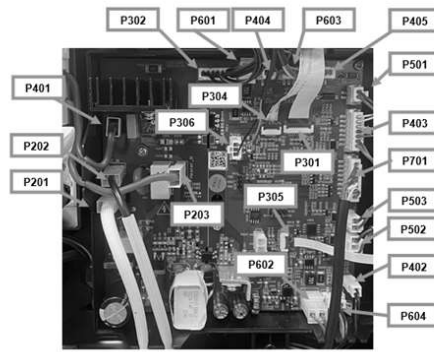

- Unclip these from the hooks under the PCBA mounting



- Disconnect all the pipes attached to the divert valve

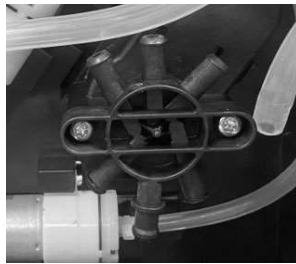

- Remove the screw holding the divert valve in place on the chassis




- Unclip the divert valve and slide out



- Slide the new divert valve into the chassis, feeding the divert valve cable through the circular hole and the divert detect cable through the upper right hole



- Reconnect the cables into the corresponding ports on the PCBA and feeding the cables behind the hooks underneath the PCBA mounting
- Reattach all the pipes as the image below

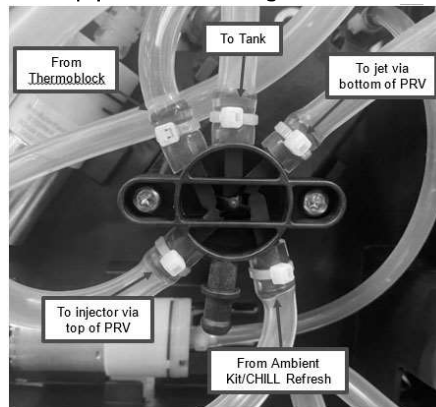

- Reattach all covers
- Perform 3 / 5 / 7 / 9 oz coffee vends and check volumes.
- If you observe volume problem, please follow hot drink calibration procedure in section 5.8.

5.10.1.3 “ERROR 391: PCBA Error”


This error means that the PCBA is faulty and needs replacement. Please follow PCBA Change in section 5.2

5.10.1.4 “ERROR E358: Thermal Block Open”

This error means that the thermoblock fuses is faulty and needs to be replaced. Please follow steps below.

- Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process
- Remove the two screws underneath the screen of the C300

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 78 of 86
-------	----------	-----------------------------------	---------------

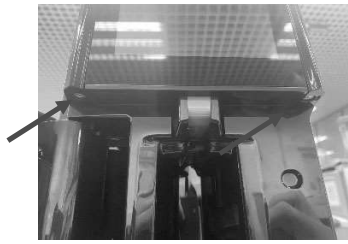


- Unclip and remove the screen surround



- Remove the top panel of the C300.



- Remove the 3 screws on the back panel

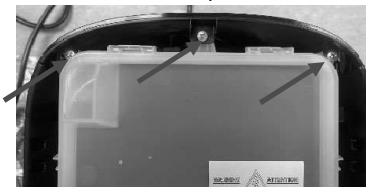

- Slide up the back panel and place aside




- Press down the lever on the left-hand panel to unclip from the front and slide backwards.



- Repeat this for the right-hand panel
- On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.




- Remove the divert valve cable from PCBA board. P401

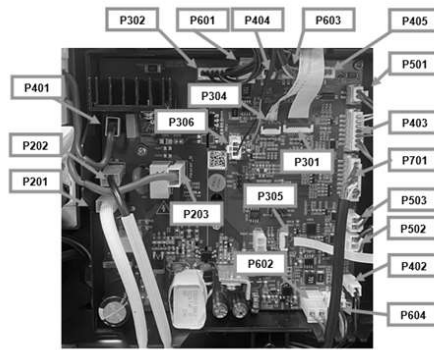

- Unclip the cover of the thermoblock
- Loosen the two clips holding the power cable onto the thermoblock using a TX15 screwdriver just enough to move the metal plates.



- Remove the cable
- Insert a new cable onto the live pin at the bottom of the thermoblock, making sure that the end closest to the two fuses is the one connected
- Feed this cable up and around the thermoblock and hold the fuses in place with the metal plates. One in place tighten the screws to keep it secure.

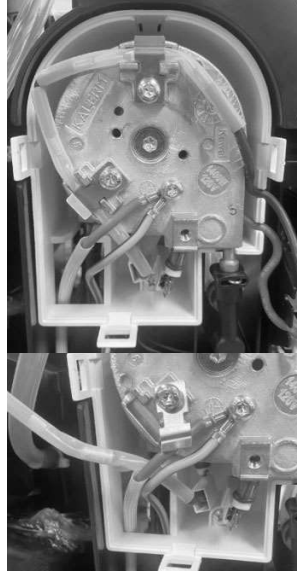

- Replace the other end of this cable onto the PCBA.
- Refit all covers
- Perform 3 / 5 / 7 / 9 oz coffee and tea vends and check temperatures.

5.10.1.5 “ERROR E358: NTC Short Circuit Error” / “ERROR E356: NTC Open Circuit Error”

This error means that the thermoblock NTC is faulty and needs a replace. Please follow steps below.

- Electrically isolate the C300 and CHILL Refresh. Maintain hygiene of all water contact areas throughout the installation process

Rev 1	Jan 2023	The FLAVIA® C300 Technical Manual	Page 82 of 86
-------	----------	-----------------------------------	---------------

- Remove the two screws underneath the screen of the C300




- Unclip and remove the screen surround



- Remove the top panel of the C300.



- Remove the 3 screws on the back panel

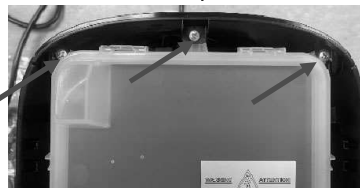

- Slide up the back panel and place aside




- Press down the lever on the left-hand panel to unclip from the front and slide backwards.



- Repeat this for the right-hand panel
- On the right-hand side of the C300, remove the screw holding the PCB cover in place. Remove this cover.



- Remove the divert valve cable from PCBA board. P402

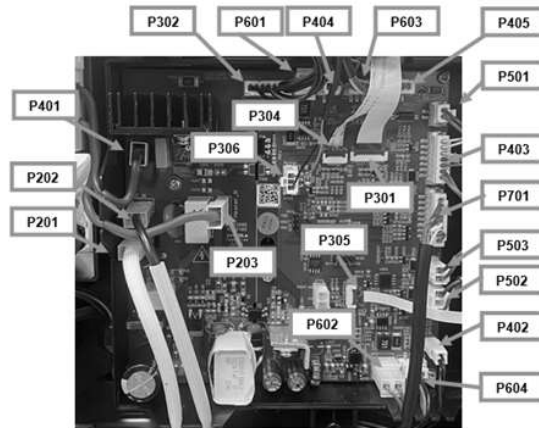

- Unhook the NTC cable from the hooks underneath the PCBA mount



- Remove the thermoblock cover
- Loosen the screw holding the NTC in place on the thermoblock, using a TX15 screwdriver, so as to remove the NTC.



- Feed the new NTX through the thermoblock surround and reattach it in by tightening the metal plate allowing the NTC to stick to the surface of the thermoblock
- Route this loom under the PCBA mount and reattach it to port 402



- Refit all covers
- Perform 3 / 5 / 7 / 9 oz coffee and tea vends and check temperatures.