

C-113

APPENDIX C

MIL-STD-6016B

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 2 of 8)

TEST NODE DIAGRAM		TEST NODE CONDITION	NOTES
		8. SIMULATION INDICATOR = 1. 9. FORCE TELL INDICATOR = 1. 10. FORCE TELL INDICATOR HAS CHANGED. 11. POINT TYPE (PT) = 7 OR 8. 12. PT = 0 AND POINT AMP = 3 OR 6 AND J3.0C5 WORD INCLUDED. 13. TRACK NUMBER, RELATED 2 IS OTHER THAN NO STATEMENT. 14. SLAVED INDICATOR = 1. 15. HOUR, MINUTE, ALTITUDE, COURSE, SPEED OR TN, RELATED IS OTHER THAN NO STATEMENT.	5
		REQUIRED ACTION	
E F G H I J T Z C D C D C D C D C		C. FWD M.5. D. FWD M.85. E. FWD M.9A(AC=0, SI=1), IF APPROPRIATE. F. FWD M.9A(AC=5). G. FWD M.9A(AC=7). H. GO TO NEXT NUMERICAL TEST NODE. I. GO TO TEST NODE 11. J. GO TO TEST NODE 16. T. FWD M.9B. Z. END TRANSLATION.	2

C-114

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 3 of 8)

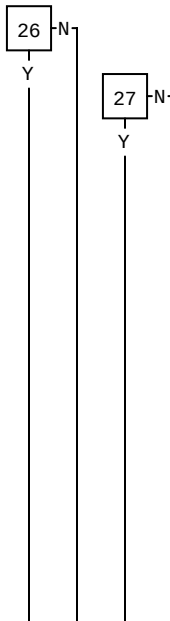
C-115

MIL-STD-6016B
APPENDIX C

TEST NODE DIAGRAM	TEST NODE CONDITION	NOTES
	16. PT = 7, POINT AMPLIFICATION = 0-5, OR POINT AMP = 10 AND NO J3.0C3 WORD WAS RECEIVED. 17. PT = 7, POINT AMPLIFICATION = 6 OR 13. 18. PT = 7, POINT AMPLIFICATION = 8. 19. PT = 7, POINT AMPLIFICATION = 9, OR POINT AMP = 10 AND A J3.0C3 AND/OR A J3.0C4 WORD WAS RECEIVED. 20. PT = 8, POINT AMPLIFICATION = 0 OR 1. 21. PT = 8, POINT AMPLIFICATION = 2. 22. AREA MAJOR AXIS, AREA MINOR AXIS, OR SQUARE/CIRCLE SWITCH = NO STATEMENT OR UNDEFINED. 23. TIME (HOURS/MINUTES) OTHER THAN NO STATEMENT. 24. TIME FUNCTION = 0, 1, OR 5. 25. TIME FUNCTION = 1.	
	REQUIRED ACTION	
K K A A A L L K K A A M N O P Z Z Z Z Z Z Z Z Z Z	A. DISCARD MESSAGE. K. FWD M.4A/M.84A. L. FWD M.4C/M.84C. M. FWD M.4B. N. RETAINED DATA IS COMBINED WITH FOLLOWING J3.0 HAVING REMAINING TIME DATA. O. GO TO TEST NODE 26. P. GO TO TEST NODE 27. Z. END TRANSLATION.	3 3 4

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 4 of 8)

C-116

TEST NODE DIAGRAM	TEST NODE CONDITION	NOTES
	26. TIME FUNCTION = 2. 27. COURSE, SPEED, OR TN, RELATED OTHER THAN NO STATEMENT.	
	REQUIRED ACTION	
A K M Q R S Z Z Z Z	A. DISCARD MESSAGE. K. FWD M.4A/M.84A. M. FWD M.4B. Q. FWD M.9F(AC=0)/M.89F(AC=0). R. FWD M.9F(AC=1). S. COMBINE DATA WITH PRECEDING J3.0 HAVING REMAINING TIME DATA. Z. END TRANSLATION.	3 4

APPENDIX C

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 5 of 8)

NOTES

1. J3.0 Point Types = 4-6 have no Link 11/11B equivalent, and 9-15 are Undefined. The following J3.0 Point Amplification values are Undefined or have no Link 11/11B equivalent:

<u>Point Type</u>	<u>Point Amplification</u>
0	10-15
1	10-15
2	4, 7-15
3	9-11, 13-15
7	7, 11, 14-15
8	3-15

2. The M.9A(AC=0, SI=1) message shall precede appropriate messages. (See paragraph C.4.8.6)

3. The M.4B, M.4C, and M.84C are not transmitted on Link 11B.

4. Two J3.0 messages are required to report a NOTACK Area or Friendly Weapon Danger Area (FWDA). One message contains the Time of Activation, and the other message contains the Time of Deactivation. These two times are both required to properly report a NOTACK Area or FWDA on Link 11/11B. If only one time is received, see table C.5.2-M.4A-2.

5. If the J3.0C5 contains the Missile Track Number (Related Track Number, 2 is not equal to zero) and Connect/Disconnect = 0, an M.9B (AC=6) Association message may also be transmitted to Link 11 and Link 11B showing the Missile/Point relationship. If the J3.0C5 word contains the Missile Track Number and Connect/Disconnect = 1, an M.9B (AC=15) Terminate Pairing/Association may also be transmitted on Link 11/11B.

APPENDIX C

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 6 of 8)

RELATED MESSAGES

RECEIVED LINK 16
MESSAGE

J3.0

ALL POSSIBLE LINK 11/11B MESSAGES
THAT MAY BE REQUIRED

M.4A
M.84A
M.4B
M.4C
M.84C
M.5
M.85
M.9A(AC=0, 5 OR 7)
M.9B(AC = 6 or 15)
M.9F(0)
M.89F(0)
M.9F(1)

APPENDIX C

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 7 of 8)

FORWARDING TRANSMIT REQUIREMENTS

1. When a J3.0 message is received and Point Type is equal to 7 and Point Amplification is not equal to 6 (NOTACK Area) or 13 (FWDA) then the M.4A message shall be transmitted once in each of two consecutive transmission opportunities when initiated on Link 11. The M.4A initial sequence shall be transmitted by the FJU at the first transmission opportunity and every transmission opportunity thereafter until the M.9A(AC=0) message is acknowledged on Link 11B.
2. When both J3.0 messages (J3.0 Time Function = 1, Time of Activation and 2, Time of Deactivation) are received and Point Type is equal to 7 and Point Amplification equal to 6 or 13, then the M.4A/M.84A/M.4B messages shall be transmitted once in each of seven transmission opportunities when initiated on Link 11.
3. The M.4C initial sequence shall be transmitted by the FJU once in each of two successive transmission opportunities on Link 11.
4. The M.5 initial sequence shall be transmitted by the FJU once in each of two successive transmission opportunities on Link 11. The M.5 initial sequence shall be transmitted by the FJU at the first transmission opportunity and every transmission opportunity thereafter until the M.9A(AC=0) message is acknowledged on Link 11B.
5. The M.9F(AC=0) message shall be transmitted by the FJU once in each of two successive transmission opportunities when initiated on Link 11/11B.
6. Upon receipt of the J3.0 message, one M.4A/M.84A or one M.4C/M.84C (on Link 11 only) message sequence, or one M.5 and M.85 if appropriate, or one M.9F(AC=0)/M.89F(AC=0) message sequence, whichever sequence is appropriate, shall be forwarded once in each of two successive transmission opportunities on Link 11/11B.

APPENDIX C

TABLE C.5.1-J3.0. J3.0 to Link 11/11B Message Translation Tree (Sheet 8 of 8)

FORWARDING TRANSMIT REQUIREMENTS (Continued)

7. Upon receipt of a J3.0 message, one M.5 and M.85 message if appropriate, shall be forwarded by the FJU on Link 11B.

8. On Link 11, if appropriate, the M.4B message shall be forwarded with every M.4A or M.4C message sequence combination that it amplifies for which Time (Hours and Minutes) is provided.

9. When the J3.0 message reports velocity and time and/or altitude, for a reference point, a second M.5 identical to the first shall be sent followed by a second M.85 in which the alternate parameters are included.

10. If appropriate, the M.9F(AC=1) shall be forwarded immediately following every M.9F(AC=0)/M.89F(AC=0) message combination that it amplifies.

11. The M.9A(AC=5) message, if appropriate, shall be forwarded at the same frequency as, and immediately preceding the message to which it applies. If two message pairs are being transmitted to forward one J3.0 message, the M.9A(AC=5) need not be transmitted prior to the second message pair. The M.9A(AC=5) shall be transmitted prior to the M.9A(AC=0) if both are appropriate.

12. The M.9A(AC=7) message shall be forwarded once in each of three successive transmit opportunities.

DATA RETENTION RULES

The FJU shall retain the status of the Force Tell Indicator for all reference points being forwarded.