Admin

Assign I due tomorrow
Congrats on proving
your bare-metal mettle!
Pre-lab for lab2
Read gcc/make guides,
Preview 7-segment display (lab writeup)
Bring your kit, tools, wire



Today: Hail the all-powerful C pointer

Addresses, pointers as abstractions for accessing memory Use of volatile Implementation of arrays and structs ARM addressing modes

Compile-time vs. runtime

Compile-time: compiler is running on your laptop

- reads your C code, parse/check semantically valid
- analyzes code to understand structure/intent
- generates assembly instructions, creates program binary

Runtime: program binary is running on Pi

- all that remains is generated assembly instructions
- fetch/decode/execute cycle

The work optimizer does at CT is intended to streamline number of instructions to be executed at RT

Memory

Linear sequence of bytes, indexed by address

Program instructions and data are stored in memory

Assembly instructions 1dr (load) from memory into register to use, str (store) updated value from register back to memory

[8010] 20 20 00 Г800с1 20 **e**5 80 10 [8008] 00 **e**3 a0 19 Γ80047 02 e5 9f 00 [8000] 04

0x100000000

4 GB

32-bit addresses, start at 0, end at 2³¹ -1

0x020000000 **512 MB**

Byte-order is litte-endian

Accessing memory in assembly

1dr and str copy 4 bytes from memory location to register (or vice versa)

The memory address could refer to:

- a location reserved for a global or local variable or
- a location containing program instructions or
- a memory-mapped peripheral or
- an unused/invalid location or ...

Those 4 bytes of data being copied could represent:

- an address or
- an integer or
- 4 characters or
- an ARM instruction or ...

```
FSEL2: .word 0x20200008
SET0: .word 0x2020001C

ldr r0, FSEL2
mov r1, #1
str r1, [r0]

ldr r0, SET0
mov r1, #(1<<20)
str r1, [r0]
```

Assembly instructions allow access to any memory location by address No notion of "boundaries", completely agnostic to data type Correctly accessing memory is cognitive load for programmer

C type system and pointers are improved abstraction for accessing memory

What do C pointers buy us?

- Access data at specific address, e.g. FSEL2
- Access data by its offset relative to other nearby data (array elements, struct fields)
 - Storing related data in related locations organizes use of memory
- Guide/constrain memory access to respect data type
 - (Better, but pointers still fundamentally unsafe...)
- Efficiently refer to shared data, avoid redundancy/duplication
- Build flexible, dynamic data structures at runtime



IN CODE, IT'S NOT CONSIDERED RUDE TO POINT.



Pointer vocabulary

An *address* is a memory location. Representation is unsigned 32-bit int.


A pointer is a variable that holds an address.

The "pointee" is the data stored at that address.

* is the dereference operator, & is address-of.

C code

Memory



C pointer types

C enforces type system: every variable declares data type

Declaration used by compiler to reserve proper amount of space;
 determines what operations are legal for that data

Operations must respect data type

Can't multiply two int* pointers, can't deference an int

C pointer variables distinguished by type of pointee

- Dereferencing an int* pointer accesses int
- Dereferencing a char* pointer accesses char
- Co-mingling pointers of different type generally disallowed
- Generic void* pointer, raw address of indeterminate pointee type

Pointer operations: & *

```
int m, n, *p, *q;
p = &n;
       // same as prev line?
*p = n;
q = p;
                // same as prev line?
*q = *p;
p = \&m, q = \&n;
*p = *q;
                // same as prev line?
m = n;
```

```
ldr r0, FSEL1 // set GPIO 10 as input
   mov r1, #0
   str r1, [r0]
   ldr r0, FSEL2 // set GPIO 20 as output
   mov r1, #1
   str r1, [r0]
                                                       c_button.c
                                 button.s
   mov r2, #(1<<10) // bit 10
   mov r3, #(1<<20) // bit 20
                                          let's do it!
wait:
   ldr r0, LEV0
   ldr r1, [r0]
               // read GPIO 10
   tst r1, r2
   bne wait
                 // if button not pressed, keep waiting
                // set GPIO 20 high
   ldr r0, SET0
   str r3, [r0]
FSEL1: .word 0x20200004
FSEL2: .word 0x20200008
```

SET0: .word 0x2020001C LEV0: .word 0x20200034

c_button.c

The little button that wouldn't

A cautionary tale















(or, why every systems programmer should be able to read assembly)

(Code available in courseware repo lectures/C_Pointers/code)

Peripheral registers

These registers are mapped into the address space of the processor (memory-mapped IO).



These registers may behave **differently** than ordinary memory.

For example: Writing a I bit into SET register sets output to I; writing a 0 bit into SET register has no effect. Writing a I bit into CLR sets the output to 0; writing a 0 bit into CLR has no effect. Neither SET or CLR can be read. To read the current value, access the LEV (level) register.

Q:What can happen when compiler makes assumptions reasonable for ordinary memory that **don't hold** for these oddball registers?

volatile

The compiler sees in code where each variable is read/written. Rather than execute each access literally, may streamline into an equivalent sequence that accomplishes same result. Neat!

But, if variable may be read/written externally (by another process, by peripheral), these optimizations can be invalid!

Tagging a variable with **volatile** qualifier tells compiler that it cannot remove, coalesce, cache, or reorder accesses to this variable. Generated assembly must faithfully perform each access of the variable exactly as given in the C code.

(If ever in doubt about what the compiler has done, use tools to review generated assembly and see for yourself...!)

C arrays

Array is simply sequence of elements stored in contiguous memory No sophisticated array "object", no track length, no bounds checking

Declare array by specifying element type and count of elements Compiler reserves memory of correct size starting at base address Access to elements by index is relative to base

```
char letters[4];
int nums[5];

letters[0] = 'a';
letters[3] = 'c';

nums[2] = 0x107e;

[8118] 61 ? 63
[8114] ?
[8110] ?
[810c] 00000107e
[8108] ?
[8104] ?
```

Address arithmetic

Addresses can be manipulated arithmetically!

Arithmetic used to access data at neighboring location

```
unsigned int *base, *neighbor;
base = (unsigned int *)0x202000000; // FSEL0
neighbor = base + 1; // 0x202000004, FSEL1
```

IMPORTANT!!!

C pointer add/subtract is scaled by sizeof(pointee) e.g. operates in pointee-sized units

Array indexing is simply prettier syntax for pointer arithmetic array[index] <=> *(array + index)

Pointers and arrays

```
int n, arr[4], *p;
p = arr;
p = &arr[0];  // same as prev line
arr = p; // ILLEGAL, why?
*p = 3;
p[0] = 3; // same as prev line
n = *(arr + 1);
n = arr[1];  // same as prev line
```

C-strings

No string "abstraction", just sequence of chars in memory, e.g. char array char* points to first character

Must be terminated by null char (zero byte)

Trace the following code. Draw a memory diagram!

```
char *s = "Leland";
char *t;
char buf[9];

t = s;
s[0] = 'R';
*t = 'Z';
s = buf + 4;  // where does s point?
s[1] = t[3];  // what value changes?
```

Address arithmetic

Fancy ARM addressing modes

```
ldr r0, [r1, #4]  // constant displacement
ldr r0, [r1, r2]  // variable displacement
ldr r0, [r1, r2, asl #3]  // scaled index displacement
```

(Even fancier variants add pre/post update to move pointer along)

Q: How do these relate to accessing data structures in C?

```
C source #1 X
                                                        ARM gcc 7.2.1 (none) (Editor #1, Compiler #1) C X
A- B +- V
                                                             ARM gcc 7.2.1 (none) ▼
    struct fraction {
                                                        A・ Φ・ T・ 目 +・ ノ・
           int numer, denom;
                                                               main:
      };
                                                                ldr r3, <u>.L6</u>
                                                               ldr r3, [r3]
     int arr[9];
                                                                 mov r2, #5
       struct fraction *f;
                                                                 str r2, [r3, #4]
                                                                 ldr r3, <u>.L6+4</u>
       void main(void)
                                                                 mov r2, #7
                                                                 str r2, [r3, #12]
 10
           f->denom = 5:
                                                                 mov r3, #0
           arr[3] = 7;
 11
                                                                 b <u>.L2</u>
 12
                                                          11
                                                                .L5:
 13
           for (int i = 0; i < 9; i++)
                                                               ldr r2, <u>.L6</u>+4
 14
               arr[i] = i;
                                                                 str r3, [r2, r3, lsl #2]
 15
                                                                 add r3, r3, #1
                                                          15
                                                                .L2:
                                                                  cmp r3, #8
```

Try CompilerExplorer to find out!

Pointers and structs

```
struct gpio {
  unsigned int fsel[6];
  unsigned int reservedA;
  unsigned int set[2];
  unsigned int reservedB;
  unsigned int clr[2];
  unsigned int reservedC;
  unsigned int lev[2];
};
```

Address	Field Name	Description	Size	Read/ Write
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0000	GPFSEL0	GPIO Function Select 0	32	R/W
0x 7E20 0004	GPFSEL1	GPIO Function Select 1	32	R/W
0x 7E20 0008	GPFSEL2	GPIO Function Select 2	32	R/W
0x 7E20 000C	GPFSEL3	GPIO Function Select 3	32	R/W
0x 7E20 0010	GPFSEL4	GPIO Function Select 4	32	R/W
0x 7E20 0014	GPFSEL5	GPIO Function Select 5	32	R/W
0x 7E20 0018	-	Reserved	-	-
0x 7E20 001C	GPSET0	GPIO Pin Output Set 0	32	W
0x 7E20 0020	GPSET1	GPIO Pin Output Set 1	32	W
0x 7E20 0024	-	Reserved	-	-
0x 7E20 0028	GPCLR0	GPIO Pin Output Clear 0	32	W
0x 7E20 002C	GPCLR1	GPIO Pin Output Clear 1	32	W
0x 7E20 0030	-	Reserved	-	-
0x 7E20 0034	GPLEV0	GPIO Pin Level 0	32	R
0x 7E20 0038	GPLEV1	GPIO Pin Level 1	32	R

```
volatile struct gpio *gpio = (struct gpio *)0x20200000;
gpio->fsel[0] = ...
```

The utility of pointers

Accessing data by location is ubiquitous and powerful

You learned in previous course how pointers are useful

Sharing data instead of redundancy/copying

Construct linked structures (lists, trees, graphs)

Dynamic/runtime allocation

Now you see how it works under the hood

Memory-mapped peripherals located at fixed address

Access to struct fields and array elements by relative location

What do we gain by using C pointers over raw ldr/str?

Type system adds readability, some safety

Pointee and level of indirection now explicit in the type

Organize related data into contiguous locations, access using offset arithmetic

Segmentation fault

Pointers are ubiquitous in C, safety is low. Be vigilant!

Q. For what reasons might a pointer be invalid?

Q. What is consequence of accessing invalid address


...in a hosted environment?

...in a bare-metal environment?







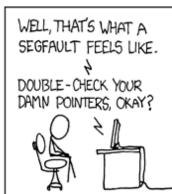

[&]quot;The fault, dear Brutus, is not in our stars, But in ourselves, that we are underlings." Julius Caesar (I, ii, 140-141)