# Specifying experimental configuration

The goal of the config is to specify the information required by the compiler which compile user-defined C++ or Python program into 1) QISA instructions with corresponding microcode for CC-Light, or 2) qumis instructions for CBox\_v3. It should be emphasized that flexibility and extensibility of this format is a driving requirement. The config is specified in JSON and contains a nested dictionary with the required information for every allowed operation including it's arguments. If there is no entry in the configuration for a specific operation with it's arguments then it is not allowed. There is a different entry in the configuration for different arguments of the same function: e.g., X180(q0) and X180(q1) would be two distinct entries in the config. In addition to the configuration entries there are several globally defined parameters.

# Globally defined parameters

- qubit names (list): list of qubit names (not needed?)
- cycle\_time (int): the clock cycle time of the device running the qumis
- MW\_MW\_buffer (int): buffer between pulses of type MW and MW in ns
- MW\_Flux\_buffer (int): buffer between pulses of type MW and Flux in ns
- MW RO buffer (int): buffer between pulses of type MW and RO in ns
- Flux\_MW\_buffer (int): buffer between pulses of type Flux and MW in ns
- Flux\_Flux\_buffer (int) : buffer between pulses of type Flux and Flux in
- Flux RO buffer (int): buffer between pulses of type Flux and RO in ns
- RO\_MW\_buffer (int): buffer between pulses of type RO and MW in ns
- RO\_Flux\_buffer (int): buffer between pulses of type RO and Flux in ns
- RO\_RO\_buffer (int): buffer between pulses of type RO and RO in ns

### Configuration entries

Entries are either an alias or a full entry.

<code>entry</code> (str) : unique id for the operation with arguments formatted as <code>op\_name(arg1, ..., argN)</code>

- alias entries only contain one item:
  - alias (str): name of operation +args it is an alias of
- full entries contain the following pieces of information

- duration (int): duration of the operation in ns
- latency (int): latency of operation in ns
- qubits (list): what qubits this operation affects (can be empty list)
- type: one of either MW, Flux, RO, None.
- matrix (matrix): the process matrix, can be an empty matrix.
- 'disable\_optimization' (bool): if this is True this operation cannot be compiled away.
- type (str): one of either MW, Flux, RO, None
- qumis\_instr (str): one of wait, pulse, trigger, CW\_trigger, dummy, measure.
- qumis\_instr\_kw (dict): dictionary containing keyword arguments for the qumis instruction.

### CBox\_v3 instuction configuration

OpenQL supports the following instructions

- wait
  - time (int): time to wait in ns, must be multiple of cycle\_time
- pulse plays a waveform from one of the internal AWG's
  - awg nr (int): index specifying the awg to play the pulse on
  - lut idx (int): index of the lookuptable that stores the waveform
- trigger: raises a trigger for a specified time
  - trigger\_bit (int) : trigger\_bit
  - trigger\_duration (int): duration for which to set the trigger bit high
- codeword\_trigger:
  - codeword ready bit (int): codeword ready bit
  - codeword\_ready\_bit\_duration (int): duration for which to set the codeword ready bit high
  - codeword\_bits (list of int): bits available for specifying the codeword (bit mask specifying used bits)
  - codeword\_duration (int): duration for which to set the codeword bits high
  - codeword (int): integer value the codeword bits should present in binary format.
- dummy blocks the qubit for the duration specified but executes no instruction
  - no arguments
- measure
  - no arguments

# CC-Light instuction configuration

Every quantum operation (QISA instruction) is translated into one or multiple microinstructions. For the first release of CC-Light, only one microinstruction is supported. Apart from above mentioned information required to specify full-entries, the following information should be specified to generate cc-light QISA code:

- cc\_light\_instr (str): the name of the operation in the program.
- physical qubits (int): the address of targeted physical qubits. A list containing up to two integers ranging from 0 to 6. Can be empty. See appendix for more details.
- cc\_light\_instr\_type (str): which can be "single\_qubit\_gate" or "two\_qubit\_gate".
- cc\_light\_codeword (int): 0~255 for MW, 0~7 for flux. Otherwise omitted.
- cc\_light\_opcode (int): 0~127 for single qubit operations, 128~255 for two qubit operations.
- cc\_light\_cond (int): value can 0, 1, 2, or 3. used for CC-Light fast feedback control. The opcode should be unique, however, the codeword for conditional operations can still be the same as for the unconditional variants of these operations.

# CC-Light platform configuration

The configuration file speficies the resources available in the target platforms and the topology.

#### "resources" entry

These resources can be qubits, waveform generators, measurement units and possible edges for 2-qubit operations. This information is used to model these resources in OpenQL to perform resource-constraint scheduling. An example entry of a resource meas\_units is shown below:

```
"meas_units" :
{
    "count": 2,
    "connection_map":
    {
        "0" : [0, 2, 3, 5, 6],
        "1" : [1, 4]
    }
}
```

where - count is the number of meas\_units resources available in the platform, which in the above example is 2. - connection\_map specifies how each meas\_unit is connected to the qubits. For example the first instance of meas\_units is connected to qubit numbers 0, 2, 3, 5, 6.

Another less clear example is the following edges resources:

```
"edges":
{
    "count": 8,
    "connection_map":
    {
        "0": [2],
        "1": [3],
        "2": [0],
        "3": [1],
        "4": [6],
        "5": [7],
        "6": [4],
        "7": [5]
    }
}
```

which specifies the 8 edges in ccLight platform. connection\_map specifies, for instance that edge 0 is connected to edge 2. The constraint which is derived from this information is that, if there is an operation on edge 0, it is not possible to use edge 2 in a 2-qubit operation unless edge 0 is free. Similar constraints are deduced for rest of 7 the edges.

#### topology

This section specifies: - grid x\_size and y\_size - qubits definition which maps qubit ids to qubit x and y coordinates on the grid - edges definition which maps edge ids to edge src and dst qubits

# Example use of aliases

```
• CZ(q0, q1) \rightarrow CZ(q1, q0)
```

• 
$$CZ_{11}(q0, q1) \rightarrow CZ_{11}(q1, q0)$$

• 
$$CZ_01(q0, q1) -> CZ_10(q1, q0)$$

- X180(q0) -> X(q0)
- $X180(q0) \rightarrow rX180(q0)$

# Potential extensibility and current flaws

- New qumis instructions will be needed as hardware changes (e.g., vector switch matrix) or to support different platforms (spin-qubits, NV-centers, etc). This should not affect the structure of this config but will change the content in the future.
- Classical logic is not specified in this document but does relate to the underlying qumis instructions, e.g, operations conditional on measurement outcomes.
- Composite qumis instructions. In the current proposal it is not possible to specify composite qumis instructions even though there is a clear potential for this. An example would be quickly putting a copy of a pulse on a different channel or triggering a scope.
- The format is flattened out completely, not taking use of any structure in the configuration. This is on purpose.

### Appendix: Device channel to qubit mapping

A mapping is required to map the user-defined qubit name into a physical qubit address. The physical qubit address and the directed edge address are defined in the following figure and table:

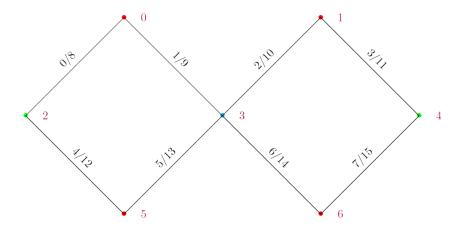


Figure 1: Qubit and edge number definition

edge address	left qubit address	right qubit address
0	2	0
1	0	3

edge address	left qubit address	right qubit address
2	3	1
3	1	4
4	2	5
5	5	3
6	3	6
7	6	4
8	0	2
9	3	0
10	1	3
11	4	1
12	5	2
13	3	5
14	6	3
15	4	6

In the CC-Light architecture, the following connection is suppoed:

Device Name	DIO connector	Target qubits	Operation Type
UHFQC-0	DIO1	0, 2, 3, 5, 6	measurement
UHFQC-1 AWG-8 0, channel 0~6	DIO2 DIO3	$     \begin{array}{c}       1, 4 \\       0 \sim 6     \end{array} $	measurement flux
AWG-8 1, channel 0	DIO4	0,1	microwave
AWG-8 1, channel 1	DIO4	5,6	microwave
AWG-8 2, channel 0	DIO5	2,3,4	microwave
VSM	-	0~6	microwave masking

### Potential change requirements & Solutions

- The user would like to use AWG-8 2, instead of AWG-8 1 to drive qubit 5,6.
- Solution: Switch the DIO connection of AWG-8 1 and 2.
- How address a single qubit?
- Solution: For MW, use VSM to shield other qubits. For flux, only activiate the channel for that qubit. For measurement, only generate the trigger bit for that qubit. If the program is written for a single qubit, then it can be automatically done.
- How to use the same program to address two different qubits in two experiments?
- Solution: Change the qubit mapping in the config file. For example, the first experiment, the qubit name "target\_qubit" is mapped to physical qubit address 0, and in the second experiment, change this mapping to

- physical qubit 1.
- Is it possible to only change the flux channel 1 and 4 for qubit 1 and 4, respectively, while not affecting the MW channel?
- This is not allowed by CC-Light.