


VORON 1 TO VORON TRIDENT

We build space shuttles with gardening tools so anyone can have a space shuttle of their own.


VERSION 2021-08-16

WWW.VORONDESIGN.COM

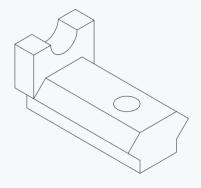


10MM DRILL GUIDE

For blind joint access holes located at the edge of an extrusion.

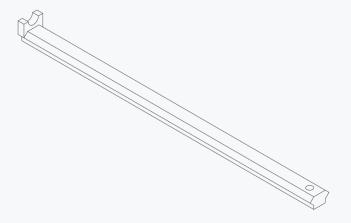

140MM DRILL GUIDE

For the Y axis blind joint access holes located on the vertical extrusions.

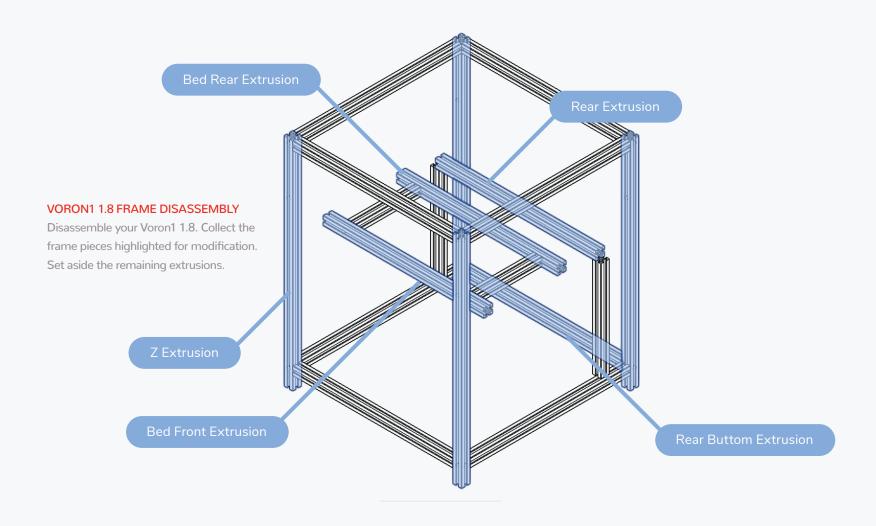

Z Extrusion






DRILL ACCESS HOLES

Drill an access hole for the Y axis blind joint 140mm from the left edge of the extrusion.


DRILL ACCESS HOLES

Drill access holes for the blind joint 10mm from the right edge of the extrusion.

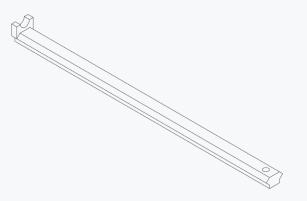




Bed Front Extrusion

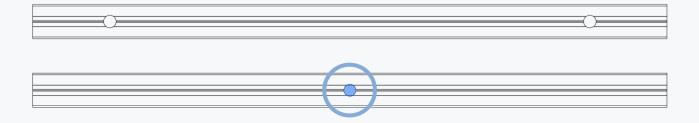

DRILL ACCESS HOLES

Drill an access hole in the centre of extrusion.


Rear Buttom Extrusion

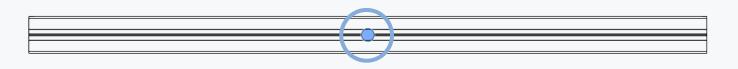

DRILL ACCESS HOLES

Drill an access hole in the centre of extrusion.

Bed Rear Extrusion

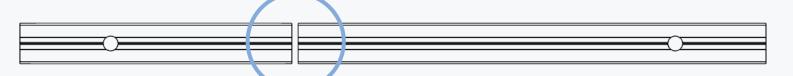



CUT EXTRUSION

The remaining extrusion length is 232mm for a 250mm spec build.

Mark the extrusion 138mm from the left. Cut to the left of your mark.

TAP M5

Tap the end of the extrusion for a M5 screw.

Rear Extrusion



CUT EXTRUSION

The remaining extrusion length is 330mm for a 250mm spec build.

Mark the extrusion 40mm from the left. Cut to the left of your mark.



TAP M5

Tap the end of the extrusion for a M5 screw.





Website

www.vorondesign.com

Github

https://github.com/vorondesign

Discord

https://discord.gg/voron