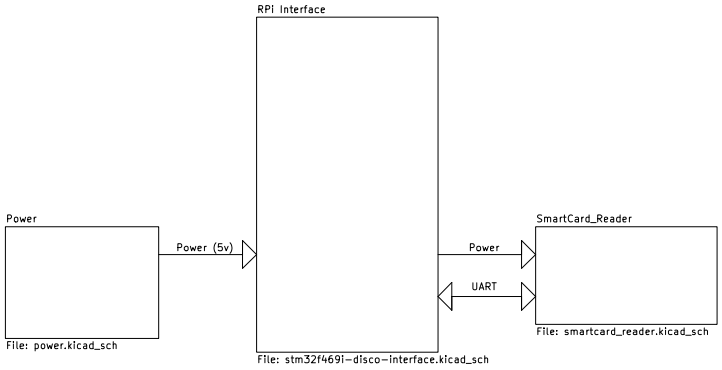
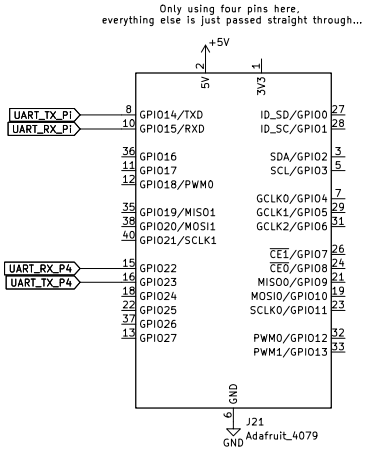
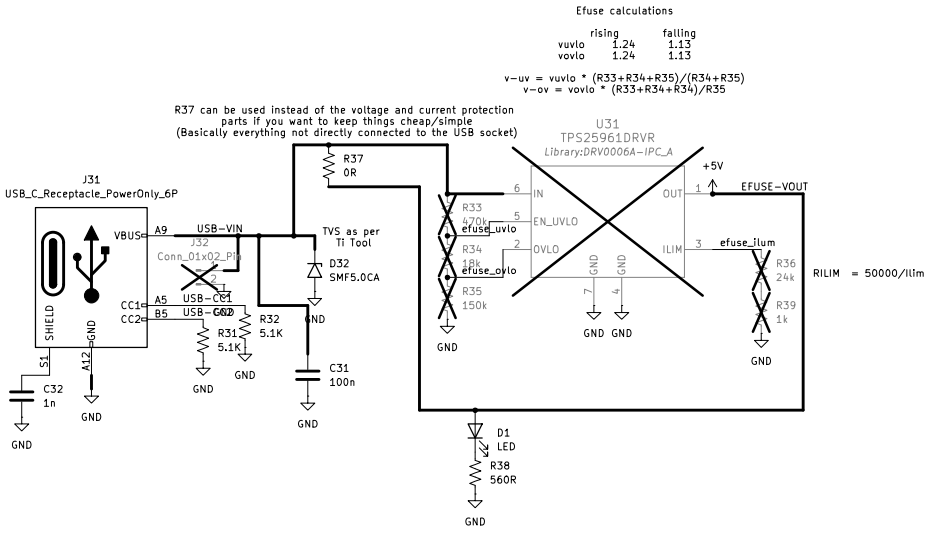
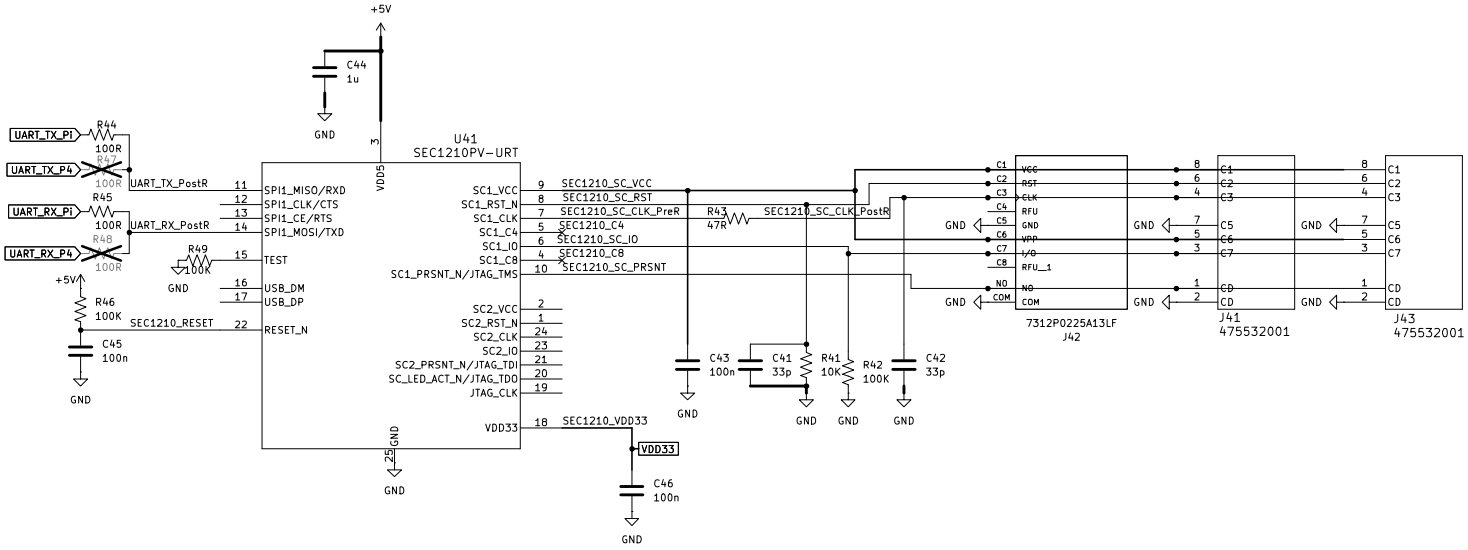


* Indicates a PWM-capable pin


Only using four pins here,
everything else is just passed straight through...
+5V
2
5V
1
3V3
UART_TX_P1
UART_RX_P1
8
GPIO14/TXD
10
GPIO15/RXD
27
ID_SD/GPIO0
28
ID_SC/GPIO1
36
GPIO16
11
GPIO17
12
GPIO18/PWM0
3
SDA/GPIO2
5
SCL/GPIO3
7
GCLK0/GPIO4
29
GCLK1/GPIO5
31
GCLK2/GPIO6
35
GPIO19/MISO1
38
GPIO20/MOSI1
40
GPIO21/SCLK1
26
CE1/GPIO7
24
CE0/GPIO8
21
MISO0/GPIO9
19
MOSI0/GPIO10
23
SCLK0/GPIO11
32
PWM0/GPIO12
33
PWM1/GPIO13
UART_RX_P4
UART_TX_P4
15
GPIO22
16
GPIO23
18
GPIO24
22
GPIO25
37
GPIO26
13
GPIO27
GND
6
J21
Adafruit_4079
GND


Efuse calculations
rising falling
vuvlo 1.24 1.13
vovlo 1.24 1.13
v-uv = vuvlo * (R33+R34+R35)/(R34+R35)
v-ov = vovlo * (R33+R34+R34)/R35
R37 can be used instead of the voltage and current protection parts if you want to keep things cheap/simple (Basically everything not directly connected to the USB socket)
U31
TPS25961DRVR
Library:DRV0006A-IPC_A
J31
USB_C_Receptacle_PowerOnly_6P
R37
0R
R33
470k
efuse_uvlo
R34
10k
efuse_ovlo
R35
150k
IN
EN_UVLO
OVLO
OUT
ILIM
GND
+5V
EFUSE-VOUT
efuse_ilum
R36
24k
R39
1k
RILIM = 50000/Ilim
VBUS
A9
USB-VIN
J32
Conn_01x02_Pin
TVS as per TI Tool
D32
SMF5.0CA
CC1
CC2
A5
USB-CC1
B5
USB-CC2
R31
5.1K
R32
5.1K
C31
100n
SHIELD
S1
A12
C32
1n
D1
LED
R38
560R


+5V
C44
1u
GND
U41
SEC1210PV-URT
UART_TX_P1
UART_TX_P4
UART_RX_P1
UART_RX_P4
R44
100R
R47
100R
R45
100R
R48
100R
UART_TX_PostR
UART_RX_PostR
R49
100K
R46
100K
C45
100n
SEC1210_RESET
SPI1_MISO/RXD
SPI1_CLK/CTS
SPI1_CE/RTS
SPI1_MOSI/TXD
TEST
USB_DM
USB_DP
RESET_N
VDD5
SC1_VCC
SC1_RST_N
SC1_CLK
SC1_C4
SC1_IO
SC1_C8
SC1_PRSNT_N/JTAG_TMS
SEC1210_SC_VCC
SEC1210_SC_RST
SEC1210_SC_CLK_PreR
SEC1210_C4
SEC1210_SC_IO
SEC1210_C8
SEC1210_SC_PRSNT
R43
47R
SEC1210_SC_CLK_PostR
SC2_VCC
SC2_RST_N
SC2_CLK
SC2_IO
SC2_PRSNT_N/JTAG_TDI
SC_LED_ACT_N/JTAG_TDO
JTAG_CLK
VDD33
SEC1210_VDD33
C43
100n
C41
33p
R41
10K
R42
100K
C42
33p
C46
100n
7312P0225A13LF
J42
J41
475532001
J43
475532001