



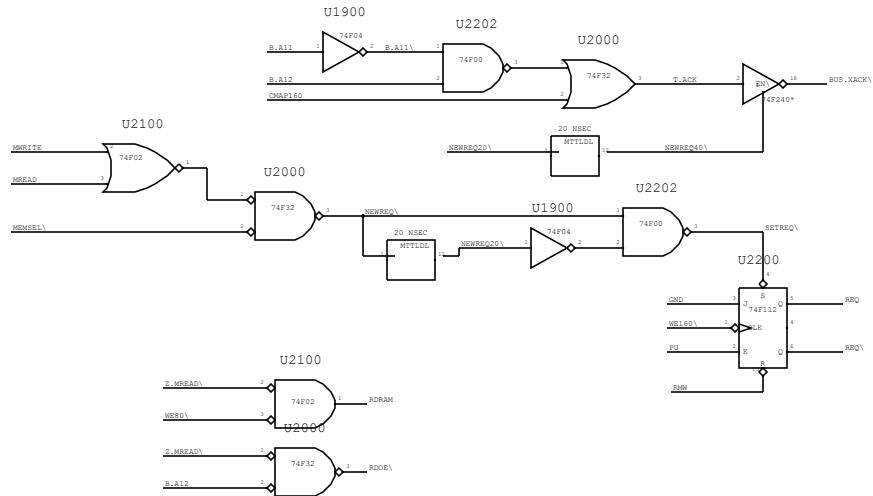
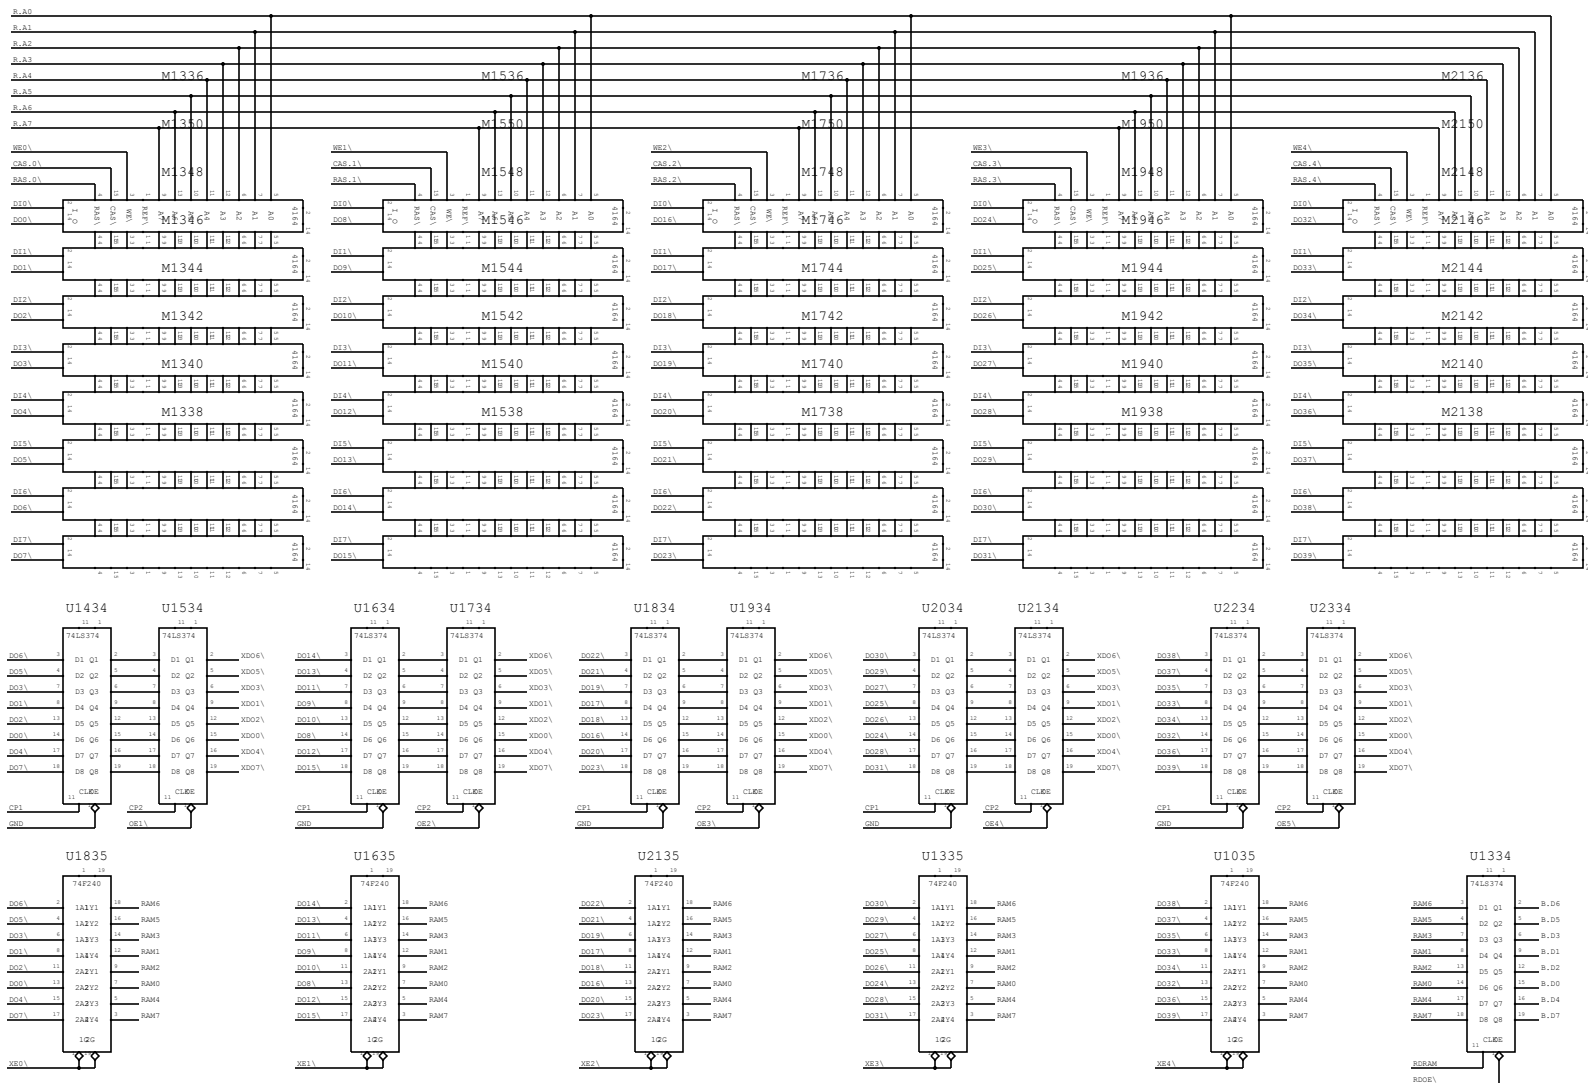
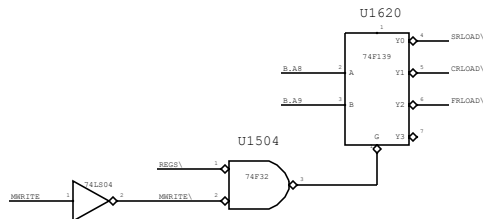
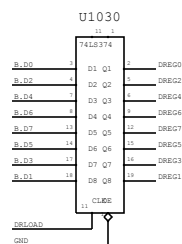
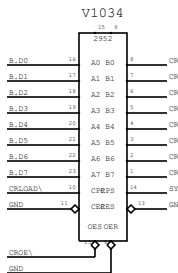


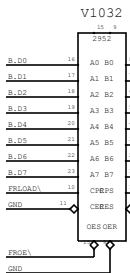




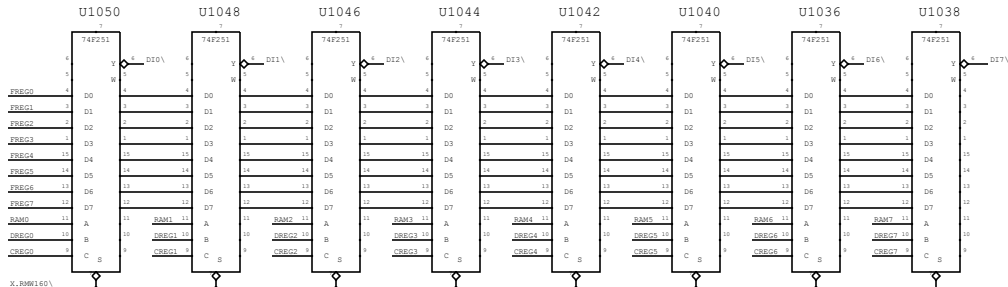


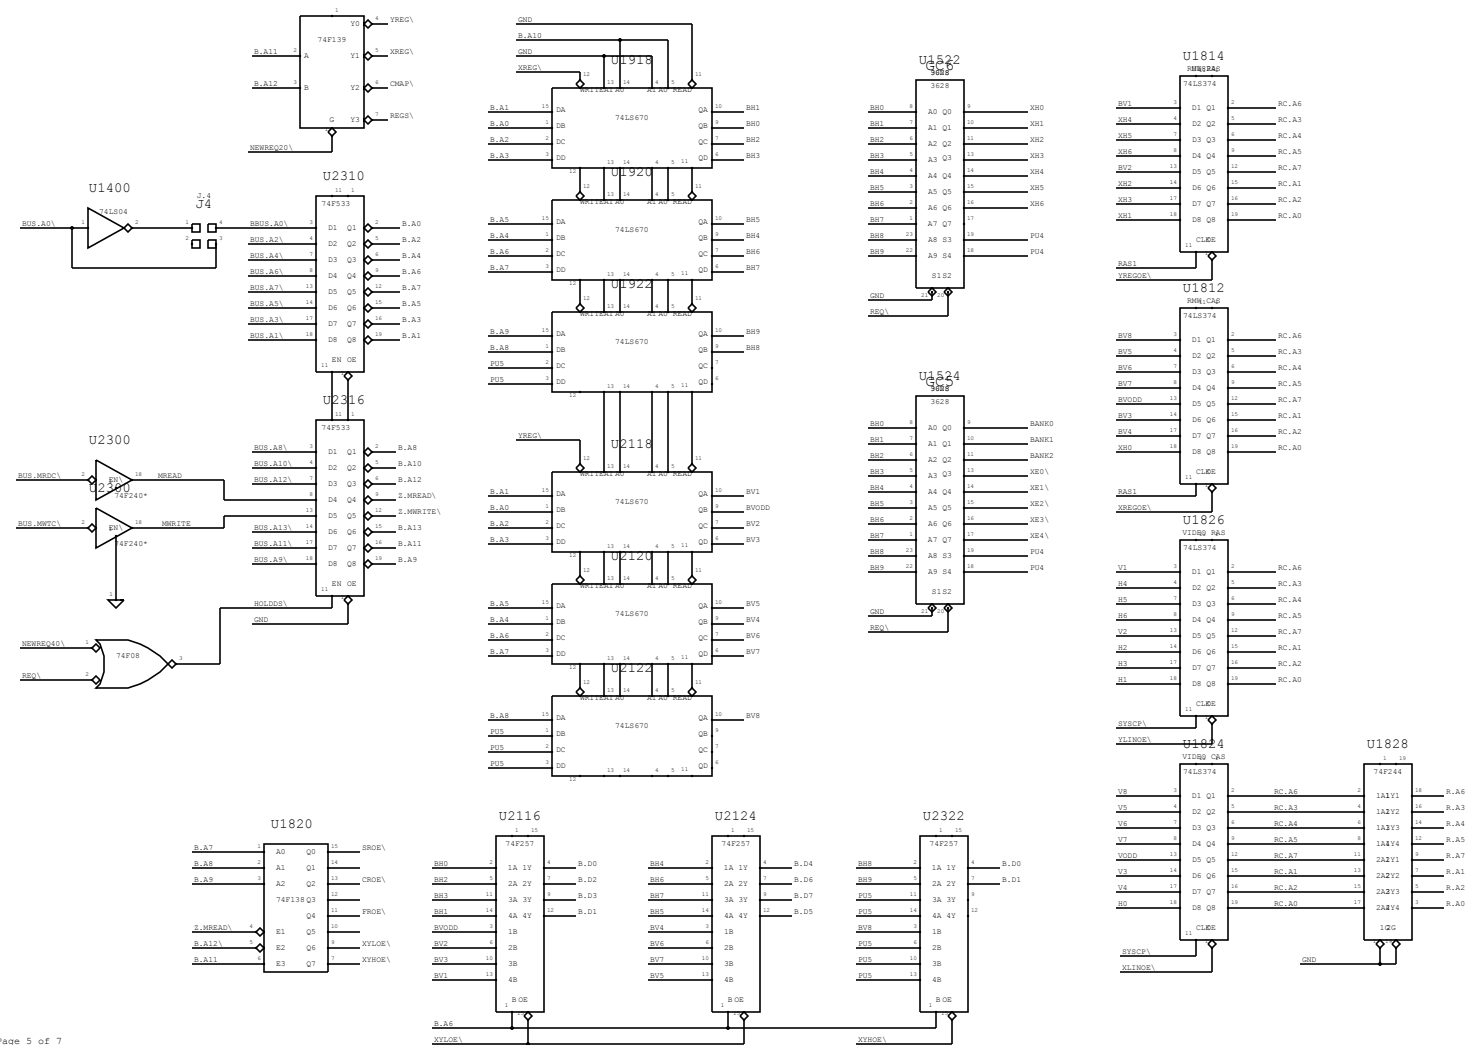

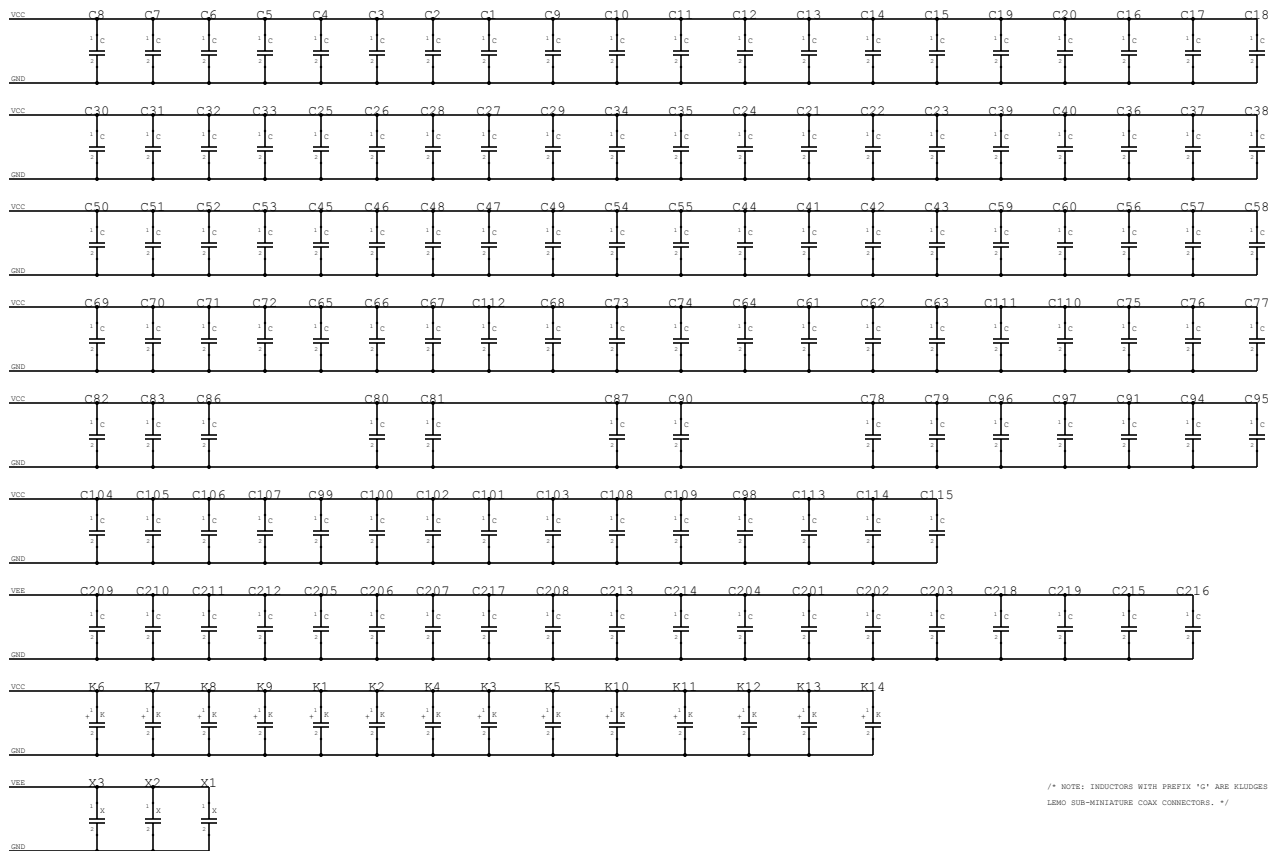

GND	[P1-2]	GND	[P1-2]
VCC	[P1-3]	VCC	[P1-4]
VCC	[P1-5]	VCC	[P1-6]
V12A	[P1-7]	V12	[P1-8]
VEE	[P1-9]	VEE	[P1-10]
GND	[P1-11]	GND	[P1-12]
R08_BCLKV	[P1-13]	R08_INTV	[P1-14]
R08_BPM0V	[P1-15]	R08_BPM0V	[P1-16]
R08_BPM1V	[P1-17]	R08_BPM2V	[P1-18]
R08_HM0CV	[P1-19]	R08_HM0CV	[P1-20]
R08_T0M0V	[P1-21]	R08_T0M0V	[P1-22]
R08_XACKV	[P1-23]	R08_T0M1V	[P1-24]
R08_JACKV	[P1-25]	R08_T0M2V	[P1-26]
R08_B0M0V	[P1-27]	R08_A16V	[P1-28]
R08_C0M0V	[P1-29]	R08_A17V	[P1-30]
R08_C0M1V	[P1-31]	R08_A18V	[P1-32]
R08_T0M3V	[P1-33]	R08_A19V	[P1-34]
R08_T0M4V	[P1-35]	R08_INT7V	[P1-36]
R08_T0M5V	[P1-37]	R08_INT8V	[P1-38]
R08_T0M6V	[P1-39]	R08_INT9V	[P1-40]
R08_T0M7V	[P1-41]	R08_INT10V	[P1-42]
R08_A14V	[P1-43]	R08_A15V	[P1-44]
R08_A12V	[P1-45]	R08_A13V	[P1-46]
R08_A10V	[P1-47]	R08_A11V	[P1-48]
R08_A8V	[P1-49]	R08_A9V	[P1-50]
R08_A6V	[P1-51]	R08_A7V	[P1-52]
R08_A4V	[P1-53]	R08_A5V	[P1-54]
R08_A2V	[P1-55]	R08_A3V	[P1-56]
R08_A0V	[P1-57]	R08_A1V	[P1-58]
R08_D14V	[P1-59]	R08_D15V	[P1-60]
R08_D12V	[P1-61]	R08_D13V	[P1-62]
R08_D10V	[P1-63]	R08_D11V	[P1-64]
R08_D8V	[P1-65]	R08_D9V	[P1-66]
R08_D6V	[P1-67]	R08_D7V	[P1-68]
R08_D4V	[P1-69]	R08_D5V	[P1-70]
R08_D2V	[P1-71]	R08_D3V	[P1-72]
R08_D0V	[P1-73]	R08_D1V	[P1-74]
GND	[P1-75]	GND	[P1-76]
P1-77	[P1-77]	P1-78	[P1-78]
V-12A	[P1-79]	V-12	[P1-80]
VCC	[P1-81]	VCC	[P1-82]
GND	[P1-83]	VCC	[P1-84]
GND	[P1-85]	GND	[P1-86]

/* NOTE: INDUCTORS WITH PREFIX 'C' ARE KLUDGES FOR THE
LEMO SUB-MINIATURE COAX CONNECTORS. */



J5	
VCC	[P2-2]
VEE	[P2-4]
VEE	[P2-6]
VEE	[P2-8]
VEE	[P2-10]
GND	[P2-12]
GND	[P2-14]
GND	[P2-16]