

Pika User Manual

Download Path: [Creality Pika Scanner User Manual.pdf](#)

Creality Pika 3D Scanner User Manual V1.0



Portable AI Blue Laser
& NIR 3D Scanner



Quick Start Guide V1.0

Foreword

Thank you for choosing the Creality Pika 3D scanner. This manual aims to help you quickly understand the basic information and scanning process of this scanner, opening up a whole new 3D scanning experience.

You can visit the Creality official Wiki: <https://wiki.creality.com/3d-scanner> to get the latest "Creality Pika 3D Scanner User Manual", detailed tutorials, and videos. This manual will be continuously updated; please refer to the latest version for the most up-to-date information.

Table of Contents


- ▶ [1. Product Introduction](#)

- [1.1 Scanner Components](#)
- [1.2 Part List](#)
- [2. First Use](#)
 - [System Requirements](#)
 - [2.1 Mobile Phone Connection Mode \(Recommended\)](#)
 - [2.2 PC Connection Mode](#)
- [3. Detailed Explanation of Scanning Modes](#)
 - [3.1 Blue Laser Mode](#)
 - [3.2 Infrared Mode](#)
- [4. Other Functions](#)
 - [4.1 Calibration](#)
 - [4.2 System Upgrade](#)
- [5. Equipment Specifications](#)
 - [5.1 Hardware Parameters](#)
- [6. Precautions](#)
 - [6.1 Usage Instructions](#)
 - [6.2 Maintenance Instructions](#)
- [Community & Support](#)

1. Product Introduction


1.1 Scanner Components

Front & Side Components

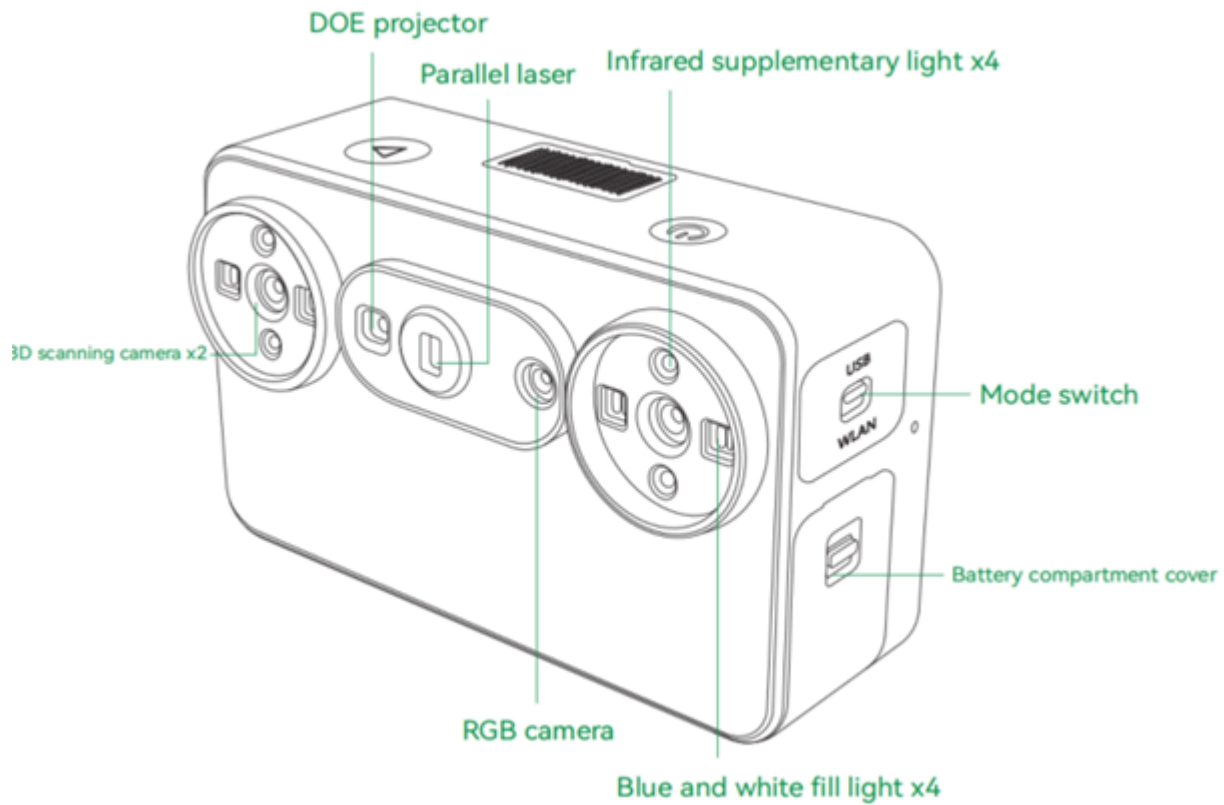

- DOE Projector
- Parallel Laser
- Infrared Supplemental Light × 4
- 3D Camera × 2
- RGB Camera
- Blue/White Supplemental Light × 4
- Mode Switch (USB / WLAN)
- Battery Compartment Cover

Rear & Side Components

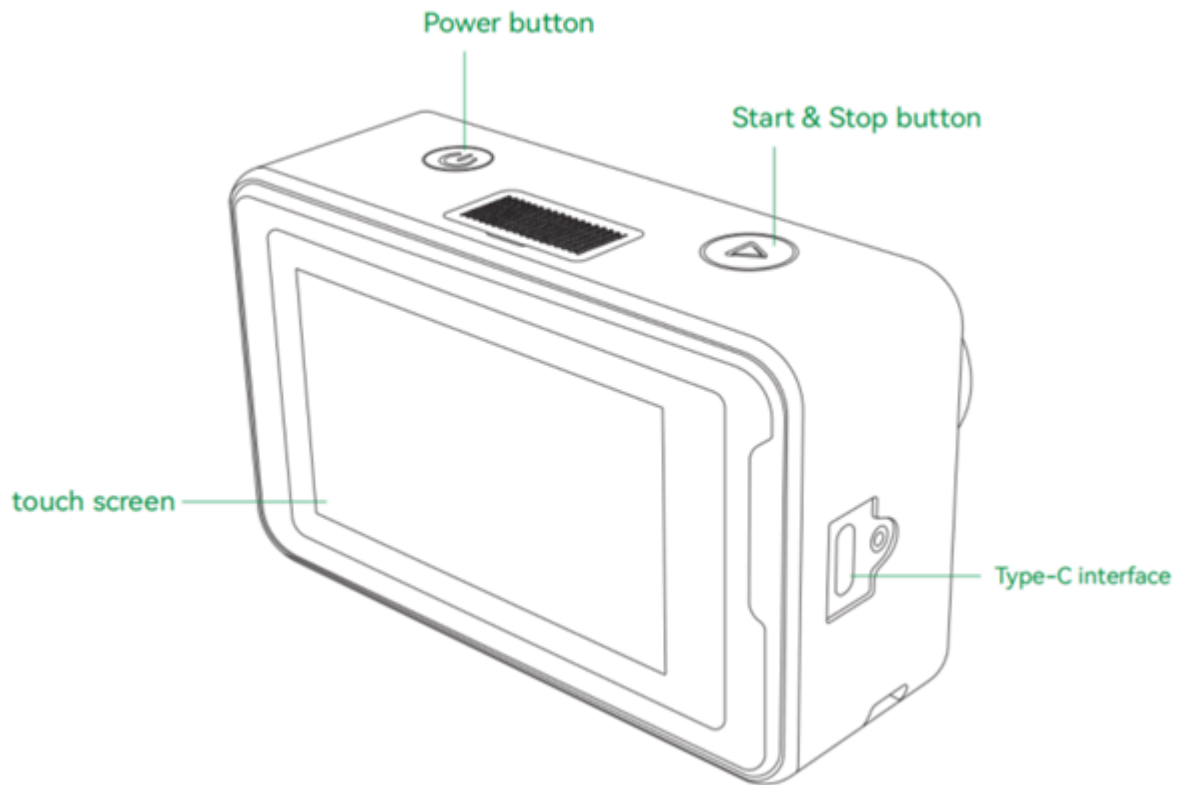


- Power Button
- Start/Stop Button
- Touchscreen
- Type-C Interface

1.2 Part List

Creality Pika


Part List

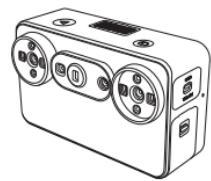

Creality Pika 3D Scanner * 1



Tripod * 1

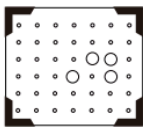


High-Precision Glass Calibration Board * 1



Turntable * 1



2m USB 3.0 Type-C Data Cable * 1



Reflective Markers
(D6mm * 500, D3mm * 980)



Rechargeable Battery * 2



Marker Block * 6




Quick Start Guide & Certificate
of Conformity & Warranty Card * 1



Cleaning Cloth * 1



Lanyard * 1



NIR Filter * 2

Item Name	Quantity	Item Name	Quantity
Creality Pika 3D Scanner	1	Rechargeable Battery	2
Tripod	1	Marker Block	6
High-Precision Glass Calibration Board	1	NIR Filter	2
Turntable	1	Lanyard	1
2m USB 3.0 Type-C Data Cable	1	Cleaning Cloth	1
Reflective Markers (D6mm × 500, D3mm × 980)	1 Set	Quick Start Guide / Certificate / Warranty Card	1

2. First Use

System Requirements

Mobile Device Configuration Requirements

Platform	Tier	Recommended / Example Models	Hardware & OS Specifications
Android	Recommended	Samsung :S26 series Xiaomi : 17 series OPPO :Find X9 Ultra Honor Magic 8 Pro	Qualcomm Snapdragon 8 Gen4+, Android 10.0+, 12GB+ RAM
Android	Lowest	Samsung :S23 Ultra Xiaomi :15 series	Qualcomm Snapdragon 8 Gen2+, Android 10.0+, 8GB+ RAM
IOS	Recommended	iPhone 16 Pro	A17 or later, iOS 15+, 8GB+ RAM
IOS	Lowest	iPhone 14	A15 or later, iOS 15+, 6GB+ RAM

PC Configuration Requirements

Platform	Tier	Operating System	Processor (CPU)	Graphics Card (GPU)	RAM	Min Software Version
Windows	Recommended	Win 10 / 11 (64-bit)	Intel i7 Gen13 and above	NVIDIA RTX 3060 or higher (8GB VRAM)	≥32GB	≥ V4.2.3
Windows	Minimum	Win 10 / 11 (64-bit)	Intel i7 Gen7	NVIDIA Dedicated GPU (6GB VRAM)	≥16GB	≥ V4.2.3
macOS	Recommended	macOS 14 and above	Apple M3 and above	Integrated	≥32GB	≥ V4.2.3
macOS	Minimum	macOS 14 and above	Apple M2	Integrated	≥16GB	≥ V4.2.3

⚠ Important Pre-use Note:

Before using the Creality Pika to scan, you must connect it to your phone or computer and launch the accompanying software.

Be sure to remove all protective films from the scanner lenses, filters, lasers, and touchscreen before first use to ensure optimal scanning accuracy and display quality.

2.1 Mobile Phone Connection Mode (Recommended)

(1) Preparation

► Software:

- Connect your phone to the internet (4G/5G/Wi-Fi).
- Download and install **CrealityScan** App (Version $\geq$ V3.1.0) from the App Store / Google Play.

iOS



Android



► Hardware:



⚠ First Use Battery Activation: Due to transportation safety regulations, the battery ships at low charge. Charge the battery for **at least 30 minutes** before first use to activate it.

💡 The battery can be charged separately via its port or while installed in the device.

- Insert the charged battery into the Pika body following the "INSERT / 此端推入" direction arrow.



此端推入/INSERT



💡 Beginner Tip: It is recommended to use the turntable and marker blocks. Place the object on the turntable to scan. It is recommended to scan small to medium-sized objects (about 10 cm) with matte or complex surface textures, such as mice, remote controls, and figurines. It is not recommended to scan objects that are too small (≤ 10 mm) or have a glossy or reflective surface.

(2) Establish Connection (Wi-Fi connection)

1. Switch Mode & Power On

Switch the mode switch on the side of the Pika to the corresponding wireless WLAN position, then press and hold the **Power Button** for **5 seconds** until the screen lights up.





2. View Hotspot Credentials

Swipe down on the Pika screen to open the status bar and view the hotspot name and password in the menu.


 **Tip:** You can also follow the "**Connection Guide**" instructions on the homepage to view the hotspot credentials.

“

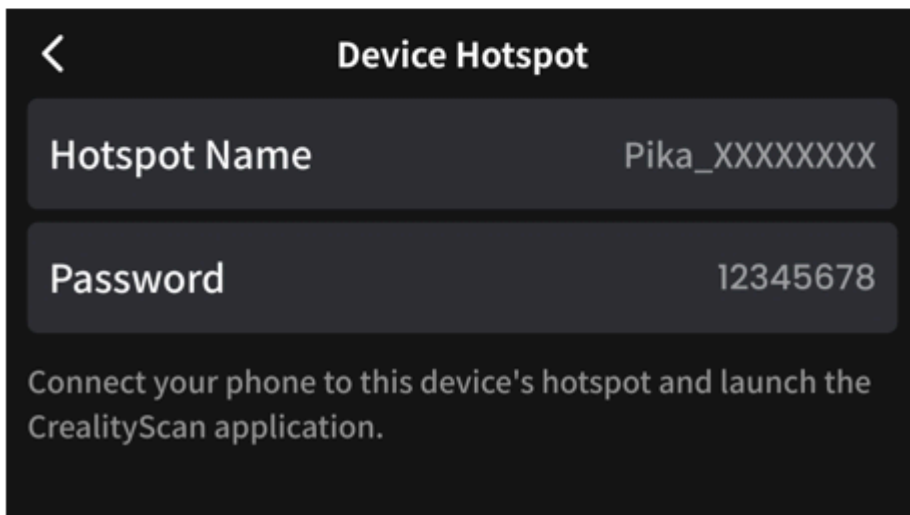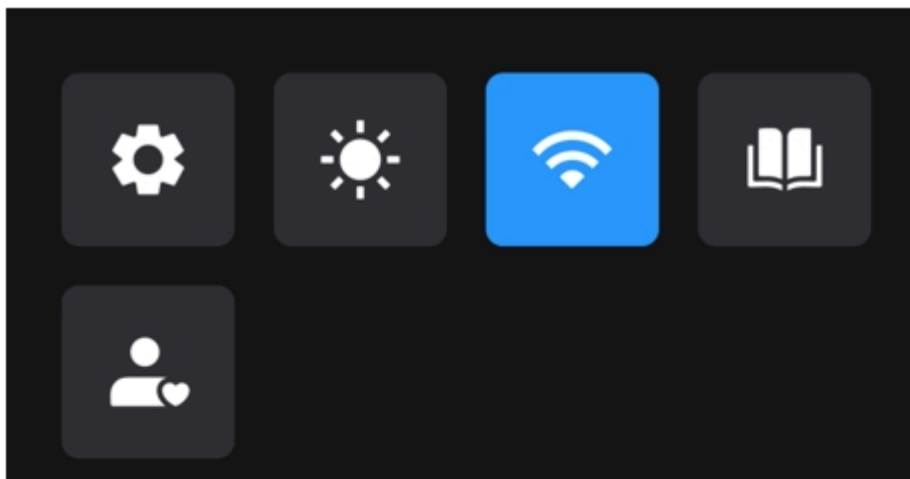


3. Connect Mobile Phone to Wi-Fi

Open your phone's Wi-Fi settings list, locate Pika's hotspot name, and enter the password to complete the connection.

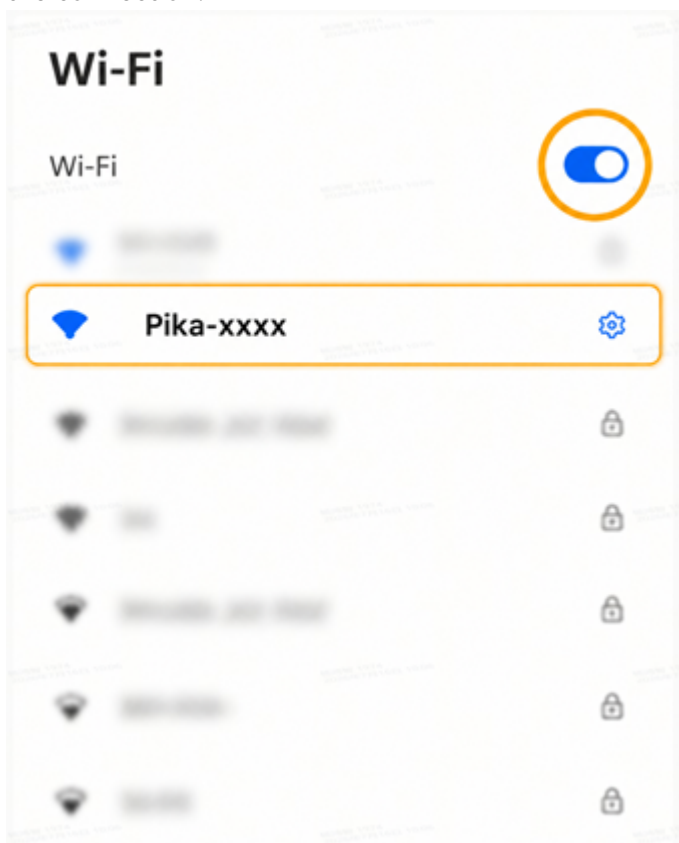



4. Launch CrealityScan App

After a successful connection, open the downloaded **CrealityScan APP** on your phone and wait for the device to come online.


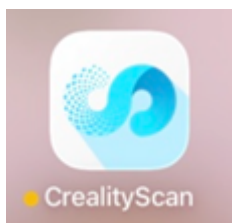


(3) Start Scanning

1. Tap **Start Scanning** on Pika's screen or tap **New Project** in the CrealityScan App.

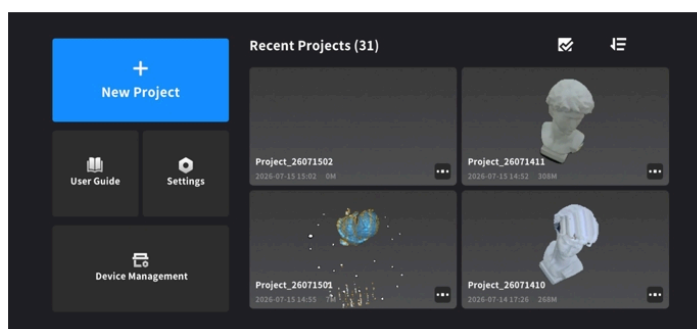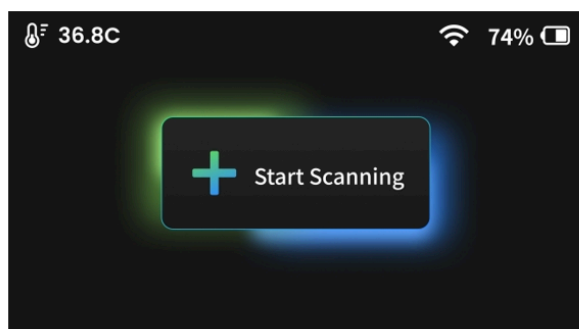

2. When scanning, focus your gaze on the object being scanned and the screen on the Pika scanner itself. Position the scanner so the distance indicator bar on screen stays within the **green zone** (optimal scanning distance).

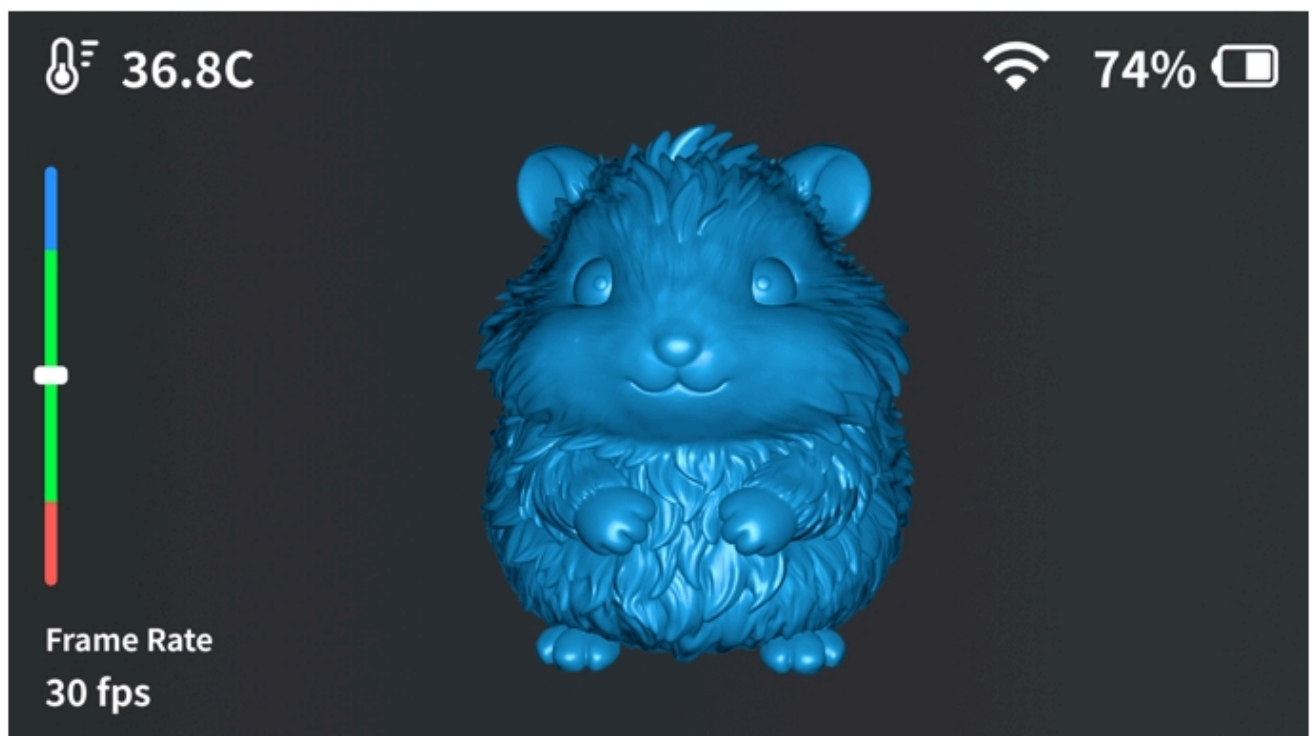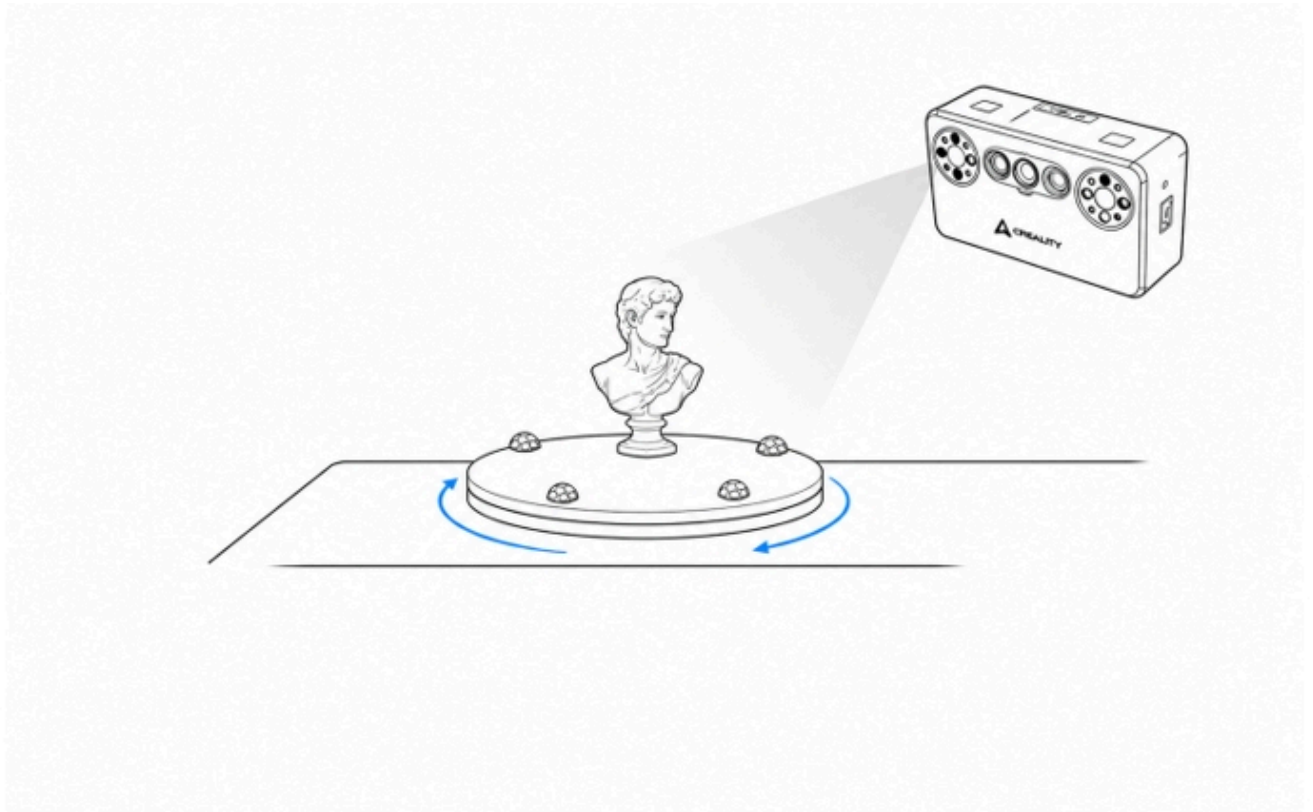


3. Scanning Controls:

- ▶ Press the top mechanical **Start/Stop button** to quickly start, pause, or resume scanning.




- ▶ Touchscreen gestures and on-screen control buttons can also be used.

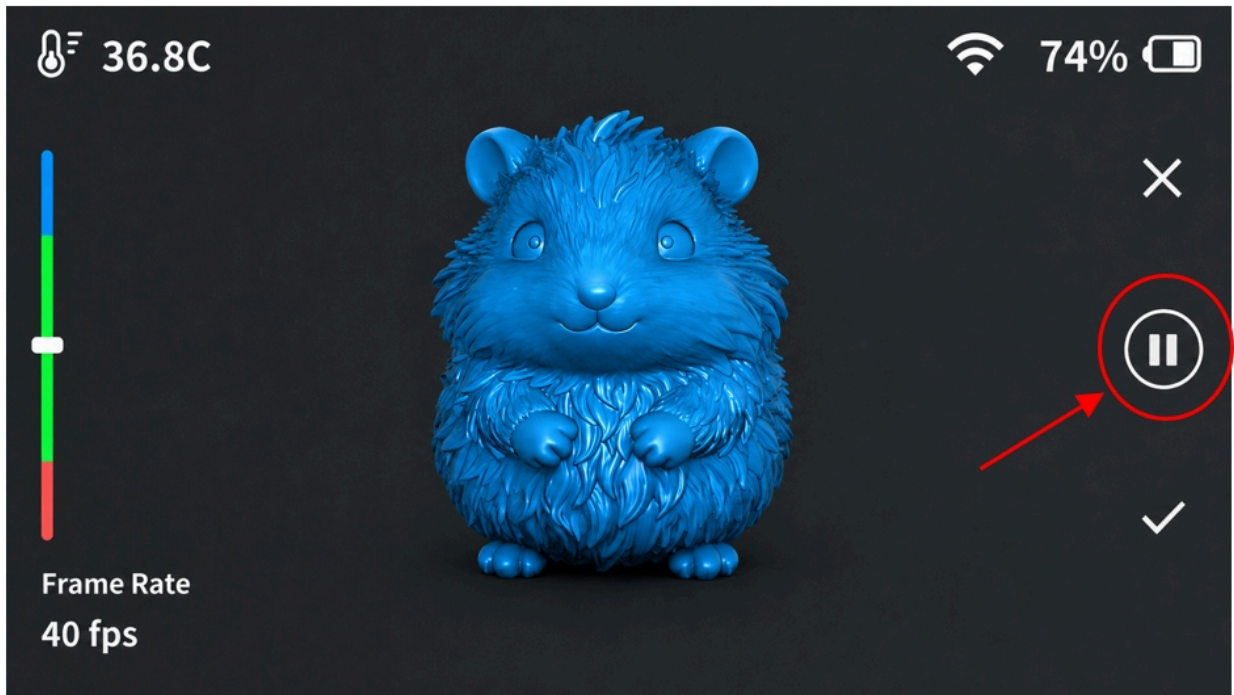

Swipe Up – Parameter Settings


Swipe up from the bottom of the screen to set the parameters for each scanning mode. After setting, swipe down from the top of the screen to return to the preview interface.↵

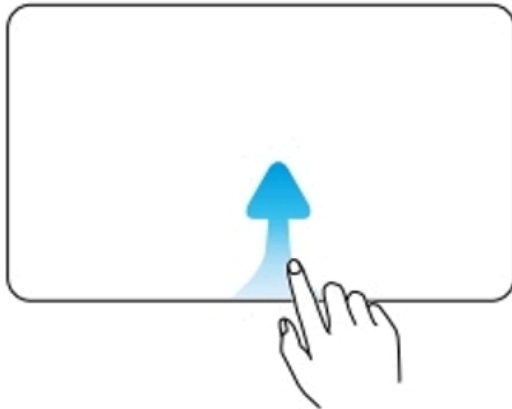

Various parameters can be set in different shooting modes. Refer to the actual interface.

Swipe Left – Exposure Settings

Swipe left in the preview interface to adjust the exposure settings.

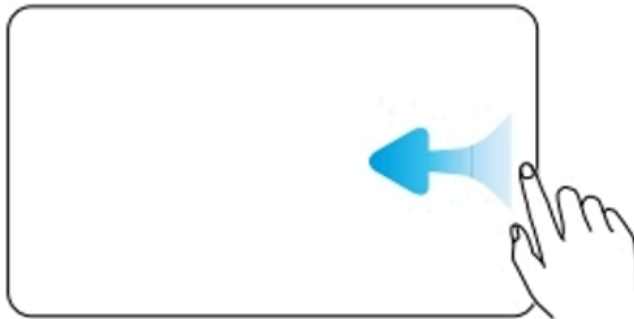

(4) USB Connection (Android Devices Only)

1. Switch Mode & Power On


Switch the mode switch on the side of the Pika to the corresponding wired USB position, then press and hold the **Power Button** for **5 seconds** until the screen lights up.




2. Connect Pika to your Android phone via the **Type-C cable** and launch the CrealityScan App.



3. On-Screen Control Buttons in USB Mode:

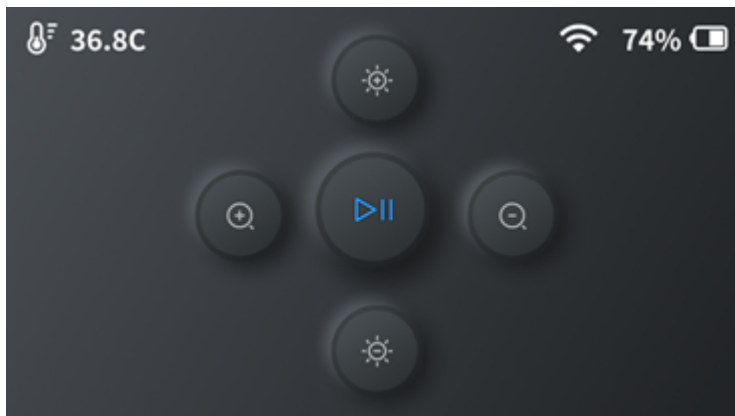


► **Start/Pause Button:**

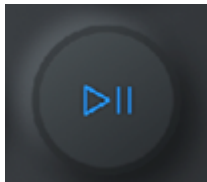


Tap once to start/pause; press and hold for 2 seconds to stop/finish.

► **Exposure Button:**

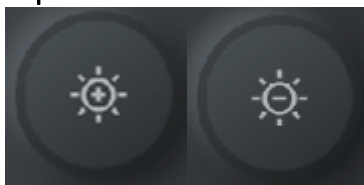

Tap to adjust exposure level.

► **Zoom Button:**

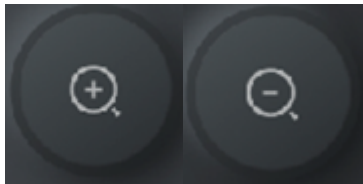

Tap to adjust zoom level.

2.2 PC Connection Mode

Ideal for high-speed, detailed, and large-scene scanning, and supports both wired and wireless connection methods.

(1) Preparation

► **Software:**

Download and install **CrealityScan 4** from <https://wiki.creality.com/en/software/scan-software>.

- *macOS Note:* Grant full read/write permissions to the app for proper point cloud processing and model generation.




► **Hardware:**



⚠ **First Use Battery Activation:** Due to transportation safety regulations, the battery ships at low charge. Charge the battery for **at least 30 minutes** before first use to activate it.
💡 The battery can be charged separately via its port or while installed in the device.

- Insert the charged battery into the Pika body following the "INSERT / 此端推入" direction arrow.



💡 **Beginner Tip:** It is recommended to use the turntable and marker blocks. Place the object on the turntable to scan. It is recommended to scan small to medium-sized objects (about 10 cm) with matte or complex surface textures, such as mice, remote controls, and figurines. It is not recommended to scan objects that are too small (≤ 10 mm) or have a glossy or reflective surface.

(2) Establish Connection

Method 1: Wired Connection

1. Switch Mode & Power On


Switch the mode switch on the side of the Pika to the corresponding wired USB position, then press and hold the **Power Button** for **5 seconds** until the screen lights up.




2. Connect Pika to your PC using the included 2m USB 3.0 Type-C cable (plug into a USB 3.0 blue port or higher).



3. Launch **CrealityScan**. The device will auto-detect.

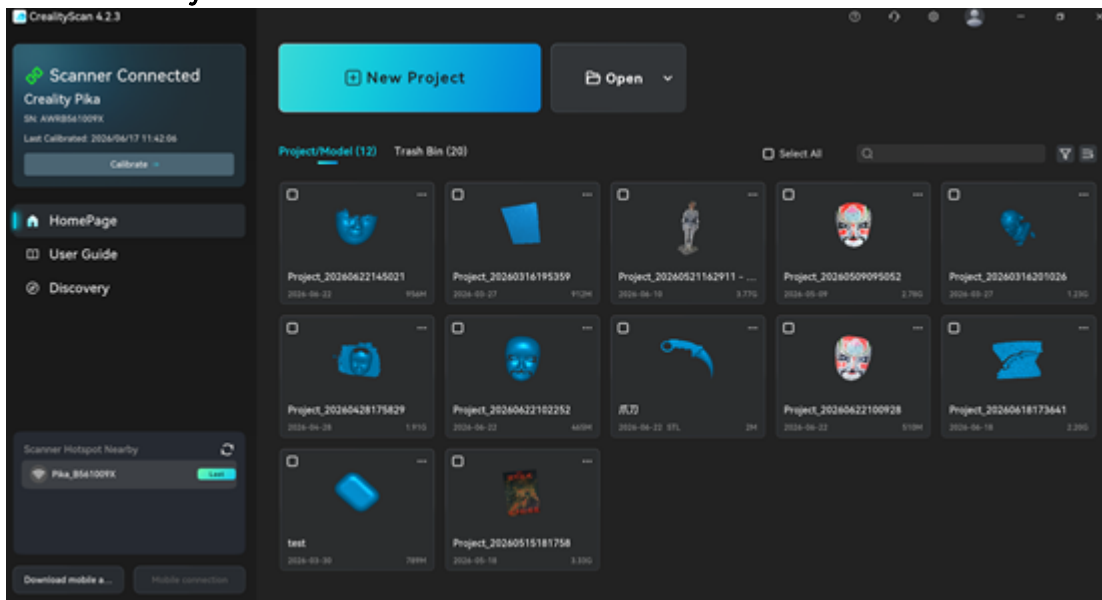

4. After connecting the scanner for the first time, the software will automatically pop up a performance test panel. It is recommended to complete the **performance test** before starting to scan.

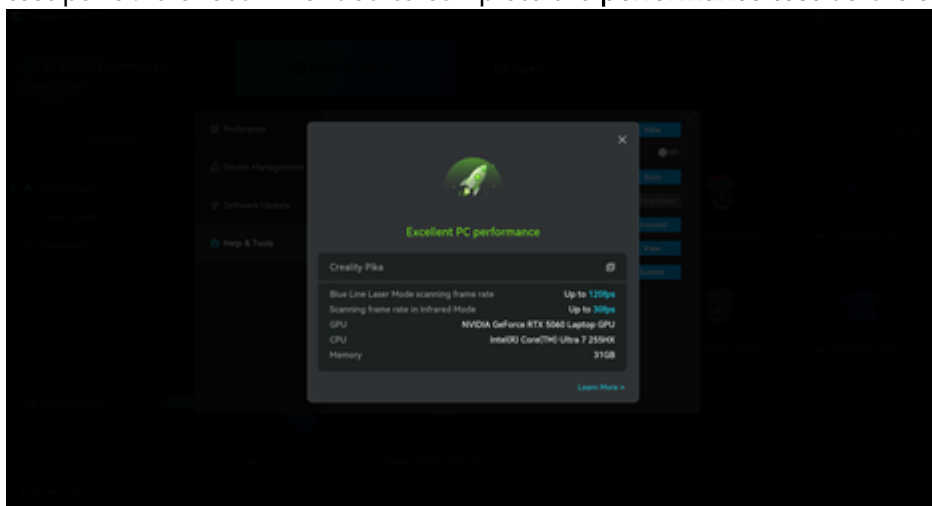

Method 2: Wireless Connection

1. Switch Mode & Power On

Switch the mode switch on the side of the Pika to the corresponding wireless WLAN position, then press and hold the **Power Button** for **5 seconds** until the screen lights up.





2. View Hotspot Credentials


Swipe down on the Pika screen to open the status bar and view the hotspot name and password in the menu.

 **Tip:** You can also follow the "**Connection Guide**" instructions on the homepage to view the hotspot credentials.


“

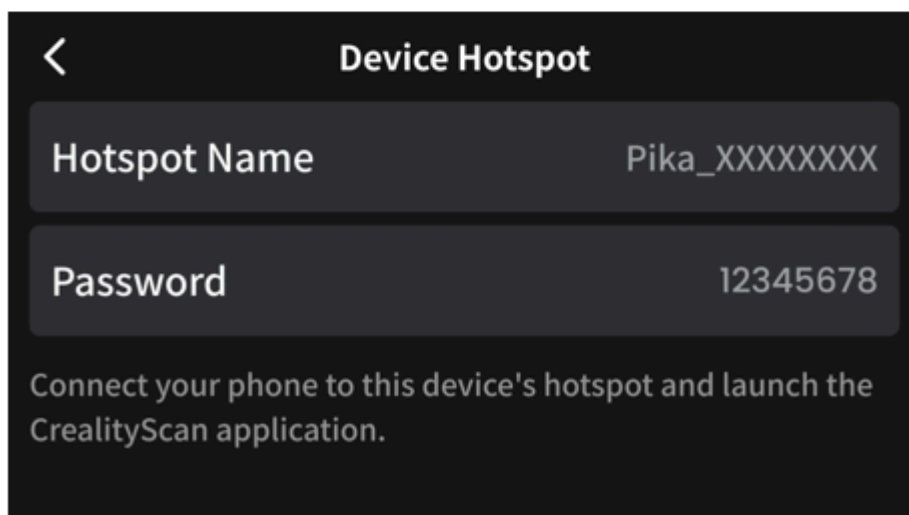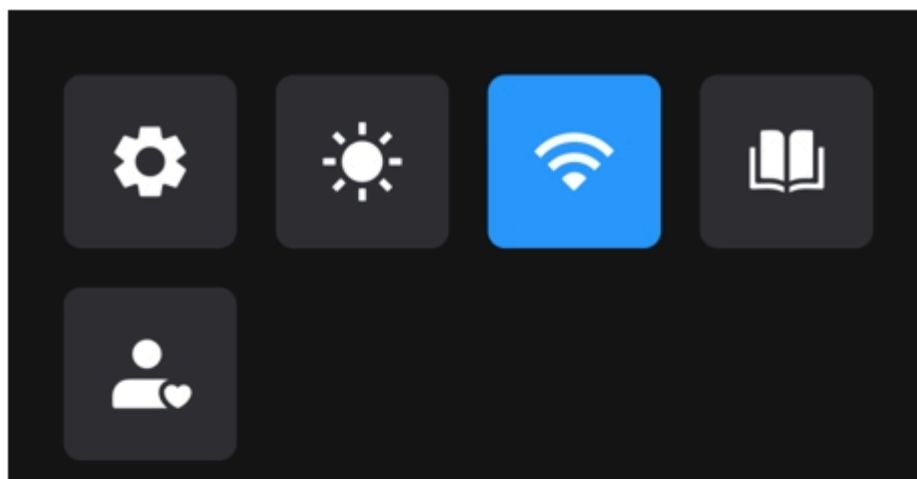


- Open your pc's Wi-Fi settings list, locate Pika's hotspot name, and enter the password to complete the connection.

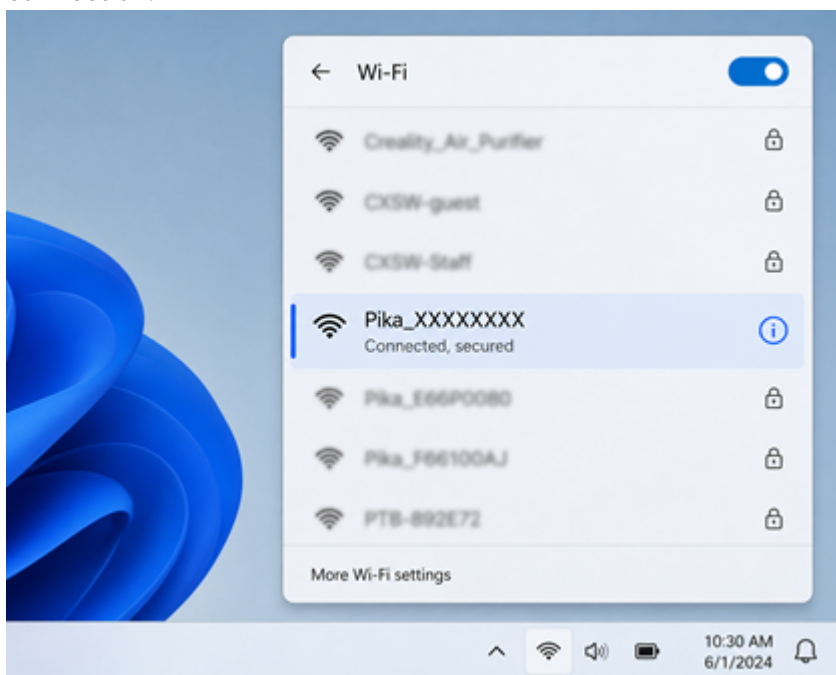

- Launch **CrealityScan**. The device will auto-detect.

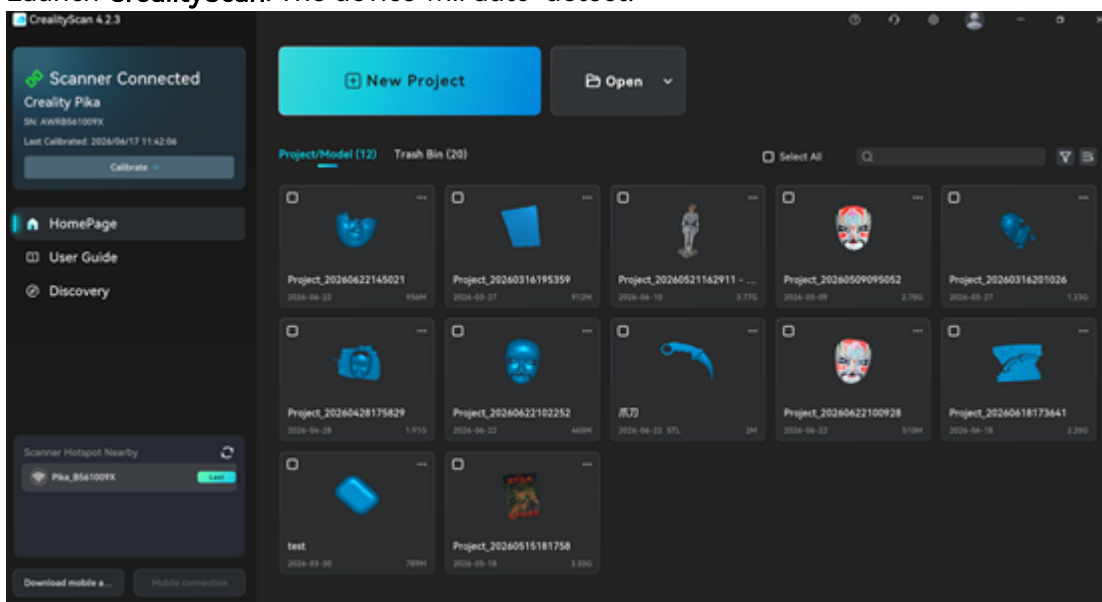


- After connecting the scanner for the first time, the software will automatically pop up a performance test panel. It is recommended to complete the **performance test** before starting to scan.


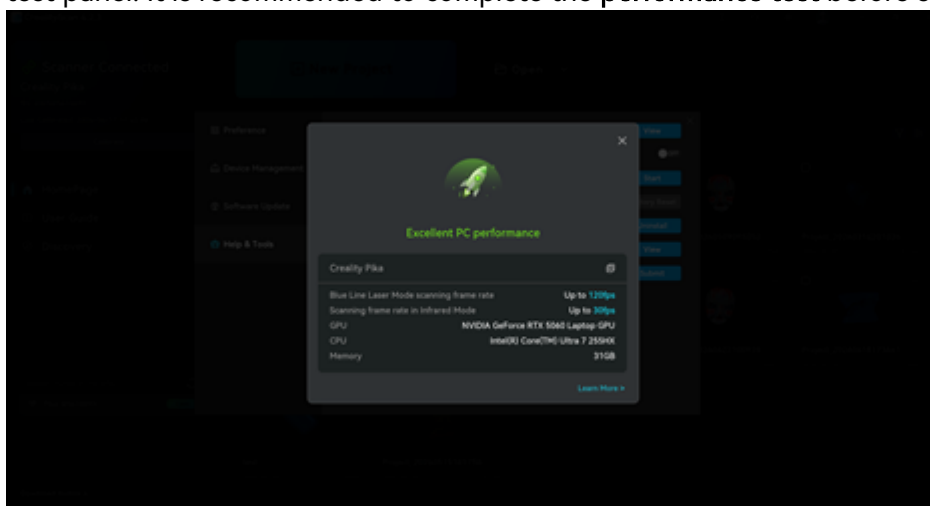


(3) Start Scanning

1. Tap **Start Scanning** on Pika's screen or tap **New Project** in the CrealityScan.

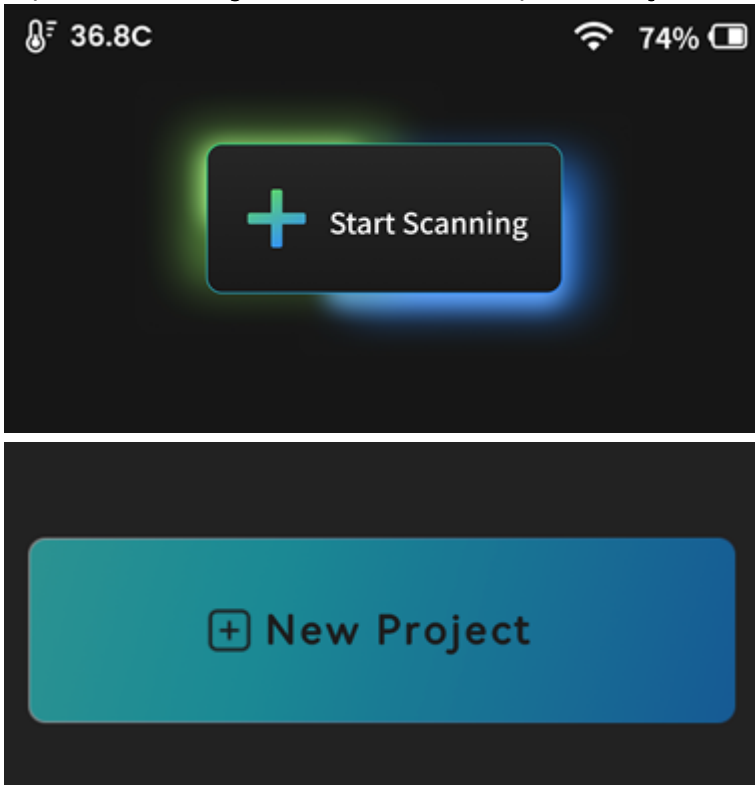

2. When scanning, focus your gaze on the object being scanned and the screen on the Pika scanner itself. Position the scanner so the distance indicator bar on screen stays within the **green zone** (optimal scanning distance).

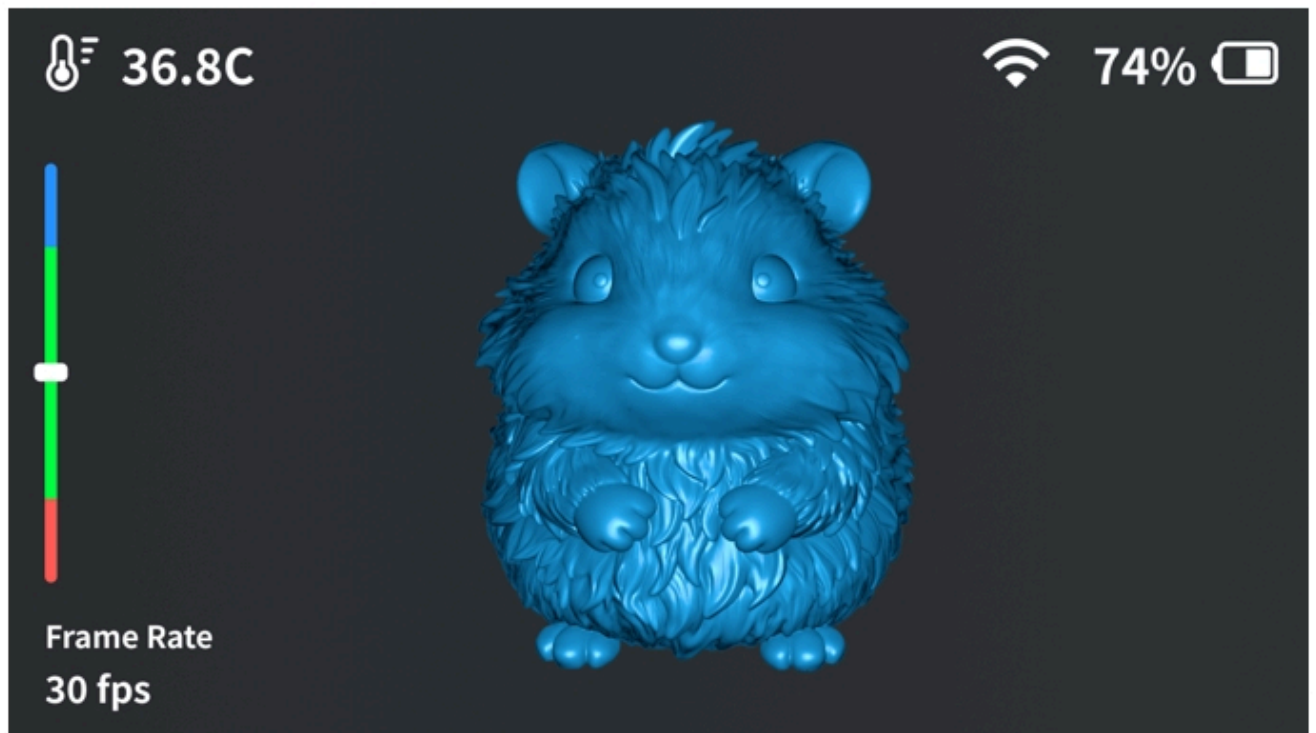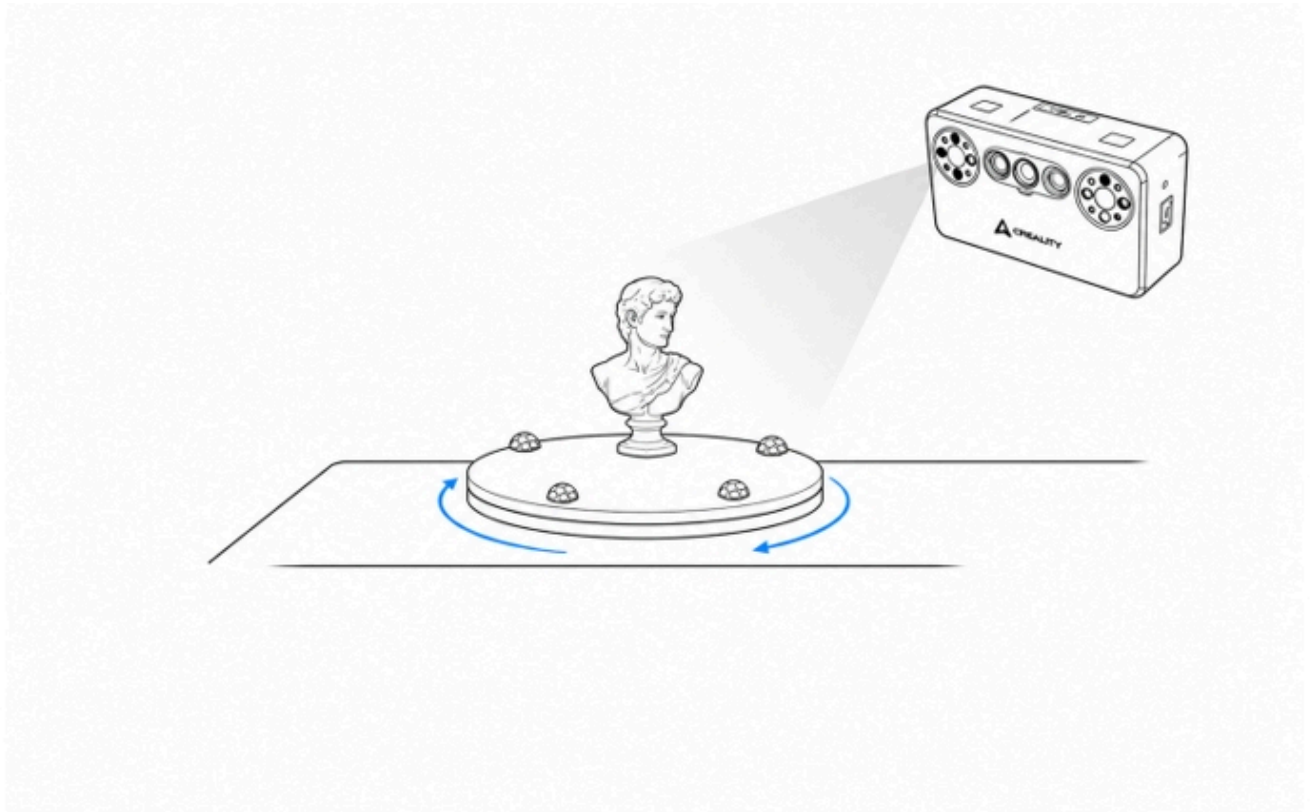

3. Scanning Controls:

- ▶ Press the top mechanical **Start/Stop button** to quickly start, pause, or resume scanning.



3. Detailed Explanation of Scanning Modes

3.1 Blue Laser Mode

Designed for high-accuracy and high-detail scanning. Typically used with reflective markers.

- ▶ **Parallel Line Mode:**

- ▶ **Features:** Ultra-high accuracy and fine detail.
- ▶ **Best For:** Fine-detailed objects. Place markers on the surrounding table or turntable if the object is small.



💡 **Tip1: Resolution Setting:** - Higher resolution yields finer details but consumes more system memory/RAM. Select resolution based on PC/phone performance.



💡 **Tip2: Multi-angle Alignment:** - Scan the object from multiple orientations (e.g., top and bottom) and use the software's **Alignment** feature to merge scans into a complete 3D model.

3.2 Infrared Mode

Designed for markerless scanning of human faces, bodies, sculptures, and feature-rich objects.

- ▶ **Features:** Safe, fast, invisible infrared light (eye-safe).
- ▶ **Applicable Scenarios:** Body scanning, cultural heritage preservation, medical rehabilitation, etc.
- ▶ **Texture Capture:** Supports full-color texture scanning.
- ▶ **Outdoor Scanning Tip (NIR Filter):**
 - ▶ When scanning outdoors or under bright ambient light, install the 2 **NIR Filters** onto the front 3D camera lenses.
 - ▶ This blocks sunlight interference and prevents overexposure.

4. Other Functions

4.1 Calibration

If scanning accuracy degrades or the device hasn't been used for a long time, perform calibration:

1. Take out the **High-Precision Glass Calibration Board**.
2. Connect Pika to the mobile App or PC software.
3. Select **Calibration** and follow the step-by-step on-screen instructions.

4.2 System Upgrade

Creality periodically releases software and firmware updates to enhance performance. Keep both the Pika scanner firmware and CrealityScan software up to date.

5. Equipment Specifications

5.1 Hardware Parameters

| |Model|Model |

Parameter	7 Parallel Blue Laser	NIR Structured Light
Accuracy	Up to 0.03 mm	Up to 0.1 mm
3D Resolution	0.1 – 2.0 mm	0.15 – 2.0 mm
Scanning Speed (Phone)	Up to 40 FPS	Up to 20 FPS
Scanning Speed (PC)	Up to 110 FPS	Up to 30 FPS
Min. Scan Volume	10 × 10 × 10 mm	50 × 50 × 50 mm
Single Capture Range	101×107 mm@ 160mm 344×268 mm@ 400mm	144×134 mm@ 200mm 764×670 mm@1000mm
Working Distance	160 – 400 mm	140 – 1,000 mm
Color Texture	Supported	Supported
Alignment Mode	Marker / Global Marker / Marker-Free	Geometry / Texture
Outdoor Light Resistance	≤ 110,000 lux	≤ 80,000 lux (with NIR filter)

Parameter	7 Parallel Blue Laser	NIR Structured Light
NIR Filter	/	Supported
Supplemental Light	4 × Blue/White LEDs + 4 × Infrared LEDs	
Laser Safety Class	Class I (Eye-Safe)	
Input Power	5V 3A	
Processor & Screen	8-core CPU (2.0 GHz), 3.0-inch Touchscreen	
Battery & Interface	3350 mAh (Includes 2nd backup battery), Type-C USB 3.0, Wi-Fi 6	
Dimensions & Weight	100 × 60 × 35 mm, 260 g (battery included)	
Operating Temp / Humidity	-10°C to 40°C, 10–90% RH	
Wired Connection	Supported on Android, Windows, and macOS (iOS is not supported)	
Wi-Fi / Wi-Fi 6 Connection	Supported on Android, Windows, macOS, and iOS	

- Accuracy is evaluated in laboratory conditions and actual results may be affected by operating environments such as vibration, temperature, and other factors.

6. Precautions

About the Creality Pika 3D Scanner

- Please do not disassemble or assemble the equipment yourself.
- Please use the dedicated accessories included with the product, such as charger and calibration board.

6.1 Usage Notes

Please note the following points, otherwise it may cause equipment damage or machine malfunction.

- Please avoid significant vibrations and impacts when using this product. **The Creality Pika 3D scanner is a high-precision device with a delicate internal structure; severe vibrations or impacts may damage the structure and cause damage to the optical components.**
- Please use this device at the recommended temperature and humidity.
- Please ensure the usage environment is suitable, and when using a wired connection, ensure the cable connector is intact.

6.2 Maintenance Notes

- To clean the equipment, please use a cotton cloth dampened with diluted neutral detergent, wring it out, and wipe it. Do not use a damp cloth, volatile oil, thinner, or other liquids to wipe the equipment, as this may damage the equipment's exterior or, in severe cases, damage the equipment parts.
- Store the equipment in its instrument case in a cool, dry place with a relatively stable temperature. Avoid storing it in the following places:

- Places with excessively high or low temperature and humidity
- Places with a lot of dust
- Places containing corrosive or flammable gases
- Places containing corrosive or flammable liquids

Facebook Community	Creality wiki
Discuss, Share, Interact	Tutorials, FAQs, Troubleshooting, etc.
	

Shenzhen Creality 3D Technology Co., Ltd.

Official website: www.creality.com

Tel: +86 755 3396 5666 Customer Service : cs@creality.com

Company Address: 18F, JinXiuHongDu Building, Meilong Blvd., Longhua Dist. Shenzhen, 518131 China



Your device has been certified by the relevant countries and regions. You can view this electronic certification information on your device: Go to the device's "Settings" menu, select "My Device", tap "Certification Information" to find all applicable electronic certification marks and details.