

**Encyclopedia of Sustainability Science  
and Technology Series**  
*Editor-in-Chief:* Robert A. Meyers

**SPRINGER  
REFERENCE**

Nicholas Tsoulianidis *Editor*

# Nuclear Energy

*Second Edition*

A Volume in the Encyclopedia of  
Sustainability Science and Technology Series,  
Second Edition

---

# Encyclopedia of Sustainability Science and Technology Series

**Editor-in-Chief**

Robert A. Meyers

The Encyclopedia of Sustainability Science and Technology series (ESST) addresses the grand challenge for science and engineering today. It provides unprecedented, peer-reviewed coverage in more than 600 separate articles comprising 20 topical volumes, incorporating many updates from the first edition as well as new articles. ESST establishes a foundation for the many sustainability and policy evaluations being performed in institutions worldwide.

An indispensable resource for scientists and engineers in developing new technologies and for applying existing technologies to sustainability, the Encyclopedia of Sustainability Science and Technology series is presented at the university and professional level needed for scientists, engineers, and their students to support real progress in sustainability science and technology.

Although the emphasis is on science and technology rather than policy, the Encyclopedia of Sustainability Science and Technology series is also a comprehensive and authoritative resource for policy makers who want to understand the scope of research and development and how these bottom-up innovations map on to the sustainability challenge.

More information about this series at <http://www.springer.com/series/15436>

---

Nicholas Tsoulianidis  
Editor

# Nuclear Energy

Second Edition

A Volume in the Encyclopedia of  
Sustainability Science and Technology Series,  
Second Edition

With 165 Figures and 58 Tables



*Editor*

Nicholas Tsoulianidis  
University of Nevada-Reno  
Reno, NV, USA

ISBN 978-1-4939-6617-2      ISBN 978-1-4939-6618-9 (eBook)  
ISBN 978-1-4939-6619-6 (print and electronic bundle)  
<https://doi.org/10.1007/978-1-4939-6618-9>

Library of Congress Control Number: 2017964008

1st edition: © Springer Science+Business Media New York 2013  
© Springer Science+Business Media, LLC, part of Springer Nature 2018

This work is subject to copyright. All rights are reserved by the Publisher, whether the whole or part of the material is concerned, specifically the rights of translation, reprinting, reuse of illustrations, recitation, broadcasting, reproduction on microfilms or in any other physical way, and transmission or information storage and retrieval, electronic adaptation, computer software, or by similar or dissimilar methodology now known or hereafter developed.

The use of general descriptive names, registered names, trademarks, service marks, etc. in this publication does not imply, even in the absence of a specific statement, that such names are exempt from the relevant protective laws and regulations and therefore free for general use.

The publisher, the authors and the editors are safe to assume that the advice and information in this book are believed to be true and accurate at the date of publication. Neither the publisher nor the authors or the editors give a warranty, express or implied, with respect to the material contained herein or for any errors or omissions that may have been made. The publisher remains neutral with regard to jurisdictional claims in published maps and institutional affiliations.

Printed on acid-free paper

This Springer imprint is published by the registered company Springer Science+Business Media,  
LLC part of Springer Nature.  
The registered company address is: 233 Spring Street, New York, NY 10013, U.S.A.

---

## Series Preface

Our nearly 1000-member team recognizes that all elements of sustainability science and technology continue to advance as does our understanding of the needs for water, clean air, food, energy, and health, and the relation of every single aspect of this vast and interconnected body of knowledge to climate change. Our Encyclopedia content is at a level for university students, professors, engineers, and other practicing professionals. It is gratifying for our team to note that our online first edition has been heavily utilized as evidenced by over 500000 downloads which of course is in addition to scientists' utilization of the Encyclopedia and individual "spin-off" volumes in print.

Now we are pleased to have a Living Reference on-line which assures the sustainability community that we are providing the latest peer-reviewed content covering the science and technology of the sustainability of the earth. We are also publishing the content as a series of individual topical books for ease use by those with an interest in particular subjects, and with expert oversight in each field to ensure that the second edition presents the state-of-the-science today. Our team covers the physical, chemical and biological processes that underlie the earth system including pollution and remediation and climate change, and we comprehensively cover every energy and environment technology as well as all types of food production, water, transportation and the sustainable built environment.

Our team of 15 board members includes two Nobel Prize winners (Kroto and Fischlin), two former Directors of the NSF (Colwell and Killeen), the former President of the Royal Society (Lord May), and the Chief Scientist of the Rocky Mountain Institute (Amory Lovins). And our more than 40 eminent section editors and now book editors, assure quality of our selected authors and their review presentations.

The extent of our coverage clearly sets our project apart from other series and publications which now exist, both in extent and depth. In fact, current compendia of the science and technology of several of these topics do not presently exist and yet the content is crucial to any evaluation and planning for the sustainability of the earth. It is important to note that the emphasis of our project is on science and technology and not on policy and positions. Rather, policy makers will use our presentations to evaluate sustainability options.

Vital scientific issues include: human and animal ecological support systems, energy supply and effects, the planet's climate system, systems of agriculture, industry, forestry, and fisheries and the ocean, fresh water and

human communities, waste disposal, transportation and the built environment in general and the various systems on which they depend, and the balance of all of these with sustainability. In this context, sustainability is a characteristic of a process or state that can be maintained at a certain level indefinitely even as global population increases toward 9 billion by 2050. The population growth, and the hope for increase in wealth, implies something like a 50% increase in food demand by as early as 2030. At the same time, the proportion of the population that lives in an urban environment will go up from about 47% to 60%. Global economic activity is expected to grow 500%, and global energy and materials use is expected to increase by 300% over this period. That means there are going to be some real problems for energy, agriculture, and water, and it is increasingly clear that conflicting demands among biofuels, food crops, and environmental protection will be difficult to reconcile. The “green revolution” was heavily dependent on fertilizers which are manufactured using increasingly expensive and diminishing reserves of fossil fuels. In addition, about 70% of available freshwater is used for agriculture. Clearly, many natural resources will either become depleted or scarce relative to population.

Larkspur, CA, USA  
January 2018

Robert A. Meyers, Ph.D.  
Editor-in-Chief

---

## Volume Preface

Today (2017), there are 449 nuclear power plants operating in the world, generating about 11% of the world's electricity through nuclear power plants; this fraction will increase, in the near future, as many countries (China, Russia, Korea, India, etc.) complete their ambitious nuclear expansion in order to satisfy their ever-increasing demand for electricity. What drives this interest in nuclear power? There are several factors:

1. *Increasing energy demand.* This is due to the ever-increasing demand for electricity because of (a) the continuous increase in population and (b) the desire of the undeveloped countries to improve their standard of living; improvement of the standard of living is impossible without adequate electricity supply.
2. *Need for new power plants.* All power plants that generate electricity (not only nuclear, all types) have a finite design lifetime; upon reaching the end of their life, they are shutdown and they must be replaced with new ones. Nuclear is one of the options for a new electricity-generating plant.
3. *Climate change concerns.* Increased awareness that fossil fuels release a large amount of greenhouse gases that may cause planetary climate change drives decisions to build new plants that are "green," that is, plants that emit reduced amounts of greenhouse gases and other pollutants or having no emissions during operation. Nuclear plants are the only ones that generate large amounts of electricity with, essentially, zero emissions.
4. *Economics.* The main cost component of a nuclear plant is its construction cost; once this cost is overcome, the other two major cost components for the generation of electricity (O&M and fuel) favor nuclear because of their, relatively, low and stable prices. Experience during the last 60 years, especially in the USA, has shown that nuclear is the best plant for generation of base load electricity, both on the basis of cost and reliability.
5. *Security of fuel supply.* Supply of fossil fuels (gas, coal, oil) is vulnerable to interruption of supply due to various events such as strikes, weather, political turmoil, etc. By contrast, uranium is plentiful and available at a reasonable price, for the foreseeable future; in addition, since nuclear power plants refuel every 18 months or 2 years, short-term upheavals (like the ones mentioned above) may be settled before they have a negative effect on the supply of nuclear fuel.

6. *Fuel price stability.* The cost of fuel for nuclear-generated electricity amounts to a relatively small fraction of the total electricity cost (it is ~16–20%). Thus, even if the fuel price doubles, the effect on the cost of electricity will be, relatively, small.
7. *Nuclear safety and public acceptance.* The safety record of nuclear power plants during ~60 years of operation (1957–2017) is outstanding. There were three accidents during that period – the TMI accident in the USA (1979); the Chernobyl accident in the Ukraine (1986); and the Fukushima event in Japan (2011). The TMI accident resulted in zero fatalities and no contamination outside the plant. The Chernobyl accident resulted in the immediate death of 33 persons, mostly firefighters. The Fukushima event was caused by a 9.1 Richter scale earthquake that hit that site in Japan. When the earthquake hit, the four operating plants shut down, as design dictated, and cooling became available using the emergency diesel generators (for the circulation of the water). Then 15–20 min later, the tsunami arrived; the waves of the tsunami swept away the generators and their fuel supply and cooling of the cores stopped. Core fuel meltdown occurred and radioactivity was released to the environment, thus contaminating the area around the site. Two plant workers were killed (by the tsunami), the only immediate deaths after the event. The earthquake and, primarily, the tsunami resulted in the death of ~22,000 people.

The world, especially the developed part of it, recognizes that there is a risk in any human activity; society accepts the risks in view of the benefits bestowed by that activity. The attitude toward the nuclear industry is similar: despite the potential, relatively, small risks, the nuclear industry is recognized and is accepted as an indispensable component in our energy portfolio. Overall acceptance of nuclear technology is the result of its excellent performance; a major factor in favor of nuclear-generated electricity is the lack of emissions during the operation of a nuclear plant and complete absence of any environmental effects in the vicinity of the plant.

Reno, NV, USA  
January 2018

Nicholas Tsoufianidis  
Volume Editor

---


## Contents

<b>Nuclear Energy, Introduction</b> .....	1
Nicholas Tsoulianidis	
<b>Fission Reactor Physics</b> .....	5
Michael Natelson	
<b>Nuclear Fission Power Plants</b> .....	41
Ronald Allen Knief	
<b>GEN-IV Reactors</b> .....	103
Taek K. Kim	
<b>Small Modular Reactors</b> .....	125
Nicholas Tsoulianidis	
<b>Isotope Separation Methods for Nuclear Fuel</b> .....	137
Shuichi Hasegawa	
<b>Nuclear Reactor Materials and Fuels</b> .....	149
James S. Tulenko	
<b>Modern Nuclear Fuel Cycles</b> .....	159
James S. Tulenko	
<b>Uranium and Thorium Resources</b> .....	165
J. Stephen Herring	
<b>Nuclear Fuel Reprocessing</b> .....	187
Michael F. Simpson and Jack D. Law	
<b>Nuclear Facilities Decommissioning</b> .....	205
David R. Turner	
<b>Radioactive Waste Management: Storage, Transport, and Disposal</b> .....	241
Audeen W. Fentiman	
<b>Nuclear Fusion</b> .....	251
Thomas J. Dolan	

<b>Nuclear Power Economics</b>	295
M. R. Deinert	
<b>Radiation Sources</b>	309
Richard E. Faw and J. Kenneth Shultis	
<b>Ionizing Radiation Detectors</b>	341
Wm. David Kulp III	
<b>Health Physics</b>	355
John W. Poston Sr.	
<b>Dosimetry</b>	361
John W. Poston Sr.	
<b>Radiation Shielding</b>	369
J. Kenneth Shultis and Richard E. Faw	
<b>Applications of Radioisotopes</b>	395
Robert Bruce Hayes	
<b>Nuclear Safeguards and Proliferation of Nuclear Weapons</b>	
<b>Materials</b>	411
Michael C. Baker	
<b>Index</b>	429

---

## About the Editor-in-Chief

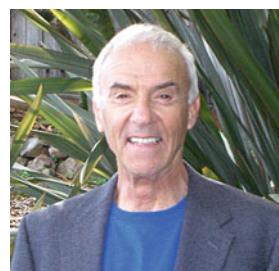

### **Dr. Robert A. Meyers**

President: RAMTECH Limited  
Manager, Chemical Process Technology, TRW Inc.  
Post-doctoral Fellow: California Institute of Technology  
Ph.D. Chemistry, University of California at Los Angeles  
B.A., Chemistry, California State University, San Diego

---

### **Biography**

Dr. Meyers has worked with more than 20 Nobel laureates during his career and is the originator and serves as Editor in Chief of both the Springer Nature *Encyclopedia of Sustainability Science and Technology* and the related and supportive Springer Nature *Encyclopedia of Complexity and Systems Science*.

---

### **Education**

Postdoctoral Fellow:  
California Institute of Technology  
Ph.D. in Organic Chemistry,  
University of California at Los Angeles  
B.A., Chemistry with minor in Mathematics,  
California State University, San Diego

Dr. Meyers holds more than 20 patents and is the author or Editor in Chief of 12 technical books including the *Handbook of Chemical Production*

Processes, Handbook of Synfuels Technology, and Handbook of Petroleum Refining Processes now in 4th Edition, and the Handbook of Petrochemical Production Processes, now in its second edition, (McGraw-Hill) and The Handbook of Energy Technology and Economics, published by John Wiley & Sons; Coal Structure, published by Academic Press; and Coal Desulfurization as well as the Coal Handbook published by Marcel Dekker. He served as chairman of the Advisory Board for A Guide to Nuclear Power Technology, published by John Wiley & Sons, which won the Association of American Publishers Award as the best book in technology and engineering.

---

## About the Volume Editor



**Dr. Nicholas Tsoulianidis** spent most of his professional career at the University of Missouri-Rolla, now Missouri University of Science and Technology, having served as a faculty member, Chairman of the Department, Interim Vice Chancellor for academic Affairs, and Associate Dean of the School of Mines and Metallurgy for Graduate Studies and Research. In addition to his teaching and administrative duties, he performed research in the areas of radiation transport, radiation protection/health physics, and the nuclear fuel cycle. He has written numerous technical papers and two textbooks: one entitled *Measurement and Detection of Radiation*, coauthored by Dr. S. Landsberger, now in its 4th edition; and the other entitled *The Nuclear Fuel Cycle*, 3rd edition (2013).

He received many awards, the most prominent being the Glenn Murphy Award (1995) given by the American Society for Engineering Education (ASEE) for “Outstanding contributions in the profession and teaching of Nuclear Engineering,” the Ted Rockwell Award, Radiation Protection and Shielding Division (2010), and the Arthur H. Compton Award (ANS, 2013). He is a Fellow of ANS.

During the period 1997–2015, he served as Editor of *Nuclear Technology*, an international technical journal published by the American Nuclear Society. At present, he is an Adjunct Professor in the Department of Chemical and Materials Engineering at the University of Nevada-Reno, where he teaches nuclear-related courses in the Nuclear Materials Emphasis program.

---

## Contributors

**Michael C. Baker** Los Alamos National Laboratory, Nuclear Nonproliferation Division, Advanced Nuclear Technology Group, Los Alamos, NM, USA

**M. R. Deinert** Department of Mechanical Engineering, The Colorado School of Mines, Golden, CO, USA

**Thomas J. Dolan** Department of Nuclear, Plasma, and Radiological Engineering, University of Illinois, Urbana, IL, USA

**Richard E. Faw** Department of Mechanical and Nuclear Engineering, Kansas State University, Manhattan, KS, USA

**Audeen W. Fentiman** School of Nuclear Engineering, Purdue University, West Lafayette, IN, USA

**Shuichi Hasegawa** Department of Systems Innovation, School of Engineering, The University of Tokyo, Tokyo, Japan

**Robert Bruce Hayes** Department of Nuclear Engineering, North Carolina State University, Raleigh, NC, USA

**J. Stephen Herring** Idaho National Laboratory, Idaho Falls, ID, USA

**Taek K. Kim** Nuclear Engineering Division, Argonne National Laboratory, Argonne, IL, USA

**Ronald Allen Knief** Sandia National Laboratories, Albuquerque, NM, USA

**Wm. David Kulp III** SAIC, McLean, VA, USA

**Jack D. Law** Fuel Cycle Science and Technology Division, Idaho National Laboratory, Idaho Falls, ID, USA

**Michael Natelson** Bettis Atomic Power Laboratory, West Mifflin, PA, USA

**John W. Poston Sr.** Department of Nuclear Engineering, Texas A&M University, College Station, TX, USA

---

Richard E. Faw: deceased.

J. Stephen Herring has retired.

**J. Kenneth Shultz** Department of Mechanical and Nuclear Engineering,  
Kansas State University, Manhattan, KS, USA

**Michael F. Simpson** Department of Metallurgical Engineering, University of  
Utah, Idaho Falls, ID, USA

**Nicholas Tsoufianidis** University of Nevada-Reno, Reno, NV, USA

**James S. Tuleenko** Laboratory for Development of Advanced Nuclear Fuels  
and Materials, University of Florida, Gainesville, FL, USA

**David R. Turner** Department of Physics and Environmental Sciences,  
St. Mary's University, San Antonio, TX, USA



## Nuclear Energy, Introduction

Nicholas Tsoulianidis  
University of Nevada-Reno, Reno, NV, USA

This section on Nuclear Energy consists of 20 articles that cover all aspects of the nuclear enterprise. Here is a brief description of each article.

1. *Fission reactor physics.* Fission reactors generate the energy used for the generation of electricity. What are the physics principles that make their operation possible? What are their main safety features? These are two of the major items discussed in this article.
2. *Nuclear fission power plants.* Once the fission reactor is designed and ready to operate, how is the fission energy utilized to generate electricity? The reactor core itself is not enough to complete the task. Many other components are needed for the successful transformation of the energy released in fission into electricity: pumps, steam generators, diagnostics, radiation monitors, etc. It is this side of nuclear power, components, and activities outside the core, which is described in this article.
3. *GEN-IV reactors.* By any measure, current fission reactor designs are successful. However, there is room for improvement in many areas such as fuel utilization, thermal efficiency, passive safety features (that do not require operator action or need electric power to be activated), multiuse of the heat generated. There is considerable global effort underway to design fission reactors that will show some, if not all, of the improvements just mentioned. The new designs, collectively named GEN-IV reactors, are described in this article.
4. *Small Modular Reactors (SMR):* In addition to the GEN-IV effort (article 3), there is a parallel effort to design reactors with an electric power of up to 300 MWe. These reactors are designated as Small Modular Reactors (SMR). The word “modular” refers to a feature of their design that will make possible their construction in modular form, thus reducing construction time and cost. The various SMR designs and their advantages are described in this article.
5. *Isotope separation methods.* The two elements found in nature that may be used as fuel for the fission reactors operating today are Th and U. Unfortunately, only certain isotopes of these elements, or made with the help of these elements, can be manufactured into fuel, and these “useful” isotopes are in short supply (e.g.,  $^{235}\text{U}$  is only 0.711% of natural U). Hence, isotope separation methods must be employed for the concentration/enrichment of the useful isotopes. These methods are discussed in this article.
6. *Nuclear reactor materials and fuels:* For a successful and long-term safe operation of a nuclear power plant, the materials used, especially those directly tied to the fuel, must function as designed (as expected) in the very hostile environment of the nuclear fission core. This article describes the pros and cons of the various materials that have been considered and the final choices made.
7. *Modern nuclear fuel cycles.* Providing fuel for a fission reactor is not a simple or straightforward task; it involves many steps (U procurement, conversion to UF<sub>6</sub>, enrichment, fuel rod, and assembly fabrication). The users of the fuel are presented with choices, such as discarding the used (irradiated) fuel as waste or reprocessing and recycling it. Also, nuclear reactor designers may affect the nuclear fuel “cycle” by building reactors that only produce electricity, or combine electricity production with generation of new fuels (breeders), or generate electricity in combination with burning some of the nasty byproducts of the fission process. These are the matters discussed in this article.

8. *U and Th resources.* U and Th are the only two elements which exist in nature and can be used as nuclear fuels for fission reactors. It is important, therefore, to address questions such as: How much U and Th is there on earth? Where are they found? What is the cost of their recovery from the ground? These questions are answered in this article.
9. *Nuclear fuel reprocessing.* Used (irradiated) nuclear fuel contains many useful isotopes. Primarily Pu and U. Reprocessing is the operation that is employed to extract the useful isotopes from the used fuel. The reprocessing methods used until today and those under research and development are discussed in this article.
10. *Nuclear facilities decommissioning.* Every nuclear facility has a finite lifetime; at the end of its designed life, when operations stop permanently, the law requires that the site must, eventually, be returned to its pre-operational status, i.e., available for public use. Reaching that stage, it means that radioactive materials must be removed to such an extent that the radiation exposure rate returns, practically, to background levels. This is what decommissioning means. All the tasks associated with decommissioning are discussed in this article.
11. *Radioactive waste management-Storage-Transport-Disposal.* The operation of fission reactors results in the production of radioactive materials. Such materials, if they have no further use (in which case they are “radioactive wastes”), must be safeguarded for long periods of time in order that their release to the biosphere be prevented. The method of eventual disposal of radioactive wastes considered today is placement in a geologic repository. In the meantime, radioactive materials must be stored and transported. All activities related to these tasks are the subject of this article.
12. *Nuclear Fusion.* Although fusion became known to man before fission and life on earth owes its existence to a fusion reactor in the sky (our Sun), no fusion plant to produce electricity has been built yet. The reason for not having fusion reactors yet is due to the unique challenges/difficulties encountered for completion of that task. But because fusion reactors offer many advantages over fission reactors, the world’s scientific community is working as a team in an effort to resolve the issues and build an operational fusion reactor in the “near” future. All the past and present efforts in fusion research and expected future developments are presented in this article.
13. *Nuclear power economics.* In a free market, every plant generating electricity must compete, economically, with all other options and nuclear is no exception. Nuclear power is subject to all the rules and regulations of all other options of electricity generation, but it also faces some unique issues with respect to financing. These issues and their potential resolution are discussed in this article.
14. *Radiation sources.* Radioactivity and basic ionizing radiation sources are discussed in this article.
15. *Ionizing radiation detectors.* Although radioactivity cannot be seen, felt, or tasted, it can be detected to very low levels relatively easily and very accurately. The instruments used (principles of operation, construction, operation, analysis of results) for detection and measurement of ionizing radiation are discussed in this article.
16. *Health physics.* Very early in the twentieth century (1920s), it was realized that ionizing radiation may be harmful to humans; therefore, measures must be taken to protect people. These measures were based on (a) quantifying the effects of radiation exposure by defining units of radiation dose and means to measure it and (b) establishing professional bodies that set protection standards [ICRP (1928), NCRP (1964), Health Physics Society (1955)]. The field of Health Physics was thus born resulting in great benefits to radiation workers and the public, with respect to protection from ionizing radiation.
17. *Dosimetry.* The instruments and methods used for the determination of radiation dose are examined in this article (complementary to articles 15 and 16)

18. *Radiation shielding and protection.* Having discussed radiation sources (#14), dangers from radiation (#16), and standards of protection (#16 & 17), how does one provide the means for a safe radiation environment for workers and the public? How are relevant computations performed? Necessary measurements? How is an effective radiation shield designed? These are some of the questions answered in this article.
19. *Applications of radioisotopes.* When we hear “nuclear power,” generation of electricity by nuclear power plants comes to mind. There is, however, another large part of the nuclear enterprise that permeates and benefits our way of life which is the application of radioisotopes (and ionizing radiation, in general) for nonpower applications. I mean, of course, applications in scientific research, industry, food irradiation, home smoke detectors, etc., and of course perhaps the most important of all applications in medicine for research, diagnosis, and therapy. All applications of ionizing radiation are, briefly, discussed in this article.
20. *Nuclear safeguards and proliferation of nuclear weapons materials.* Of great concern to human kind is the acquisition of nuclear materials by individuals, groups, or governments with the purpose of using such materials to make nuclear weapons, contrary to international treaties. This “proliferation” or rather “nonproliferation” of nuclear materials is a concern that will never disappear; all that can be done by the international community of nations is to set up treaties, policies, and procedures that diminish the probability of proliferation. It is these aspects of this terrible problem facing humanity that are discussed in this article.



---

## Fission Reactor Physics

Michael Natelson

Bettis Atomic Power Laboratory, West Mifflin,  
PA, USA

### Article Outline

Glossary  
Definition of Subject  
Introduction  
Mass-Energy Relationship  
Heavy Elements  
Fission and Its Products  
Cross Sections  
Neutron Distributions  
Fission Reactor Performance  
Future Directions  
Bibliography

### Glossary

**Fissile** Fissile isotopes are fissionable by the capture of neutrons of any energy, but are especially easily fissioned by the capture of slow neutrons, for example,  $U^{233}$ ,  $U^{235}$ ,  $Pu^{239}$ , and  $Pu^{241}$ .

**Fertile** Fertile isotopes may be transmuted into fissile isotopes by neutron capture. The naturally occurring fertile isotopes are  $Th^{232}$  and  $U^{238}$ .

**Critical** A critical fission reactor is in a steady state, with its neutron population sustained by a chain reaction.

**Reactivity** Reactivity is a dimensionless parameter, which characterizes how far from critical a fission reactor is. If zero, the reactor is critical; if positive, the reactor is supercritical and its neutron population is increasing; if negative, the reactor is subcritical.

**Microscopic cross section** A microscopic cross section is a parameter, with dimensions of area,

that is a measure of the probability of a particular reaction resulting from an incident particle on a target nucleus. The *macroscopic cross section* for this “particular” reaction is the microscopic cross section times the number density of the target nucleus.

### Definition of Subject

At the end of the nineteenth century and through the first half of the twentieth century, revolutionary discoveries were made in physics, and the laws of physics and our understanding of them were greatly expanded. In addition, tragic historical events led to an unprecedented concentration of intellectual talent and economic resources (the Manhattan Project) that allowed the new physics to be applied to the engineering of nuclear (fission) reactors. This entry will describe the advances in physics, which are key to fission reactor design, and how they enable this engineering practice.

### Introduction

In 1900, Lord Kelvin (William Thomson) reportedly told the British Association for the Advancement of Science that “there is nothing new to be discovered in physics now. All that remains is more and more precise measurements.” Whether he actually said this or not, it is reasonable to believe that many scientists and engineers of his day would have concurred. Newton’s definitions and laws of mechanics and optics had long been successfully applied. Maxwell’s equations, Ohm’s law, etc. seemed to describe electricity and magnetism. Boltzmann and Gibbs had provided the foundations of statistical mechanics and thermodynamics. And chemists had been busy developing atomic theory, identifying 92 elements, the laws of chemical combination, the weights and sizes of atoms and molecules, and the periodic system.

With hindsight it is clear, however, that in 1900 there were many intriguing questions outstanding in the physical sciences, and there was an historically large cohort of scientists, being produced by the major universities of the day, ready to address them. The questions (and their resolutions) of prime importance to “fission reactor physics” are:

1. Does a theory of relativity apply to Maxwell’s equations, and is there a unique frame of reference (ether) for the propagation of light?
2. Why are the heaviest naturally occurring elements unstable, giving off various forms of “radiation” and transmuting to different elements?
3. What does the quantization of electromagnetic radiation (required to describe black body radiation energy spectra and the photoelectric effect) mean to the laws of physics on the atomic scale?

The resolution of each of these questions will be discussed in this entry, as they are the starting points for the accumulation of knowledge needed to characterize the workings of fission reactors.

Clearly, Einstein’s Theory of Relativity addressing question (1), and its identification of mass as a form of energy (1905) would, excuse the bad pun, energize the whole effort. Already in 1914, H. G. Wells in his novel “The World Set Free” envisioned industrial atomic energy and atomic bombs used in a catastrophic world war.

At the end of the nineteenth century, electrochemists looking for heavy elements (heavier than lead and bismuth) found that “radiation” was given off by the materials they were investigating. Becquerel (1896) observed  $\gamma$  rays (penetrating electromagnetic radiation similar to x-rays) from uranium salts. The Curies (1898) observed  $\alpha$  and  $\beta$  rays from polonium and radium. Rutherford showed that the positively charged  $\alpha$ s were doubly ionized helium atoms. The  $\beta$ s are negatively charged electrons, the same particles as the cathode rays that Thomson characterized and named (1897). These “radiations” proved to be key tools for determining the structure of atoms. The  $\alpha$  particle was shown by Rutherford (1911) and his coworkers to scatter from gold foil in

a manner inconsistent with the atomic model of the day, Thomson’s *raisins in the pudding* (positive charge medium) model. To explain the  $\alpha$  scattering results, an atom’s positive charge and its mass, minus that of its electrons, needed to be concentrated in a small nucleus (radius  $\sim 10^{-12}$  cm), with its electrons distributed over a much larger volume (radius  $\sim 10^{-8}$  cm), that of the whole atom. Niels Bohr, inspired by Rutherford’s work, took to determining the *distribution* of atomic electrons. His success, building off Question (3) above, led to quantum mechanics. A complete model for the atom, however, still required an explanation for the mass of the nucleus. Again bombardment of various atoms (elements) with  $\alpha$  particles led to the answer. Chadwick (1932) proved that the “rays” produced by  $\alpha$ s striking beryllium nuclei were neutral particles with mass slightly greater than the hydrogen nucleus, the proton. These neutral particles are the neutrons that had been hypothesized by Rutherford 12 years earlier. Heisenberg (1932) produced a detailed model of the atomic nucleus where the mass number  $A$  is the total number of elementary particles, protons plus neutrons, making up a nucleus, and the nuclear charge is  $Z$ , the number of protons. Thus, there can be various *isotopes* for a given element, more than one  $A$  for a given  $Z$ .

The discovery of the neutron marked the start of furious activity, culminating in the operation of the first fission reactor only 10 years later. Leo Szilard in 1933 recognized that a neutral neutron with modest kinetic energy could penetrate an atomic nucleus and cause a reaction releasing nuclear (mass) energy, and if, as part of the “reaction,” additional neutrons were produced, a chain reaction could result. Szilard produced a patent for a reactor based on this idea and assigned it to the British Government in 1936 (before fission was discovered). In 1934, Fermi was using neutron bombardment (with neutrons of various energies) to produce nuclear transformations in many elements. Of special interest was the production of transuranic elements,  $Z$  greater than 92. Fermi won the 1938 Nobel Prize for this work. However, unknown at the time, he had also fissioned uranium. This was determined by electrochemical analysis of the products of neutron bombardment of uranium

by Hahn and Strassmann. Subsequently, the process was identified as *fission* by Meitner and Frisch. Bohr recognized that the ease with which low energy neutrons could cause fission of uranium was due to the existence of the naturally occurring, but low atom percent (0.72%), isotope  $_{92}\text{U}^{235}$  [1] (Various notations have been used to designate a particular isotope, for example, for uranium with mass number (A) 235;  $_{92}\text{U}^{235}$ , U235, and  $^{235}\text{U}$ . The latter is in common use today. For ease of composition and for consistency with most of the references used in this entry the older standard, A as a right superscript, is used.). He and Wheeler, from their Theory of Fission [2], also recognized that the not yet produced isotope  $_{94}\text{Pu}^{239}$ , would also be readily fissioned by slow neutrons [3]. This was in early 1939. Bohr still did not think production of a fission bomb to be feasible.

Leo Szilard was, however, not deterred. He persuaded his friend Albert Einstein to write President Roosevelt (8/2/1939), urging government support of fission research and the stock piling of uranium. This ultimately led to the Manhattan Project. In 1940, Seaborg and McMillan synthesized the readily fissionable isotope of plutonium,  $_{94}\text{Pu}^{239}$ , which is produced by neutron capture in the dominant uranium isotope  $_{92}\text{U}^{238}$ . Wheeler credited Louis Turner [3] with pointing out that kilogram quantities of  $_{94}\text{Pu}^{239}$  could be produced in a large fission chain reaction reactor. Fermi and Szilard [4] designed and built the prototype for such a reactor, a “pile” of graphite blocks containing an array of natural uranium pellets. It was constructed in a squash court under a grand stand of the University of Chicago’s Stagg Field, and went *critical* (sustained a chain reaction) on December 2, 1942. The Manhattan Project built large reactors of this type for weapons material production, and also successfully pursued means of enriching uranium in  $_{92}\text{U}^{235}$ . Enriched uranium allows more compact, higher power density, reactor designs.

The Manhattan Project brought together extraordinary scientific and engineering talent, and immense resources to produce the weapons that ended the Second World War. It also provided the foundation for all fission reactor development that has followed. The subsequent advances in

“physics,” which have contributed to this development, are principally:

1. The full understanding of the interaction of neutrons with nuclei: scattering (elastic and inelastic), and capture (simple absorption, transmutation, and fission), including measuring the parameters that characterize the probabilities of these “interactions”
2. The formulation of methods to solve the neutron transport (Boltzmann) equation, which governs the behavior of the dilute “gas” of neutrons in a fission reactor

This entry will discuss the topics, pre- and post-Manhattan Project, which encompass the physics of fission reactors.

## Mass-Energy Relationship

In his initial paper [5] on the theory of relativity, Einstein confronted the problem of guaranteeing that the laws of electromagnetism (Maxwell’s equations) apply in all inertial reference frames, just as the laws of mechanics do. In an inertial reference frame, an object, which is at rest, remains at rest and an object traveling with a particular velocity will maintain that velocity. Einstein asserted that there is no preferred reference frame (like stationary *ether* in space, as postulated years earlier), and that the speed of light  $c$ , in vacuum,  $2.998 \times 10^8$  m/s, is the same in all inertial reference frames. From these assertions, Einstein derived transformations for various variables in the laws of physics from one inertial reference frame to another. This solved the “electromagnetism” problem and provided a firm grounding (theory) for phenomena observed when velocities approach the speed of light. For examples of the latter, see Kaplan, “Nuclear Physics” on the charge-to-mass ratio of the electron as a function velocity, and Mermin, “It’s About Time,” on the half-life of unstable particles as a function of their velocity. Our interest here is specifically on the relationship between mass and energy resulting from the special (not applying to gravity) theory of relativity. What is meant by the ubiquitous formula,

$$E = Mc^2? \quad (1)$$

For application to fission, an inelastic collision between two particles will be treated for relativistic conditions. The approach presented by Mermin in “It’s About Time” will be used.

In an elastic collision, total momentum,  $\mathbf{P} = \mathbf{p}_1 + \mathbf{p}_2$ , mass,  $M = m_1 + m_2$ , and kinetic energy,  $K = k_1 + k_2$  are all conserved, where the mass,  $m$ , is an inherent property of a particle and is a measure of how it resists a change in its velocity. In an inelastic collision, only total momentum,  $\mathbf{P}$  needs to be conserved. It needs to be conserved, however, in all inertial frames of reference. For relativistic conditions, one defines a particle’s momentum (a vector [in bold face]) as

$$\mathbf{p} = mu/(1 - u^2/c^2)^{1/2}, \quad (2)$$

where  $\mathbf{u}$  is the particle velocity. As is required for consistency between relativistic and nonrelativistic laws of mechanics, Eq. 2 is effectively the nonrelativistic definition of momentum for the particle speed,  $u \ll c$ . Now to find  $\mathbf{p}'$ , the particle momentum, in a frame moving with velocity  $\mathbf{v}$  relative to the frame in which the particle has velocity  $\mathbf{u}$ , one applies the relativistic translation law for velocities:

$$\mathbf{u}' = (\mathbf{u} - \mathbf{v})/(1 - \mathbf{u}\mathbf{v}/c^2). \quad (3)$$

Substituting for  $\mathbf{u}'$  in the expression for  $\mathbf{p}'$  (Eq. 2 with  $\mathbf{p}$  and  $\mathbf{u}$  primed), one obtains the relativistic translation law for momentum

$$\mathbf{p}' = (\mathbf{p} - p^0\mathbf{v})/(1 - \mathbf{v}^2/c^2)^{1/2}, \quad (4)$$

where

$$p^0 = m / (1 - u^2/c^2)^{1/2}. \quad (5)$$

Now, if total momentum is to be conserved in our two-particle inelastic collision in both the primed and unprimed frames, then  $P^0 = p_1^0 + p_2^0$  must also be conserved. Again, using the relativistic

translation law for velocities (Eq. 3) and the definition  $p^0$  (Eq. 5), we find that

$$p^0 = (p^0 - \mathbf{p}\mathbf{v}/c^2)/(1 - \mathbf{v}^2/c^2)^{1/2}. \quad (6)$$

And so for the *total* quantities we want to be conserved we have

$$\mathbf{P}' = (\mathbf{P} - P^0\mathbf{v})/(1 - \mathbf{v}^2/c^2)^{1/2} \quad \text{and} \quad (7)$$

$$P^0 = (P^0 - \mathbf{P}\mathbf{v}/c^2)/(1 - \mathbf{v}^2/c^2)^{1/2}. \quad (8)$$

Examining these expressions, it is clear that if  $\mathbf{P}$  and  $P^0$  are not changed after an inelastic (or elastic) collision, then neither is  $\mathbf{P}'$  and  $P^0$ .

In the limit of the speed  $u$  being much smaller than  $c$ , the difference between  $p^0$  and  $m$ ,  $(p^0 - m)$ , approaches  $mu^2/2c^2$ . This result leads to a definition of relativistic kinetic energy,  $k$ , for a particle

$$k = p^0c^2 - mc^2, \quad (9)$$

which has the required property of reducing to the nonrelativistic form,  $mu^2/2$ , in the limit of  $u$  much smaller than  $c$ .

Returning to our two-particle inelastic collision, as  $\mathbf{P}$  is conserved so is  $P^0 c^2$  and thus from Eq. 9

$$\Delta Mc^2 = \Delta K, \quad (10)$$

where  $\Delta M$  is the change in the masses of the inputs and outputs of the collision participants, and  $\Delta K$  is the change in the kinetic energies of these “inputs and outputs.” Thus, Eq. 10 provides insight into the meaning of “ $E = Mc^2$ ” for the fission process. For  $n + {}_{92}^{235}\text{U} \rightarrow$  fission products + 202.7 MeV (the  $\Delta K$  of Eq. 10 in unit of millions of electron volts) the percent change in mass can be estimated by dividing 202.7 MeV by the energy equivalents of the inputs (i.e., 236 amu, where 1 amu = 931.141 MeV). The result is  $\sim 0.1\%$ , which may not appear to be large until one makes a comparison with a chemical reaction. For example,  $\text{O}_2 + \text{C} \rightarrow \text{CO}_2 + 4.1 \text{ eV}$ . A similar calculation indicates a  $1 \times 10^{-8}\%$  conversion of mass to

kinetic energy. Since one could not measure such a small change in total input and output masses in chemical reactants, it is not surprising that the full impact of “ $E = Mc^2$ ” had to await demonstration in a nuclear reaction like fission. However, as will be discussed in the next three sections, the large energy release in fission, while conforming to Eq. 10, is due to the strength of the forces that hold a nucleus together and the charge repulsion forces that will accelerate two smaller nuclei as they are formed in the fissioning of a larger “parent” nucleus.

## Heavy Elements

The “heavy elements” of particular importance to fission reactors are the radioactive nuclei, which are characterized by systematic chains of decay. In nature, there are three chains (series). In a given series, each nucleus has a *mass number*, A, governed by a simple formula with the variable the integer n (see Table 1), and is identified with its longest lived isotope, that is, Thorium, Uranium, and Actinium ( $U^{235}$  had not been discovered when the  $4n + 3$  series was identified). These *longest half-lives* are not surprisingly comparable to the age of the earth,  $4.5 \times 10^9$  years. Half-life is one of three related parameters of radioactive decay processes,  $T_{1/2}$ ,  $\lambda$ , and  $\tau$ . The fundamental equation of radioactive decay is

$$-\frac{dN(t)}{dt} = \lambda N(t), \quad (11)$$

where  $\lambda$  is the *decay constant*, and  $N(t)$  is the number of decaying nuclei at time t. The solution of Eq. 11 is

$$N(t) = N(0)e^{-\lambda t}. \quad (12)$$

The time when an original inventory of decaying nuclei,  $N(0)$ , is halved is

$$T_{1/2} = \ln 2 / \lambda = 0.693 / \lambda. \quad (13)$$

And as the decay process is statistical the *mean life-time*,  $\tau$ , of a decaying nucleus is

$$\tau = (1/N(0)) \int_0^\infty N(0) \lambda t e^{-\lambda t} dt = 1/\lambda, \quad (14)$$

the reciprocal of the decay constant.

With the search for transuranic elements through the bombardment of the heaviest natural elements, primarily with neutrons, a fourth decay series was identified, the Neptunium ( $A = 4n + 1$ ) series whose radioactive members are not found in *nature* (see Table 1).


Of the “heavy elements,” the isotope  $U^{235}$  is key to fission reactor design. It is the only naturally occurring isotope which readily fissions when bombarded with neutrons of all energies. While its atomic percent abundance, 0.72%, is small, it is large enough to support chain reactions in reactors where neutrons born in fission are slowed down (moderated) by graphite (carbon) or by heavy water (deuterium oxide). When Uranium is enriched in  $U^{235}$  (~3–5%), it can fuel reactor designs where ordinary water moderates fission neutrons (today’s pressurized water and boiling water reactors). Having  $U^{235}$  available as a reactor fuel makes it possible to exploit the two abundant *fertile* “heavy elements,”  $U^{238}$  and  $Th^{232}$ . The term “fertile” refers to the fact that when these elements absorb a neutron they can be transmuted to *fissile* isotopes ( $Pu^{239}$  and  $U^{233}$  respectively), which like  $U^{235}$  readily fission when bombarded by neutrons of all energies. The transmutation processes are shown in Fig. 1. It is important to note that only one neutron capture is required in each of these transmutations. In a reactor design, neutron economy is the key to maintain a chain reaction and, as will be discussed in the section on [Future Directions](#), expending one neutron with a reasonable probability of obtaining an additional fissile nucleus is a winner.

The heavy element radioactive decay series are also important to safety in fission reactor design. Each of the decay processes,  $\alpha$  and  $\beta^-$  emissions and associated  $\gamma$ s, is favorable to energy release. So any heavy elements, particularly transuranics, in a reactor’s fuel system will contribute to the *decay heat* load that must be dissipated when a

**Fission Reactor Physics, Table 1** Heavy element decay series

Series name	Type	Final stable nucleus	Longest lived nucleus	Longest half-life (years)
Thorium	$4n^a$	$Pb^{208}$	$Th^{232}$	$1.41 \times 10^{10}$
Uranium	$4n + 2$	$Pb^{206}$	$U^{238}$	$4.47 \times 10^9$
Actinium	$4n + 3$	$Pb^{207}$	$U^{235}$	$7.04 \times 10^8$
Neptunium, not in <i>nature</i>	$4n + 1$	$Bi^{209}$	$Np^{237}$	$2.14 \times 10^6$

<sup>a</sup>n is an integer

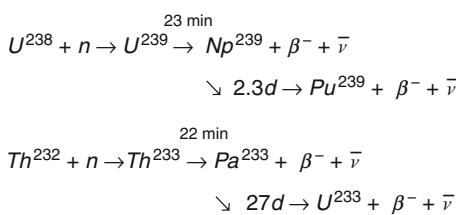**Fission Reactor Physics, Fig. 1** Transmutation of fertile to fissile nuclei. ( $\bar{\nu}$  is the antineutrino, the chargeless,  $\sim$ zero mass particle that accompanies  $\beta^-$  emission)

reactor shuts down. As will be discussed in the next section, the major short-term contributors to decay heat are *fission products*. A power reactor that shuts down following a sustained run at full rating will initially produce  $\sim 7\%$  of that rating from decay heat, even if the chain reaction and nearly all fissioning has ceased.

For a full discussion of the radioactive decay series and the particulars of  $\alpha$ ,  $\beta^-$ ,  $\beta^+$  and  $\gamma$  emission, see Kaplan, and Krane, “Introductory Nuclear Physics.”

## Fission and Its Products

As noted in the section “[Introduction](#),” fission was discovered accidentally during the search for transuranic elements. This work by Fermi and others was part of an extensive effort to understand the atomic nucleus and to duplicate the great success of quantum mechanics and the Pauli exclusion principle in providing a fully predictive *Theory* of atomic electron structure. A comparable theory for the nucleus has not been developed, but several models (e.g., shell and liquid drop) provide insight into the trends and correlations found in the data provided by the

extensive experimentation performed on the nuclei of the various elements and their isotopes.


Measurements of atomic mass ( $m(X^A)$ ), and the mass of the electron, proton, and neutron, yields the *binding energy*,  $B$ , of a nucleus,  $_Z X^A$ , the work (energy) required to disassemble a nucleus into its neutrons and protons:

$$B = \{Zm_p + Nm_n - (m(X^A) - Zm_e)\}c^2, \quad (15)$$

where  $Z$  is the atomic number (the number of protons) and  $N = A - Z$  is the number on neutrons. (The binding energy of atomic electrons is ignored as negligible compared to the other factors in Eq. 15.)

Plotting the ratio of measured binding energies  $B$  to corresponding mass number  $A$  (Fig. 2) immediately makes evident the potential of energy release from fission of heavy element. Note the  $B/A$  versus  $A$  “curve” has a flat maximum in the middling  $A$  range  $\sim 50 \rightarrow \sim 150$ , and falls off (decreases) as  $A$  increases. Thus, there is a potential energy excess if a heavy element (isotope) can be disassembled and reassembled as two mid-range isotopes (preserving total  $A$ ,  $Z$ , and  $N$ ). (The behavior of the  $B/A$  curve for light elements shows the potential energy release from fusion.) Obviously fission (nor fusion) does not take occur “naturally” on earth today (There is convincing evidence that a naturally occurring chain reaction took place in a uranium deposit in Gabon about  $2 \times 10^9$  years ago, when the abundance of  $U^{235}$  would have been  $\sim 3\%$ , high enough for a water-moderated “reactor” to operate. The higher earlier abundance is due to the shorter half-life of  $U^{235}$  ( $7.0 \times 10^8$  year) relative to that of  $U^{238}$  ( $4.4 \times 10^9$  year). See Krane for an

**Fission Reactor Physics,**  
**Fig. 2** Binding energy per nucleon (Krane)

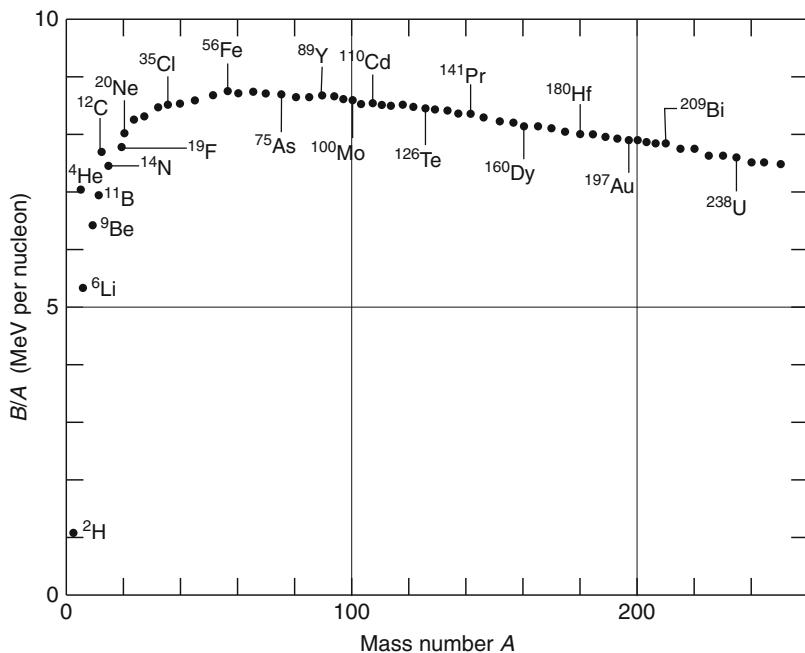

excellent discussion of the Gabon reactor). The remainder of this section is devoted to particular requirements for fission to take place and to the discussion of the resulting fission products and their energies.

Insights provided by examining binding energies, and by additional experiments to determine nucleon-nucleon forces have led to the Shell and Liquid Drop models of the nucleus. Features of these models are incorporated in the *semiempirical mass formula* (Eq. 16). While a thorough discussion of the nuclear models is beyond the scope of this entry (see Kaplan or Krane), the mass formula provides key information on fission, energy release, and the relative likelihood for various nuclei.

In the semiempirical mass formula, the binding energy has five terms, which will be discussed below.

$$m(ZX^A) = Zm_p + Nm_n - [B_0 + B_1 + B_2 + B_3 + B_4]/c^2 \quad (16)$$

$B_0 = a_v A$  is the volume energy. Note in Fig. 2 that  $B/A$  saturates, thus  $B_0$  has a linear

dependence on  $A$ . The attractive nuclear forces between nucleons (n-n, n-p and p-p) are all equal and short range, smaller than the radius of the nucleus,  $r = r_0 A^{1/3}$  where  $r_0 \sim 1.2 \times 10^{-12}$  cm. If the range were larger, there would be attraction between each nucleon pair and  $B_0$  would depend on  $A(A-1)$ .

$B_1 = -a_s A^{2/3}$ , is the negative surface decrement. As the nucleon-nucleon forces are “short range,” neutrons and protons on the surface of a nucleus are less tightly bound.

$B_2 = -a_c Z(Z-1)/A^{1/3}$ , is the coulomb repulsion decrement. While the nuclear forces are strong enough to overcome coulomb forces, the protons in the nucleus do repel and reduce binding energy. Assuming a uniform distribution of protons in a liquid drop model of a spherical nucleus, an electrostatics calculation yields the dependence of  $B_2$  the number of proton pair,  $Z(Z-1)$ , and a measure of their spacing,  $A^{1/3}$ .

$B_3 = -a_a |N-Z||N-Z|/A$ , is the neutron-proton population asymmetry decrement. As nuclei become heavier, more neutrons than protons are needed to overcome coulomb repulsion. However, as the shell model of the nucleus demonstrates when nucleons, neutrons and/or protons,

are added to form heavier elements and their isotopes, they fill *shells* of successively higher energy and are thus less tightly bound. This is analogous to the case of atomic electrons. Neutrons and protons have half-integral spin like the electrons, and therefore no two neutrons (or protons) can occupy the same state in a nucleus in conformance with the Pauli exclusion principle. So  $B_3$  is negative and proportional to the neutron excess and the fraction of the nucleus the excess represents.

$B_4 = +\delta A^{-3/4}$  for even  $Z$  even  $N$  nuclei,  $= 0$  for odd  $A$  nuclei,  $= -\delta A^{-3/4}$  for odd  $Z$  odd  $N$  nuclei, is the pairing energy. As nucleons are added and fill *shells*, they are more tightly bound as spin up and spin down pairs.  $B_4$  is important in determining the relative binding of isotopes of a given element and their propensity to fission.

A set of parameters for  $B$  which best fit the  $B/A$  curve (Fig. 2) is provided by Krane;  $a_v = 15.5$  MeV,  $a_s = 16.8$  MeV,  $a_c = 0.72$  MeV,  $a_a = 23$  MeV, and  $\delta = 34$  MeV.

The potential for, and magnitude of, energy release from fission, whether as spontaneous decay or induced by particle or gamma ray capture, can be assessed with the semiempirical mass formula. As for an estimate of the magnitude of energy release, the  $B/A$  curve, as noted earlier, can be used directly. For example, the  $B/A$  for  $U^{238}$  is  $\sim 7.6$  MeV. If it fissioned into two approximately equal mass nuclei ( $A = 119$ ), their  $B/A$  would be  $\sim 8.5$  MeV when in a ground state, and being more tightly bound than their parent ( $U^{238}$ ) 214 MeV ( $= 2 \times 119 \times 8.5 - 238 \times 7.6$ ) will be available through conservation of energy as kinetic energy of the daughter nuclei and of other fission products (neutrons,  $\beta$ s,  $\gamma$ s, and neutrinos). That this energy is *available* does not mean that there is a significant probability that fission occurs. In this example, which represents spontaneous fission of  $U^{238}$ , one finds in nature that this mode of  $U^{238}$  decay competes poorly with  $\alpha$  decay (Spontaneous fission is a significant mode of decay for some transuranic isotopes found in depleted reactor fuel, particularly  $Pu^{240}$  and  $Pu^{241}$ ). For fission fragments, daughter nuclei, to separate in spontaneous or induced fission, a

potential barrier must be overcome. The height of the barrier relative to the ground state of a fission parent nucleus is called the *fission activation energy* ( $E_a$ ). It can be estimated with the liquid drop model by calculating the change in the parent nucleus binding energy ( $B_1$  and  $B_2$ ) between the ground-state spherical configuration and a volume-conserving dumbbell configuration (Refs. [2, 6]). Table 2 contains values of  $E_a$  for the *compound* nuclei formed by neutron capture in the fissile and fertile isotopes of primary interest in reactor design. These are compared with the *excitation energy* ( $E_e$ ) provided in forming the compound nucleus.

$$E_e = [(m(zX^A) + m_n) - m(zX^{A+1})]c^2. \quad (17)$$

Note that  $E_e$  does not include any kinetic energy contribution from the captured neutron. For the fertile target nuclei ( $U^{238}$  and  $Th^{232}$ ),  $E_e < E_a$  and neutron kinetic energy will be required to overcome or quantum mechanically penetrate (with high probability) the potential barrier to fission. For the fissile targets,  $E_e > E_a$  and thus “slow” neutrons can initiate fission.

The high values of  $E_e$  for the fissile targets are due to the positive “pairing” contribution,  $B_4$ , to the binding energy of the compound nucleus ground states. Note  $_{92}U^{234}$ ,  $_{92}U^{236}$ , and  $_{94}Pu^{240}$  are all even  $Z$  even  $N$  nuclei and the corresponding target nuclei are even  $Z$  odd  $N$ . So, the second term in Eq. 17 is decreased by  $\delta(A + 1)^{-3/4}$ , and  $B_4$  is zero in the first term. Thus, an increase in  $E_e$  relative to the result if pairing is ignored is achieved. For fertile targets (even  $Z$  even  $N$ ), roles are reversed. It is the first term in Eq. 17 that is decreased and  $B_4$  is zero in

Fission Reactor Physics, Table 2 Heavy nuclei fission

Target nucleus	Compound nucleus	$E_e$ , Excitation energy (MeV)	$E_a$ , Activation energy (MeV)
$U^{233}$	$[U^{234}]$	6.6	4.6
$U^{235}$	$[U^{236}]$	6.4	5.3
$Pu^{239}$	$[Pu^{240}]$	6.4	4.0
$U^{238}$	$[U^{239}]$	4.9	5.5
$Th^{232}$	$[Th^{233}]$	5.1	6.5

the last term. Thus,  $E_c$  is lower than if pairing is ignored.

The semiempirical mass formula and the shell and liquid drop models are limited in predicting the fission process. This is best illustrated by the mass distribution of the major fission fragments (see Fig. 3). In the vast majority of cases, fission yields two unstable (having excess neutrons) nuclei, but not of equal mass, as in the example above used to estimate the energy available from spontaneous fission of  $U^{238}$ . The two humped curves in Fig. 3 are not predicted by nuclear models. To quote Krane, “surprisingly, a convincing explanation for this mass distribution has not been found.”


From the nuclear models, it is not surprising that free (prompt) neutrons are emitted in fission as the daughter nuclei are so rich in neutrons, but the prediction of their number (~2.5 on average) and energy spectrum (the mean ~2 MeV, see Fig. 4) are still an active area of study. The decay chains of the neutron-rich, excited daughter nuclei (fission fragments) are well predicted, including the release of (delayed) neutrons when

in some cases neutron decay competes successfully with  $\beta$ -decay. The delayed neutrons are a small fraction of the total neutron emission (0.64% for thermal fission of  $U^{235}$ ), but as will be discussed in section “[Fission Reactor Performance](#),” they are important to reactor control.


Total energy release from the various neutron-induced fissions of interest in reactor design is remarkably consistent with the simple spontaneous  $U^{238}$  fission calculation made above. Of course, the constituents are different, as displayed in Table 3.

In a reactor design, the total energy values in Table 3 are not used. First, the contribution from neutrinos is subtracted, as their range before collision is well beyond reactor boundaries. Then, the energy release per fission from neutron captures which produce  $\beta$ s and  $\gamma$ s is added. The magnitude of this release is design-dependent as it is a function of the materials used, and the neutron capture rate in these materials. For plant energy balance studies, using 200 MeV/fission is satisfactory.

The problem of *decay heat* was noted in the previous section. From Table 3, it can be seen that fission product decay is the immediate concern

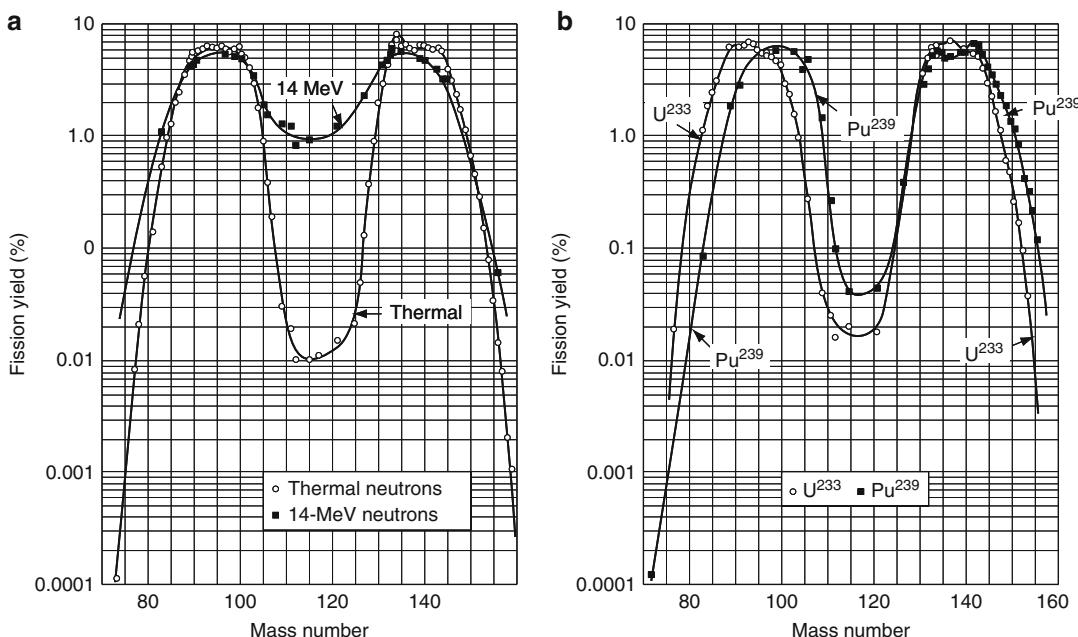

**Fission Reactor Physics, Fig. 3** Fission yields: (a) for  $U^{235}$  from fast and thermal neutrons, (b) for  $U^{233}$  and  $Pu^{239}$  from thermal neutrons [33]

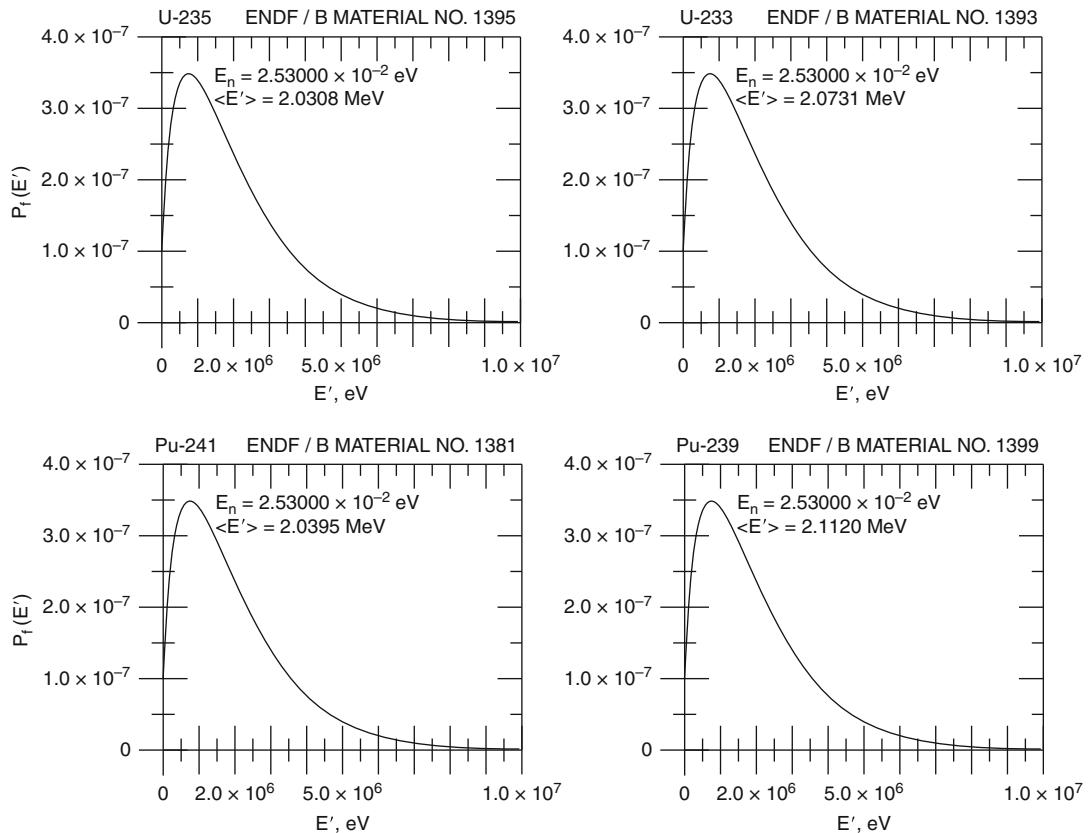

**Fission Reactor Physics, Fig. 4** Prompt neutron energy spectra where  $P_f(E')$  is the probability per unit energy [32]

**Fission Reactor Physics, Table 3** Energy yield in MeV from fission. Thermal neutron fission of fissile isotopes; fertile isotope fission is from neutrons with energy spectrum of a light water-moderated reactor [7, 32]

	Fissile or fertile isotope <sup>a</sup>					
Energy	$^{232}\text{Th}$	$^{238}\text{U}$	$^{235}\text{U}$	$^{233}\text{U}$	$^{239}\text{Pu}$	$^{241}\text{Pu}$
Fission fragment kinetic energy	$162.1 \pm 1.5$	$170.0 \pm 0.66$	$169.6 \pm 0.7$	$168.7 \pm 0.7$	$175.9 \pm 0.1$	$175.5 \pm 1.1$
Prompt neutron kinetic energy	$4.7 \pm 0.12$	$5.51 \pm 0.1$	$4.79 \pm 0.07$	$4.9 \pm 0.1$	$5.9 \pm 0.1$	$5.99 \pm 0.13$
Delayed neutron kinetic energy	$0.024 \pm 0.004$	$0.021 \pm 0.003$	$0.0071 \pm 0.0007$	$0.0014 \pm 0.0005$	$0.001 \pm 0.0005$	$0.0074 \pm 0.0015$
Prompt $\gamma$ rays	$6.15 \pm 1.75$	$6.28 \pm 0.8$	$6.96 \pm 0.7$	$7.59 \pm 0.71$	$7.74 \pm 0.45$	$7.86 \pm 1.8$
Delayed $\gamma$ rays	$8.01 \pm 0.2$	$8.04 \pm 0.08$	$6.26 \pm 0.05$	$4.99 \pm 0.04$	$5.16 \pm 0.1$	$6.33 \pm 0.07$
$\beta$ particles	$8.28 \pm 0.21$	$8.25 \pm 0.08$	$6.43 \pm 0.05$	$5.13 \pm 0.04$	$5.3 \pm 0.1$	$6.51 \pm 0.04$
Neutrino energy	$11.1 \pm 0.3$	$11.14 \pm 0.11$	$8.68 \pm 0.06$	$6.91 \pm 0.05$	$7.15 \pm 0.11$	$8.78 \pm 0.09$
Total energy yield	$200.3 \pm 0.5$	$209.3 \pm 0.3$	$202.7 \pm 0.1$	$198.2 \pm 0.1$	$207.2 \pm 0.3$	$211.0 \pm 0.3$

when a chain reaction is terminated. Assume full power from  $^{235}\text{U}$  fissioning, when this ceases, delayed  $\gamma$ s and  $\beta$ s are still being released. Thus,  $\sim 6.3\%$  ( $\simeq 100 \times (6.26 + 6.43)/200$ ) of rated

power, coming from fission product decay, must still be dissipated, along with energy from the decay of transuranic elements present in the reactor, for a total of  $\sim 7\%$ .

**Fission Reactor Physics, Table 4** Prompt and delayed neutron data.  $v_p$  is the prompt neutron yield versus initiating neutron energy (ENDF/B-VII.0).  $v_d$  is the total delayed

yield, constant for fission initiating neutron energies between 0 and 4 MeV, and above 7 MeV. Between 4 and 7 MeV,  $v_d$  tracks linearly [32]

The relative abundance  $\gamma_i = v_i/v_d$

Neutron E	$^{233}\text{U}$ $v_p$	$^{235}\text{U}$ $v_p$	$^{239}\text{Pu}$ $v_p$	$^{241}\text{Pu}$ $v_p$				
0.0253 eV	2.4894	2.4208	2.8724	2.9251				
2 MeV	2.5758	2.6366	3.171	3.1727				
	$\bar{v}_d$							
E(MeV)	$^{233}\text{U}$	$^{235}\text{U}$	$^{239}\text{Pu}$	$^{241}\text{Pu}$				
0–4	0.0074	0.0167	0.00645	0.0162				
7	0.0047	0.0090	0.0043	0.0084				
$^{233}\text{U}$		$^{235}\text{U}$	$^{239}\text{Pu}$	$^{241}\text{Pu}$				
Delayed Group	Decay Constant $\lambda_i$ , $\text{s}^{-1}$	Relative Abundance $\gamma_i$	$\lambda_i$ , $\text{s}^{-1}$	$\gamma_i$	$\lambda_i$ , $\text{s}^{-1}$	$\gamma_i$	$\lambda_i$ , $\text{s}^{-1}$	$\gamma_i$
1	0.01258	0.086	0.01272	0.038	0.0129	0.038	0.0128	0.010
2	0.03342	0.274	0.03174	0.213	0.0311	0.280	0.0299	0.229
3	0.131	0.227	0.116	0.188	0.134	0.216	0.124	0.173
4	0.303	0.317	0.311	0.407	0.332	0.328	0.352	0.390
5	1.27	0.073	1.4	0.128	1.26	0.103	1.61	0.182
6	3.14	0.023	3.87	0.026	3.21	0.035	3.47	0.016

Over 800 fission fragment nuclei have been identified. Their decay must be tracked to account for *decay heat* in reactor shut-down safety analysis and for the proper handling and storage of spent fuel (where both energy release and the nature of radiation fields must be known). One hundred and two of these nuclei are delayed neutron precursors. To simplify reactor transient (kinetics) calculations, the precursors are collected into six *effective* groups, where members of a given group have similar decay constants (see Table 4).

The energy spectra for a given delayed group do not vary significantly with fissioning isotope. The spectra are much softer (with lower mean energies, <1 MeV) than for prompt neutrons [7]. This means that a delayed neutron in a thermal reactor is more *important* than a prompt neutron. It is more likely to reach the low energies (<0.625 eV) where most fission occurs. Delayed neutrons can also result from other reactions, for example, photon capture ( $\gamma, n$ ) (The expression (a,b) is shorthand for a nuclear reaction with an input particle “a” and output particle “b,” where the target and product nuclei are understood.) and neutron activation ( $n, p$ ) followed by neutron decay of the product nucleus. If important to a particular reactor design, these

delayed neutrons can be included by modifying the effective delayed group structure.

The final aspect of the ~800 fission fragment nuclei that must be dealt with is their impact on neutron balance. Each of them has a probability of capturing neutrons and in some case of causing a transmutation into a nucleus with a particularly large propensity for capturing neutrons. The nuclei of greatest importance to neutron balance are listed in Table 5.

$\text{I}^{135}$  is important as it is the direct precursor of  $\text{Xe}^{135}$ , an especially large absorber of thermal neutrons. The next two isotopes in the table are precursors to a decay chain with three large absorbers,  $\text{Pm}^{147}$ ,  $\text{Sm}^{149}$ , and  $\text{Sm}^{151}$ . The final five, with their precursors in parentheses, are large absorbers, but not as sensitive to neutron energy spectrum and power level and history as the others. Clearly, data for the 800 fission fragments must be handled through large computer files [8]. For neutron balance, the fission fragment isotopes, which are not treated explicitly (Table 5), can be lumped into an effective fission product nucleus with a yield per fission and *probability* for neutron capture. How one characterizes the *probability* of nuclear reactions is the subject of the next section.

**Fission Reactor Physics, Table 5** Direct yield fractions ( $\times 100$ ) for isotopes in the most important fission product chains [32]

Fission Product	Fissile or fertile isotope <sup>a</sup>				
	$^{232}\text{Th}$	$^{238}\text{U}$	$^{235}\text{U}$	$^{233}\text{U}$	$^{239}\text{U}$
$^{135}\text{I}$	5.238	6.548	6.349	4.860	6.303
$^{135}\text{Xe}$	0.0403	0.0150	0.255	1.337	1.152
$^{147}\text{Nd}$	3.08	2.711	2.271	1.775	2.073
$^{149}\text{Pm}$	0.825	1.765	1.089	0.769	1.261
$^{99}\text{Mo} (^{99}\text{Tc})$	2.965	6.247	6.127	4.957	6.144
$^{103}\text{Ru} (^{103}\text{Rh})$	0.164	6.336	3.137	1.707	6.991
$^{131}\text{I} (^{131}\text{Xe})$	1.481	2.982	2.473	2.352	3.093
$^{133}\text{I} (^{133}\text{Cs})$	3.858	6.356	6.787	5.974	6.923
$^{143}\text{Ce} (^{143}\text{Nd})$	6.619	4.834	5.972	5.881	4.561

<sup>a</sup>The energy of the neutron initiating the fission is in the thermal range for  $^{235}\text{U}$ ,  $^{233}\text{U}$ , and  $^{239}\text{Pu}$ . For  $^{232}\text{Th}$  and  $^{238}\text{U}$ , the yields are due to fissions initiated by neutrons with a spectrum of energies typical of light water-moderated nuclear reactors

## Cross Sections

The nuclear reactions of importance to fission reactor design are by *definition* governed by the postulates of quantum mechanics (i.e., they are on the dimensional scale of the nucleus). And, thus the results of the various reactions are probabilistic in nature. The probability of a particular result is characterized by a parameter, the *microscopic* cross section,  $\sigma$ , with, not surprisingly, the dimensions of area, and which is quoted in units of *barns*. The barn,  $10^{-24} \text{ cm}^2$ , is a reasonable measure as in some cases  $\sigma$  is nearly the projected area of a target nucleus,  $4\pi R^2$ , and  $R$  is  $\sim 10^{-12} \text{ cm}$ . Thus, envisioning a target foil of area,  $A$ , and thickness,  $dx$  (where  $dx$  is small enough to have negligible shadowing of one nucleus by another in the target foil), the probability that an incident particle in traveling a short distance (i.e.,  $dx$ ) will undergo a specific reaction equals  $\sigma\rho A dx/A$ , where  $\rho$  is the density of target nuclei (#/ $\text{cm}^3$ ) in the foil. It follows that to find the reaction rate in the foil we need the number of impinging particles per second. Given the particles have a density  $N$  (#/ $\text{cm}^3$ ) and are monoenergetic and monodirectional (normal to the face of the foil) with speed  $v$ , the number impinging per second equals  $N \cdot (vdt) \cdot A/dt$ . So the total reaction rate in the foil is  $(NvA)(\rho\sigma dx)$ , and the rate per  $\text{cm}^3$  is  $vN\rho\sigma$ . The parameters that make up this specific rate have been reordered to

reflect conventional definitions in reactor physics (In the nuclear engineering discipline, *reactor physics* refers to the portion of the field addressed in this entry):


$$vN \equiv \Psi \text{ particle flux, and} \quad (18)$$

$$\rho\sigma \equiv \Sigma \text{ macroscopic cross section.} \quad (19)$$

The *flux* in our simple foil example is the number of particles per  $\text{cm}^2$  per second crossing a plane parallel to the face of the foil. Given the more general representation of particle density (which will be used in the next section):

$N(\mathbf{r}, E, \Omega, t) d\mathbf{r}^3 dE d\Omega \equiv$  no. of particles in  $d\mathbf{r}^3$  about  $\mathbf{r}$ , with kinetic energies in  $dE$  about  $E$ , and going in the solid angle  $d\Omega$  about the unit direction vector  $\Omega$  (see Fig. 5), at time  $t$ ; then the corresponding definition of *flux*,  $\Psi(\mathbf{r}, E, \Omega, t)$   $ds dE d\Omega$ , is the no. of particles with  $E$  in  $dE$  going in direction  $\Omega$  in  $d\Omega$  that pass through the surface  $ds$ , which is located at  $\mathbf{r}$  and is normal to  $\Omega$ , per unit time, at time  $t$ .

The *macroscopic* cross section is the probability that a particle undergoes a reaction characterized by  $\sigma$ , per unit path (for small paths,  $dx$ ) traversed by the particle in a homogenous material with target nucleus density,  $\rho$ . This definition lends a special significance to  $1/\Sigma_T$ , where  $\Sigma_T = \rho\sigma_T$ .  $\sigma_T$  is the *total* microscopic cross section,

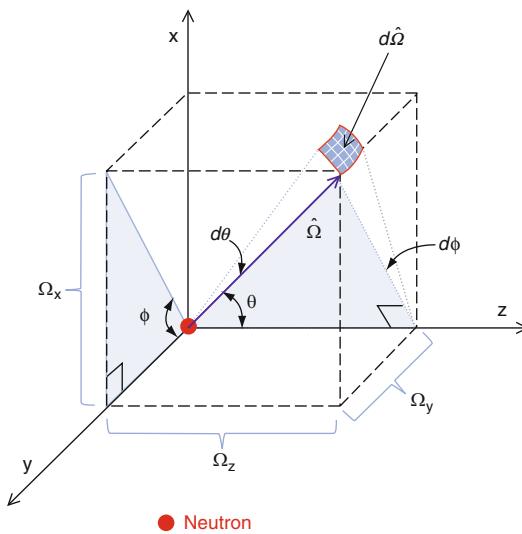

**Fission Reactor Physics, Fig. 5** The unit direction vector  $\Omega$  associated with neutron velocity and the differential (small) solid angle  $d\Omega$  which defines the range of directions

the sum of the  $\sigma$ s for all of the reactions that the initiating particle can undergo with a given target isotope. So the change in flux, where  $\Omega$  is parallel to the x axis of a target material sample, over a small interval  $dx$  in the sample is  $d\Psi = -\Psi\Sigma_T dx$ . And thus,  $\Psi(x) = \Psi(0)e^{-\Sigma_T x}$ , where  $x$  is the distance into the “sample” (which has its face in the  $y - z$  plane at  $x = 0$ ). So, the probability of a reaction in  $dx$  about  $x$  can be expressed as

$$\begin{aligned} P(x)dx &= \Sigma_T dx \cdot (\Psi(x)/\Psi(0)) \\ &= \Sigma_T e^{-\Sigma_T x} dx. \end{aligned} \quad (20)$$

And thus the *mean free path* of a particle in an incident beam ( $\Psi(0)$ ) before being removed from the beam in a homogeneous target is

$$x = \int_0^\infty dx P(x) = 1/\Sigma_T. \quad (21)$$

or generally the *mean free path* is the average distance traveled between successive interactions.

If a homogeneous material is made up of various nuclei (elements/isotopes, indexed by

j), then the macroscopic cross section for a reaction, i, is

$$\Sigma_i = \sum_j \rho_j \cdot \sigma_i^j. \quad (22)$$

The reactions of primary interest in fission reactor design are those initiated by neutrons and gammas. Neutron cross sections are key to determining if a chain reaction can be maintained, and that the neutron population can be controlled under various transient conditions (e.g., start-ups and shutdowns, planned and accidental), and, of course, the fission distribution in the reactor. Most of the resulting energy release, from fission fragments, is deposited locally in the fuel elements of a given design. However, gammas, from fission and neutron capture in reactor structures, have large mean free paths, and their distribution and capture rates must be determined, using gamma cross sections, to complete the knowledge of energy deposition. The subsequent engineering problem is to assure that the reactor cooling system can remove the deposited energy under normal and accident conditions. Neutron and gamma cross sections are also required for the shield design of a fission reactor.

Neutron reactions are characterized by their energy balance, the Q factor, as well as microscopic cross sections. For the simple reaction (with the target at rest),



the energy balance is

$$\begin{aligned} (E_n + m_n c^2) + M_X c^2 \\ = (E_Y + M_Y c^2) + (E_y + m_y c^2), \end{aligned} \quad (24)$$

and Q is defined as the difference in the kinetic energies of the inputs (here the neutron) and the outputs:

$$\begin{aligned} Q &= E_Y + E_y - E_n \text{ or} \\ &= (M_X + m_n - M_Y - m_y)c^2. \end{aligned} \quad (25)$$

If Q is positive, the reaction is exothermic, if negative, endothermic. For an endothermic

reaction to go, for the microscopic cross section to be nonzero, enough kinetic energy must be supplied by the neutron to excite a compound nucleus,  $X^{A+1}$ , so it will decay to  $Y + y$ . As momentum must be conserved,

$$m_n v_n = (M_X + m_n) V_c \text{ or } V_c = v_n m_n / (M_X + m_n), \quad (26)$$

where  $V_c$  is the velocity of the compound nucleus. Then, the neutron energy supplied must be such that

$$-Q = m_n v_n^2 / 2 - (M_X + m_n) V_c^2 / 2 \quad (27)$$

and the *threshold energy*,  $E_{th}$ , for the reaction is

$$E_{th} = m_n v_n^2 / 2 = (-Q)(1 + m_n / M_X). \quad (28)$$

(n, 2n) is an example of an endothermic reaction whose cross sections will exhibit an energy dependence of zero until the neutron energy E reaches an  $E_{th}$ .

The simplest, but very important, neutron reaction to be considered is a form of elastic scattering ( $Q = 0$ ), where collisions can be treated with classical mechanics as hard sphere, billiard ball, interactions. For the energies of neutrons in fission reactors, 0–10 MeV, elastic scattering cross sections for most nuclei are constant and proportional to the square of the nuclear radius,  $\sim A^{2/3}$ . Assuming the target nucleus to be at rest and applying conservation of energy and momentum in the center of mass, CM, coordinate system, one determines the probability that the final energy of the scattered neutron, in the laboratory coordinate, LM, system, is  $E_f$  in  $dE_f$ :

$$P(E_i \rightarrow E_f) = 1 / (1 - \alpha) E_i, \text{ for } \alpha E_i \leq E_f \leq E_i \\ = 0 \text{ otherwise,} \quad (29)$$

where  $\alpha = ((A - 1)/(A + 1))2$  and  $E_i$  is the initial neutron energy. A is the mass number of the target nucleus. And, scattering is assumed to be isotropic in the CM coordinate system. This is a good assumption for the energy range of interest

here, and its basis will be discussed later in this section. A full derivation of Eq. 29 can be found in Duderstadt and Hamilton, “Nuclear Reactor Analysis.” Examining  $P(E_i \rightarrow E_f)$  one sees that a neutron scattering off a hydrogen nucleus ( $A = 1$ ) can lose all its energy (as  $\alpha = 0$ ). On average, it loses half its initial energy as

$$\bar{E}_f = \int_{\alpha E_i}^{E_i} dE_f E_f P(E_i \rightarrow E_f) = E_i(1 + \alpha)/2, \text{ and} \quad (30)$$

$$\Delta \bar{E} = E_i - \bar{E}_f = E_i(1 - \alpha)/2. \quad (31)$$

Given  $P(E_i \rightarrow E_f)$  as in Eq. 29, one defines *differential* microscopic elastic scattering cross sections,  $\sigma_{es}^j(E_i)P(E_i \rightarrow E_f)dE_f$ , which are particularly useful in determining how neutrons, born in fission, are slowed down in reactors designed to take advantage of the large fission cross sections of fissile isotopes in what is conventionally defined as the *thermal* neutron energy range, less than 0.625 eV. The superscript “j” of  $\sigma_{es}^j$  refers to the nuclei of the various *moderators* (hydrogen, deuterium and carbon) that are employed in these thermal reactors.

Once neutrons have slowed to the thermal range the target nuclei can no longer be assumed to be at rest. The interaction frequency will then be

$$|\mathbf{v} - \mathbf{V}| \sigma(|\mathbf{v} - \mathbf{V}|) \rho, \quad (32)$$

where  $|\mathbf{v} - \mathbf{V}|$  is the relative speed of neutron and target. For elastic scattering,  $\sigma(|\mathbf{v} - \mathbf{V}|)$  is still nearly constant and an *average* cross section for *thermal* neutrons with speed  $v (= (2E/m_n)^{1/2})$  is

$$\bar{\sigma}(\mathbf{v}) = (\sigma_{es}/\mathbf{v}\rho) \int d^3V |\mathbf{v} - \mathbf{V}| \rho(\mathbf{V}), \quad (33)$$

where for many reactor applications the Maxwell-Boltzmann velocity distribution for ideal gases in thermal equilibrium at absolute temperature, T, can be used to represent the targets. Thus,

$$\rho(V) = \rho \cdot (M/(2\pi kT))^{3/2} \exp(-MV^2/2kT), \quad (34)$$

where  $M$  is the mass of the target nucleus and  $k$  is the Boltzmann constant ( $8.6174 \times 10^{-5}$  eV/K, K is degrees Kelvin).

From Eq. 33, one sees that for  $v \gg V$  the *average* cross section is, as expected,  $\sigma_{es}$ . And, as the neutron speed decreases and approaches zero, the *average* cross section goes as one over the neutron speed.

For highly accurate calculations (As part of the process of evaluating nuclear data sets, very accurate calculations of integral experiments are made. Zero power *mockups* of reactors, with carefully recorded dimensions and inventories, are commonly used. Monte Carlo calculations (to be discussed in the next section) of neutron balance in the mockups are made with various data sets (e.g., cross-section libraries) to determine a recommended set. See the CESWG web site for references to such experiments.), more sophisticated treatments of scattering from moderator structures (e.g., molecules in liquids, lattices for solids) are required. The excitation of modes of vibration, and thus energy loss to phonons must be considered. This has been a fertile field of development [9] and double differential scattering cross sections for various moderators have been produced. They are of the form:

$$\begin{aligned} \sigma_s(E_i \rightarrow E_f, \Omega_i \rightarrow \Omega_f) dE_f d\Omega_f &= (1/4\pi kT) \\ (E_f/E_i)^{1/2} \exp(-\beta/2) \sigma_{es} S(\alpha, \beta) dE_f d\Omega_f, \end{aligned} \quad (35)$$

where

$$\begin{aligned} \alpha &\equiv \left( E_i + E_f - 2(E_i E_f)^{1/2} \right) \Omega_i \cdot \Omega_f / kT \text{ and} \\ \beta &\equiv (E_i + E_f) / kT. \end{aligned} \quad (36)$$

$\sigma_{es}$  is the scattering cross section of the bound “moderating” nucleus (e.g., proton, deuteron, carbon).  $S(\alpha, \beta)$ , the *scattering law*, embodies the physics of the influence of the moderator structure

on the scattering process. Various formulations of  $S(\alpha, \beta)$  are tabulated as part of data files that document *all* the microscopic cross sections that are used in fission reactor design. These files can be found on the web site of the National Nuclear Data Center (currently, nndc.bnl.gov). The most widely used set is ENDF/B, the latest (2009) version is VII.0. In order, however, to produce the differential scattering cross sections (Eq. 35) for design calculations, material temperatures, T, must be identified and supplied with the corresponding ENDF files to NJOY [10], a system of computer programs which produce microscopic cross sections for use in various design programs (which will be discussed in the next section).

The remaining neutron reactions of interest all involve the formation of a compound nucleus, which will be in an excited state,  $(X^{A+1})^*$ , and will subsequently decay, yielding  $\gamma$  or  $\gamma$ 's (neutron capture), n (elastic neutron scattering), n +  $\gamma$  (inelastic scattering), two n's (an (n,2n) reaction), p or  $\alpha$  (charged particle production) or fissioning. The probabilities of these various outcomes for a given isotope, j, and incident neutron energy are characterized by the microscopic cross sections:  $\sigma_c^j(E)$ ,  $\sigma_s^j(E)$ ,  $\sigma_{in}^j(E)$ ,  $\sigma_{2n}^j(E)$ ,  $\sigma_p^j(E)$ ,  $\sigma_\alpha^j(E)$ , and  $\sigma_f^j(E)$ . As noted above in the discussion of Q factors, for endothermic reactions,  $Q < 0$ , cross sections will be zero until a threshold value of E for the initiating neutron is reached. This is the case for inelastic scattering, (n,2n) and some (n, $\alpha$ ) and (n,p) reactions. There is similar threshold behavior for fertile isotope fission cross sections (see section “[Fission and Its Products](#)”), which when the reactions “go” are exothermic. All neutron capture reactions (n, $\gamma$ ) are exothermic, and thus their cross sections are nonzero over the full range of fission reactor neutron energies.

One can view the “compound nucleus reaction” cross sections as the product of a cross section for compound nucleus formation,  $\sigma_C$  (neutron capture by the target nucleus), times the probability of a particular decay mode of the excited compound nucleus. Both factors of this “product” depend on the nature of the target and

compound nuclei,  $X^A$  and  $X^{A+1}$ , and the energy available to excite the compound nucleus,  $X^{A+1}$ . The later is the sum of the reduced mass (i.e., center of mass) kinetic energy of the initiating neutron:

$$\begin{aligned} E_C &= E(M_X/(m_n + M_X)) \\ &\cong E(A/(1 + A)), \end{aligned} \quad (37)$$

where  $X^A$  is assumed to be at rest and momentum is conserved; and the excitation energy,  $E_e$  (see Eq. 17), provided by adding a neutron to  $X^A$ .  $E_e$  is the binding energy of the “added” neutron in the compound nucleus.

The magnitude of  $\sigma_C$  depends on the structure of  $X^A$ . First, if neutron number  $N (=A-Z)$  is odd,  $\sigma_C$  is larger than its counterpart for neighboring isotopes with even neutron numbers. The opposite is true for  $N$  even. This just reflects the binding energy advantage of pairing half-integral spin Fermions in a nucleus (see the discussion of  $B_4$  in section “[Fission and Its Products](#)”). Second, for nuclei of various  $A$ 's there are *Magic Numbers* for both  $Z$  and  $N$  (2, 8, 20, 50, 82 and 126) which can be thought of as closing shells of protons and neutrons, analogous to atomic electron shells. The reduction of  $\sigma_c$  for a magic number  $N$  nucleus, relative to its  $N + 1$  isotope neighbor's  $\sigma_C$ , is much larger than the pairing effect.

Excited compound nuclei have mean lifetimes,  $\tau$  (see Eq. 14) of as long as  $10^{-14}$  s (Kaplan), much longer than the transit time for a neutron crossing a target nucleus,  $\sim 2R/v$ . Given the nuclear diameter,  $2R \sim 10^{-12}$  cm, the transit time for even a *thermal* neutron is  $\sim 10^{-17}$  s (The term *thermal neutron* refers to the most probable energy of the neutrons in thermal equilibrium in a zero-power reactor (e.g., a mockup). At 20 °C, this is 0.023 eV, with a corresponding neutron speed of 2,200 M/s.). Thus, the standard assumption is that the decay of an excited compound nucleus is independent of all but the input energy of the initiating neutron. The decay modes of a particular excited state, nuclear level, are characterized by a *level width*

$$\Gamma \equiv h/(2\pi\tau), \quad (38)$$

with dimensions of energy ( $h$  is Planck's constant,  $4.135667 \times 10^{-15}$  eV-s), which is based on the Heisenberg uncertainty principle. In a quantum mechanical system like our excited compound nucleus, knowledge of energy and time is governed by

$$\Delta E \Delta t \sim h/2\pi. \quad (39)$$

Thus,  $\Gamma$  can be viewed as the uncertainty in energy of an excited state (level) of a compound nucleus, and  $\tau$  a measure of the “uncertainty” of the lifetime of the excited state. The microscopic neutron cross sections, which go through the compound nucleus formation process, exhibit resonance behavior (peaking) when the neutron energy and  $E_e$  (the added neutron binding energy) produce or nearly produce a well-defined excited state (i.e., having a small  $\Gamma$ ). See Fig. 6.

The level width  $\Gamma$  can be thought of as the probability per unit time of decay of an excited state and thus the sum of partial “widths” (probabilities per unit time) for each mode of decay:

$$\Gamma = \Gamma_\gamma + \Gamma_n + \Gamma_{n\gamma} + \Gamma_f + \Gamma_{2n} + \Gamma_p + \dots, \quad (40)$$

(where  $\Gamma_n$  refers to elastic compound scattering and  $\Gamma_{n\gamma}$  refers to inelastic scattering, the rest being obvious).


Therefore, a “compound nucleus reaction” cross section near an isolated resonance is

$$\begin{aligned} \sigma(n, i) &= \sigma_C(n)\Gamma_i/\Gamma, \text{ for } i \\ &= \gamma, n, (n\gamma), f, 2n, p, \text{ etc.} \end{aligned} \quad (41)$$

The functional form of  $\sigma(n,i)$ , its dependence on neutron energy, was derived with the principles of quantum mechanics by Briet and Wigner [11] in 1935. Their “formula” for this simple case is

$$\sigma(n, i) = (\lambda^2/4\pi)\Gamma_n\Gamma_i/\left[(E - E_0)^2 + (\Gamma/2)^2\right], \quad (42)$$

where  $\lambda$  is the de Broglie wavelength of the neutron,  $h/(2m_n E)^{1/2}$ , and  $E_0$  is the energy of the

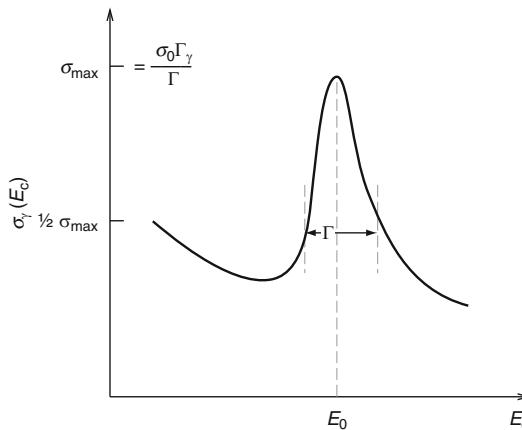

**Fission Reactor Physics, Fig. 6** A typical neutron capture cross section for an isolated (single) resonance whose width at half maximum is  $\Gamma$ , the total level width.  $\Gamma_\gamma$  is the partial width for gamma ray emission from the excited state (level).  $E_c$  is the center of mass (reduced mass) energy of the initiating neutron (Duderstadt)

resonance peak. Figure 6 is an illustration of this “form” for  $i = \gamma$ .

Breit and Wigner’s most impressive derivation is more general than Eq. 42.

First, they considered neutron energies beyond what has been found pertinent to fission reactors. When one accounts for conservation of angular momentum, the initiating neutron has classically a magnitude of angular momentum  $|L|$  equal to  $p_b$ , where  $p$  is neutron momentum,  $(2m_nE)^{1/2}$ , and  $b$  is the displacement of the neutron path from a parallel axis running through the center of the target nucleus. In a quantum mechanical treatment,

$$|L| = (l(l+1))^{1/2}h/2\pi \text{ where } l = 0, 1, 2, 3, \dots \quad (43)$$

Then, one can think of “ $b$ ” as  $|L|$  (given by Eq. 43) divided by the neutron momentum,  $p$ , and if there is going to be a significant probability of a reaction with the target nucleus, “ $b$ ” cannot be much larger than the target nucleus radius,  $r \cong A^{1/3}$  ( $1.28 \pm 0.05 \times 10^{-13}$  cm). For this to be true for a large nucleus, for example, for  $U^{235}$ , and for non-zero angular momentum (e.g.,  $l = 1$ ), the neutron would have to have kinetic energy  $\geq 6.6$  MeV. For smaller nuclei the required energy would be greater.

Given the spectrum of neutrons in fission reactors, where most neutrons are born at around 2 MeV (see Fig. 4), an assumption of zero angular momentum ( $l = 0$ ) for the vast majority of reactions is good, and thus equation Eq. 42 does not include a factor involving angular momentum or spin quantum numbers. This assumption also means that decay products of an excited compound nucleus will be released isotropically in the center-of-mass coordinate system, which is reflected in the factor of  $1/4\pi$  in Eq. 42 (the probability that the decay product  $i$  ( $i = n, \gamma, p$ ) is released  $d\Omega$  about any  $\Omega$ ). The quantum mechanical treatment of angular momentum also accounts for the statement made above that “billiard ball” elastic scattering “can be assumed to be isotropic in the center of coordinate system.” This direct elastic scattering is referred to as *potential* scattering so as to be differentiated from resonance (compound nucleus) elastic scattering, that is,  $i = n$  in equation Eq. 42.

Second, Breit and Wigner recognized and treated interference between potential and resonance elastic scattering. They found that the total elastic scattering cross section dips at energies right below the resonance peak,  $E_0$ .


Finally, as they were aware that there could be multiple possible excited states of a compound nucleus they extended their “formula” to two resonances whose  $\Gamma$ ’s do not overlap.

Since Breit and Wigner’s original work, there has been great activity in measuring cross sections, motivated principally the desire to understand the physics of the nucleus. In the process, however, the basic parameters required for nuclear weapon and reactor design were generated. The neutron cross sections for fission reactor design are summarized in Table 6 [12].

In this table, the distinction is made between resonance cross sections with different densities (spacing) of resonance peaks. With intermediate and heavier nuclei the level structure grows more complex, and the number of possible excited states of a compound nucleus greatly increases. With higher neutron energy more finely spaced excited states can be reached and their level width,  $\Gamma$ ’s, increasingly overlap until measurement cannot resolve individual resonances.

In parallel with the work of nuclear spectroscopy experimentalists, theoreticians have built on

**Fission Reactor Physics, Table 6** Types of neutron cross section for various target element/isotope masses pertinent to fission reactor design

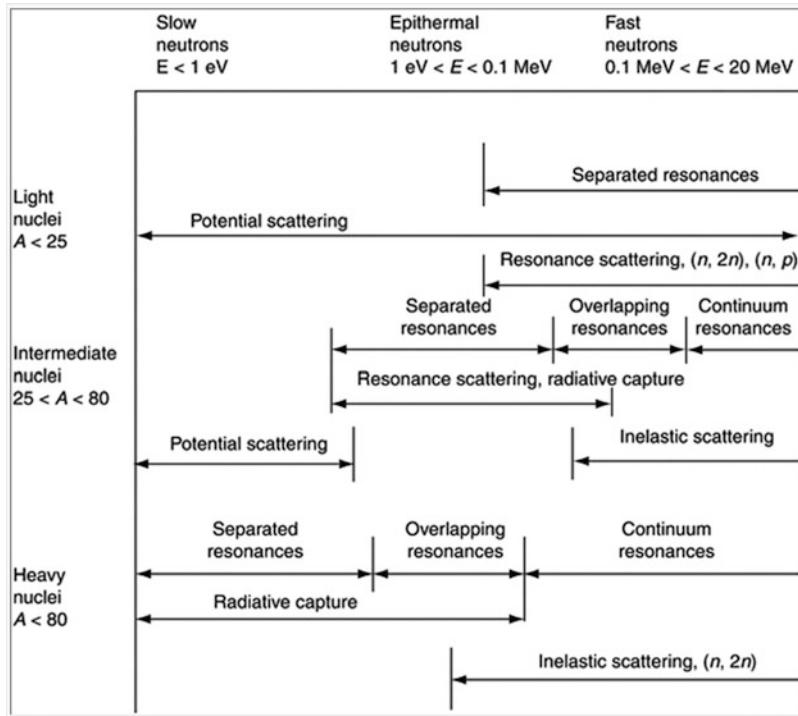

Breit and Wigner's work. Resonance cross-section models [13] are key to creating Evaluated Nuclear Data Files. The Cross Section Evaluation Working Group, a cooperative effort of national laboratories, industry and universities in the United States and Canada (see [nndc.bnl.gov](http://nndc.bnl.gov)), sponsors reviews of the various measurements of a given cross section (target isotope and reaction) and the subsequent determination (As part of the process of evaluating nuclear data sets, very accurate calculations of integral experiments are made. Zero power *mockups* of reactors, with carefully recorded dimensions and inventories, are commonly used. Monte Carlo calculations (to be discussed in the next section) of neutron balance in the mockups are made with various data sets (e.g., cross-section libraries) to determine a recommended set. See the CESWG website for references to such experiments.) of a consensus set of parameters for an appropriate cross-section model. These models and their "consensus"

parameters are a large part of the ENDF/B-VII.0 data files. Having the cross sections represented by an analytic model also facilitates dealing with the temperature effect on resonance cross-sections. that is, Doppler shift or broadening. The analytic process of averaging a resonance cross section (i.e., its model), over the velocity distribution of the target nuclei at a given temperature is similar to what was discussed above for reactions initiated by neutrons in thermal energy range. The process is outlined by Duderstadt and Hamilton using the single-level Breit Wigner formula as the resonance model. The effect of increasing temperature is to reduce a resonance peak while broadening its width, thus increasing its  $\Gamma$ . To first order, the area under the resonance is unchanged, which could led one to think that resonance "Doppler" broadening is not an import effect in a reactor application. This is true if the density of the resonance target nuclei is small (i.e., it is very dilute in the reactor), and thus its

presence does not change the energy dependence of the reactor's neutron population. However, in most reactor designs, resonance absorbers are concentrated in localized reactor features (e.g., fuel elements, control rods) and there is significant self-shielding at the resonance peak. That is, neutrons with the “peak” energy will most likely be absorbed in the reactor “feature” irrespective of temperature-induced changes in the resonance microscopic cross section. But the story can be different on the wings of a resonance where the cross section is much smaller, and, thus, so is the self-shielding. An increase in temperature of the “feature” can result in a net increase in neutron absorption, with no change at the peak energy, but with increases in the wings. This phenomena can aid in insuring a *negative temperature coefficient* for a fission reactor design (*Temperature coefficients* are collective reactor parameters that reflect how neutron balance is impacted by temperature change through feedback mechanisms, for example, Doppler broadening (or narrowing) of resonances, and moderator density changes. Reactor control will be discussed in section “[Fission Reactor Performance](#).”). A negative temperature coefficient is a crucial reactor design safety requirement.

Dealing with temperature in producing resonance cross sections for design calculations is handled in a manner similar to the process for thermal energy range cross sections discussed above. The ENDF resonance cross-section models and appropriate material temperatures are input to NJOY, and the output are the broadened cross sections in the model format. How these cross sections are used in design calculations is addressed in the next section.

As noted at the start of this section, gamma ray (photon) cross sections are important in fission reactor design as they are required for the full treatment of energy deposition throughout a reactor (in its fuel bearing *core* and supporting structures). In the order of importance with increasing gamma energy, the mechanisms of attenuation are the photo electric effect ( $\gamma, e^-$ ), Compton scattering ( $\gamma, \gamma^*$ ), and pair production ( $\gamma, e^- e^+$ ). The photoelectric effect removes a  $\gamma$  when its energy,  $h\nu$ , can eject an atomic electron. Its cross section


is approximately proportional to  $Z^4/(h\nu)^3$ , and has discontinuities in energy as the ionization energy of various atomic electron shells are achieved. For higher  $\gamma$  energies, Compton scattering interactions with atomic electrons can be treated as effectively free electron collisions. Conserving momentum and energy relativistically, one can derive expressions for energy loss and change in direction for initiating  $\gamma$ s as a function of their incident energy. The magnitude of the cross section is proportional to  $Z$ . When  $\gamma$  energies reach a threshold of 1.022 MeV ( $2 \times m_e c^2$ ) and are in the field of a target nucleus, pair production of an electron and positron is possible. The magnitude of the pair production cross section is proportional to  $Z^2$ . Of course, in tracking the  $\gamma$  population in a reactor, one recognizes that annihilation of a positron will produce two 0.51 MeV  $\gamma$ 's. So pair production can be viewed as a form of inelastic scattering event. Cross sections for these three processes are tabulated in ENDF/B files, and they are described at a thorough but accessible level in the classic text by Robley D. Evans “The Atomic Nucleus.”

An example plot of these cross sections for Th<sup>232</sup> is provided in Fig. 7.

Finally, there are other gamma reactions which can take place in a reactor, for example ( $\gamma, f$ ) and ( $\gamma, n$ ) (the latter which we noted earlier as a source of delayed neutrons). However, these are threshold reactions for relatively high-energy gammas, and as shown in Table 3 the total energy available from fission from fissile isotopes for gammas is limited: <8 MeV for prompt  $\gamma$ 's, and, <6.5 MeV for delayed  $\gamma$ 's. Thus, these reactions are not important in determining the overall distribution of gammas in a reactor design.

## Neutron Distributions

With the material provided to this point, the primary problem of reactor *theory* can be addressed: that of finding the neutron distribution in phase space ( $r, E, \Omega$ ), of a reactor design, and subsequently the reactor's power distribution, both throughout the reactor design's lifetime. The first task is to derive the equation for the neutron

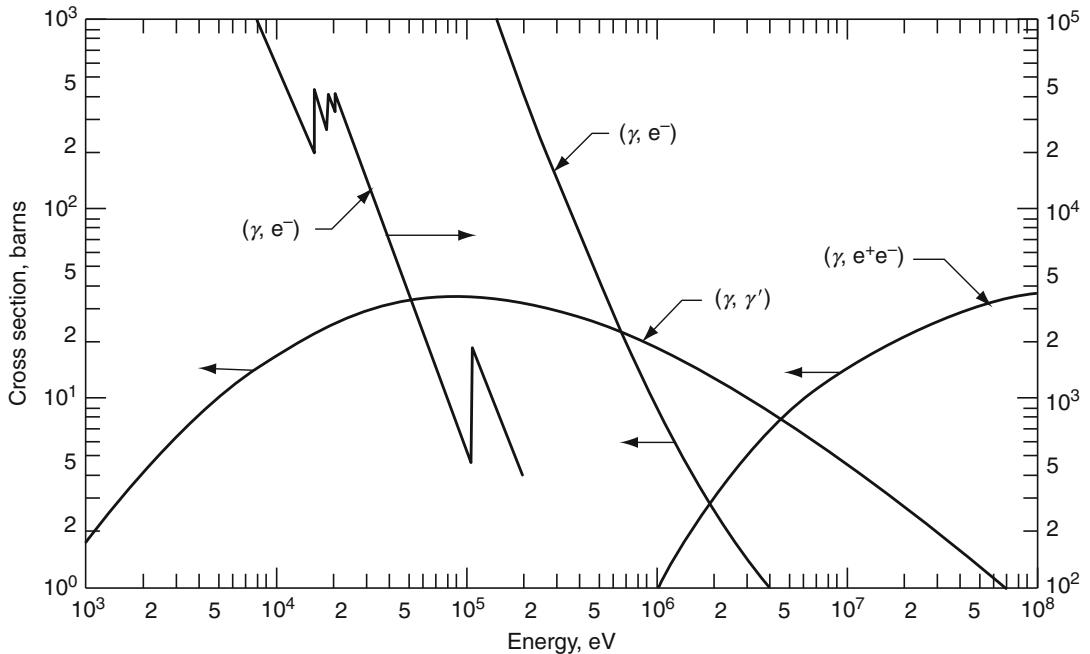

**Fission Reactor Physics, Fig. 7** Thorium cross section for the photo electric effect ( $\gamma, e$ ), for Compton scattering ( $\gamma, \gamma'$ ), and pair production ( $\gamma, e + e^-$ ) [32]

density,  $N(\mathbf{r}, E, \Omega)$ , the neutron transport equation, and auxiliary equations for the atom densities,  $\rho_j(\mathbf{r}, t)$ , of depleting (initial inventory) isotopes and important fission products (Like reactor physics, *reactor theory* is a traditional term in the nuclear engineering discipline. It refers to the study of the neutron transport equation and the means of its solution.). A simple approach to deriving the transport equation is to consider a balance relationship for  $N(\mathbf{r}, E, \Omega, t)dEd\Omega dt$  for a time invariant volume,  $V$ , in configuration space:

$$dEd\Omega dt \int_V (\partial N(\mathbf{r}, E, \Omega, t)/\partial t)d^3r = \\ - \text{loss from flow out of } V \\ + \# \text{ scattering into } dE \text{ about } E \\ \text{and } d\Omega \text{ about } \Omega \\ + \# \text{ produced by fission} \\ + \# \text{ produced by other sources} \quad (44)$$

For the “flow” term, one defines the neutron angular current  $\mathbf{J}(\mathbf{r}, E, \Omega, t) \equiv \mathbf{v}N(\mathbf{r}, E, \Omega, t)$ , where  $|\mathbf{J}(\mathbf{r}, E, \Omega, t) \cdot \mathbf{n}|$  is the no. of neutrons at

$\mathbf{r}$ , with energies in  $dE$  about  $E$ , traveling in  $d\Omega$  about  $\Omega$ , which cross an area  $ds$  with a unit normal vector  $\mathbf{n}$  in  $dt$  at  $t$ . And thus, net flow out of  $V$ , which has a non-reentrant surface  $S$ , is:

$$dEd\Omega dt \int_S \mathbf{J}(\mathbf{r}, E, \Omega, t) \cdot \mathbf{n} ds \\ = dEd\Omega dt \int_V \mathbf{v} \cdot \nabla N(\mathbf{r}, E, \Omega, t) d^3r, \quad (45)$$

where Gauss’ Theorem is applied to transform the surface integral to a volume integral.

The “reactions” in  $V$  are simply:

$$dEd\Omega dt \int_V v \Sigma_T(\mathbf{r}, E, t) N(\mathbf{r}, E, \Omega, t) d^3r, \quad (46)$$

where  $\Sigma_T(\mathbf{r}, E, t)$  is the total *macroscopic* cross section in  $V$ . All scattering cross sections included in  $\Sigma_T$  have been integrated over final energies and directions.

Scattering into V is:

$$dEd\Omega dt \int_v^{\infty} d^3r \int_0^{\infty} dE' \int d\Omega' v'\Sigma_s(\mathbf{r}, t, E' \rightarrow E, \Omega' \rightarrow \Omega) N(\mathbf{r}, E', \Omega', t) \quad (47)$$

where  $\Sigma_s$  is the double differential *macroscopic* scattering cross section in V (see the definition Eq. 65 for an example of a double differential *microscopic* scattering cross section).

The direct fission source into V is:

$$dEd\Omega dt \int_v^{\infty} d^3r \int_0^{\infty} dE' \int d\Omega'' \sum_i v_{pi}(E' \rightarrow E) \quad (48)$$

$$\Sigma_{fi}(\mathbf{r}, E', t) v' N(\mathbf{r}, E', \Omega, t) / 4\pi,$$

where  $v_{pi}(E' \rightarrow E)$  is the number of prompt neutrons emitted in  $dE$  about  $E$  by a fission of isotope  $i$  initiated by neutrons in  $dE'$  about  $E'$ : the macroscopic fission cross section for isotope “ $i$ ” is  $\rho_i(\mathbf{r}, t)\sigma_{fi}(E')$ .

The delayed neutron source into V is:

$$dEd\Omega dt \sum_j X_{dj}(E) \frac{\lambda_j}{4\pi} \int_v^{\infty} C_j(\mathbf{r}, t) d^3 r, \quad (49)$$

where  $X_{dj}(E)/4\pi$  is the probability that the decay of delayed neutron precursor “ $j$ ” will produce a neutron in  $dE$  about  $E$  and  $d\Omega$  about  $\Omega$ , and where  $\lambda_j$  and  $C_j$  are, respectively, the decay constant (see the beginning of section “Heavy Elements”) and isotope density of precursor “ $j$ .”

And, finally any source of neutrons in V not produced by a neutron reaction is given by:

$$dEd\Omega dt \int_v^{\infty} d^3r S(r, E, t) / 4\pi, \quad (50)$$

where  $S$  could characterize a source (e.g., Plutonium(238)-Beryllium( $\alpha, n$ ) or Californium-252 (spontaneous fission)) included in a reactor design to aid in reactor start-up or  $S$  might account for decay processes yielding neutrons due to the presence of depleted fuel incorporated from another design.

Now, if the terms on the right side of the “balance relationship,” equation Eq. 44, are moved to the left side, and  $dEd\Omega dt$  and the integral operation  $\int_v^{\infty} d^3r$  is factored out of all the terms,

then as the right side is now zero and the small volume V is arbitrary, the collection of expressions under the integral must equal zero. The resulting equation is the *Neutron Transport (or Boltzmann) Equation*:

$$\begin{aligned} \frac{\partial}{\partial t} N(\mathbf{r}, E, \Omega, t) = & -\mathbf{v} \cdot \nabla N(\mathbf{r}, E, \Omega, t) \\ & - \mathbf{v} \Sigma_T(\mathbf{r}, E, t) N(\mathbf{r}, E, \Omega, t) \\ & + \int_0^{\infty} dE' \int d\Omega' v'\Sigma_s(\mathbf{r}, t, E' \rightarrow E, \Omega' \rightarrow \Omega) \\ & \times N(\mathbf{r}, E', \Omega', t) + \int_0^{\infty} dE' \int d\Omega' v' \sum_i v_{pi}(E' \rightarrow E) \\ & \Sigma_{fi}(\mathbf{r}, E', t) N(\mathbf{r}, E', \Omega', t) / 4\pi \\ & + \sum_j X_{dj}(E) \lambda_{dj} C_j(\mathbf{r}, t) / 4\pi \\ & + S(\mathbf{r}, E, \Omega, t). \end{aligned} \quad (51)$$

The conditions for solutions of this partial-differential-integral equation are the continuity condition:

- $N(\mathbf{r} + \alpha\Omega, E, \Omega, t)$  must be a continuous function of  $\alpha$  for  $\mathbf{r} + \alpha\Omega$  in the reactor, and the boundary condition:
- $N(\mathbf{r}_s, E, \Omega, t) = 0$ , for  $\Omega \cdot \mathbf{n} < 0$ , where  $\mathbf{n}$  is an outward unit vector normal to a non-reentrant surface chosen to define the extent of the reactor.

The auxiliary equations for number densities of delayed neutron precursors,  $C_j(\mathbf{r}, t)$ , and fission product poisons, depleting fissile isotopes, and *burnable* poisons,  $\rho_i(\mathbf{r}, t)$ s, are simply defined as movement of these isotopes in space can be ignored. *Burnable* poisons are elements with large neutron absorption cross sections (e.g., Boron, Hafnium, Cadmium, Erbium, Gadolinium) that can be included in reactor designs to maintain neutron balance over design lifetime.

- For delayed neutron precursors:

$$\frac{\partial}{\partial t} C_i(\mathbf{r}, t) = -\lambda_i C_i(\mathbf{r}, t) + \int_0^{\infty} dE' \int d\Omega' \sum_j \xi_{ij} v' \Sigma_{fj}(\mathbf{r}, E', t) N(\mathbf{r}, E', \Omega', t), \quad (52)$$

where  $\xi_{ij}$  is the expected number of precursors of type  $i$  produced by fission of isotope  $j$ .

- For fission product poisons (e.g., Xenon-135 and its precursors Telirium-135 and Iodine-135, and Samarium-149 and its precursors Neodium-149 and Promethium-149):

$$\begin{aligned} \frac{\partial}{\partial t} \rho_i(\mathbf{r}, t) &= -\lambda_i \rho_i(\mathbf{r}, t) \\ &- \int_0^{\infty} dE' \int d\Omega' \rho_i(\mathbf{r}, t) \sigma_{ci} \\ &(E') v' N(\mathbf{r}, E', \Omega', t) \\ &+ \int_0^{\infty} dE' \int d\Omega' \sum_k \gamma_{ik}(E') \\ &\sum_{fk}(\mathbf{r}, E', t) v' N(\mathbf{r}, E', \Omega', t), \end{aligned} \quad (53)$$

where  $\gamma_{ik}(E)$  is the expected number of poison (or poison precursor) nuclei produced by fission of isotope  $k$  induced by neutrons of energy  $E$ .

- For fissile fuel and burnable poison isotopes:

$$\frac{\partial}{\partial t} \rho_i(\mathbf{r}, t) = - \int_0^{\infty} dE' \int d\Omega' \rho_i(\mathbf{r}, t) \sigma_{ai}(E') v' N(\mathbf{r}, E', \Omega', t), \quad (54)$$

where the subscript “a” as applied to  $\sigma_a^i$  conventionally refers to capture plus fission for fissile isotopes. For reactor designs containing fertile isotopes, equation Eq. 54 will have a source term reflecting the transmutation process leading to the fissile isotope “i” (see Fig. 1). Additional “auxiliary” equations may be needed to deal with transmutation of one isotope of a burnable poison to another, which has a significant neutron capture

cross section (for example Hafnium, which has four naturally occurring isotopes).

Solving these “auxiliary” equations, irrespective of their number, is not a calculational challenge, given one knows the neutron density,  $N(\mathbf{r}, E, \Omega, t)$ , as they are ordinary differential equations. Obviously, solving the neutron transport equation (Eq. 51) for  $N(\mathbf{r}, E, \Omega, t)$  is another matter. There are several features of fission reactors, however, that make this task more tractable. First, the density of neutrons needed to produce as much power as can be removed/transferred from various reactor types to do useful work is very small,  $\sim 10^7$ – $10^9$  #/cm<sup>3</sup>, where as the density of nuclei is many orders of magnitude larger  $\sim 10^{23}$  #/cm<sup>3</sup>. Therefore, the neutrons can be viewed as a very dilute gas in the matrix of a reactor’s nuclei, and thus neutron-neutron collisions can be ignored (they have not been accounted for in Eq. 51) (Another neutron behavior that can be ignored in formulating the transport equation is the finite lifetime of a free neutron. Its mean-life is  $\sim 11.5$  min. But, as will be discussed in the next section, the lifetime of neutron in a reactor is measured in milliseconds.). Second, in the primary nuclear design calculations, where it is determined if a trial configuration, loading and geometry, of fuel, structure, moderator, coolant, control elements, and poisons, can sustain neutron balance through out the reactors lifetime objective, the time variable “t” in Eq. 51 can be treated in a much simplified manner. Given the initial conditions of a trial reactor configuration, it is a good assumption that the atom densities in the various macroscopic cross sections in Eq. 51 can be treated as nearly constant for a significant time interval,  $\Delta t \geq$  minutes. With this assumption, and no neutron-neutron collisions, Eq. 51 is linear in  $N(\mathbf{r}, E, \Omega, t)$  during  $\Delta t$ , and solution methods for Eq. 51 are greatly simplified. In addition, for the interval,  $\Delta t$ , Eq. 51 can be treated as a time-independent equation. For a *primary nuclear design* calculation, one ignores the source term  $S(\mathbf{r}, E, t)$  (its importance to the start-up problem will be addressed in the next section) and Eq. 51 becomes a linear homogeneous eigenvalue problem:

$$\begin{aligned}
& v \Omega \cdot \nabla \cdot N(\mathbf{r}, E, \Omega) + v \Sigma_T(\mathbf{r}, E) N(\mathbf{r}, E, \Omega) \\
& - v \int_0^\infty dE' \int d\Omega' v' \Sigma_s(\mathbf{r}, E' \rightarrow E, \Omega' \rightarrow \Omega) \\
& \times N(\mathbf{r}, E', \Omega') = \frac{1}{k} \int_0^\infty dE' \int d\Omega' v' \sum_j \Sigma_{fj}(\mathbf{r}, E') \\
& \left\{ v_{pj}(E' \rightarrow E) + \sum_j X_{di}(E) \xi_{ij} \right\} \times N(\mathbf{r}, E', \Omega') / 4\pi, \quad (55)
\end{aligned}$$

where  $1/k$  is the eigenvalue. It has been customary to use the inverse of “ $k$ ” as the eigenvalue and to refer to  $k$  as the multiplication factor. Note that if Eq. 55 is integrated over the reactor volume and  $E$  and  $\Omega$ , then  $k$  is equal to the ratio of neutron production to neutron loss, this is the origin of its designation as a “multiplication factor.” A further simplification in Eq. 55 arising from the assumption of “time independence” during  $\Delta t$ , is that delayed neutron production can just be added to prompt neutron production. As indicated, previously delayed neutrons, though less than a percent of total neutron yield in a fission, are critical to transient reactor behavior, and, therefore, control system design, to be covered in the next section.

Before proceeding with the solution methods for Eq. 55, a description of how the *primary nuclear design* calculation proceeds is required for a basic understanding of reactor design, and to provide perspective on the utility of the various solution methods for the transport equation. Assuming the solution method chosen has yielded a  $k_i$  and  $N_i(\mathbf{r}, E, \Omega)$  for the initial time interval,  $\Delta t_i$  where  $i = 1$ , then one proceeds to check design requirements, and make needed modifications to the reactor’s initial *trial configuration*. In general, this is an iterative process including other disciplines (i.e., heat transfer and fluid flow, structural analysis). If  $k \neq 1$ , inventories of fuel/poisons or the positioning of control elements will need to be altered to achieve neutron balance (*Control elements* (sometimes generically called control rods) are structures incorporating highly neutron absorbing isotopes.

They have a dual role in fission reactor design: (1) assuring criticality (a controlled steady state chain reaction) throughout a reactor’s design lifetime, i.e., compensating for potential excess neutron production from the initial fissile loading which must be large enough to accommodate depletion; and (2) providing safe shut down (termination of the chain reaction) of the reactor in case of an accident condition or during a planned interruption of normal operations (e.g., for plant maintenance or refueling). The same “structures” could accomplish both functions or there could be separate structures (sometimes referred to as “shim” and “shutdown” rods respectively.). The power distribution throughout the reactor must then be determined. As  $N(\mathbf{r}, E, \Omega)$  is the solution to a homogeneous equation, its absolute magnitude is undetermined, but a normalization factor,  $p$ , can be established from the total thermal power rating,  $P(\text{MWth})$ , requirement of the design, that is from:

$$P = p \int_{R\text{Vol.}} d^3r \int_0^\infty dE \int d\Omega v \sum_j \epsilon_j \Sigma_{fj}(\mathbf{r}, E) N(\mathbf{r}, E, \Omega), \quad (56)$$

where  $\epsilon_j$  is the energy release per fission of isotope  $j$  (see Table 3). Now given  $pN(\mathbf{r}, E, \Omega)$ , one can calculate the power distribution throughout the reactor

$$P(\mathbf{r}) = p \int_0^\infty dE \int d\Omega v \sum_j \epsilon_j \Sigma_{fj}(\mathbf{r}, E) N(\mathbf{r}, E, \Omega), \quad (57)$$

and determine peak powers in fuel elements, and average and peak heat fluxes into coolant channels. Thus, fuel element and heat removal system limits can be checked. If there are violations, the *trial configuration* must be altered and new results for  $k$  and  $N(\mathbf{r}, E, \Omega)$  found. From the power distribution and subsequent thermal analysis, one can also verify the temperatures that were assumed for the *trial configuration*, that is, the temperatures that were needed to define thermal scattering cross

sections and Doppler broadened resonance cross sections. Finally, when all conditions are met for the first time interval,  $\Delta t_i$ , where  $i = 1$ , the *auxiliary* equations (Eq. 53 and Eq. 54) can be solved to update inventories of fuel and poisons for the next time interval,  $\Delta t_2$ . For a thermal reactor design, where the fission product poisons Samarium-149 and Xenon-135, are important, initial time intervals should be short (minutes) until equilibrium levels of these isotopes are achieved ( $\sim$ hours). Subsequent time intervals can be many hours. From this brief description of the *primary nuclear design process*, it should be clear that having accurate and efficient solution methods for the time-independent neutron transport equation is key to achieving a successful design.

There are two basic approaches to solving the time independent neutron transport equation, Eq. 55; the probabilistic-statistical Monte Carlo simulation method [14] where individual neutrons are traced through their life experience in a reactor, and analytic methods where the variables,  $\mathbf{r}$ ,  $E$ , and (sometimes)  $\Omega$ , are made discrete, thus transforming Eq. 55 into a matrix equation.

Monte Carlo simulation is in principle well suited for this application because the neutron density is low so the transport equation can be treated as linear. Thus, each “experiment,” that is, neutron history, is independent of all others. Initially, a neutron is started at a randomly selected reactor location and with a randomly selected direction,  $\Omega$ . Its initial energy is selected by treating a typical prompt neutron energy spectrum as a probability distribution:

$$P(E)dE = v_p(E)dE / \int_{E_{\min}}^{E_{\max}} dE v_p(E), \quad (58)$$

which is then “sampled” with a random number between 0 and 1. In Monte Carlo computer programs [15, 16] a sequence of random numbers is generated with an algorithm. To provide an example of “sampling,” note that in this case, given a random number  $n$ , the “sampled” starting energy  $E$  is found by simply solving the transcendental equation:

$$n = \int_{E_{\min}}^E dE' P(E') \text{for } E. \quad (59)$$

Now having a speed and direction, one can “sample” (with a new random number) the probability that the neutron travels a distance  $x$  before having a collision, using equation Eq. 20. As this probability depends on the total macroscopic cross section,  $\Sigma_T(\mathbf{r}, E)$ , one must keep track of material boundaries. An initial sampling will be for the distance from the starting point of the neutron to the first material boundary it could cross. If the initial sampling results in the boundary being crossed, then there is a new  $\Sigma_T$  and a second sampling is performed to determine if another boundary is crossed. Eventually, either the neutron leaves the reactor or the location of the first collision is established. As the total cross section is the sum of capture, scattering, and possibly fission macroscopic cross sections for the various isotopes present, one can treat the relative magnitudes of the components of the sum as a probability distribution, which when “sampled” leads to the next step in our neutron’s history. If capture is the result, the history ends, just as it would end if the neutron leaked (escaped) from the reactor. Either capture or leakage is recorded as a “loss.” If fission is the result, the history also ends, but the number of neutrons produced (1, 2, or 3) in the fission of the “selected” isotope  $j$ , and the fission location are recorded. The number of fission neutrons is determined by “sampling” the probability distribution for fission yield of isotope  $j$ . The mean of the distribution  $\bar{v}_j(E)$  includes delayed neutrons. The number of neutrons produced by a “history” is counted as “production.” If scattering is the result of the collision then the double differential macroscopic cross section is treated as probability distribution and “sampled” to provide a new energy and direction for the neutron. Then, the process of tracking to either escape or the next collision is repeated. Thus, the “history” proceeds until it ends as either “loss” or “production,” if “production” a starting point for a subsequent “history” and a location for energy deposition are also provided.

There are various strategies for carrying out Monte Carlo calculations and the evaluation of

the statistical nature of the results. A standard approach, in outline, is to run successive groups of “histories” (thousands). Discard the first few groups, which are used to establish a reasonable fission neutron spatial source distribution, and then find the mean and standard deviations of the desired calculational results from the subsequent groups. It is most economical to get good statistics for the eigenvalue  $k$ , the multiplication factor, which is just “production” over “loss,” quantities which are accumulated over the whole reactor. Energy deposition, that is, power distribution, results are much more costly. Hundreds of groups with millions of histories per group would be required to give good statistics (a five percent 95% confidence interval) for the number of fissions in small reactor volumes (e.g., a 1 cm length of a typical PWR fuel element which has a volume of  $0.7 \text{ cm}^3$ , out of a reactor volume of  $32.8 \times 10^6 \text{ cm}^3$  (for a 3,400 MWth rating)). From this discussion, one can see why, as mentioned in section “[Cross Sections](#),” Monte Carlo calculations of mock-up experiments are widely used in cross-section data set evaluations, where the results of interest are changes in  $k$ , the multiplication factor. Even with the tremendous advances in computing capability which have been made to date, Monte Carlo simulation is not as yet the main line method for primary nuclear design calculations. But, as will be seen in the following description of analytic methods, it can greatly aid in improving the accuracy of the analytic methods.

When the analytic approach of making the neutron density’s variables  $\mathbf{r}$ ,  $E$  and  $\Omega$  discrete is applied, so as to make the computational errors in solving the transport equation comparable to an exhaustive Monte Carlo simulation, the computer resource requirements will challenge today’s largest machines (peak speeds of  $\sim 2.3 \times 10^{15}$  flops (floating point operations per second) [17]).

This can be demonstrated with the large PWR used in the Monte Carlo discussion: *First*, a spatial mesh of  $65.6 \times 10^6$  points would result, assuming quarter core radial symmetry, and from using a  $1 \times 1 \times 2 \text{ cm}^3$  cell for averaging cross sections. (The mesh may need to be finer for highly absorbing features, e.g., fixed poisons, control elements, and can be courser in homogeneous regions.)

*Second*, the energy variable can be treated with a multigroup approximation where the energy range,  $0.0 \rightarrow 10 \text{ MeV}$  is divided into intervals (groups), for example, 24 for thermal neutrons,  $0.0 \rightarrow 0.625 \text{ eV}$ , and 57 for the rest of the range, with most of these groups allotted to epithermal neutrons,  $E = 0.625 \text{ eV} \rightarrow 0.1 \text{ MeV}$  where there is a concentration of explicit resonance cross sections (see Table 6). A weight function  $f_g(\mathbf{r}, E)$ , normalized for  $E$  to unity, is required for each interval,  $g$ . These can be calculated with infinite medium problems representing various portions of the reactor; homogeneous problems with no spatial variables, or an infinite repeating array of cells (e.g., a fuel element and surrounding coolant) with radial spatial variables, but no axial,  $z$ , dependence. The power of the multigroup approximation is that it is insensitive to the choice of weight functions and thus simplifying assumptions can be made in selecting and solving the “infinite medium” problems to generate the  $f_g$ ’s. *Finally*, the direction variable,  $\Omega$ , can be dealt with through a discrete ordinate approximation [18]. The unit sphere is divided into segments, the surface areas of which sum to  $4\pi$ , and a direction vector  $\Omega_n$  is assigned to each segment. The segment surface areas act as weight functions when the transport equation is integrated over a segment to yield an equation for the neutron density going in the direction  $\Omega_n$ . There are various schemes for selecting ordinates and weights, the most widely known is the  $S_n$  method. All methods, however, can produce *ray effects* if “ $n$ ” is too small [19]. The channeling of neutrons into a few restricted directions can produce anomalous results in reactor designs with localized neutron source regions, that is, where fissile and fertile fuel predominate in different regions (commonly referred to as seed-blanket designs). For a “highly accurate” treatment, one should let  $n = 16$  in each octant, for a total of 128 ordinates. So for the “large PWR example,” the number of unknowns to be solved for in the discretized time-independent transport equation is  $170 \times 10^9 (=16.4 \times 10^6 \text{ (spatial mesh points)} \times 81 \text{ (energy groups)} \times 128 \text{ (ordinates)})$ . This is clearly a formidable calculational problem. If we view the analytic approach described here as transforming Eq. 55 into a matrix eigenvalue

equation, then the simplest solution method of matrix inversion would involve matrices of a billion by a billion. Hence, an iterative method is required [20]. Much effort in reactor *theory* has been devoted to this problem, and to simplifying the analytic approach. Iterative methods for solving matrix equations are beyond the scope of this entry, but to understand how fission reactor design is actually carried out, a description of analytic approach simplifications is needed.

The direction variable,  $\Omega$ , received the earliest attention. Because the neutron population in a reactor can be viewed as a dilute gas, it was natural to assume that the variation of the neutron density in space could be approximated by  $\nabla \cdot D(\mathbf{r}, E, t) \nabla v N(\mathbf{r}, E, t)$  (from Fick's Law of diffusion). When the transport equation, Eq. 51, is integrated over  $\Omega$  and the first term on the right-hand side is replaced by the Fick's Law expression, the result is the time-dependent neutron diffusion equation. Equation 55 can be treated analogously to yield the time-independent neutron diffusion equation. In either case, the limitations of the diffusion approximation only become apparent in trying to define the diffusion coefficient  $D(\mathbf{r}, E, t)$  (see Henry, Nuclear-Reactor Analysis). The most commonly used expression is

$$D(\mathbf{r}, E, t) \equiv 1 / \{3[\Sigma_t(\mathbf{r}, E, t) - \bar{\mu}_0 \Sigma_s(\mathbf{r}, E, t)]\}, \quad (60)$$

where  $\bar{\mu}_0$  is the average of the average cosine of the scattering angle (in the laboratory coordinate system) of each isotope making up  $\Sigma_s(\mathbf{r}, E, t)$ . This definition (Eq. 60) arises from a low-order spherical harmonics expansion of  $N(\mathbf{r}, E, \Omega, t)$  in the neutron transport equation. Spherical harmonics are a complete orthonormal set of special functions on the unit sphere defined by  $\Omega$  (the unit vector which is at angle  $\theta$  from the z axis and projects in the x-y plane at angle  $\phi$  from the x axis);

$$Y_l^m(\Omega) = H_l^m P_l^m(\mu) e^{im\phi} \quad \text{for } l = 0, 1, 2, 3, \dots \\ m = -l \leq m \leq l, \quad (61)$$

where  $H_l^m = \left[ \frac{(2l+1)(l-m)!}{4\pi(l+m)!dm} \right]^{1/2}$ ,  $P_l^m(\mu) = \sin^m(\mu) \frac{d^m}{d\mu^m} P_l(\mu)$  is the associated Legendre Polynomial,

$P_l(\mu) = \frac{1}{2^l l!} \frac{d^l}{d\mu^l} (\mu^2 - 1)^l$  is the Legendre Polynomial and  $\mu = \cos\theta$ . The spherical harmonics are normalized by the relationship:

$$\int_0^{2\pi} d\varphi \int_{-1}^1 d\mu \overline{Y_l^m(\mu, \varphi)} Y_{l'}^{m'}(\mu, \varphi) = \delta_{mm'} \delta_{ll'}, \quad (62)$$

where  $\overline{Y_l^m}$  is the complex conjugate of  $Y_l^m$  and the Kronecker deltas,  $\delta$ , are 1 for  $m = m'$  and  $l = l'$  and 0 otherwise.

The "low-order" spherical harmonics expansion, which yields the diffusion approximation, is for  $l = 0$  and 1 (also referred to as the P1 approximation). The four functions in the expansion are:

$$Y_0^0 = (1/4\pi)^{1/2}, Y_1^{-1} = (3/4\pi)^{1/2} \sin\theta e^{-i\varphi}, \\ Y_1^0 = (3/4\pi)^{1/2} \mu \text{ and } Y_1^1 = -(3/4\pi)^{1/2} \sin\theta e^{-i\varphi}. \quad (63)$$

In a Cartesian coordinate system, the expansion coefficients (for simplicity of notation the time-independent case will be treated) are  $N(x, y, z, E)$ , the neutron density and  $N_1^{-1}(x, y, z, E)$ ,  $N_1^1(x, y, z, E)$  and  $N_1^0(x, y, z, E)$ , which when multiplied by  $v$  (the speed corresponding to  $E$ ) are the neutron currents in the x, y, and z directions. Before applying the P1 expansion to Eq. 55, one needs to note that the double differential scattering cross section,  $\Sigma_s(E' \rightarrow E, \Omega' \rightarrow \Omega)$  in reactor applications (where neutron polarization and Bragg scattering can be ignored) depends on  $\Omega' \cdot \Omega$ . Then, given the addition theorem for spherical harmonics,

$$P_1(\Omega' \cdot \Omega) = \sum_{m=-l}^l \frac{(l-m)!}{(l+m)!} P_l^m(\mu) P_l^m(\mu') \times e^{im(\varphi-\varphi')}, \quad (64)$$

$\Sigma_s(\mathbf{r}, E' \rightarrow E, \Omega' \cdot \Omega)$  can be expanded in terms of associated Legendre polynomials. This is done in two steps: first the double differential scattering cross section is expressed as an expansion in ordinary Legendre polynomials (which are a complete orthogonal set of functions)

$$\begin{aligned}\Sigma_s(\mathbf{r}, E' \rightarrow E, \Omega' \cdot \Omega) &= \Sigma_s(\mathbf{r}, E) \sum_{l=0}^{\infty} \frac{(2l+1)}{4\pi} \\ F_1(\mathbf{r}, E' \rightarrow E) P_l(\Omega' \cdot \Omega),\end{aligned}\quad (65)$$

and then Eq. 64 is substituted for  $P_l(\Omega' \cdot \Omega)$ . (It should be remembered that  $\Sigma_s$  is a macroscopic cross section, and a more complete notation would show a sum over contributions from each isotope present in  $d^3r$  about  $\mathbf{r}$ .)

Now when the  $P_1$  expansion for  $N(x, y, z, E, \mu, \phi)$  is inserted in Eq. 55 and the resulting equation is, in turn, multiplied by the complex conjugate of each of the four spherical harmonics functions of the  $P_1$  expansion (Eq. 63), and integrated over  $\mu$  ( $-1 \rightarrow 1$ ) and  $\phi$  ( $0 \rightarrow 2\pi$ ), four equations result: The first is

$$\begin{aligned}& \frac{\partial}{\partial x} v N_1^{-1}(x, y, z, E) + \frac{\partial}{\partial y} v N_1^1(x, y, z, E) \\ & + \frac{\partial}{\partial z} v N_1^0(x, y, z, E) = -v \Sigma_T(x, y, z, E) N(x, y, z, E) \\ & + \int_0^{10\text{MeV}} dE' v' \Sigma_s(x, y, z, E') F_0(E' \rightarrow E) \\ & \times N(x, y, z, E') \\ & + (\text{the fission term in Eq. 55 with } N(\mathbf{r}, E', \Omega') \\ & \text{replaced with } N(x, y, z, E')).\end{aligned}\quad (66)$$

The remaining three equations are of the same form, one is provided here:

$$\begin{aligned}& \frac{1}{3} v \frac{\partial}{\partial z} N(x, y, z, E) + v \Sigma_T(x, y, z, E) N_1^0(x, y, z, E) \\ & = \int_0^{10\text{MeV}} dE' v' \Sigma_s(x, y, z, E') F_1(E' \rightarrow E) N_1^0(x, y, z, E')\end{aligned}\quad (67)$$

With these four coupled partial-differential-integral equations, there is still considerable computational complexity. To get to the standard neutron diffusion equation, one additional approximation is made:

$$F_1(E' \rightarrow E) \cong \delta(E' - E) \mu(E'), \quad (68)$$

where  $\mu(E')$  is the average cosine of the scattering angle in the laboratory coordinate system, and energy loss (or gain) in the non-isotropic component of scattering is ignored. Substituting Eq. 68 in Eq. 67, the relationship between  $N_1^0$  and  $N$  is a simple partial differential equation:

$$N_1^0(x, y, z, E) = -\frac{1}{3(\Sigma_T(x, y, z, E) - \mu(E)\Sigma_s(x, y, z, E))} \frac{\partial}{\partial z} N(x, y, z, E), \quad (69)$$

containing the diffusion coefficient  $D(r, E)$  (see the definition Eq. 60). Given the equations of the same form as Eq. 69 for  $N_1^1$  and  $N_1^{-1}$ , and substituting all three into the left-hand side of Eq. 66. The left-hand side becomes the standard Fick's Law expression:

$$-\nabla \cdot D(r, E) \nabla N(r, E) = \dots \quad (70)$$

As noted above, this derivation of the diffusion approximation reveals its limitations. The ability of some combination of four low-order spherical harmonic functions, Eq. 63, to describe the true angular distribution of the neutron density throughout a reactor will be limited to regions where the distribution is nearly isotropic, that is away from boundaries and highly absorbing features (control elements and fixed poisons). To address these limitations, special boundary conditions are used, and subsidiary calculations (to be discussed below) are made to provide "fitted" cross sections for highly absorbing features.

To make the diffusion approximation an efficient design tool, additional simplifications have been developed. The differencing of the energy variable as described above for "multigroups" can be extended to a "few group" approximation. Again, weight functions are generated using accurate solutions to small region "cell" problems, which model repeating features of a reactor. But here the weight functions are applied over much larger energy ranges, three or four to cover the energy range of 0 to 10 MeV. Furthermore, one

accepts the error associated with the weight functions not perfectly representing the spatial variation of neutron density energy dependence.

The use of “cell problem” auxiliary calculations can be extended. As the core, the central fuel bearing region, of most reactor designs is made up of collections of mostly fuel elements, and possibly some fixed poison and movable control elements, assembled into modules. One can perform highly accurate (e.g., Monte Carlo or multigroup, fine spatial mesh, discrete ordinate) calculations for two-dimensional (radial) repeating arrays representations of a core’s various modules. Then, for each module type, a series of corresponding few-group diffusion approximation calculations can be carried out, in which key few group cross sections are adjusted (“fitted”) to match reaction rates from the “highly accurate” reference calculation. One can then use these fitted cross sections in a full core three-dimensional few group diffusion calculation as part of the *principle design process*.

Of course, with depletion, as inventories of fuel, fission products, and poisons are updated, fitting calculations will have to be repeated. This approach is particularly suited to the design of thermal reactors, that is, PWRs and BWRs, where the proper treatment of epi-thermal and thermal neutrons, including the effects of self-shielding by fuel and poison inventories, is crucial.

In fast reactor design, where most fissions take place at energies above explicit resonances (liquid metals or gasses are coolants, and fissile and fertile densities and inventories are high (no effective moderators are present)) and the mean free path of fission neutrons is large ( $\sim 10$  cm.), the treatment of fuel, structure and coolant as an homogenized material, in formulating macroscopic cross sections, is a reasonable assumption. Treatment of the energy variable is also simpler as up-scattering is not important. As a result, multigroup, 3D discrete ordinate calculations can be used in the *principle design process* for fast reactors.

Finally, returning to thermal reactor design, there is another analytic calculational approach, which is in wide use, that should be mentioned. The general designation is Nodal Methods. There are a number of variations under this title [21], but

they all have as their starting point solving 2D module array problems. One needs to produce few group neutron distributions within each module. Each module (or depending on symmetry each half or quarter module) will be a “node.” Then coupling coefficients between nodes, both radially and axially, are generated. (It is predominately in defining coupling coefficients that the various “methods” differ.) The resulting nodal equations can be solved with modest computer resources, but, to obtain power distributions and to update inventories the full reactor neutron distribution must be constructed from the module solutions and the weights found for each node. Nodal Methods have been found to be particularly useful in applying the *primary nuclear design process* to evaluating refueling options for commercial (large scale) PWRs and BWRs, where partially depleted modules are relocated, “shuffled,” as new modules are added and fully depleted, “spent” modules removed during periodic refuelings. The computational economy of nodal methods also allows them to be applied to fully time-dependent problems, particularly for accident analyses. The nature of these problems will be discussed in the next section.

## Fission Reactor Performance

In the previous section, the focus was the derivation of the neutron transport equation, and how it is solved in carrying out the *primary nuclear design process*. This quasi-static process involves a series of time-independent calculations of the neutron density,  $N(r,E,\Omega)$ , and ultimately results in the configuration and inventories (loadings) that meet design requirements for lifetime (total energy production), and normal operation thermal performance (fuel element burn-up within limits and sufficient coolant flow provided by the design pumping power allocation). There are, however, additional design requirements that involve transients, that is,  $N(r,E,\Omega,t)$ , which will be the subject here.

The simplest approach to treating transient reactor behavior is through a “point” kinetics model. If one first multiplies the time-dependent

transport equation, Eq. 51, by a weight function,  $W(\mathbf{r}, E, \Omega)$ , and integrates over the reactor volume, energy (the full range,  $0 \rightarrow 10$  MeV), and direction ( $\cos \theta$  from  $-1$  to  $1$ ,  $\phi$  from  $0$  to  $2\pi$ ); and second, multiplies the time-dependent equation for each delayed neutron precursor, Eq. 52 for  $C_j(\mathbf{r}, t)$ , by  $W(\mathbf{r}, E, \Omega)X_{di}(E)$  and performs the same integration over reactor volume, energy, and direction, the results are the point kinetics equations :

$$\frac{dT(t)}{dt} - \frac{\rho - \beta}{\Lambda} T(t) + \sum_{l=1}^L \lambda_l C_l(t) + Q(t) \quad (71)$$

$$\begin{aligned} \frac{dC_j(t)}{dt} &= \frac{\beta_j}{\Lambda} T(t) - \lambda_j C_j(t) \text{ for } j \\ &= 1, 2, \dots I \end{aligned} \quad (72)$$

where  $T(t)$  is an amplitude function;

$$T(t) \equiv \int_{\text{reactor}} dV \int_0^{10\text{Mev}} dE \int d\Omega W(\mathbf{r}, E, \Omega) \quad (73)$$

$$N(\mathbf{r}, E, \Omega, t).$$

In formulating the expressions for the kinetics parameters,  $\rho(t)$ ,  $\beta(t)$ , and  $\Lambda(t)$ , it is convenient to factor the neutron density into a product of “shape” and amplitude functions. The shape function is;

$$S(\mathbf{r}, E, \Omega, t) \equiv N(\mathbf{r}, E, \Omega, t)/T(t). \quad (74)$$

Now the weight function is defined over the same domain (space, energy, and direction) as the neutron density, and thus from the definitions Eq. 73 and Eq. 74 the normalization of  $S$  and  $W$  follows:

$$\begin{aligned} \int_{\text{reactor}} dV \int_0^{10\text{Mev}} dE \int d\Omega W(\mathbf{r}, E, \Omega) S(\mathbf{r}, E, \Omega, t) \\ = 1 \text{ for all } t. \end{aligned} \quad (75)$$

In order for the point kinetics equations to provide accurate solutions for small changes in reactor

configuration, the weight function,  $W(\mathbf{r}, E, \Omega)$ , is chosen to be the solution the adjoint equation corresponding to the time-independent transport equation, Eq. 55, for the reactor of interest adjusted to be critical (i.e., the eigenvalue  $k = 1$ ). In the adjoint of Eq. 55, the variable pairs  $(E, \Omega)$  and  $(E', \Omega')$  are interchanged in the scattering and fission terms. The solution,  $N^*(\mathbf{r}, E, \Omega)$ , is referred to as the adjoint neutron density or the importance function. The latter name indicates the physical interpretation of  $N^*$ . If the reactor described by Eq. 55 is at zero power (no neutrons) and a neutron is inserted at  $\mathbf{r}$  with velocity  $v(E, \Omega)$ , the neutron level will increase to a steady-state value (remember the reactor is still critical). This “level” per neutron added at  $(\mathbf{r}, E, \Omega)$  is  $N^*(\mathbf{r}, E, \Omega)$ . How  $N^*$ , acting as a weight function, improves the point kinetics equations will be discussed after  $\rho$ ,  $\beta$ , and  $\Lambda$  are defined and their physical interpretation given. To simplify notation, the scattering and fission integral operators in Eq. 51 are represented by  $A$  and  $G$ :

$$A \equiv \int_0^\infty dE' \int d\Omega' v' \Sigma_S(\mathbf{r}, E' \rightarrow E, \Omega' \rightarrow \Omega) \bullet, \quad (76)$$

$$G \equiv \int_0^\infty dE' \int d\Omega' v' \sum_i v_i(E)' \Sigma_{fi}(\mathbf{r}, E') \bullet, \quad (77)$$

where  $v_i(E')$  is the total number of neutrons (prompt plus delayed) produced by fission of isotope  $i$  induced by a neutron with energy  $E'$ . In reactor kinetics, delayed neutron yields are expressed in terms of the ratio the number produced with a given half-life (i.e., a member of “delayed group,”  $j$ , as noted previously, see Table 4) by fission of isotope,  $i$ , to the total the total yield,  $v_i$ . These ratios are represented as  $\beta_j^i$ , where normally  $j = 1, 2, \dots, 6$ .

The parameter  $\rho(t)$  is the *reactivity* of a reactor and is a measure of how far from criticality (a steady-state chain reaction only from fission neutrons, no other neutron sources present) the reactor is at time  $t$ . This can be seen from the expression for  $\rho(t)$  that results from the derivation

of Eq. 71 from the transport equation (where the

functional dependencies on  $\mathbf{r}$ ,  $E$ ,  $\Omega$ , and  $t$  are understood for  $\Sigma_T$ ,  $W$ , and  $S$ ):

$$\rho(t) \times \equiv \frac{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega W \left[ -v\Omega \cdot \nabla S - v\Sigma_T S c_r + AS + \sum_i X^i(E) GS \right]}{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega W \sum_i X^i(E) GS}, \quad (78)$$

where  $X^i(E)$  is the total fission spectrum for isotope  $i$ :

$$X^i(E) \equiv X_p^i(E) \{1 - \beta^i\} + \sum_{j=1}^6 X_{dj}(E) \beta_j^i. \quad (79)$$

Now note, if both the numerator and denominator of Eq. 78 are multiplied by the amplitude function  $T(t)$ , and  $W$  is taken as 1, then the numerator is the total neutron production rate minus loss rate for the reactor. (When the first term in the bracket in the numerator is integrated, and Gauss' theorem is applied, it yields the total neutron leakage rate from the reactor.) Similarly, the denominator is the total neutron production rate. Reactivity is a dimensionless parameter whether or not  $W$  is unity. If it is zero, the reactor is critical, if negative, subcritical and if positive, supercritical.

$\beta_j$  in Eq. 72 is the *effective delayed neutron fraction* for the  $j$ th precursor group, and  $\beta$  in Eq. 71 is the sum of the  $\beta_j$ 's:

$$\beta_j \equiv \frac{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega W \sum_i X^i(E) \beta_j^i GS}{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega W \sum_i X^i(E) GS}. \quad (80)$$

As with the expression for reactivity, multiplying the numerator and denominator of Eq. 80 by

$T(t)$  and letting  $W = 1$ , one sees that in this case  $\beta_j$  is the fraction of total fission neutrons produced in the reactor by precursor group  $j$ .

The parameter  $\Lambda$  is the *prompt neutron lifetime* and is defined as:

$$\Lambda \equiv \frac{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega WS}{\int_{\text{reactor}} dV \int_0^\infty dE \int d\Omega W \sum_i X^i(E) GS}. \quad (81)$$

Again multiplying the numerator and denominator by  $T(t)$  and taking  $W = 1$ , one sees that  $\Lambda$  equals the number of neutrons in the reactor divided by the rate of neutron production by fission. If the reactor is critical, Eq. 81 has the same form as the “fundamental equation of radioactive decay,” Eq. 11, and  $\Lambda$  can be thought of as the “mean lifetime” of a neutron born into the reactor. In the point kinetics equations,  $\Lambda$  is the mean *prompt neutron lifetime, and the timing of the appearance of delayed neutrons is treated explicitly through the behavior of their precursor,  $C_j(t)$   $j = 1, 2, \dots, I$  (usually = 6).*

The derivation of the point kinetics equations directly from the time-dependent neutron transport equation has been presented here to provide perspective on approximations that are normally made to make the generation of the point kinetics parameters ( $\rho$ ,  $\beta$ , and  $\Lambda$ ) practical. If Eq. 51 and its auxiliary equations could be readily solved for  $N(\mathbf{r}, E, \Omega, t)$ , there would be no need for the point kinetics equations. As it turns out, however,

“practical” approximations follow from the approaches described in the previous section for solving the time-independent transport equation. Henry in *Nuclear-Reactor Analysis* derives the point kinetics equations starting with the diffusion approximation (with energy a continuous variable). One could just as well start with a few group diffusion approximation which would provide a shape function (a vector) and from the adjoint of the few group diffusion equation, a weight function (also a vector). The advantage of using an adjoint weight function, irrespective of the approximation to the transport equation one starts from, is in calculating reactivity,  $\rho(t)$ . In transients of interest in design,  $\rho(t)$  is the driver. It reflects changes in cross sections with time due to variations in temperature (coolant density, Doppler effects) and configuration (control rod motion). In whatever form Eq. 78 takes, given the neutron transport approximation used, if a changing cross section is represented as a starting value plus a time-varying small delta,  $\delta_\Sigma(\mathbf{r},E,t)$ , and the shape function is represented as a time-independent function (e.g., from the initial neutron density of the reactor, the same problem that generates the adjoint) plus a time-dependent small delta,  $\delta S(\mathbf{r},E,t)$ , then the resulting calculation of  $\rho(t)$  will to first order in deltas only depend on  $\delta_\Sigma(t)$ 's. Higher order terms can be ignored, and one does not need to calculate a time-dependent shape function. This is a classic perturbation problem. Henry (Chap. 7) provides a detailed derivation.

The time dependence of  $\beta_j(t)$  and  $\Lambda(t)$ , Eq. 80 and Eq. 81, as used in the point kinetics equations can be ignored in most applications. Measured values of  $\beta$  (and the  $\beta_j^i$  from which it is summed) can be used directly (Table 4). If adjoint weighting is used, the  $\beta$ 's will be a bit larger than the physical  $\beta$ 's in a thermal reactor due to the increased “importance” of delayed neutrons with their lower initial energies (relative to prompt neutrons). Prompt neutron lifetimes primarily depend on the reactor type; for thermal reactors they are on the order of  $\sim 10^{-3}$  s, and for fast reactors as short as  $10^{-7}$  s. They can be measured in zero power reactor mock-up experiments as ratios with  $\beta$  and  $\rho$ , or calculated directly from equation

Eq. 81 with the approximations for  $W$  and  $S$  used to obtain  $\rho$ . A highly accurate calculation of  $\Lambda$  can be made with a Monte Carlo simulation where neutrons are introduced from the prompt neutron energy spectrum with an  $S(t = 0)$  spatial distribution. Each history would be timed and terminated with neutron absorption (capture plus fission) or leakage. The “times” will yield the mean and standard deviation of the prompt neutron lifetime.

One further note on reactivity, if a perturbation of a critical reactor configuration can be viewed as nearly instantaneous, that is, a step change, then a good estimate of reactivity addition or subtraction can be found by solving the eigenvalue (time independent) problem for the perturbed reactor:

$$\rho = 1 - 1/k, \quad (82)$$

and if the initial reactor configuration is subcritical then the reactivity addition from a “step” perturbation can be found by performing two eigenvalue problems, the perturbed case as before, and one for the initial subcritical configuration (ignoring any nonfission source);

$$\rho = 1/k_0 - 1/k, \quad (83)$$

where  $k_0 (< 1)$  is the initial subcritical eigenvalue. As reactivity is a dimensionless ratio, it is often given as a percentage or in units of  $\beta$  (as defined by Eq. 80). In the latter case, the “units” are traditionally dollars and cents. If  $\rho$  equals  $\beta$ , the reactivity addition is 1 dollar; if  $\rho$  equals  $0.5\beta$  the reactivity addition is 50 cents. If a dollar of reactivity is added to a critical reactor, it is said to be prompt critical (critical on prompt neutrons alone) and delayed neutrons will not mitigate the resulting transient, a condition obviously to be avoided.

The motivation for the description of point kinetics provided here is best provided by Henry:

“Since mean free paths are fairly long and since the lifetimes of neutrons in a reactor are quite short, the effects of local perturbations on “ $N(\mathbf{r},E,\Omega,t)$ ” will quickly spread throughout a reactor. The immediate consequences of perturbing a reactor locally (for

example by changing a control rod slightly) is thus a readjustment of the shape of the “neutron density. In many cases this readjustment is slight and is completed in a few milliseconds; after that the readjusted shape rises or falls as a whole depending on whether the initial perturbation increases or decreases  $k_{\text{eff}}$ . For reactors in which transients proceed in this manner, merely being able to predict the change in *level* of the neutron density” is sufficient to permit a very accurate prediction of the consequences of perturbation”.


With today’s computer capabilities, solving point kinetics problems is not a great challenge, even with time-dependent reactivity reflecting feedback from power changes in the reactor. Henry and Duderstadt provide descriptions of applicable calculational methods (development of which inspired great ingenuity in the past). In any case, to quote Henry again, point kinetics solutions provide “very accurate predictions of the consequences of (reactor) perturbations.” Thus, their utility in assuring that a reactor design satisfies fundamental transient requirements. Under normal operating conditions, a reactor must be inherently stable, that is, self-limiting. Reactivity must be reduced with increased temperature; that is, with reduced coolant density, increased mean thermal neutron energy, and Doppler broadening of resonance cross sections. These phenomena are dependent on reactor type. Clearly change in thermal neutron spectra is unimportant in a fast reactor. However, if coolant density decrease results in voiding, reactivity will dramatically decrease in a thermal reactor, but in a liquid metal cooled fast reactor increased leakage must outweigh a higher energy neutron spectrum (and an increased fission to capture ratio in fuel) to assure a negative reactivity effect. Also movement of control rods must reduce reactivity when reactor shutdown is desired. Some movable poisons, power shimming control rods, could be included in a design to flatten (make more uniform) the power distribution throughout life. (Power flattening can reduce coolant pumping power requirements. As coolant flow must meet the heat removal needs of the hottest region of the reactor, minimizing excess flow to cooler regions increases overall power plant efficiency.) But, one must assure that the operating strategy for

using such rods does not compromise the speed of reactor shutdown when it is required to deal with an accident condition.

Point kinetics models can also aid in assessing *Xenon override* requirements for thermal reactors.  $\text{Xe}^{135}$  with its extremely large thermal neutron capture cross section ( $\sigma_c = 2.7 \times 10^6 \text{ b}$  at  $E = 0.023 \text{ eV}$ , for comparison  $\sigma_f \text{ U}^{235} = 577 \text{ b}$  at  $0.023 \text{ eV}$ ) is the most important fission product poison. It is produced directly from fission and by decay of its precursor  $\text{I}^{135}$  (which is a direct fission product and has short-lived precursors,  $\text{Sb}^{135} \rightarrow \text{Te}^{135} \rightarrow \text{I}^{135}$ ). Both  $\text{Xe}^{135}$  and  $\text{I}^{135}$  have half-lives measured in hours ( $T_{1/2} \text{ Xe}^c = 9.14 \text{ h}$ ,  $T_{1/2} \text{ I} = 6.58 \text{ h}$ ). So, a point kinetics reactor model will show that when a reactor is started up,  $\text{Xe}^{135}$  and  $\text{I}^{135}$  build up to equilibrium levels in about 30 h. Their levels, inventories, will depend on power level, that is, neutron density, and the reactor design must have enough excess reactivity (e.g., control rods that can be withdrawn, or for a PWR, a soluble poison in the coolant whose concentration can be reduced) to “override” the negative reactivity perturbation of neutron capture by  $\text{Xe}^{135}$  (iodine neutron capture can be ignored). In addition, when a thermal reactor is shut down,  $\text{Xe}^{135}$  builds up as loss by neutron absorption stops and decay of  $\text{I}^{135}$  continues. The  $\text{Xe}^{135}$  inventory peaks in about 10 h to approximately three times its equilibrium level and subsequently decays. It is back to its equilibrium level in  $\sim 40 \text{ h}$  (see Fig. 8).

Clearly additional “excess reactivity” is required to deal with a post-shutdown Xenon transient. Eventually, not being able to provide (and control) this excess reactivity can limit the useful lifetime of a thermal reactor design. As a historical aside, it was John Wheeler [3] who recognized the role that  $\text{Xe}^{135}$  and  $\text{I}^{135}$  could play in the operation of a thermal reactor. He explained the initial difficulties in operating the first plutonium production reactor at the Hanford Washington site.

While point kinetics can deal with most reactor design transient requirements, there are instances where significant spatial effects must be accounted for. In the normal operation of a large thermal reactor, there is the potential for

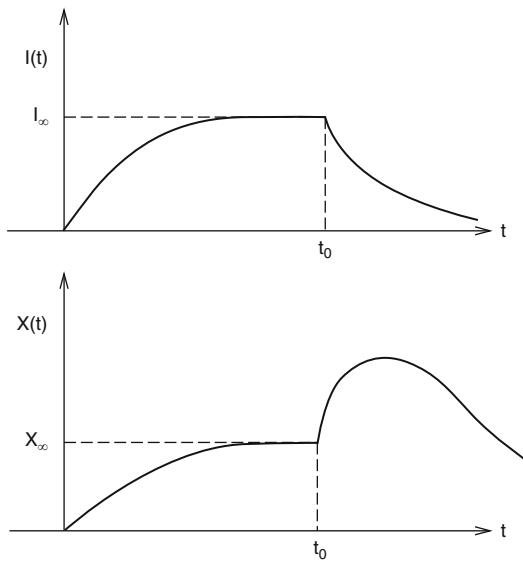

**Fission Reactor Physics, Fig. 8** Schematic of  $I^{135}$  and  $Xe^{135}$  inventories following an initial reactor start-up and subsequent shutdown after equilibrium levels have been reached (i.e., at  $t_0$ ). (Duderstadt)

spatial oscillations of Xenon concentrations, and therefore neutron density and power. These oscillations may not affect criticality and might only be observed by the reactor instrumentation system's ability to measure power distributions in core. The period of these oscillations would be many hours and thus limits on coolant channel performance and fuel temperature could be compromised for extended time intervals. Space-time calculations of neutron density have to be carried out to determine if a particular design has a propensity for these oscillations. If the design is not inherently stable, its instrumentation must provide detection and an operating strategy must be devised to suppress any oscillation initiation. With modern computing capability, few group diffusion approximations to the time-dependent transport equation, Eq. 51 (with explicit spatial mesh or nodal methods), can deal with Xenon oscillation evaluations [22].

There are certain reactor plant accident scenarios, which also require space-time calculations. To deal with these, nodal methods, as described in section “Neutron Distributions,” have been

incorporated in safety analysis programs (see for example [23]), which model a full power plant; the reactor, its neutronics, fluid mechanics and structural integrity; and the balance of the plant, instrumentation, coolant/working fluid to power conversion, and safety systems (containment, emergency coolant injection and power supply). There are two classes of accidents where space-time effects in the reactor are important. First is “rod ejection,” where a single control rod or group of control rods is rapidly withdrawn with a large reactivity addition and neutron distribution change, in no way a small perturbation in the point kinetics sense. Second is a “cold water accident” applicable to a PWR. In this case, in a plant with multiple piping “loops” carrying coolant to the reactor, if one of the loops is not functioning so that water in the loop has cooled below the normal inlet temperature of the reactor, and the loop is reactivated (its pump turned on and isolation valves (if any) opened), while the reactor is critical, there can be large asymmetric reactivity insertion, again, this is not a small perturbation problem.

Finally, there is an additional aspect of reactor neutron time variation, which has interesting Physics. The transport equation, derived in section “Neutron Distributions,” is for the *mean* neutron density,  $N(\mathbf{r}, E, \Omega, t)$ , but clearly as neutron interactions and production, and fission product decay are inherently probabilistic, there are fluctuations in the neutron population in a reactor (and as there are in delayed neutron precursor populations). These fluctuations were recognized early on in the Manhattan Project and are also referred to as neutron noise [24]. There are several approaches to modeling of the phenomena. The most fundamental is based on the derivation of the neutron transport equation from the quantum Liouville equation (Osborn and Yip [25]). This derivation is extended to produce an equation for the neutron doublet density,  $N^{NN}(\mathbf{r}, E, \Omega, \mathbf{r}', E', \Omega', t)$ , the expected number of neutrons in  $d^3r$  about  $\mathbf{r}$ , with energies in  $dE$  about  $E$ , going in the solid angle  $d\Omega$  about  $\Omega$  times the expected number in  $d^3r'$  about  $\mathbf{r}'$ , and so on for  $E'$  and  $\Omega'$ , where as in the transport equation neutron-neutron collisions are ignored. Additional equations for neutron-

precursor and precursor-precursor doublet densities are produced to complete the set of equations needed to solve for  $N^{NN}$ . One also needs equations for the “mean” (in Osborn’s nomenclature, singlet) neutron and precursor densities, which were derived in section “[Neutron Distributions](#)” (Eq. 51 and Eq. 52). Being able to solve for  $N^{NN}$  is, however, not sufficient to predict the results of neutron “noise” experiments in a reactor. Equations for doublet and singlet densities for events (D) in detectors (e.g., pulse or continuous currents in an ionization chamber) are also needed. With  $N^{DD}$  and  $N^D$  one can predict variance to mean ratios of counts or the power spectral density of the current in a single detector, and the cross power spectral density of currents in two detectors [26]. These experiments are usually performed in a reactor in a steady-state condition (in the mean of course) at zero power, critical or slightly subcritical, to obtain estimates of point kinetics parameters. These experiments have the advantage of verifying expected kinetic performance without putting the reactor into a transient. They are performed at low neutron levels because as power is increased fluctuations become negligible relative to the mean. Detector noise measurements (psd and cpsd) are sometimes made at power in operating reactors to monitor for unplanned mechanical motion, or loose parts. Modeling for these measurements is deterministic.

Fluctuations in neutron populations must be considered in developing initial start-up procedures for a newly constructed reactor (In a reactor design which incorporates fuel (including fission products and transuramics) from a previously operated reactor, natural source levels will most likely be high enough to allow “fluctuations” to be ignored.). The mean neutron density before start-up depends on an external source of neutrons,  $S(r,E)$  (not from neutron reactions, Eq. 50) which, as part of the design, could be adjacent or internal to the reactor. At start-up, the reactor is subcritical ( $k < 1$ ) and the mean neutron population, in a point reactor sense, is  $N = \Lambda S (k/(1-k))$ . In outline, the steps to bring the reactor critical are to pull control rods up (down in most BWR designs) from their fully inserted position so as to insert some precalculated amount of

reactivity and then wait for a new steady neutron level to be achieved. The subcritical neutron level is monitored by the reactor’s source range detectors. A power reactor is instrumented with detectors for the full range of expected neutron levels. These pull-and-wait steps are repeated until the reactor is slightly super critical, and thus the neutron level is observed to be on a continuously increasing, but easily controlled, trajectory. A pull-and-wait procedure needs to account for neutron level fluctuations because if the observed level, due to a minimizing fluctuation, is below the expected (mean) level when the reactor is actually close to its critical configuration, then the next “pull” might produce an unacceptable rapidly increasing trajectory [27]. The simplest way to avert a problem with a pull-and-wait procedure is to assure that the sources provided in the design (In a reactor design which incorporates fuel (including fission products and transuramics) from a previously operated reactor, natural source levels will most likely be high enough to allow “fluctuations” to be ignored.) are strong enough to render subcritical neutron fluctuations negligible. Of course, one has to understand neutron level fluctuations to make this assessment [28].

## Future Directions

Fission reactor development, since its inception, has progressed with advances in computing capability. Early on, analog computers were used for transient analyses, but digital computers have been the primary tool. Design codes have been adapted to advancing digital technology; scalar processing, then vector processing and now massively parallel processing. This is an active field today and should continue to be so, particularly as the drivers for improve computer technology are universal. In section “[Neutron Distributions](#)” the two approaches to solving the neutron transport equation, Monte Carlo simulation and analytic methods (differencing variables and solving the resulting matrix equations) were described. Parallel computing would appear to be well suited to Monte Carlo as independent histories can be run

on the various (1,000 s of) processors simultaneously. There is, of course, the need to provide the reactor configuration (geometry, nuclide inventories, and cross sections) and the Monte Carlo code itself to each processor that runs a history. This challenge is being accepted with considerable success as exemplified by the accomplishments of the Los Alamos National Laboratory group working on the MCNP code [15] and the joint effort at the Knolls and Bettis Atomic Power Laboratories on the MC21 code [29]. Advocates of the analytic approach have, however, not accepted the ultimate triumph of Monte Carlo. This is clear in the work of a group at the Argonne National Laboratory, which has modestly named their multigroup, discrete ordinate code UNIC, for Ultimate Neutronic Investigation Code [30]. They are demonstrating impressive results for fast reactor designs. Competition in supercomputer development and in attendant codes for nuclear reactor design bodes well for better products in the future.

Physicists in their efforts to understand the atomic nucleus have made myriad measurements and only partially by design these have included the neutron and gamma cross sections, and fission product yields (and their decay mechanisms) needed for the development of fission reactors. Today, work on this reactor-related data is focused on establishing well-founded uncertainty measures. The Cross Section Evaluation Working Group of the National Nuclear Data Center refers to this effort as covariance evaluation [31]. This is particularly appropriate, for as discussed above, one expects calculational methods to improve with computer power and code development. Thus, in assigning error bounds in design, the uncertainty in basic data will become more important relative to the contribution of calculational error (e.g., Monte Carlo statistics or differencing and convergence error in analytic methods). More well-founded and hopefully smaller design error bounds can obviously be taken advantage of in future reactor development. Improving error bounds is also consistent with the approach to overall power plant safety analysis being fostered by many of the world's nuclear regulatory agencies. They favor best estimate analyses plus the

assignment of rigorously defined uncertainty factors for various classes of accident conditions. Reactor design error is only a contributor to a safety analysis "uncertainty factor," but for power plant technology to advance, "reactor design" must do its part.

Much of the research for a next generation of fission reactor power plants is focused on higher operating temperatures. Today's thermal reactor plants, PWRs, BWRs, and CANDU (heavy water moderated) have outlet reactor coolant temperatures,  $T_H$ , of  $\sim 600$  °F, and thus thermal (Rankine cycle) efficiencies in the low 30%. Raising  $T_H$  would increase cycle efficiency and lower fuel cost, and provide high-temperature process heat (possibly for a catalytic hydrogen production process). Higher operating temperatures in a water (or heavy water) environment present core and structural materials challenges. There likely will be a need for additional resonance cross-section data for some additives (e.g., Manganese and Chrome) to new high-temperature materials. Fast reactors (liquid metal or gas cooled) operate at much higher temperatures than thermal reactors but also require much higher fissile inventories to attain criticality. Experience with design and operation of these reactors is limited (especially for gas cooled reactors) compared to thermal reactors. Their future development with emphasis on the burning of unwanted transuranics as well their traditional mission of efficient conversion of fertile isotopes ( $U^{238}$  and  $Th^{232}$ ) to fissile isotopes ( $Pu^{239}$ ,  $Pu^{241}$  and  $U^{233}$ ) will stimulate some cross-section work. But, both thermal and fast reactor development will most likely benefit more from advances in branches of physics other than Nuclear, particularly Condensed Matter and Fluid Mechanics. The need for nuclear power, both economic and environmental (if they can be separated?), will drive fission reactor development. While Uranium and Thorium are abundant in the earth's crust, power demand will push reactor development to most efficiently exploit the highest grade ores, which will likely lead to a mix of fast and thermal reactors. In any case, physics as well as engineering will play key roles in this development.

## Bibliography

### Primary Literature

1. Wheeler JA (1967) Mechanism of fission. *Phys Today* 20(11):49–52
2. Bohr N, Wheeler JA (1939) The mechanism of nuclear fission. *Phys Rev* 56:426
3. Ford KW (2009) Wheeler's work on particles, nuclei, and weapons. *Phys Today* 62(4):29
4. Fermi E, Szilard L (1955) Neutronic reactor. US Patent 2,708,656, 17 May 1955
5. Einstein A (1905) On the electrodynamics of moving bodies. *Ann Phys* 17:891–921
6. Frankel S, Metropolis N (1947) Calculations in the liquid-drop model of fission. *Phys Rev* 72:914
7. Kinsey R (1979) Compiler “ENDF/B Summary Doc.” BNL-NCS-17541(ENDF-201), 3rd edn. ENDF/B-V, Brookhaven National Laboratory, Upton
8. England TR, Wilson WB, Stamatelatos MG (1976) Fission product data for thermal reactors. EPRI-NP-356, Los Alamos Scientific Lab., New Mexico
9. Parks DE, Nelkin MS, Wikner NF, Beyster JR (1970) Slow neutron scattering and thermalization with reactor applications. Benjamin, New York
10. MacFarlane RE (1994) The NJOY nuclear data processing system, Version 91, report #LA-12740-M. Los Alamos National Laboratory, New Mexico
11. Breit G, Wigner E (1936) Capture of slow neutrons. *Phys Rev* 49:519
12. Beckerts KH, Wirtz K (1964) Neutron physics. Springer, Berlin
13. Larson NM (2006) Updated user's guide for SAMMY: multilevel R-matrix fits to neutron data using Bayes's equations, ORNL/TM-9179/R7. Oak Ridge National Lab, OakRidge
14. Spanier J, Gelbard EM (1969, 2008) Monte carlo principles and neutron transport problems. Dover/Addison-Wesley, New York/Reading
15. X-5 Monte Carlo Team (2003) MCNP – A general Monte Carlo N-Particle transport code, Version 5, LA-UR-03-1987. Los Alamos National Laboratory, New Mexico
16. Ondis LA II, Tyburski LJ, Moskowitz BS (2000) RCP01 – a Monte Carlo program for solving neutron and photon transport problems in three dimensional geometry with detailed energy description and depletion capability, B-TM-1638. Bettis Atomic Power Laboratory, West Mifflin
17. TOP 500 Super Computing Sites. [www.Top500.org](http://www.Top500.org)
18. Lathrop KA (1972) Discrete-ordinates methods for the numerical solution of the transport equation. *Reactor Technol* 15:107
19. Lathrop KA (1971) Remedies for ray effects. *Nucl Sci Eng* 45(3):355–368
20. Varga RS (2000) Matrix iterative analysis, 2 revised and expandedth edn. Springer, Heidelberg
21. Henry A, Dias A, Frances W, Parlos A, Tanker E, Tanker Z (1986) Continued development of nodal methods for nuclear reactor analysis, MIT EL 86–002. Massachusetts Institute of Technology, Cambridge
22. Buslik AJ, Weinreich WA (1967) Variational calculation of complex natural modes of xenon oscillation, WAPD -TM-673 (LWB-LSBR Development Program). Bettis Atomic Power Laboratory, West Mifflin
23. Idaho National Laboratory (2009) RELAP5-D. [www.INL.gov](http://www.INL.gov)
24. Thie JA (1963) Reactor noise (an AEC monograph). Rowman and Littlefield, New York
25. Osborn RK, Yip S (1966) Foundations of neutron transport theory, Monograph series on nuclear technology. Gordon and Breach, New York
26. Natelson M, Osborn RK, Shure S (1966) Space and energy effects in reactor fluctuation experiments. *J Nucl Energy Parts A/B* 20(7):557–585
27. Hurwitz H Jr, MacMillan DB, Smith JH, Storm ML (1963) Kinetics of low source reactor startups, part I and II. *Nucl Sci Eng* 15:166
28. Clark WG, Harris DR, Natelson M, Walter JF (1968) Variances and covariances of neutron and precursor populations in time-varying reactors. *Nucl Sci Eng* 31:440–457
29. Sutton TM et al, Knolls Atomic Power Lab., Griesheimer DP et al, Bettis Atomic Power Lab (2007) The MC21 Monte Carlo Code, LM-06K144, Proceedings (on CD-ROM) of the joint international topical meeting on M&C and supercomputing applications, Monterey
30. Palmiotti G et al, Argonne National Lab (2007) UNIC Ultimate Neutronic Investigation Code, Proceeding (on CD-ROM) of the joint international topical meeting on M&C and supercomputing applications, Monterey
31. Herman M et al (2008) Covariance evaluation methodology for neutron cross sections, BNL-81525-2008. Brookhaven National Lab, Upton
32. Belle J, Berman RM (eds) (1984) Chapter 2, Natelson M, Nuclear properties of the thorium fuel cycle. In: Thorium dioxide: properties and nuclear applications. Naval Reactors Office, U. S. Department of Energy, Govt. Printing Office, Washington, DC
33. Katcoff S (1958) Fission-Product yields from U, Th and Pu. *Nucleonics* 16(4):78

### Books and Reviews

- Duderstadt JJ, Hamilton LJ (1976) Nuclear reactor analysis. Wiley, New York
- Evans RD (1955) The atomic nucleus. McGraw-Hill, New York
- Henry AF (1975) Nuclear-reactor analysis. MIT Press, Cambridge
- Kaplan I (1962) Nuclear physics, 2nd edn. Addison-Wesley, Reading
- Krane KS (1988) Introductory nuclear physics. Wiley, New York
- Mermin ND (2005) It's about time, understanding Einstein's relativity. Princeton University Press, Princeton



## Nuclear Fission Power Plants

Ronald Allen Knief

Sandia National Laboratories, Albuquerque, NM,  
USA

### Article Outline

#### Glossary

Definition of the Subject

Introduction

Principles for Design and Operation

Reactor Systems

Operation, Maintenance, and Control Practices

Nuclear Reactor Safety Features

Nuclear-Power Regulation

Advanced Reactors

Future Directions

Bibliography

### Glossary

**Blanket** Region surrounding the fuel core of a breeder reactor that contains fertile material to increase production of new fuel.

**Brayton cycle** Method used to transfer fission heat energy to gas (e.g., helium or superheated carbon dioxide) for use in a gas turbine to generate electricity.

**Breeder** Reactor that produces new fuel from fertile material at a faster rate than it burns fuel for energy production.

**Converter** Reactor that produces less new fuel from fertile material than it burns for energy production.

**Coolant** Liquid or gaseous medium used to remove fission heat from a reactor core.

**Core** Region within a reactor occupied by the nuclear fuel that supports the fission chain reaction.

**Critical** Condition where a fission chain reaction is stable with neutron production balancing losses at a nonzero power level.

**Electron volt (eV)** 1 eV is the kinetic energy obtained by an electron moving across 1 V of electric potential  $1 \text{ eV} = 1.602 \times 10^{-19} \text{ J}$ . Common multiples are  $1 \text{ keV} = 1,000 \text{ eV}$  and  $1 \text{ MeV} = 10^6 \text{ eV}$ . Neutron energies from less than an eV through about 10 MeV are important in nuclear fission power plants.

**Fast neutrons** Neutrons of high energy, particularly those produced directly by the fission reaction ( $\sim 0.1\text{--}10 \text{ MeV}$ ).

**Fertile** Material, not itself fissile, capable of being converted to fissile material following absorption of a neutron.

**Fissile** Material capable of sustaining a fission chain reaction.

**Fission** Process in which a heavy-metal nucleus splits into two or more large fragments, releases energy, and emits neutrons and gamma radiation.

**Fissionable** Nuclei capable of fission by neutrons and of participation in a fission chain reaction (category includes fissile nuclides).

**Isotopes** Different nuclides of the same chemical element, e.g.,  $^{235}\text{U}$  and  $^{238}\text{U}$  are two of the isotopes of uranium.

**Moderator** Material of low atomic mass included in a reactor for the purpose of reducing the kinetic energy of neutrons.

**Multiplication factor** Ratio of neutron production rate to neutron loss rate value is unity for a critical system.

**Nuclide** Atomic nucleus with a specified number of neutrons and protons, e.g., the  $^{235}\text{U}$  nuclide has atomic mass number 235, 92 protons (atomic number), and  $235 - 92 = 143$  neutrons.

**Reactivity** Fractional change in neutron multiplication referenced to the critical condition value is zero for a critical system.

**Reactor** Combination of fissile and other materials in a geometric arrangement designed to support a neutron chain reaction.

**Steam cycle** Method used to convert fission heat energy to steam that drives a turbo-generator, thus, generating electricity.

**Thermal neutrons** Low-energy neutrons at or near thermal equilibrium with their surroundings produced by slowing down or moderating the fast neutrons produced by fission (Equilibrium thermal energy, e.g., is 0.25-eV at 20 °C).

## Definition of the Subject

Nuclear fission power plants – or nuclear power reactors – are the instruments for commercial use of nuclear energy, relying on a sustained neutron chain reaction from the fission process. Nuclear fission – splitting of heavy-metal nuclei, most importantly  $^{235}\text{U}$  and  $^{239}\text{Pu}$  – produces an enormous amount of energy.

Fission was discovered in 1938 on the eve of World War II. The magnitude of the energy release was recognized immediately. However, it was not until after the attack on Pearl Harbor in late 1941 that the USA began serious efforts to develop this energy source for military purposes. Germany conducted research along these same lines but ultimately was unsuccessful in development efforts.

The USA's ensuing “Manhattan Project” [1] included monumental basic research, development of nuclear reactors for research and nuclear-material production, design of nuclear explosives, and ultimately testing of a nuclear explosive device and development of the two nuclear weapons credited with ending the war. Post war, the next use of nuclear energy was for propulsion in submarines, first by the USA and then by other countries. Subsequently, nuclear propulsion has been extended to surface vessels as well. About 85% of the world’s nuclear electricity is generated by reactors derived from designs originally developed for naval use [2].

Nuclear power for nonmilitary, peaceful uses began in earnest in 1956 with the startup of the world’s first full-scale nuclear electric generating plant at Calder Hall in England, followed in the USA a year later by the initial operation of a 60-MW unit at Shippingport, Pennsylvania [3]. By the middle of the 1960s, there was a

growing optimism on the part of US utilities toward nuclear power as well as substantial activity worldwide. Electric generation using nuclear steam-supply systems was economically competitive with fossil-fuel fired plants. The passage in mid-1964 of a US law providing for private ownership of nuclear fuel was hailed as paving the way for an independent nuclear power industry.

By 1970, the combined capacity of US nuclear plants in service, under construction, and on order was over 64 GW, more than twice the total for all other nations combined. Widespread enthusiasm for nuclear power had reached its high-water mark.

Subsequently, nuclear technology suffered “growing pains.” High interest rates affected the capital-cost-intensive reactors. Then in 1979 came the accident at Three Mile Island. As a result of the accident – and that at Chernobyl in 1986 – over 100 orders for new reactors were cancelled and no new orders were placed in the ensuing three decades [4].

Despite residual public misgivings over Three Mile Island and Chernobyl, the industry learned its lessons and established a solid safety record during the ensuing quarter century. Efficiency and reliability of nuclear plants climbed to record levels [5].

Plants from 1970s and 1980s that are still operating are producing more electricity. Uprating and availability increases, e.g., from 2000 to 2006 were equivalent to 30 new large reactors. US capacity factors have been over 90% in 5 of the 7 years through 2013. The refueling and routine maintenance activities that used to take on average over 100 days, in the last decade averaged about 40 days.

By 2010, 104 nuclear reactors were producing a fifth of the USA’s total electric output. The US accounts for nearly one third of the world’s nuclear electricity [7].

Globally, nuclear power has supplied a sixth of the world’s electricity. Along with hydropower (supplying slightly more than a sixth), it was the major source of “carbon-free” energy [4]. Nuclear accounted for 73% of US emission-free generation and was the only “technologically mature, non-emitting source of power” positioned to deliver near-term large-scale CO<sub>2</sub> reduction long-term [6].

Growing concern about global warming – and the associated likelihood that greenhouse gas emissions would be regulated in some fashion – led power providers in the USA and elsewhere, and their governments [4], to recognize that nuclear reactors produce electricity without atmospheric discharge of carbon dioxide, pollutants such as nitrogen oxides, and smog-causing sulfur compounds [5]. With the world demand for energy then projected to rise by about 50% by 2030 and to nearly double by 2050, building nuclear power plants appeared to be increasingly viable and attractive.

Just as prospects for a nuclear renaissance seemed good, earthquakes and tsunamis struck Japan and led to the destruction of four Fukushima Dai-ichi reactors and direct decommissioning of their two undamaged neighbors at the same site. The rest of Japan's reactor fleet eventually shutdown – either at the time of the accident or when the next refueling came due [7].

By mid 2016 – 5 years later – as Fukushima-area evacuees were gradually allowed to return to their homes, Japan had authorized four units to be brought back online. Many of the other 40 “operable” reactor units are well advanced in the regulatory approval process but subject to legal challenges by small numbers of antinuclear citizens.

Outside Japan, Fukushima had a huge impact on the nuclear sector. Germany has been instituting a phase-out. Some other European countries have long-term closure policies. In the USA, UK, and Canada, public support for nuclear dropped initially, new construction was delayed, but projects again became active.

In most other countries, the accident has had some impact on nuclear programs, but progress is much as before, albeit more slowly. Notably, the nuclear programs in both China and India are still strong, but it will take longer than expected to reach their target nuclear shares of electricity [7].

Among energy alternatives, the fossil-fuels have their own drawbacks. Oil supplies are shrinking, and their use can have unwanted political consequences [3]. Natural gas – attractive because it has the lowest carbon content of the fossil fuels

and advanced power plants have low capital costs – has electricity costs which are very price-sensitive and can be volatile. Although abundant, coal is difficult to recover, deliver, and burn [3, 4]. As the most carbon-intensive source of electricity, coal's long-term viability will depend on capture and sequestration of carbon dioxide – which is both costly and yet to be demonstrated and introduced on a large scale [4].

Solar, wind, and the less developed geothermal and tidal power, while attractive, cannot be expected to supply energy in the vast amounts required in the immediate future. Conservation and tight management of energy consumption are necessary, but not sufficient, parts of the equation [3].

With the future uncertain, energy realists see nuclear power as indispensable for electric generation well past the mid-twenty-first century. It can fill uniquely a gap in the spectrum of electricity generation methods.

Designers are adopting novel approaches for new nuclear systems. They are evaluating systems in terms of their sustainability – meeting present needs without jeopardizing the future generations. “It is a strategy that helps to illuminate the relation between energy supplies and the needs of the environment and society. This emphasis on sustainability can lead to the development of nuclear energy-derived products besides electric power, such as hydrogen fuel for transportation. It also promotes the exploration of alternative reactor designs and nuclear fuel-recycling processes that could yield significant reductions in waste while recovering more of the energy contained in uranium” [5].

There are indications of a possible nuclear revival. More than 20,000 MW of nuclear capacity have come on-line globally in the early years of the twenty-first century, mostly in the Far East. Nuclear plants have demonstrated remarkable reliability and efficiency recently. The world's ample supply of uranium could fuel a much larger fleet of reactors than exists today throughout their 40- to 50-year life span [4]. The nuclear power industry has been developing and improving reactor technology for more than five decades and is

starting to build the next generation of nuclear power reactors to fill orders now materializing [2].

The first firm order for new reactors in the USA was placed in 2009. Seven more are considered firmly “forthcoming” [8]. The Japanese government rightly recognizes that nuclear should return to forming an important element of its energy strategy, particularly on grounds of security of supply and the environment [7]. As of mid-2016, 65 reactors were under construction around the world – the highest level since the 1980s – evidence the industry looks and is healthy. Nuclear has also gained traction in many of the International Atomic Energy Agency (IAEA)-designated list of “prospective nuclear countries.” (See, e.g., entries in Table 2 for countries with “forthcoming” units, but which do not yet have operating reactors.)

The potential expansion of nuclear highlighted in reports by the IEA and other bodies, with (optimistically) hundreds of new reactors by 2050 – 50% by 2030 and to nearly double by 2050 [4] – is still a long way off. The degree of required investment calculated recently by the EU Commission, merely to maintain nuclear at close to its current market share, is daunting. The industry hopes that once governments recognize that current renewable power technologies cannot achieve the carbon reduction targets they have endorsed at the Paris climate talks, they will return to nuclear.

It may well be that small modular reactors (SMRs) will prove to have a lot of virtues above today’s current large light water reactors. It is essential that before they become widely available, the public have a much better understanding of radiation with the constraints of the current regulatory regime removed.

Wide-scale deployment of nuclear power technology would still seem to offer substantial advantages over other energy sources. However, there also are challenging questions to be addressed regarding the best way to make it fit into the future. These include achievement of economic viability, improved operating safety, efficient waste management and resource utilization, as well as weapons nonproliferation, all of which are influenced by the design of the nuclear

reactor system that is chosen and the fuel cycle followed [4, 5].

Ultimately, the industry can emphasize very unique characteristics of nuclear power, especially for replacing coal [9].

In electricity demand, the need for low-cost continuous, reliable supply can be distinguished from peak demand occurring over few hours daily and able to command higher prices. Supply needs to match demand instantly and reliably over time.

There are a number of characteristics of nuclear power which make it particularly valuable apart from its actual generation cost per unit – MWh or kWh. Fuel is a low proportion of power cost, giving power price stability, its fuel is on site (not depending on continuous delivery). The power is dispatchable on demand, it has fairly quick ramp-up, it contributes to clean air and low-CO<sub>2</sub> objectives, it gives good voltage support for grid stability. These attributes are mostly not monetised in merchant markets, but have great value which is increasingly recognised where dependence on intermittent sources has grown.

## Introduction

The current nuclear power reactors produce electricity using a steam cycle in much the same way as conventional fossil-fuel power plants. However, special design and operating features are required to address the unique characteristics of the fission-energy source and its associated radiation environment. A wide variety of reactor concepts have been developed to this purpose [10]. (The other major nuclear reaction for energy production, *fusion*, offers the prospect as a future energy source. See chapter ▶ “Nuclear Fusion.”)

## Fission

Fission reactions occur when a neutron strikes a nucleus of specific heavy-metal isotopes of uranium and plutonium – most notably <sup>235</sup>U or <sup>239</sup>Pu – and causes splitting into two or more fission fragments, emits additional neutrons and other radiations, and releases a relatively large amount of energy. The energy release from a single fission is between five and six orders of magnitude greater than that from a single chemical reaction (e.g., combustion of carbon and

oxygen). This large amount of energy per unit mass of fuel is a major advantage of fission as an energy source. The emission of extra neutrons is a necessary feature to support a sustained chain reaction with steady or accelerated energy release.

The fission reaction also has unique problems in the form of particulate and electromagnetic radiations emitted at the time of fission and from the long-lingering radioactivity (i.e., emission of radiations over time) of the fission fragments and their products. Protection against the effects of these radiations requires shielding and removal of the associated heat.

The fission process produces several hundred different fission fragments, each of which is radioactive and undergoes successive decays prior to reaching stability. Each species has a different characteristic lifetime, described in terms of its unique *half-life* – the average time required for one half of a mass of the radioactive material to decay. The resulting overall radiation levels are substantial, having an energy equivalent to about 7.5% of the total fission output at the time a reactor is shut down, and decreasing roughly inversely as the one-fifth power with time (i.e.,  $t^{-1/5}$ ). Handling this lingering decay heat load is a principal consideration in the safe operation of nuclear reactors. Containment of the radioactive material requires both near-term and long-term nuclear waste management strategies (see chapters ► “Health Physics,” ► “Fission Reactor Physics,” and ► “Radioactive Waste Management: Storage, Transport, and Disposal”).

### Fission Chain Reaction

When the chain reaction exactly balances the rates of neutron production from fission with nonfission absorption and leakage from the system boundaries, it is steady and said to be *critical*. When production exceeds losses, it is *supercritical* and power increases. When losses exceed production, the chain reaction is *subcritical* and power decreases, down to and including being shut down. All three states of criticality are necessary to nuclear power reactor operation. These states are quantified with an *effective multiplication factor*  $k_{\text{eff}}$  or  $k$ , defined as

$$k_{\text{eff}} = k = \text{production}/[\text{absorption} + \text{leakage}]$$

or by the change in multiplication, *reactivity*  $\rho$ , defined as

$$\rho = (k - 1)/k$$

Thus,  $k = 1$  and  $\rho = 0$  constitute the critical condition;  $k > 1$  and  $\rho > 0$  supercritical; and  $k < 1$  and  $\rho < 0$  subcritical.

The mathematical equations associated with the neutron balance are quite complex since the reaction rates are a strong function of both material (composition, location, and irradiation history) and neutron population (position, direction, and energy) characteristics. Neutron energy is a particularly important parameter. Neutrons emitted in fission are in the 0.1–10 MeV range with an average energy of about 2 MeV. The probability for fission increases dramatically as neutron energies fall below 1 eV.

For this reason, a *moderator* material of low mass may be added to enhance the slowing down. (The closer the mass of the moderator nuclei to that of the neutron, the larger the potential energy loss in a single collision; thus, hydrogen with essentially the same mass is best in this regard, although it may not be selected for other reasons) (see chapter ► “Nuclear Reactor Materials and Fuels”).


### Fissionable Materials

The heavy metals uranium and plutonium each have isotopes that can be caused to fission by neutrons, i.e., that are *fissionable*. Fission occurs under different circumstances among the isotopes.

*Fissile* nuclides can fission with neutrons of any energy, all the way down to essentially zero. The principal fissile materials are those containing significant quantities of  $^{233}\text{U}$ ,  $^{235}\text{U}$ ,  $^{239}\text{Pu}$ , and/or  $^{241}\text{Pu}$ . A fission reactor core contains fissile as well as nonfissile and other materials.

Other isotopes of U, Pu, and Th can be fissioned by neutrons but only by neutrons with kinetic energy above a minimum threshold. Particularly important examples of such *fissionable* nuclides are  $^{238}\text{U}$ ,  $^{232}\text{Th}$ , and  $^{240}\text{Pu}$ . The latter nuclides also have the unique characteristic that

upon absorbing a neutron in a nonfission reaction, they will convert to fissile nuclides either directly or via a multi-step process. These *fertile* nuclides produce the new fissile as follows:

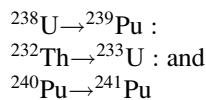

(See chapter ▶ “Fission Reactor Physics.”)

### Reactor Classifications

Nuclear power reactors are designed to achieve a self-sustaining chain reaction with a combination of fissile, fertile, and structural materials. The current generation of reactors uses the heat produced by fissions in the core to produce steam and then electricity, employing a variety of fuel forms, coolants, moderators, and other materials.

Common characteristics useful for classifying reactors are:

1. *Coolant* – principal heat-removal medium.
2. *Steam cycle* – number and configuration of separate coolant “loops” for producing steam to turn a turbine generator and produce electricity.
3. *Moderator* – material (if any) used to “slow down” the neutrons produced by fission.
4. *Neutron energy* – general energy range (typically fast [fission-energy] or thermal) for the neutrons that cause most of the fissions.
5. *Fuel production* – system is referred to as a *breeder* if it produces (i.e., changes from fertile to fissile) more fuel than it consumes; it is said to be a *converter* otherwise.

The first two features relate to the current practice of converting fission energy first to heat and then to electric energy by employing a steam cycle. Coolants include water, heavy water, gases (e.g., CO<sub>2</sub> or helium), and liquid metal (e.g., sodium). The steam cycles may employ from one to three separate loops, including one for primary coolant circulation and one (not necessarily separate from the first) for steam generation. It may be noted that next-generation reactors could bypass steam in favor of direct use of a coolant for electricity, process heat, or hydrogen production.

As mentioned earlier, neutrons emitted from fission are of high energy. However, very low energy neutrons have a higher likelihood of causing fission reactions. Thus, many systems employ a moderator to “slow down” these neutrons. The best moderators are of low mass, allowing maximum energy transfer through neutron collisions (e.g., the limiting case of potentially total energy transfer between a moving cue ball and a stationary billiard ball of equal mass). Typical materials used for this purpose are hydrogen, deuterium (heavy hydrogen), and carbon/graphite. The moderator and coolant may be the same (e.g., water or heavy water) or may be separate (e.g., water, heavy water, or a gas coolant with heavy water or solid graphite moderator). Neutrons with low enough energies to be roughly in thermal equilibrium (<1 eV) with the surrounding materials are said to be *thermal neutrons*. Neutrons at or near fission energies (averaging ~2 MeV) are *fast neutrons*. Fast reactors avoid the use of moderators, such as with a metal coolant like sodium, instead of one of the moderating materials identified above.

All nuclear power reactors contain fertile <sup>238</sup>U or <sup>232</sup>Th and, thus, produce some amount of new fissile fuel. The ubiquitous light-water reactors (LWR) have slightly enriched uranium fuel which is up to 5 wt% <sup>235</sup>U with the remaining 95 wt% <sup>238</sup>U. Thus, they produce plutonium during routine operation. Producing about 60% as much new fuel as used for operation, the LWR units are considered to be *converter* reactors. By contrast, a reactor producing more new fuel than it uses is called a *breeder*.

The world’s six principal types in the current generation of nuclear power reactors are:

1. Boiling-water reactor (BWR)
2. Pressurized-water reactor (PWR)
3. Heavy-water-moderated reactor (HWR)
4. Gas-cooled reactor (GCR)
5. Light-water-cooled graphite-moderated reactor (LWGR)
6. Fast breeder reactor (FBR)

The section labeled “General” in Table 1 classifies one or more versions of each of these six reactor types in terms of the five categories

**Nuclear Fission Power Plants, Table 1** Characteristics for six representative nuclear steam-supply systems

	BWR	PWR	PHWR	PTGR	HTGR	LMFBR
<b>Manufacturer</b>						
General Electric		Westinghouse		Atomic Energy of Canada, Ltd.	(Former) Soviet Union	
System (Station)	BWR/6	(Sequoyah/SNUPPS)	CANDU 600	RBMK-1000	General Atomic	Novatome
<b>General</b>						(Superphénix)
<b>Steam cycle</b>						
Loops	1	2	2	1	2	3
Primary coolant	H <sub>2</sub> O	H <sub>2</sub> O	D <sub>2</sub> O	H <sub>2</sub> O	He	Liq. Na
Secondary coolant	—	H <sub>2</sub> O	H <sub>2</sub> O	—	H <sub>2</sub> O	Liq. Na/H <sub>2</sub> O
Moderator	H <sub>2</sub> O	H <sub>2</sub> O	D <sub>2</sub> O	Graphite	Graphite	—
Neutron energy	Thermal	Thermal	Thermal	Thermal	Thermal	Fast
Fuel production	Converter	Converter	Converter	Converter	Converter	Breeder
<b>Energy conversion</b>						
Gross thermal power, MWt	3,579	3,411	2,180	3,200	3,000	3,000
Net electric power, MWe	1,178	1,150	638	950	1,160	1,200
Efficiency, %	32.9	33.7	29.3	31.2	38.7	40
<b>Heat transport</b>						
Primary loops and pumps	2	4	2	2/6 + 2	6	4
Intermediate loops	—	—	—	—	—	8
Steam generators	—	4	4	—	6	8
Steam-generator type	—	U-tube	U-tube	—	Helical coil	Helical coil
Number of turbine generators	1	1	1	2	1	2
<b>Fuel</b>						
Particles	Short, cyl. pellets	Short, cyl. pellets	Short, cyl. pellets	Short, cyl. pellets	Coated microspheres	Short, cyl. pellets
Chemical form	UO <sub>2</sub>	UO <sub>2</sub>	UO <sub>2</sub>	UO <sub>2</sub>	U/C/ThC	Mixed UO <sub>2</sub> /PuO <sub>2</sub>
Fissile (% by wt.)	2–4% <sup>235</sup> U	2–4% <sup>235</sup> U	Natural uranium	Natural uranium	93% <sup>235</sup> U	10–20% Pu (core)

(continued)

**Nuclear Fission Power Plants, Table 1** (continued)

	BWR	PWR	PHWR	PTGR	HTGR	LMFBR
Manufacturer	General Electric	Westinghouse	Atomic Energy of Canada, Ltd.	(Former) Soviet Union	General Atomic	Novatome
System (Station)	BWR/6 $^{238}\text{U}$	(Sequoyah/SNUPPS) $^{238}\text{U}$	CANDU 600 $^{238}\text{U}$	RBMK-1000 $^{238}\text{U}$	(Fulton) Thorium	(Superphenix) $^{238}\text{U}$ (core + blanket)
Fertile	Pellet stacks in Zr-alloy tubes	Pellet stacks in Zr-alloy tubes	Pellet stacks in Zr-alloy tubes	Pellet stacks in Zr-alloy tubes	Microspheres in graphite stick	Pellet stacks in SS tubes
Pins	$8 \times 8$ sq. pin array	$17 \times 17$ sq. pin array	$37 \times 37$ pin concentric circles	$18 \times 18$ pin concentric circles	Hex. graphite block with fuel sticks	271-pin hex. array
Assembly						
Core	Vertical	Vertical	Horizontal	Vertical	Vertical	Vertical
Axis	1	1	12	2	8	1
Assy on axis	748	193	380	1,661	493	364 (core), 233 (blanket)
Assy radially						
Performance						
Equil. burnup, MWD/T	27,500	27,500	7,500	18,500	95,000	100,000
Refueling sequence	1/4 per year	1/3 per year	Continuous, on-line	On-line	1/4 per year	Variable
Thermal hydraulics						
Primary system						
Pressure, MPa	7.17	15.5	10.0	7.2	4.90	$\sim 0.1$
Inlet temp., °C	278	292	267	270	318	395
Avg. out. temp., °C	288	325	310	284	741	545
Core flow, Mg/s	13.1	18.0	7.6	10.4	1.42	16.4
Volume, L	–	$3.36 \times 10^5$	$1.20 \times 10^5$	4.0	(9,550 kg)	(3,200 Mg) Na/H <sub>2</sub> O
Secondary system						
Pressure, MPa	–	6.89	4.7	54	17.2	$\sim 0.1/17.7$
Inlet temp., °C	–	227	187	29	188	345/235
Outlet temp., °C	–	285	260	–	513	525/487

<b>Power density</b>							
Core avg., kW/L	54.1	105	12	4.0	8.4		280
Fuel avg., kW/L	54.1	105	60	54	44		280
Linear heat rate							
Core avg., kW/m	19.0	17.8	25.7	29	7.87		29
Core max., kW/m	44.0	42.7	44.1		23.0		45
Design peaking factors							
Radial	1.4		1.21				
(Total)		(2.5)			(2.9)		(1.55)
Axial	1.6		1.41				
<b>Moderator</b>							
Volume, L	(Same as primary coolant)	(Same as primary coolant)	2.17 × 10 <sup>6</sup>	(Graphite)	(Graphite in fuel blocks)		–
Inlet temp., °C			43				–
Outlet temp., °C			71				–
<b>Reactivity control</b>							
Control rods							
Geometry	Cruciform	Rod clusters	Rods	Rods	Rod pairs		Hex. pin bundle
Absorber material	B <sub>4</sub> C	Ag In Cd	Various	B <sub>4</sub> C	B <sub>4</sub> C/graphite		B <sub>4</sub> C
Burnable poison	Gd. in fuel pellets	Borosilicate glass	–		B <sub>4</sub> C/graphite		–
Other systems	Voids in coolant	Soluble boron	H <sub>2</sub> O, various		Reserve shutdown		Three bundle secondary
<b>Reactor vessel</b>							
Inside dimension, m	6.05D × 21.6 H	4.83D × 13.4 H	7.6D × 4 L	0.08ID × 8 H tubes	11.3D × 14.4 H		21D × 19.5 H
Wall thick., mm	152	224	28.6	4.0	(4.72 m min.)		25
Material	SS-clad carbon steel	SS-clad carbon steel	Stainless steel	Zr-Nb alloy	Prestressed concrete		Stainless steel
Other features			Pressure tubes	Pressure tubes	Steel liners		Pool-type

Data summarized from Ref. [10]. Appendix IV. (Appendix IV also includes parameters for PWR designs from US manufacturers B&W and CE, France's Framatome, and the former Soviet Union's unique VVER)

**Nuclear Fission Power Plants, Table 2** Power reactors by (A) nation 2016, (B) type, worldwide<sup>a</sup>

A Power reactors by nation 2016

Reactors	In operation <sup>a</sup>				Forthcoming <sup>a</sup>				Total <sup>a</sup>				Nuclear electricity generation <sup>b</sup>			
	# Units	Net MWe	# Units	Net MWe	# Units	Net MWe	# Units	Net MWe	2010	10 <sup>9</sup> kWh	% e	2014	10 <sup>9</sup> kWh	% e	2014	
Argentina	2	935	2	717	4	1,652	6.7	5.9	5.3	4.0	4.0	30.7	39.4	2.3	30.7	
Armenia	1	375	0	0	1	375	2.3	39.4	2.3	0	0	0	0	0	0	0
Bangladesh	0	0	2	2,000	2	2,000	0	0	0	0	0	0	0	0	0	0
Belarus	0	0	2	2,400	2	2,400	0	0	0	0	0	0	0	0	0	0
Belgium	7	5,885	0	0	7	5,885	45.7	51.2	32.1	47.5	47.5	2.9	3.1	14.5	2.9	2.9
Brazil	2	1,901	1	1,275	3	3,176	13.9	3.1	14.5	33.1	31.8	31.8	14.2	15.0	31.8	31.8
Bulgaria	2	1,906	0	0	2	1,906	14.2	33.1	15.0	31.8	31.8	31.8	14.2	15.0	31.8	31.8
Canada	19	13,472	0	0	19	13,472	85.5	15.1	98.6	16.8	16.8	16.8	85.5	15.1	98.6	16.8
China	28	24,268	37	37,630	65	61,898	71.0	1.8	123.8	2.4	2.4	2.4	71.0	1.8	123.8	2.4
Czech Republic	6	3,678	0	0	6	3,678	26.4	33.2	28.6	35.8	35.8	35.8	26.4	33.2	28.6	35.8
Finland	4	2,716	2	2,800	6	5,516	21.9	28.4	22.6	34.6	34.6	34.6	21.9	28.4	22.6	34.6
France	58	63,130	1	1,600	59	64,730	410.1	74.1	418.0	76.9	76.9	76.9	410.1	74.1	418.0	76.9
Germany	8	10,783	0	0	8	10,783	133.0	28.4	91.8	15.8	15.8	15.8	133.0	28.4	91.8	15.8
Hungary	4	1,889	2	2,400	6	4,289	14.7	42.1	14.8	53.6	53.6	53.6	14.7	42.1	14.8	53.6
India	21	5,308	8	5,257	29	10,565	20.5	2.9	33.2	3.5	3.5	3.5	20.5	2.9	33.2	3.5
Iran	1	915	0	0	1	915	0	0	0	1.5	1.5	1.5	0	0	0	1.5
Japan	43	40,179	3	3,002	46	43,181	280.3	29.2	0	0	0	0	280.3	29.2	0	0
Mexico	2	1,300	0	0	2	1,300	5.6	3.6	9.3	5.6	5.6	5.6	5.6	3.6	9.3	5.6
Netherlands	1	487.00	0	0.00	1	487	3.75	3.4	3.9	4.0	4.0	4.0	3.75	3.4	3.9	4.0
Pakistan	3	725.00	5	3,600.00	8	4,325	2.6	2.6	4.6	4.3	4.3	4.3	2.6	4.6	4.6	4.3
Romania	2	1,300.00	2	1,240.00	4	2,540	10.7	19.5	10.8	18.5	18.5	18.5	10.7	19.5	10.8	18.5

	Total	379,463	107	107,031	513	486,404	2,630	138	2,411	115
Russia	34	24,593,00	11	8,760,00	45	33,353	159,4	17,1	169,1	18,6
Slovakia	4	1,816,00	2	810,00	6	2,626	13,5	51,8	14,4	56,8
Slovenia	1	666,00	0	0,00	1	666	5,4	37,3	6,1	37,2
South Africa	2	1,800,00	0	0,00	2	1,800	12,9	5,2	14,8	6,2
South Korea	24	21,697,00	6	8,400,00	30	30,097	141,9	32,2	149,2	30,4
Spain	7	7,068,00	0	0,00	7	7,068	59,3	20,1	54,9	20,4
Sweden	10	9,303,00	0	0,00	10	9,303	55,7	38,1	62,3	41,5
Switzerland	5	3,238,00	0	0,00	5	3,238	25,3	38,0	26,5	37,9
Taiwan	6	4,884,00	2	2,600,00	8	7,484	0	0	0	0
Turkey	0	0,00	4	4,600,00	4	4,600	0	0	0	0
Ukraine	15	13,107,00	3	2,850,00	18	15,957	83,9	48,1	83,1	49,4
United Arab Emirates	0	0,00	4	5,600,00	4	5,600	0	0	0	0
United Kingdom	15	8,723,00	0	0,00	15	8,723	56,9	15,7	57,9	17,2
United States	99	101,416	8	9,490	107	110,906	807,1	19,6	798,6	19,5

B Power reactors by type		In operation		Forthcoming		Total	
Reactor type	# Units	Net MWe	# Units	Net MWe	# Units	Net MWe	
Pressurized light-water reactors (PWR)	280	261,747	86	91,287	366	353,134	
Boiling light-water reactors (BWR)	78	75,457	6	8,056	84	83,513	
Gas-cooled reactors, all models	14	7,535	1	200	15	7,735	
Heavy-water reactors, all models	48	23,945	9	5,772	57	29,717	
Graphite-moderated reactors, all models	15	10,219	0	0	15	10,219	
Liquid-metal-cooled reactors, all models	1	560	5	1,616	6	2,176	
Total	322	370,522	107	107,021	529	476,543	

Totals

Source:

Nuclear News, vol 59 #3, Reference Section, pp. 35-67 (updated annually)

identified at the beginning of this section [10]. For example, the GCR variation known as the high-temperature gas-cooled reactor (HTGR) is a double-loop, helium-cooled, graphite-moderated, thermal, converter reactor.

## Principles for Design and Operation

Nuclear power reactors are complex systems whose design represents a balance among conflicting requirements. Principal among these requirements are nuclear design, materials, thermal design, economics, and control and safety [10, 11].

The nuclear (physics) design seeks to match fissile and fertile constituents with appropriate coolants and moderators (if any) to optimize specific (per unit mass of fuel) fission-energy output and production of new fuel or meet alternative design goals. Materials concern focus on chemical compatibility of components, thermal and radiation stability, and overall mechanical strength. One especially important requirement for reactors that refuel only while shutdown – which is the majority – is that the fuel maintains its general structural integrity throughout up to 4 years or more of in-core residence; unlike other energy production cycles, the fuel is not literally “burned up” with wastes discarded along the way.

Thermal design is concerned with heat removal for effective energy production and maintaining the integrity of the fuel, cladding, and other materials for operational and safety purposes. Reactor thermal operating limits are determined by the most extreme postulated local conditions – to avoid damage anywhere in the reactor core. Temperature limits are established to prevent fuel melting and/or clad damage during power excursions and loss of cooling. Other limits address avoiding coolant-clad temperature mismatch that could lead to local loss of fuel integrity. Both types of limits are established in terms of peak (local)-to-average core conditions. Such factors vary with power level, time in core life, and other parameters.

The primary economic consideration is to minimize overall costs, i.e., initial capital outlay, operating and maintenance costs, and fuel charges. Increasing electric-generation reliability and

thermal conversion efficiency are particularly important throughout lifetime.

Power reactor controls must be capable of maintaining the critical condition, increasing and decreasing power, and adjusting to long-term changes such as the conflicting effects from breeding new fuel, depleting existing fuel and burnable neutron poisons, and building in radioactive fission- and transuranic-product neutron poisons. The desired neutron balance is maintained predominately by adjusting neutron absorption using materials designed to remove neutrons from, or “poison,” the chain reaction. Methods may include a combination of solid moveable control rods, soluble poisons in the coolant or moderator (PWR), and fixed burnable poisons designed to deplete or be “burned out” by the continuing neutron population. Some reactor designs also change neutron production by on-line fuel exchange. Fission products whose poisoning effects are sensitive to operating conditions also must be subject to control.

Routine control strives to make the power density as uniform as possible throughout the core, while allowing for power changes. In most designs, control-rod movement is used with groups selected for symmetry to maintain uniform, i.e., avoid highly asymmetric, power distribution. Measures are instituted to restrict the speed of movement and reactivity effect of individual rods or groups of rods to prevent excessively rapid power increase. Similarly, the design intends to minimize the likelihood of inadvertent control-rod withdrawal which could lead to unplanned supercritical conditions.

Safety concerns are addressed through a protective system whereby the control rods may be inserted into the core – dropped down or pushed up – into the core quickly, i.e., they “scram” or “trip” the reactor through gravity drop or gas pressure, respectively, when certain predetermined parameter limits (e.g., on pressure, temperature, flow, or power levels) are exceeded.

Reactor safety is enhanced with inherent negative feedback mechanisms, where a power increase tends to be self-limiting. Fuels are designed to have such feedback, with their reactivity decreasing with escalating temperature.

Expansion of the coolant and/or moderator (such as with increased temperature) provides negative reactivity feedback in light-water reactors. Reactors with positive reactivity feedback in certain operating regimes may be difficult to control. The essentially instantaneous feedback contributions, along with some long-term ones (such as from time-dependent changes in concentrations of xenon and samarium fission-product poisons), affect the stability of the chain reaction, may limit the ability to change the power level, and are a major consideration in overall reactor safety design.

A fundamental safety feature for all power reactors is multiple-barrier containment of fission products. As may be observed for each reactor type described in the remainder of this entry, these barriers include the fuel particles, surrounding cladding, the coolant system boundary, and a containment structure.

An important example of tradeoffs among the design goals is seen in thermal-reactor fuel assemblies (e.g., subsequent Figs. 3 and 8) whose pin arrangement determines the characteristics of the chain reaction, economics, and heat removal [11]. The chain reaction is enhanced by optimum spacing of the fuel in “lumps” with moderator interspersed so that neutrons from fission will undergo a number of scattering collisions for slowing down prior to reentering the fuel; too little and too much spacing can both be detrimental. The extent of slowing down also determines the amount of conversion of fertile to fissile material and the overall energy production possible from a given amount of fuel. Spacing and coolant flow rate establish heat-removal characteristics (including temperature feedback effects on the fuel’s reactivity). Final dimensions generally represent a best-estimate balance among these and other competing concerns.

## Reactor Systems

The major nuclear power reactor types were identified at the end of the section “[Introduction](#)” noting that characterization of each is provided in the “General” section of Table 1. More detailed descriptions of each of these systems as

implemented in the present generation of reactors follow. (As explained in detail in the section “[Advanced Reactors](#),” several generations of reactors are commonly distinguished. Of interest here, Generation I (GEN-I) reactors were developed in the 1950s–1960s, while Generation II (GEN-II) reactors are typified by the present US fleet and most in operation elsewhere.) Parameters for selected specific present reactor designs are detailed in the remainder of Table 1. For identification and some detail on essentially all historical, current, and proposed reactor units, see Refs. [8, 12, 13].

It may be noted that the newer reactor designs are increasingly characterized by multinational joint ventures. See also the section “[Advanced Reactors](#).”


The main focus of these nuclear power plant descriptions is on the steam cycle, fuel assemblies, reactivity control, and the protective system [10]. General safety-related functions are summarized separately in the section “[Nuclear Reactor Safety Features](#).”

## Light-Water Reactors

Two light-water reactor (LWR) systems – boiling-water reactor (BWR) and pressurized-water reactor (PWR) – employ ordinary (“light”) water as coolant and moderator. The former design produces steam through a direct cycle (Fig. 1), while the latter uses an intermediate steam-generator heat exchanger to maintain an all-liquid primary loop and produce steam in a separate secondary loop (Fig. 2).

The nature of the water coolant/moderator results in similarities between the two LWR designs. The fuel is uranium dioxide pellets enriched to 2–5 wt%  $^{235}\text{U}$ ; initial core loadings typically span this range with reload cores distinctly at the upper end of the enrichment range. The pellets are clad in sealed zirconium-alloy tubes. Fuel assemblies consist of rectangular arrays of fuel pins with regular spacing (see also chapter ► “[Modern Nuclear Fuel Cycles](#)”).

Since the LWR designs rely on liquid water for moderating neutrons, maximum operating temperatures must remain well below the 706 °F (374 °C) critical temperature at which pressure

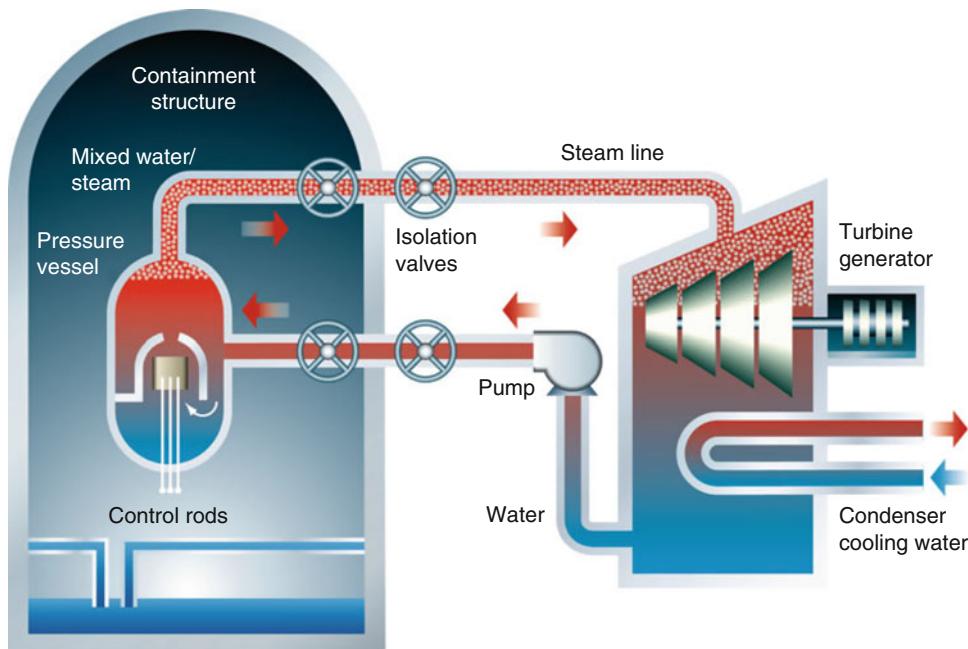

**Nuclear Fission Power Plants, Fig. 1** Steam cycle for boiling-water reactor (BWR) (Courtesy of Nuclear Engineering International)

increases dramatically and liquid cannot exist regardless of pressure. They, thus, cannot operate at the “modern steam conditions” – nominally 1,000 °F (540 °C) – typical of fossil-fueled plants. The LWR’s saturated steam-water mixture requires a special, more costly “wet steam” turbine.

#### Boiling-Water Reactors


The direct-cycle boiling-water reactor (BWR) was developed in the USA by General Electric and was followed by designs in Western Europe and Japan. Employing the cycle shown in concept by Fig. 1 and in more detail in Fig. 3, feedwater enters the steel reactor vessel, is heated by the fission chain reaction occurring in the fuel pins, and leaves the vessel as steam. The high- and low-pressure turbine stages are employed in concert with the multiple heaters and condensers to enhance energy-conversion efficiency. The more recent BWR designs use jet pumps to recirculate a fraction of the feedwater flow for better control.

Fuel assemblies for the BWR appear as shown in Fig. 4. The  $7 \times 7$  to  $9 \times 9$  square arrays of fuel

pins are surrounded by a metal fuel channel, which prevents the water-steam mixture from moving between assemblies (and potentially resulting in inadequate cooling – excess steam – in some assemblies). Fuel assemblies may contain pins of several different enrichments (Fig. 5). The reactor fuel core consists of up to 800 fuel assemblies.

Reactivity control for routine operation is implemented through a combination of control rods and coolant flow adjustment. The bottom-mounted control rods (indicated below the reactor vessel in Fig. 3) are made of long boron-carbide-filled pins in a cruciform (“cross”) shape that fits between four fuel assemblies as shown in Fig. 5.

Flow adjustment can provide another effective control method, since the water density changes with temperature. At low temperature, the dense water is very effective at moderating neutrons and thereby encourages fission. With increased temperature, the density decreases (or, equivalently, void content increases as steam is being produced), causing a reduction in moderation and fission rate. Thus, if flow rate is increased, energy removal can be increased without a net change in

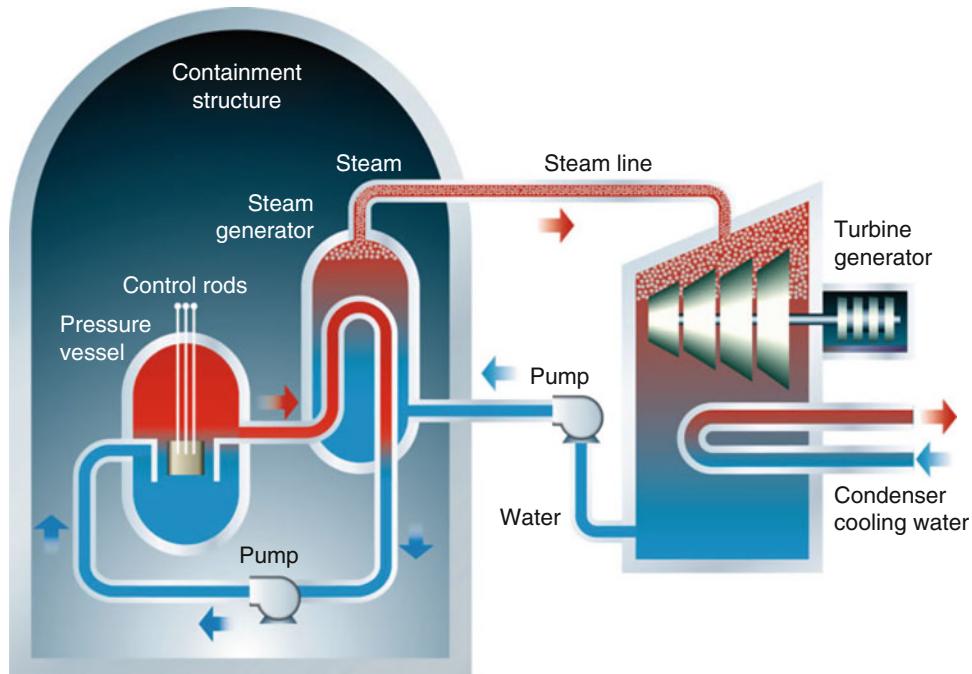

**Nuclear Fission Power Plants, Fig. 2** Steam cycle for pressurized-water reactor (PWR) (Courtesy of Nuclear Engineering International)

coolant temperature with a resulting increase in power generation. In practice, power-level changes of up to 40% may be accomplished by flow control. (BWR operational practices are described further in the section “[Plant Operation](#).”)

Longer-term reactivity control is accomplished using burnable poisons (e.g., “curtains” containing boron placed between fuel assemblies or gadolinium poisons fabricated into the fuel itself) and gradually withdrawing inserted control rods over core lifetime. Reactor shutdown – scram or trip – is accomplished by using gas pressure to insert all of the bottom-mounted control rods into the core.


Table 1 contains parameters for a large BWR and other reactor types. Advanced BWRs are addressed in the section “[Advanced Reactors](#).”

#### Pressurized-Water Reactor

The two-loop pressurized-water reactor (PWR) was developed in the USA by Westinghouse Electric Corporation. Other somewhat similar designs have been developed by a pair of US

organizations as well as by others in Western Europe, Japan, and South Korea. A particular unique version has come from the Soviet Union (now by Russia). Water in the primary loop (Fig. 2) is maintained as liquid by using high pressure. The water enters the reactor vessel (Fig. 6) at the inlet nozzle, flows downward along the inner vessel wall, is distributed at the lower vessel plate, flows up through the fuel assemblies removing heat energy, and exits at the outlet nozzle – still as a liquid.

Energy from the primary loop is extracted and converted to steam by two to four U-tube (Fig. 7), once-through, or horizontal (Russian design) steam generators. Multiple turbine stages, heaters, and a condenser are employed as for the BWR (Fig. 3). A *pressurizer* with a steam–water interface is used to maintain the sensitive pressure/temperature balance in the primary system by using heaters to boil water, increase the amount of steam, and thus raise the pressure; conversely spraying “cooler” (“less hot”) water condenses steam and reduces the pressure.

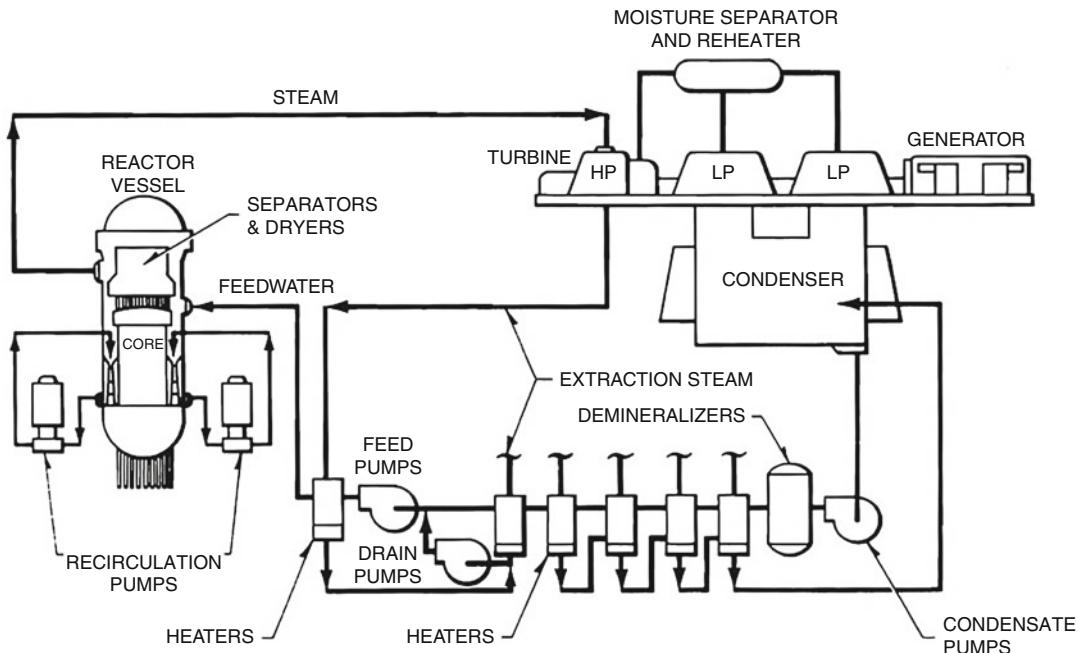

**Nuclear Fission Power Plants, Fig. 3** Representative steam cycle schematic diagram for a boiling-water reactor (BWR) (Courtesy of General Electric Company)

Fuel assemblies for the PWR are of  $14 \times 14$  to  $17 \times 17$  square fuel pin arrays (Fig. 8) or a hexagonal array of up to 331 pins (Russian VVER). They are not enclosed in a fuel channel (in part because the single-phase primary fluid is better behaved than the BWR's boiling coolant). These assemblies also have unoccupied pin locations, which can accommodate control rods, burnable poisons, or instruments. The large PWR reactor cores consist of 150–200 or more fuel assemblies.


Like the BWR, the PWR uses control and burnable-poison rods for reactivity control. Uniquely, it also uses the soluble neutron poison, boric acid, for long-term control. The boric acid concentration is adjusted to match general changes from fuel burnup, conversion of fertile material into fissile, and depletion of burnable poisons.

Insertion of control-rod assemblies from the top of the core (by contrast with the bottom-mounted BWR control rods) provides short-term, routine reactivity control. These assemblies consist of 5–24 “fingers,” made of boron carbide or of a silver-indium-cadmium mixture, which move in channels within the fuel assemblies

(e.g., as shown in Fig. 8). A small group of rods in a symmetric pattern is inserted partially into the fuel (typically >25%) and then moved as needed to compensate for routine power fluctuations. Significant power changes up to an including startup and shutdown invoke other, larger groups of control rods. (PWR operational practices are described further in the section “[Plant Operation](#).”)

Scram/trip is accomplished in the PWR by dropping the top-mounted control rods (Figs. 6 and 8) into the core under the influence of gravity. The rods are mounted to their drives by electromagnets so that interruption of the current (from power failure or indication that a specific parameter is outside of a predetermined range) causes the rods to fall.

Figure 9 is a cutaway drawing (wallchart) of a representative PWR unit. Other than for the reactor “nuclear island” – also known as the nuclear steam-supply system (NSSS) – the drawing shows features common to the other reactor units, all of which have turbine generator(s) and containment, auxiliary, and support buildings. (Reference [14] contains a Web link to an archive of wallcharts for

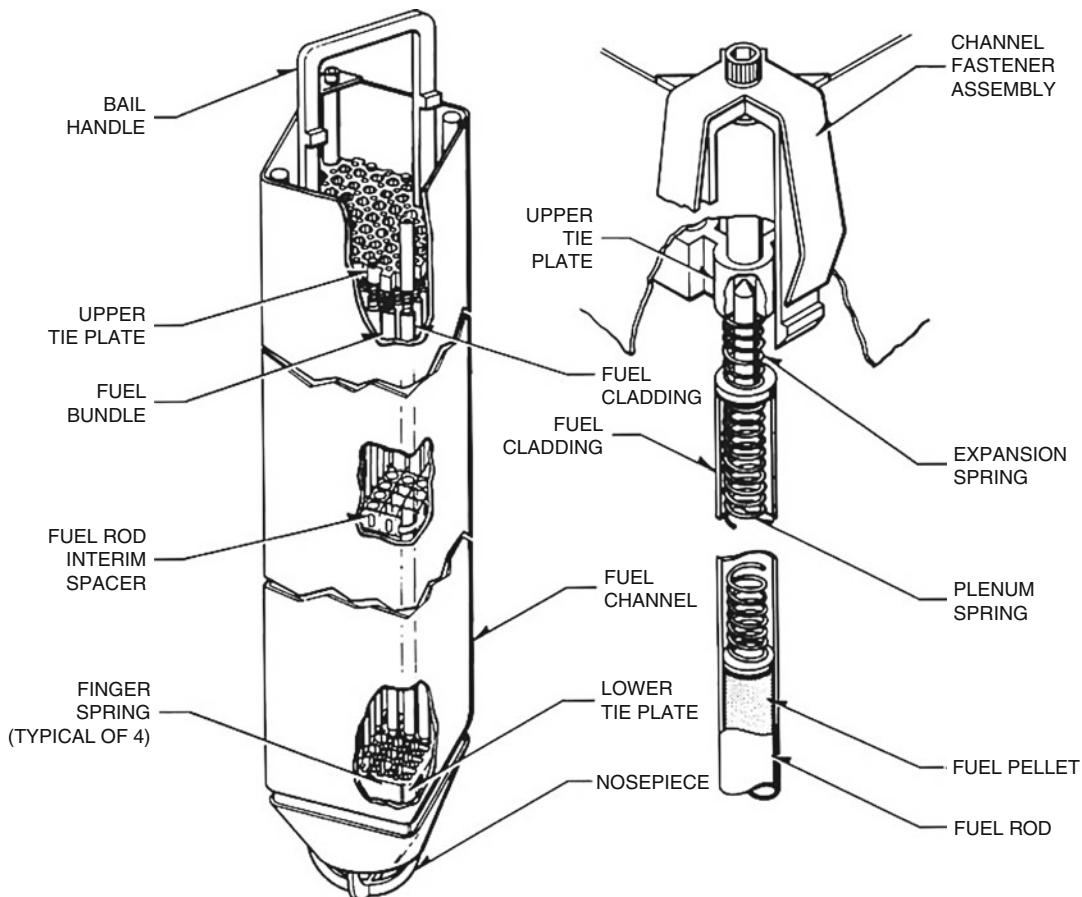

**Nuclear Fission Power Plants, Fig. 4** Representative fuel assembly for boiling-water reactor (Courtesy of General Electric Company)

105 nuclear reactors, including that for the SNUPPS unit shown in Fig. 9.)

Table 1 contains parameters for a representative PWR and other reactor types. Advanced PWRs are addressed in the section “[Advanced Reactors](#).”


### Heavy-Water Reactors

Ordinary hydrogen in the form of water is the most effective material for reducing neutron energy, but it also absorbs some of the neutrons that could otherwise participate in the chain reaction. Thus, deuterium as heavy water, which requires more collisions for a given energy change but exhibits much less absorption, is a better moderator in some ways, e.g., allowing use of natural- or other low-enrichment uranium fuel. Deuterium, existing in nature in a ratio of 1:400 with ordinary hydrogen, requires

isotopic enrichment prior to use (as does  $^{235}\text{U}$  in uranium for many of the reactor applications).

Heavy-water reactors (HWR) have been developed in Canada – their signature CANDU (for Canadian deuterium-uranium) – the UK, West Germany, India, Japan, and South Korea. Pressure-vessel designs (with similar hardware configurations to the PWR) employ the same heavy water volume as coolant and moderator. Pressure-tube designs use heavy water in a separate moderating volume generally with pressurized heavy-water (PHW) coolant, sometimes boiling light-water coolant, and potentially with an organic liquid. The example of a CANDU-PHW is considered further below.

The CANDU-PHW steam cycle has two loops (Fig. 10), like the PWR, with the primary

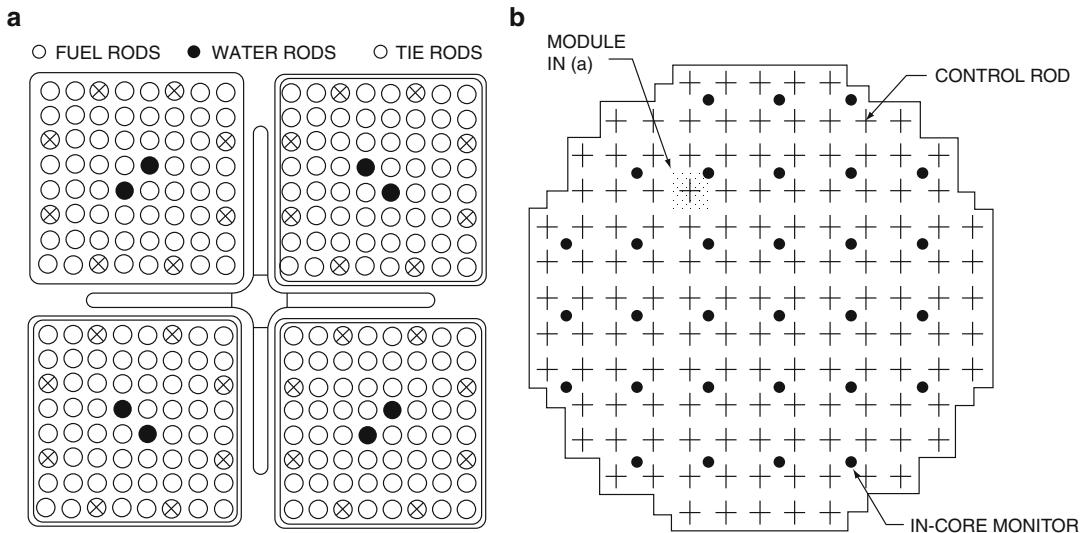

**Nuclear Fission Power Plants, Fig. 5** Core fuel module (a) and control-rod pattern (b) for representative boiling-water reactor (Courtesy of General Electric Company)

pressurized heavy-water loop transferring heat energy to a loop of ordinary water for steam production. A major difference, however, is that the primary fluid is distributed among several hundred pressure tubes which pass through a large calandria vessel (Fig. 11) containing the separate heavy-water moderator. The coolant is actually collected in two separate loops, with the fluid in adjacent tubes flowing in opposite directions.

The fuel assemblies consist of natural (i.e., 0.711 wt%  $^{235}\text{U}$ ) uranium dioxide fuel pellets in zirconium clad, similar to LWR fuel. However, short, cylindrical bundles of fuel pins (Fig. 12) – 12 in each pressure tube – allow a unique on-line fueling scheme whereby a machine attaches to each end of a single tube and inserts one fuel assembly while in effect pushing out another.


A major portion of the reactivity control is accomplished by on-line fueling, which is required to compensate for the low reactivity inherent in the natural uranium fuel. Routine operating adjustments and power shaping are accomplished with neutron-poison control rods or by introduction of ordinary water (which absorbs more neutrons than heavy water) into special chambers. Other control rods are available for

reactor scram/trip. The separation of the coolant and moderator volumes also provides the possibility for moderator “dumping” as an emergency shutdown method.

Table 1 contains parameters for a large CANDU-PHW and other reactor types. Advanced HWRs are addressed in the section “[Advanced Reactors](#).”

### Gas-Cooled Reactors

The world’s first research reactor used natural uranium fuel, graphite moderator, and natural-circulation air cooling. Subsequent systems have also used graphite moderator with natural or enriched uranium and with carbon dioxide or helium coolant. Various commercial gas-cooled reactors (GCR) have operated in France, the UK, the USA, and Germany. Two versions of the helium-cooled high-temperature gas-cooled reactor (HTGR) developed by the USA and Germany are described below. (Both are prototypical designs at  $\sim 1,000$  MWe described for the purpose of comparison with other current large commercial reactors in this section. Evolutionary units of this heritage are addressed in the section “[Advanced Reactors](#).”)

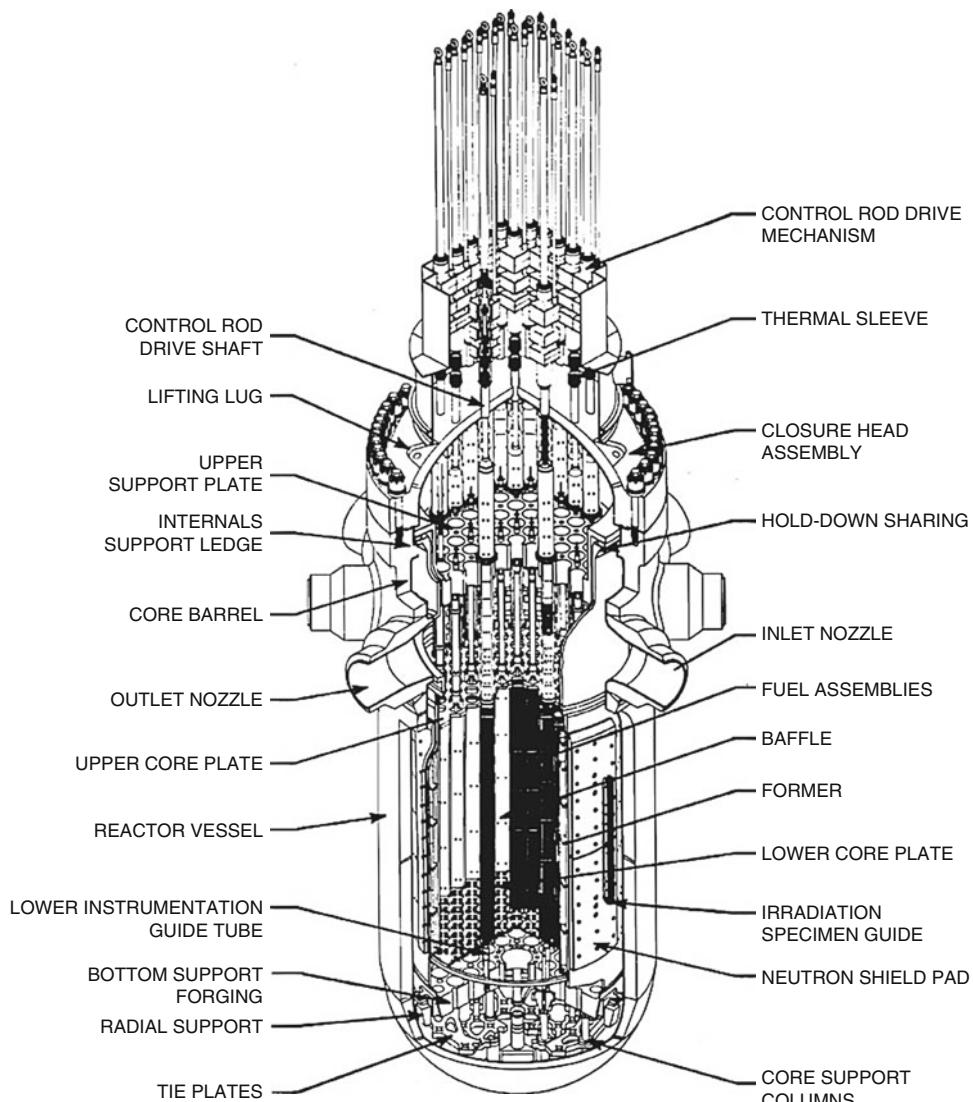


**Nuclear Fission Power Plants, Fig. 6** Reactor pressure vessel for a representative pressurized-water reactor (Courtesy of Westinghouse Electric Company)

The HTGR steam cycle (Fig. 13) employs a primary loop of helium, heat exchangers, and pumps contained within a prestressed concrete reactor vessel (PCRV) – two versions of which are shown in Fig. 14 – and a steam loop. Since the coolant is a single-phase gas, no pressurizer is required (in contrast to the two-loop water-cooled designs). The nature of the coolant also provides the prospect for direct conversion through a gas

turbine, e.g., employing a Brayton thermodynamic cycle.

Fuel for the HTGR consists of small microspheres ( $\sim 0.4\text{--}0.8\text{ mm diam.}$ ) of uranium or thorium carbide (UC/ThC) with coatings of graphite and/or silicon carbide (Fig. 15a). The uranium microspheres, enriched to 20–93 wt%, may be mixed with separate thorium microspheres to an effective fissile enrichment of about 5 wt%.

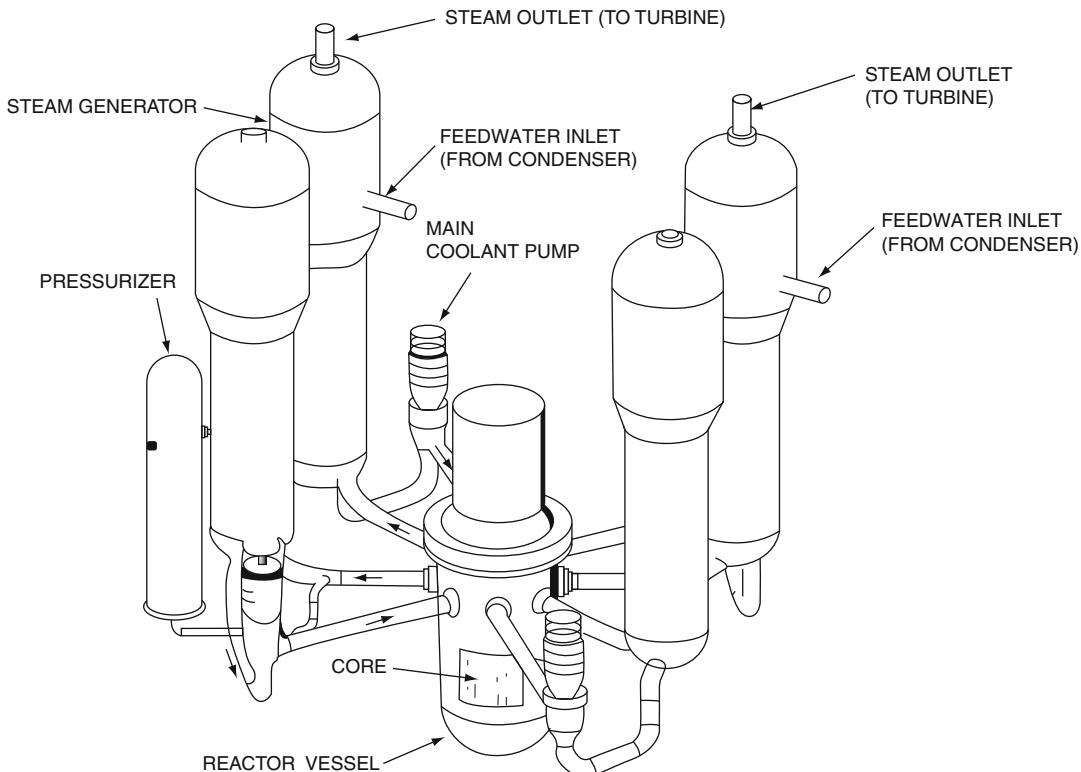

**Nuclear Fission Power Plants, Fig. 7** Four U-tube steam-generator primary loop configuration for a pressurized-water reactor (Courtesy of Westinghouse Electric Company)

In the US “prismatic” – hexagonal-block – HTGR system, the microsphere mixture is formed into roughly finger-sized sticks with a carbon-resin binder. The sticks are then loaded into large hexagonal graphite blocks with interspersed coolant holes (Fig. 15b). The blocks are stacked several high and in a roughly cylindrical arrangement to form the reactor core (Fig. 14a). Another version of the HTGR – the thorium high-temperature reactor (THTR) – forms the microspheres into a spherical shape and coats them with hard, thick graphite layers into a 6-cm-diameter “pebble” (Fig. 15c). The reactor core is then formed by loading these fuel units into a hopper in a PCRV (Fig. 14b), from which fueling and defueling can be accomplished on-line. This THTR design feature leads to the alternative designation of the reactor as “pebble bed reactor (PBR).”

Reactivity control in the prismatic design depends on boron control rods for routine and

shutdown functions. Burnable poisons may be used for long-term reactivity control. A reserve shutdown system consisting of small boron-carbide balls backs up the primary systems.

The THTR requires minimal excess reactivity due to its ability to change fuel on-line. Control rods inserted into the pool of pebbles provide the means for routine operational adjustments.


Table 1 contains parameters for a large prismatic HTGR and other reactor types. Advanced GCRs – prismatic and pebble bed – are addressed in the section “[Advanced Reactors](#).”

### Light-Water Graphite Reactors

Light-water-cooled graphite-moderated reactors (LWGR)/pressure-tube graphite reactors (PTGR) were among the first systems used for the purposes of research, plutonium production, and electric power generation. The Soviet Union credits a small unit of this type with generating the first

### Nuclear Fission Power Plants,

**Fig. 8** Representative fuel assembly for a pressurized-water reactor (Courtesy of Westinghouse Electric Corporation)

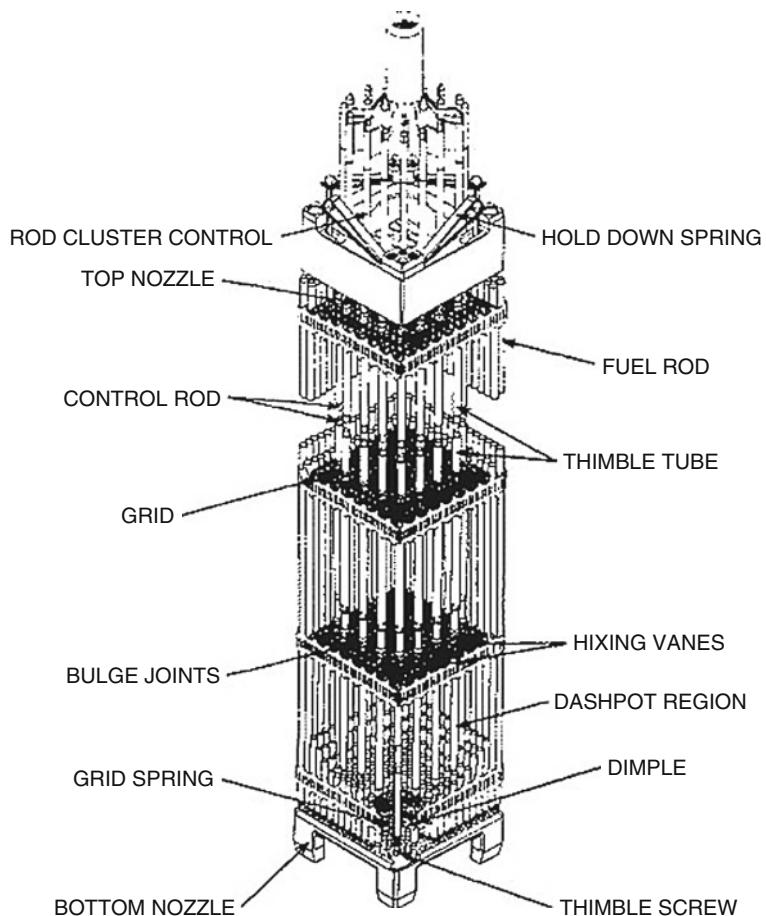

commercial electricity. Current commercial use is limited to the Soviet RBMK pressure-tube graphite reactors (PTGR). The Chernobyl reactor – the site of the catastrophic 1986 accident – was of this type.


The RBMK uses a direct steam cycle (Fig. 16) with boiling-water coolant like the BWR (Fig. 1). However, its complex pressure-tube design with separate coolant and moderator also has similarities to the CANDU-HWR (Fig. 11).

The RBMK reactor (Fig. 17) consists of nearly 1,900 vertical pressure tubes – each accommodating a pair of fuel assemblies or a control rod. The pressure tubes are surrounded by an array of long, square graphite blocks – which serve as the system's neutron moderator – set together, side-by-side vertically approximating a cylinder of roughly 12 m diameter and 7 m height. Water introduced at the bottom of the core enters pressure tubes and then


boils in the process of removing fission heat from the fuel pins. Steam is drawn from each tube through a stainless-steel pipe for use in one of two turbine generators.

A steel reactor vessel serves primarily as structural support for the graphite-moderator blocks. This vessel with the pressure tubes and piping constitutes the primary-system boundary.

The RBMK fuel assemblies (Fig. 18) each contain two stacked subassemblies of 18 zirconium-clad fuel pins of  $\text{UO}_2$  enriched to 1.8 wt% in  $^{235}\text{U}$ . Stacked one atop the other, a pair fills a pressure tube to facilitate the on-line refueling paradigm that adjusts reactivity and facilitates plutonium production. Various groups of control rods are moved for routine power adjustment and for full-insertion core shutdown.

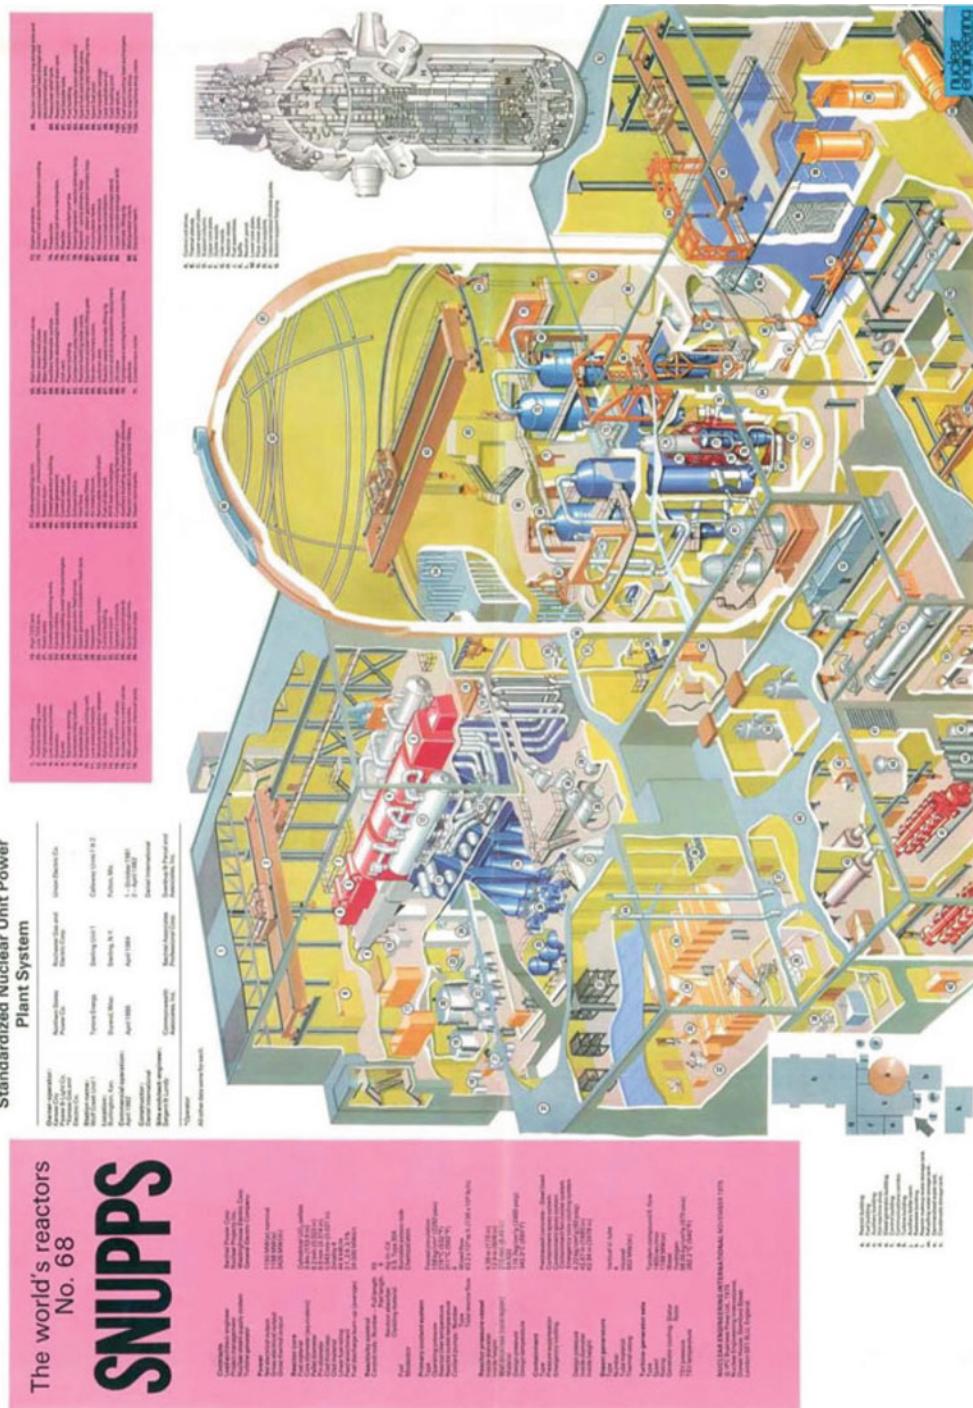

**Nuclear Fission Power Plants, Fig. 9** Cutaway of a representative PWR station – Standardized Nuclear Unit Power Plant System (SNUPPS) (Courtesy of Nuclear Engineering International) (see also Ref. [14])

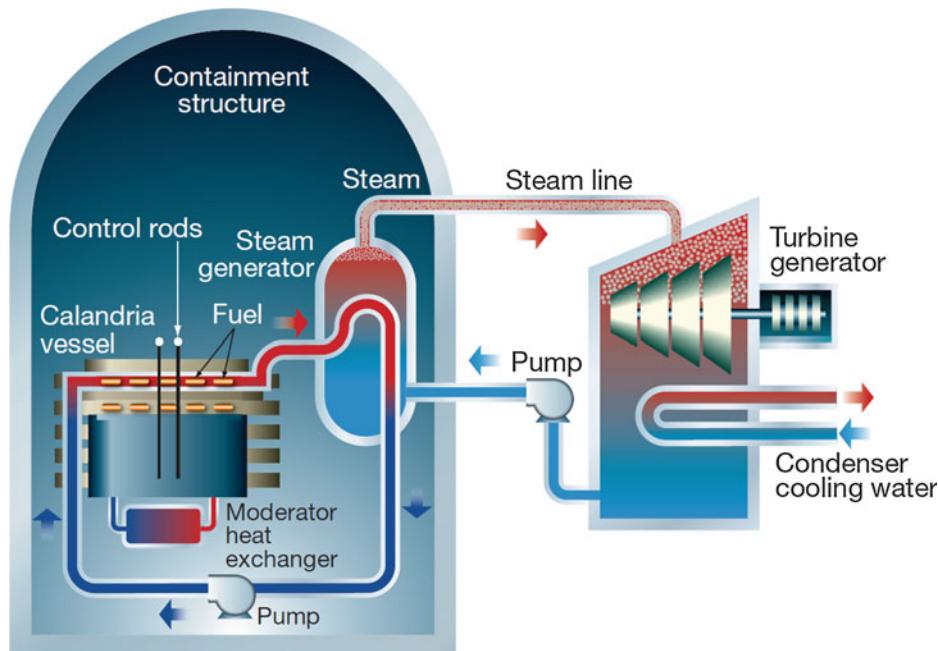

**Nuclear Fission Power Plants, Fig. 10** Steam cycle for CANDU pressurized heavy-water reactor (Courtesy of Nuclear Engineering International)

Table 1 contains parameters for a large PTGR/RBMK unit and other reactor types. Advanced LWGR/PTGRs, if any, will be of totally different design.

### Fast Breeder Reactors

The fast-neutron-spectrum breeder reactor (FBR) design concepts are predicated on breeding more new fuel than that used to sustain the neutron chain reaction (section “[Reactor Classifications](#)”). For this purpose, fissile plutonium ( $^{239}\text{Pu}$  and  $^{241}\text{Pu}$ ) and fertile  $^{238}\text{U}$  (natural or depleted uranium with, respectively, 0.711 wt% and 0.2–0.35 wt% in  $^{235}\text{U}$ ) fuel with a fast-neutron spectrum are most effective. An FBR optimized for breeding, thus, can utilize uranium at least 60 times more efficiently than a normal LWR reactor. (Note that some fast-spectrum reactors – see the section “[Advanced Reactors](#)” – may not have actual breeding as a design specification.)


The liquid-metal fast breeder reactor (LMFBR) keeps neutron energy high (in the upper keV to MeV range) by using (nonmoderating) liquid sodium as a coolant. The liquid sodium, although

not the heaviest coolant available is not too light, has favorable heat transfer properties and is not an excessively strong absorber of neutrons compared to other choices.

Although experimental fast breeder reactors have operated in the USA since the late 1950s, and subsequently as prototypes in Western Europe, most recent activity has been in Russia, Japan, and India.

The steam cycle has three loops (Fig. 19) with the first two of sodium and the third of water. The intermediate sodium loop is present to isolate the primary from possible direct contact with water in the steam generator. The primary sodium becomes radioactive from neutron absorption and also can pick up fission-product radionuclides from the fuel. If this sodium were to come in contact with water, it would not only precipitate an exothermic reaction but also spread radioactive contamination.

LMFBRs have been implemented in two main configurations – loop-type and pool-type. The former is essentially as shown in Fig. 19 and similar paradigm to LWR and HTGR. The pool-type LMFBR has the reactor vessel, heat


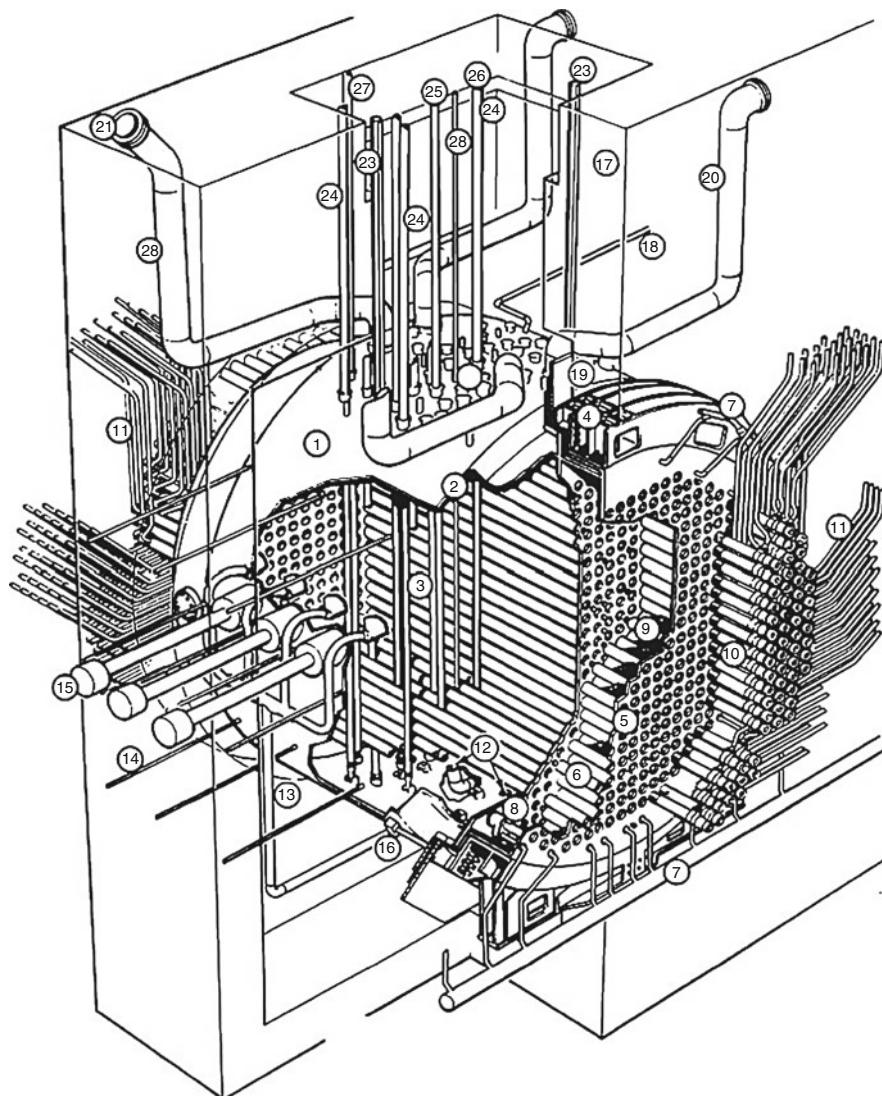


- |                            |   |                                   |
|----------------------------|---|-----------------------------------|
| 1 CALANDRIA                | 11 FEEDER PIPES                                 | 21 PRESSURE RELIEF DISC           |
| 2 CALANDRIA SHELL          | 12 MODERATOR OUTLET                             | 22 REACTIVITY CONTROL ROD NOZZLES |
| 3 CALANDRIA TUBES          | 13 MODERATOR INLET                              | 23 VIEWING PORT                   |
| 4 EMBEDMENT RING           | 14 FLUX DETECTOR<br>AND LIQUID INJECTION NOZZLE | 24 SHUTOFF ROD                    |
| 5 FUELLING TUBESHEET       | 15 ION CHAMBER                                  | 25 ADJUSTER ROD                   |
| 6 END SHIELD LATTICE TUBES | 16 EARTHQUAKE RESTRAINT                         | 26 CONTROL ABSORBER ROD           |
| 7 END SHIELD COOLING PIPES | 17 VAULT WALL                                   | 27 ZONE CONTROL ROD               |
| 8 INLET OUTLET STRAINER    | 18 MODERATOR EXPANSION TO HEAD TANK             | 28 VERTICAL FLUX DETECTOR         |
| 9 STEEL BALL SHIELDING     | 19 CURTAIN SHIELDING SLABS                      |                                   |
| 10 END FITTINGS            | 20 PRESSURE RELIEF PIPES                        |                                   |

**Nuclear Fission Power Plants, Fig. 11** Calandria vessel and pressure tubes of CANDU pressurized heavy-water reactor (Courtesy of Atomic Energy of Canada Limited)

**Nuclear Fission Power**


**Plants, Fig. 12** Fuel assembly for CANDU pressurized heavy-water reactor. Twelve assemblies fill a representative pressure tube (Courtesy of Atomic Energy of Canada Limited)

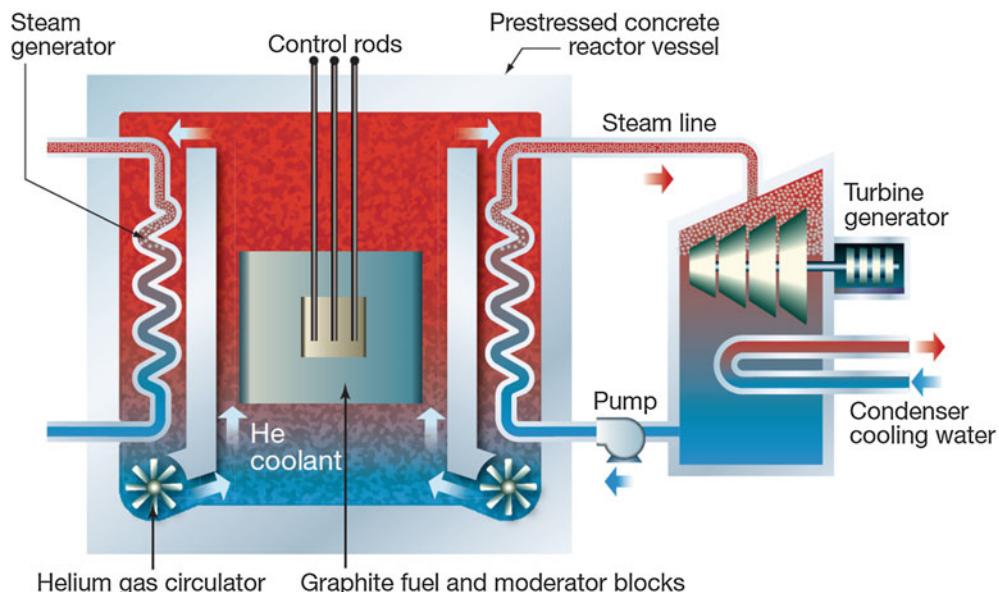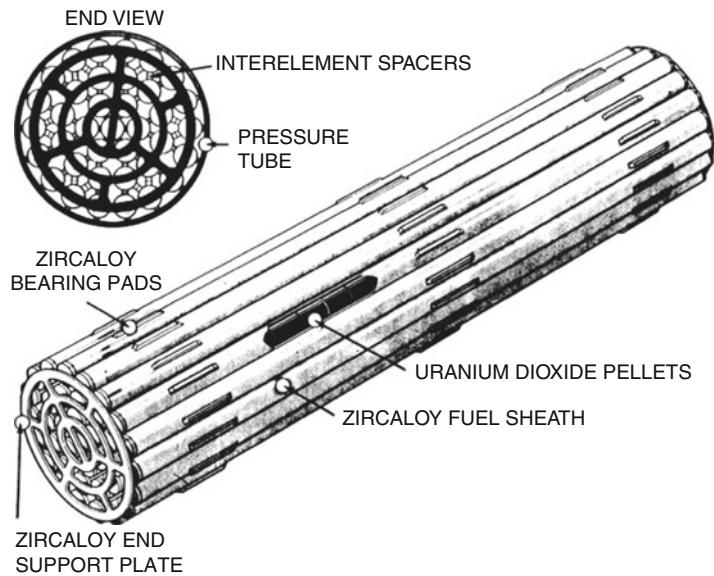

**Nuclear Fission Power Plants, Fig. 13** Steam cycle for high-temperature gas-cooled reactor (HTGR) (Courtesy of Nuclear Engineering International)

### Nuclear Fission Power Plants,

**Fig. 14** Prestressed concrete reactor vessels (PCRV) for (a) prismatic high-temperature gas-cooled reactor and (b) thorium high-temperature (“pebble-bed”) reactor (Courtesy of Oak Ridge National Laboratory)

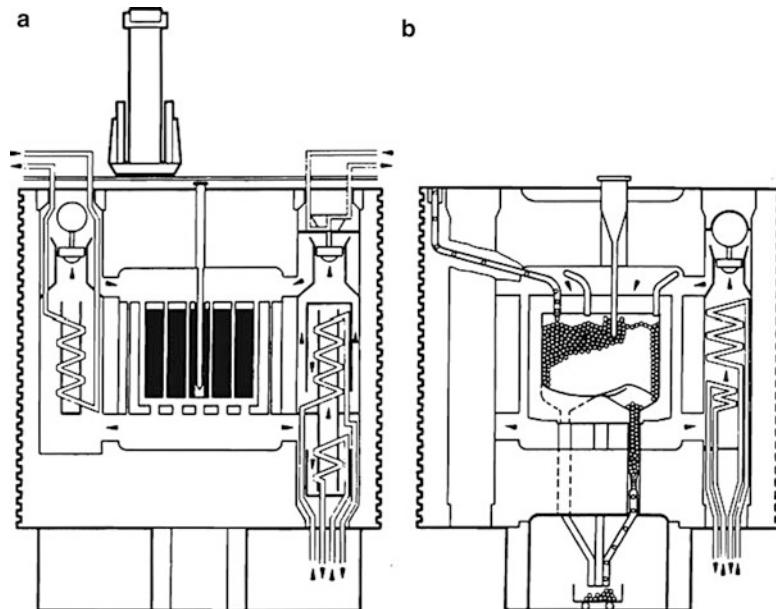

exchanger, and associated piping – entire primary loop – immersed in a large pool of sodium. The now shutdown SuperPhenix was a pool-type LMFBR of similar capacity to the current large commercial reactors. The SuperPhenix reactor vessel and layout are shown in Fig. 20.

Fuel for the LMFBR consists of mixed-oxide ( $\text{PuO}_2\text{-UO}_2$ ) fuel pellets, which typically combine about 10–30 wt% fissile plutonium with natural or depleted uranium – the remnants of the enrichment process. As shown in Fig. 21a, for a reactor other than SuperPhenix, pellets are loaded into thin stainless-steel cladding tubes and hence into hexagonal-array subassemblies. Breeding is optimized by surrounding the mixed-oxide core with a *blanket* of depleted uranium. The axial blankets above and below the core are created by loading pellets of natural or depleted uranium at either end of the core fuel pins. The surrounding radial blanket consists of separate subassemblies (Fig. 21b) of natural or depleted uranium, where the pins may be of larger diameter because the power density in the blanket is much lower than it is in the core.


LMFBR reactivity control is accomplished through use of neutron-poison control rods. Since the breeder produces more fuel than it uses, however, the core reactivity does not decrease with fissile burnup and fission-product

buildup as dramatically as in the thermal-neutron-energy converter reactors described previously. This is fortunate, because the traditional neutron poisons are not very effective for fast neutrons.

Rapid shutdown may be implemented with either of two independent sets of control rods. It is typical for one set to consist of solid neutron-poison rods, top-mounted and inserted by gravity – the traditional approach for most of the world’s reactors. The second system – providing full redundancy should the first fail – often has features allowing for operation even if core distortion has occurred, e.g., through use of oversized channels and segmented rods. Table 1 contains parameters for a large LMFBR and other reactor types. Advanced fast-neutron reactors are addressed in the section “Advanced Reactors.”

### Worldwide Perspective

Worldwide nuclear power reactor status is shown in Table 2 as a snapshot circa 2016 of the ever-changing landscape. Reactor data are from Refs. [8, 12]. As noted previously, these two references – along with Ref. [13] – collectively provide significantly more information on national programs – and on essentially each commercial nuclear reactor ever built or even ordered.

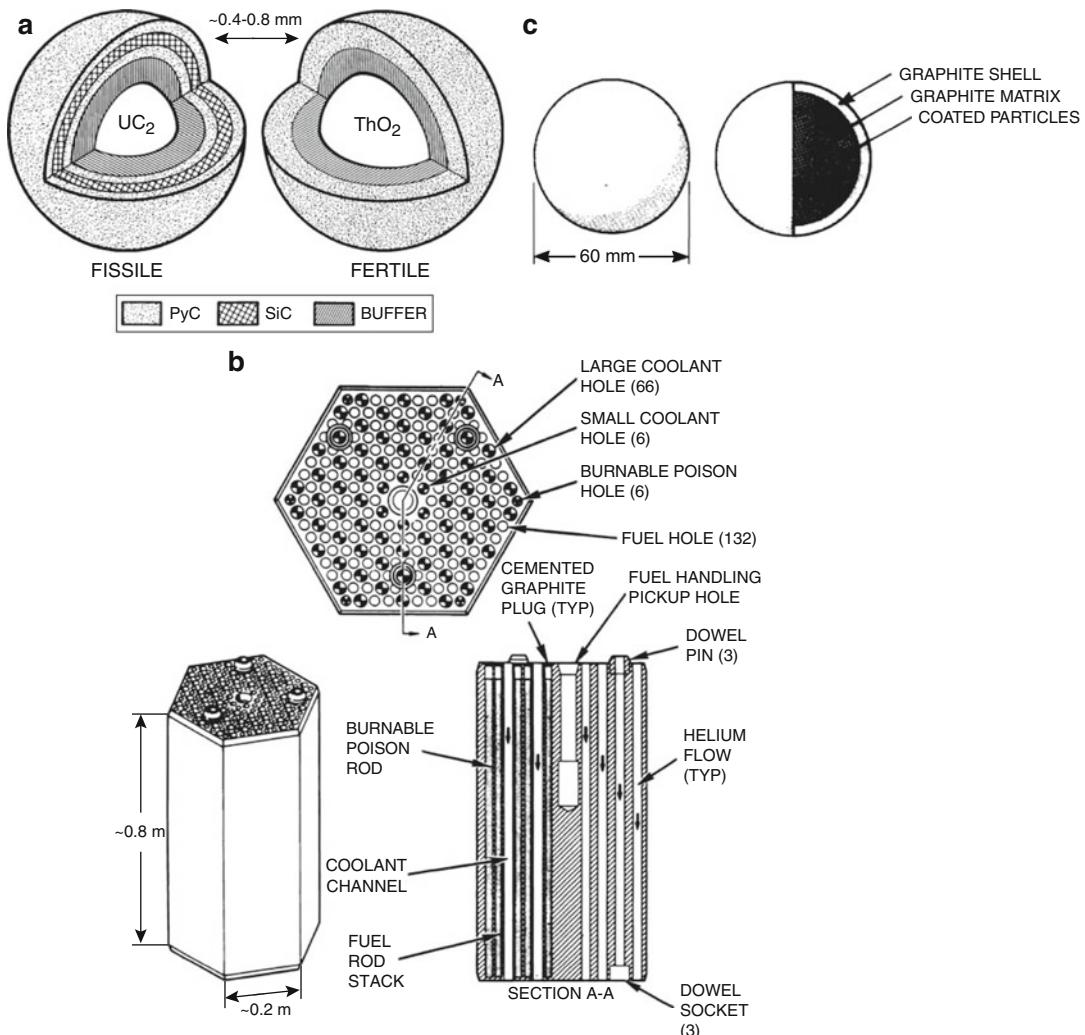

**Nuclear Fission Power Plants, Fig. 15** Fuel-assembly components for high-temperature gas-cooled reactors: (a) microspheres, (b) prismatic fuel block (Courtesy of GA Technologies), and (c) fuel sphere (“pebble”) [10]

The table also shows nuclear generation performance. Both TWe-hr generated and percentages of total national electric energy production are included. Data are for 2014 and, as a comparison, 2010 – the year before the Fukushima accident.

### Other Reactor Concepts


In addition to the nuclear power reactor designs described above, a wide variety of other possibilities have been built for power production or research purposes. Still others have been researched “on paper.” The major approach is to look at viable combinations of fuel, coolant, and

moderator. A few examples are identified here and in the section “[Advanced Reactors](#).”

CANDU reactors could also be operated with fuel assemblies of enriched uranium, plutonium,  $^{233}\text{U}$ /thorium, or a mixture thereof. Potential coolants other than heavy water include light water and organic liquid.

The gas-cooled fast breeder reactor (GCFBR) uses helium coolant and plutonium fuel in a concept similar to the HTGR, except with no graphite moderator. The molten-salt breeder reactor (MSBR) concept includes liquid fuel that circulates through a graphite-block core region in a

## Reactor building

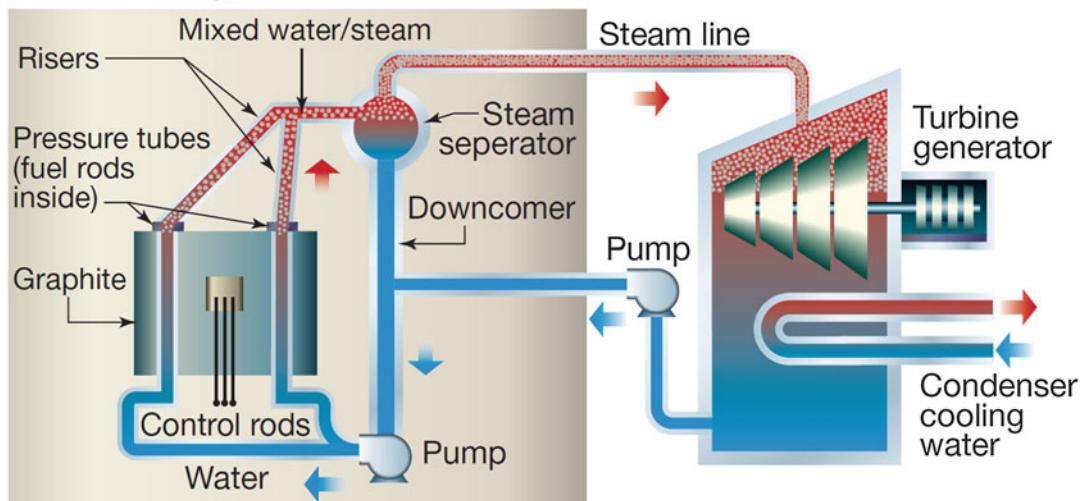

**Nuclear Fission Power Plants, Fig. 16** Steam cycle for pressure-tube graphite reactor (PTGR) (Courtesy of Nuclear Engineering International)

closed primary loop. The fuel is processed on-line to remove fission products and  $^{233}\text{U}$  bred from thorium in the salt.

Many other novel designs that stress enhanced safety and/or compact size also have been proposed. A wide variety of such concepts are identified in the section “[Advanced Reactors](#).”

## Operation, Maintenance, and Control Practices

Specific characteristics of the fission process and the design of reactors and their fuel result in unique features which affect operations, maintenance, and plant control. With over 50 years of experience for nuclear reactors in general and 30 or more years of experience with the more mature system technologies, an increasingly solid basis for good operating practices is becoming available [15]. Uniformly excellent nuclear plant availability is a key indication of this.

### Plant Operation


Routine power operations reflect characteristics of the reactor design – fuel, moderator, coolant, geometry. The BWR, with water boiling in the

core, and PWR, with pressurized liquid water in the core – the two plant types dominating the world circa 2016 – show quite different operational characteristics.

### Boiling-Water Reactor

Startup of a boiling-water reactor begins with running the coolant pumps at minimum speed. The control rods are withdrawn from their initial fully inserted position one at a time in a preset sequence that keeps the power distribution reasonably uniform. The reactor is brought to critical and then made slightly supercritical to heat the coolant slowly to the boiling point where steam formation begins to pressurize the vessel. Initially, the steam is dumped to the main condenser (Figs. 1 and 3). When operating temperature and pressure are reached and the steam flow is about 20% of full capacity, the turbine is started and the generator synchronized to the electric power grid. Power level is increased by control-rod withdrawal, flow increase, or a combination (e.g., with flow set for 20% power, rod withdrawal takes the power to 50% and then the pumps are used to achieve full power).

Once at power, an automatic control system is used to change coolant flow for the reactor to *load*

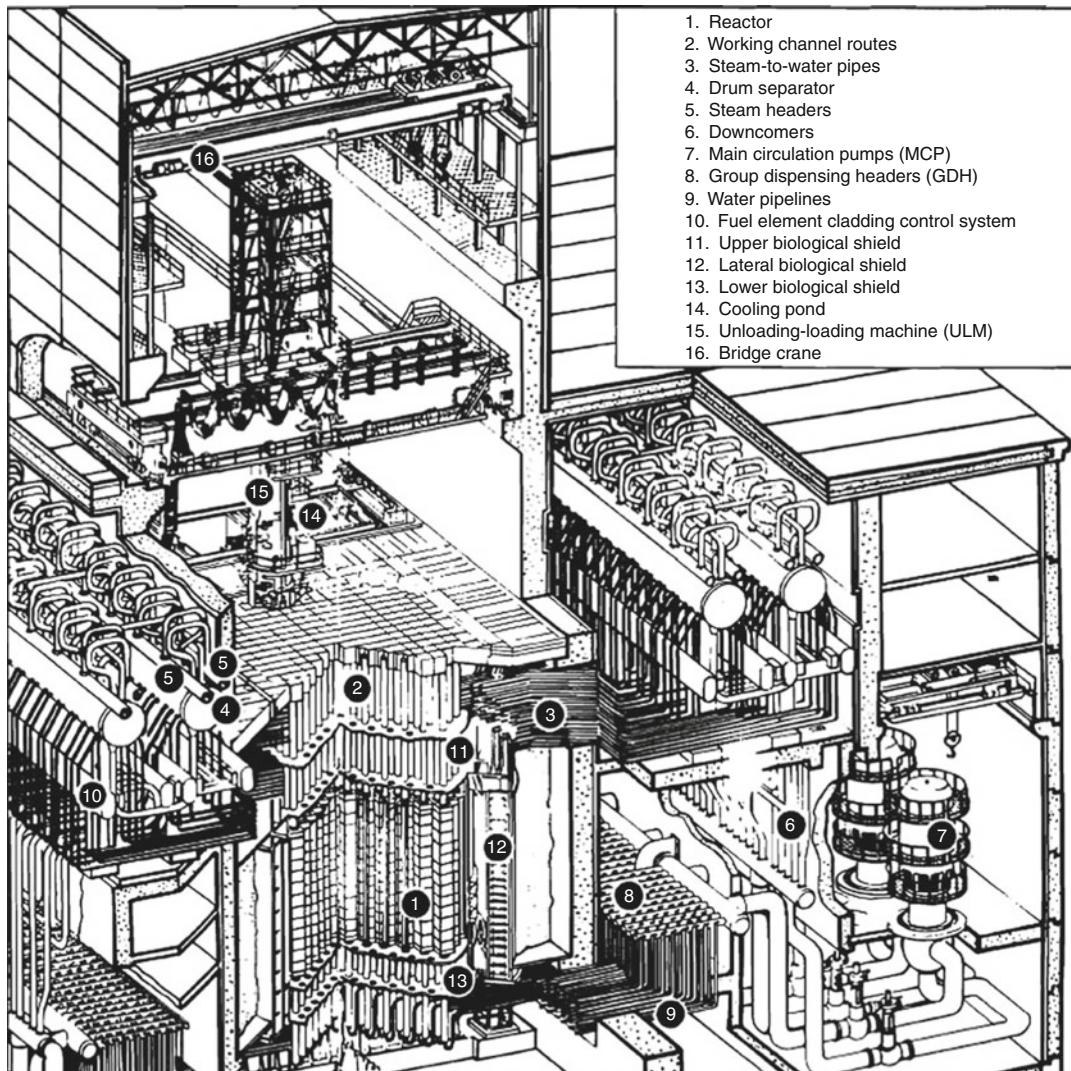

**Nuclear Fission Power Plants, Fig. 17** Sectional view of a Soviet pressure-tube graphite reactor (PTGR) (From Ref. [27])



follow the turbine steam demand. The control rods are still under operator control. For continued steady power operation, control-rod withdrawal or coolant flow changes can be made manually within predetermined power-to-flow limits. Control rods are withdrawn systematically to match fuel-assembly burnup.

Tripping – initiating a scram – of the control rods to shutdown a reactor causes thermal-mechanical stress. Thus, the preferred method for shutdown is essentially the reverse of the


startup process. When the power drops too low for production of electricity, the steam is again dumped to the condenser. This is continued until the fission-product-decay heat load is small enough to be handled by a specifically designed residual-decay-heat-removal system.

BWR refueling is similar to that for the PWR – as described in the next subsection. One important difference is that the control rods do not need to be removed with the vessel head (because they are bottom mounted).

**Nuclear Fission Power Plants, Fig. 18** Fuel assembly for a Soviet RBMK pressure-tube graphite reactor (PTGR) (From NUREG-1250 [1987])

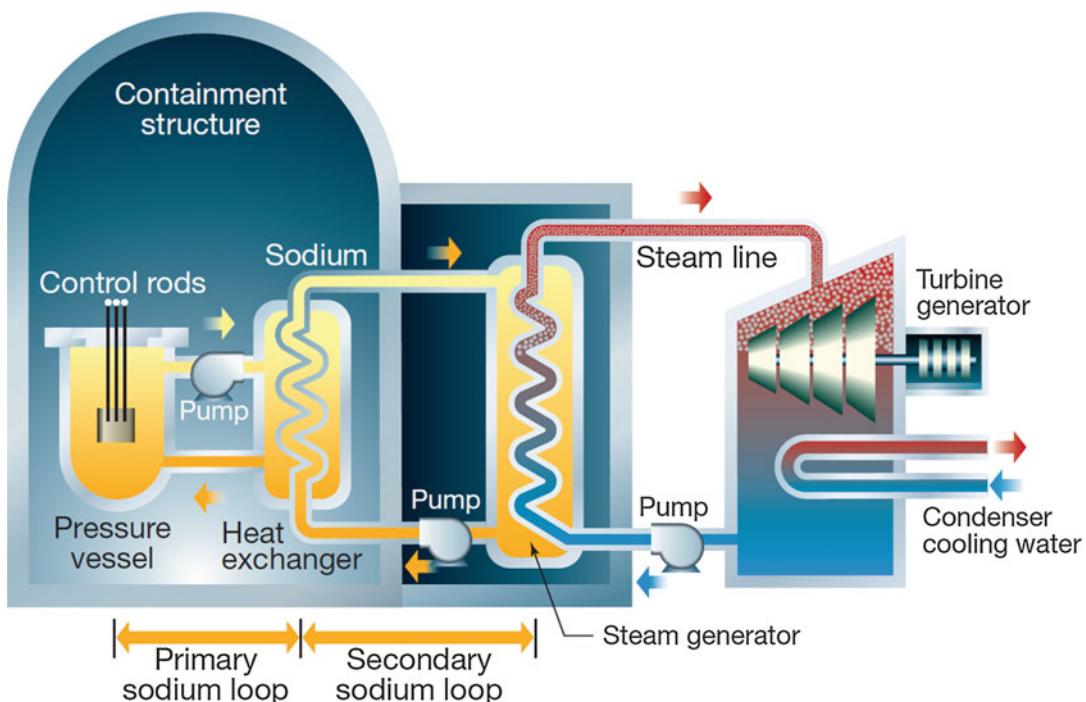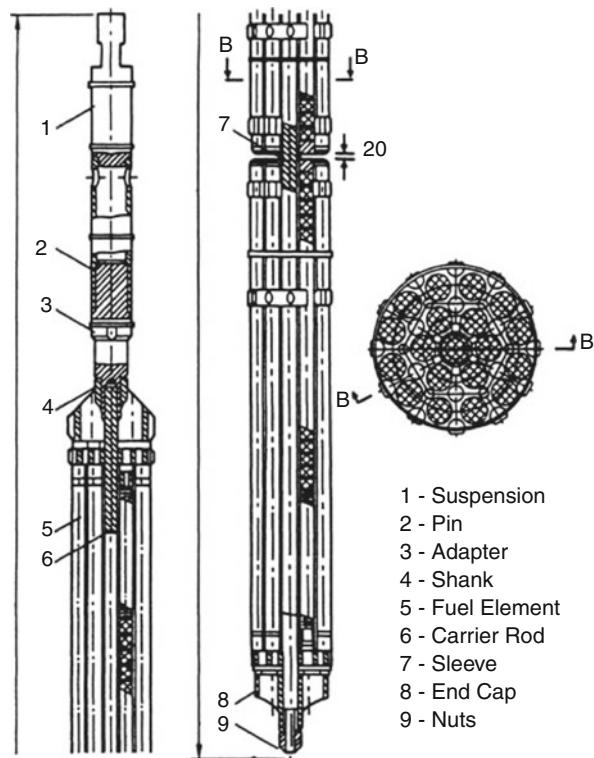


**Nuclear Fission Power Plants, Fig. 19** Steam cycle for liquid-metal fast breeder reactor (LMFBR) (Courtesy of Nuclear Engineering International)

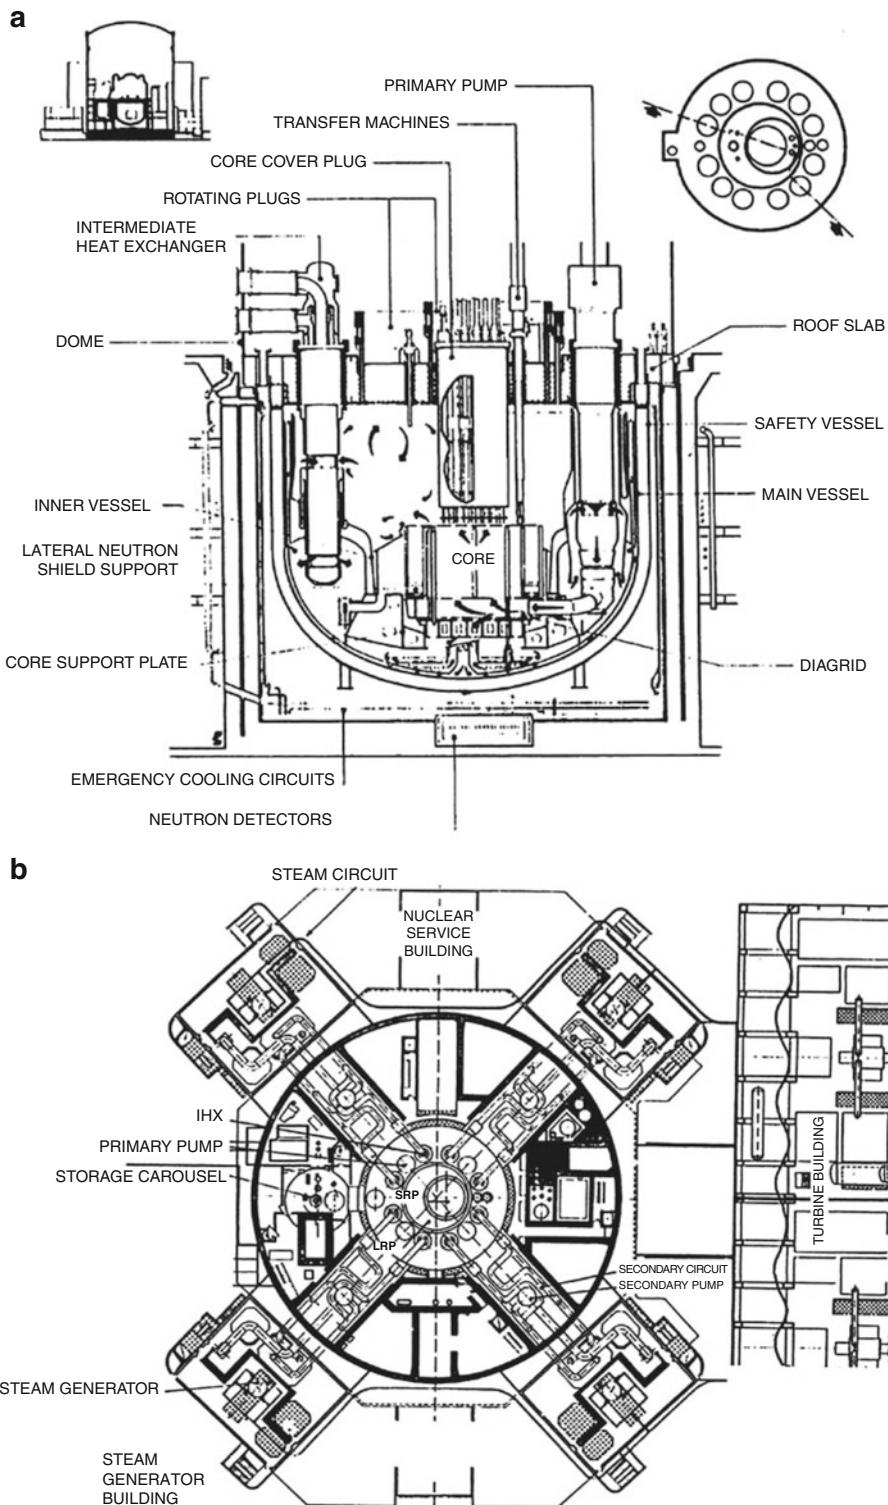

**Nuclear Fission Power Plants, Fig. 20** Basic features of the pool-type SuperPhenix (a) reactor and (b) plan-view layout (Reprinted with permission of NOVATOME, a division of Framatome)

**Nuclear Fission Power Plants, Fig. 21** Fuel assembly for a representative liquid-metal fast breeder reactor. (a) Fuel assembly: 1, pin cladding; 2, slugs of depleted uranium; 3, fuel pellets; 4, wire-wrapped pin; 5, fuel assembly head; 6, fuel-pin assembly; 7, stem. (b) Radial blanket assembly: 1, pin cladding; 2, wire-wrapped fin; 3, depleted uranium; 4, blanket assembly stem; 5, blanket pin assembly; 6, blanket assembly head (Courtesy of Nuclear Engineering International)

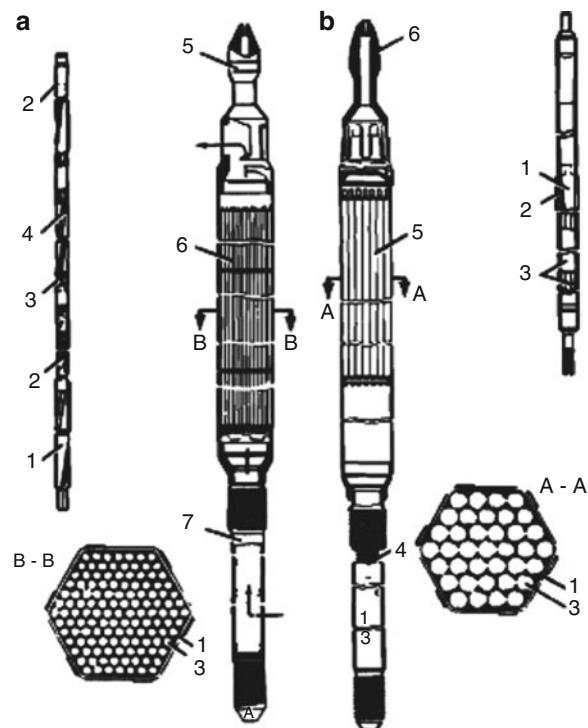

### Pressurized-Water Reactor

Startup of a pressurized-water reactor begins with alignment of support systems and pressurization of the primary reactor coolant system (Figs. 6 and 7). All shutdown (or “safety”) rods are “cocked” (i.e., withdrawn fully) to be available for reactor trip if necessary. Designated regulating rods remain fully inserted. The main reactor coolant pumps are started with their inherent heat generation producing a slow heat-up of the reactor coolant system that minimizes mechanical stress. As operating temperatures are approached, a “bubble” (i.e., steam volume) is drawn in the pressurizer, volume control is established, steam may be drawn to warm the steam generators, and final adjustments are made to the reactor coolant system chemistry and the soluble boron concentration. Steady withdrawal of the regulating control rods first takes the core critical and then supercritical to increase the power level at a predetermined rate. The turbine is started and the generator is synchronized to the grid. Manual control of the reactor, turbine, and steam-generator feedwater is maintained until about 15% power when transfer is made to an

automatic mode for escalation to full power. In general, the turbine is matched to the reactor’s (or actually steam generator’s) steaming rate, a *reactor following* mode of operation. (Note: In practice, for a PWR the reactor leads turbine, while for a BWR the reactor follows the turbine.)

During routine full-power operation, small movements of the first regulating group balance normal power fluctuations. Larger insertions change the power level.

Boric acid concentration is adjusted to match fuel burnup and allow control-rod positions to remain consistent with the power-dependent insertion limits. This concentration may be as high as 2,000 ppm (parts-per-million) in a fresh core and be reduced to 100 ppm or less by the end of the core’s lifetime.

Planned shutdown involves insertion of the rods (with additional boration if cold shutdown, e.g., for defueling, is desired). Decay heat is removed initially by one-pump or natural-circulation operation of the steam generators with the steam dumped to the condenser. When the bulk coolant temperature falls sufficiently,

cooling is shifted to a dedicated residual-decay-heat-removal system and the pressurizer bubble is collapsed.

Within a day or two of reactor shutdown, the decay-heat load decreases sufficiently for reactor coolant system depressurization and refueling. The reactor cavity is flooded with highly borated water to a height of 10 m or more so that the vessel head (with all control rods attached) and the fuel assemblies can be removed while still having enough water above them to provide radiation shielding for operating personnel. Individual spent-fuel assemblies are extracted remotely from the core and moved to a spent-fuel storage rack, usually in a separate building. Fuel not discharged is “shuffled” to new locations. Fresh assemblies are brought in from a fuel handling building.

Refueling itself for an LWR requires only about 4 days. However, “refueling outages” often last up to a month or more when including cool-down and advance preparations, maintenance (corrective and preventive), minor plant modifications, vessel reassembly, and preoperational testing.

### Operation Features

Four key goals of operations for nuclear power plants – the first two unique and the other two common to all power plants – relate to: (1) nuclear safety, (2) communications, (3) technical results, and (4) operating and fuel costs. Nuclear safety, i.e., prevention of accidents, underlies both technical and economic performance. Good, reliable communications with the public, staff, and company are necessary to counterbalance unfounded fears that may be associated with nuclear energy.

Technical results are judged according to performance indicators, an important one being availability. As for any power plant, availability is enhanced by reducing the length of planned shutdowns and the frequency of unplanned shutdowns. Because reactor fuel assemblies are added and replaced as units, adjustment of cycle length (typically between 1 and 2 years) can affect both availability and reasonable operating and fuel costs.

Where possible, nuclear units run base-loaded due to both high plant capital costs and difficulties in making rapid power-level changes (based on the behavior of certain fission products that poison the chain reaction). France, however, with its large fraction of nuclear electricity (e.g., see Table 2) has developed technical ability to facilitate daily load following variations. The latter is also a valued attribute in a number of advanced reactors (e.g., units considered in the section “[Advanced Reactors](#).”)

The hazard of nuclear power associated with the large fission-product inventory and the potential severe accident consequences leads to special attention to operator training and to emergency response capabilities. Operators are provided with extensive technical training including substantial use of high-fidelity, plant-referenced control-room simulators which allow practice on routine, anticipated upset, and emergency operating scenarios. Emergency preparedness includes developing procedures, establishing communications, preparing equipment and facilities, and designating emergency response team personnel.

### Plant Maintenance

Due to the presence of fission products and other indirect sources of radioactivity from the neutron chain reaction, many important maintenance and other activities must be conducted in a manner that minimizes the hazards associated with radiation. This has led to the development of remote and other sophisticated radiological control methods. In performing hands-on work, it is challenging to hold radiation exposures of personnel within specified limits on quarterly, annual, and lifetime doses. Overall, however, the requirement that all exposures be kept “as low as reasonably achievable” (ALARA) has resulted in extensive preplanning of all radiological work activities.

Gaseous and liquid wastes are held for as long as practicable to allow maximum radioactive decay. Then, they may be diluted and dispersed to the environment so long as applicable limits for liquid and airborne discharges are not exceeded. Otherwise, solidification, containment, and disposal are required.

Nuclear reactors, like all power plants, require corrective and preventive maintenance that balance the conflicting goals of maximizing short-term profits by deferring work and reducing intervals between regular maintenance activities to assure top performance. The amount of corrective maintenance depends primarily on the initial quality of components and systems, control of operating conditions, and the effectiveness of the preventive maintenance program.

Preventive maintenance for the reactor coolant system (including reactor vessel, reactor coolant pumps, control rod drive mechanisms, instrumentation, and in applicable systems pressurizer and steam generators) must account for neutron irradiation effects on components and systems. The nuclear industry is using methods of reliability-centered maintenance increasingly as sufficient operating experience and data are collected to provide useful statistical reference. In France, where a single utility operates a sizeable number of each of several standardized units, maintenance is considered a lifetime project with integrated goals to guarantee safety, ensure efficiency, assess impact of changes in operating conditions, minimize maintenance cost increases, and establish an optimum decommissioning policy (i.e., definition of the end of a reactor's safe and economic lifetime).

### Plant Control Systems

Plant instrumentation and control systems are divided among those for normal operation, regulation of parameters through analog or digital technologies, and protection of personnel and equipment by reactor trip and safety feature actuation. Examples of control requirements in the first category may be inferred from discussions earlier in this subsection of operation of boiling- and pressurized-water systems. Specific safety features are described in the next subsection.

Reactors in the USA have tended to continue use of older analog systems for routine reactor control, lacking incentive – and, in some sense, having a *disincentive* associated with time and costs associated with being among the first to develop, test, and license a process – to upgrade

to state-of-the-art digital systems. However, significant government-sponsored research and development support in the first decade of the twenty-first century offers the prospect of near-term progress.

Data acquisition and display technology, by contrast, has been upgraded substantially, especially in the aftermath of the accident at the Three Mile Island, Unit 2 reactor. Should the control room become uninhabitable, a remote shutdown panel will allow operators to implement the emergency response functions necessary for safe shutdown of the plant.

France, with its large, dynamic development program, has upgraded controls in early units and developed new systems. Their current and near-future reactor generations have particularly sophisticated reactor operating consoles with state-of-the-art digital systems for control, data acquisition, operator support, and emergency response. Control systems facilitate process monitoring, exchange of information, and self-monitoring and self-diagnosis. Automatic protection systems are designed for reliability with redundancy and diversity (e.g., one of which includes four redundant data acquisition and processing units coupled with two independent safeguard logic units for automatic actuation of the engineered safety features) and include testing and simulation capabilities. Data processing systems are designed to give operators full information on the present state of the reactor, monitor data, store event scenarios and other data changes in memory, and perform calculations. Advanced reactor controls may facilitate functions such as automatic turbine load shedding, steam level control (nonreactor, non-safety-related), and trip avoidance – and the consequent thermal-mechanical disruption and postaccident monitoring and control.

### Nuclear Reactor Safety Features

#### Energy Sources

Five distinct energy sources may contribute to an accident in a nuclear power reactor [10]:

1. Stored energy – fuel, coolant, and structures store thermal energy at all times during reactor power operation; redistribution may result in immediate damage and/or prolonged problems.
2. Nuclear transients – positive insertion of reactivity (increase in neutron multiplication), from configuration or material changes, may add a transient energy source resulting in from an increased power level to a large power pulse.
3. Decay heat – heat from fission-product decay, as high as 7.5% of operating power at the time of shutdown from a lengthy run, dies out slowly and can be a large energy contribution after dissipation of stored energy and shutdown of the neutron chain reaction; with inadequate heat removal, it may be sufficient to cause fuel melting or other damage.
4. Chemical reactions – fuel, cladding, and coolant materials selected to be essentially unreactive with each other under normal operating conditions may, at elevated temperatures that may be produced by nuclear transients and/or decay heat, experience energetic chemical reactions. Extra heat energy and potential hydrogen explosion are unwanted byproducts.
5. External events – natural (floods, hurricanes, tornadoes, earthquakes, and tsunamis) and man-made (aircraft impacts and industrial explosions) events external to the reactor system have the potential to initiate or otherwise contribute to accidents.

The magnitude and timing of contributions from each category are important to accident progression. Understanding each is necessary to accident prevention and mitigation.

Nearly 98% of all radioactive products are retained by the fuel assemblies when sufficient cooling is provided to prevent fuel melting. Thus, major objectives of nuclear reactor operation and safety are to provide adequate heat removal and control of the energy released in the system to prevent overheating and, in the most severe case, melting of the fuel.

### Design-Basis Accidents

*Design-basis accident* scenarios involve postulated failure of one or more important systems

and an analysis based on conservative assumptions (e.g., pessimistic estimates of fission-product release). The radiological consequences must be shown to be within preestablished limits. In this sense, the accidents serve as the *basis* for assessing the overall acceptability of a particular reactor *design*. Design-basis accidents for light-water reactors (and, by extension, other reactor types) are often classified according to the following general characteristics:

1. Overcooling – excessive heat removal from steam withdrawal (perhaps through a steam-line break or steam-generator overfeeding [PWR and other multi-loop systems]) causing reactivity change.
2. Undercooling – inadequate heat removal occurring when steam flow is decreased, e.g., following a turbine trip or reduction in feedwater flow; a complete loss of heat-sink accident (LOHA) is an extreme case of undercooling. The accident at Fukushima involved essentially total loss of heat-removal capability precipitated by loss of all electric power (station blackout). The accident also evolved to include features of the loss-of-flow (LOFA) and loss-of-coolant (LOCA) accidents which are addressed, respectively, in points 4 and 5 below.
3. Overfilling – increase in reactor coolant inventory, e.g., from malfunction of the volume control system or inadvertent emergency core cooling system (ECCS) – see the section “[Accident Mitigation Systems](#)”.
4. Loss of flow accident (LOFA) – decrease in reactor coolant system (RCS) flow rate, e.g., following failure of main reactor coolant pump(s).
5. Loss of coolant accident (LOCA) – decrease in reactor coolant inventory resulting from breaches in the reactor coolant pressure boundary; the “classic” LOCA involves rupture of major primary piping, but steam-generator tube rupture and inadvertent opening of a relief or safety valve – the latter having been the proximate cause of the accident at Three Mile Island – are also included.

6. Reactivity – core reactivity and power distribution anomalies – unplanned control-rod withdrawal, other maloperation, and ejection (in a PWR) or drop (in a BWR) of one or more control-rod assemblies; also increased BWR coolant flow rate, and decreased PWR boron concentration, or misloading of a fuel assembly. Flow rate and control rod anomalies precipitated the accident at Chernobyl.
7. Anticipated transient without scram (ATWS) – failure to trip (or shutdown) the reactor following a transient such as inadvertent control-rod withdrawal, turbine trip, or loss of feedwater.
8. Spent-fuel and waste system – radioactivity release from a spent-fuel assembly or reactor subsystem or component – events outside of the reactor-primary system. The accident at Fukushima involved spent-fuel-pool issues.
9. External events – natural or human-caused events that can effect plant operating, and safety systems – sequence initiated by an “external event” as identified in the section “[Energy Sources](#).” An earthquake and associated tsunami triggered the accident at Fukushima.

More severe accidents, sometimes referred to as beyond-design-basis accidents, where multiple safety systems fail to function – as caused by station blackout in the Fukushima accident or by being purposely disabled in the TMI and Chernobyl accidents – increasingly are used to evaluate overall reactor-system responses.

### Safety System Characteristics

Reactor-system safety characteristics fall into three major categories.

1. *Inherent* stabilizing feedback mechanisms and coolant natural circulation, for example, depend only on the laws of nature.
2. *Passive* safety functions include dropping shutdown control rods by gravity, injecting emergency coolant with stored energy, and providing barriers to release of radioactivity.
3. *Active* systems, using, for example, pumps, motors, and power supplies provide the remaining element of reactor safety.

The engineered safety systems described below generally combine passive and active elements while the advanced reactors considered later rely increasingly on passive systems. While inherent and passive safety systems are desirable, active systems appear to be able to control a wider range of parameters efficiently and can be subjected to performance testing. In general, safety of nuclear reactors is ensured by a good combination of all three.

Reactors can differ greatly in design and detailed engineering characteristics. However, basic design safety principles are common to all, including the multiple-barrier concept for fission-product containment and its related *defense-in-depth* features.

Because each protection and safety function must be available at all times, reliability is highly valued. Design principles and criteria have been developed for this purpose. Several important ones are described below.

*Redundancy* provides more safety-system components or subsystems than are needed to meet minimum requirements. For example, although a single emergency cooling pump might be enough, two or three are provided as a hedge against failure or unavailability during maintenance. Systems that meet a *single failure proof criterion* have sufficient redundancy to tolerate failure of any single component and still continue to function as intended.

*Diversity* employs two or more systems based on different design or functional principles for a particular safety function. This is added protection against *common-mode failures*, in which redundant systems are disabled at the same time for the same reason. Control rods and boric acid injection, for example, constitute diverse LWR shutdown systems. Electrically powered and steam-driven pumps supply auxiliary feedwater or facilitate decay heat cooling; high-pressure nitrogen gas provides a passive, stored-energy alternative.

*Physical separation* of components and systems intended to perform the same function also protects against simultaneous loss, e.g., by fire or flood. The primary means of accomplishing this are distance and physical barriers (e.g., as shown by Fig. 9; see Ref. [14] for web access to the large detailed drawings).

Emergency electric power supply is an overwhelmingly important example of combining these three design safety principles. Multiple ties to the off-site electrical grid, diesel generators with stored fuel, and storage-battery systems are configured with redundancy, diversity, and physical separation to provide reliable power for safety functions when the normal supplies are not available. The Fukushima site, unfortunately, entered a devastating station blackout condition due to loss of off-site power (earthquake), dislocation of diesel generators and fuel supplies (tsunami), and eventual discharge of the batteries.

Another cornerstone of reactor design is the *fail-safe principle*, in which components or systems are designed to return automatically into their safest condition if they fail or if power is lost. A prime example is having the control rods enter the core when their power supply fails or is interrupted (including on automatic or manual trip signals).

### Accident Mitigation Systems

Safety systems for accident mitigation are highly design-dependent (e.g., based on design and operational differences among fuel form; coolant – water, gas, liquid metal; neutron energy; and other features [see, e.g., Table 1, first section]). The common purposes, however, are to prevent overheating, fuel melting and other damage, and subsequent large-scale dispersal of fission products. Reliability is enhanced through redundancy and diversity in subsystem function and location, especially as related to electric and other power sources.

Reactor safety systems – for the dominant LWR loss-of-coolant accident, but with more general applicability as well – may be classified according to function as:

1. Reactor trip (RT)
2. Emergency core cooling (ECC)
3. Postaccident heat removal (PAHR)
4. Postaccident radioactivity removal (PARR)
5. Containment integrity (CI)

Their basic functions are summarized by Fig. 22 for light-water reactors. The same basic

functions apply to all reactor systems, even if in somewhat different form.


Reactor trip for each of the reactor types described in the section “[Reactor Systems](#)” includes neutron poison control rods, which can be inserted rapidly into the fuel core to shut down the fission chain reaction. These rods are supplemented by alternative shutdown means including injection of soluble boric acid poison (LWRs); moderator dump (CANDU-PHWR); reserve shutdown spheres (HTGR); and a redundant, independent set of control rods (LMFBR).

Emergency core cooling for the light-water, and most other water-cooled, reactors is implemented by injection of borated water – the same medium that provides for emergency reactor trip – into the coolant-starved core region following any of many possible LOHA, LOFA, or LOCA scenarios. Multiple trains of separate systems typically can inject water at high, intermediate, and low pressure to coincide with various needs during the time-history and/or magnitude of the event. The recirculation of coolant that collects in the reactor building sump provides a long-term coolant supply after the initial inventories have been exhausted.

As described above, with loss of electric power – up to and including station blackout – cooling is compromised (as are heat-and radioactivity-removal and containment integrity). Additionally, loss of electric power compromises many aspects of lighting, monitoring, and control, leaving operators “blind” both physically and figuratively.

The CANDU-PHWR system has a unique safety-related design feature with two separate flow circuits configured so that adjacent pressure tubes (Fig. 11) receive coolant from a different source. Thus, a break in a specific pressure tube can affect no more than half of the fuel and no large core volumes are left uncooled. Additionally, the separate moderator volume provided by the calandria vessel provides a huge heat sink for energy removal.

Emergency cooling for the HTGR design is predicated largely on the very high heat capacity of the graphite fuel, supported by auxiliary helium

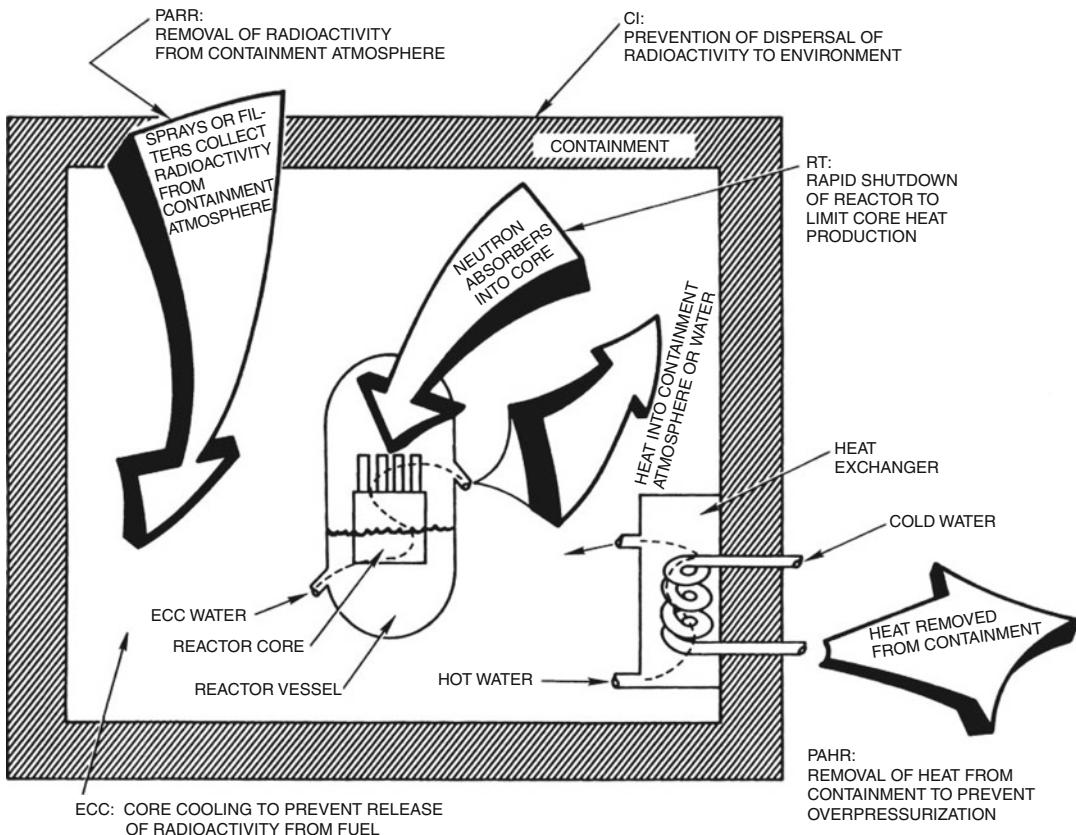

**Nuclear Fission Power Plants, Fig. 22** Functions of safety systems for light-water reactors (Adapted from WASH-1400 [16], courtesy of US Nuclear Regulatory Commission)

circulation and containment afforded by a steel-lined prestressed concrete reactor vessel (PCRV).

The LMFBR, by contrast with the water-cooled reactors, has low-pressure, high-boiling liquid-sodium coolant which would not be voided even during a serious primary-system breach. Thus, long-term, natural-circulation cooling capability is uniquely available.

Postaccident heat removal has two components – coolant temperature reduction and containment-building pressure control. The first is accomplished through heat exchangers for ECC water recirculation in the water reactors. For the gas- and liquid-sodium-cooled reactors, continued use of the steam generators can serve a similar function in the primary coolant loops. Pressure control may be accomplished with containment-atmosphere coolers. In water reactors, this may be supplemented with steam-condensing water sprays.

Absent adequate heat removal of fission-product energy, exoergic chemical reactions (see section [Energy Sources](#)) increase the heat load dramatically. Prospects for hydrogen generation and detonation are complications, e.g., as experienced at various magnitude for each of the three major accidents.

Postaccident radioactivity removal of chemically active iodine and aerosol/particulate constituents is accomplished with filtration. The nonreactive noble-gas constituents can only be contained – or diluted and released in a controlled manner.

Water-cooled reactors also have provision for containment sprays to remove radioactivity. Although the water sprays used for pressure reduction naturally remove much of the chemically reactive radioactive material, additives such as sodium hydroxide or thiosulfate increase removal, especially of elemental iodine.

Containment integrity is the last line of defense against fission-product release. Common features of water reactor containments are a leak-tight steel liner surrounded by thick reinforced concrete, including, e.g., that for the pressurized-water and boiling-water reactors in Figs. 23 and 24, respectively. The structure of the HTGR's prestressed concrete vessel (Fig. 14) serves a similar purpose.

Another major element of containment integrity is the ability to isolate penetrations using remotely operated valves or other means. These typically actuate on the predetermined indication of excessive pressure, radiation level, or other related parameters. Station blackout negates the needed monitoring and control.

Integrity of even the most robust containment, however, depends on having all – or at least a reasonable subset – of the other safety features function as intended. Otherwise, there can be excessive pressure buildup and/or severe fuel melting with subsequent dire consequences. The complete lack of a leak-tight containment structure at the Chernobyl PTGR (Fig. 17) was a major contributor to the consequences of the 1986 accident there.

Under some circumstances, ability to vent gases (especially hydrogen) can have value. Station blackout conditions prevented this at Fukushima.

### Other Defense-in-Depth Considerations

Defense-in-depth as discussed previously had strong technical emphasis. However, nuclear safety also depends on preventive measures, only a few of which include testing and inspection, safety assessment, deficiency analysis and correction, training, and quality assurance. Protection and mitigation require transient operating guidelines and procedures and detailed emergency planning.

Increasingly important is free and open international exchange of knowledge and experience with proper feedback to reactor design, maintenance, and operation – the need for which was highlighted dramatically by the TMI-2, Chernobyl-4, Fukushima and other accidents. Regulatory controls and voluntary peer oversight – e.g., by the US Institute for Nuclear


Power Operations (INPO) and the World Organization of Nuclear Operators (WANO) – provide independent verification of safety aspects but do not replace responsibility of the owner/operators.

## Nuclear-Power Regulation

The inherent hazard associated with the radioactive material in reactor systems has led to the nuclear industry being the most regulated in the world [10, 15, 18]. Regulatory bodies include: the US Nuclear Regulatory Commission (NRC); French Commissariat à l'Énergie Atomique et aux Énergies Alternatives (CEA) – up until late 2009, Commissariat à l'Energie Atomique, now with added regulation of alternative energies; Canadian Nuclear Safety Commission (CNSC) – known as Atomic Energy Control Board (AECB) prior to 2000; and the UK Nuclear Installations Inspectorate (NII). Every other nation that operates nuclear-fission reactors also has established a regulatory authority. Requirements for reactor design and operation are established and their implementation is evaluated and monitored. Regulations with the force of law, licenses, or other methods are developed for reactor operation by such bodies, often with significant political and/or public input to the process.

The somewhat recent advent of advanced nuclear power reactors (section “Advanced Reactors”) has led to changes in the NRC licensing process. Newly instituted generic certifications are valid for 15 years. Using an exhaustive public process, safety issues within the scope of the certified designs are fully resolved and, hence, will not be open to legal challenge during licensing for specific plants. US utilities will be able to obtain a single NRC reactor license to both construct and operate – as opposed to separate ones previously – before construction begins. A number of reactor types have received design certification [2].

Overall, certification of designs is on a national basis and is safety based. In Europe, there are moves toward harmonized requirements for licensing. Reactors there may also be certified

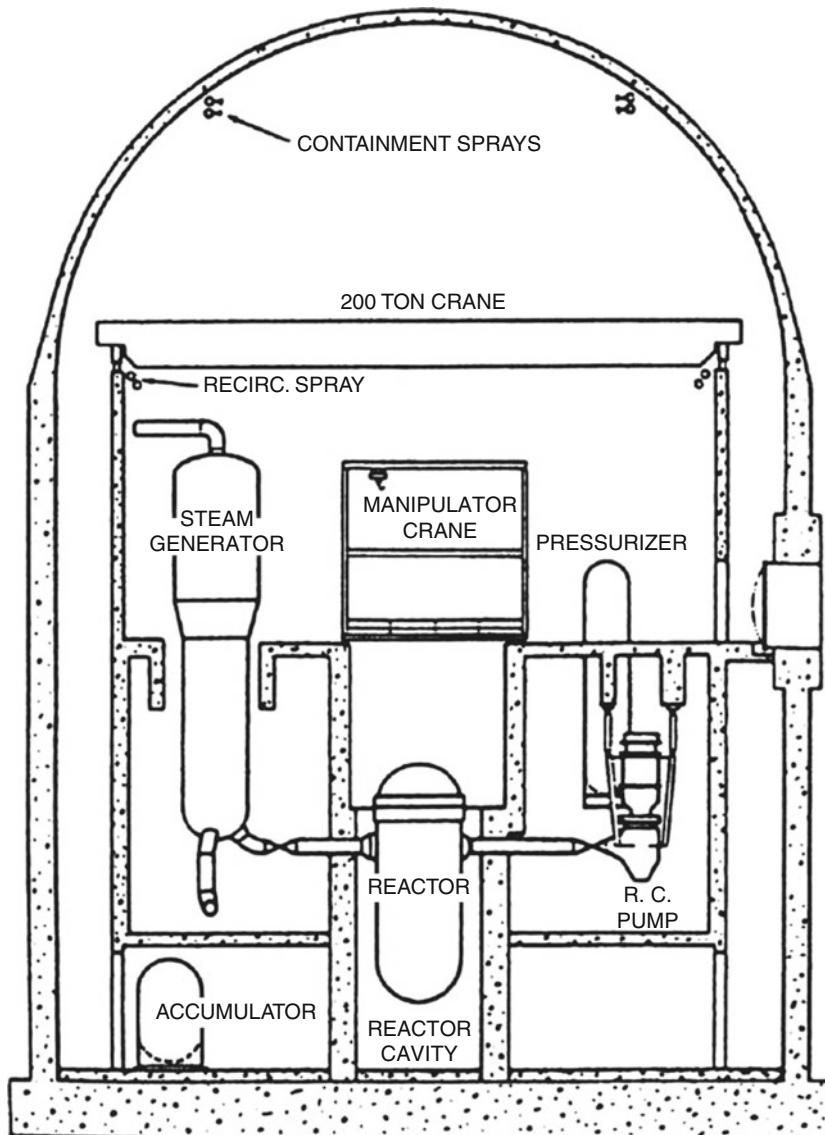


**Nuclear Fission Power Plants, Fig. 23** Containment structure for a representative pressurized-water reactor (From NUREG-1150 [17], courtesy of US Nuclear Regulatory Commission)

according to compliance with European Utilities Requirements (EUR) [2].

Quality assurance (QA) requirements focus on methods and procedures to assure proper design, construction, and operation of safety-related components and subsystems. Other requirements address issues from acceptable personnel radiation exposures to analysis methods and acceptance criteria for consequences of design-basis

accidents and, in some cases, beyond-design-basis accidents.

The accident at the Three Mile Island Unit 2 (TMI-2) PWR in 1979 led to seminal changes in the regulatory process – and nuclear industry as a whole – in the USA and elsewhere in the world. Some of these changes relate to the design, quality assurance, and inspection of modifications to plant safety systems; development and use of

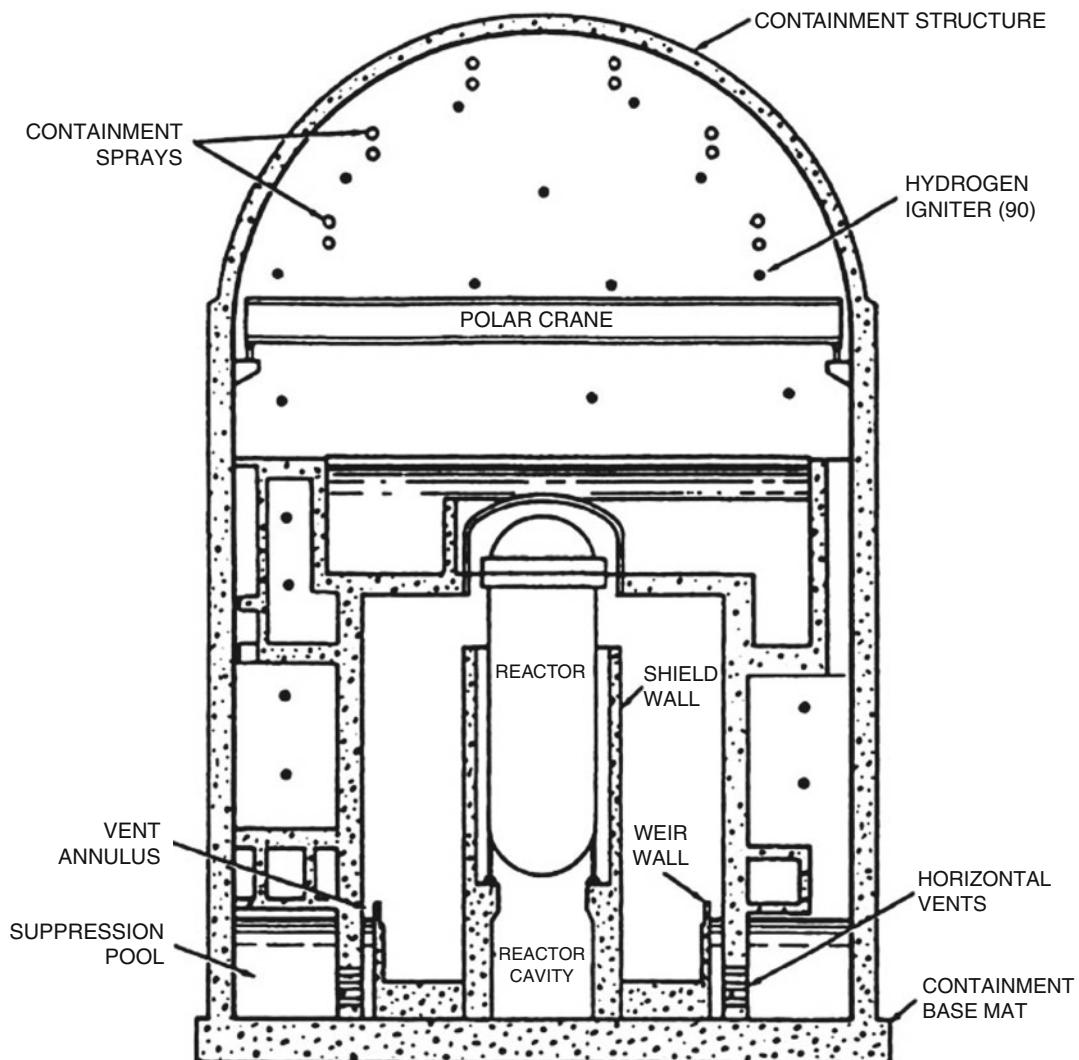

**Nuclear Fission Power Plants, Fig. 24** Containment structure for a representative boiling-water reactor (From NUREG-1150 [17], courtesy of US Nuclear Regulatory Commission)

preapproved procedures for operation, maintenance, and other activities; administration, including staffing, training, and documentation; emergency planning; technical support, including accident and root-cause analysis; and support services such as radiological controls, chemistry, and maintenance [10, 19].

Training and qualification, in particular, permeates essentially all of the changes. Content for control-room operators and other specialties is developed systematically and formally beginning with intensive job analysis and moving on

through feedback of operating experience. It also represents collaboration among training specialists, incumbents, supervision, management, and subject-matter expertise. Of special significance, operator training is augmented greatly by availability for each reactor of a high-fidelity, replica control-room simulator.

The disastrous 1986 accident at the Chernobyl Unit 4 in the former Soviet Union occurred with a reactor system not used elsewhere in the world. However, it did serve to reinforce many of the design, operation, and management lessons from

the earlier TMI-2 accident. It also provided unprecedented insights into severe-accident behavior, served as a catalyst for completion of post-TMI-2 “action plans,” and significantly enhanced international cooperation and collaboration in research initiatives and nuclear-power-plant operation and management [10].

In the aftermath of the accident at Fukushima Daiichi many changes have been made in the regulatory process worldwide. Japan’s newly established Nuclear Regulation Authority (NRA) “provides for clearer responsibilities and greater authority,” e.g., for the challenges in verifying upgrades and authorizing restart of shut down units. New attention is applied to on-site and off-site emergency planning and procedures and responding to specific lessons learned – notably in the areas of natural hazards and severe-accident management [8, 20].

The USA concluded that many of the lessons learned were known and, to some extent, addressed, albeit in a “patchwork” manner. Balance is sought between the traditional defense-in-depth approach and newer risk insights, with explicit application to beyond-design-basis accidents. Attention is provided in general to on-site emergency response and severe-accident management and more specifically to important issues such as station blackout, multi-unit effects, spent fuel concerns, and hydrogen control.

The Nuclear Energy institute’s (NEI) Diverse and Flexible Coping Strategies (FLEX) effort is two pronged. Large-scale emergency backup equipment and supplies will be located at regional locations. Each plant’s own response will have FLEX-guided gear for “cooling of the reactors, their containments, and spent fuel pool storage through the extended loss of AC power and access to the ultimate heat sink.”

## Advanced Reactors

The nuclear power industry has been developing and improving reactor technology for more than five decades. Some of the *advanced – next generation* – reactors, which provide hope for


revitalizing the nuclear-power option, are starting to be built [2, 3].

Four generations of reactors (Fig. 25) are commonly distinguished. GEN-I reactors were developed in the 1950s–1960s with only a few in the UK still running today. GEN-II reactors are typified by the present US fleet and most operated elsewhere worldwide (including those described in the section “[Reactor Systems](#)” with examples in Table 1). The second-generation nuclear power units have been found to be safe and reliable, but they are being superseded by better designs [2].

GEN-III reactors include, conceptually [2]:

- A standardized design for each type which is intended to expedite licensing, reduce capital cost and reduce construction time, and ultimately compete economically with coal-fired and other generation alternatives
- A simpler and more rugged design, making them easier to operate and less vulnerable to operational upsets
- Higher availability and longer operating life – typically 60 years
- Further reduced risk of serious reactor accidents
- Resistance to serious damage that would allow radiological release from an aircraft impact
- Higher fuel burnup lifetime, reduced outage time, and reduced amount of radioactive waste

The signature difference for GEN-III plants is a strong focus on passive, inherent safety features – e.g., gravity, natural convection, or resistance to high temperatures – which require no active controls or operational intervention to avoid accidents in the aftermath of a serious malfunction. This is in contrast to the more traditional GEN-II reactor safety systems (e.g., in the section “[Reactor Systems](#)”) which are active in the sense of involving electric or mechanical operation on command. Certainly, some current features of GEN-II reactors are passive, e.g., negative reactivity feedback and mechanical pressure relief valves which function absent operator action or auxiliary power. However, parallel redundant systems are also necessary. The advanced reactors

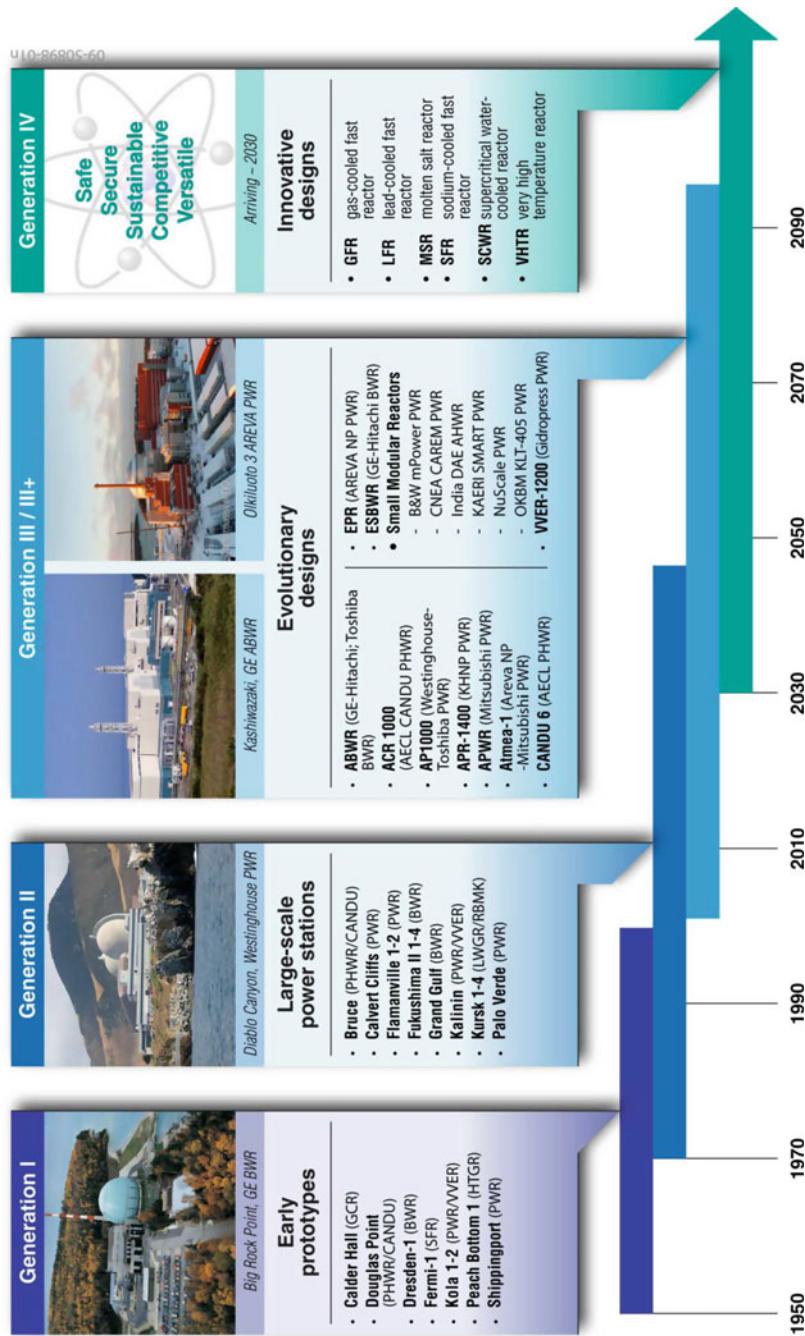

**Nuclear Fission Power Plants, Fig. 25** “Reactor generations” timeline (Courtesy of *Generation IV International Forum*)

emphasize inherent or full passive safety depending only on physical phenomena not on electric power and functioning engineered components. This emphasis is to the extent that some are referred to, probably inappropriately, as *inherently safe* (see the next section “[Conceptual Advanced Reactors](#)” for three distinctly different examples).

### **Conceptual Advanced Reactors**

Since the early 1990s, advanced reactor concepts using light-water, helium, and liquid-sodium coolants have been under development from the experience base of the current “parent” reactors. An early, conceptual version of each is described here. All include enhanced negative power feedback mechanisms to assist in obtaining shutdown and passive postaccident/post-shutdown cooling mechanisms.

#### **Advanced Light-Water Reactor**

The conceptual advanced light-water reactors differ from the traditional ones (section “[Light-Water Reactors](#)”) primarily through reduction or elimination of active emergency system components, including large pumps and diesel generators, and implementation of passive features, from reactor control to emergency core cooling functions [21].

Both GEN-III PWR and BWR versions use conventional uranium-oxide fuel assemblies with negative temperature feedback mechanisms. All combat core damage in the aftermath of a loss-of-coolant accident (LOCA) by flooding the core with sufficient water to last for at least several days – as compared to the current tens of minutes – without further operator action.

An advanced PWR concept (Fig. 26) features passive emergency core cooling systems (ECCS) with water stored in large tanks above the core. During a large LOCA, injection of water into the core from two of the tanks is initiated by pressurized nitrogen even before the reactor coolant system has a chance to depressurize. Subsequent to depressurization, more water from a massive tank inside the containment structure can flow downward into the core under the influence of gravity alone. Neither of these two ECCS options requires pumps or emergency electric power. If the steam generators are not operable, however, natural circulation of water

transfers core thermal energy to a large water storage tank located above the reactor vessel.

Post shutdown, decay heat is ordinarily removed through the steam generators. Heat removal from the steel containment shell is facilitated by a gravity-fed water spray. Natural circulation of air, directed by large baffles, provides passive flow, i.e., without using the large fans and coolers typical of current PWRs.

The passive safety systems also simplify overall plant design. Compared with the active safety systems of a current plant, e.g., there are only half as many large pumps and 40% as much building volume designed to nuclear-grade seismic standards, as many valves, and as much piping.


#### **Gas-Cooled Reactors**

The reference HTGR (section “[Gas-Cooled Reactors](#)”) combines helium coolant, microsphere fuel, and graphite-moderator blocks to provide uniquely robust safety characteristics. A smaller *modular high-temperature gas-cooled reactor* (MHTGR) design is based upon these same features. The basic MHTGR (Fig. 27) is a 400–600 MWe module intended to be used in groups of four with a pair of turbine generators.

The graphite and fuel core operates at low power density, has a large inherent heat sink, and is very slow to overheat. Even with depressurization of the primary system, fuel failure would be unlikely. Operator response time, thus, is essentially unlimited.

The helium coolant is circulated through the steel – rather than HTGR’s prestressed concrete – reactor vessel by an electric blower. It operates at high temperature for high steam cycle electric-generation efficiency or, potentially, a variety of industrial processes including coal gasification, chemical manufacturing, petroleum refining, or desalination of sea water.

Each reactor vessel and steam generator is enclosed in an underground silo (Fig. 27). Natural air circulation is sufficient to provide passive silo cooling. Even if said circulation were blocked, direct heat loss to the surrounding earth would keep fuel temperatures well below the melting point. Thus, as with the classic HTGR, an LWR-type containment is unnecessary.

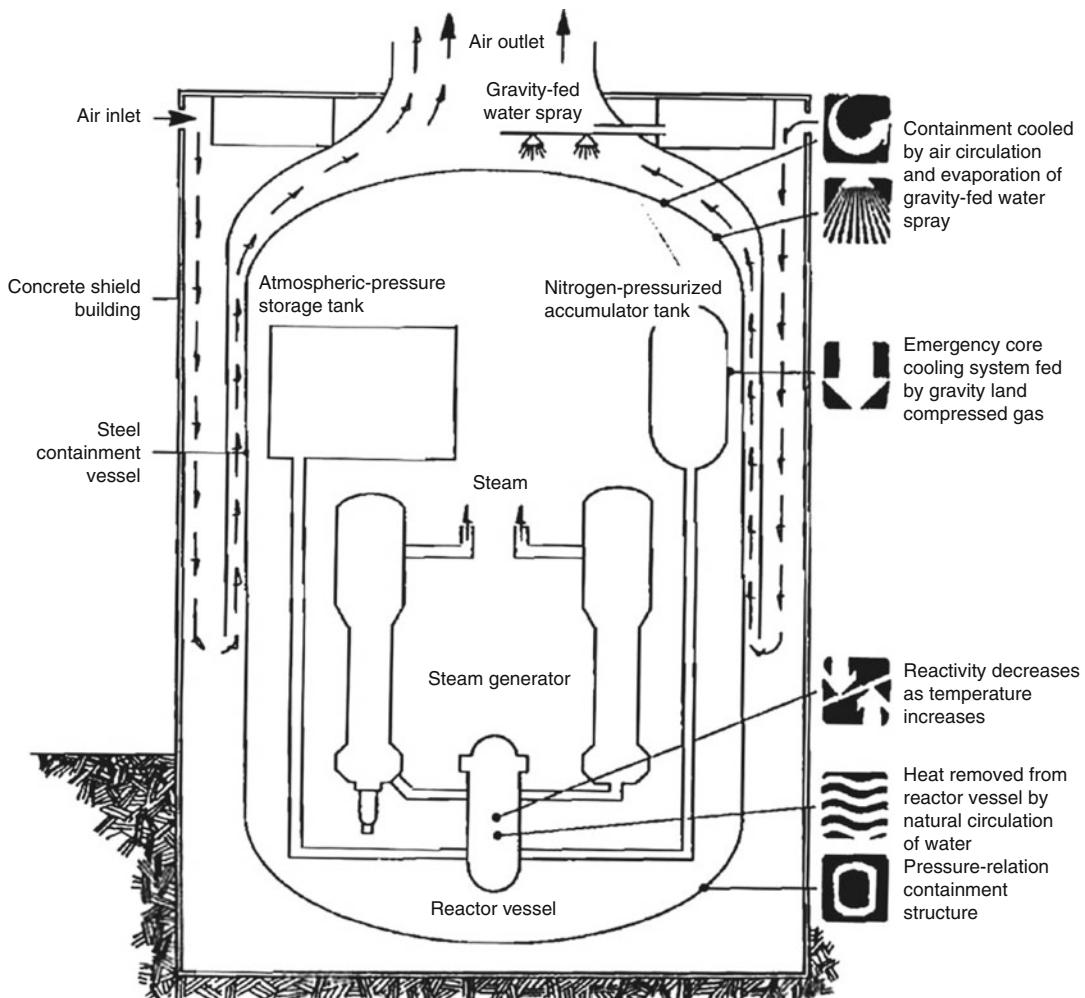

Nuclear Fission Power Plants, Fig. 26 Conceptual advanced PWR (Electric Power Research Institute)

#### Liquid-Metal Reactor


Traditionally, liquid-metal reactors have focused on LMFBR-like features (section “Fast Breeder Reactors”). The power reactor inherently safe module (PRISM) is a small liquid-metal-cooled module (Fig. 28) which could be used in groups of three connected to a common steam turbine.

Each PRISM module has a pool-type configuration with the liquid-sodium coolant circulated through the core to an intermediate heat exchanger by a pair of pumps. As in an LMFBR, a secondary sodium loop connects to a steam generator.

If pumps fail, sodium flows through the PRISM core by natural convection. If the secondary flow is interrupted, the primary sodium continues to cool the core by carrying heat to the containment vessel.

Fuel assemblies are made of a pyrometallurgical alloy. Reactor experiments have demonstrated that with loss of liquid-sodium flow, temperature feedback will shut down the neutron chain reaction core and natural circulation of the coolant can remove the decay heat sufficiently to prevent fuel melting.

The PRISM reactor vessel is surrounded by a guard vessel to catch leaking sodium. Both vessels are placed in an underground concrete silo.

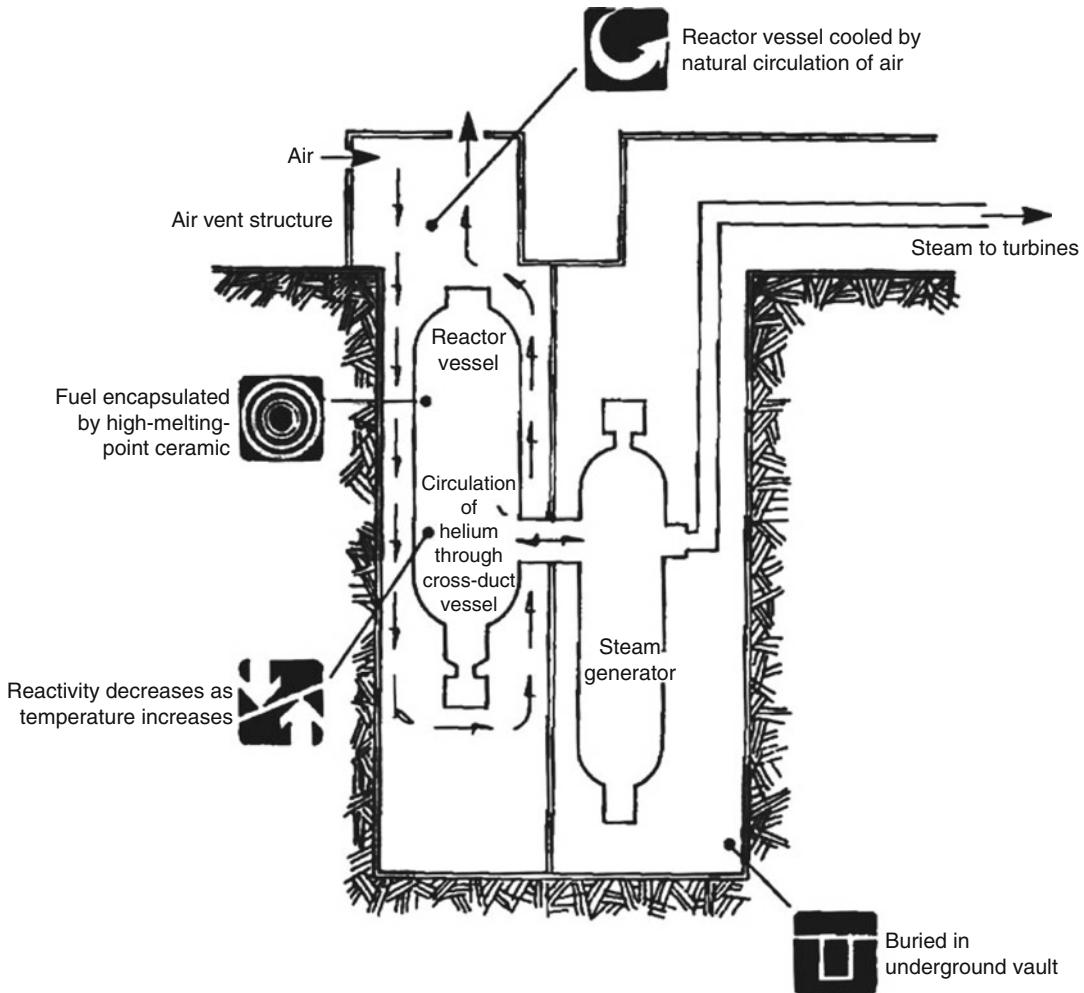

**Nuclear Fission Power Plants, Fig. 27** Conceptual advanced reactor MHTGR (Electric Power Research Institute)

Air, allowed to circulate freely between the silo wall and guard vessel, can remove core decay heat passively to the outside environment, if necessary. Due to PRISM's passive stability, LWR-type containment is not included in the design.


### Generation-III Reactors

The nuclear industry is developing a full product line touted as of clean, safe, secure carbon-free energy sources (Fig. 25). Several advanced designs are nearly ready to meet current USA's generating needs. These fall into the category of "evolutionary," i.e., modifications of existing systems building directly on the experience of operating reactors in the USA, Japan, and Western

Europe. These reactors tend to be as large as, or larger than, their predecessors [2, 12, 13].

The industry also is developing more highly advanced nuclear reactors based on new technologies, ready for commercial use by 2020 or later. A revolutionary generation of smaller, passively stable reactors is envisioned [22]. Some could replace older fossil-fired power stations of similar size – and their associated carbon emissions. The infrastructure, cooling water, rail, and transmission facilities already exist at such facilities.

Alternatively, these same small reactors can be a "right size" match for utilities or countries entering the nuclear arena for the first time. They also

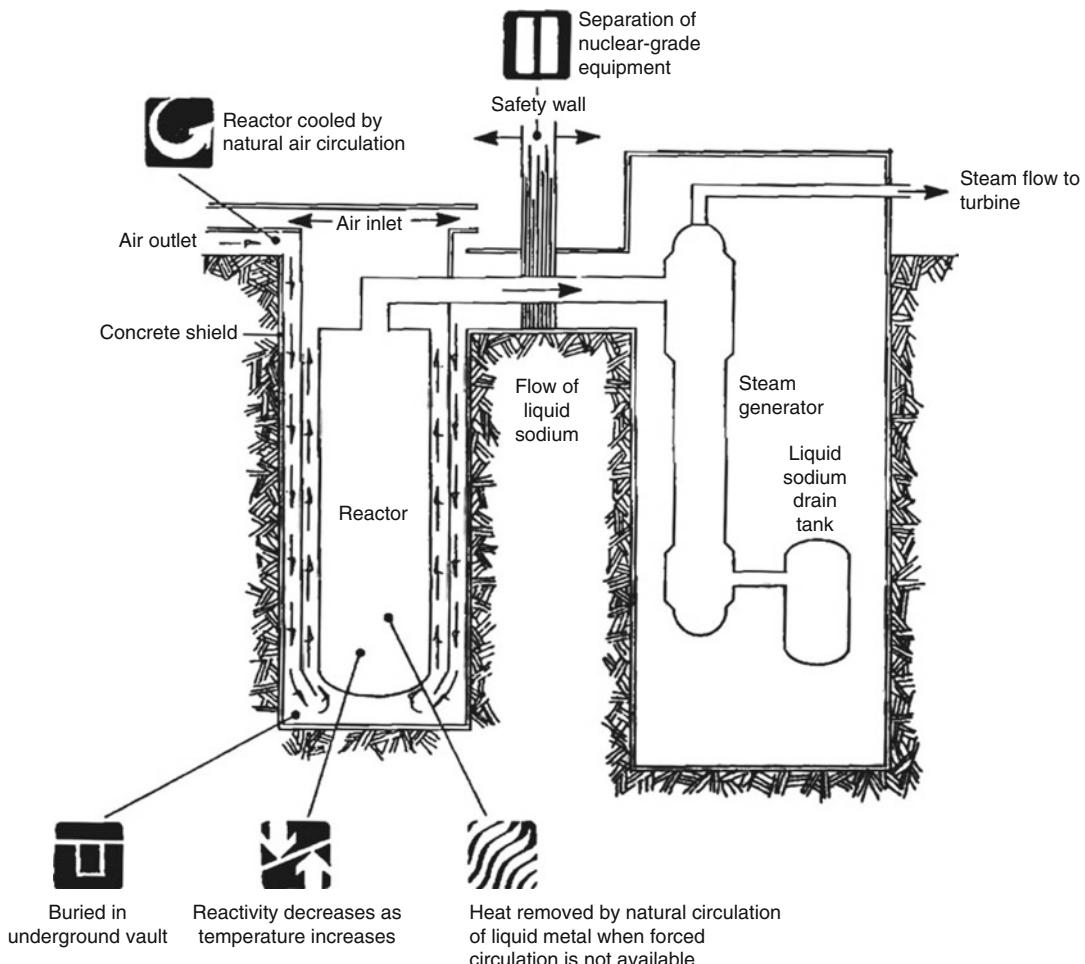

**Nuclear Fission Power Plants, Fig. 28** Conceptual advanced reactor LMR (Electric Power Research Institute)

could be used to generate electricity for remote locations and/or provide process heat for diverse industrial applications. The designs are poised to capitalize on the benefits of modular construction, ease of transportation, and reduced financing. Modules can be added as needed. Units could operate anywhere from 2 to 10 years on an initial fuel load, depending on the design.

Whether the advanced reactor designs are evolutionary or revolutionary, or something in between, almost all involve multiorganizational, multinational collaboration. By the end of 2006, e.g., three major Western-Japanese alliances had formed to dominate much of the world reactor supply market. Subsequently, there have been a number of other international collaborative

arrangements initiated among reactor vendors and designers. Circa 2010, reactor suppliers in North America, Japan, Europe, Russia, and elsewhere began marketing a dozen new thermal-neutron reactor designs as summarized in Table 3. Others designs, including a number of them based on fast-neutron chain reactions, are, respectively, in advanced planning stages or still in research and development.

#### Light-Water Reactors

Many of the advanced reactors are light-water reactor designs [2] (see, e.g., Table 3). In the USA, two advanced light-water reactors fall into the category of large “evolutionary” designs, building directly on operating experience in

**Nuclear Fission Power Plants, Table 3** Advanced power reactors

Developer	Reactor	Size (MWe gross)	Design progress, notes
<b>Operational</b>			
GE-Hitachi, Toshiba	ABWR	1,380	Commercial operation in Japan since 1996–1997 US design certification 1997 UK design certification application 2013 Active safety systems
<b>Under construction</b>			
Westinghouse	AP1000 (PWR)	1,250	Under construction in China and USA, many units planned in China US design certification 2005 Canadian design certification in progress
Areva (& EdF)	EPR (PWR)	1,750	Future French standard, French design approval Being built in Finland, France, and China
KoreaHNP	APR 1400 (PWR)	1,450	Under construction – Shin Kori 3&4 in S. Korea, Barakah in UAE Korean design certification 2003 US design certification application
CNNC and CGN (China)	Hualong One (PWR)	1,150	Main Chinese export design, under construction at Ningde
Gidropress	VVER-1200 (PWR)	1,200	Under construction at Leningrad and Novovoronezh plants as AES-2006
INET and CNEC (China)	HTR-PM, HTR-200 module	2 × 105 (one module)	Demonstration plant being built at Shidaowan
<b>Ready for deployment</b>			
GE-Hitachi	ESBWR	1,600	Planned for Fermi and North Anna in USA Developed from ABWR, but passive safety systems Design certification in USA Sept 2014
Mitsubishi	APWR	1,530	Planned for Tsuruga in Japan US design cert. application for US-APWR EU design approval for EU-APWR Oct 2014
Areva and Mitsubishi	Atmea1 (PWR)	1,150	Planned for Sinop in Turkey French design approval Feb 2012 Canadian design certification in progress
Candu Energy	EC6 (PHWR)	750	Improved CANDU-6 model Canadian design certification June 2013
Gidropress	VVER-TOI (PWR)	1,300	Planned for Nizhny Novgorod in Russia and Akkuyu in Turkey Russian design certification in progress for EUR

Source: Adapted from <http://www.world-nuclear.org/info/inf08.html>

USA, Japan, and Western Europe. Advanced boiling-water reactors (ABWR) derived from a General Electric design are in commercial operation and/or under construction in Japan and Taiwan, with others planned in Japan and the USA. It, and the System 80+ advanced PWR, received final design certification from US-NRC in May 1997, noting that they exceeded NRC “safety goals by several orders of magnitude.”

The ABWR has also been certified as meeting European requirements for advanced reactors. Although the System 80+ itself is not now being promoted for sale, eight System 80 reactors in South Korea incorporate many of its design features and are the basis of the Korean’s APR-1400 which has enhanced safety and seismic robustness. There are units under construction and it is being marketed worldwide.

Another, more innovative US advanced reactor is the smaller AP600 (AP = Advanced Passive) at 600 MWe with highly evolved passive safety features compared to those described in concept in the section “[Advanced Light-Water Reactor](#)” (and in concert with Fig. 26). Projected core-damage frequency is nearly 1,000 times less than today’s NRC requirements. In 1999, it was the first to gain NRC generic final design certification. Said certifications are valid for 15 years and will allow US utilities to obtain a single NRC license to both construct and operate a reactor before construction begins.

The scaled-up AP1000 was the first GEN-III+ type reactor to receive NRC final design certification from the NRC in December 2005. It also is under active consideration for building in Europe and USA. In comparison to current plants for the same size, AP1000 is about one quarter the size with concrete and steel requirements less by a factor of 5. It is designed for unique modular construction. A single unit has 149 structural modules of five kinds and 198 mechanical modules of four kinds – equipment, piping and valve, commodity, and standard service modules. These comprise one third of all construction and can be built off site in parallel with the on-site construction. China has four AP-1000 units under construction, with many more to follow.

GE Hitachi Nuclear Energy’s ESBWR is a GEN-III+ BWR technology that utilizes passive safety features and natural-circulation principles. It is essentially a larger evolution from a predecessor SBWR.

Mitsubishi’s large – advanced – APWR was developed in collaboration with four utilities. It is a simpler four-loop design which combines both active and passive cooling systems. The first two are planned for Japan to come on-line from 2016 and will be the basis for the next generation of Japanese PWRs. US-APWR and EU-APWR versions, respectively, are being developed for USA and European markets.

In Europe, several designs are being developed to meet the European Utility Requirements (EUR) of French utilities, which have stringent safety criteria. European pressurized-water reactor (EPR) developed from French and German

designs has four separate, redundant safety systems rather than passive safety. The first EPR unit is being built in Finland, with two other slated for France, and another for China. US-EPR – now known as the Evolutionary PWR (EPR) – was submitted for US design certification.

Another evolutionary design, the SWR 1000, is a Siemens BWR now known as Kerena. It is simpler overall and has many passive safety features.

In Russia, several advanced PWR designs with passive safety features have been developed. Late-model VVER-1000 units (see the section “[Pressurized-Water Reactor](#)”) – one considered GEN-III with enhanced safety – are being built in India and China with two more planned for Bulgaria. A third-generation standardized VVER-1200 reactor is an evolutionary development from the VVER-1000 with longer life, greater power, and greater efficiency. They have enhanced safety including that related to earthquakes and aircraft impact with some passive safety features, double containment, and low core-damage frequency. A Europe-tailored reactor design, MIR-1200 – Modernized International Reactor – has some Czech involvement.

Russia also has a number of other novel small reactor designs [2, 22]. Several VBER PWR variations developed from naval power plants may be floating or land-based, modular construction, and/or provide cogeneration. VK-300 – with fuel elements similar to the VVER – have been developed specifically for cogeneration of both power and district heating or heat for desalination. Cooling (by convection) and all safety systems are passive. It has been announced that six would be built in Russia’s Far East.

### Heavy-Water Reactors

A pair of GEN-III HWRs are under development based directly on CANDU reactors. Each is to be configured for flexible fuel requirements including standard natural uranium, slightly enriched LWR-like uranium, and mixed-oxide (U and Pu) fuel and from a variety of potential sources, e.g., PWR spent-fuel or even military downsizing.

Such fuel innovations, combined with the experiences of South Korea and China, suggest

that an Enhanced CANDU-6 (EC6) could have a 4.5-year construction and 60-year plant life. This design is under consideration for new build in Canada.

The Advanced CANDU Reactor (ACR) is a more innovative concept using a low-pressure heavy-water moderator with PWR-like light-water cooling for higher thermal efficiency. The resulting compact core would reduce capital cost – an ACR-700 is physically much smaller, simpler, and more efficient as well as 40% cheaper. A larger ACR-1000 – the current focus of attention – has more fuel channels; is designed to run on low-enriched uranium (~1.5–2.0 wt%  $^{235}\text{U}$ ) with high burnup, MOX fuel, thorium- $^{233}\text{U}$  fuels; and extends the fuel life by about three times reducing high-level waste volumes accordingly. Other features include small negative reactivity feedback, other passive safety features, two independent and fast shutdown systems; and prefabricated modules to cut construction time to 3.5 years. The CANDU X or SCWR – a GEN-IV ACR variant with supercritical light-water coolant – would operate at very high pressure and temperature, and, thus, high thermal efficiency (see the section “[Generation IV Nuclear Reactors](#)”).

Table 3 summarizes key characteristics for the advance HWRs and other advanced reactor types.

For the longer term, India is developing the Advanced Heavy Water Reactor (AHWR) to utilize its plentiful reserves of thorium. The AHWR is a 300-MWe reactor moderated by heavy water in a calandria vessel with about 450 *vertical* pressure tubes. The coolant is boiling light water circulated by convection. A “gravity-driven water pool” near the top of the reactor building with 7,000 cubic meters of water is proposed as a novel heat sink. A unique fuel paradigm calls initially for fuel assemblies each consisting of a mixture of oxide pins of Th- $^{233}\text{U}$  and Pu-Th, respectively, with resulting very high net fuel utilization. Once fully operational, the fuel pins would be arranged in three concentric rings each “zoned” with a specific equivalent fissile content based on adjusting Th,  $^{233}\text{U}$ , and Pu fractions. The content of  $^{233}\text{U}$  – with inherent  $^{232}\text{U}$  and its unique high-gamma-active daughter products – is

considered to confer a substantial proliferation resistance (i.e., high-capacity fabrication of  $^{233}\text{U}$  fuel must be done remotely, a feature not necessary for either  $^{235}\text{U}$  or plutonium) (see also the chapter on ► “[Modern Nuclear Fuel Cycles](#)”).

In 2009, an export version named AHWR-LEU was announced. The major difference is use of low-enriched uranium (LEU) – in lieu of Pu – plus thorium as a fuel. Plutonium production will differ from that in light-water reactors – the fissile proportion will be less and the  $^{238}\text{Pu}$  (nonfissile with high radioactivity and associated heat) portion three times as high – giving inherent proliferation resistance. The net result is described as a reactor “manageable with modest industrial infrastructure within the reach of developing countries.”

#### High-Temperature Gas-Cooled Reactors

The advanced high-temperature gas-cooled reactors (HTGR) use helium as a coolant at up to 950 °C, which for electric generation either makes steam conventionally or directly drives a gas turbine for electricity and a compressor to return the gas to the reactor core. They also are especially well-suited for providing process heat for industrial applications, including hydrogen production and could be used in the development of tar sands, oil shale, and coal-to-liquid applications, reducing the life cycle carbon footprint of all these activities.

The fuel is in the conventional HTGR form of microsphere particles arranged in blocks as hexagonal “prisms” of graphite or in billiard ball-sized “pebbles” of graphite encased in silicon carbide (Fig. 15), each providing containment for fission products which is stable to 1,600 °C or more. Other features are similar to those in Fig. 27.

China’s HTR-PM is to have two reactor modules of 105 MWe each and use a steam cycle to drive a single steam cycle turbine at about 40% thermal efficiency. It is expected to pave the way for an 18-unit full-scale power plant also using the steam cycle.

A larger US design, the Gas Turbine-Modular Helium Reactor (GT-MHR), is planned as modules of 285 MWe each directly driving a gas

turbine (Brayton cycle) at 48% thermal efficiency. The cylindrical core consists of 102 prism blocks (Fig. 15b) with channels for helium and control rods. It is being developed by General Atomics in partnership with Russia and supported by Japan. Initially, it was to be used to burn pure ex-weapons plutonium in Russia. The preliminary design stage was completed in 2001, but the program has stalled since. Areva's Antares also is based on the GT-MHR.

Table 3 summarizes key characteristics for the first two of the advanced HTGRs and for other advanced reactor types.

South Africa's Pebble Bed Modular Reactor (PBMR) draws on German THTR (section “[Gas-Cooled Reactors](#)” and Fig. 14b) expertise. Production units would be 165 MWe, ultimately using a direct-(Brayton) cycle gas-turbine generator with thermal efficiency of about 41%. Power would be adjusted by changing the pressure in the system.

Up to 450,000 fuel pebbles (Fig. 15a, c) recycle through the reactor continuously (about six times each) until they are expended. The reactor will use about 13 fuel loads in a 40-year lifetime. The on-line refueling can facilitate operational cycles with as long as 6 years between shutdowns.

### Fast-Neutron Reactors

The classic fast-neutron reactor has been the fast breeder reactor (FBR). Current interest centers on their ability to provide unique nuclear fuel-cycle services, such as breeding new fuel, consuming recycled nuclear waste as fuel, and supporting government-sponsored nonproliferation efforts by consuming material from former nuclear weapons [12].

About 20 liquid-metal fast breed reactors (LMFBR), mainly research units, have accumulated some significant operating experience. Several countries have research and development programs for improving their current designs, but generally less as GEN-III efforts and more as a bridge to new GEN-IV reactors [2, 23].

The consummate LMFBR, France's SuperPhenix (section “[Fast Breeder Reactors](#)”), was optimized to run on plutonium fuel and to “breed” even more plutonium fuel with a depleted

uranium blanket around the core. The LMFBRs, however, are expensive to build and could only be justified economically if uranium prices were to rise dramatically above market price circa 2010. For this reason, research work almost ceased for some years. Closure of the SuperPhenix after very little operation over 13 years especially set back developments.

Primarily to address nonproliferation concerns, there apparently are no plans to build any more plutonium-fueled fast reactors with blanket assemblies. Fast-reactor concepts slated for the GEN-IV program simply have a core where both plutonium production and consumption occur [23].

In Russia, the BN-600 (at Beloyarsk) – a fast breeder reactor with a conventional core-blanket configuration – has supplied electricity to the grid since 1981 (and has had the best operating and production record of all of the nation's nuclear power units) [23]. Its evolutionary BN-800 counterpart – currently the world's largest sodium-cooled fast neutron reactor – originally was fueled with uranium-oxide fuel but reconfigured to burn the plutonium from military stockpiles. First brought to critical in June 2014, it began commercial operation in 2016 [24].

Further development of the BN-series is slated to be with an integrated core to meet GEN-IV nonproliferation goals. Russia also has interest in developing lead and lead-bismuth fast-neutron-reactor designs, having used these coolants in submarines.

Meanwhile in the USA, the modular liquid-metal-cooled inherently safe reactor – PRISM (see the section “[Liquid-Metal Reactor](#)” and Fig. 28) – is continuing to receive attention. It is a compact modular pool-type reactor with passive cooling for decay heat removal. PRISM is considered a potential GEN-IV solution to closing the fuel cycle in the USA.

Korea's KALIMER (Korea Advanced LIquid MEtal Reactor) also is pool-type sodium-cooled fast reactor. Having evolved from a smaller unit, it has a core designed to transmute transuranic species and no breeding blanket. Future development of KALIMER for GEN-IV is envisaged.

Research continues in India including on the unique track of using thorium – which it has in abundance – in a breeding scheme with fissile  $^{233}\text{U}$ . The Kalpakkam reactor is fueled with uranium-plutonium carbide and has a thorium blanket to breed the  $^{233}\text{U}$ .

#### Generation IV Nuclear Reactors

The GEN-IV International Forum (GIF) was initiated in 2000 as an international collective committed to joint development of the next generation of nuclear technology (Fig. 25). Currently, six nuclear reactor technologies are under development for deployment between 2020 and 2030 [25, 26].

All six technologies represent advances in sustainability, economics, safety, reliability, and proliferation resistance. Most employ a closed fuel cycle to maximize the resource base and minimize high-level wastes that will need to be sent to a repository.

Collectively, the reactors include thermal-, epithermal-, or fast-neutron spectra. Coolants are light water, helium, sodium, lead-bismuth, and fluoride salt. Temperatures range from 510 °C to 1,000 °C – compared with less than 330 °C for today's LWRs. At the higher temperatures, thermochemical hydrogen production is envisioned. Power ratings range all the way from 20 to 1,500 MWe (or equivalent thermal).

At least four of the systems already have significant operating experience in most respects of their design. This provides a good basis for further research and development and prospects for commercial operation well before 2030.

Table 4 provides a comparison (see also the following section “Future Directions”). Although six technologies were chosen, development on one of them has gone in two different directions resulting in seven being listed in the table. Summary descriptions of each are provided in the remainder of this section.

*Supercritical water-cooled reactors* (SWCR) use water coolant at extremely high temperatures and pressures – thermodynamically in the “supercritical” fluid regime (Fig. 29a). Such fluids are those above the thermodynamic critical point, defined as the highest temperature and pressure at which gas and liquid phases can coexist in

equilibrium. They have properties between those of gas and liquid. For water the critical point is at 374 °C and 22 MPa, giving it a “steam” density one third that of the liquid so that it can drive a turbine in a similar way to normal steam. A fleet of over 400 supercritical coal-fired plants operating worldwide provides a solid experience base for reactor application [25].

Supercritical water obviates the need for a secondary steam system and drives a turbine generator directly at 44% (and potentially up to 50%) efficiency. Designs call for a high power level and include BWR-like pressure-vessel and CANDU-variant pressure-tube options. Each will have passive safety features with fewer components (e.g., none related to steam separator/driers) and relatively low capital cost. Neutron-spectrum and fuel-cycle options combine in an interesting manner to provide the potential for:

1. Thermal reactors with enriched uranium-oxide fuel and an open fuel cycle
2. Fast reactors with full actinide-element recycle and conventional reprocessing

*Very high-temperature gas reactors* (VHTR) are thermal-neutron systems with graphite moderator and helium coolant (Fig. 29b). Fuel can be (1) stacks of prism blocks or (2) a pebble bed (section “Gas-Cooled Reactors” and Fig. 15). The “very high” temperatures result in high thermodynamic efficiency which can be applied for thermochemical hydrogen production with electricity cogeneration or direct high-efficiency driving of a gas turbine (Brayton cycle). Essentially complete passive safety, low operation and maintenance costs, and modular construction are envisioned based on the HTGR and PBR heritage.

*Gas-cooled fast reactors* (GFR) are the fast-neutron counterparts of the VHTR – absent graphite moderator – described above (Fig. 29c). The design includes a thick steel reactor pressure vessel and helium coolant. It is well suited for conventional steam-electric generation, helium direct-drive gas turbine (Brayton cycle), and thermochemical hydrogen production or other process heat. With the fast-neutron spectrum, fuel of

**Table 4** Generation IV reactor designs under development by GIF

	Neutron spectrum (fast/thermal)	Coolant	Temperature (°C)	Pressure <sup>a</sup>	Fuel	Fuel cycle	Size(s) (MWe)	Uses
Supercritical water-cooled reactor (SCWR)	Thermal or fast	Water	510–625	Very high	UO <sub>2</sub>	Open (thermal) or closed (fast)	300–700 1,000–1,500	Electricity
Very high temperature gas reactor (VHTR)	Thermal	Helium	900–1,000	High	UO <sub>2</sub> prism or pebbles	Open	250–300	Hydrogen and electricity
Gas-cooled fast reactor (GCR)	Fast	Helium	850	High	U-238 <sup>b</sup>	Closed, on site	1,200	Electricity and hydrogen
Sodium-cooled fast reactor (SFR)	Fast	Sodium	500–550	Low	U-238 and MOX	Closed	50–150 600–1,500	Electricity
Lead-cooled fast reactor (LFR)	Fast	Lead or Pb-Bi	480–570	Low	U-238 <sup>b</sup>	Closed, regional	20–180 <sup>c</sup> 300–1,200 600–1,000	Electricity and hydrogen
Molten salt reactor (MSR)	(Molten salt) Advanced high-temperature reactor (AHTR)	Fluoride salts	750–1,000		UO <sub>2</sub> particles in prism	Open	1,000–1,500	Hydrogen
Molten salt fast neutron reactors (MSFR)	Fast	Fluoride salts	700–800	Low	UF in salt	Closed	1,000	Electricity and hydrogen

Source: Adapted from World Nuclear Association – <http://www.world-nuclear.org/info/int77.html><sup>a</sup>High 7–15 MPa<sup>b</sup>With some U-235 or Pu-239<sup>c</sup>“Battery” model with long cassette core life (15–20 years) or replaceable reactor module

Pu,  $^{238}\text{U}$ , and Th can support a blanket-less breeding paradigm.

*Sodium-cooled fast reactors (SFR)*, using liquid sodium coolant, are progeny of the LMFBR (section “[Fast Breeder Reactors](#)”) (Fig. 29d). Configurations could be loop-type or pool-type. Passive safety features are augmented by the coolant’s low pressure and inherent natural-convection tendency. An initial core plus blanket configuration is likely to be displaced by new core-only breeding designs with depleted uranium integral to the fuel matrix. High-temperature operation is consistent with electricity generation or a supercritical CO<sub>2</sub> turbine. Fuel-related variants include: (1) U-Pu metal fuel with actinide retention and on-site pyrometallurgical processing and (2) conventional mixed Pu-U “mixed-oxide” (MOX) fuel and advanced aqueous reprocessing elsewhere in central facilities.

*Lead-cooled fast reactors (LFR)* have similarity to the SCFR in terms of fast-neutron spectrum as well as liquid-metal coolant – here Pb or Pb-Bi eutectic – with low pressure and natural convection (Fig. 29e). Russia has had multi-decade experience with this technology in its nuclear submarine program. Design power levels range from relatively small for modular units to large for single plants. A novel concept is for a factory-built “battery” unit of 20–180 MWe with 15–20 year life for small grids or developing countries. Operating temperatures are slated to be sufficient for thermochemical hydrogen production. Fuel would be Pu and depleted uranium – with an option to introduce thorium – in metal or nitride form.

*Molten-salt reactors (MSR)* – the most novel of the technologies – use uranium dissolved in sodium (or zirconium) fluoride salt which serves as both the fuel and the coolant (Fig. 29f). When the salt circulates through graphite core channels, the neutrons are moderated to epithermal (i.e., average above, or faster than, thermal) energies and can support a critical chain reaction. Outside of the core and absent proximity to moderator, the salt is very highly subcritical. Similar to the metal-cooled reactors, the molten salt has the inherent safety feature of operating at very low pressure. An appropriately designed secondary loop can

provide for electricity generation or thermochemical hydrogen production.

The MSR fuel requires no fabrication per se. Fissile inventory can be kept to a minimal level as the plutonium, depleted uranium, and/or thorium fuel constituents can be inserted at any time as needed. Actinides from outside sources, e.g., to be transmuted by neutron irradiation to less hazardous form, can also be added. Simultaneously, on-line and continuous removal of fission products and recycle of self-generated actinides can be implemented.


There are two separate baseline MSR concepts. One is the (Molten Salt) Advanced High-Temperature Reactor (AHTR) which has a graphite core similar to that of the VHTR (and HTGR Fig. 15b). Use of a neutron-moderating, molten-salt coolant, instead of helium, supports a much higher power density. The other version is the Molten Salt Fast Neutron Reactor (MSFR) with a graphite-free “core tank with no internals” and molten-salt compositions which provide less moderation.


## Future Directions



The future of nuclear power as a world energy source is a complex part of an overall energy picture, a few aspects of which were summarized in the section “[Definition of the Subject](#).“ Two studies within this century – sponsored, respectively, by the Massachusetts Institute of Technology (MIT) and the Electric Power Research Institute (EPRI) – shed light on both future prospects and problems. The MIT study characterization of itself as “not a prediction, but rather a study case...” applies equally well to both. The reader taking this in to account should adjust accordingly.

### The Future of Nuclear Power

The MIT study, *The Future of Nuclear Power* (2003 report and 2009 update) – in its own words – was “the most comprehensive, interdisciplinary study ever conducted on the future of nuclear energy” and concluded that “The nuclear

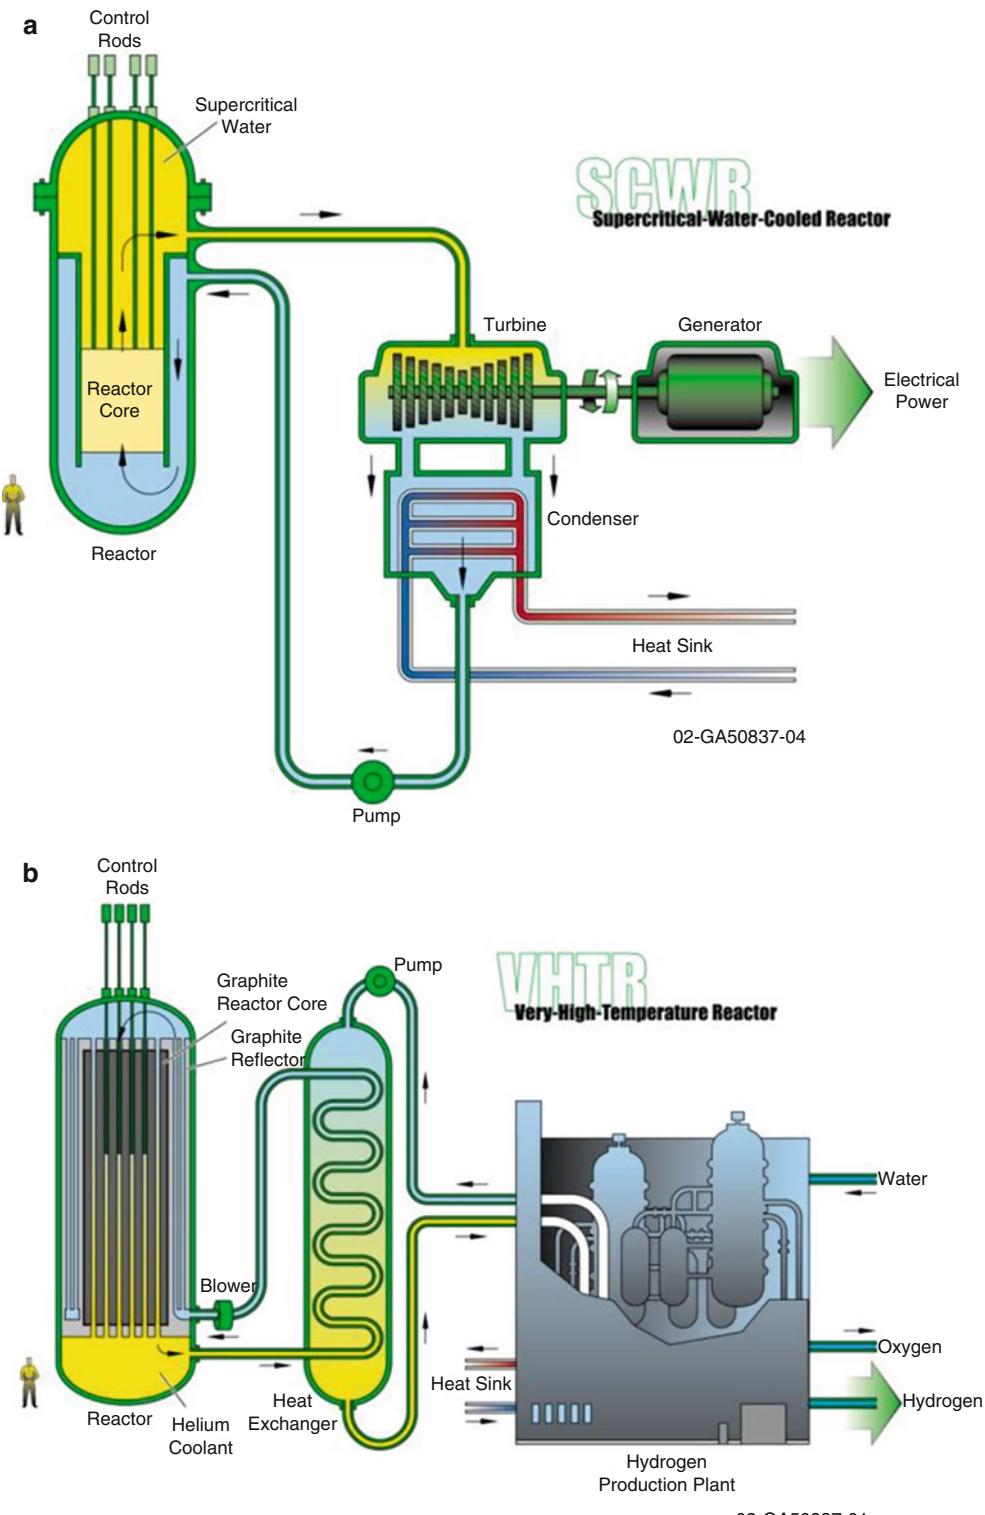**Fig. 29** (continued)

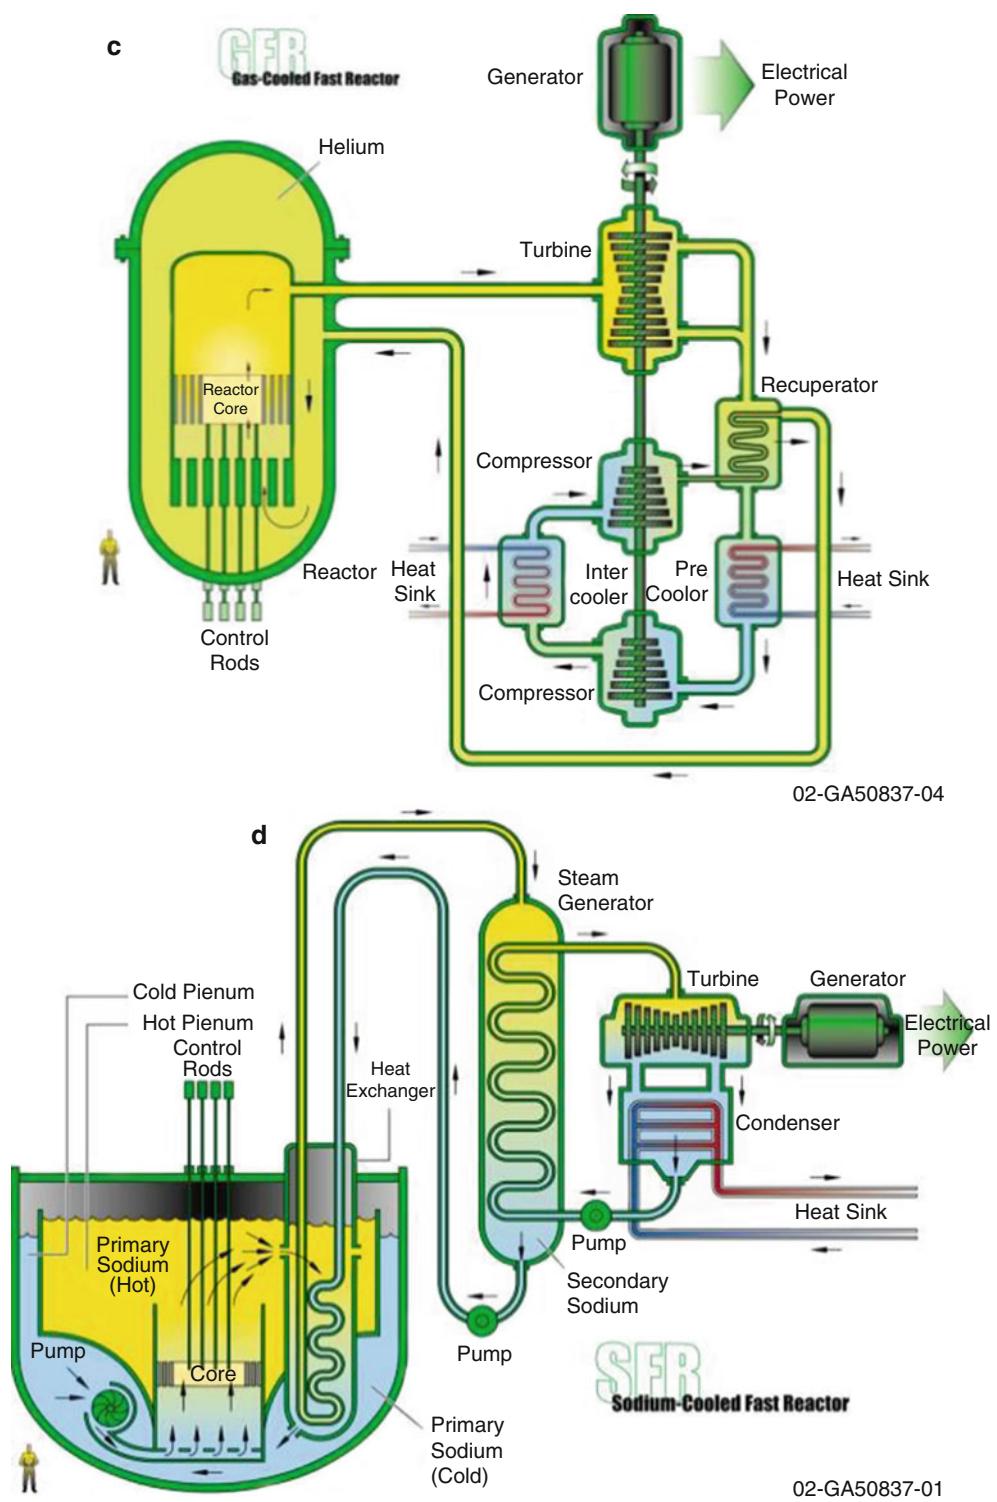**Fig. 29** (continued)

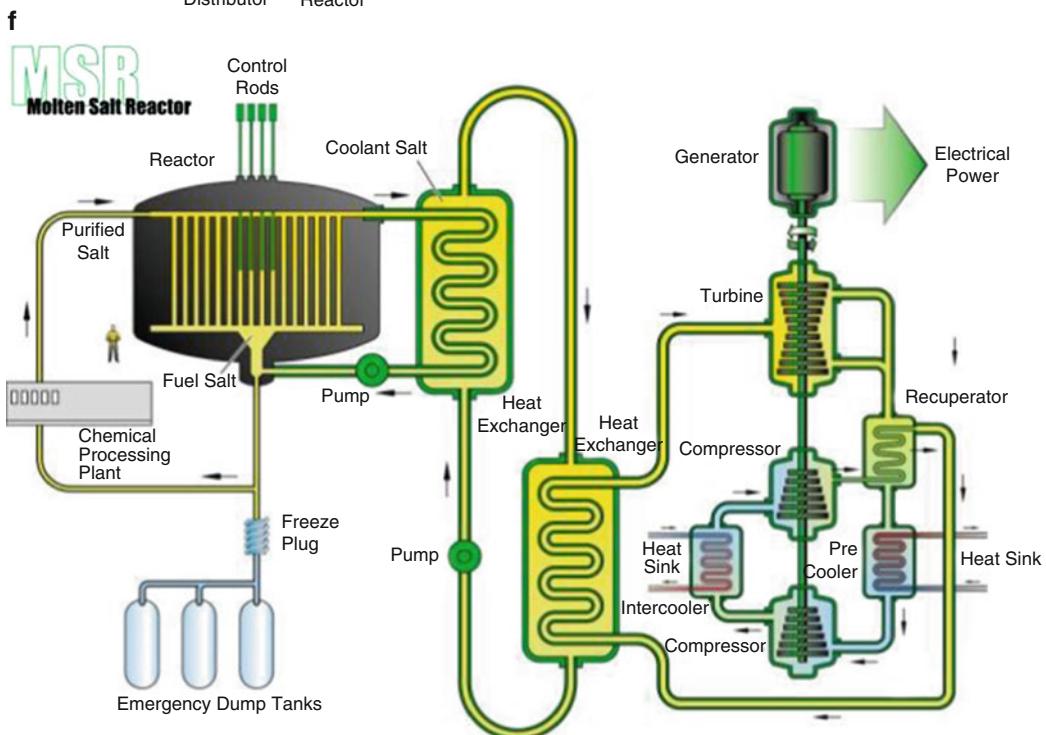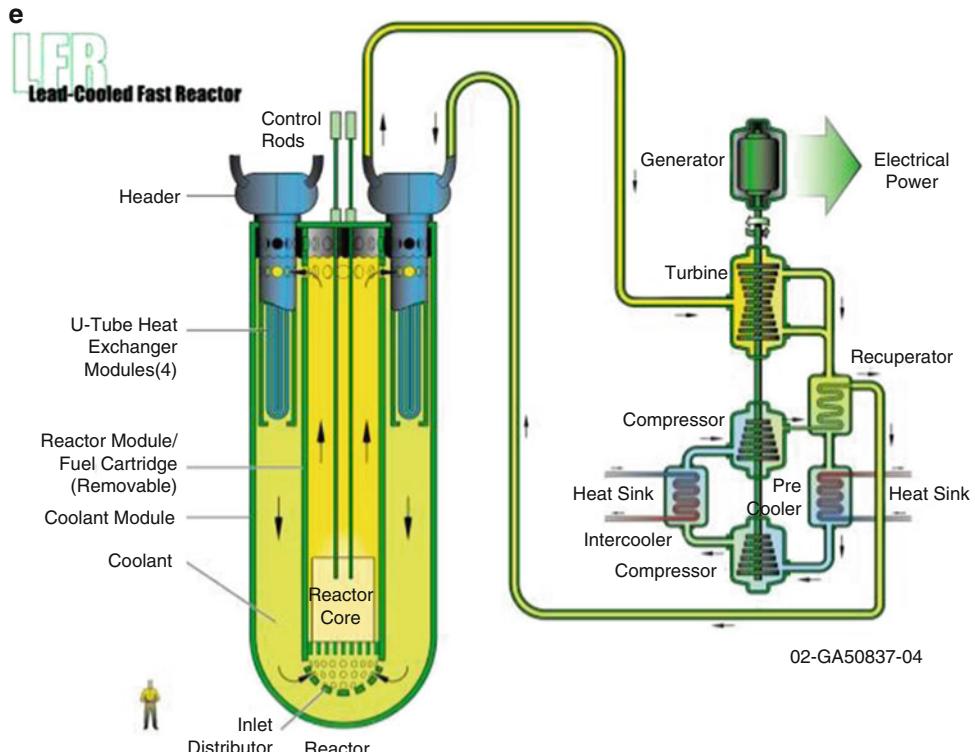

**Fig. 29** (continued)

option should be retained precisely because it is an important carbon-free source of power” [4].

The study examines a growth scenario – characterized as “not a prediction, but rather a study case in which nuclear power would make a significant contribution to reducing CO<sub>2</sub> emissions” – with the current deployment of 360 GWe of nuclear capacity worldwide expanded to 1,000 GWe (1 TW) of “carbon-free” power by mid-century, keeping nuclear’s fraction of the electricity market about constant. Correspondingly, the USA would triple its nuclear deployment from about 100 to 300 GWe (see also the subsequent section “[New Nuclear Installations](#)”).

The credibility of such a scenario – and nuclear energy as an option – will be largely determined in the forthcoming decade by the extent to which significant progress is made on four unresolved problems:

1. High relative construction costs
2. Perceived adverse safety, environmental, and health effects
3. Potential security risks stemming from proliferation
4. Unresolved challenges in long-term management of nuclear wastes

The up-front costs associated with nuclear power are higher than those for fossil-fueled plants. However, the study was optimistic about ways to mitigate the costs and noted that, over time, the societal and environmental price of carbon emissions could dramatically improve the competitiveness of nuclear power. The goal of 1 TW of “carbon-free” nuclear power by 2050 is certainly challenging, requiring deployment of about 2,000 MW a month with an associated

capital investment of \$2 trillion over several decades.

One key economic incentive has been a limited production tax credit – a provision in the 2005 Energy Policy Act – to “first mover” private sector investors who successfully build new nuclear plants. This tax credit is extendable to other carbon-free electricity technologies and is not paid unless the plant operates. The study also suggested the industry-wide cost-reduction options of placing near-term emphasis on the once-through fuel cycle and delaying expensive development projects pending progress on near-term deployments.

Public acceptance turns on the perception of safety, environmental, and health effects. Thus, performance, cost, and environmental acceptability of the technology must be demonstrated to the public, political leaders, and investors. Having the government develop enhanced capabilities to analyze life-cycle health and safety impacts of fuel-cycle facilities is also recommended. It also is essential that NRC and other regulations are developed and enforced diligently.

Security risks can be addressed by encouraging countries to forego the proliferation-risky nuclear technologies – enrichment and reprocessing – by offering “a preferred position to receive nuclear fuel and waste management services from nations that operate the entire fuel cycle.” Near-term emphasis on the once-through fuel cycle also supports this scenario.

Long-term management of nuclear wastes is a huge problem, the solution for which is central to public acceptance. Key to the resolution of this task is the capability of the government to start moving spent fuel from reactor sites and to develop long-term waste management research and development programs (see also the

---

**Nuclear Fission Power Plants, Fig. 29** (a) Supercritical water-cooled reactors (SWCR) concept (Courtesy of *Generation IV International Forum*). (b) Very high-temperature gas reactors (VHTR) concept (Courtesy of *Generation IV International Forum*). (c) Gas-cooled fast reactors (GFR) concept (Courtesy of *Generation IV International Forum*).

*International Forum*). (d) Sodium-cooled fast reactors (SFR) concept (Courtesy of *Generation IV International Forum*). (e) Lead-cooled fast reactors (LFR) concept (Courtesy of *Generation IV International Forum*). (f) Molten-salt reactor (MSR) (Courtesy of *Generation IV International Forum*)

following section “[New Nuclear Installations](#)” with respect to spent-fuel management).

According to a 2009 MIT update report [4], the initial 2003 study in the years following its publication was credited with a significant impact on the public debate both in the USA and abroad, including influence on the US Department of Energy’s (DOE) nuclear energy research and development (R&D) program. Unfortunately, in this same time frame, the challenges to greater nuclear-power deployment were found to have remained largely the same – especially with no new US plants under construction and insufficient progress on waste management – leading to: “The sober warning. . .that if more is not done, nuclear power will diminish as a practical and timely option for deployment at a scale that would constitute a material contribution to climate change risk mitigation.”

### New Nuclear Installations

An EPRI summer seminar in 2007 entitled “Electricity Solutions for a Carbon-Constrained Future” addressed “New Nuclear Installations” [6]. Whereas the MIT study [4] focused primarily on policy, the EPRI nuclear effort provides a valuable counterpoint on implementation.

At the time, nuclear power accounted for 73% of the emission-free generation in the USA and was described as the only technologically mature, nonemitting source of power that was positioned to deliver large-scale CO<sub>2</sub> reduction in the upcoming decades. Employing a study target of 64 GW of new nuclear by 2030 – considered ambitious but achievable – key challenges were identified so as to:

1. Keep the current nuclear power plants running safely and reliably for 60–80 years.
2. Build out the next generation of plants starting around 2015.

The existing fleet of light-water reactor (LWR) technology – generating approximately 20% of the nation’s electricity and operating at an average capacity of 90% – establishes a platform of confidence for the nation to proceed with further life extension of existing plants and to considerably expand the fleet using advanced LWR designs.

3. Achieve consensus on a long-term strategy for spent fuel.

Almost all of the US operating plants have had, or are in the process of having, their operating licenses extended from the initial 40–60 years. It was considered a reasonable assumption that all units would be granted a 20-year life extension by about 2016.

Even while these life extensions are being finalized, the technical basis must be laid for an additional 20-year extension – from 60 to 80 years – by confirming that “. . .with sufficient maintenance, refurbishment, and upgrades, today’s plants could [continue to] operate quite safely . . .” “Ultimately, extending the life of our current fleet an additional 20 years will be a business decision, which means that both continued high safety performance and continued economic competitiveness must be addressed.” Key among a wide variety of important milestones are assessing the ability of passive components to continue safe performance, upgrading instrumentation and controls to modern digital technology, and developing of higher-performance fuels to extend the time between refueling outages and reduce spent-fuel volumes.

Design development and prelicensing have produced advanced light-water reactor (ALWR) designs (section “[Advanced Reactors](#)”) that are approaching the “essentially complete design” status which will enable new plant orders to be based on detailed cost and schedule estimates. ALWRs are already in operation today or under construction around the world. At least 15 US companies stated their intent to file for NRC combined construction and operating licenses. Of a total of 30 reactors under consideration, most were slated for sites that have existing units and were developed with such expansion in mind.

The first commercial operation of ALWRs in the USA could begin shortly after 2015. “The first new plants out of the box must be done very, very well. . . They must be executed thoughtfully, deliberately, and with the highest level of skill.” The challenge is daunting. Then, the industry must sustain a much higher build rate out to 2050 and beyond. The research, development, and demonstration (RD&D) – with particular

emphasis on the latter – focus for new advanced reactors should/must include:

- Completing, in the short term, engineering work necessary for detailed cost and schedule estimates for plant construction and resolution of any remaining regulatory issues
- Beginning now to lay the foundation for the high build rates, including bringing capital costs and construction times down, addressing shortfalls in both physical and workforce infrastructure, and dealing with a plethora of other issues
- Helping the US federal government advance the capabilities of the high-temperature gas-cooled reactor (HTGR) from construction of an operational prototype to enabling commercially available units, e.g., to take advantage of the ability to produce electricity, provide process heat for industrial applications, and – especially – cost-effectively generate hydrogen by emission-free methods

Finally, sustained expansion of nuclear generation ultimately requires the resolution of spent-fuel management concerns. Although on-site interim storage in concrete silos has been effective and safe for over two decades, imperatives of economics, security, and sustainability will require establishing an integrated fuel management system for the longer term, i.e., including centralized interim storage, long-term geologic storage, and, eventually, a closed fuel cycle. A well-thought-out, deliberate consensus strategy on nuclear fuel storage is needed. Such a consensus will allow for advanced reprocessing and separation technologies, reconditioning, fuel manufacturing facilities, and effective application of GEN-IV fast-reactor technologies.

3. Kneif RA (1997) Nuclear steam supply systems. In: Elliott T et al (eds) Standard handbook of power plant engineering, 2nd edn. McGraw-Hill Book, New York
4. Ansolabehere S et al (2003) The future of nuclear power – an interdisciplinary MIT study. Massachusetts Institute of Technology. <http://web.mit.edu/nuclearpower/>. [Summarized in Deutch JM, Moniz EJ (2006) The nuclear option. *Sci Am*, Sept 2006]. Also “Update of the MIT 2003 future of nuclear power study,” Massac husetts Institute of Technology, 2009. <http://web.mit.edu/nuclearpower/pdf/nuclearpower-update2009.pdf>
5. Lake JA, Bennett RG, Kotek JF (2009) Next generation nuclear power. *Sci Am* 286(1):72–79
6. New nuclear installations (from EPRI’s 2007 Summer seminar: electricity solutions for a carbon-constrained future). EPRI J (Fall 2007):26–28
7. Kidd S (2016) Nuclear Engineering International. <http://www.neimagazine.com/opinion/opinionfive-years-post-fukushima-what-still-needs-to-be-done-4879421/>
8. Nuclear News (2016) Volume 59(3) – Includes “Reference Section,” pp. 35–67 (Section updated annually)
9. World Nuclear Association. <http://www.world-nuclear.org/informationlibrary/current-and-future-generation/nuclear-power-in-the-world-today.aspx>
10. Kneif RA (1992) Nuclear engineering – theory and technology of commercial nuclear power, 2nd edn. Taylor & Francis, Washington, DC (Reprinted by American Nuclear Society, 2008)
11. Sesonske A (1973) Nuclear power plant design analysis. U.S. Atomic Energy Commission, TID-26241, Washington, DC
12. World Nuclear Association. <http://www.world-nuclear.org/informationlibrary/facts-and-figures/world-nuclear-power-reactors-and-uraniumrequireme.aspx> [Updated periodically; includes detailed archive]
13. International Atomic Energy Agency – Power Reactor Information System (PRIS). <http://www.iaea.org/pris/> – Nuclear Power Reactors in the World. <http://www-pub.iaea.org/books/IAEABooks/11079/Nuclear-Power-Reactorsin-the-World> [2016 (36th) Edition; updated annually]
14. UNM (University of New Mexico) CEL (Centennial Engineering Library) Nuclear Engineering Wallcharts. <http://econtent.unm.edu/cdm4/browse.php?CISOROOT=nuceng> – Nuclear Engineering International. <http://www.neimagazine.com/story.asp?storyCode=2055665>. Accessed 6 Mar–July 2016
15. Rahn FJ, Adamantides AG, Kenton JE, Braun C (1984) A guide to nuclear power technology: a resource for decision making. Wiley-Interscience, New York
16. U.S. Nuclear Regulatory Commission (1975) Reactor safety study: an assessment of risks in U.S. commercial nuclear power plants. U.S. Nuclear Regulatory Commission, WASH-1400 (NUREG-74/014), Washington, DC
17. U.S. Nuclear Regulatory Commission (1989) Severe accident risks: an assessment for five U.S. nuclear plants. U.S. Nuclear Regulatory Commission, NUREG-1150, Washington, DC

## Bibliography

### Primary Literature

1. Rhodes R (1986) The making of the atomic bomb. Simon and Schuster, New York
2. Advanced nuclear power reactors – World Nuclear Association. <http://www.world-nuclear.org/info/info8.html>. Accessed 6 July 2011

18. Nuclear Engineering International magazine. <http://www.neimagazine.com/>. Accessed 6 July 2011
19. Walker SJ (2004) Three Mile Island – a nuclear crisis in perspective. University of California Press, Berkeley
20. International Atomic Energy Agency (2015) The Fukushima Daiichi Accident. Report by the Director General. <http://wwwpub.iaea.org/books/IAEABooks/10962/The-Fukushima-Daiichi-Accident>
21. Catron J (1989) New interest in passive reactor designs. EPRI J 14(3):4–13
22. Small Nuclear Power Reactors – World Nuclear Association. <http://www.world-nuclear.org/info/inf33.html>. Accessed 6 July 2011
23. Fast Neutron Reactors – World Nuclear Association. <http://www.worldnuclear.org/information-library/current-and-future-generation/fast-neutronreactors.aspx>
24. Nuclear Engineering International. <http://www.neimagazine.com/news/newsworlds-biggest-fast-reactor-to-startup-in-russia-in-2016-4719960/>
25. Generation IV Nuclear Reactors – World Nuclear Association. <http://www.world-nuclear.org/info/inf77.html>. Accessed 6 July 2011
26. Generation IV International Forum. [https://www.gen-4.org/gif/jcms/c\\_9260/public](https://www.gen-4.org/gif/jcms/c_9260/public)
27. Seminov BA (1983) Nuclear power in the Soviet Union. IAEA Bull 25(2):47–59
- General. <http://wwwpub.iaea.org/books/IAEABooks/10962/The-Fukushima-Daiichi-Accident>
- International Atomic Energy Agency (2016) Power reactors in the world. <http://www-pub.iaea.org/books/IAEABooks/11079/Nuclear-Power-Reactors-in-the-World> [2016 (36th) Edition; updated annually]
- Knief RA (1992) Nuclear engineering – theory and technology of commercial nuclear power, 2nd edn. Taylor & Francis, Washington, DC (Reprinted by American Nuclear Society, 2008)
- Lewis HW (1980) The safety of fission reactors. Sci Am 242:53–65
- Lish KC (1972) Nuclear power plant systems and equipment. Industrial Press, New York
- Marcus GH (2010) Nuclear firsts: milestones on the road to nuclear power development. American Nuclear Society, La Grange Park
- Marshall W (ed) (1983) Nuclear power technology, vols 1, 2, and 3. Clarendon, Oxford
- McIntyre MC (1975) Natural uranium heavy-water reactors. Sci Am 233:17–27
- MIT: the future of nuclear power. <http://web.mit.edu/nuclearpower/>. <http://web.mit.edu/nuclearpower/pdf/nuclearpower-update2009.pdf>. Accessed 6 July 2011
- Murray RL (2008) Nuclear energy, 6th edn. Butterworth-Heinemann, Oxford
- Nero AV Jr (1979) A guidebook to nuclear reactors. University of California Press, Berkeley
- Nuclear Engineering International Special Publications (1989) French PWR technology. Nuclear Engineering International Special Publications, Sutton
- Organisation for Economic Co-Operation and Development (OECD) – Nuclear Energy Agency (NEA). <http://www.nea.fr/>
- Rogovin M, Frampton GT Jr (1980) Three Mile Island: a report to the Commissioners and to the public. U. S. Nuclear Regulatory Commission, Washington, DC
- Todreas NE, Kazimi MS (1990) Nuclear systems (vol 1: thermal hydraulic fundamentals and vol 2: elements of thermal hydraulic design). Taylor & Francis/Hemisphere, New York
- U.S. Department of Energy (1987) Overall plant design descriptions VVER water-cooled, water-moderated energy reactor. DOE/NE0084, Rev. 1
- U.S. Department of Energy (DOE) – Office of Nuclear Energy (NE). [www.ne.doe.gov](http://www.ne.doe.gov). Accessed 6 July 2011
- U.S. Nuclear Regulatory Commission (1975) Reactor safety study: an assessment of risks in U.S. commercial nuclear power plants, WASH-1400 (NUREG-74/014). U.S. Nuclear Regulatory Commission, Washington, DC
- U.S. Nuclear Regulatory Commission (1987) Report on the accident at the Chernobyl nuclear power station, NUREG-1250, rev. 1. U.S. Nuclear Regulatory Commission, Washington, DC
- U.S. Nuclear Regulatory Commission (1989) Severe accident risks: an assessment for five U.S. nuclear plants, NUREG-1150. U.S. Nuclear Regulatory Commission, Washington, DC

## Books and Reviews

- Agnew HM (1981) Gas-cooled nuclear power reactors. Sci Am 244:55–63
- American Nuclear Society (+ Nuclear News). [www.ans.org](http://www.ans.org)
- Benedict M, Pigford TH, Levi HW (1981) Nuclear chemical engineering, 2nd edn. McGraw-Hill, New York
- Cochran RG, Tsoulfanidis N (1990) The nuclear fuel cycle – analysis and management. American Nuclear Society, La Grange Park
- Douglas J (1994) Reopening the nuclear option. EPRI J 19(8):6–17
- Electric Power Research Institute (EPRI). <http://my.epri.com>. Accessed 6 July 2011
- Fishetti MA (1987) Inherently safe reactors: they'd work if we'd let them. IEEE Spectr 24(4):28–33
- Framatome (1992) P4: the 1300 MWe PWR Series. Paris, Apr 1992
- Glasstone S, Sesonske A (1994) Nuclear reactor engineering (volume 1: reactor design basics and volume 2: reactor systems engineering), 4th edn. Chapman & Hall, New York
- Golay MW, Todreas NE (1990) Advanced light water reactors. Sci Am 262(4):82–89
- Hore-Lacy I (2009) Nuclear energy in the 21st century, 2nd edn. World Nuclear University Press, London
- International Atomic Energy Agency (IAEA). <http://www.iaea.org>
- International Atomic Energy Agency (2015) The Fukushima Daiichi accident. Report by the Director General. <http://wwwpub.iaea.org/books/IAEABooks/10962/The-Fukushima-Daiichi-Accident>
- International Atomic Energy Agency (2016) Power reactors in the world. <http://www-pub.iaea.org/books/IAEABooks/11079/Nuclear-Power-Reactors-in-the-World> [2016 (36th) Edition; updated annually]
- Knief RA (1992) Nuclear engineering – theory and technology of commercial nuclear power, 2nd edn. Taylor & Francis, Washington, DC (Reprinted by American Nuclear Society, 2008)
- Lewis HW (1980) The safety of fission reactors. Sci Am 242:53–65
- Lish KC (1972) Nuclear power plant systems and equipment. Industrial Press, New York
- Marcus GH (2010) Nuclear firsts: milestones on the road to nuclear power development. American Nuclear Society, La Grange Park
- Marshall W (ed) (1983) Nuclear power technology, vols 1, 2, and 3. Clarendon, Oxford
- McIntyre MC (1975) Natural uranium heavy-water reactors. Sci Am 233:17–27
- MIT: the future of nuclear power. <http://web.mit.edu/nuclearpower/>. <http://web.mit.edu/nuclearpower/pdf/nuclearpower-update2009.pdf>. Accessed 6 July 2011
- Murray RL (2008) Nuclear energy, 6th edn. Butterworth-Heinemann, Oxford
- Nero AV Jr (1979) A guidebook to nuclear reactors. University of California Press, Berkeley
- Nuclear Engineering International Special Publications (1989) French PWR technology. Nuclear Engineering International Special Publications, Sutton
- Organisation for Economic Co-Operation and Development (OECD) – Nuclear Energy Agency (NEA). <http://www.nea.fr/>
- Rogovin M, Frampton GT Jr (1980) Three Mile Island: a report to the Commissioners and to the public. U. S. Nuclear Regulatory Commission, Washington, DC
- Todreas NE, Kazimi MS (1990) Nuclear systems (vol 1: thermal hydraulic fundamentals and vol 2: elements of thermal hydraulic design). Taylor & Francis/Hemisphere, New York
- U.S. Department of Energy (1987) Overall plant design descriptions VVER water-cooled, water-moderated energy reactor. DOE/NE0084, Rev. 1
- U.S. Department of Energy (DOE) – Office of Nuclear Energy (NE). [www.ne.doe.gov](http://www.ne.doe.gov). Accessed 6 July 2011
- U.S. Nuclear Regulatory Commission (1975) Reactor safety study: an assessment of risks in U.S. commercial nuclear power plants, WASH-1400 (NUREG-74/014). U.S. Nuclear Regulatory Commission, Washington, DC
- U.S. Nuclear Regulatory Commission (1987) Report on the accident at the Chernobyl nuclear power station, NUREG-1250, rev. 1. U.S. Nuclear Regulatory Commission, Washington, DC
- U.S. Nuclear Regulatory Commission (1989) Severe accident risks: an assessment for five U.S. nuclear plants, NUREG-1150. U.S. Nuclear Regulatory Commission, Washington, DC

- U.S. Nuclear Regulatory Commission (NRC). [www.nrc.gov](http://www.nrc.gov). Accessed 6 July 2011
- Vendryes GA (1977) Superphénix: a full-scale breeder reactor. *Sci Am* 236:26–35
- World Nuclear Association (WNA). <http://www.world-nuclear.org/info/reactors.html>; Advanced Nuclear Power Reactors. <http://www.world-nuclear.org/info/inf08.html>; Generation IV Nuclear Reactors. <http://www.world-nuclear.org/info/inf77.html>; Fast Neutron Reactors. <http://www.world-nuclear.org/info/inf98.html>; Small Nuclear Power Reactors. <http://www.world-nuclear.org/info/inf33.html>. Accessed 6 July 2011



## GEN-IV Reactors

Taek K. Kim  
Nuclear Engineering Division, Argonne National Laboratory, Argonne, IL, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
GEN-IV Nuclear Systems  
Future Directions  
Bibliography

### Glossary

**Breeding ratio** Ratio of fission atom production to fissile atom destruction during a certain time interval in a nuclear system.

**Closed fuel cycle (full recycle)** One of the nuclear fuel cycle options, in which all actinides in the used nuclear fuel are separated and recycled to reduce the radiotoxicity of a geological repository while enhancing uranium utilization.

**Energy sustainability** Ability to meet the energy needs of the present generation while enhancing the ability of the future generation. In GEN-IV, the sustainability is measured by utilization of uranium resource without creating any weakness in economics and environmental goals.

**GFR** Gas-cooled Fast Reactor, which features a fast reactor and closed fuel cycle.

**GIF** Generation IV international forum, which is a cooperative international endeavor organized to carry out the R&D needed to establish the feasibility and performance capabilities of GEN-IV nuclear systems.

**LFR** Lead-cooled Fast Reactor, which features a fast reactor and closed fuel cycle.

**MSR** Molten Salt Reactor, which features thermal, epithermal, or fast reactor and closed fuel cycle.

**Open fuel cycle (once-through cycle)** One of the nuclear fuel cycle options, in which the used nuclear fuel discharged from a nuclear system is stored for some period of time and disposed in a geological repository isolating from environment.

**Pyroprocessing** The complete set of operations developed in USA. Integral Fast Reactor program based on the pyrometallurgical and electrochemical processes for recovering actinide elements from the used nuclear fuel and recycling them.

**SCWR** Supercritical-water-cooled reactor, which features either thermal or fast reactor and open or closed fuel cycle.

**SFR** Sodium-cooled Fast Reactor, which features a fast reactor and closed fuel cycle.

**Uranium utilization** Ratio of uranium mass used in a nuclear system for energy generation to the uranium mass required by the nuclear system in a nuclear fuel cycle option.

**VHTR** Very-High-Temperature Reactor, which features a thermal reactor and open fuel cycle.

### Definition of the Subject

Generation-IV reactors are a set of nuclear reactors currently being developed under international collaborations targeting sustainability, safety and reliability, high economics, proliferation resistance, and physical protection of nuclear energy. Nuclear systems have been developed over a number of decades and have evolved to the third generation from the first generation of prototypes constructed in the 1950s and 1960s, via the second generation of the commercial reactors operated worldwide after the 1970s. While the third-generation nuclear systems are currently proposed to the potential customers and under constructions with significant evolutionary in economics and safety based on lessons learned through plenty

reactor operations, nuclear experts from around the world began formulating the requirements for a generation IV of nuclear systems concerning over energy resource availability, climate change, air quality, and energy security. Six systems have been selected for further R&D as generation-IV nuclear systems by Generation IV International Forum (GIF), which is a cooperative international endeavor organized to carry out the R&D needed to establish the feasibility and performance capabilities of Generation IV systems. The six systems are gas-cooled fast reactor, lead-cooled fast reactor, molten salt reactor, sodium-cooled fast reactor, Supercritical-water-cooled reactor, and very-high-temperature reactor.

## Introduction


Nuclear energy systems have evolved up to the third generation: a first generation of prototypes constructed in 1950 and 1960; a second generation of commercial nuclear power plants built from 1970, most of which are in operation today; and a third generation of advanced nuclear reactors, called Generation III/III+, which incorporate technical progress based on lessons learned through more than 10,000 reactor years of operation. While the generation III/III+ nuclear systems are currently proposed to the potential customers and under constructions with significant evolutionary in economics and safety, nuclear experts from around the world indicated that further advances in nuclear energy systems are required to better meet the rapid growth of environment friendly, highly economic, and secure nuclear energy in both industrialized and developing countries. In particular, it is now globally recognized that the nuclear energy is the practically available massive energy source without greenhouse gas emission among numerous options. To meet these needs, the international nuclear community has engaged in a wide-range discussion on the development of next-generation nuclear energy systems known as *Generation IV* (GEN-IV) targeting the deployment around 2030. Figure 1 shows the evolution of the nuclear energy systems.

Nine countries, Argentina, Brazil, Canada, France, Japan, the Republic of Korea, the Republic of South Africa, the UK, and the USA, have initially joined together to form the Generation IV International Forum (GIF) [1] for developing GEN-IV nuclear systems that can be licensed, constructed, and operated in a manner that will provide competitively priced and reliable energy products while satisfactorily addressing nuclear safety, waste, proliferation, and public perception concerns. Now, the GIF consists of 14 membership countries added by Australia, China, Euratom, Russia, Switzerland, and two permanent observers of International Atomic Energy Agency (IAEA) and the Organisation for Economic Co-operation and Development Nuclear Energy Agency (OECD/NEA).

Beginning in 2000, more than 100 of nuclear experts from the countries constituting the GIF began to discuss for development of the GEN-IV technology roadmap in order to select the GEN-IV nuclear systems. As the first effort in the technology roadmap project [2], eight goals for the GEN-IV were defined in the four broad areas as shown in Table 1.

Since the eight goals are all equally important, the promising GEN-IV systems should ideally advance each and not create a weakness in one goal to gain strength in another. Under this central feature of the technical roadmap project, a series of GIF meeting was held in 2002 to conduct the selection process of the GEN-IV nuclear energy systems. The candidate systems were screened by the GIF expert group, and six nuclear systems were selected on a consensus of the GIF membership countries such that the systems are the most promising and worthy of collaborative developments. The selected six systems for further R&D are alphabetically as follows:

- Gas-cooled fast reactor (GFR) system
- Lead-cooled fast reactor (LFR) system
- Molten salt reactor (MSR) system
- Sodium-cooled fast reactor (SFR) system
- Supercritical-water-cooled reactor (SCWR) system
- Very-high-temperature reactor (VHTR) system

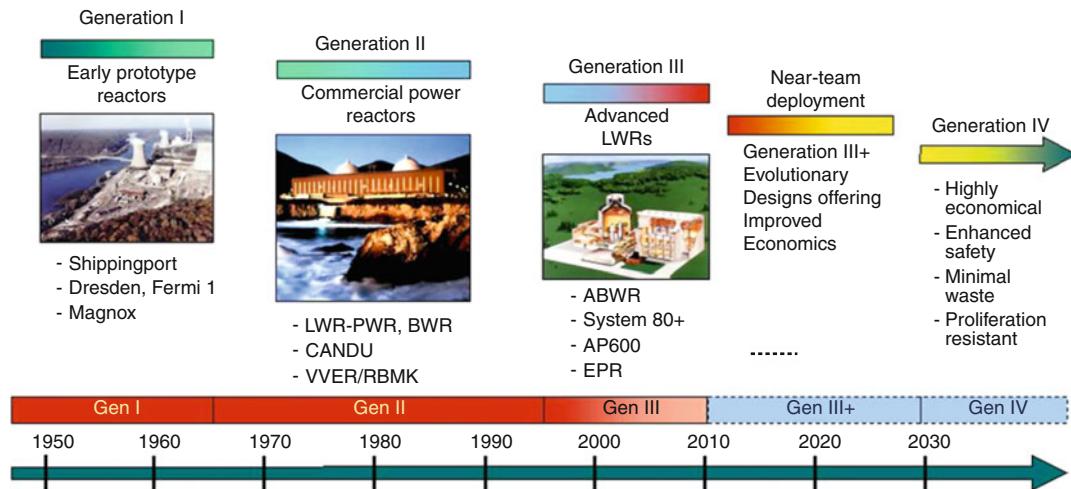

**GEN-IV Reactors, Fig. 1** Evolution of nuclear systems

## GEN-IV Nuclear Systems

In Table 2, the primary characteristics of the GEN-IV nuclear systems are summarized. In the roadmap project, it was recognized that the GIF countries would have perspectives on their priority missions for GEN-IV nuclear systems, which can be summarized as electricity generation, hydrogen production, and high-level radioactive material management. All six GEN-IV nuclear systems have electricity applications, while the high-temperature and fast-neutron spectrum are required for the hydrogen generation and high-level radioactive material management, respectively. The high-temperature systems such as VHTR, GFR, LFR, and MSR have potential applications in hydrogen production. By reprocessing and recycling of actinides, the fast reactor systems such as SFR, GFR, and LFR would provide a significant reduction in radio-toxicity of all wastes.

### Gas-Cooled Fast Reactor (GFR)

The gas-cooled fast reactor system features a fast-spectrum helium-cooled reactor and closed fuel cycle. Figure 2 shows the schematic of the GFR, which uses a direct-cycle helium turbine for electricity. Like thermal-spectrum, helium-cooled reactors such as the gas turbine-modular helium reactor (GT-MHR [3]) and the pebble bed

modular reactor (PBMR [4]), the high outlet temperature of the helium coolant makes it possible to not only deliver electricity but also process heat for hydrogen production with a high conversion efficiency. Through the combination of a fast-neutron spectrum and closed fuel cycle options, the GFR can manage the high-level radioactive waste isotopes.

The technology base for the GFR includes a number of thermal-spectrum gas reactor plants, as well as a few fast-spectrum gas-cooled reactor designs. Past pilot and demonstration projects include decommissioned reactors such as the Dragon Project [5] built and operated in the UK, the AVR [6] and the thorium high-temperature reactor (THTR [7]) built and operated in Germany, and Peach Bottom and Fort St. Vrain [8] built and operated in the USA. Ongoing demonstrations include the high-temperature engineering test reactor (HTTR [9]) in Japan, which reached full power (30 MWth) using prismatic fuel compacts in 1999, and the high-temperature gas-cooled reactor (HTR-10 [10]) in China, which reached 10 MWth in 2002 using pebble fuel.

A 300-MWth pebble bed modular demonstration plant is being designed by PBMR Pty for deployment in South Africa, and a consortium of Russian institutes is designing a 300-MWth GT-MHR in cooperation with General Atomics. The design of the PBMR and GT-MHR reactor

**GEN-IV Reactors, Table 1** Goal for generation-IV nuclear energy systems

Sustainability 1	Generation-IV nuclear energy systems will provide sustainable energy generation that meets clean air objectives and promotes long-term availability of systems and effective fuel utilization for worldwide energy production
Sustainability 2	Generation-IV nuclear energy systems will minimize and manage their nuclear waste and notably reduce the long-term stewardship burden, thereby improving protection for the public health and the environment
Economics 1	Generation-IV nuclear energy systems will have a clear life-cycle cost advantage over other energy sources
Economics 2	Generation-IV nuclear energy systems will have a level of financial risk comparable to other energy projects
Safety and reliability 1	Generation-IV nuclear energy systems operations will excel in safety and reliability
Safety and reliability 2	Generation-IV nuclear energy systems will have a very low likelihood and degree of reactor core damage
Safety and reliability 3	Generation-IV nuclear energy systems will eliminate the need for off-site emergency response
Proliferation resistance and physical protection 1	Generation-IV nuclear energy systems will increase the assurance that they are a very unattractive and the least desirable route for diversion or theft of weaponusable materials and provide increased physical protection against acts of terrorism

systems, fuel, and materials are evolutionary advances of the demonstrated technology, except for the Brayton cycle helium turbine and implementation of modularity in the plant design. The GFR may benefit from development of these technologies, as well as development of innovative fuel and very-high-temperature materials for the VHTR.

Spent fuel treatment for the GFR can be accomplished with aqueous processes similar to those of the SFR but qualified for the unique GFR fuel form. A composite ceramic-ceramic fuel (CERCER) with closely packed, coated (U, Pu)C kernels or fibers is considered as the primary option for fuel development. Alternative fuel options for development include fuel particles with large (U, Pu)C kernels and thin coatings, or ceramic-clad, solid-solution metal (CERMET) fuels. The need for a high density of heavy metal elements in the fuel leads to actinide carbides as the reference fuel and actinide nitrides with 99.9% enriched nitrogen as the backup.


The reference material for the structure is reinforced ceramic comprising a silicon carbide composite matrix ceramic. The fuel compound is made of pellets of mixed uranium-plutonium-minor actinide carbide. A leak tight barrier made of a refractory metal or of Si-based multilayer ceramics is added to prevent fission products' diffusion through the clad.

Neither experimental reactors nor prototypes of the GFR system have been licensed or built; therefore, the construction and operation of a first experimental reactor – a 50-MWth experimental technology demonstration reactor (ETDR [11]) – is proposed with an extended performance phase to qualify key technologies. A technology demonstration reactor would qualify key technologies and could be put into operation by 2025. Recently, General Atomics proposed so-called Energy Multiplier Module (EM<sup>2</sup>), a 240 MWe gas-cooled fast reactor [28].

Unlike the VHTR, which uses its considerable thermal mass to limit the rise of core temperature during transients, the GFR requires the development of a number of unique subsystems to provide defense in depth for its considerably higher-power

**GEN-IV Reactors, Table 2** Summary of GEN-IV nuclear systems

	Coolant	Neutron spectrum	Coolant exit temp. (°C)	Fuel cycle	Size (MWe)
GFR	Helium	Fast	850	Closed	1,200
LFR	Lead	Fast	480–570	Closed	20–1,000
MSR	Fluoride salt	Fast/thermal	700–800	Closed	1,000
SFR	Sodium	Fast	500–550	Closed	50–1,500
SCWR	Water	Thermal/fast	510–625	Open/closed	300–1,500
VHTR	Helium	Thermal	900–1,000	Open	250–300

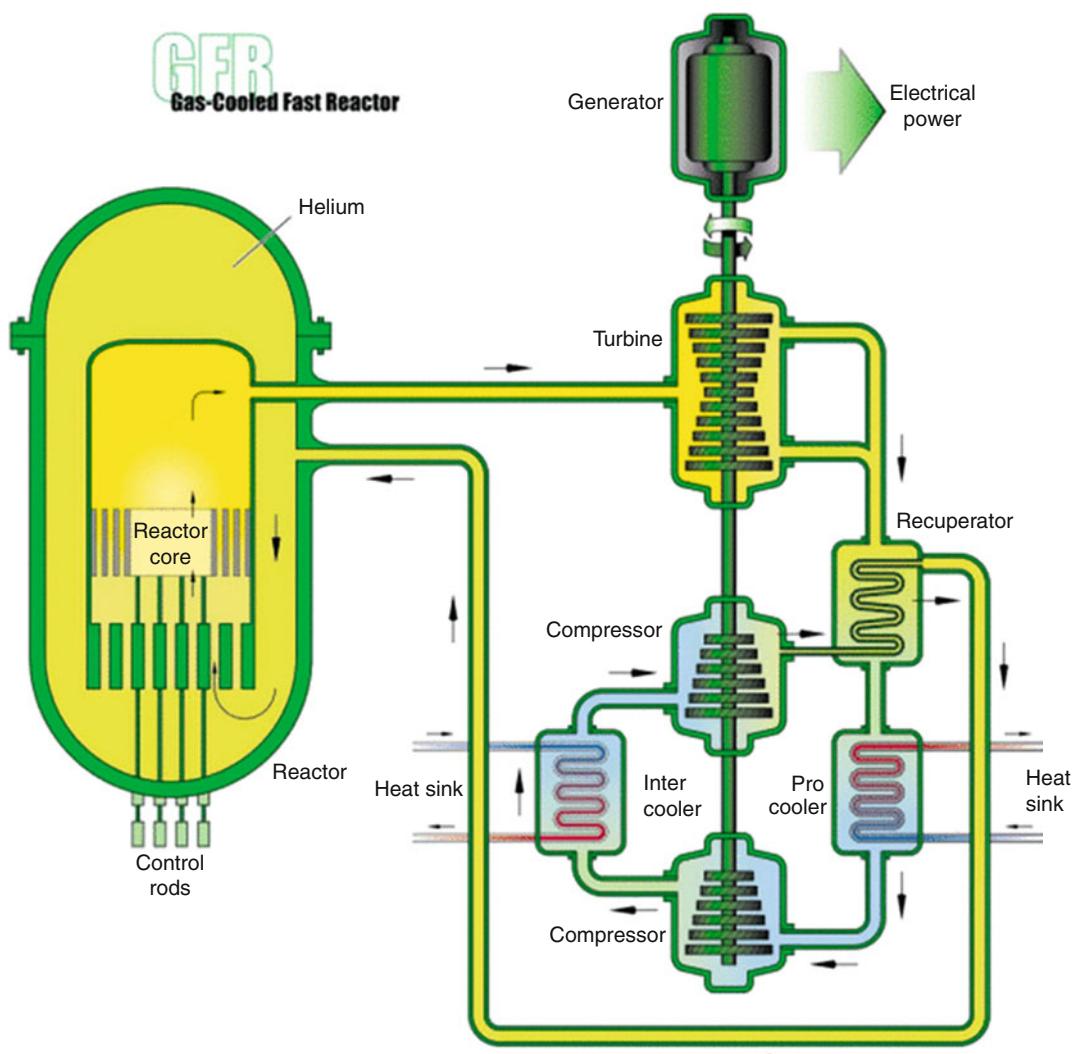**GEN-IV Reactors, Fig. 2** Gas-cooled fast reactor

density core. These include a robust decay heat removal system with added provisions for natural circulation heat removal, such as a low-pressure-drop core. The secondary circuit uses a He-N<sub>2</sub> gas mixture with an indirect combined (Brayton and bottoming steam) power cycle to achieve more than 45% thermal efficiency.

A gastight envelope acting as additional guard containment is provided to maintain a backup pressure in case of large gas leak from the primary system. It is a metallic vessel, initially filled with nitrogen slightly over the atmospheric pressure to reduce air ingress potential. This unique component limits the consequence of coincident first and second safety barrier rupture (i.e., the fuel cladding and the primary system). Dedicated loops for decay heat removal (in case of emergency) are directly connected to the primary circuit using cross duct piping from the pressure vessel and are equipped with heat exchangers and blowers.

Many of the structural materials and methods are being adopted from the VHTR, including the reactor pressure vessel, hot duct materials, and design approach. The pressure vessel is a thick metallic structure of martensitic chromium steel, ensuring negligible creep at operating temperature. The primary system is comprised of three main loops of 800 MW<sub>th</sub>, each fitted with compact intermediate heat exchangers and a gas blower enclosed in a single vessel.

As a high-temperature and high-power density system, the GFR gives special attention to safety and materials management for both economics and nonproliferation. During the viability phase that is underway now, there is special interest in examining the use of pin-type fuel with a small diameter, fuel and core performance optimized for a simplified GFR having no minor actinide recycle but with limited Pu breeding and low fuel burnup, core outlet temperature optimized to balance efficiency with materials limits, and the potential of prestressed concrete vessel technology to replace the guard vessel.


### **Lead-Cooled Fast Reactor (LFR)**

The lead-cooled fast reactor is similar to the sodium-cooled fast reactor in terms of neutron spectrum, fuel cycles, and the missions, but the coolant

materials are changed to lead (Pb) or lead-bismuth (Pb-Bi). The lead coolant exhibits very low parasitic neutron absorption in fast-neutron spectral environment, and this enables the sustainability and fuel cycle benefits traditionally associated with SF-R. However, lead does not react readily with air, water, or carbon dioxide, which can eliminate the concerns about vigorous exothermic reactions. It has a high boiling temperature. The need to operate under high pressure and the prospect of boiling or flashing in case of pressure reduction are eliminated. Figure 3 shows the schematic of the LFR.

There are several potentials for advances compared to state-of-the-art liquid metal fast reactors. Innovations in heat transport and energy conversion are a central feature of the LFR options. Innovations in heat transport are afforded by natural circulation, lift pumps, in-vessel steam generators, and other features. Innovations in energy conversion are afforded by rising to higher temperatures than liquid sodium allows and by reaching beyond the traditional superheated Rankine cycle to supercritical Brayton cycle or process heat applications such as hydrogen production and desalination. The favorable neutronics of coolant enable low-power density, natural circulation-cooled reactors with fissile self-sufficient core designs that maintain criticality over a 15-year refueling interval. For modular and large units, more conventional higher-power density, forced circulation, and shorter refueling intervals are used, but these units benefit from the improved heat transport and energy conversion technology. The favorable properties of lead coolant and nitride fuel, combined with high-temperature structural materials, can extend the reactor coolant outlet temperature up to 800 °C, which is potentially suitable for hydrogen manufacture and other process heat applications.

Two types of LFR reactors were used in Russian submarines of the 1970s with the 155-MW<sub>th</sub> LFR reactors, OK-550, and BM-440. Recently, Russian joint venture AKME Engineering announced to develop a commercial LFR called SBVR-100 [12]. The core is based on the former LFR reactors used in the submarines and will produce 100-MWe electricity from gross thermal power of 280 MW<sub>th</sub>, about twice that of the

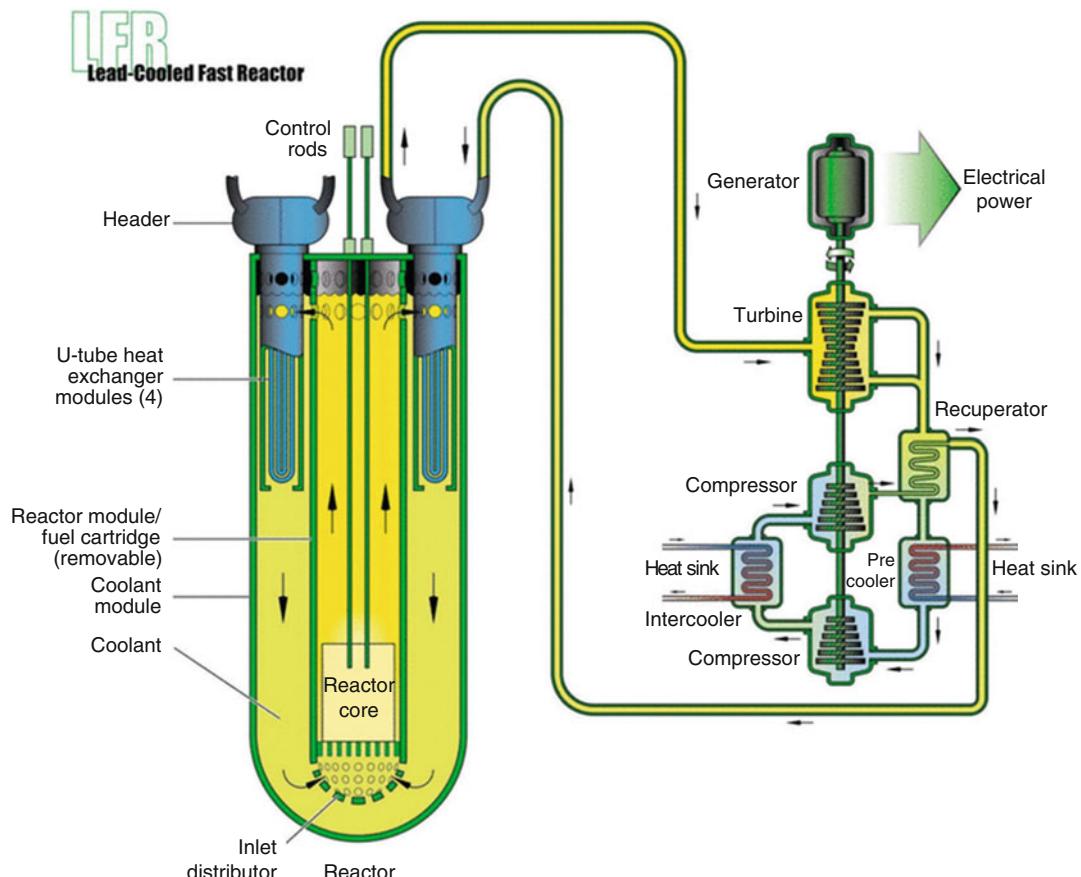


**GEN-IV Reactors, Fig. 3** Lead-cooled fast reactor

submarine reactors. The coolant is 495 °C, and 16.5% enriched uranium oxide fuel is used with the refueling schedule of 7–8 years. The small lead-cooled fast reactor concept known as the small secure transportable autonomous reactor (SSTAR [13]) has been under ongoing development as part of the US advanced nuclear energy systems programs (see Fig. 4). It is a system designed to provide energy security to developing nations while incorporating features to achieve nonproliferation goals. A 600-MWe European Lead-cooled System (ELSY [14]) has been under development since 2006. The ELSY project aims at the demonstration that it is possible to design a competitive and safe fast power reactor using simple technical engineered features.

The LFR is mainly envisioned for electricity and hydrogen production and high-level radioactive

material management. The proposed LFR options include a long refueling interval battery ranging from 50 to 150 MWe, a modular system from 300 to 400 MWe, and a large monolithic plant at 1,200 MWe. The LFR battery option (like SSTAR) is a small factory-built turnkey plant operating on a closed fuel cycle with very long refueling interval (15–20 years) cassette core or replaceable reactor module. Its features are designed to meet market opportunities for electricity production on small grids and for developing countries that may not wish to deploy an indigenous fuel cycle infrastructure to support their nuclear energy systems. Its small size, reduced cost, and full support fuel cycle services can be attractive for these markets. It had the highest evaluations to the GEN-IV goals among the LFR options but also the largest R&D needs and longest development time.

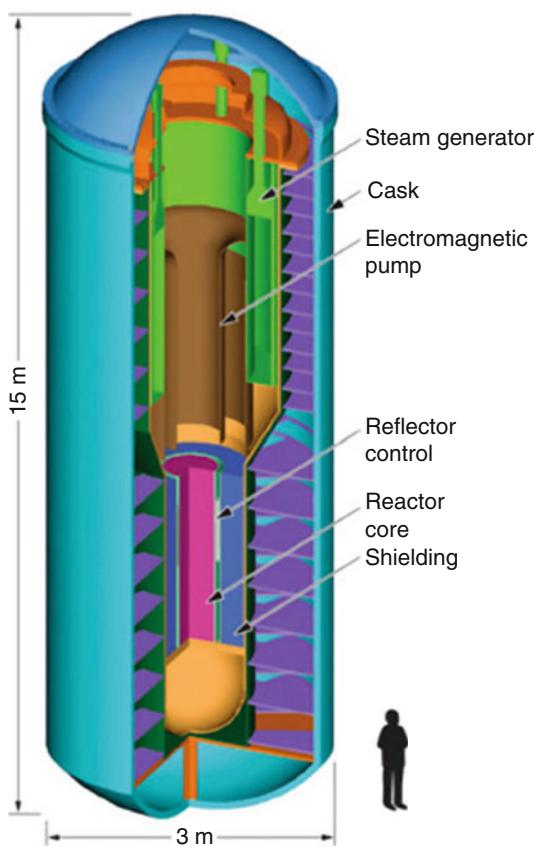

**GEN-IV Reactors, Fig. 4** SSTAR-A US lead-cooled fast reactor

The options in the LFR class may provide a time-phased development path: the nearer-term options focus on electricity production and rely on more easily developed fuel, clad, and coolant combinations and their associated fuel recycle and refabrication technologies. The longer-term option seeks to further exploit the inherently safe properties of lead and raise the coolant outlet temperature sufficiently high to enter markets for hydrogen and process heat, possibly as merchant plants.


The technologies employed are extensions of those currently available from the Russian submarine lead-bismuth alloy-cooled reactors, from the integral fast reactor (IFR [15]) metal alloy fuel recycle and refabrication development and from the advanced liquid metal reactor (ALMR [16]) passive safety and modular design approach. Existing ferritic stainless steel and metal alloy

fuel, which are already significantly developed for sodium fast reactors, are adaptable to lead-bismuth-cooled reactors at reactor outlet temperatures of 550 °C.

Corrosion of structural materials in lead is one of the main issues for the LFR. Recent experiments confirm that corrosion of steels strongly depends on the operating temperature and dissolved oxygen. Indeed, at relatively low oxygen concentration, the corrosion mechanism changes from surface oxidation to dissolution of the structural steel. Moreover, relationships between oxidation rate, flow velocity, temperature, and stress conditions of the structural material have been observed as well. The compatibility of ferritic and austenitic steels with lead has been extensively studied, and it has been demonstrated that generally below 450 °C, and with an adequate oxygen activity in the liquid metal, both types of steels build up an oxide layer which behaves as a corrosion barrier. However, above about 500 °C, corrosion protection through the oxide barrier appears to fail and is being addressed with various candidate materials. The prospects for extending much above this temperature are not proven at this time.

### Molten Salt Reactor (MSR)

The molten salt reactor uses a molten salt mixture as a primary coolant. Systematic analysis of parameters such as reprocessing time, moderation ratio, core size, and content of heavy nuclei in the salt has resulted in several attractive reactor configurations, in thermal, epithermal, or fast-neutron spectrum. The use of a molten salt coolant in a solid-fuel system has been investigated, known as the Advanced High-Temperature Reactor (AHTR [17]) or Fluoride salt cooled High temperature Reactor (FHR), which adapts VHTR fuel form and heat exchanger technology. However, in most MSRs, the fuel is dissolved in the molten salt coolant. Thus, the MSR has unique characteristic compared to other GEN-IV systems: i.e., online refueling and reprocessing are allowed without reactor shutdown because the fuel can move. In addition, the MSR has the following characteristics, which may afford advances: good neutron economy and alternatives for

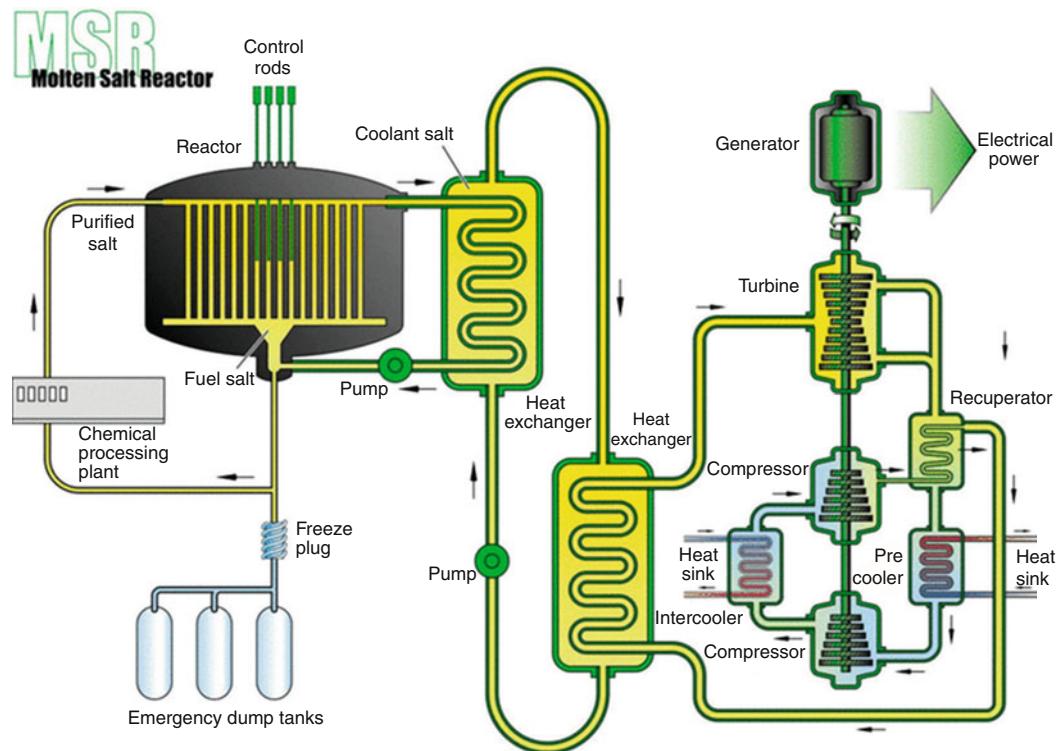


**GEN-IV Reactors, Fig. 5** Molten salt reactor

actinide burning or conversion, potential for hydrogen production with high operating temperature, low stresses on the vessel and piping with a very low vapor pressure, enhanced safety by fail-safe drainage, passive cooling, a low inventory of volatile fission products, etc. Figure 5 shows the schematic of the MSR concept with dissolved fuel.

The MSR was first developed in the late 1940s and 1950s for aircraft propulsion. The Aircraft Reactor Experiment (ARE [18]) was a 2.5-MWth nuclear reactor experiment designed to attain a high-power density for use as an engine in a nuclear-powered bomber. One experiment used the molten fluoride salt  $\text{NaF-ZrF}_4\text{-UF}_4$  (53-41-6 mol%) as fuel, was moderated by beryllium oxide, used liquid sodium as a secondary coolant, and had a peak temperature of 860 °C. It operated for a 1,000 h cycle in 1954. The 8-MWth Molten Salt Reactor Experiment (MSRE [19]) was operated from 1965 to 1969 to demonstrate many features, including lithium/

beryllium fluoride salt, graphite moderator, stable performance, off-gas systems, and use of different fuels such as U-233, U-235, and plutonium.

Recently, several MSRs were proposed: thorium molten salt reactor (TMSR [12]), FUJI mini MSR [12], Transatomic Power (TAP) reactor [29]. Figure 6 shows the 1,000-MWe TMSR with graphite moderator. Its operating temperature is 630 °C, and its thermodynamic efficiency is 40%. The salt used is a binary salt,  $\text{LiF-(HN)F}_4$ , with the  $(\text{HN})\text{F}_4$  content set to 22%, corresponding to a melting temperature of 565 °C. The U-233 enrichment is about 3%. A graphite radial blanket surrounds the core to improve breeding performance. The reprocessing time of the total salt volume is specified to be 6 months, with external storage of the Pa and complete extraction of the fission products and TRU. It is assumed that the U-233 produced in the blanket is also extracted every 6 months. The FUJI mini MSR is a 100-MWe molten-salt-fueled thorium fuel cycle thermal breeder reactor being developed internationally

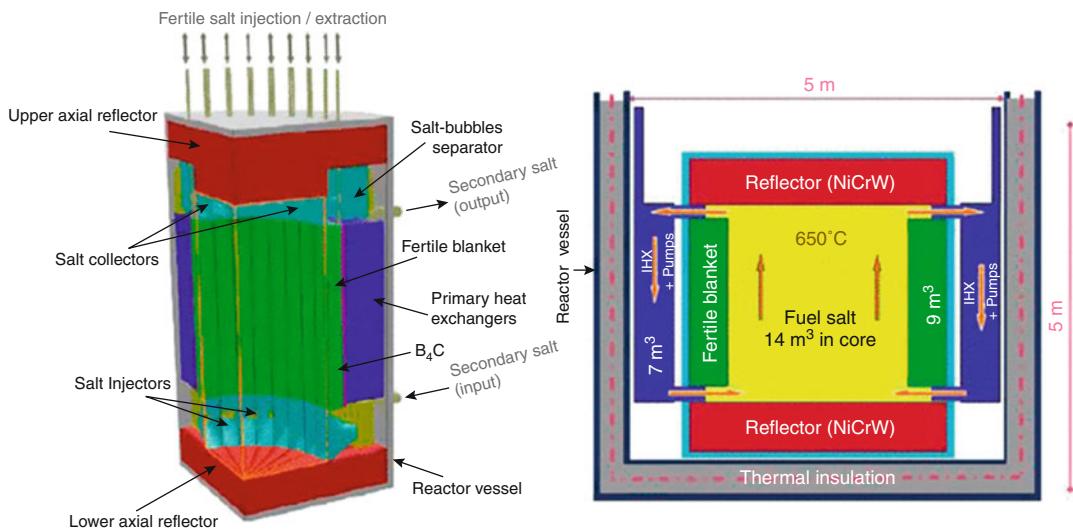

**GEN-IV Reactors, Fig. 6** Thorium molten salt reactor

by the Japanese, Russian, and US consortium. Like all molten salt reactors, the core is chemically inert under low pressures to prevent explosions and toxic releases.

There are four fuel cycle options: (1) maximum breeding ratio (up to 1.07) using a Th and U-233 fuel cycle, (2) denatured Th and U-233 converter with minimum inventory of nuclear material suitable for weapons use, (3) denatured once-through actinide burning (Pu and minor actinides) fuel cycle with minimum chemical processing, and (4) actinide burning with continuous recycling. The fourth option with electricity production is favored for the GEN-IV MSR. Fluoride salts with higher solubility for actinides such as NaF/ZrF<sub>4</sub> are preferred for this option. Salts with lower potential for tritium production would be preferred if hydrogen production was the objective. Lithium and beryllium fluorides would be preferred if high conversion was the objective. On-line processing of the liquid fuel is only required for high conversion to avoid parasitic neutron losses of Pa-233 that decays to U-233 fuel. Off-line fuel salt processing is acceptable for actinide management and hydrogen or electricity generation missions.

The reactor can use U or Th as a fertile fuel dissolved as fluorides in the molten salt. Due to the thermal or epithermal spectrum of the fluoride

MSR, Th achieves the highest conversion factors. However, before sufficient fissile is bred for maintaining the criticality, the MSR requires low-enriched uranium or other fissile materials. The operating temperature ranges from the melting point of eutectic fluorine salts (about 450 °C) to below the chemical compatibility temperature of nickel-based alloys (about 800 °C).

The R&D will focus on fuel salt cleanup, including pyrochemical separation technologies, extraction of gaseous fission products and noble metals by gas bubbling, tritium speciation and control, and conversion of various waste streams into final waste forms. The research will gradually advance from laboratory scale to larger and more integrated demonstrations. MSR burner and breeder fuel cycles will be evaluated and compared with other nuclear systems. This includes examination of the burning of actinides from other nuclear systems, startup of MSRs on various actinides, avoidance of the generation of most actinides by use of thorium fuel cycles, and alternative breeder reactor fuel cycles.

The MSR also addresses research related to the compatibility of fuel and coolant salts with core and structural materials and challenging MSR subsystem integrity: reactor components and reprocessing unit regarding mechanical and corrosion resistance. The high temperature, salt

reduction-oxidation potential, radiation fluence, and energy spectrum pose a serious challenge for any structural alloy in an MSR. The design of a practical system demands the selection of salt constituents such as LiF, NaF, BeF<sub>2</sub>, UF<sub>4</sub>, ThF<sub>4</sub>, and PuF<sub>3</sub> that are not appreciably reduced by available structural metals and alloys whose component Fe, Ni, and Cr can be in near equilibrium with the salt. Small levels of impurities in the salt may also aggressively corrode the metallics.

Circulating fuel raises challenges within the core such as the loss of delayed neutrons and temperature differences between the salt, reflectors, and moderator, which require the coupling between neutronics, thermal hydraulics, salt composition, and properties of the MSR.

### Sodium-Cooled Fast Reactor (SFR)

The sodium-cooled fast reactor features a fast-spectrum reactor and closed fuel recycle system. Including electricity generation, the primary mission for the SFR could be either enhancement of the uranium resource utilization or high-level radioactive material management, which depends on the SFR designs. Historically, the enhancement of the uranium resource utilization was the primary mission of the SFR by achieving a high breeding ratio, but the mission was recently shifted for consuming transuranics (plutonium and other long-lived radioactive material) in a very low breeding ratio core. The latter has been studied under the Global Nuclear Energy Partnership (GNEP), which was initiated to seek worldwide consensus on enabling expanded use of economical carbon-free nuclear energy to meet growing electricity demand. The GNEP adopted a fully closed nuclear fuel cycle option that enhances energy security while improving proliferation risk management. One of the major goals of the GNEP is to design and demonstrate a SFR for actinide management like the Advanced Burner Reactor (ABR, [20]).


Based on the arrangement of the primary coolant pump and intermediate heat exchanger (IHX), there are two options for the SFR systems: pool type and loop type (see Figs. 7 and 8). The primary pump and IHX are placed inside the reactor vessel in the pool type, while these two

components are located outside a reactor vessel in the loop type by connecting them through pipes. A hybrid option [21] of the pool and loop types has also been proposed.


The experiences on design, construction, and operation provide important input into the design process and have the potential to influence the maturity of the various fast reactor concepts. The greater the number of operating experience years, the greater the opportunity to modify the design based on operating lessons learned. The SFR relies on technologies already developed and demonstrated for sodium-cooled reactors and associated fuel cycles that have successfully been built and operated in worldwide fast reactor programs. Overall, approximately 300 reactor years of operating experience have been logged on SFRs including 200 years on smaller test reactors and 100 years on larger demonstration or prototype reactors. Thus, the technical readiness level, which indicates how soon a system could be deployed, of the SFR is most matured among the six GEN-IV systems.

In the USA, the SFR technology was employed in the 20-MW electric Experimental Breeder Reactor-II (EBR-II [22]) that operated from 1963 to 1994. EBR-II R&D included development and testing of metal fuel and passive safety tests. The 400-MWth Fast Flux Test Facility (FFTF [23]) was completed in 1980 (Fig. 9). The FFTF operated successfully for 10 years with a full core of mixed oxide (MOX) fuel and performed SFR materials, fuels, and component testing. The US SFR development program stalled with cancellation of the Clinch River demonstration reactor in 1983, although US-DOE research for advanced SFR technology under the Integral Fast Reactor (IFR) program continued until 1994. The SFR experience also extends to the commercial sector with the operation of Detroit Edison's FERMI-1 plant from 1963 to 1972.

Significant SFR research and development programs are being conducted in China, France, India, Japan, Russia, and Republic of Korea. The most modern fast reactor construction project was the 280-MWe MONJU (Japan) that was completed in 1990. The first criticality was achieved in 1994, but the reactor repeated shutdown-and-

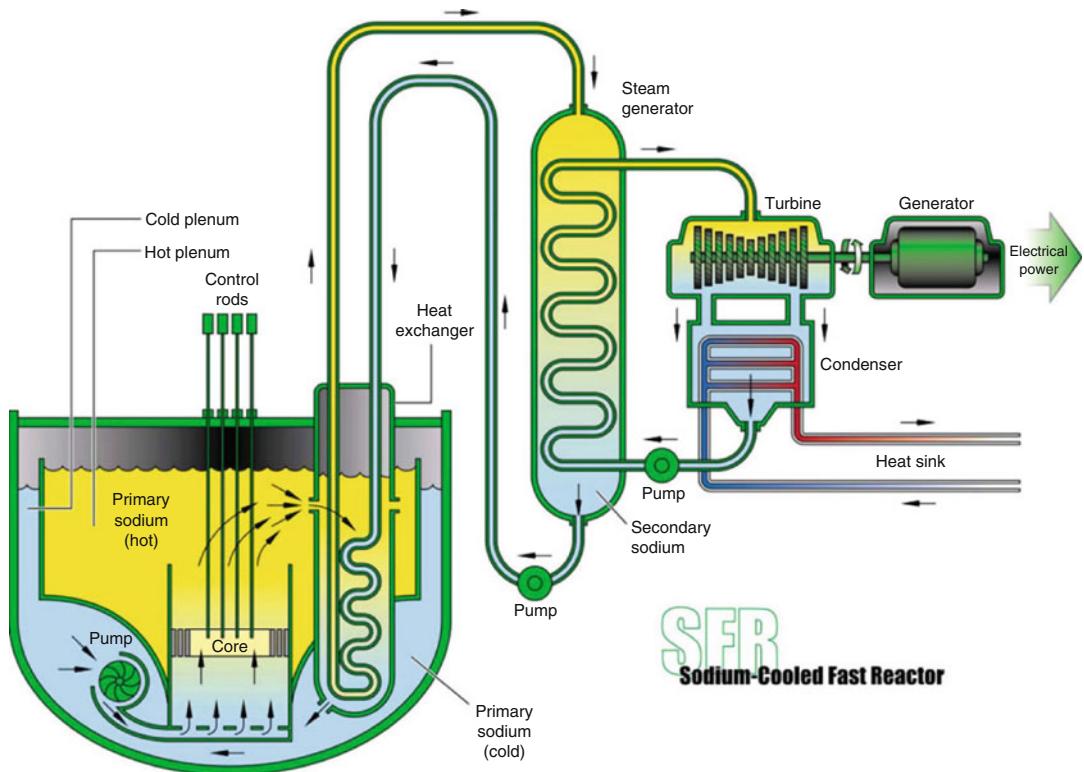

**GEN-IV Reactors, Fig. 7** Pool-type sodium-cooled fast reactor

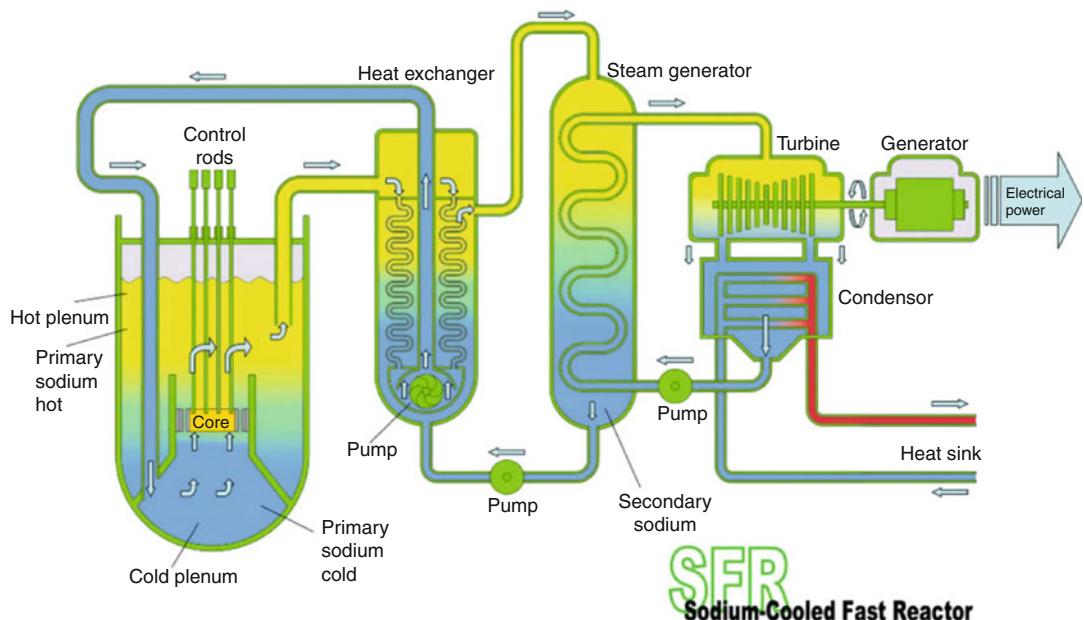

**GEN-IV Reactors, Fig. 8** Loop-type sodium-cooled fast reactor

**GEN-IV Reactors,**  
**Fig. 9** Fast Flux Test  
Facility

restart several times due to sodium leakage and multiple failures of the reactor components. Currently, the reactor is at shutdown status and the future of reactor operation is under discussion in Japan. The construction of 20-MWe Chinese Experimental Fast Reactor (CEFR) and coolant sodium loading was completed in 2009, and the first criticality was achieved in 2010. India operates 40-MWth Fast Breeder Test Reactor (FBTR) since 1985, and 500-MWe Prototype Fast Breeder Reactor (PFBR) is under construction and expected the first criticality in 2017. The only current fast reactor for electrical generation is the Russian BN-600 that is a 600 MWe SFR and has reliably operated since 1980, and the construction of a 800 MW SFR, BN-800 was completed, and the reactor was connected to the electricity grid in February 2016 and achieved full power operation in August 2016.

A range of plant-sized options are available for the SFR, ranging from battery-type systems of a hundred MW thermal to large monolithic reactors of 3,500 MW thermal. The sodium coolant outlet temperature is limited by the material properties. Coolant outlet temperatures are typically 500–550 °C; however, further increase is considered.

A large margin to coolant boiling is achieved by design and is an important safety feature of these systems. Another major safety feature is that the primary system operates at an essentially atmospheric pressure, pressurized only to the extent needed to move fluid. Sodium reacts

chemically with air, and with water, and thus the design must limit the potential for such reactions and their consequences. To improve safety, a secondary sodium system acts as a buffer between the radioactive sodium in the primary system and the steam or water that is contained in the conventional Rankine cycle power plant.

Metallic and oxide fuel forms are available for the SFR. The metallic fuel was originally chosen in the early fast reactor programs because of its high density, compatibility with the liquid metal coolant, relative easiness to fabricate, and excellent thermal conductivity. In the late 1960s, before the full potential of metallic fuels was established, the interest worldwide for fast reactor fuel turned toward the oxide fuel, because the achievable burnup is limited by a large irradiation swelling. However, the development and irradiation test of metallic fuels continued through the 1970s, and it was discovered that the metallic fuel can achieve a high burnup by allowing room for fuel to swell. In addition, the metallic fuel was focused again in the recent fast reactor programs because of its potential passive safety benefits.

The high burnup potential, rich experiences in commercial water-cooled reactors, and the existence of established industry for manufacturing were the critical factors that motivated interest in oxide fuel for the liquid-metal-cooled fast reactors. However, the low heavy metal density and low thermal conductivity are the principal disadvantages of the oxide fuel. The low density is

unfavorable to implement a compact core and increase the breeding ratio or cycle length. The low thermal conductivity leads to high-temperature gradient from fuel to coolant. As a result, the oxide fuel stores significant amount of Doppler reactivity in the normal operation condition, and it provides the unfavorable positive reactivity feedback during an unprotected severe accident.

Recently, the mixed carbide and nitride fuels have been given attention as the alternative fuels for sodium-cooled fast reactor on the basis of their high density, compatibility with sodium coolant, high melting temperature, and excellent thermal conductivity although they are ceramic fuel like a mixed oxide fuel.

The SFR requires a closed fuel cycle to enable their advantageous actinide management and fuel utilization features. There are two primary fuel cycle technology options: an advanced aqueous process and the pyroprocess [15] which derives from the term pyrometallurgical process. Both processes have similar objectives: recovery and recycle of more than 99.9% of the actinides; inherently low decontamination factor of the product, making it highly radioactive; and never separating plutonium at any stage for nonproliferation. These fuel cycle technologies are adaptable to thermal-spectrum fuels in addition to serving the needs of the SFR. Thus, the reactor technology and the fuel cycle technology are strongly linked.

Due to the flexibility of the conversion ratio depending on the core design options, the SFR can be operated in three distinct fuel cycle roles. A conversion ratio less than 1 (“burner”) can reduce long-lived radioactive waste. A conversion ratio near 1 can increase the uranium utilization without feeding additional enriched uranium. A conversion ratio greater than 1 (“breeder”) affords a net creation of fissile materials. An appropriately designed fast reactor has flexibility to shift between these operating modes; the desired actinide management strategy will depend on a balance of waste management and resource extension considerations.

Regarding economics, the reduction of the plant capital costs is crucial. A number of innovative SFR design features have been proposed:


configuration simplifications, improved Operations and Maintenance (O&M) technology, advanced reactor materials, advanced energy conversion systems, fuel handling, etc.

With regard to reactor safety, technology gaps center around two general areas: assurance of passive safety response and techniques for evaluation of bounding events. The advanced SFR designs exploit passive safety measures to increase reliability. The system behavior will vary depending on system size, design features, and fuel type. R&D for passive safety will investigate phenomena such as axial fuel expansion and radial core expansion and design features such as self-actuated shutdown systems and passive decay heat removal systems. The ability to measure and verify these passive features must be demonstrated. Associated R&D will be required to identify bounding events for specific designs and investigate the fundamental phenomena to mitigate severe accidents.

Finally, the development of SFR technology provides the opportunity to design modern safeguards directly into the planning and building of new nuclear energy systems and fuel cycle facilities. Incorporating safeguards into the design phase for new facilities will facilitate nuclear inspections conducted by the International Atomic Energy Agency (IAEA). The goal of this oversight is to always have an accurate grasp of the current inventory through the utilization of advanced technologies to verify the characteristics of the security system (accountancy, detection, and promptness) and the physical protection characteristics (physical protection measures, the monitoring level, and security measures) and for ensuring robust design to guarantee these characteristics. It is also necessary to maintain transparency and openness in terms of information to more effectively and efficiently monitor and verify nuclear material inventories.

### **Supercritical Water-Cooled Reactor (SCWR)**

The supercritical water-cooled reactor is a water-cooled reactor like light water reactor (LWR) operated commercially, but the SCWR is operated above the thermodynamic critical point of water

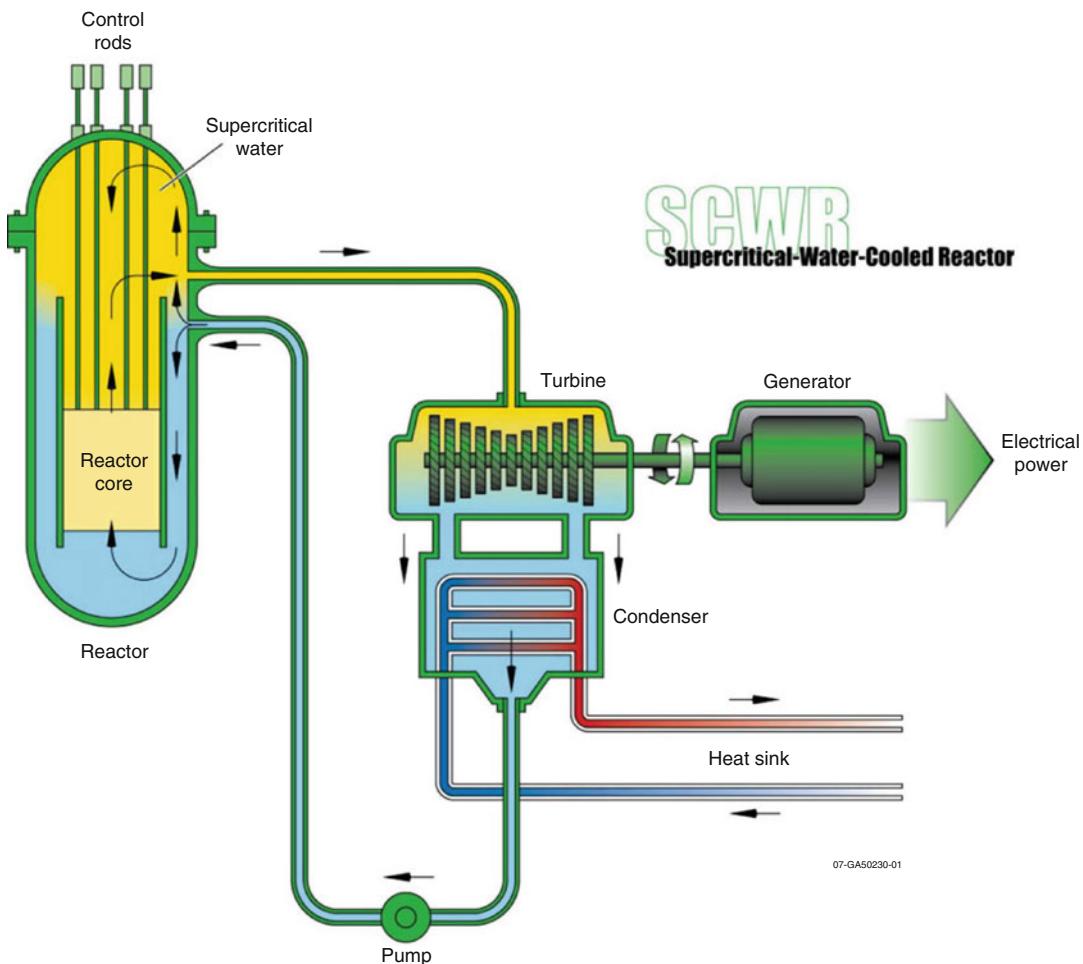

**GEN-IV Reactors, Fig. 10** Supercritical water-cooled reactor

( $374^{\circ}\text{C}$ , 22.1 MPa). Figure 10 shows the SCWR system.

The specific heat increases drastically and the water density decreases without boiling of water around the thermodynamic critical point. As a result, the SCWR has unique features that may offer advantages compared to state-of-the-art PWRs: Higher plant thermal efficiency compared to LWRs due to the higher operating temperature. Low density of water without boiling allows the direct cycle like boiling water reactor (BWR), but steam dryers, steam separators, recirculation pumps, and steam generators are not necessary, and as a result, the SCWR can be a simpler plant with fewer major components. Lower-coolant mass flow rate per unit core thermal power results

from the high heat capacity of the supercritical water. This offers a reduction in the size of the reactor coolant pumps, piping, and associated equipment, and a reduction in the pumping power. Lower-coolant mass inventory results from the once-through coolant path in the reactor vessel and the lower-coolant density. This opens the possibility of smaller containment buildings. No boiling crisis (i.e., departure from nucleate boiling or dry out) exists due to the lack of a second phase in the reactor, thereby avoiding discontinuous heat transfer regimes within the core during normal operation.

The SCWR systems may have a thermal [24], fast [25], or mixed-neutron spectrum [26] depending on the core design. The Japanese

supercritical light water reactor (SCLWR) with a thermal spectrum has been the subject of the most development work in the last 10–15 years. The SCLWR reactor vessel is similar in design to a PWR vessel (although the primary coolant system is a direct-cycle, BWR-type system). High-pressure (25.0 MPa) coolant enters the vessel at 280 °C. The inlet flow splits, partly to a downcomer and partly to a plenum at the top of the core to flow down through the core in special water rods. This strategy provides moderation in the core. The coolant is heated to about 510 °C and delivered to a power conversion cycle, which blends LWR and supercritical fossil plant technology; high-, intermediate-, and low-pressure turbines are employed with two reheat cycles.

The SCWR can also be designed to operate as a fast reactor. The difference between thermal and fast versions is primarily the amount of moderator material in the SCWR core. The fast-spectrum reactors use no additional moderator material, while the thermal-spectrum reactors need additional moderator material in the core. The mixed-spectrum SCWR was proposed not only to achieve all advantages of SCWR but also the actinide management. The core uses two coolant flow paths: outer zone with high density water and inner zone with low density water (see Fig. 11). Thus, the inner zone features fast-neutron spectrum, while the outer zone features thermal spectrum. By recycling TRU in the fast zone, the mixed-spectrum SCWR is capable of keeping all TRU in the reactor.

Much of the technology base for the SCWR can be found in the existing LWRs and in commercial supercritical-water-cooled fossil-fired power plants. However, there are some relatively immature areas. There have been no prototypes of SCWRs built and tested. For the reactor primary system, there has been very little in-pile research done on potential SCWR materials or designs, although some SCWR in-pile research has been done for defense programs in Russia and the USA. Limited design analysis has been underway over the last decade in Japan, Canada, and Russia. For the balance of plant, there has been development of turbine generators, piping, and other equipment extensively used in supercritical-water-cooled fossil-fired power plants.


The ability to use proven uranium oxide fuel greatly simplifies the application of fuel and fuel cycle technology to the SCWR. However, the supercritical water is known to challenge the corrosion/erosion performance of current cladding technology, and R&D is focused on advanced cladding materials.

There are several unique components needed for the SCWR, including the reactor pressure vessel or pressure tubes and its internal structural components, moderator channels, control rods and drives, the condenser and high-pressure pumps, valves, and seals. The reactor pressure boundary must operate above the high pressure (22.1 MPa) of supercritical water. This may be addressed with thicker sections, and thermal stresses can be avoided with a thermal sleeve for the outlet nozzle.

Zirconium-based alloys, common in water-cooled reactors, may not be a viable material without thermal and/or corrosion-resistant barriers. Based on available data for other alloy classes, there is no single alloy that has received enough study to unequivocally ensure its performance in an SCWR. Another key need of this system will be an enhanced understanding of the chemistry of supercritical water. Water above its critical point is accompanied by dramatic changes in chemical properties. Its behavior and degradation of materials are further accelerated by in-core radiolysis, which preliminary studies suggest is markedly different than what would have been predicted by simplistic extrapolations from conventional reactors.

The approach to development of materials and components will build on evaluation of candidate materials with regard to corrosion and stress corrosion cracking, strength, brittleness and creep resistance, and dimensional and microstructural stability, the potential for water chemistry control to minimize impacts as well as rates of deposition on fuel cladding and turbine blades, and measurement of performance data in an in-pile loop. All of these are critical to establishing viability of the SCWR.

The SCWR leads the way among GEN-IV systems in the development of advanced materials for water coolant. In fact, the diffusion of this

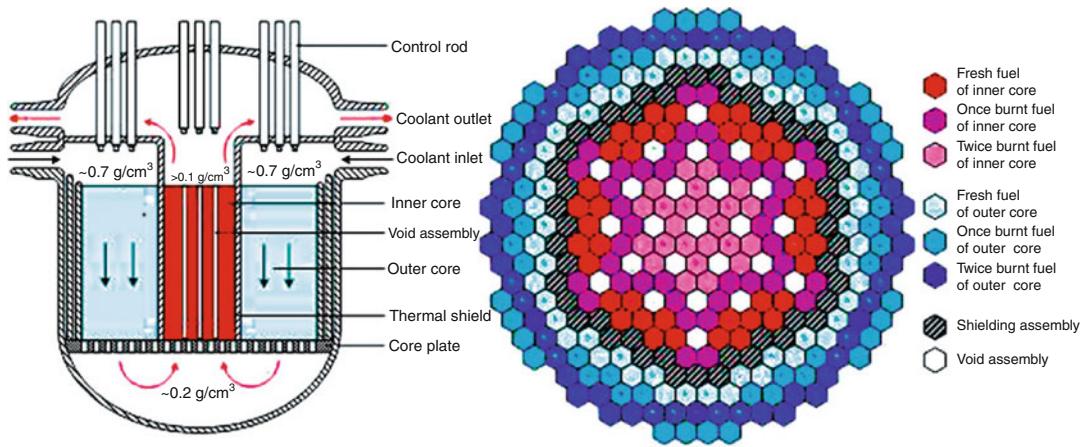

**GEN-IV Reactors, Fig. 11** Core layout of mixed-spectrum Supercritical-water-cooled reactor

technology into current generation light and heavy water reactors seems assured. However, much remains to be done: the thermal-hydraulic performance during normal and off-normal operation, as well as postulated accidents, needs to be addressed both with advances in the design and safety approach as well as the analysis tools. Issues to be addressed include the basic thermal-hydraulic phenomenon of heat transfer and fluid flow of supercritical water in various geometries; critical flow measurements; the strong coupling of neutronic and thermal-hydraulic behavior, leading to concerns about flow stability and transient behavior; validation of computer codes that reflect these phenomena; and definition of the safety and licensing approach as distinct from current water reactors, including the spectrum of postulated accidents, flow instability, etc.


#### Very-High-Temperature Reactor (VHTR)

The very-high-temperature reactor is a graphite-moderated, helium-cooled reactor like GT-MHR and PBMR capable of generating electricity, but the coolant output temperature is significantly increased up to 1,000 °C. In Fig. 12, the schematic of the VHTR is depicted. The higher temperatures of this reactor open the door for industrial heat processing opportunities, in particular, for hydrogen production. The annual US demand for hydrogen is over 12 million tons and expected to grow to over 30 million tons by 2030. Industry

uses hydrogen for fossil fuel refining, treating metals, and food processing. Hydrogen is currently produced primarily from steam methane reforming using fossil fuel as a heat source. Hydrogen can also be produced by various processes using a high-temperature gas-cooled reactor as the primary energy source.

Use of nuclear energy as the heat source of a large-scale hydrogen production operation would result in substantially lower carbon emissions over a natural gas-fired steam methane-reforming operation. A 600-MWth VHTR dedicated to hydrogen production can yield over two million normal cubic meters per day. The VHTR can also generate electricity with high efficiency, over 50% at 1,000 °C.

The VHTR has been evolved from gas-cooled reactor experiences and extensive international databases that can support its development. The basic technology for the VHTR has been well established in former gas-cooled reactors, such as DRAGON, Peach Bottom, AVR, THTR, and Fort St. Vrain and is being advanced in concepts such as the GT-MHR and PBMR. The ongoing 30-MWth HTTR project in Japan is intended to demonstrate the feasibility of reaching outlet temperatures up to 950 °C coupled to a heat utilization process, and the HTR-10 in China will demonstrate electricity generation at a power level of 10 MWth. The former projects in Germany and Japan provide data relevant to the VHTR development.

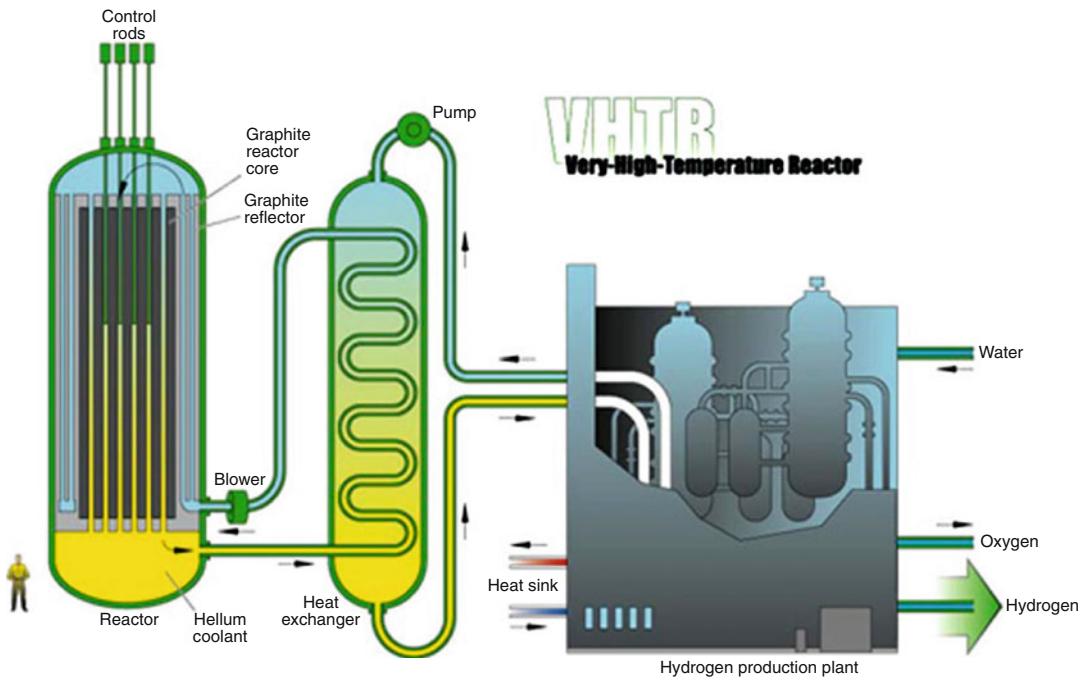

**GEN-IV Reactors, Fig. 12** Very-high-temperature reactor


The VHTR core uses TRISO particles to form a pebble bed or prismatic fuel element (see Fig. 13). The TRISO particle, which has a small diameter of less than 1.0 mm, has a fuel kernel in the form of uranium oxide. The enrichment of the uranium is dependent on the core design purposes. The kernel is subsequently coated with a porous carbon layer (to hold fission gases), a dense pyrolytic carbon layer, a silicon carbide layer, and finally another pyrolytic carbon layer. The coatings surrounding the kernel of TRISO particles produce a very robust fuel form by acting as the containment boundary for the radioactive material. These coatings work in much the same way as the massive reinforced concrete structure surrounding the light water reactors currently in service.

The reactor core type of the VHTR can be a prismatic block core such as GT-MHR and Japanese HTTR or a pebble bed core such as PBMR and Chinese HTR-10. Despite of the alternate fuel element designs (pebble bed versus prismatic), the two baselines have many technologies in common that

allow for a unified R&D approach. The well-known TRISO particle fuel with a UO<sub>2</sub> kernel and SiC/PyC coating may be used in either, or it may be enhanced with a different fuel kernel form such as UCO or an advanced ZrC coating through additional research. For electricity generation, the helium gas turbine system can be directly set in the primary coolant loop, which is called a direct cycle. For nuclear heat applications such as process heat for refineries, petrochemistry, metallurgy, and hydrogen production, the heat application process is generally coupled with the reactor through an intermediate heat exchanger (IHX), which is called an indirect cycle.

The fuel cycle will initially be a once-through fuel cycle specified for high burnup (15–20 atom-%) using low-enriched uranium. The operation with a closed fuel cycle will be assessed, and solutions to better manage the fuel cycle back end will be developed. The possible use of TRU as a fuel will be studied conceptually for actinide management [27].

The primary emphasis in fuel development is on its performance at high burnup, power density,

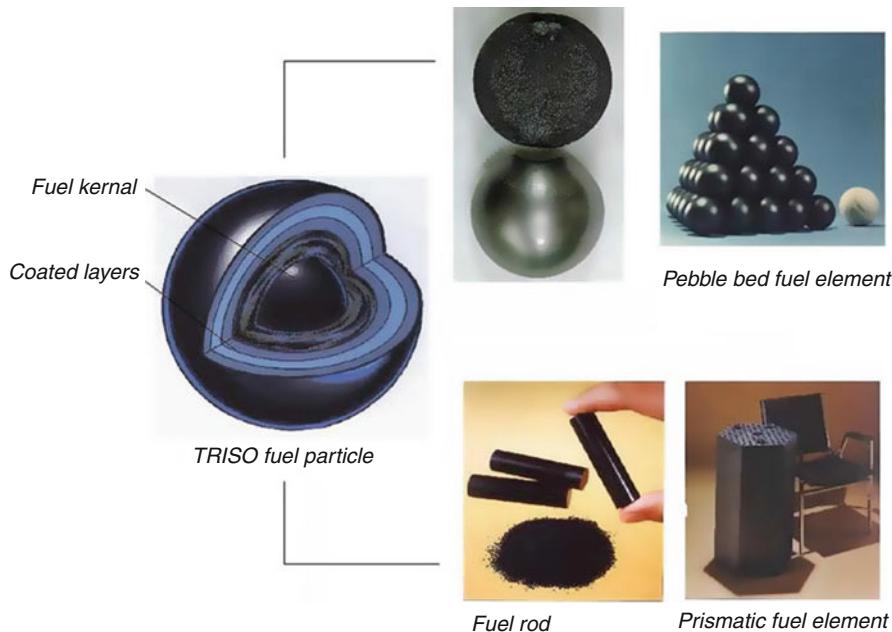

**GEN-IV Reactors, Fig. 13** VHTR fuel elements

and temperature. The R&D broadly addresses its manufacture and characterization, irradiation performance, and accident behavior. Irradiation tests will provide data on coated particle fuel and fuel element performance under irradiation as necessary to support fabrication process development, to qualify the fuel design, and to support development and validation of models and computer codes on fission product transport. They will also provide irradiated fuel and materials samples for postirradiation and safety testing. The performance expected for the fuel must be verified for all normal, transient, or accident conditions as well as certain severe accident conditions (beyond design basis). A key claim of the fuel is its ability to retain fission products in the fuel particles under a range of postulated accidents with temperatures up to 1,600 °C.

### Future Directions

The objective for Generation IV nuclear energy systems is to have them available for wide-scale deployment before the year 2030. The anticipated deployment dates for the six GEN-IV systems are

**GEN-IV Reactors, Table 3** Anticipated deployment of GEN-IV systems

System	Deployment timelines		
	Viability phase	Performance phase	Demonstration phase
GFR	2012	2020	2025
LFR	2014	2020	2025
MSR	2013	2020	2025
SFR	2006	2015	2020
SCWR	2014	2020	2025
VHTR	2010	2015	2020

provided in Table 3 in terms of R&D phases. The deployment dates of the SFR and VHTR are expected to be earlier than other GEN-IV systems because of their matured technical readiness level.

In the viability R&D phase, the feasibility of key technologies of the GEN-IV systems will be examined. The performance R&D activities undertake the development of performance data and optimization of the system. Assuming the successful completion of viability and performance R&D, the demonstration R&D phase activities involve the licensing, construction, and operation of a prototype or demonstration system

in partnership with industry and perhaps other countries. Thus, the detailed design and licensing of the system will be performed during the demonstration phase. The R&D projects and milestones anticipated in each phase were defined in GEN-IV roadmap project [2].

## Bibliography

### Primary Literature

1. Generation IV International Forum. <http://www.gen-4.org>
2. US-DOE Nuclear Energy Research Advisory Committee and GIF (2002) A technical roadmap for generation IV nuclear energy systems: ten nations preparing today for tomorrow's energy needs. Generation IV International Forum. <http://www.gen-4.org>
3. Potter PC (1996) Gas turbine-modular helium reactor (GT-MHR) conceptual design description report. General Atomics GA-910720
4. Koster A, Matzer HD, Nichols DR (2003) PBMR design for the future. Nucl Eng Des 222:231–245
5. Simon R (2005) The primary circuit of the DRAGON high temperature reactor experiment. In: 18th international conference of structural mechanics in reactor technology (SMiRT 18), Beijing
6. Moermann R (2008) A safety re-evaluation of the AVR pebble bed reactor operation and its consequences for future HTR concepts. Institute for Energy Research, Switzerland
7. Wachholz W (1988) The present state of the HTR concept based on experience gained from AVR and THTR. In: International working group on gas-cooled reactors International Atomic Energy Agency IWGGCR-19, Vienna
8. Brown JR et al (1987) Physics testing at Fort St. Vrain: a review. Nucl Sci Eng 97:104
9. Yamashita K et al (1996) Nuclear design of the high-temperature engineering test reactor (HTTR). Nucl Sci Eng 122:212
10. Seker V, Colak U (2003) HTR-10 full core first criticality analysis with MCNP. Nucl Eng Des 222:263–270
11. Stainsby R, Peers K, Mitchell C, Poette C, Mikityuk K, Somers J (2009) Gas cooled fast reactor research and development in the European Union. Sci Technol Nucl Install 2009:1–7
12. IAEA (2007) Status of small reactor designs without on-site refueling. In: International Atomic Energy Agency IAEA-TECDOC-1536, Vienna
13. Smith C, Halsey WG, Brown NW, Sienicki JJ, Moisseytsev A, Wade DC (2008) SSTAR: the US lead-cooled fast reactor (LFR). J Nucl Mater 376:255–259
14. Cinotti L, Smith CF, Sienicki JJ, Abderrahim HA, Benamati G, Locardi G, Monti S, Wider H, Stuwe D, Orden A (2007) The potential of LFR and ELSY project. In: 2007 international congress on advances in nuclear power plants, Nice
15. Hannum WH (1997) The technology of Integral Fast Reactor and its associated fuel cycle. Prog Nucl Energy 31:1–217
16. Boardman CE (2000) A description of the S-PRISM plant. In: 8th international conference on nuclear engineering, Baltimore
17. Ingersoll T et al (2004) Status of pre-conceptual design of the advanced high-temperature reactor (AHTR). Oak Ridge National Laboratory, Oak Ridge, ORNL/TM-2004/104
18. Bettis ES, Cottrell WB, Mann ER, Meem JL, Whitman GD (1957) The aircraft reactor experiment: operation. Nucl Sci Eng 2:841–853
19. Haubenreich PN, Engel JR (1970) Experience with the molten-salt reactor experiment. Nucl Appl Technol 8:118–136
20. Kim TK, Yang WS, Grandy C, Hill RN (2009) Core design studies for a 1000 MWt advanced burner reactor. Ann Nucl Energy 36:331–336
21. Zhao H, Zhang H (2007) An innovative hybrid loop-pool design for sodium cooled fast reactor. Idaho National Laboratory INL/CON-07-12657
22. Koch L (2000) Experimental breeder reactor-II. Argonne National Laboratory, Chicago
23. Lash T (1997) Fast flux test facility (FFTF) briefing book 1: summary. Pacific Northwest National Laboratory PNNL-11778
24. Oka Y (2000) Design concept of once-through cycle supercritical pressurized light water reactors. In: The first international symposium on supercritical water-cooled reactors, SCR-2000, Tokyo
25. Macdonald P (2000) Feasibility study of supercritical light water cooled fast reactor for actinide burning and electric power production. Idaho National Laboratory INEEL/EXT-02-01330
26. Kim TK, Wilson PH, Hu P, Jain R (2004) Feasibility and configuration of a mixed spectrum supercritical water reactor. In: International topical meeting on the physics of fuel cycles and advanced nuclear systems (PHYSOR-2004), Chicago
27. Kim TK, Taiwo TA, Yang WS, Hill RN, Assessment of deep burnup concept based on graphite moderated gas-cooled thermal reactor. In: International topical meeting on the physics of fuel cycles and advanced nuclear systems (PHYSOR-2006), Vancouver
28. Energy Multiplier Module, <http://www.ga.com/energy-multiplier-module>
29. Transatomic Power Reactor, <http://www.transatomicpower.com>

### Book and Reviews

- Bouchard JB (2008) Generation IV advanced nuclear energy systems. Nucl Plant J 26(5):2–4
- Kim WJ et al (2006) Supercritical carbon dioxide Brayton power conversion cycle design for optimized battery-

- type integral reactor system. In: International congress on advances in nuclear power plants, Reno
- MacDonald PE et al (2003) NGNP preliminary point design – results of initial neutronics and thermal-hydraulic assessment. INEEL/EXT-03-00870 Rev. 1. Idaho National Engineering and Environmental Laboratory, Sept 2003
- Sienicki JJ et al (2006) Status report on small secure transportable autonomous reactor (SSTAR)/lead-cooled fast reactor (LFR) and supporting research and development. Argonne National Laboratory ANL-GenIV-089
- Schultz RR (2008) Next generation nuclear plant methods research and development technical program plan. Idaho National Laboratory INL/EXT-06-11804
- The US Generation IV Implementation Strategy (2003) US Department of Energy office of Nuclear Energy, Science and Technology
- The US Generation IV Fast Reactor Strategy (2006) US Department of Energy office of Nuclear Energy



## Introduction

### Small Modular Reactors

Nicholas Tsoufianidis  
University of Nevada-Reno, Reno, NV, USA

### Article Outline

Glossary  
Introduction  
SMR Designs  
Closing Remarks  
Bibliography

### Glossary

**Brayton cycle** Thermodynamic cycle used for the generation of electricity in which a heated gas is driving the electric turbogenerator  
**BWR** Boiling water reactor  
**Eutectic** A mixture of two metals in liquid state (e.g., Pb-Be)  
**HPM** Hyperion Power Module, a SMR designed by the GEN-IV Energy, a privately owned company  
**IMSR** Integral Molten Salt Reactor, a SMR designed by Terrestrial Energy, a Canadian company  
**LWR** Light water reactor  
**mPower** A SMR designed by B&W  
**NuScale** SMR designed by the NuScale Power company  
**PRISM** Power Reactor Innovative Small Module, a SMR designed by GE Hitachi  
**PWR** Pressurized water reactor  
**SMR** Small modular reactor  
**Super-Safe, Small, and Simple (4S)** SMR designed by Toshiba and the Central Research Institute of Electric Power Industry of Japan  
**TWR** Traveling wave reactor, a SMR designed by the TerraPower company

A small modular reactor (SMR) is one with electrical output of 300 MWe or less (research reactors are not considered SMR and are not discussed here). The word “modular” refers to the fact that a power plant may have many SMRs on one site, i.e., the power plant may consist of many modules. For example, if one SMR (one module) produces 150 MWe and the plant consists of ten SMRs, the total electric output of that power plant is 1500 MWe.

SMR designs are pursued by many companies in the USA and in other countries. Their advertised advantages are:

1. Because of the small size, the capital cost of a single SMR is much smaller than that of a large reactor with a power output of 1000 MWe or more.
2. The components of an SMR may be manufactured in a factory assembly line; then, they will be transported to the site and be assembled, thus reducing construction time. In some designs, the SMR comes to the site as a complete package ready for operation.
3. Because the power is relatively low (thermal power about 1000 MWth or less), passive safety features, for heat removal, may be easily implemented.
4. Some SMRs are designed to undergo no refueling during their 30-year designed operational life. Thus, the utility that operates such a reactor does not have to plan for refueling or used fuel storage. In addition, it is contemplated that the vendor will sign a contract with the obligation to remove the whole plant after its final shutdown. With such a contract, the utility company will not have to plan for decommissioning.
5. If the SMR is designed not to require refueling during its design lifetime, the possibility of clandestine removal of nuclear material is negligible, i.e., nonproliferation is improved, since the nuclear material will be in the core for the life of the plant.

6. Although not necessary, SMRs can be easily placed underground, thus minimizing the possibility of a terrorist attack either from the air or from the ground or damage from a commercial plane crash.
7. For small utility companies (there are many such companies in small or developing countries), an SMR may be considered for purchase and operation, whereas a large reactor (~1000 MWe or more) is impractical if it represents (a) a large fraction of the generating capacity of the company and (b) a large fraction of the company assets in a single plant.
8. Ideal to provide power in remote installations (Arctic, desert, etc.), be it military or civilian.

SMRs have been operating for many years, albeit not quite in the open market. They power nuclear navy ships and other vessels (e.g., icebreakers).

The topic of SMRs has two unique characteristics. One, it is a “work in progress.” Almost every week there is a news item about a change in design, support by industry and/or government, or new designs. No SMR has been built yet; all the SMRs discussed in this entry are “paper designs”; as a result, some information, e.g., reliable cost per megawatt electrical output, does not exist. Second, related to the first, refereed articles to SMRs are almost nonexistent. As a result, the text for this entry is based on information

provided by the companies which design such reactors and on information found in the Internet. Despite this handicap (the lack of refereed literature), the information in this entry provides a comprehensive and up-to-date picture of the status of SMR efforts. Seven designs are discussed in some detail. The main data for these designs are shown in Table 1.

## SMR Designs

At this time (2016), there are many SMR designs that have been put forward. Clearly, not all of them will survive the forces of the marketplace. What follows is a brief description of the most promising designs.


### Hyperion Power Module (HPM)/GEN-IV Module

GEN-IV Energy, a privately held company, previously known as Hyperion Power Generation is designing an SMR, based on a Los Alamos National Laboratory project. Each module will produce ~25 MWe (~70 MWth) or can be used for heat generation (for industrial uses) or desalination. The company claims that each module will be “inexpensive, inherently safe, and proliferation resistant” (Fig. 1).

The reactor will be a sealed vessel about 1.5 m in diameter, 2.5 m high, weighing about 50 t. It

**Small Modular Reactors, Table 1** Main features of SMR designs

Name	Company	Type of reactor	Power per module (MWe)	Refueling frequency	Fuel	Enrichment	Coolant
1. HPM/GEN-IV	GEN-IV Energy	Fast reactor	25	10 y	UN	<20%	Pb-Bi
2. mPower	B&W	PWR	180	4 y	UO <sub>2</sub>	Up to 5%	H <sub>2</sub> O
3. NuScale	NuScale Power	PWR	50	2 y	UO <sub>2</sub>	Up to 5%	H <sub>2</sub> O
4. 4S	Toshiba	Fast reactor	10 and 50	30 y	U-Zr	Up to 5%	Na
5. PRISM	GE Hitachi	Fast reactor	311	1.5–2 y	U-Pu-Zr	18% Pu-10% Zr	Na
6. TWR	TerraPower	Fast reactor	600	50 y	Depleted U	N/A	Na
7. IMSR	Terrestrial Energy	Molten salt	25 and 300	7 y	U or Th	Up to 5%	Molten salt

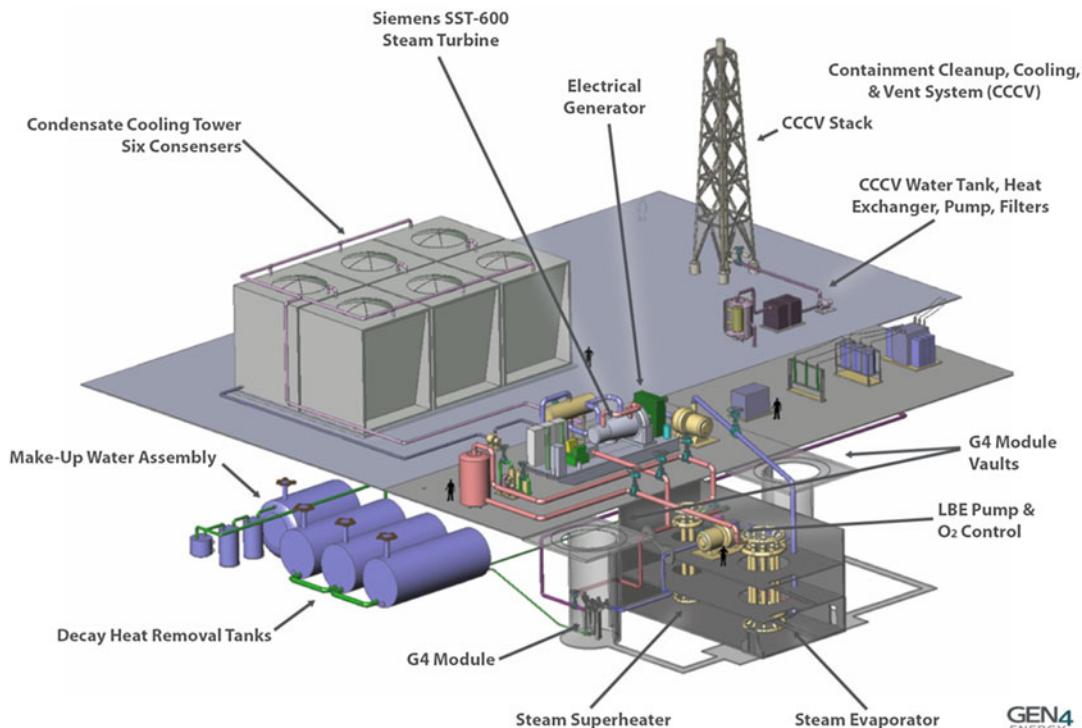**Conceptual Drawing of Gen4 Module (G4M)-based 25MWe Electric Power Plant**


**Small Modular Reactors, Fig. 1** A diagram of the GEN-IV module

will be transported to the site by truck, train, or barge, will be set up underground, and will be ready to operate quickly. After the HPM is placed on the site and starts operating, it will deliver the 25 MWe continuously for the duration of the projected 10-year life of its fuel, years without the need for operational personnel. At the end of 10 years, the reactor will be returned to the manufacturer for refueling or replacement with a new one.

The reactor fuel will be uranium nitride, enriched to less than 20% in  $^{235}\text{U}$ , cooled with a Pb-Bi eutectic mixture. The uranium nitride fuel has, in general, physical and neurotic behavior similar to the  $\text{UO}_2$  fuel used in today's LWRs. But, it also has two properties that are better than  $\text{UO}_2$ : (1) It has higher thermal conductivity, as a result of which it shows better performance than  $\text{UO}_2$  at higher temperatures, greater than 250–300 °C (482–572 °F), typical for LWRs. Higher temperatures result in better thermal efficiency. (2) The uranium nitride fuel has a

relatively large negative Doppler temperature coefficient of reactivity which results in better reactor control. Of course, these claims must be proven; no reactor has been built in the USA with such fuel and coolant. The only “experience” we have comes from Russian submarines that used this technology successfully, as far as we know.

The thermal hydraulics of the Pb-Bi-cooled reactor are dictated by the high heat capacity and unique properties of this eutectic coolant. This coolant has several extremely beneficial properties for a reactor:

- It is opaque to photons but transparent to neutrons.
- It melts easily at a relatively low temperature but does not boil until an extremely high temperature is reached.
- It does not greatly expand or contract when exposed to heat or cold.
- It has a high heat capacity.
- It will naturally circulate through the reactor core without pumps needed and will keep the core at

the desired temperature during normal operation and will provide the means of residual decay heat removal, after shutdown.

Finally, it will solidify, once decay heat has dropped to a low level.

For power generation, two potential approaches are considered: one using superheated steam to drive a Rankine cycle and the other using supercritical CO<sub>2</sub> to drive a Brayton cycle.

### The mPower Reactor

The mPower reactor was designed by B&W and is known as the BWXT mPower™ reactor. The mPower is an integral pressurized light water reactor (Fig. 2). The word “integral” is attributed to the placement of the reactor core and the steam generator in a single reactor vessel located underground (the used nuclear fuel (UNF) will also be stored underground). The reactor will be of a modular design. Each module will have a diameter of 4.5 m and a height of 23 m. The reactor core itself will have a size of 2 by 2 m. Each module will produce ~500 MW of thermal power, about 180 MWe.

The mPower reactor will use standard UO<sub>2</sub> fuel enriched up to about 5% in <sup>235</sup>U (fuel similar to that used by PWRs). It is designed to have a 4-year refueling cycle. At refueling time, the entire core will be removed and will be replaced with a new one charged with fresh fuel. This method of refueling (different from PWRs which refuel one

third of the core at a time) offers the advantage of not having to handle the used fuel rods at all. The reactor is designed to have an expected lifetime of 60 years.


The mPower reactor, although it is a PWR, incorporates many features of an ABWR. The two most important such features are (1) the water circulating through the core is purified (no HBO<sub>3</sub>) and (2) coolant recirculation pumps are located inside the reactor vessel. The primary coolant will stay in the liquid phase during normal operation (same as in a PWR). The control rods will be inserted from the top (as in a PWR), but, unlike PWRs, they will be completely enclosed in the reactor vessel.

The steam generator will be similar to the once-through steam generators (OTSGs) used in existing B&W plants (i.e., Davis Besse). Each module will have an air-cooled condenser resulting in a thermal efficiency of 31%. The reactor is designed to produce superheated steam, thus not needing steam separators and dryers before the high-pressure steam hits the turbine.

The main passive safety feature of the mPower is prevention of loss of coolant accident (LOCA). This is achieved by having placed the entire primary coolant loop inside the pressure vessel. If secondary cooling is lost, thus removing core heat removal capability, there are supplies of water above and within the containment that can cool the vessel with gravity-driven flow, i.e., no electricity is required for this feature to operate.

### Small Modular Reactors,

**Fig. 2** A diagram of the mPower integral PWR SMR (The aim of the figures is not to show an exact design but just to give the reader a general idea of the reactor design.)

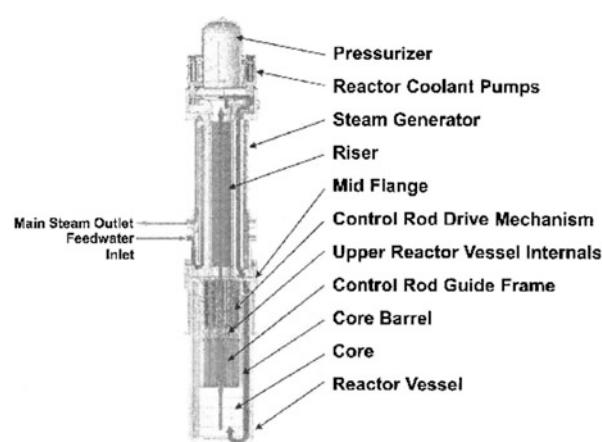

To summarize, the mPower reactor designers stress (a) its modular nature (up to 10 modules may be deployed in one site for a total capacity of 1800 MWe), (b) the passive safety features, and (c) the minimum environmental and target footprint since the whole plant will be underground.

### The NuScale Reactor


The NuScale Power company is the designer of a small pressurized water reactor called the NuScale Power Module (to be designated as NuScale from here on), which will operate with multiple identical and independent modules in a scalable plant. The design originated from a 2000–2003 research project involving Oregon State University, Idaho National Engineering and Environmental Laboratory, and Nexant. In 2007, NuScale Power was formed to complete and commercialize the design (Fig. 3).

According to the designers, each NuScale module will produce a gross output power of 50 MWe. The module will have an integrated nuclear reactor pressure vessel, which will contain the nuclear core, the two helical coil steam generators, and a pressurizer. The vessel will be approximately 18.0 m long with a diameter of 3 m. The nuclear core will consist of an array of LWR-type fuel assemblies and control rod clusters at standard enrichments (less than 5%). The entire nuclear steam supply system (NSSS) will be enclosed in a steel containment that is 23 m long with a diameter of 4.5 m. During normal operations, the containment vessel will be fully immersed in water contained in a large steel-lined concrete pool located below grade level. According to the designers, the entire NuScale module can be prefabricated domestically and shipped to the site for installation, thus reducing on-site construction time.

The reactor core will be cooled by natural circulation of the primary coolant without the use of pumps. Quoting the designers:

Water is heated in the nuclear core to produce a low density fluid that travels upward through the hot leg riser. The helical coils wrapped around the outside of the riser provide a heat sink that cools the water, causing its density to increase. The density difference acting over an elevation difference results in a buoyancy force that drives the fluid flow around the loop. The cooler water with higher density is pulled by gravity back down to the bottom of the reactor where it is again drawn over the core. The water circulating in the core is kept separate from the water in the steam generator system to prevent radioactive contamination of the secondary loop (as in all PWRs). The Rankine cycle is used for the generation of electricity. Natural circulation operation provides a significant advantage in that it eliminates pumps, pipes, and valves and hence the maintenance and potential failures associated with those components. [Reference?]

The passive nature of this method of cooling is important because it does not require electric power to work. The water pool in which the containment vessel is submerged is large enough to provide at least 30 days of cooling without the need of additional makeup water. Beyond 30 days, the decay heat in the core is sufficiently low that natural phenomena (natural air

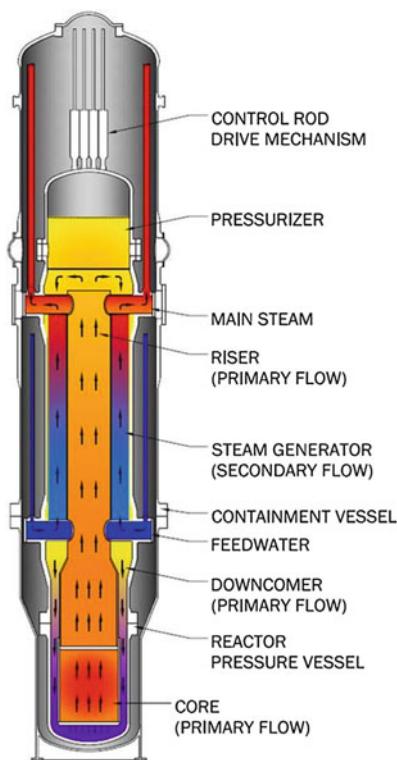

**Small Modular Reactors, Fig. 3** Diagram of NuScale Power Module showing integral reactor vessel surrounded by steel containment vessel. Also shown are primary and secondary coolant flow paths

convection and thermal radiation) will provide adequate heat transfer and removal indefinitely.


The reference NuScale plant that is being prepared for license review by the US Nuclear Regulatory Commission consists of 12 modules and will yield a total gross electric output of 600 MWe (Fig. 4). Each module is connected to a separate turbine-generator system and operates independently of other modules. This allows individual modules to be taken off-line for refueling while the remaining modules continue to produce power.

### The Super-Safe, Small, and Simple (4S) Reactor


The Super-Safe, Small, and Simple (4S) reactor is being developed by Toshiba and the Central Research Institute of Electric Power Industry (CRIEPI) in Japan (Fig. 5). Two 4S versions are under design: one rated at 30 MWth (10 MWe) power and the other at 135 MWth (50 MWe). The 4S will use metallic fuel, U-Zr enriched to less than 20% or U-Pu-Zr alloy with 24% Pu for the 30 MWth version or 11.5% Pu for the 135 MWth version. The size of the core will be 0.68 m in diameter and 2 m high, for the 30 MWth size, and

1.2 m in diameter and 2.5 m high, for the 135 MWth size. The fuel will be designed to last for 30 years with an expected burnup of 34 GWd/t. Reactivity control will be achieved with the help of an annular reflector surrounding the core. Fast neutrons escaping from the core hit the reflector and turn back to the core thus increasing reactivity. The reflector will be moving upward at the rate of about 1 mm/week. After 14 years, a neutron absorber at the center of the core is removed, and the reflector repeats its upward motion for 16 more years. If power is lost, the reflector falls to the bottom of the reactor vessel, the effect of neutron reflection is lost, and the reactor reaches a subcritical stage and shuts down. A neutron-absorbing rod may also drop into the core, as an additional safety device. External air circulation is adequate for core heat removal. After 30 years of operation, the fuel will be left to cool for a year before it is shipped for storage and/or disposal. Having no refueling operations, proliferation concerns are, practically, nonexistent.

The 4S will be, essentially, a pool-type fast reactor, cooled with liquid sodium circulated with the help of electromagnetic (EM) pumps.

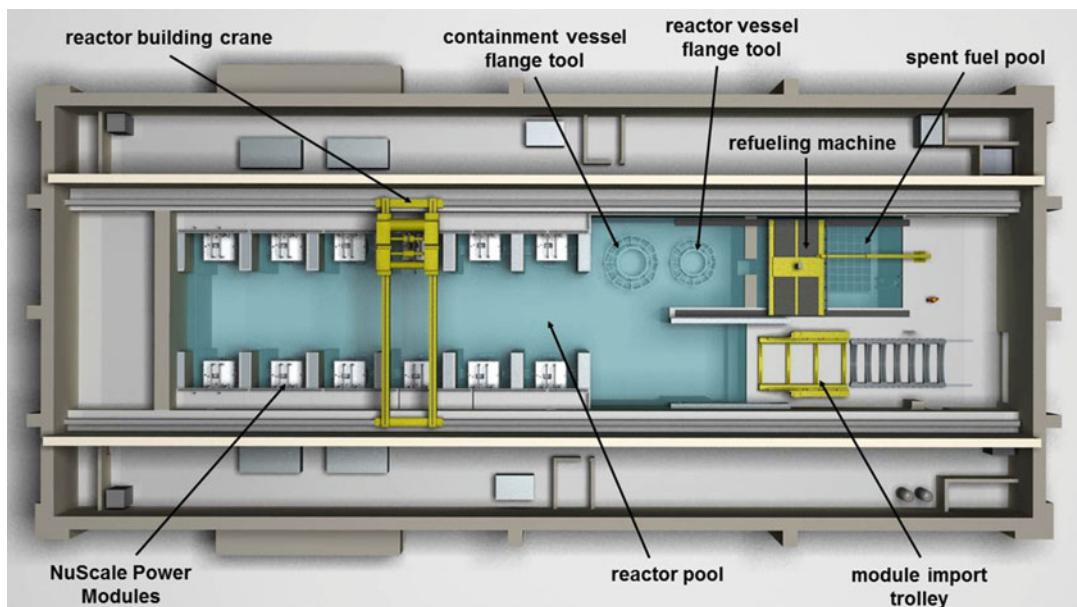

**Small Modular Reactors, Fig. 4** Top-down view of NuScale reactor building for a 12-module plant

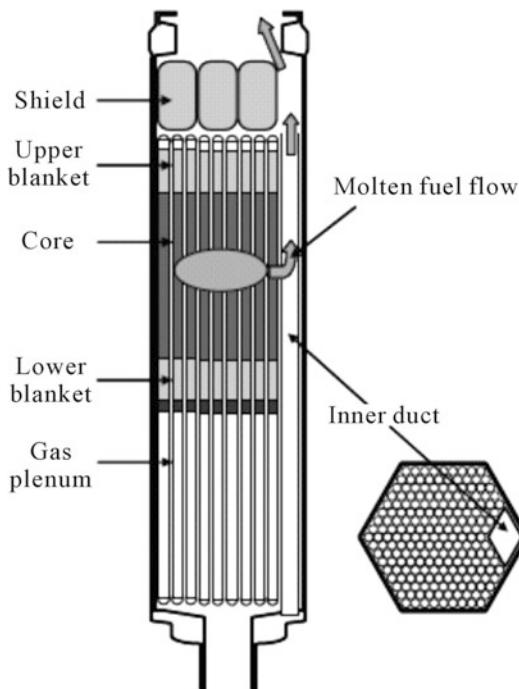

**Small Modular Reactors, Fig. 5** A diagram of the 4S reactor

Heat generated in the core will go through an intermediate heat exchanger before that heat is transferred to a steam generator to produce steam that will drive a turbine. The whole reactor building will be located underground, thus providing protection against airplane impact.

Passive safety features include redundant heat removal systems that rely on natural circulation and a metallic fuel with a negative reactivity coefficient. Experience with fuels tested in the EBR-II and lessons learned have been incorporated into the design of the 4S fuel.

The design of the 4S aimed at achieving the following targets:

1. Minimization of fuel cost and operation and maintenance (O&M) cost
2. Enhanced proliferation resistance since no refueling takes place during the 30-year operation of the reactor
3. Transparent effective safety features, such as all reactivity temperature and void reactivity of core are zero or negative, that will result in increased public acceptance

4. Minimization of construction costs
5. Underground placement of most of the plant, thus minimizing the footprint above ground and reducing its vulnerability as a target

### The PRISM Reactor

**The PRISM (Power Reactor Innovative Small Module, also indicated as S-PRISM)** is a nuclear power plant designed by GE Hitachi Nuclear Energy (GEH). It is a sodium-cooled fast reactor based on the EBR-II design, consisting of modules each having a thermal power output of 840 MW (311 MWe). With this size, factory fabrication is possible, thus decreasing construction cost. The reactor vessel will be located below ground level inside a reactor silo. Two such modules will make a power plant on a single site generate a total of 622 MWe.

The PRISM is designed with the objective of closing the nuclear fuel cycle; it will be able to consume used nuclear fuel (UNF) and Pu (becoming available from the dismantlement of nuclear weapons or other sources). It can be tailored to specific missions ranging from plutonium disposition and actinide burning to the maximization of fuel burnup. GEH estimates that deployment of PRISM could reduce the volume of the UNF by 96% and supply 10% of the US electricity. The fuel will be metallic U, Pu, and Zr alloy (not  $\text{UO}_2$  used in LWRs).


The PRISM is designed to operate at temperatures between 640 and 905 °F. Since sodium becomes a liquid at 208 °F and boils at 1621 °F, it will make an excellent coolant.

As shown in Fig. 6, the primary liquid sodium system is located within the containment vessel. Four electromagnetic (EM) pumps, suspended from the top of the reactor vessel and having no moving parts, help circulate the liquid sodium with just magnets in the pump. The EM pumps push the sodium downward to the core inlet plenum, where the sodium has its lowest temperature. As the sodium moves upward through the core, it picks up the heat generated by fission and its temperature increases.


Figure 7 shows that PRISM will employ two sodium and one steam loop. The primary loop (in which the sodium going through the core

**Small Modular Reactors,**

**Fig. 6** The PRISM reactor module (The aim of the figures is not to show an exact design but just to give the reader a general idea of the reactor design.)

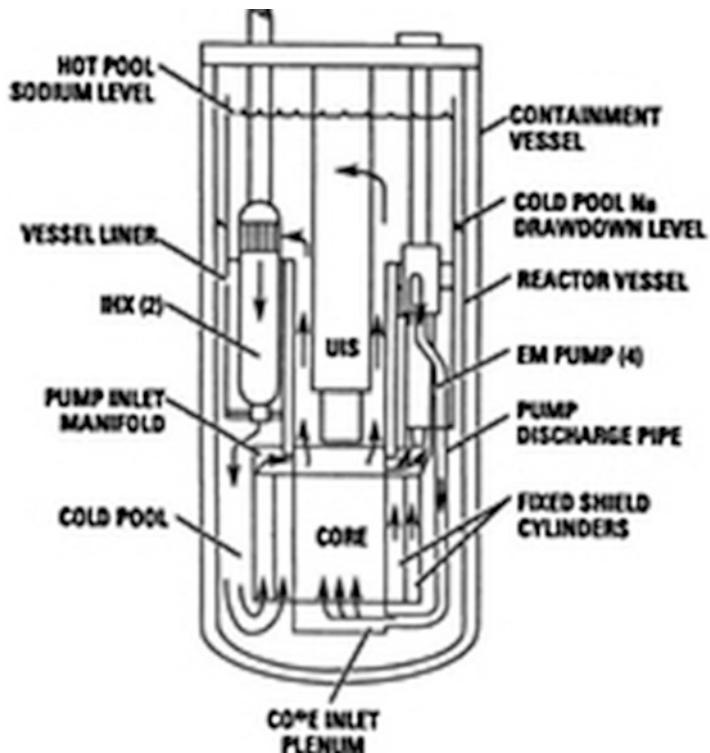**Small Modular Reactors,**

**Fig. 7** The PRISM coolant loops (The aim of the figures is not to show an exact design but just to give the reader a general idea of the reactor design.)

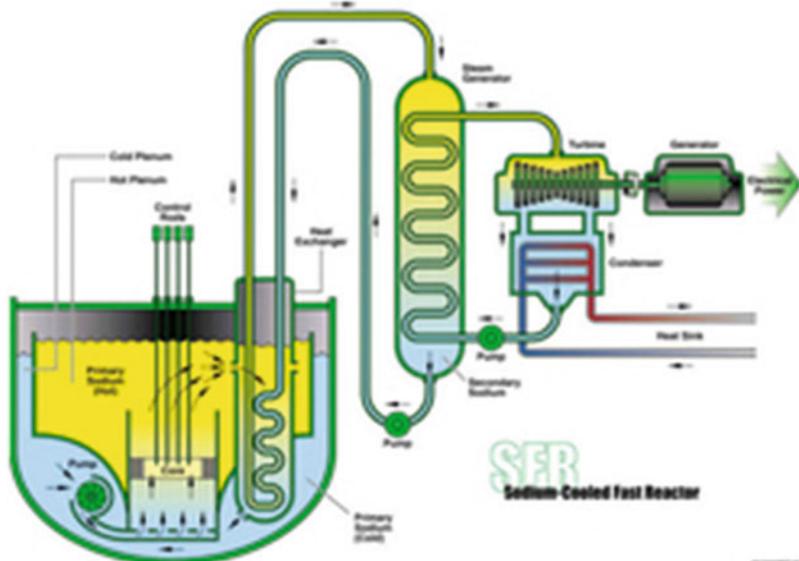

circulates) transfers its heat to an intermediate heat exchanger (IHX), which, in turn, transfers the heat through a steam generator to the steam loop that runs the turbine.

The primary sodium loop is radioactive; the other two loops are clean. The main reason for the usage of IHX is to contain the radioactivity in case there is a leak from the primary loop to the


IHX. In the case of such a leak, the pumps of the IHX are turned off, thus stopping the flow through the steam generator. Thus, any radioactivity will be contained within the primary and IHX loops and will not reach the steam environment.

PRISM incorporates passive safety features (some of them tested in EBR-II). The pool of sodium provides a substantial thermal sink. In addition, PRISM will have a reactor vessel air cooling system (RVACS) that, acting as a passive system, will help remove the core decay heat. Heat is transferred from the reactor vessel to the containment vessel by thermal radiation and then to the atmosphere by natural convection. An auxiliary cooling system (ACS), which consists of natural circulation of air past the shell side of the steam generator, provides redundant decay heat removal. If the temperature rises significantly, the reactor power will decrease automatically, based on the physics of the system: Doppler effect (negative temperature reactivity coefficient), axial fuel expansion, radial expansion, sodium density, sodium void coefficient, and reactor vessel expansion. All these factors comprise negative reactivity feedback that will maintain the state of the core in a stable, safe level; no operator action and no electricity will be needed for this passive safety system to operate.

To shut down the reactor quickly, control rods will be inserted in the core, designed to shut it down in one fifth of a second. If the control rods cannot be inserted, an ultimate shutdown system (USS) will be manually actuated. The USS will drop boron carbide ( $B_4C$ ) balls into the core, thus shutting down the fission process since the neutrons will be absorbed by the boron.

### The Traveling Wave Reactor (TWR)

The TWR, designed by TerraPower, is probably the most innovative SMR reactor design (Figs. 8 and 9). The basic concept is this: A thin layer of uranium enriched to  $^{235}U$  will be loaded into the core to start the fission chain reaction and make the reactor critical at the beginning of operation. The rest of the fuel will be depleted uranium (i.e.,  $^{238}U$ , essentially). Neutrons absorbed by  $^{238}U$  will breed  $^{239}Pu$  (an alternative fuel is  $^{233}U$  as the fissile isotope and  $^{232}Th$  as the fertile one). Thus,

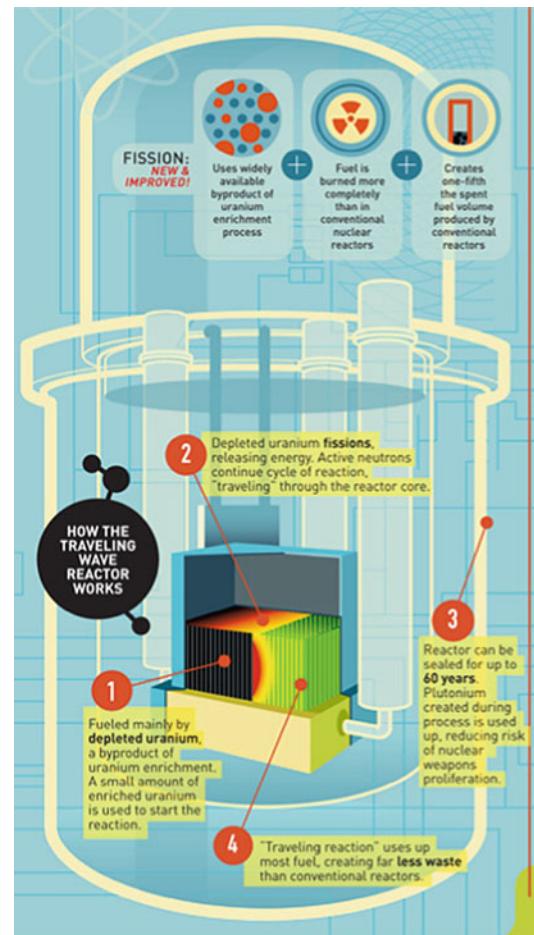


**Small Modular Reactors, Fig. 8** The traveling wave reactor (TWR)

the TWR will keep converting fertile nuclear fuel into fissile. The fission reaction and the breeding of new fuel will be moving through the core like a wave. The designers claim that this “wave” will traverse the core in about 50–100 years, without the need to stop it, as long as there is an adequate amount of fertile fuel in the core. Thus, in contrast to breeder reactors, the TWR will use the nuclear fuel efficiently without the need for enrichment or reprocessing.

The TWR is envisioned as a pool-type reactor cooled with liquid sodium. After operating for some time, the TWR core will consist of four fuel zones: (1) depleted zone consisting of fission products and unused fuel; (2) fission zone, where the fission takes place; (3) breeding zone, where

**Small Modular Reactors,**

**Fig. 9** The TWR main features

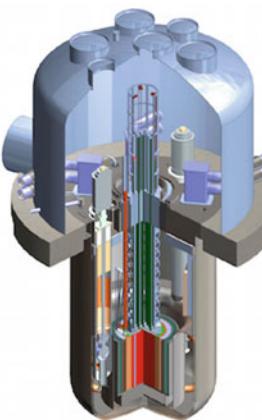

Turns depleted uranium into electricity, using a simple fuel cycle without requiring separations.

<b>SIZE</b>	600 MWe (Prototype Plant) 1150 MWe (Commercial Plant)
<b>TEMPERATURE</b>	510°C
<b>PRESSURE</b>	Low (Atmospheric)
<b>PRIMARY FUEL</b>	Depleted Uranium
<b>COOLANT</b>	Sodium
<b>ENERGY CONVERSION</b>	Steam (Rankine Cycle)
<b>WASTE PROCESSING</b>	Not Required

fertile materials are converted into fissile by neutron absorption; and (4) fertile material (to become fissile when the “wave” reaches this zone). The energy generated by fission will be removed by the molten sodium and transferred to a steam cycle setup to produce electricity.

The burn-breed wave, according to TerraPower, does not move from one end of the core to the other. Instead, it moves from the center outward. To optimize the fuel usage over time, continuous reshuffling of the fuel rods is envisioned. The movement of the fuel rods will be done with robotic devices remotely but without opening the reactor vessel. A TWR will require, TerraPower claims, less fuel per kilowatt of electricity generated than the current LWRs due to its higher fuel burnup, energy density, and thermal efficiency. Another advantage of this type of reactor is its increased proliferation resistance since there are no reprocessing and separation of fissile isotopes anywhere in its fuel cycle.

To summarize, TWR will have two main advantages: (1) the use of depleted uranium as fuel, it is estimated that there is 700,000 t of depleted uranium leftover from enrichment operations, thus no need to mine additional uranium, and (2) proliferation resistance due to non-reprocessing/non-separation of its used fuel.


TerraPower announced in 2014 that it plans to build a 600 MWe plant, by 2022, followed by an 1150 MWe plant later. Based on this projected power, the TWR does not qualify as a SMR. But,

it is included in this entry because it started as a SMR and also because of its innovative design principles.

### The Integral Molten Salt Reactor (IMSR)

The Integral Molten Salt Reactor (IMSR) is a SMR designed by the Canadian company Terrestrial Energy. The fuel, mixed with a molten fluoride or chloride salt, will circulate through the core and serve as both the fuel and the coolant. Under such an arrangement, the reactor cannot lose coolant and cannot melt down. Uranium will be the nuclear material used as fuel, although Th and transuramics (TRUs) may also fuel it. The IMSR will be a burner reactor not a breeder. A diagram is shown in Fig. 10.

The operation of an IMSR will be based on a 7-year once-through fuel cycle with an annual supply of a small amount of low-enriched uranium (LEU) required. At the end of the 7-year run, the whole core unit is removed and a new one is installed. The “IMSR core unit,” removed after a 7-year run, will contain all key components, permanently sealed for the duration of its lifetime. The TRU that is accumulated in the used core can be recycled in the next batch and the remaining U can be recovered; thus, what remains is a relatively small amount of radioactive wastes that must be stored for about 300 years. Terrestrial Energy claims that with such a procedure, “less radiotoxicity exists in the world than before – a claim unequal by any other reactor.”

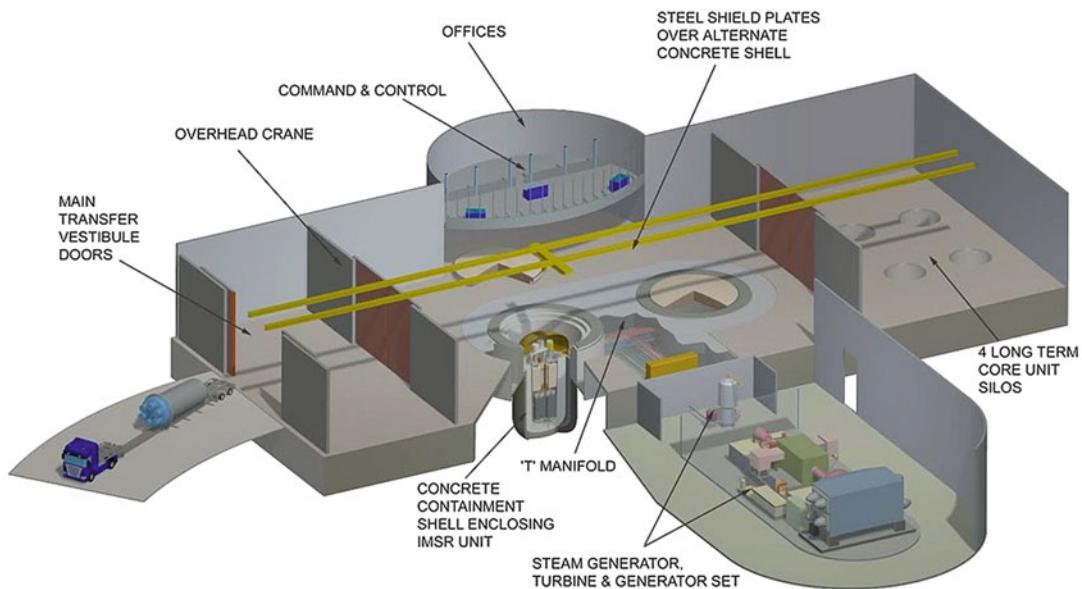

1-8-14

**Small Modular Reactors, Fig. 10** A schematic of the IMSR reactor

The early molten salt reactor program, 1905–1970s at ORNL, had two objectives: one, to use Th-based fuels and, two, to design a reactor that is a breeder. Terrestrial Energy abandoned these objectives for two reasons.

One is the fact that Th is not a licensed fuel; therefore, a new regulatory process would be required resulting in delays and additional costs. Also, using Th requires an amount of  $^{235}\text{U}$  to get started, leading to more regulatory problems and proliferation concerns. Instead, the IMSR will use low-enriched uranium (LEU) which is a fuel easily available at a reasonable price and with established regulatory history. Of course, it will now be in liquid form, but that difference will only reduce fabrication problems.

Two, designing a breeder introduces substantial technological and regulatory hurdles without additional new benefits. A breeder is needed if fuel supplies are scarce in which case new fuel must be bred. For U, this is not the case. There is plenty of U at reasonable prices.


Terrestrial Energy points out another advantage of the IMSR that is the result of using liquid fuel. Using solid fuel, the fission products are trapped inside the fuel; many are neutron poisons

and create one of the reasons for, relatively, early refueling and, relatively, inefficient burning of the U fuel. Also, Pu is produced and trapped inside the used fuel. With liquid fuel, many fission products may be continuously removed and in situ. Pu is continuously burned with the net result that at the end of the 7 years, the used IMSR core contains much smaller amount of radioactive fission products and Pu than in equivalent used fuel of an LWR. There are design ideas under development to incorporate reprocessing of the liquid fuel on-site, leading to almost zero Pu in the final waste. Terrestrial Energy claims that all these processes make the IMSR much more efficient than other comparable SMRs, as they try to show in Fig. 11.

One should note the claim shown in Fig. 11 of 650 MWth/300 MWe which means a thermal efficiency of 46%, almost 50%. The company claims that such high efficiency may be achieved because of the ability of the IMSR to operate at, relatively, high temperature.

Terrestrial Energy is claiming that “economy of scale” is not important for their designs of modular IMSRs with power 30–300 MWe. Many modules can be set up in a multi-unit

**Small Modular Reactors,**  
**Fig. 11** Comparison of  
 IMSR with other SMRs.  
 SmAHTR stands for Small  
 Modular Advanced High  
 Temperature Reactor

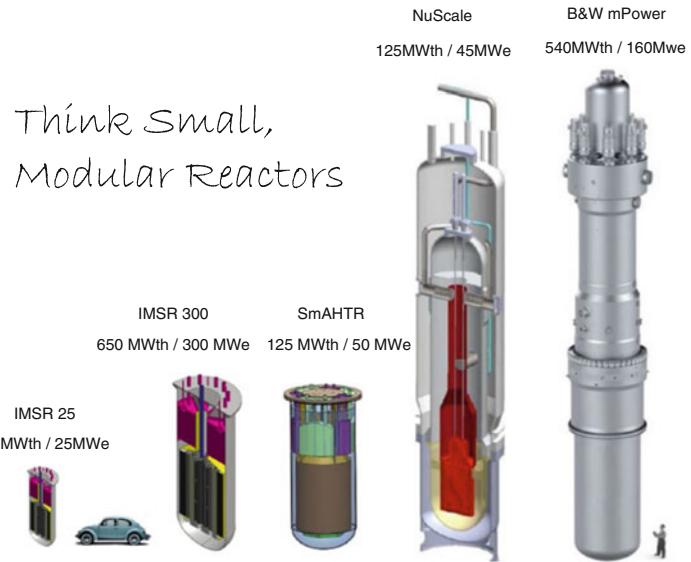

plant to produce more electricity. It is relatively easy to build an IMSR because its design requires materials that are readily available and can be assembled with methods well established in modern manufacturing. An IMSR module can be shipped to the plant site with a flatbed truck or rail. Thus, construction and building costs are reduced.

## Closing Remarks

A short description of all the small modular reactor (SMR) designs under consideration by various companies in the USA and abroad was presented in this entry. As mentioned already, the SMR business is a work in progress: None of the designs presented have been built yet. But, I predict that some of these designs will be built. I base this prediction on the real advantages they offer, the most important of which are:

- Small capital cost (compared to that of a 1000–1400 MWe plant)
- Possibility of component factory manufacturing (thus reducing cost and duration of construction)
- Ideal for specific needs and circumstances (providing electricity for remote areas, military bases, and operation by small electric utilities)

As of this writing (Spring 2016), all the designs mentioned here are still under consideration. However, no firm construction commitment (a signed construction contract) exists yet.

## Bibliography

- Small modular reactors, special issue of Nuclear Technology, May 2012
- Ingersoll D (2016) Small modular reactors: nuclear power fad or future? Woodhead Publishing, Cambridge



---

## Isotope Separation Methods for Nuclear Fuel

Shuichi Hasegawa

Department of Systems Innovation, School of Engineering, The University of Tokyo, Tokyo, Japan

### Article Outline

Glossary

Definition of the Subject

Introduction

Principles of the Separation Processes

Cascade Theory

Laser Isotope Separation (LIS)

Future Directions

Bibliography

### Definition of the Subject

Isotope separation, in general, means enrichment of a chemical element to one of its isotopes (e.g.,  $^{10}\text{B}$  in B;  $^6\text{Li}$  in Li,  $^{157}\text{Gd}$ , etc). In the case of uranium, isotope separation refers to the enrichment in the isotope  $^{235}\text{U}$ , which is only 0.711% of natural uranium; today's nuclear power plants require fuel enriched to 3–5% in  $^{235}\text{U}$ . Uranium enrichment is the subject of this article.

Efficiencies of sorting out different isotopes of the element (separation factor) are usually very low. For practical enrichment plants, a gaseous diffusion process has been successfully employed to obtain enriched uranium. A gas centrifugation process is the preferred method of enrichment today due to reduced energy consumption. A new process using lasers, which can have a high efficiency of separation, is under development and has the potential to replace the current enrichment methods.

### Glossary

**Isotope** Nuclei of a chemical element which have the same number of protons but different number of neutrons. Some isotopes are stable; some are radioactive.

**Mean free path** An average distance of a moving gas molecule between its collisions.

**Molecular flow** Low-pressure phenomenon when the mean free path of a gas molecule is about the same as the channel diameter; then a molecule migrates along the channel without interference from other molecules present.

**Separation capability** A measure of separative work by a cascade per unit time.

**Separation factor** A ratio of a mole fraction of an isotope of interest to that of non-interest in an enriched flow divided by that in a depleted flow from a separation unit. The factor should be larger than unity for the unit to result in isotopic enrichment.

### Introduction

The fuel used today by commercial nuclear power plants is the fissile isotope  $^{235}\text{U}$ . Unfortunately,  $^{235}\text{U}$  is only 0.711% of natural uranium, the rest of which is, essentially,  $^{238}\text{U}$ . Light water reactors (LWR) operating dominantly all over the world require isotope enrichment processes because the isotopic ratio of  $^{235}\text{U}$  for their fuels should be 3–5%. The processes used to elevate the  $^{235}\text{U}$  content from 0.711% to 3–5% are called isotope separation or enrichment processes. Table 1 shows the current trends of isotope separation capabilities of the world. The main countries performing the process are Russia, France, US, and URENCO (Germany, Netherland, and UK). A number of separation processes have been studied so far, but the principles of the current isotope separation processes mainly use gaseous diffusion or gas centrifugation. The diffusion process was

**Isotope Separation Methods for Nuclear Fuel,**  
**Table 1** World Enrichment capacity (thousand SWU/year) [1]

Country	2010	2015	2020
France (Areva)	8,500 <sup>a</sup>	7,000	7,500
Germany, Netherlands, UK (Urenco)	12,800	12,200	12,300
Japan (JNFL)	150	750	1,500
USA (USEC)	11,300 <sup>a</sup>	3,800	3,800
USA (Urenco)	200	5,800	5,900
USA (Areva)	0	>1,000	3,300
USA (Global Laser Enrichment)	0	2,000	3,500
Russia (Tenex)	23,000	33,000	30–35,000
China (CNNC)	1,300	3,000	6,000–8,000
Pakistan, Brazil, Iran	100	300	300
Total approx.	57,350	69,000	74–81,000
Requirements (WNA reference scenario)	48,890	55,400	66,535

Source: WNA Market Report 2009; WNA Fuel Cycle: Enrichment plenary session WNFC April 2011


<sup>a</sup>Diffusion

commercialized first but the centrifugation is taking over because of less energy consumption. This article following mainly [2, 3] describes the principles of the two processes and cascade theory, which explains why it is required to repeat the process many times (using successive stages/cascades) to obtain a certain desired enrichment fraction such as 3–5% because a single step provides only a small incremental enrichment. The new enrichment technology using lasers will be described at the end.

## Principles of the Separation Processes

### Gaseous Diffusion

Figure 1 shows the schematic diagram of the gaseous diffusion process. Consider a chamber divided into two compartments by a porous membrane. When dilute gases are introduced into the bottom compartment of the chamber, the pores of the membrane (membrane) make dependency of the transmission of the gases on their molecular masses.

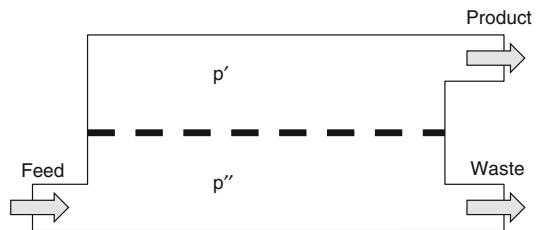

**Isotope Separation Methods for Nuclear Fuel,**  
**Fig. 1** A single gaseous diffusion stage

If we have a mixture of two molecules in a gas with the same kinetic energy (kinetic energy is determined by  $kT$ ,  $k$  = Boltzmann constant;  $T$  = temperature in K;  $(1/2 mv^2 \sim kT)$ ), the lighter molecule is faster than the heavier one. Therefore, their frequencies of hitting the membrane is higher for the lighter than for the heavier molecule. However, the mass preference phenomena occur only when the mean free path of the gas molecule is longer than the diameter of the pores  $2r$  and the thickness of the membrane  $l$ . The mean free path,  $\lambda$  of the molecule can be written as [2]

$$\lambda = \frac{kT}{4\sqrt{2}\pi\sigma^2 p} \quad (1)$$

where  $k$  is the Boltzmann constant,  $T$  is the absolute temperature,  $\sigma$  is the radius of the molecule, and  $p$  is the gas pressure in the chamber. In this condition, a molecule cannot collide with others during the transmission through the membrane so that its dynamics can be considered as a single molecule process. This process is called molecular flow. The flux of the molecular flow through the flow path with circular cross section is derived by Knudsen as [3]

$$G_{mol} = \frac{8r\Delta p}{3l\sqrt{2\pi mRT}} \quad (2)$$

where  $G_{mol}$  is the molecular flow velocity,  $m$  is the molecular mass,  $R$  is the gas constant, and  $\Delta p = p'' - p'$  is the pressure difference between the bottom and top compartments of the chamber. Equation 2 shows that the flow velocity depends on the mass of the gas molecules so that the ratio of the molecules in the mixture transmitted to the

upper compartment of the chamber is changed compared with that of the feeding gas. The opposite condition where flows do not depend on the molecular mass is called viscous flow.

We will derive the ideal separation factor in the case of  $^{235}\text{UF}_6$  and  $^{238}\text{UF}_6$  [3], the gas molecules used for uranium enrichment. On the ideal condition where  $p''$  is very small and  $p'$  can be neglected compared with  $p''$ , when we have a binary mixture of gases which consist of  $^{235}\text{UF}_6$  (molecular mass:  $m_{235} = 349$ , mole fraction:  $x$ ) and  $^{238}\text{UF}_6$  (molecular mass:  $m_{238} = 352$ , mole fraction:  $1 - x$ ), the molecular flow velocities of  $^{235}\text{UF}_6$  and  $^{238}\text{UF}_6$  are

$$G_{235} = \frac{ap''x}{\sqrt{m_{235}}}, \quad G_{238} = \frac{ap''(1-x)}{\sqrt{m_{238}}} \quad (3)$$

where the constant  $a$  includes factors in Eq. 2. The ratio of the molecular flow of  $^{235}\text{UF}_6$  to the whole can be written as

$$\begin{aligned} s &= \frac{G_{235}}{G_{235} + G_{238}} = \frac{\frac{x}{\sqrt{m_{235}}}}{\frac{x}{\sqrt{m_{235}}} + \frac{1-x}{\sqrt{m_{238}}}} \\ &= \frac{\frac{x}{1-x}}{\frac{x}{1-x} + \sqrt{\frac{m_{238}}{m_{235}}}} \end{aligned} \quad (4)$$

Therefore, the ideal separation factor  $\alpha_0$  of the gaseous diffusion process can be derived as the separation factor of the molecular flow of the porous media

$$\alpha_0 = \frac{s}{\frac{1-s}{1-x}} = \sqrt{\frac{m_{238}}{m_{235}}} = \sqrt{\frac{352}{349}} = 1.00429 \quad (5)$$

The separation factor depends on the ratio of the molecular masses so that this method is more effective for the isotope separation of lighter elements. For heavier elements, a larger number of repeated processes is required to obtain sufficiently enriched products.

However, in reality, the real value of the separation factor is smaller than that given by Eq. 5

due to reverse molecular flow from the upper compartment to the bottom one and viscous flow not depending on the molecular mass; these two phenomena work in a direction negating the enrichment process. Furthermore operating conditions (porous media performance, working pressures, etc.) affect the value of the separation factor. The energy consumption to run the process is very high due to pressure controlling of the gases, small separation factors and so on (see discussion about Separative Work Unit). Because of the relatively high energy consumption, uranium enrichment by gaseous diffusion is on the way out and is replaced by the gas centrifugation method.

### Gas Centrifugation

The principle of gas centrifugation is based upon centrifugal forces that are created inside a rotating cylinder containing two different gas molecules, forces that depend on the molecular mass. Let's see how it works in detail [2]. When we have a mixture of two gas molecules in a rotating cylinder (centrifuge), pressure gradients develop with respect to the radial direction. The pressures can be written as

$$\frac{dp}{dr} = \omega^2 r \rho \quad (6)$$

where  $p$  is the pressure,  $r$  is the radial distance,  $\omega$  is the angular frequency of rotation, and  $\rho$  is the density of the gases. By substituting the equation of state  $\rho = pm/RT$  into the differential equation, we can derive the following equation,

$$\frac{dp}{p} = \frac{m\omega^2}{RT} r dr \quad (7)$$

When we integrate this differential equation from the radial distance  $r$  (pressure  $p_r$ ) to the inner radius of the cylinder  $a$  (pressure  $p_a$ ), we can obtain this expression,

$$\frac{p_r}{p_a} = \exp \left[ -\frac{1}{2} \frac{mv_a^2}{RT} \left\{ 1 - \left( \frac{r}{a} \right)^2 \right\} \right] \quad (8)$$

**Isotope Separation Methods for Nuclear Fuel, Table 2** The local separation factor of  $^{235}\text{UF}_6$  and  $^{238}\text{UF}_6$  at  $r/a$  with  $T = 300 \text{ K}$ ,  $v_a = 700 \text{ m/s}$

$r/a$	0	0.5	0.8	0.9	0.95	0.98	0.99	1.0
$\alpha$	1.343	1.247	1.112	1.058	1.029	1.012	1.006	1.0

where the speed of the outer circumference of the cylinder  $v_a = \omega a$ . This equation shows that the ratio of the pressure at radius  $r$  to that of radius  $a$  depends on the molecular mass of the gases.

If we have the gases which consist of  $^{235}\text{UF}_6$  (molecular mass:  $m_{235} = 349$ , mole fraction:  $x$ ) and  $^{238}\text{UF}_6$  (molecular mass:  $m_{238} = 352$ , mole fraction:  $1 - x$ ), their ratios of the partial pressures at the radius  $r$  to the radius  $a$  can be derived as


$$\frac{p_r x_r}{p_a x_a} = \exp \left[ -\frac{1}{2} \frac{m_{235} v_a^2}{RT} \left\{ 1 - \left( \frac{r}{a} \right)^2 \right\} \right] \quad (9)$$

$$\frac{p_r (1 - x_r)}{p_a (1 - x_a)} = \exp \left[ -\frac{1}{2} \frac{m_{238} v_a^2}{RT} \left\{ 1 - \left( \frac{r}{a} \right)^2 \right\} \right] \quad (10)$$

Therefore, the local separation factor at radial distance  $r$  of radius  $a$  is given by

$$\begin{aligned} \alpha &= \frac{\frac{x_r}{1 - x_r}}{\frac{x_a}{1 - x_a}} \\ &= \exp \left[ \frac{(m_{238} - m_{235}) v_a^2}{2RT} \left\{ 1 - \left( \frac{r}{a} \right)^2 \right\} \right] \quad (11) \end{aligned}$$

which depends on the difference of their molecular masses,  $\Delta m = m_{238} - m_{235} = 3$ . Values of the local separation factor of  $^{235}\text{UF}_6$  and  $^{238}\text{UF}_6$  with  $T = 300 \text{ K}$  and  $v_a = 700 \text{ m/s}$  are given in Table 2. This feature is superior to the gaseous diffusion method when the difference of the masses is large, (e.g., for heavier elements). The separation factor increases as the speed of the outer circumference increases. However, the maximum speed  $v_{max}$  is limited by stresses created to the cylinder from the force of the centrifugation and can be written as [2]

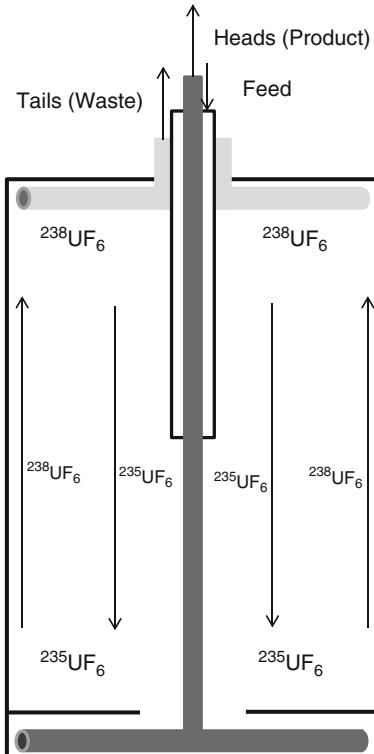


**Isotope Separation Methods for Nuclear Fuel, Fig. 2** Schematics of gas centrifuge with countercurrent flow

$$v_{max} = \sqrt{\frac{\sigma}{\rho}} \quad (12)$$

where  $\rho$  is the density of the material of the cylinder, and  $\sigma$  is the tensile strength. Although most molecular gases are localized at  $\frac{r}{a} \approx 1$  because of the centrifugation, the values of the separation factor could be higher than those obtained from the gaseous diffusion method. These values can be enhanced if we make use of a countercurrent flow in the vertical direction. Figure 2 shows the schematic diagram of countercurrent centrifugation method. Gernot Zippe performed pioneering

**Isotope Separation Methods for Nuclear Fuel, Fig. 3** Simple scheme of the cascade

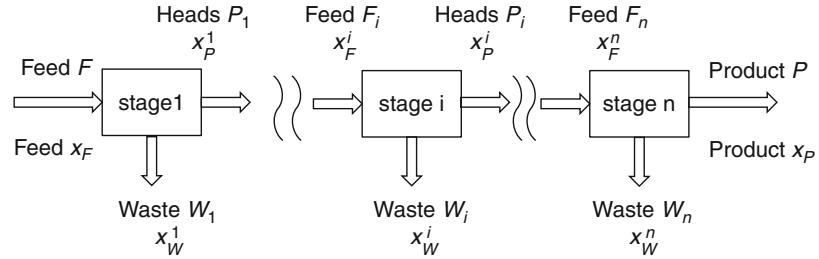

work on the development of the centrifugation first in the Soviet Union during 1946–1954, and from 1956 to 1960 at the University of Virginia. The countercurrent flow can be induced by heating and cooling centrifuges, or pipes drawing off flows in centrifuges. The temperature control can adjust the flow deliberately but the equipment becomes more complicated than that of the flow control by the pipes (Fig. 2). This countercurrent flow makes enrichment of the lighter isotopes at inner radius as the flow descending along the axis direction, and the heavier isotopes are being enriched at the circumference as the flow ascending. These enriched gases are collected at different radial positions of the both ends (at outer radius for heavier isotope and at inner radius by baffle for lighter isotope). When the centrifuge has a length  $L$ , the maximum separative power  $\delta U_{max}$  can be derived as [2, 4]

$$\delta U_{max} = \frac{\pi}{2} L \rho D \left( \frac{\Delta m v_a^2}{2RT} \right)^2 \quad (13)$$

where  $D$  is diffusion coefficient. The maximum separative power is proportional to the height of the centrifuge. It is preferable to have a taller centrifuge in the vertical direction, but the length is imposed on the resonant vibration of the centrifuge. The resonant conditions can be written as [3]

$$\left( \frac{L}{a} \right)_i = \sqrt{\lambda_i} \sqrt[4]{\frac{E}{2\sigma'}} \lambda_i = 22.0, \quad (14) \\ 61.7, \ 121.0, \ 200.0, \ 298.2, \ \dots$$

where  $E$  is coefficient of elasticity. A taller centrifuge can give a larger separative power although excellent mechanical properties are required to overcome the resonant conditions.

## Cascade Theory

The present isotope separation plants make use of these principles of enrichment with small separation factors. In order to obtain high enrichment ratios, cascade theory is necessary [3]. According to the theory, we can enhance the ratios by iterating a single physical stage many times. Figure 3 shows a simple scheme of a cascade. An original material “feed” is provided to the system. The isotope of interest is enriched as going through many separation stages and a final output “product” is obtained. Another output which mainly contains unnecessary isotopes is called “waste.” Each flow  $F$ ,  $P$  and  $W$  should have the following equation

$$F = P + W \quad (15)$$

and with mole fractions of the isotope of interest in each flow  $x_F$ ,  $x_P$ ,  $x_W$ , we can obtain

$$F x_F = P x_P + W x_W \quad (16)$$

In this system, we have four independent parameters to define. In order to obtain necessary flow of Product “ $P$ ” and mole fraction “ $x_P$ ” of the isotope of interest, we need the design methodology to construct stages of separation units. The product of a single stage (unit) is called heads and the waste of that is tails. The ratios of the isotope of interest in the product are usually most important. If, for instance, we have two isotopes “1” and “2,” and want to enrich the “1” isotope, we would focus on the variation of the mole fraction ratio of the two isotopes,  $\frac{x_1}{x_2}$ , which can be rewritten as  $\frac{x_1}{1-x_1}$ . The capability of each enrichment unit is described as separation factor  $\alpha$ . This factor is defined as the ratios of the

isotopes of interest to that of not-interest in the heads (product) divided by those in the tails (waste)

$$\alpha = \frac{x_P}{x_W} = \frac{\frac{x_P}{x_F}}{\frac{1-x_P}{1-x_F}} \quad (17)$$

In a similar way, we can define the ratio of the heads (product) to the feed as heads separation factor  $\beta$ , and that of the feed to the tails as tails separation factor  $\gamma$ ,

$$\beta = \frac{x_P}{x_F}, \quad \gamma = \frac{x_F}{x_W} \quad \text{and} \quad \alpha = \beta\gamma \quad (18)$$

The ratio of the product to the feed is called “cut”  $\theta$  and defined as

$$\theta = \frac{P}{F} = \frac{x_F - x_W}{x_P - x_W} \quad (19)$$

The simplest design to accomplish enrichment is to accumulate separation stages in a single line such as Fig. 4. This scheme is called simple cascade.

### Simple Cascade

In this scheme, the heads and the mole fraction of the  $i$ th stage are equal to the feed flow and the mole fraction of the  $i + 1$ th stage (Fig. 4).

$$F_{i+1} = P_i, \quad x_F^{i+1} = x_P^i \quad (20)$$

This cascade disposes of the tails of all stages so that the total amount of the isotope of interest in

the waste should be given sufficient attention. This can be evaluated by means of the recovery rate of the  $i$ th stage  $r_i$

$$\begin{aligned} r_i &= \frac{P_i x_P^i}{F_i x_F^i} = \theta_i \frac{x_P^i}{x_F^i} = \frac{x_F^i - x_W^i x_P^i}{x_P^i - x_W^i x_F^i} = \frac{1 - \frac{x_W^i}{x_F^i}}{1 - \frac{x_W^i}{x_P^i}} \\ &= \frac{\alpha_i - \beta_i}{\alpha_i - 1} \end{aligned} \quad (21)$$

When we have  $n$  stages in the cascade, the total recovery rate  $r$  can be expressed as

$$\begin{aligned} r &= \frac{Px_P}{Fx_F} = \frac{P_n x_P^n}{F_1 x_F^1} = \frac{P_1 x_F^1 P_2 x_P^2}{F_1 x_F^1 F_2 x_F^2} = \frac{P_n x_P^n}{F_n x_F^n} \\ &= r_1 r_2 \cdots r_n \end{aligned} \quad (22)$$

The over-all separation factor of the cascade  $\omega$  can be derived as

$$\omega = \frac{\frac{x_P^n}{1-x_P^n}}{\frac{x_F^1}{1-x_F^1}} = \beta_1 \beta_2 \cdots \beta_n \quad (23)$$


Therefore, if  $\alpha, \beta$  do not depend on each stage, the total recovery rate can be rewritten as

$$r = \left( \frac{\alpha - \beta}{\alpha - 1} \right)^n = \left( \frac{\alpha - \omega^{\frac{1}{n}}}{\alpha - 1} \right)^n \quad (24)$$

When the feed itself is available without any special cost, the simple cascade is effective. But in case the wastes from each stage should not be disposed because, for instance, it is valuable or

### Isotope Separation Methods for Nuclear Fuel

**Fig. 4** Simple cascade of the  $i$  and  $i + 1$ th stages

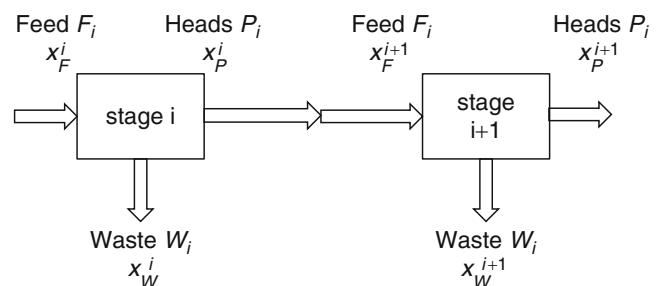

the recovery rate has to be increased, the waste flows are recycled as feed flow, which is called countercurrent recycle cascade (Fig. 5).


### Countercurrent Recycle Cascade

Since the simple cascade cannot improve the recovery rate, the tail flow is recycled into either stage to use it efficiently, which is called recycle cascade (Fig. 5). If  $\beta$  (heads separation factor) is equal to  $\gamma$  (tails separation factor) in all stages, we can obtain  $x_W^{i+2} = x_F^{i+1} (= x_P^i)$ . So the tails flow of the  $i + 2$ th stage can be merged to the heads flow of the  $i$ th stage and fed into the  $i + 1$ th stage without any mixing loss. We will consider the case that the tails flow of the second upper stage is refluxed to the  $i$ th stage.

The flows and the fractions of the isotope of interest in each stage of enriching sections should have the following relationships.

$$P_i = W_{i+1} + P, \quad P_i x_P^i = W_{i+1} x_W^{i+1} + P x_P \quad (25)$$

In a similar way, those in stripping sections can be expressed as

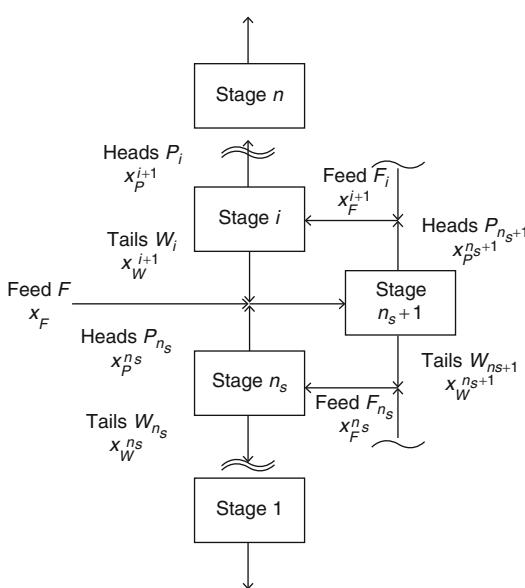

**Fig. 5** Countercurrent recycle cascade

$$W_{j+1} = P_j + W, \quad W_{j+1} x_W^{j+1} = P_j x_P^j + W x_W \quad (26)$$

Let's estimate the number of stages. From these equations, we can derive

$$x_P^i - x_W^{i+1} = \frac{x_P - x_P^i}{\frac{W_{i+1}}{P}} \quad (27)$$

At total reflux, where the reflux ratio is infinity,

$$\frac{W_{i+1}}{P} \rightarrow \infty \quad (28)$$

the mole fraction of the heads flow at the  $i$ th stage  $x_P^i$  becomes equal to that of the tails flow at the  $i + 1$ th stage  $x_W^{i+1}$  and the number of the stages is minimal.

$$\begin{aligned} \frac{x_P^{i+1}}{1 - x_P^{i+1}} &= \alpha \frac{x_W^{i+1}}{1 - x_W^{i+1}} = \alpha \frac{x_P^i}{1 - x_P^i} \\ &= \alpha^2 \frac{x_P^{i-1}}{1 - x_P^{i-1}} = \dots \end{aligned} \quad (29)$$

gives the following equation,

$$\frac{x_P}{1 - x_P} = \alpha^n \frac{x_W}{1 - x_W} \quad (30)$$

and the minimum number of the stages at total reflux can be derived as

$$n = \frac{1}{\ln \alpha} \ln \left( \frac{x_P}{1 - x_P} \frac{1 - x_W}{x_W} \right) \quad (31)$$

On the contrary, the reflux ratio becomes minimum when the mole fraction of the heads at the  $i + 1$ th stage is equal to that of the heads at the  $i$ th stage ( $x_P^{i+1} = x_P^i$ ).

### Ideal Cascade

Ideal cascade satisfies the condition that the values of  $\beta$  (heads separation factor) at all stages are constant and the mole fraction of the heads flow at the  $i + 1$ th stage is equal to those of the tails flow at the  $i - 1$ th stage and of the feed flow

at the  $i$ th stage ( $x_P^{i+1} = x_W^{i-1} = x_F^i$ ). In this instance, each separation factor satisfies the following relationship.

$$\beta = \sqrt{\alpha} = \gamma \quad (32)$$

In a similar way to the previous section, we can obtain the total number of the stages for an ideal cascade

$$\begin{aligned} n &= \frac{1}{\ln \beta} \ln \left( \frac{x_P}{1-x_P} \frac{1-x_W}{x_W} \right) - 1 \\ &= \frac{2}{\ln \alpha} \ln \left( \frac{x_P}{1-x_P} \frac{1-x_W}{x_W} \right) - 1 \end{aligned} \quad (33)$$

The number of stages in stripping  $n_S$  and enriching  $n_E = n - n_S$  sections can be derived as

$$n_S = \frac{1}{\ln \beta} \ln \left( \frac{x_F}{1-x_F} \frac{1-x_W}{x_W} \right) - 1 \quad (34)$$

$$n_E = n - n_S = \frac{1}{\ln \beta} \ln \left( \frac{x_P}{1-x_P} \frac{1-x_F}{x_F} \right) \quad (35)$$

The reflux ratio Eq. 27 can be rewritten using  $x_P^i = x_F^{i+1}$  and  $\beta$  as

$$\begin{aligned} \frac{W_{i+1}}{P} &= \frac{x_P - x_P^i}{x_P^i - x_W^{i+1}} \\ &= \frac{1}{\beta - 1} \left\{ \frac{x_P}{x_W^{i+1}} - \frac{\beta(1-x_P)}{1-x_W^{i+1}} \right\} \end{aligned} \quad (36)$$

### Mccabe-Thiele Diagram

It is useful to draw McCabe-Thiele diagram to investigate the design of the cascade, the mole fractions of the stages and so on. Figure 6 shows a typical McCabe-Thiele diagram. In this graph,

the horizontal and vertical axes correspond to the mole fractions of the heads flow  $x_P^i$  and of the tails flow  $x_W^i$ , respectively.

First, the following equation is satisfied at the enrichment process of the  $i$ th stage because of the definition of the separation factor

$$\frac{x_P^i}{1-x_P^i} = \alpha \frac{x_W^i}{1-x_W^i} \text{ (Equilibrium line)} \quad (37)$$

Second, the condition that the tail (waste) flow at the  $i + 1$ th stage is the feed of the  $i$ th stage ( $x_F^i = x_W^{i+1}$ ) defines the relationship between the mole fractions of the tail (waste) and head (product) flows at different stages as follows

$$\begin{aligned} \frac{x_P^i}{1-x_P^i} &= \beta \frac{x_F^i}{1-x_F^i} \\ &= \sqrt{\alpha} \frac{x_W^{i+1}}{1-x_W^{i+1}} \text{ (Operating line)} \end{aligned} \quad (38)$$

And third, the feed flow at the  $i$ th stage consists of the tails flow of the  $i + 1$ th stage and the heads flow of the  $i - 1$ th stage and their mole fractions are the same.

$$x_W^{i+1} = x_P^{i-1} \quad (39)$$

These three formulae can be shown in the McCabe-Thiele diagram as shown in Fig. 6. We can estimate the number of necessary stages, mole fractions of the stages, and overview the total processes through the graphical construction.

### Separative Work Unit


The total flow in the cascade can be derived as

$$\sum_i (P_i + W_i) = \frac{\beta + 1}{(\beta - 1) \ln \beta} \left[ W(2x_W - 1) \times \ln \left( \frac{x_W}{1-x_W} \right) + P(2x_P - 1) \ln \left( \frac{x_P}{1-x_P} \right) - F(2x_F - 1) \ln \left( \frac{x_F}{1-x_F} \right) \right] \quad (40)$$

The first term of Eq. 40 including  $\beta$  indicates the difficulty of the separation and increases as the value of  $\beta$  approaches to unity. The second term corresponds to the amount of work for

separation, and it has the same dimension as flow rates and is called separative capacity or separative power. This value is important because it is considered to be proportional to

**Isotope Separation Methods for Nuclear Fuel, Fig. 6** McCabe-Thiele diagram

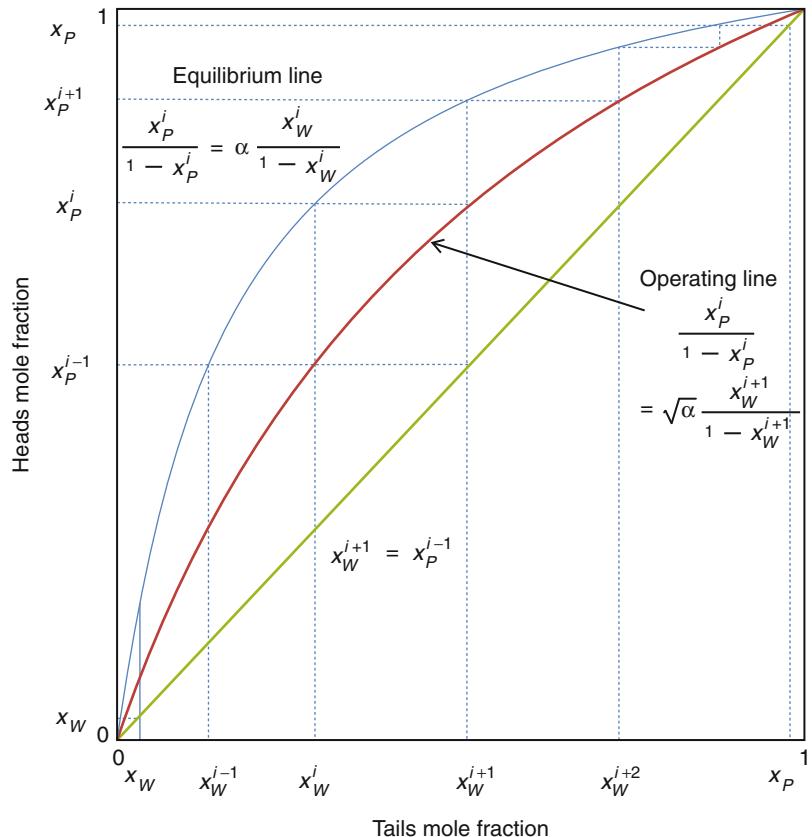

the initial cost of the plant. When we use the unit of the amounts of material (mole, kg, etc.) instead of flow rates, this is called separative work. The sum of the annual investment and operation costs can be expressed by the product of the separative work  $SW$  (kg SWU/year) and unit price of separative work  $c_s$  (\$/kg SWU). SWU is the abbreviation of Separative Work Unit. The separative work is defined as

$$SW = W\phi(x_W) + P\phi(x_P) - F\phi(x_F) \quad (41)$$

where  $\phi(x_i)$  is called separation potential and written as

$$\phi(x_i) = (2x_i - 1)\ln\frac{x_i}{1 - x_i} \quad (42)$$

When we use kg SWU/year for the separative work, the unit of  $W$ ,  $P$ , and  $F$  should be kg/year.

For operating the plant, we need the raw materials, the amount of which is  $F$  (kg/year) and unit

price of the raw materials  $c_F$  (\$/kg). The total cost per year  $c$  (\$) can be written as

$$c = SWc_S + Fc_F \quad (43)$$

When the amount of the product per year is  $P$  (kg), the unit cost of the product  $c_P = \frac{c}{P}$ . could be derived as

$$c_P = \frac{SWc_s}{P} + \frac{Fc_F}{P}$$

$$= \left\{ (\phi(x_P) - \phi(x_F)) - (x_P - x_F) \frac{\phi(x_F) - \phi(x_W)}{x_F - x_W} \right\} \times c_s + \left( \frac{x_P - x_W}{x_F - x_W} \right) c_F \quad (44)$$

### Example

With the ideal cascade of the gaseous diffusion method ( $\alpha = 1.00429$ ), the mole fraction of the feed flow 0.711% ( $x_F = 0.00711$ ) would be enriched to 3% ( $x_P = 0.03$ ) and the mole fraction

of the waste is planned to be 0.3% ( $x_W = 0.003$ ). In this case, the necessary moles of the feed and the waste to obtain the product of 1 [mol] are

$$\begin{aligned} F &= \frac{P(x_P - x_W)}{x_F - x_W} = \frac{1 \times (0.03 - 0.003)}{0.00711 - 0.003} \\ &= 6.569[\text{mol}] \end{aligned}$$

$$\begin{aligned} W &= \frac{P(x_P - x_F)}{x_F - x_W} = \frac{1 \times (0.03 - 0.00711)}{0.00711 - 0.003} \\ &= 5.569(= 6.569 - 1)[\text{mol}] \end{aligned}$$

The total number of stages  $n$  and the number of stages in stripping section  $n_S$  and in enriching section  $n_E$  are calculated as

#### Stripping Section

$$\begin{aligned} n_S &= \frac{2}{\ln \alpha} \ln \left( \frac{x_F}{1 - x_F} \frac{1 - x_W}{x_W} \right) - 1 \\ &= \frac{2}{\ln 1.00429} \ln \left( \frac{0.00711}{1 - 0.00711} \frac{1 - 0.003}{0.003} \right) - 1 \\ &= 404 \end{aligned}$$

#### Enriching Section

$$\begin{aligned} n_E &= \frac{2}{\ln \alpha} \ln \left( \frac{x_P}{1 - x_P} \frac{1 - x_F}{x_F} \right) \\ &= \frac{2}{\ln 1.00429} \ln \left( \frac{0.03}{1 - 0.03} \frac{1 - 0.00711}{0.00711} \right) \\ &= 683.5 \end{aligned}$$

The total number of stages

$$\begin{aligned} n &= \frac{2}{\ln \alpha} \ln \left( \frac{x_P}{1 - x_P} \frac{1 - x_W}{x_W} \right) - 1 \\ &= \frac{2}{\ln 1.00429} \ln \left( \frac{0.03}{1 - 0.03} \frac{1 - 0.003}{0.003} \right) - 1 \\ &= 1087.5 \end{aligned}$$

The heads flow rate in the enriching section can be written as

$$\begin{aligned} P_i &= P + W_{i+1} = P \\ &+ \frac{P}{\beta - 1} \{ x_p (1 - \beta^{i-n}) + (1 - x_p) \beta (\beta^{n-i} - 1) \} \end{aligned}$$

and that in the stripping section

$$P_i = \frac{W}{\beta - 1} \{ x_W \beta (\beta^i - 1) + (1 - x_W) (1 - \beta^{-i}) \}$$


These flows as a function of the number of the stages can be shown as Fig. 7 in this example.

When we need higher concentration, such as 5%,  $F = 11.436$  [mol],  $W = 10.436$  [mol],  $n = 1336$  and  $n_E = 932$ .

## Laser Isotope Separation (LIS)

The photon absorbing frequencies of isotopes show small differences caused by shifts of atomic electron energies due to the differences in the number of neutrons among isotopes. This is called isotope shift. The invention and development of lasers enable to resolve the isotope shift sufficiently and make isotope-selective photochemical reaction possible. Laser Isotope Separation may lead to almost 100% isotope separation in a single stage. Mainly, two methods such as Atomic Vapor Laser Isotope Separation (AVLIS) and Molecular Laser Isotope Separation (MLIS) were intensively studied. AVLIS uses uranium atomic vapor that is struck by lasers of such wavelength that only  $^{235}\text{U}$  atoms are excited and then ionized; once ionized, the  $^{235}\text{U}$  ions are collected by an electromagnetic field. MLIS uses  $\text{UF}_6$ , and vibrationally excites and multiphoton-dissociates only  $^{235}\text{UF}_6$  into  $^{235}\text{UF}_5$  by infrared lasers. The research to commercialize them has faded on a global scale.

A new process called Separation of Isotopes by Laser Excitation (SILEX) is under development. All details are not out in the open yet; but SILEX is considered to be a kind of molecular LIS using  $\text{UF}_6$ . The method only isotope-selectively excites but not dissociates  $^{235}\text{UF}_6$ . The separation factor announced by the company has been 2–20 [5]. Silex Systems Ltd was originally established as a subsidiary of Sonic Healthcare Limited of Australia in 1988. In 2007, the SILEX Uranium Enrichment project was transferred to GE's nuclear fuel plant in the United States. Global Laser Enrichment (GLE) was formed as a subsidiary of GE-Hitachi in 2008 [5]. In June 2009,

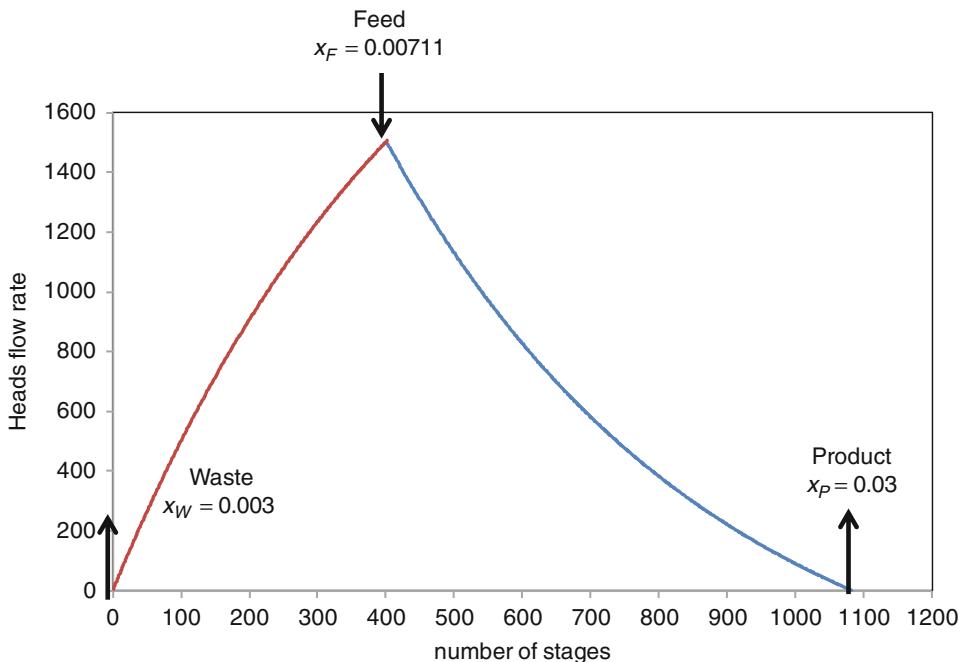

Isotope Separation Methods for Nuclear Fuel, Fig. 7 Heads flow rate

GE-Hitachi submitted a license application to construct a commercial laser enrichment plant in Wilmington, NC. The NRC staff is currently reviewing that application. They announced that they succeeded the initial measurement program at Test Loop in 2010 and proceeded to evaluate the program to decide the commercialization of the process [6].

## Future Directions

As of today, the gaseous diffusion and centrifuge processes have been used on a commercial scale. For the future, it seems that laser enrichment (the SILEX process) may be the successor to current enrichment methods. Preliminary results, based on enrichment by lasers, are encouraging. However, considerable improvements are needed before this method achieves commercial competitive status. Every uranium enrichment process is linked to nuclear proliferation issues. It would be very beneficial for the world if a method of

enrichment is devised which inherently offers non-proliferation safeguards for nuclear materials.

## Bibliography

1. World Nuclear Association. Uranium enrichment, World enrichment capacity – operational and planned. <http://www.world-nuclear.org/info/inf28.html>
2. Villani S (1976) Isotope separation. American Nuclear Society, Hillsdale
3. Benedict M, Pigford TH (1957) Nuclear chemical engineering. McGraw-Hill, New York; Benedict M, Pigford TH, Levi HW (1981) Nuclear chemical engineering, 2nd edn (trans: Kiyose R into Japanese)
4. Kemp RS (2009) Gas centrifuge theory and development: a review of U.S. programs. Sci Global Security 17:1; Wood HG, Glaser A, Kemp RS (2008) The gas centrifuge and nuclear weapons proliferation. Physics Today 40
5. Silex Systems Limited home page. <http://www.silex.com.au/>
6. World Nuclear News (2010) Initial Success from SILEX test loop, 12 April 2010. [http://www.world-nuclear-news.org/NN-Initial\\_success\\_from\\_SILEX\\_test\\_loop-1204104.html](http://www.world-nuclear-news.org/NN-Initial_success_from_SILEX_test_loop-1204104.html)



---

## Nuclear Reactor Materials and Fuels

James S. Tulenka

Laboratory for Development of Advanced Nuclear Fuels and Materials, University of Florida, Gainesville, FL, USA

### Article Outline

- Glossary
- Definition of the Subject
- Introduction to Nuclear Reactor Materials and Fuels
- Nuclear Fuel Materials
- Nuclear Reactor Materials and Fuels
- Nuclear Clad Materials
- Nuclear Moderator Materials
- Nuclear Coolant Materials
- Nuclear (Neutron) Poison Materials
- Nuclear Structural Materials
- Future Directions
- Bibliography

### Glossary

**Austenitic stainless steel** Austenitic steels contain alloys of chromium and nickel (sometimes manganese and nitrogen) structured around the type 302 stainless steel composition of iron, 18% chromium, and 8% nickel. Austenitic steels are not hardenable by heat treatment. The most common austenitic stainless steel is type 304.

**Burnup** A measure of the energy generated by fuel atoms that undergo fission. It is normally quoted in megawatt-days per metric ton of uranium metal or its equivalent (MWd/MTU).

**Core plate** In a reactor, the upper and lower core plates support the fuel channels and allow the cooling water into the fuel bundle and assures each fuel bundle is maintained equidistant from each other.

**Fertile fuel** A material capable of creating a fissile fuel upon capture of a neutron. Examples are U<sup>238</sup> and Th<sup>232</sup> which create Pu<sup>239</sup> and U<sup>233</sup>, respectively.

**Fissile fuel** Capable of undergoing fission by thermal neutrons. The four primary nuclides are U<sup>233</sup> U<sup>235</sup>, Pu<sup>239</sup>, and Pu<sup>241</sup>.

**Fissionable fuel** A material capable of undergoing fission via the absorption of a neutron with kinetic energy above a certain level. Examples are U<sup>238</sup> and Pu<sup>239</sup>.

**Half-life** The time it takes for the mass of a radioactive substance undergoing decay to decrease by half.

**Inconel** Refers to a family of austenitic nickel-chromium-based high-performance alloys trademarked by the Special Metals Corporation. Inconel metal is typically used in high-temperature applications and is generally known for its resistance to oxidation and superior ability to maintain integrity in high-temperature conditions.

**Isotopes** Isotopes are different forms of atoms (nuclides) of the same chemical element each having the same number of protons, but a different number of neutrons in the nucleus. Isotopes differ in mass number (the number of neutrons plus protons in the nucleus) but not in atomic number (total number of protons). All isotopes of an element have the same chemical properties, but frequently they have very different nuclear properties.

**Martensitic or ferritic steels** The major alloying addition in martensitic stainless steels is chromium in the range of 11–17%. The carbon levels can vary from 0.10% to 0.65% in these alloys. The high carbon enables the material to be hardened by heating to a high temperature followed by rapid cooling (quenching). Martensitic steels offer a good combination of corrosion resistance and superior mechanical properties, offering maximum hardness, strength, and resistance to abrasion and erosion. Neutron capture cross section is the probability of neutron capture by a nucleus.

It is the effective area that a particular atom/nucleus of that isotope presents to absorb a neutron and is measured by a unit (of area) called “barn,” which is  $10^{-24}$  cm $^2$ .

**Nuclear fuel clad or cladding** The outer layer of the fuel rods a barrier between the coolant and the nuclear fuel. It is made of a corrosion-resistant metal that has a low neutron absorption cross section. In today’s modern commercial reactors, cladding is made usually of zircaloy.

**Passivating layer** In the context of corrosion, passivation is the formation of a nonreactive surface film which inhibits further corrosion.

**Plutonium (Pu)** Man-made element with atomic number 94. Of the many Pu isotopes, the most noteworthy is  $^{239}\text{Pu}$  because it is a fissile isotope and may also be used to make a nuclear weapon.  $^{238}\text{Pu}$ , an alpha particle emitter, has found a great application in space missions powering electronic equipment.

**Thermal conductivity** Property of a material that describes its ability to conduct heat.

**Thorium (Th)** Naturally occurring element with atomic number 90; the only isotope found in nature is  $^{232}\text{Th}$ . Th is more abundant than U. Upon capture of a neutron and subsequent radioactive decays, it forms  $^{233}\text{U}$ , which is a fissile isotope.

**Uranium (U)** Naturally occurring element with atomic number 92; three isotopes are found in nature, U $^{238}$ , U $^{235}$ , and U $^{234}$  with an abundances, respectively, of 99.28%, 0.711%, and 0.00057%. The isotope  $^{235}\text{U}$  is the only naturally occurring fissile isotope.

**Uranium dioxide ( $\text{UO}_2$ )** An oxide of uranium, a black mildly radioactive crystalline material that is used in nuclear fuel pellets in nuclear reactors.

**Zircaloy** Is a group of alloys mostly consisting of zirconium, with minor additions of tin (often about 1.5%), iron, and chromium, used as a fuel rod clad material in light-water thermal reactors.

## Definition of the Subject

Nuclear reactor materials and fuels can be classified into six categories:

- Nuclear fuel materials
- Nuclear clad materials
- Nuclear coolant materials
- Nuclear poison materials
- Nuclear moderator materials
- Nuclear structural materials

The materials unique to nuclear reactors are the nuclear fuel materials. All the other materials are used in other applications. Because nuclear fuel materials are radioactive, they require specialized handling. Additionally, because of the connection of nuclear energy with the atom bomb, security in its tightest form is required for nuclear fuel.

## Introduction to Nuclear Reactor Materials and Fuels

The first nuclear reactor was the famous “Chicago Pile” (CP-1) which was built under the west stands of Stagg Field at the University of Chicago on a squash court and went critical on December 2, 1942. The first nuclear materials were uranium in both a metal and an oxide form as the fuel, carbon in a graphite as the moderator, atmospheric air as the coolant (since the reactor power was essentially zero), cadmium as the control material, and wood as the structural material. Nuclear power plant designs have come a long way since then, particularly with regard to cooling. However, the fuel form remains basically the same.

## Nuclear Fuel Materials

There are three basic nuclear fuel materials which can be utilized in many different forms: uranium, plutonium, and thorium. The most utilized fuel material is uranium, and it is most often utilized in the oxide form in pellet form (see Fig. 1). That one pellet held in the tweezers has the energy equivalent of 1 t of coal. Natural uranium is composed of uranium 238 (99.3%) and uranium 235 (0.7%). Uranium 238 is classified as a fertile material, which produces the fissile plutonium 239 when it captures a neutron. It is necessary to



**Nuclear Reactor Materials and Fuels, Fig. 1** Uranium dioxide ( $\text{UO}_2$ ) fuel pellets (Courtesy of AREVA)

enrich the uranium in the uranium 235 isotope in order to run the light-water reactors (LWRs). The uranium for commercial power reactors is normally enriched to 4–5%  $\text{U}^{235}$ . The methods used to enrich the uranium are the gaseous diffusion process in which the isotopes of different molecular weights diffuse differently through a porous barrier and the gaseous centrifuge process, where the different masses are centrifuged in a fast rotating cylinder with the heavier molecules moving toward the periphery of the centrifuge, thus separated from the lighter ones. For both processes, a gaseous compound is necessary; that compound is uranium hexafluoride ( $\text{UF}_6$ ) which is a solid at room temperature but becomes a gas at 56.4 °C. As a gas, uranium hexafluoride becomes very suitable for a variety of processes to enrich the material in uranium 235. Lastly, and still in development, the laser method where laser radiation is used to excite, ionize, or dissociate one isotopic species without affecting the other may be used for enrichment. The current favored method of enrichment is the gaseous centrifuge. The most common form of uranium in a light-water reactor is as  $\text{UO}_2$ . The enriched  $\text{UF}_6$  is transported to a fuel fabrication plant where the  $\text{UF}_6$ , in solid form in containers, is again heated to its gaseous form and the  $\text{UF}_6$  gas is chemically processed to form uranium dioxide ( $\text{UO}_2$ ) powder. This powder is then mixed with various additives to enable achievement of the final required fuel pellet density. Additives may be  $\text{U}_3\text{O}_8$ , lubricants, pore formers, and burnable poisons such as gadolinium. The powder is then poured into molds and

biaxially pressed with a load of several hundred MPa to a green density pellet (green pellet) of approximately 50–60% of theoretical density. These green pellets are then ejected from their molds and are loaded into molybdenum boats. These boats are then loaded into a furnace with heat-up, sintering, and cool-down stages. The temperature of the sintering stage varies between 1,600 °C and 1,800 °C. It can take up to 10 h for the pellets to traverse the three sections of the furnace. When the pellets exit the furnace, the pellets should have a uranium density of  $96.5 \pm 2.0\%$  and an oxygen-to-uranium ratio (O/U) greater than or equal to 1.99 and less than or equal to 2.02. These pellets are cylindrical in form with a typical diameter of approximately 0.32 in., a length of approximately 0.4 in., and a dish and chamfer, top and bottom (see Fig. 1). The dish and chamfer accommodate fuel pellet expansion and distortion while in operation. Finally, the pellets are then subjected to inspection for chips and cracks, and the pellets are then centerless ground to meet the required diameter. Upon passing the inspections and grinding, the pellets are then loaded into zircaloy tubes, pressurized with helium and sealed. The fuel rods are then placed into an array (17 × 17) which is bound together with guide tubes, spacer grids, and top and bottom end fittings, all of which form the nuclear fuel assembly. Depending on the type of light-water reactor, a fuel assembly may contain up to 264 fuel rods and have dimensions of 5–6 in. square by about 12 ft long. The fuel is placed into containers and is trucked to the nuclear fuel plants to generate electricity. A single pressurized water fuel assembly contains about 500 kg of enriched uranium and can produce 200,000,000 kWh of electricity. Since the average national electrical yearly use per person is 11,867 kWh, a single nuclear fuel assembly gives 5,562 people their yearly electric needs during its 3 years of operation.

Uranium as a fuel is also utilized in the metallic form as an alloy with either zircaloy or aluminum in sodium fast reactors (SFRs) and in research reactors. Experimental developmental work is researching the carbide and nitride forms of uranium as a useful fuel form for SFRs and

gas-cooled reactors (GCRs) because of their excellent thermal conductivity properties and higher uranium density. Research is also under way to utilizing uranium or plutonium in either the oxide or metal form with materials such as silicon carbide or zircaloy to form inert matrix fuel forms with improved thermal conductivity properties. Uranium dioxide ( $\text{UO}_2$ ) is a good fuel because it has a high melting point (2,865 °C) and does not dissolve in water. However, in an oxidizing environment,  $\text{UO}_2$  can be oxidized to  $\text{U}_3\text{O}_8$ , which does dissolve in water. The major drawback of uranium dioxide as a fuel form is that it has a relatively low thermal conductivity, which continues to decrease with temperature until approximately 2,000 °C. Additionally, the thermal conductivity of uranium also decreases with burnup as the fuel produces power. Since the Nuclear Regulatory Commission does not permit reactors to operate in a condition where centerline melting of the fuel pellet may occur, the high melting temperature of the uranium dioxide does tend to offset its low thermal conductivity. However, the high temperatures in the uranium oxide pellet during operation do lead to thermal stresses, which result in cracking in the pellet both in the radial and circumferential directions. The uranium carbide (UC) and uranium nitride (UN) fuel forms have the benefits of a very high thermal conductivity and a higher density than  $\text{UO}_2$  of uranium. However, they dissolve in water and therefore cannot be considered for use in the water-cooled reactors. The metal fuel form has a higher thermal conductivity and a higher density of uranium than  $\text{UO}_2$ , but does have a lower melting temperature. The material properties of the various uranium fuel forms are shown in Table 1.

## Nuclear Reactor Materials and Fuels

Plutonium does not exist in nature and is a totally man-generated fuel. Plutonium 239 is a fissile isotope generated from a neutron being captured in  $\text{U}^{238}$  and has a larger fission cross section than that of uranium 235. However, plutonium 239 has

a smaller half-life of 24,200 years versus the half-life of uranium 235 of  $7.04 \times 10^8$  years, so it is far more radioactive and cannot be handled like uranium. Additionally, plutonium 239 in reactor forms a whole family of fertile and fissionable isotopes:  $\text{Pu}^{240}$ ,  $\text{Pu}^{241}$ , and  $\text{Pu}^{242}$ . These isotopes have similar short half-lives of 6,537 years for  $\text{Pu}^{240}$ , 14.4 years for  $\text{Pu}^{241}$ , and a long half-life of 376,000 years for  $\text{Pu}^{242}$ . Plutonium metal melts at approximately 640 °C, a much lower temperature than uranium, and has a thermal conductivity at 300 K of 6.74 W/mK versus a value of 27.5 W/mK for uranium metal. Plutonium fuel is normally used as an oxide and is mixed with natural or depleted uranium oxide. This mixed oxide fuel form is termed MOX.

Thorium is a fertile fuel containing only the single thorium isotope  $\text{Th}^{232}$ , which upon capture of a neutron forms  $\text{Th}^{233}$ .  $\text{Th}^{233}$  is transmuted by beta decay with a half-life of 22.3 min into  $\text{Pa}^{233}$ , which beta decays with a half-life of 27 days into the fissile uranium isotope  $\text{U}^{233}$ . Thorium dioxide's advantage over uranium dioxide as a fuel form is that it has both a higher thermal conductivity ( $\sim 5.25 \text{ W m}^{-1} \text{ K}^{-1}$  at 800 K) and a higher melting point (3,350 °C), 80 °C higher than uranium, and is insoluble in water under all conditions, having only the single oxidation state ( $\text{O}_2$ ). Thorium oxide with enriched uranium oxide was the fuel in the very first full-scale nuclear power reactor (the Shippingport Atomic Power Station), which was built by Admiral Rickover for the Duquesne Light Company. This reactor went critical on December 12, 1957.

## Nuclear Clad Materials

The clad materials, which enclose the nuclear fuel, are really the first line of defense to retain the radioactive materials within its boundaries and to protect the fuel from the moderator. In addition to these tasks, the clad also provides structural integrity for the fuel assembly and a surface for heat transfer from the fuel to the coolant. The fuel clad and the guide tubes, which connect the upper and

**Nuclear Reactor Materials and Fuels, Table 1** Comparison between UO<sub>2</sub>, UZr, UC, and UN fuel for key material characteristics

Fuel comparison	Uranium oxide (UO <sub>2</sub> )	Metallic fuel (UZr)	Carbide fuel (UC)	Nitride fuel (UN)
Density (g/cm <sup>3</sup> )	9.75	14	13.58	13.53
Melting point (°C)	2,750	1,080	2,420	2,780
Thermal conductivity (W/mK)	2.9	14	16.5	14.3




**Nuclear Reactor Materials and Fuels, Fig. 2** Schematic representation of a fuel rod showing fuel pellets, upper fuel spacer, fuel clad, fuel hold-down spring, and upper and lower fuel end plugs

lower end fittings of the fuel assembly, are normally made of the same material. The cladding material must be chemically compatible with the fuel, and it must be corrosion resistant with the coolant material. Additionally, it is important that the cladding and the guide tube material have a very small neutron capture cross section so as to not interfere with the fission process. Stainless steel has excellent corrosion properties and an excellent resistance to neutron irradiation. However, it has a relatively high thermal neutron absorption cross section. Until a material could be developed which had a low neutron absorption cross section and good corrosion and structural properties under irradiation, stainless steel was used as both the cladding material and the guide tube for both thermal and fast reactors. However, in thermal reactors, the stainless steel neutron absorption cross section is relatively large, and the resulting penalty in neutron economy forced a search for a replacement material which would have the required mechanical strength, corrosion resistance in the water moderator, and a low neutron absorption cross section. This search leads to the development of zircaloy, a zirconium alloy material made with minor additions of tin, oxygen, iron, and chromium. The zircaloy family of materials was developed out of the US Naval Reactors program and was quickly picked up by the commercial industry to replace stainless steel as a cladding material and guide tube material (and shroud for boiling water reactors

(BWRs)) both for pressurized and boiling water reactors. The Shippingport reactor, mentioned earlier, utilized zircaloy clad for its fuel rods. It should be noted that the light-water reactor (LWR) concept was developed for the nuclear navy Admiral H. Rickover who helped to shape the nuclear industry. Zircaloy had the required mechanical strength, a small neutron cross section, and good corrosion resistance. While zircaloy reacts with oxygen, it does form a passivating layer that protects the remaining zircaloy from further oxidation. Recent zircaloy alloy developments have added niobium and eliminated the chromium to give better oxidizing and hydriding resistance. Zircaloy is still the material of choice for the nuclear commercial industry. The upper and lower end fittings are made either of stainless steel or of Inconel, since they are outside of the active nuclear portion of the core. Different Inconels have widely varying compositions, but all are predominantly nickel, with chromium as the second element and iron as the third element. Nickel has a large thermal capture cross section for neutrons. The spacer grids which hold the fuel rods in place were originally either Inconel or stainless steel, but were subsequently also changed to zircaloy. Figure 2 displays a schematic of a nuclear fuel rod showing the fuel pellets, the top insulator pellet, and the fuel hold-down spring which keeps the fuel pellets from moving during shipping and handling. Figure 3 shows a fuel assembly structure with end fittings, guide


### Nuclear Reactor Materials and Fuels,

**Fig. 3** Pressurized water nuclear fuel assembly structure showing upper and lower end fittings, fuel guide tubes, and fuel spacer grids – without fuel rods in place (Courtesy of AREVA)

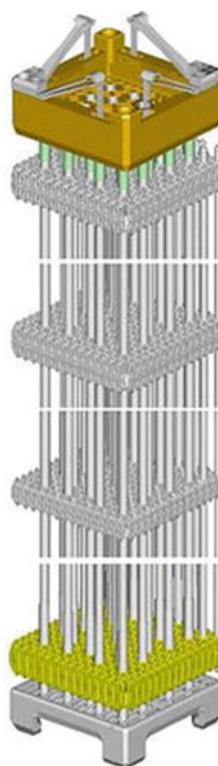

### Nuclear Reactor Materials and Fuels,

**Fig. 4** A PWR fuel assembly with fuel rods in place (Courtesy of AREVA)

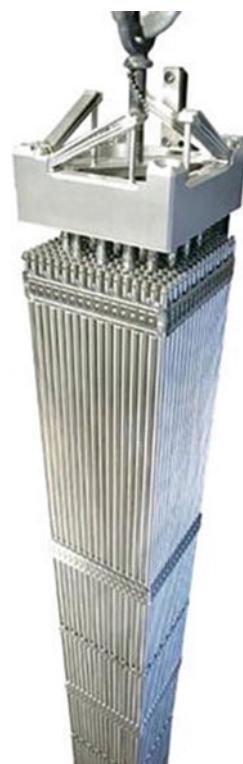

tubes, and spacer grids, but no fuel rods. The fuel guide tubes provide the vertical structure for the fuel assemblies and serve as channels for the control rods to enter into the fuel assemblies. The spacer grids provide the horizontal structure for the fuel assemblies. Figure 4 shows a pressurized water reactor (PWR) fuel assembly with fuel rods in place.

Stainless steel continues to be used as the cladding for fast reactors, since stainless steel tends to have low capture cross sections in the fast neutron energy region. However, even here, as coolant temperatures have been increasing in reactor designs in order to obtain ever higher thermal efficiencies, improved steel alloys have been required to be developed. First, austenitic stainless steels replaced the 304 stainless, and now oxide dispersion strengthened (ODS) martensitic or ferritic steels are under development to replace the austenitic stainless steels. Even more recently,

silicon carbide cladding has been being researched as a cladding for the future. The silicon carbide cladding is made from a silicon carbide weave which is then impregnated with a silicon carbide vapor, and in the latest designs, a metal liner is placed on the inner surface of the clad. As a ceramic, silicon carbide would be resistant to oxidation and would have an extremely high melting temperature, so as to render the loss of coolant accident (LOCA) a nonevent.

### Nuclear Moderator Materials

With the advent of nuclear reactors, the nuclear fission process was found to proceed more easily if the neutrons were moderated in energy into the thermal range ( $E < 1.0 \text{ eV}$ ). The ideal moderator would have a very low thermal neutron capture cross section and a low atomic number in order to

increase the neutron energy loss on each collision. The very first nuclear reactors used graphite (carbon) to slow the fission neutrons down to the thermal energy regime. Carbon had a very small neutron absorption cross section and an atomic weight of 12. With the advent of the power reactors, water was used as both the moderating and the coolant material. Hydrogen, with an atomic weight of 1, equal to that of a neutron, could slow the neutrons down with very few collisions, and moreover, water is inexpensive. However, hydrogen does have a relatively high thermal neutron capture cross section, turning the hydrogen into deuterium. This capture cross section of ordinary water requires that light-water reactors must use enriched uranium as a fuel. Deuterium oxide, or heavy water, would be an ideal moderator and coolant because of its very low capture cross section for neutrons. However, its very high price makes it a very expensive material to use. The Canadians utilize heavy water as their moderator and coolant in their Canadian-Deuterium-Uranium (CANDU) reactors. The extremely low absorption cross section of deuterium allows the CANDU to construct and operate nuclear power plants without the need for enrichment, utilizing natural uranium fuel. But they had to build plants to separate the heavy water (deuterium) out of ordinary water. Hydrogen has also been used in solid form in zirconium hydride ( $ZrH$ ) as a moderator for space applications and for the *Training, Research, Isotopes, General Atomics* (TRIGA) research reactors of general atomics. Lithium, a liquid metal, can also be used as a moderator. Beryllium has been used as a moderator in research reactors and in many ways is superior to graphite and lithium. However, beryllium is a very toxic material which limits its usefulness because of Environmental Protection Agency restrictions on its use.

## Nuclear Coolant Materials

Nuclear coolant materials should be marked by a low melting temperature and a high boiling point.

The obvious coolant which has been used in fossil boilers for years is water or steam. However, its low boiling point requires that it be pressurized to allow for a high heat content. Thus, the pressurized water reactor (PWR) has a system pressure of approximately 2,200 psi, and the boiling water reactor (BWR) has a pressure of approximately 1,100 psi. As mentioned earlier, the Canadians utilize heavy water as their coolant in the CANDU reactor. However, the Canadians are developing new reactors which utilize ordinary water as the coolant, while retaining heavy water as the moderator. The British for their reactors went with graphite as the moderator and pressurized carbon dioxide ( $CO_2$ ) as the coolant in their advanced gas reactor (AGR). The United States has researched using pressurized helium-cooled, graphite-moderated reactors at the Peach Bottom Reactor (in Pennsylvania) and the Fort Saint Vrain Reactor (in Colorado). The fast reactors utilize either sodium or helium as a coolant. Various experimental reactors have utilized exotic coolants such as fluoride salts, lithium, sodium-potassium alloy ( $NaK$ ), and lead-bismuth eutectic. Lead-bismuth ( $Pb-Bi$ ) eutectic has a low melting point and a high boiling point and does not react with water or oxygen. The Russians have operated lead-cooled reactors in their nuclear navy. The heavy density of lead may generate erosion in its container pipes and particularly bends in its flow path. Molten salts have the advantage of having a very high boiling point and containing the fuel right in the molten salt mixture, thereby doing away with a need to fabricate the fuel.

## Nuclear (Neutron) Poison Materials

Nuclear engineers use the term “poison” to describe any material that steals neutrons away from the fission process. Nuclear reactors use poison materials to control the fission chain reaction. These poison materials must have a high neutron capture cross sections. Poison materials are of two types: burnable and nonburnable. In the

burnable poison type, the poison material, upon capturing a neutron, loses its large neutron capture cross section. In the nonburnable poison type, the poison materials, upon capturing a neutron, convert into a similar high-absorbing neutron cross section material. Three typical control materials used in control rods are [1] hafnium [2], an alloy of silver, indium, cadmium, and [3] boron. Boron is a burnable poison, unlike the other control materials, because the main neutron-absorbing isotope  $^{10}\text{B}$ , upon capturing a neutron, converts to  $^4\text{He}$  and  $^7\text{Li}$ . Boron control rods must be replaced at regular intervals, unlike control rods made with hafnium or the alloy of silver, indium, and cadmium. Soluble boron is added as a poison material into the coolant of pressurized water reactors, where it can be adjusted to keep the reactor in a critical condition. When used in the coolant, the boron is called a chemical shim or “chem shim.” The use of boron in the coolant allows pressurized water reactors to keep the control rods out of the core during operation. In a PWR, control rods are used only to shut down the reactor. Boiling water reactors cannot use boron in the coolant because of the boiling action which would lead to boron plate ousting and also the boron could reach the turbines and ruin the blades. For these reasons, they must utilize control rods in the core during operation in order to control the reactivity of the core.

Boron is also used as a burnable poison in burnable poison rod assemblies (BPRAs), which are inserted into the unoccupied control rod guide tubes and changed at each refueling. The boron is depleted during the cycle, such that at the end of cycle, the poison effect has been exhausted. Boron is also placed inside the fuel rods in Westinghouse reactors where a thin layer of zirconium diboride ( $\text{ZrB}_2$ ) is coated on the fuel pellets. Gadolinium and erbium are also used as burnable poison materials and are mixed with the uranium dioxide ( $\text{UO}_2$ ) fuel when forming the fuel pellets. BWR use gadolinium extensively in the fuel in order to control the reactivity because of their inability to utilize boron in the coolant. The advantage of the burnable poison in the fuel, as opposed to

BPRAS, is that there is less nuclear waste and the displacement of the water in the guide tube by the BPRAs does result in an end-of-cycle reactivity penalty for the BPRAs.

## Nuclear Structural Materials


As mentioned, the very first reactor (CP-1) used wood as the structural material. However, today the nuclear structural materials are steel and concrete. The nuclear-fueled core is contained inside a steel vessel which has steel core support plates, top and bottom, upon which the core is held in place. The steel vessel is approximately 6 in. thick. In new designs, the steel vessel may be inside a concrete shield wall. In pressurized water reactors, steel baffles surround the core and separate the incoming colder water in the down comer from the heated water in the open core. In the boiling water reactor, each fuel assembly is contained in a zircaloy fuel shroud that isolates the water being heated in each fuel assembly. In both the PWR and the BWR, the steel pressure vessel is contained inside a steel reinforced concrete containment structure with a steel liner. Figure 5 shows a PWR vessel with the fuel core, upper core internals, and upper and lower grid assemblies.

## Future Directions

For light-water reactors, the future directions for these reactors include the development of accident-tolerant fuel pellets which have a higher thermal conductivity than  $\text{UO}_2$  and a ceramic cladding, such as the silicon carbide clad mentioned. This high thermal conductivity pellet is needed to reduce the temperature in the pellet which reduces fission gas release and pellet cracking and lowers the stored heat minimizing the effects of loss of coolant accidents. This development would also eliminate concerns regarding the pellet-clad interaction (PCI) which currently

### Nuclear Reactor Materials and Fuels

**Fig. 5** Pressurized water reactor vessel showing fuel core, upper and lower grid assembly, and core internals (Courtesy of AREVA)

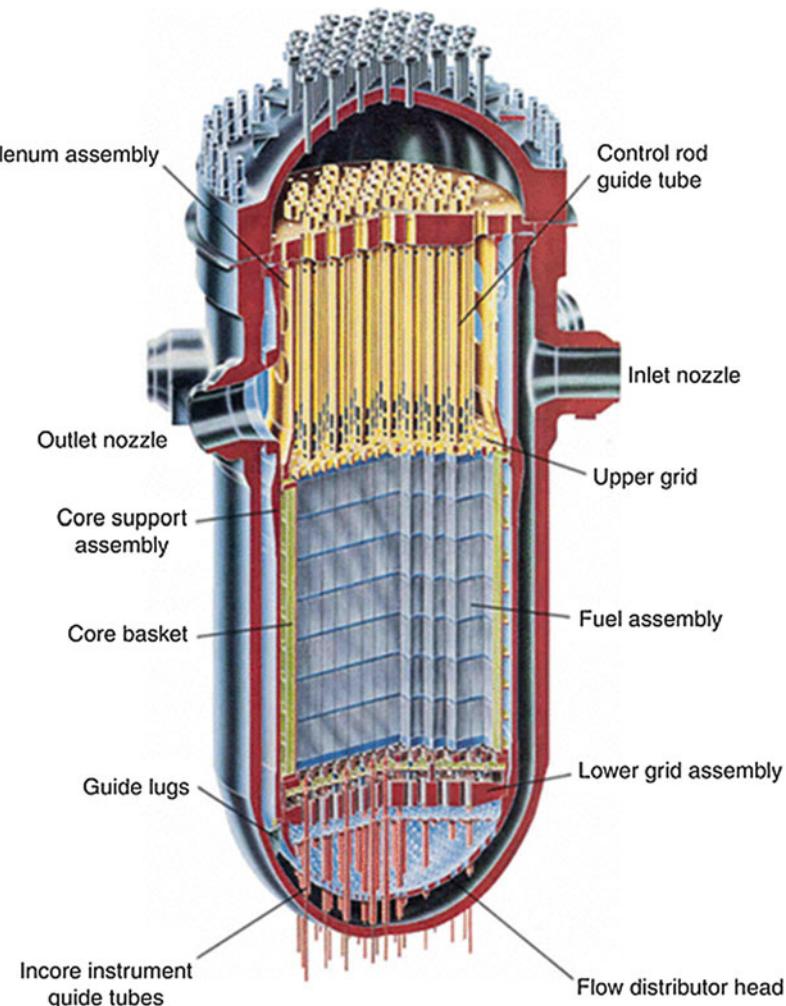

limits power transitions during operation of light-water reactors. The successful development of the molten salt reactor would offer many benefits by eliminating the fuel fabrication step, allowing for online reprocessing and fueling and also allowing for higher temperature operation with a resultant increase in thermal efficiency. In the long run, future reactors will most likely be fast breeder reactors, either using sodium or helium as the coolant, and fueled with uranium carbide and clad with silicon carbide.

### Bibliography

1. Cochran RG, Tsoufianidis N (1999) The nuclear fuel cycle: analysis and management, 2nd edn. American Nuclear Society, La Grange Park. ISBN 0-89448-451-6
2. Knief R (1992) Nuclear engineering: theory and technology of commercial nuclear power, 2nd edn. Hemisphere, Washington, DC. ISBN 978-0-89448-458-2
3. Glasstone S, Sesonske A (1994) Nuclear reactor engineering: reactor design basics, vol 1. Chapman & Hall, New York. ISBN 0-442-20057-9



## Modern Nuclear Fuel Cycles

James S. Tulenka

Laboratory for Development of Advanced Nuclear Fuels and Materials, University of Florida, Gainesville, FL, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
The Nuclear Fuel Cycle  
Uranium History  
Geology of Uranium  
Uranium Conversion and Enriching  
Nuclear Fuel Fabrication  
Nuclear Fuel Operation and Disposal  
Future Directions  
Bibliography

### Glossary

**MWD/MTU (megawatt days of energy produced per metric ton of uranium contained)** Energy produced per metric ton of uranium (fuel) contained. Current Nuclear Regulatory Commission limits for nuclear power plant fuel is 62,000 MWD/MTU. Normal lifetime of a fuel assembly is 55,000 MWD/MTU.

**Pitchblende** An ore with a very high UO<sub>2</sub> content of up to 70%. Pitchblende also contains radium, thorium, cerium, and lead.

**The Department of Energy** Required by law to be responsible for the spent fuel and collects a fee of 1 mill/kWh of nuclear electricity for disposal.

**The US Nuclear Regulatory Commission (US NRC)** Regulatory body for radioactive materials and nuclear power plants.

**Thorium** More readily available nuclear fuel than uranium, being four times more abundant than uranium in the earth's crust.

**Uranium dioxide (UO<sub>2</sub>)** An insoluble oxide of uranium which is the form commonly used in commercial nuclear fuel.

**Uranium** Occurs in most rocks in concentrations of two (sedimentary rocks) to four (granite) ppm.

### Definition of the Subject

The nuclear fuel cycle [1, 2] describes the entire process followed to convert uranium or thorium ore to its useful state in nuclear power reactors and its ultimate and current disposal. The cycle has been followed since the 1960s to produce electrical power safely and without emissions of environmentally endangering carbon gases.

### Introduction

Madame Marie Curie, a pioneer in the field of radioactivity and the first person honored with two Nobel Prizes, discovered radioactivity in 1898, and since then many radioactive elements have seen various uses. One in particular, uranium, has been used for its fissionable properties. When a uranium (or plutonium) atom fissions, it releases approximately 200 MeV of energy. The burning of a carbon (coal) atom releases merely 4 eV. The difference between the two – a 50 million times advantage in nuclear energy release – shows the tremendous advantage in magnitude between chemical and nuclear energy. This advantage is used for common good in nuclear power reactors around the world. Currently, the United States lags France in the use of nuclear power with the United States obtaining 20% of its electrical energy from nuclear power plants, while France obtains 80% of its electrical energy from nuclear power plants. Worldwide, approximately 18% of all electrical energy is produced by nuclear power plants.

## The Nuclear Fuel Cycle

The nuclear fuel cycle uses two naturally occurring elements, uranium and thorium, which are both relatively common metals. Both materials are obtained by mining the earth. Uranium occurs in most rocks in concentrations of two (sedimentary rocks) to four (Granite) ppm. Uranium also occurs in seawater in a concentration of 0.003 ppm, which corresponds to approximately 4 billion tons of uranium in the oceans. Uranium (1.8 g/t) is more abundant than common materials such as silver (0.07 g/t), tungsten (1.5 g/t), and molybdenum (1.5 g/t) [1]. It is 800 times more abundant than gold. Natural (as mined) uranium contains in atomic abundance 99.2175% uranium-238 (U-238), 0.72% uranium-235 (U-235), and 0.0055% uranium-234 (U-234). Uranium has atomic number 92, meaning all uranium atoms contain 92 protons, with the rest of the mass number being composed of neutrons. All uranium isotopes are radioactive. This radioactive property makes the detection of uranium deposits relatively easy, even allowing for prospecting by air. Uranium-238 has a half-life of  $4.5 \times 10^9$  years (4.5 billion years), U-235 has a half-life of  $7.1 \times 10^8$  years (710 million years), and U-234 has a half-life of  $2.5 \times 10^5$  years (250,000 years). All the U-234 currently present comes from the decay chain of U-238. Uranium-235 is the only fissile isotope available in nature. Uranium can be a fissionable fuel as mined in pressurized heavy water reactors designed by the Atomic Energy of Canada Limited (AECL). These reactors are termed CANDU for CANada Deuterium Uranium. As a by-product of the operation of a nuclear reactor, uranium-238 absorbs a neutron to form, through radioactive decay, the fissile fuel, plutonium-239. Another fissile isotope, uranium-233, comes from the naturally occurring thorium 232 when it captures a neutron. Finally, as part of the plutonium chain, plutonium-241 is also produced. It is important to note that it is the four odd number isotopes: 233, 235, 239, and 241, which are fissionable.

Thorium is an even more readily available nuclear fuel than uranium, being four times more abundant than uranium in the earth's crust.

Thorium is the 39th most common element in the earth's crust and is about as common as lead. Thorium is present in the earth's crust with an average concentration of about 9.6 ppm. Thorium must be converted to a fissile fuel in a nuclear reactor by absorption of a neutron, forming through radioactive decay, the fissionable fuel, uranium-233. Thorium has only one naturally occurring isotope, thorium-232, which is radioactive with a half-life of  $1.3 \times 10^{10}$  years. India, which has large thorium deposits, has been a leader in utilizing thorium to breed uranium-233 to serve as a nuclear fuel. Other countries having major deposits of thorium are Australia, Norway, and the United States.

## Uranium History

Uranium was discovered in 1789 by Martin Heinrich Klaproth, a German chemist, in the mineral pitchblende, which is primarily a mix of uranium oxides. No one could identify this new material he isolated, so in honor of the planet Uranus that had just been discovered, he called his new material uranium. Although Klaproth, as well as the rest of the scientific community, believed that the substance he extracted from pitchblende was pure uranium, it was actually uranium dioxide ( $\text{UO}_2$ ). It was not until 1842 that Eugene-Melchior Peligot, a French chemist, noticed that "pure" uranium reacted oddly with uranium tetrachloride ( $\text{UCl}_4$ ). He then proceeded to isolate pure uranium by heating the uranium dioxide with potassium in a platinum crucible. Radioactivity was first discovered in 1896 when the French scientist Henri Becquerel accidentally placed some uranium salts near some paper-wrapped photographic plates and discovered the natural radioactivity of uranium.

Uranium compounds have long been used for centuries to color glass. Uranium trioxide ( $\text{UO}_3$ ) was used in the manufacture of a distinctive orange Fiestaware dinnerware. In 1938, Otto Hahn (1879–1968), Lise Meitner (1878–1968), and Fritz Strassmann (1902–1980) were the first to recognize that the uranium atom under bombardment by neutrons actually split or fissioned.

When a uranium or plutonium atom is fissioned, it releases approximately 200 MeV of energy, while the burning of a carbon (coal) atom releases 4 eV. This difference of 50 million times in energy release shows the tremendous difference in magnitude between chemical and nuclear energy.

Thorium was discovered in 1829 by the Swedish chemist Jons Jacob Berzelius, who named the element after the Thor, the mythical Scandinavian god of war. He also was the first to isolate cerium, selenium, silicon, and zirconium. Thorium and thorium compounds have the properties of having very high melting temperatures. As a result, it was used for high-temperature application such as coatings on tungsten filaments in light bulbs and for high-temperature laboratory equipment. However, its use outside the nuclear fuel cycle has been greatly diminished because of state and federal laws concerning the handling and disposal of radioactive materials. Thorium is found in the minerals monazite and thorianite.

## Geology of Uranium

The earliest recovery of uranium was from pitchblende, an ore with a very high  $\text{UO}_2$  content of up to 70%. Pitchblende also contains radium, thorium, cerium, and lead. It is mostly found with deposits that contain phosphates, arsenates, and vanadates. Uranium exists in nature in two valence states,  $\text{U}^{6+}$  and  $\text{U}^{4+}$ . These properties are key to the geological distribution of uranium.  $\text{U}^{6+}$  is soluble in water but changes to the insoluble  $\text{U}^{4+}$  in a reducing environment. The occurrence of reducing environments in riverbeds and seas has led to the formation of rich uranium deposits. A rich uranium deposit contains 2% uranium, and economic deposits are as low as 0.1%. Once the ore is mined, it is sent to a mill, which is really a chemical plant that extracts the uranium from the ore. The ore arrives via truck and is crushed and leached, and approximately 90–95% of the uranium is recovered through solvent extraction. During the processing, a large waste stream called tails is formed, which contains approximately 98–99.9% of the material mined. Because this waste stream or tails contains

all the radioactive daughter products of uranium, such as radon and radium, this waste stream must be carefully controlled and stabilized. The tailing pile must have a cover designed to control radiological hazards for a minimum of at least 200 years and designed for 1,000 years, to the greatest extent reasonably achievable. It must also limit radon ( ${}^{222}\text{Rn}$ ) releases to 20 pCi/m<sup>2</sup>/s averaged over the disposal area. The end uranium product of the milling process is  $\text{U}_3\text{O}_8$ , better known as “yellowcake,” because of its color.

## Uranium Conversion and Enriching

The  $\text{U}_3\text{O}_8$  concentrate must be both purified and converted to uranium hexafluoride ( $\text{UF}_6$ ), which is the form required for the enriching process. At the conversion facility, the uranium oxide is combined with anhydrous HF and fluorine gas in a series of chemical reactions to form the chemical compound  $\text{UF}_6$ . The product  $\text{UF}_6$  is placed into steel cylinders and shipped as a solid to a gaseous diffusion or gaseous centrifuge plant for enrichment.  $\text{UF}_6$  is a white crystalline solid at room temperature (its triple point is 64 °C (147.3 °F) and it sublimes at 56.5 °C (133.8 °F) at atmospheric pressure). The liquid phase only exists under pressures greater than about 1.5 atm and at temperatures above 64 °C. At the enrichment plant, the solid uranium hexafluoride ( $\text{UF}_6$ ) from the conversion process is heated in its container until it becomes a gas. The container becomes pressurized as the solid melts to form  $\text{UF}_6$  gas that fills the container. The gaseous diffusion process is based on the difference in rates at which the fluorides of U-235 and U-238 diffuse through barriers. The uranium that has penetrated the barrier side is now slightly enriched in U-235 that is withdrawn and fed into the next higher enrichment stage, while the slightly depleted material inside the barrier is recycled back into the next lower stage. It takes many hundreds of stages, one after the other, before the  $\text{UF}_6$  gas contains enough uranium-235 to be used as an enriched fuel in reactor. Each barrier has millions of holes per square inch with each hole approximately  $10^{-7}$  in. in diameter. This gaseous diffusion

enrichment process is very energy intensive, as the gas is compressed and expanded at each stage.

The other commercial enriching process, which uses an order of magnitude less energy, is the gaseous centrifuge process. The gas centrifuge uranium enrichment process uses a large number of rotating cylinders in series and parallel formations. Centrifuge machines are interconnected to form trains and cascades. In this process,  $\text{UF}_6$  gas is placed in a cylinder and rotated at a high speed. This rotation creates a strong centrifugal force so that the heavier gas molecules (containing U-238) move toward the outside of the cylinder and the lighter gas molecules (containing U-235) collect closer to the center. The stream that is slightly enriched in U-235 is withdrawn and fed into the next higher stage, while the slightly depleted stream is recycled back into the next lower stage. At each stage of the gaseous diffusion process, the U-235 is enriched by a factor of 1.004, where at each stage of the gaseous centrifuge process the stage enrichment factor is 1.2. For 1 kg of uranium enriched to 5% U-235, 9.4 kg of natural uranium feed are required and 8.4 kg of depleted uranium (tails) with a U-235 isotope content of approximately 0.2% are produced as a waste stream. Another conversion scheme which is in the research phase is laser enriching in which the electron of a uranium atom is removed by a tuned laser beam making the atom charged and easily removed from the system giving fully enriched uranium-235 as an end product. Such a system, if feasible, would have to have very tight security. The US Nuclear Regulatory Commission has decided that depleted uranium is a low-level waste. The Department of Energy has over 560,000 mt stockpile of uranium tails stored as  $\text{UF}_6$  in steel cylinders. The uranium tails have minor uses as shields for radioactive sources, as the penetrator in armor piercing shells, as a yacht hold ballast, and as a weight for the balancing of helicopter rotor tips and passenger aircraft.

## Nuclear Fuel Fabrication

The enriched  $\text{UF}_6$  is transported to a fuel fabrication plant where the  $\text{UF}_6$ , in solid form in

containers, is again heated to its gaseous form and the  $\text{UF}_6$  gas is chemically processed to form uranium dioxide ( $\text{UO}_2$ ) powder. This powder is then mixed with various additives to enable achievement of the final required fuel pellet density. Additives may be  $\text{U}_3\text{O}_8$ , lubricants, pore formers, and burnable poisons such as gadolinium. The powder is then poured into molds and biaxially pressed with a load of several hundred MPa to a green density of approximately 50–60% dense. These green pellets are then ejected from their molds and are loaded into molybdenum boats. These boats are then loaded into a furnace with heat up, sintering, and cool down stages. The temperature of the sintering stage varies between 1,600 and 1,800 °C. It can take up to 10 h for the pellets to traverse the three sections of the furnace. When the pellets exit the furnace, the pellets should have a uranium density of  $96.5 \pm 2.0\%$  and an oxygen-to-uranium ratio (O/U) greater than or equal to 1.99 and less than or equal to 2.02. These pellets are cylindrical in form with a diameter of approximately 0.32 in., a length of approximately 0.4 in., and a dish and chamfer, top and bottom. The dish and chamfer accommodate fuel pellet expansion and distortion while in operation. Finally, the pellets are then subjected to inspection for chips and cracks, and the pellets are then centerless ground to meet the required diameter. Upon passing the inspections and grinding, the pellets are then loaded into zircaloy tubes, pressurized with helium and sealed. The fuel rods are then placed into an array (17 × 17) which is bound together with guide tubes, spacer grids, and top and bottom end fittings, all of which forms the nuclear fuel assembly. Depending on the type of light-water reactor, a fuel assembly may contain up to 264 fuel rods and have dimensions of 5–6 in. square by about 12 ft long. The fuel is placed into containers and is trucked to the nuclear fuel plants to generate electricity. A single pressurized water fuel assembly contains about 500 kg of enriched uranium and can produce 200,000,000 kWh of electricity. Since the average national electrical yearly use per person is 11,867 kWh, a single nuclear fuel assembly gives 5,562 people their yearly electric needs during its 3 years of operation.

## Nuclear Fuel Operation and Disposal

Every 12–24 months, US nuclear power plants are shut down, and the oldest fuel assemblies are removed (approximately 1/3–1/2) and replaced with new fuel assemblies. The power production of a fuel assembly is measured in MWD/MTU or megawatt days of energy produced per metric ton of uranium (fuel) contained. Currently the normal lifetime of a fuel assembly is 55,000 MWD/MTU, and the maximum lifetime currently allowed by the Nuclear Regulatory Commission is 60,000 MWD/MTU. At the end of its useful life, the spent fuel assembly is placed in a cooled borated water storage pond to allow for removal of the radioactive decay heat. After approximately 5 years of wet storage, the decay heat has been sufficiently decreased that the fuel assembly can be removed to dry storage in concrete or steel containers. Since only approximately 5% of the uranium fuel is destroyed, in Europe and Asia the spent fuel is reprocessed, and the 95% of uranium remaining is recycled, with the 5% of radioactive waste products sent to waste storage. At the current time, the US policy was to store the spent fuel in a waste repository being built at Yucca Mountain in Nevada. Most recently this site has become part of a political struggle, and the current administration has moved to halt all licensing of the Yucca Mountain site and to convene a high-level committee to revisit the question of nuclear waste disposal. The Department of Energy is required by law to be responsible for the spent fuel and collects a fee of 1 mill/kWh of nuclear electricity delivered, which is paid by consumers of nuclear-generated electricity. The one assembly described above would generate approximately \$200,000 in the waste fund for its disposal.

There is enough uranium and thorium in the world to produce the required amount of fuel to allow nuclear plants to produce the current rate of electrical energy usage for the next 1,000 years.

## Future Directions

With the dawn of the environmental awareness and new economies of energy production, the nuclear fuel cycle also is undergoing change. After the Fukushima accident in Japan, research efforts are focused on developing accident-tolerant fuels, in particular, replacing the zircaloy fuel rods which in accidents oxidize and form hydrogen which can form an explosion. Similarly fuels are also being sought which will have a higher thermal conductivity than uranium and will run at much lower temperatures. Research efforts are continuing to find new and more efficient ways to use the fissionable atom. Also, currently operating nuclear plants are becoming more efficient and cost beneficial. With no greenhouse gases to speak of, nuclear energy is bound to play a role in the nation's future energy needs. More than 100 nuclear reactors nationwide now provide almost 20% of US energy production. The large, proven-safe nuclear plants produce electricity best when running at full power, 24/7.

## Bibliography

1. Cochran RG, Tsoulfanidis N (1999) The nuclear fuel cycle: analysis and management. American Nuclear Society, La Grange Park
2. Wilson PD (1996) The nuclear fuel cycle: from ore to waste. Oxford Science, Oxford



## Uranium and Thorium Resources

J. Stephen Herring  
Idaho National Laboratory, Idaho Falls, ID, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
Important Trends and Discoveries  
Current Estimates of Uranium Reserves  
Global Estimates of Overall Uranium and Thorium Resources  
Mechanisms for the Concentration of Uranium  
Unconventional Resources  
New Technologies for Uranium Extraction  
Impact of Uranium Scarcity and Higher Extraction Costs  
Future Directions  
Bibliography

### Glossary

**Cross section** Probability of neutron interaction with a nucleus, expressed in terms of area, in units of barns (b). One barn equals  $1.0 \times 10^{-24} \text{ cm}^2$ .

**Enrichment** The fraction of an isotope, usually fissile  $^{235}\text{U}$ , in a mass of uranium. Enrichment is commonly quoted as the weight percent of the particular isotope. Natural uranium has an enrichment of 0.711 wt%, commercial reactor fuel is 3–5% enriched, and depleted uranium is 0.2–0.3%  $^{235}\text{U}$ .

**Enrichment tails (also depleted uranium)** The uranium remaining after the enrichment of natural uranium into fuel, today about 0.3%  $^{235}\text{U}$  and earlier 0.2–0.25%  $^{235}\text{U}$ .

J. Stephen Herring has retired.

**Fractionation** Crystallization from a magma in which the initial crystals are prevented from equilibrating from the parent liquid, resulting in a series of residual liquids of more extreme composition than would have resulted from continuous reaction [1].

**Geoneutrino** An electron antineutrino emitted within the Earth in the  $\beta$ -decay of  $^{232}\text{Th}$ ,  $^{238}\text{U}$ , or  $^{40}\text{K}$  and their decay product nuclei.

**Highly enriched uranium (HEU)** Uranium containing more than 20 wt%  $^{235}\text{U}$ .

**J<sub>th</sub>** Joule (i.e., watt-second) thermal. One British thermal unit (BTU) equals 1,055 J<sub>th</sub>.

**Low-enriched uranium (LEU)** Uranium containing less than 20 wt%  $^{235}\text{U}$ .

**Log-normal distribution** A distribution of the form  $f(x) = e^{-(\ln x)^2}$ . In the present usage, the tonnage of an element available at concentration c, T(c), is given by  $T(c) = C_1 e^{-(\ln c_o - \ln c)^2}$ , where c<sub>o</sub> is the average crustal abundance and C<sub>1</sub> is a constant.

**Mafic** Composed chiefly of dark ferromagnesian minerals.

**MOX** Mixed oxide fuel, usually consisting of a ceramic mixture of uranium dioxide and plutonium dioxide.

**MSWU** Mega-separative work unit, a million separative work units. A separative work unit is the separative work that must be done to one kilogram of a mixture of isotopes to change its separation potential by one unit. The separation potential, a dimensionless function, is defined by  $\phi(x_k) = (2x_k - 1)\ln \frac{x_k}{1-x_k}$ , where x<sub>k</sub> is the atomic fraction of the isotope, k. See Benedict [2], p. 667, for a more complete definition [2].

**Pegmatite** An exceptionally coarse-grained igneous rock, with interlocking crystals, often found at the margins of batholiths.

**Placer** A mineral deposit at the surface formed by sedimentary concentration of heavy mineral particles from weathered debris.

**Quad** Quadrillion (i.e.,  $10^{15}$ , also written 1E15) British thermal units. One quad =  $1.055 \times 10^{18} \text{ J}_{\text{th}}$ .

**t** Metric ton, also used in **Mt**, million metric tons, and **Tt**, trillion metric tons (teratons).

**Unconformity** A break or gap in the geologic record, such as an interruption in the normal sequence of deposition of sedimentary rocks, or a break between eroded metamorphic rocks and younger sedimentary strata [1].

**Yellowcake** A concentrate of uranium ore, containing 80–90% U<sub>3</sub>O<sub>8</sub>. Yellowcake ranges from yellow to black, depending on impurities, processing temperature, and degree of hydration [3]. Although uranium prices are sometimes colloquially cited as “dollars per pound of yellowcake,” the actual prices are \$ per lb of U<sub>3</sub>O<sub>8</sub>, where all of the uranium are assumed to be present in the yellowcake as that of oxide.

## Definition of the Subject

Uranium is a widely distributed element which is essential, at least in the near term, to the use of nuclear fission as a source of energy. Uranium is ubiquitous in the Earth because of the wide variety of minerals in which it can occur and because of the variety of geophysical and geochemical processes that have transported it since the primordial formation of the Earth from the debris of supernovae. Uranium is approximately as common in the Earth’s crust as tin or beryllium and is a minor constituent in most rocks and in seawater. The average crustal abundance of uranium is 2.76 weight parts per million (wppm), higher than the average concentrations of such economically important elements as molybdenum (1.5 wppm), iodine (0.5 wppm), mercury (0.08 wppm), silver (0.07 wppm), and gold (0.004 wppm).

## Introduction

Beginning with the discovery of nuclear fission, uranium has been seen as a valuable but scarce resource. Uranium-235 (<sup>235</sup>U) is the only naturally occurring isotope that can be made to fission with thermal neutrons. Consequently, the resources of uranium have been believed to

inherently limit the sustainability of nuclear energy. There have been two periods of extensive exploration for uranium, in the 1950s and in the 1970s, both followed by long periods of severe contraction in the market and in exploration activity. With the peak of uranium prices to about \$350/kg in 2007, there was an increased effort in exploration. However, that exploration quickly resulted in increased known reserves in several deposits and the return of prices to about \$140/kg. Today, exploration activity is at a moderate level for several reasons: (1) deposits found during earlier exploration periods have proven to be larger than initially estimated; (2) nuclear energy is growing, but not as rapidly as earlier forecast, due to both competition from natural gas and due to concerns regarding nuclear reactor safety following the Fukushima tsunami; and (3) improved nuclear fuel management techniques and materials are allowing higher burnup and longer operating cycles. Beginning in 1993, the dilution (“downblending”) of highly enriched uranium of military origin for civilian purposes has postponed the need for large amounts of newly mined natural uranium. The US-Russia HEU Agreement, under which 500 t of Russian HEU were downblended to 3–5% enrichment and used in US commercial reactors, expired in 2013.

The concern that uranium would soon be exhausted was one of the driving forces in the development of fast breeder reactors, particularly in the 1960s and 1970s. Fast breeder reactors convert the fertile isotope <sup>238</sup>U into the fissile isotope <sup>239</sup>Pu. These concerns also led to the development of thermal breeder reactors capable of converting thorium into the fissile, but not naturally occurring, isotope <sup>233</sup>U. Thorium, consisting almost entirely of the isotope <sup>232</sup>Th, is about four times more abundant than uranium and thus may represent a source of nuclear fuel in the distant future.

## Important Trends and Discoveries

However, concerns for the long-term sufficiency of uranium resources have been steadily reduced

over the last 50 years. The uranium mined to supply fuel for the first 40 years following the discovery of fission came primarily from deposits caused by changes in the pH and oxygen content of groundwater and the precipitation of  $\text{U}_3\text{O}_8$ . In 1975, however, the Western Mining Corporation discovered the Olympic Dam deposit in South Australia [4]. The Western Mining was not exploring specifically for uranium but for copper. The deposit which they found has since been termed an iron oxide-copper-gold (IOCG) deposit, though these ore bodies contain substantial amounts of silver, uranium, and light rare earth elements. Today, Olympic Dam, with about two million tons of uranium reserves, represents about a third of the known uranium reserves worldwide. In addition, because the uranium is a coproduct with copper, gold, silver, and iron, the supply is more stable than would be the case for a uranium-only mine. Though the term “IOCG” is still only loosely defined, these deposits represent a new geochemistry in which iron oxide, either as magnetite or hematite, is the dominant gangue mineral. Other IOCG deposits have been identified in Australia, Peru, Brazil, Chile, Mongolia, and Sweden (Ref. [4]).

Our understanding of the astrophysical nucleosynthetic processes occurring during the collapse of a supernova has progressed in the last 25 years both through spectroscopic observations of the interstellar dust that is eventually accreted into planets and through simulations of the nuclear processes during the collapse. Since these supernova events are the source of all elements heavier than nickel, these observations and simulations can provide estimates of the constituents that formed the Earth.

Geoneutrino detectors built in deep underground locations around the world have measured the flux of electron antineutrinos emitted in the decay of uranium and thorium within the Earth. Geoneutrino detectors have been built and operated at Kamioka Large Antineutrino Detector (KamLAND) in Japan and at Borexino in Italy [5]. These scintillators, which typically detect only about one neutrino per day in a thousand-ton detector, indicate the total uranium and

thorium content of the Earth, but not the location of those elements. The primary purpose of the measurements has been to estimate the proportion of heat due to radioactive decay and that due to the gravitational energy deposited in the formation of the Earth from a very diffuse cloud of nebular dust. The sum of the radiogenic and gravitational heat is about  $47 \pm 2 \text{ TW}_{\text{th}}$  [6], and the radiogenic heat produced from the crust has been estimated by Huang et al. [7] at  $6.8^{+1.4/-1.1} \text{ TW}_{\text{th}}$ . This radiogenic crustal heating corresponds to a crustal uranium inventory of  $34 \text{ Tt}_{\text{U}}$ .

Thermal gradients in the continental crust are dependent on both heat emanating from the mantle and core of the Earth and heat released by heat-producing isotopes within the crust. Temperature measurements as a function of depth in conjunction with measurements of the thermal conductivity of local minerals have indicated that the average continental crustal abundance of uranium, 2.76 wppm at the surface, decreases exponentially with an e-folding distance (“depth parameter”) of 7,100–10,000 m. If we assume an average depth parameter of 8,500 m, then 11% of continental crustal inventory is within 1,000 m of the surface. Of course, further geochemical concentration is necessary to raise the local uranium concentrations from the average to economically attractive values.

Uranium is present in the seawater at a fairly uniform concentration of 3 wppb. Simple calculations can indicate that this concentration is insufficient to warrant pumping seawater through an extraction plant. Various groups have, however, developed surface ligands for polyethylene fibers that effectively chelate uranium ions from seawater. The buoyant fibers, gathered together into loose bundles, are about 40 m long and anchored at a depth of 100 m, allowing 60 m for the passage of ships. The bundles of fibers are immersed for  $\sim 90$  days, at which time the dry weight of the fibers is  $\sim 0.1\%$  uranium. The bundles are then winched aboard a service ship where the uranium is eluted with an acid solution, after which the bundles are returned to the sea. The estimated life cycle cost of the uranium recovered in this scenario is about \$600/kg U, though more

pessimistic assumptions concerning fiber/ligand lifetime, handling costs, and extraction rates indicate costs of order \$1,000/kg U.

While \$600 or \$1,000/kg U is well above current uranium prices, the cost of uranium from seawater serves to place an upper limit on future prices for nuclear fuel, firstly, because the inventory in the oceans is immense ( $\sim 4.2 \text{ Gt}_U$ ) and, secondly, because only 3% of the global population lives in landlocked countries. Thus, no country or international cartel can monopolize the uranium market, as has been the case with petroleum. The control of intellectual property concerning extraction technology can form a barrier to entry, but there is already a great deal of information in the open literature.

Thus, considering these trends and discoveries, one can have confidence that uranium and thorium will not be a limitation to the sustainability of nuclear energy. We do not know today the exact locations of the ore bodies containing future sources of uranium and thorium, but the global measurements of supernova nucleosynthesis, geoneutrinos, and thermal gradients discussed in this entry indicate that those sources are very likely to exist. Furthermore, it is not necessary that we know those precise locations today since the fuel itself will not be needed for several centuries.

### Current Estimates of Uranium Reserves

The importance of the overall uranium and thorium resource is demonstrated by the attention given to the estimates by such international agencies as the International Atomic Energy Agency (IAEA) and the Nuclear Energy Agency (NEA) of the Organisation for Economic Co-operation and Development (OECD). The estimates of these organizations are based on information provided by the member states and backed by research from others. The results are regularly compiled in the “Red Book” [8].

However, the estimates of uranium resources in the Red Book are based on the known and

expected reserves that can be economically extracted using present or near-future technology. Because of the wide range of uranium concentrations in various minerals, the cost of extraction serves as the independent variable against which resources are estimated. Any reported amount of reserves/resources should be accompanied by the estimated cost of recovery of those reserves.

The Red Book 2014 estimates the economically recoverable uranium reserves based on current and prospective mining projects. Total Identified Resources (Reasonably Assured and Inferred) as of January 2013 are 5.9 million metric tons (Mt) of uranium of the best-proven category recoverable worldwide at a marginal cost of  $< \$130$  per kilogram of uranium metal. When the high-cost category (between \$130 and \$260 per kg of U metal) is added, the total identified resources are estimated to be 7.6 Mt. The Red Book also reports “total undiscovered resources (prognosticated resources and speculative resources),” but these estimates have become unclear because several major producing countries’ estimates of undiscovered resources either are not reported or have not been updated for several years.

The 2013 consumption of natural uranium by the 435 reactors worldwide was 66,000 t, and consequently, these total identified resources could be expected to last about 90 years at current rates. These ratios of identified and speculative resources to consumption rate are longer than those for nearly all metals and fossil fuels, with the exception of coal.

Low market prices, the slow growth of nuclear power, and the downblending of highly enriched uranium (HEU) have in the past resulted in both very low levels of exploration and little effort in the development of advanced extraction technologies. The discovery of additional total identified resources has shown a strong correlation with exploration expenditures, averaging 0.65 kg of additional resources per exploration dollar from 1987 to 2005 and 1.45 kg/exploration dollar from 2005 to 2013, following the uranium price

increases after 2005 [9]. Those transient price increases led to an increase in the average annual expenditures for exploration and mine development from \$127 million/year for 1987–2005 to \$1.92 billion/year for 2012.

It is important to note that uranium today is used overwhelmingly in the light water reactor fuel cycle, where only about 1.1–1.5% of the ultimate energy of the mined uranium is extracted via fissioning of  $^{235}\text{U}$  and the small amounts of  $^{239}\text{Pu}$  bred in situ. The rest of the uranium remains either in the used fuel or in the depleted uranium tails remaining after enrichment. Of the 2.5 Mt of uranium mined worldwide since 1945, the location of all but about 1,500 t is known. Only the location of that uranium dispersed either in nuclear explosions or as armor-piercing projectiles is not known. The inventory of used fuel and of depleted uranium represents a very significant resource that could become fuel for fast breeder reactors.

While uranium is an essential input for the production of nuclear energy, the costs of natural uranium are a minor component of the overall cost. Today, at uranium prices of about \$85/kg U (\$32 per lb of  $\text{U}_3\text{O}_8$ ), the natural uranium required for the light water reactor (LWR) fuel cycle is responsible for only about 2–3% of generating costs. The fuel cost is 15–20% of the generating costs, but those costs include conversion of the uranium ore to  $\text{UF}_6$ , enrichment of the natural uranium, production of the ceramic  $\text{UO}_2$  fuel pellets, and fabrication of the fuel assemblies. A tenfold increase in the cost of natural uranium would not be welcome, but would not fundamentally change the economics of nuclear power. A tenfold increase in uranium prices would, at first estimate, be expected to increase the cost of nuclear electricity by 25–30%. However, a more detailed calculation, optimizing the  $^{235}\text{U}$  content of the depleted uranium tails and adjusting fuel management for a higher-priced resource, would result in an increase in the cost of electricity significantly less than 20%.

This entry discusses uranium resources in a global sense, beyond the official estimates. As

an introduction to that discussion, the origins of the Earth's present inventory of uranium, the geophysical and geochemical processes that serve to concentrate uranium into economically viable deposits, and the technologies now being used for the extraction and concentration of uranium ores are described. Finally, the potential impacts of technologies now under development and the overall impact of the cost of uranium on the cost of energy from nuclear fission will be reviewed.

### Thorium as a Nuclear Fuel

For the foreseeable future, uranium will probably continue to be the only source of nuclear energy. Nevertheless, for completeness, thorium resources should also be considered because of thorium's unique characteristics as a nuclear fuel. There are basically four reasons for considering thorium resources within the overall discussion of nuclear fuel resources. First, thorium is about 3.9 times more abundant than uranium, on a mass basis, as indicated both by samples of the continental crust and by spectroscopy of supernova debris, from which planets are formed. Secondly, because similarities of the geochemistry and mineralogy of thorium and the lanthanides, thorium and the lanthanides (often called the "rare earth elements") are often found in the same ore bodies. Since the lanthanides are of increasing technical and strategic importance due to their widespread use in magnets and electronics, thorium is often treated as a waste since it has only a small market and since it is radioactive. Thus, research on the efficient separation and purification of thorium could enhance both rare earth and thorium resources. Third, thorium can be directly substituted in the  $\text{UO}_2$  crystal, making it a long-term supplement for uranium for in situ  $^{233}\text{U}$  breeding. Thorium, as  $\text{ThF}_4$ , can also be used in the molten salt reactor in combination with  $\text{UF}_4$ , where the uranium would be a mixture of  $^{233}\text{U}$ ,  $^{235}\text{U}$ , and  $^{238}\text{U}$ . Finally, because thorium has only one oxide,  $\text{ThO}_2$ , which has high thermal stability, it can serve as a very robust matrix for actinide

transmutation, after which the  $\text{ThO}_2$  would serve as the waste form for the transmutation targets.

Thorium averages 12 ppm in the Earth's crust and is the 39th most abundant of the 78 crustal elements. Soil commonly contains an average of 6 wppm of thorium. When thorium is used as a nuclear fuel, much less plutonium and other minor transuranics (i.e., neptunium, americium, curium, berkelium, etc.) are produced than are produced in uranium fuel cycles. The reduced production of transuranics occurs for two reasons. First, the fissile product of neutron absorption by  $^{232}\text{Th}$  is  $^{233}\text{U}$ , which is further down the actinide series from plutonium and the minor actinides, and secondly, the fission to capture ratio of  $^{233}\text{U}$  is approximately nine, while that of  $^{239}\text{Pu}$  is about three, thus resulting in lower production of the transuranics by  $^{233}\text{U}$ .

The generation of thorium deposits occurs in a fundamentally different manner from deposits of uranium. Uranium has some nine oxides and is dissolved or precipitated depending on the oxygen content and pH of the groundwater. Thus, deposits are often formed where there is a decrease in the oxygen content of groundwater. Thorium, on the other hand, has only one oxide,  $\text{ThO}_2$ , which is very refractory and insoluble. Thus, thoria (along with many of the lanthanide oxides) is not dissolved in erosion by groundwater and flowing rivers. The surviving grains, containing the thoria from the base rock, form into alluvial deposits of monazite sands.

Thorium occurs as the ores thoriatite ( $\text{ThO}_2$ ), thorite ( $\text{ThSiO}_4$ ), and mainly monazite ((Ce, La, Nd, Th) $\text{PO}_4$ ). Thorium and its compounds have been produced primarily as a by-product of the recovery of titanium, zirconium, tin, and rare earths from monazite, which contains 6–8.5 wt% thorium oxide. Only a small portion of the thorium produced is consumed. The limited demand for thorium, relative to the demand for rare earths, has continued to create a worldwide oversupply of thorium compounds and mining residues. Most major rare earth processors have switched feed materials to thorium-free intermediate compounds to avoid the handling of radioactive thorium. Excess thorium not designated for commercial

use is either disposed of as a radioactive waste or stored for potential use as a nuclear fuel or other applications. Increased costs to comply with environmental regulations and potential legal liabilities and costs to purchase storage and waste disposal space were the principal deterrents to its commercial use. Health concerns associated with thorium's natural radioactivity have been a significant factor in switching to alternative nonradioactive materials. US consumption of thorium, all for nonenergy uses, has decreased from 11.4 t (thorium content) to 0.7 t since 1997. The principal applications of thorium today make use of the very high melting point of  $\text{ThO}_2$  (3,300 °C, the highest of all binary oxides) and of the electron-emitting capability of thorium when alloyed with tungsten for use in filaments for high-powered magnetrons for radar.

In the short term, thorium is available for the cost of extraction from rare earth processing wastes. In the longer term, large resources of thorium are available in known monazite deposits in India, Brazil, China, Malaysia, and Sri Lanka. The world total thorium resources identified and prognosticated amounts to 3.6 million t Th. Though reported values vary because of the difficulty in measuring such low concentrations,  $^{232}\text{Th}$  is present in seawater at only about 0.050 wppb, due primarily to the insoluble nature of its only oxide,  $\text{ThO}_2$ . Thus, the recovery of thorium from seawater is not a realistic option.

Because  $^{232}\text{Th}$  is the only isotope of natural thorium, there are no enrichment plant tails from thorium nuclear fuel. Therefore, the cost of thorium in a mixed thorium-uranium LWR fuel or in a pure thorium- $^{233}\text{U}$  fuel cycle is relatively small. However, the cost of chemical processing of  $\text{ThO}_2$ -based fuel and the separation of  $^{233}\text{U}$  is significant.


### Energy Content of Uranium and Thorium

Uranium has 18 known isotopes, none of which are stable and only two of which have half-lives longer than a million years,  $^{235}\text{U}$  (704 million years) and  $^{238}\text{U}$  (4.47 billion years). Only  $^{235}\text{U}$ , which is about 0.711 wt% (0.720 atom%) of natural uranium, is fissile, i.e., will fission using

thermal (i.e., low velocity) neutrons. Uranium-238, which is by far the dominant isotope at 99.2745 wt%, will fission if struck by high-energy neutrons. However,  $^{235}\text{U}$  is the only naturally occurring isotope of any element capable of

sustaining a neutron chain reaction in a suitably designed reactor.

$^{238}\text{U}$  is a fertile isotope and can be transformed into  $^{239}\text{Pu}$  through the capture of a neutron and two subsequent beta decays, as shown in the following reaction:

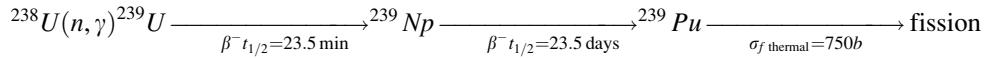



---

where  $\beta^-$  indicates a beta decay with electron emission and  $\sigma_f$  thermal is the fission cross section in barns at a neutron energy of 0.025 eV.

Thorium has 25 isotopes, of which only the non-fissile isotope  $^{232}\text{Th}$  is long-lived, with a

half-life of 14 billion years. However, in the reaction shown below,  $^{232}\text{Th}$  can be transmuted into  $^{233}\text{U}$ , a fissile isotope:

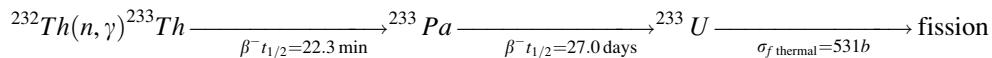


---

The fission energy of  $^{233}\text{U}$  is 190 MeV and that of  $^{239}\text{Pu}$  is 200 MeV. If one kilogram of thorium were bred into  $^{233}\text{U}$ , the fission energy available would be  $78.9 \times 10^{12} \text{ J}_{\text{thermal}}$  (78.9 TJ<sub>th</sub>). The fission energy in one kilogram of natural uranium, bred to  $^{239}\text{Pu}$ , is 80.4 TJ<sub>th</sub>. Thus, thorium and uranium are quite similar in maximum energy content, but uranium is far more important in the near term because  $^{235}\text{U}$  is a naturally occurring fissile isotope.

Thorium. In contrast, exposure of fossil fuels to the oxygen in the atmosphere or to volcanic activity releases the energy stored in their chemical bonds. The vast majority of the solar energy originally stored in fossil fuels through photosynthesis of the source biomass has been lost in chemical reactions with the atmosphere, groundwater, and lava.

A second, less obvious, characteristic of uranium and thorium is that they are constantly signaling their presence via the products of radioactive decay. We are all familiar with pictures of the prospector with a Geiger counter searching for uranium. Gamma rays and beta particles can be detected with a handheld instrument if the uranium ore is at the surface. However, even as little as a meter of overlying soil will shield the gammas and beta particles from the counter. Therefore, any ore deposits more than a meter below the surface will have to be detected through well logs or core samples or via their gravitational or magnetic signatures, rather than through their radiation.

## Global Estimates of Overall Uranium and Thorium Resources

Uranium and thorium have two unique characteristics when compared with other fuels. First, their energy is contained in the nucleus, rather than in the chemical bonds between the atoms, as is the case with fossil fuels. Thus, chemical reactions within the Earth, due to pressure, high temperatures, or the presence of oxygen, have no effect on the nuclear energy available from uranium or

## Astrophysical Origins of Uranium


Uranium, thorium, and all other elements heavier than nickel result from the sudden collapse of massive stars as supernovae. The lifetime of stars and the results of these gravity-driven implosions are very dependent on the stars' initial mass. A star having the mass of our sun lasts for about 10 billion years but can only produce elements up to iron. A star having ten solar masses lasts for only 10 million years until it explodes as a supernova, producing all the elements in the periodic table.

The groundbreaking work by Burbidge, Burbidge, Fowler, and Hoyle [10] led to the realization that all of the elements heavier than nickel are the result of less than a minute of tremendous neutrino and neutron fluxes during the collapse and explosion of a supernova [11]. The nuclide distribution as a function of time in a supernova has been simulated [12] and indicates that isotopes with the maximum number of neutrons ("the neutron drip edge") form during a few seconds of intense activity at the center of the imploding supernova. From this nuclear modeling of a

supernova explosion, we can infer that uranium and thorium are about seven orders of magnitude below silicon in the composition of the supernova debris – the material from which planets are formed. This is in rough agreement with bulk silicate Earth (BSE) model, shown in Fig. 1.

Earlier studies are also in agreement. Urey cites estimates by Goldschmidt of the primordial abundance of 41 weight parts per billion (wppb) for uranium and 106 wppb for thorium. Alpher's theoretical curves and Harrison S. Brown's observed astrophysical data show uranium approximately 6.5 orders of magnitude less abundant than silicon, resulting in a primordial abundances of 57 wppb. Deffeyes, accounting for the decay of uranium since the expansion of the primordial neutron gas, estimates global uranium abundance at 10.5 wppb [13].

Recent work on the physics of supernova collapse offers some insight into the expected global inventories of uranium and thorium. During the last few minutes of such a massive star's evolution, hydrogen, helium, and all of the elements lighter than nickel at the center of the star are

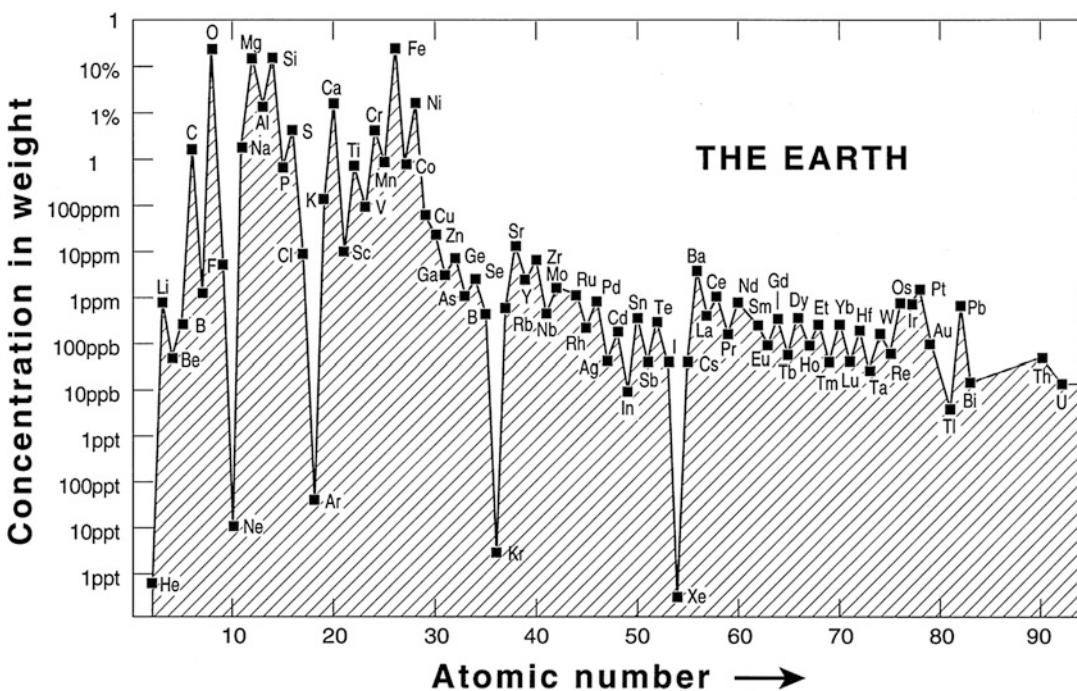

**Uranium and Thorium Resources, Fig. 1** Composition of the bulk silicate Earth

depleted through fusion reactions. With no more energy available for continued fusion reactions, the center cannot withstand the outer shells of material, and the matter in the center is compressed to a degenerate state in which the matter is broken into the constituent particles, primarily neutrons and neutrinos. The torrent of neutrons from the center of the supernova irradiates the in-falling outer layers of stellar material, producing heavier isotopes at a rate faster than the radioactive decay of those isotopes. The result is the production of isotopes stretching from nickel through uranium and beyond, all saturated with neutrons.

This type of supernova explosion is estimated to occur, somewhere in the universe, at the rate of one per second. Obviously, most such explosions are too distant or masked by dust clouds and are not detected from the Earth. Since the beginning of the universe, some interstellar material has gone through multiple cycles of collapse, explosion, dispersal, and accretion into new stars.

The hydrodynamic instabilities of the implosion result in a wide variation in the shapes of the resulting nebulae. Nevertheless, neutron transport and reaction codes have been developed to estimate the distribution of isotopes resulting from a supernova implosion. Wanajo and others [12] have modeled the first few seconds of isotope production and shown that the uranium mass should be about seven orders of magnitude less than that of silicon. Since the chemical and planetary accretion characteristics of silicon, uranium, and thorium are similar, and since the Earth is about 10% silicon, one would expect that the overall concentration of uranium in the Earth is about 10 wppb. The geoneutrino data from KamLAND and from newer detectors indicate that the global uranium inventory is, in fact, about 10 wppb.

Therefore, based on these astrophysical models, it is fairly clear that the Earth, taken as a uniform body, contains about 10 wppb uranium and about 40 wppb thorium. Stated in other terms, the present global inventory is thus 63 Tt ( $63 \times 10^{12}$  t) of uranium and approximately 400 Tt of thorium. Although this inventory is a vast amount of both elements, if uranium and

thorium had a uniform distribution throughout the Earth, as assumed in the cold accretion model, concentrations of uranium and thorium would be far too small to be economically extracted.

### Geoneutrino Estimates of Uranium and Thorium

In the last 20 years, however, another decay product of the 4.5 billion-year half-life of  $^{238}\text{U}$  and the 14.2 billion-year half-life of  $^{232}\text{Th}$  has been used to estimate the total global inventory of uranium and thorium. These particles, called neutrinos, are extremely difficult to detect, and most neutrinos pass completely through the Earth without interacting. Thus, neutrino detectors are usually a thousand tons in mass and must be located deep underground to avoid unwanted signals caused by cosmic rays.

Neutrinos occur in three types: electron, muon, and tau. Each of the three types has a corresponding antineutrino. Neutrinos originating within the Earth, termed *geoneutrinos*, are actually electron antineutrinos primarily resulting from the decay of  $^{40}\text{K}$ ,  $^{238}\text{U}$ , and  $^{232}\text{Th}$ . Geoneutrinos provide a means for estimating the total uranium and thorium content of the Earth and also may provide limited information on the location of those resources. These elementary particles have been measured over the past decade by massive detectors in Japan, Canada, and Europe in an effort to differentiate the radiogenic and gravitational components of the total geothermal energy flux through the Earth's surface [14]. Neutrino and antineutrino fluxes have also been measured to understand neutrino oscillations and to investigate solar fusion processes and as a first signal of supernova events. Neutrinos (and antineutrinos) travel close to the speed of light, have a small mass (<2 eV), and lack an electric charge. When an electron antineutrino collides with a proton, the result is a neutron and a positron (i.e., an antielectron). This reaction, known as the neutron inverse  $\beta$ -decay, was used in the first detection of the neutrino in the Cowan-Reines experiment of 1956. Following the neutron inverse  $\beta$ -decay, the positron reacts with a nearby electron to produce two 511 keV gamma rays. The

neutron is absorbed by a hydrogen nucleus, releasing a characteristic 2.2 MeV gamma with a mean delay of  $\sim 200$   $\mu$ s. Circuitry in the detector registers a neutrino event through the delayed emission of a 2.2 MeV gamma following two 511 keV gammas.

The Kamioka Large Antineutrino Detector (KamLAND), in central Japan, consists of an 18 m diameter spherical vessel which in turn contains a 13 m diameter nylon balloon. The balloon contains approximately 1,000 metric tons of a liquid scintillator (mineral oil, benzene, and fluorescent compounds). The volume between the balloon and the spherical vessel contains highly purified oil which shields the balloon from external radiation and provides buoyancy to support the liquid scintillator. About 1,900 photomultiplier tubes are mounted on the inner surface of the spherical vessel. Surrounding the spherical vessel is a water Cherenkov detector which provides additional shielding and acts as a muon veto counter.

The decay chain of  $^{238}\text{U}$  into  $^{206}\text{Pb}$  results in six antineutrinos, one antineutrino for each beta decay. Similarly, the decay of  $^{232}\text{Th}$  in  $^{208}\text{Pb}$  results in four antineutrinos [15]. Because the neutron inverse  $\beta$ -decay requires an electron antineutrino threshold energy of 1.80 MeV, KamLAND cannot detect  $^{40}\text{K}$  antineutrinos, but antineutrinos from both  $^{238}\text{U}$  and  $^{232}\text{Th}$  are within the range of this instrument.

Thermal models of the Earth point to inevitable melting of the Earth soon after its accretion due to gravitation energy and due to radioactive decay of uranium, thorium, and potassium. Because of its large ionic size and heating due to radioactive decay, uranium is transferred into low-melting temperature fractions and out of the Earth's core and mantle into the crust. These geochemical and geophysical models predict that two thirds of initial 63 Tt of uranium present in the Earth are now concentrated in the crust, which constitutes only 0.4% of the Earth's total mass. The low uranium and high iron concentrations predicted for the Earth's mantle and core have been supported by concentrations in iron meteorites and in the mantle issuing from oceanic spreading zones (0.1 ppm U), compared with U concentrations in the magma and crust in subduction zones (2 ppm U).

Preliminary results from the newer antineutrino detector Borexino at Gran Sasso in the Apennines [18] generally confirm the KamLAND results but indicate a geoneutrino flux 60% higher. Because of very low radioactive contamination in the materials of construction for Borexino, a signal-to-noise ratio of 50:1 was achieved. This greater sensitivity allowed the Borexino researchers to place an upper bound on the power of any critical fissioning zones in the core at 3 TW, significantly below the indicated global radiogenic heat production of about 18 T-W. Collection of geoneutrino data by Borexino is continuing.

Geoneutrino data collected to date indicates that the uranium content of the Earth is several orders of magnitude greater than conventional resource estimates. Limited geoneutrino data and an understanding of geochemical processes suggest that most of that uranium content is in the upper continental crust. This data provides some confidence that, with further local exploration or advanced extraction technologies, sufficient uranium could be found for several centuries of expanded nuclear power (Tables 1 and 2).

The overall results of the KamLAND geoneutrino study [14, 16] show that the sum of the U and Th inventory is  $3 \times 10^{17}$  kg, and since the global Th/U mass ratio is 3.9, the global U inventory is  $6 \times 10^{16}$  kg or 10 ppb of the mass of the Earth, in agreement with the supernova production ratio with silicon. Further note that the geoneutrino signal indicates that the majority of the uranium is in the upper continental crust and that relatively little of the inventory is in the oceanic crust. The partitioning of the uranium into the UCC via geochemical process is discussed in the next section.

## Mechanisms for the Concentration of Uranium

Unlike other energy resources such as coal or petroleum, the resources of uranium are not fundamentally changed by geological processes. Whereas petroleum might be lost through evaporation or combustion or a natural gas reservoir

**Uranium and Thorium Resources, Table 1** The main properties of geoneutrinos

Decay	Q [MeV]	$\tau_{1/2}$ [ $10^9$ year]	$E_{\max}$ [MeV]	$\varepsilon_H$ [W/kg]	$\varepsilon_{\bar{\nu}_e}$ [kg $^{-1}$ s $^{-1}$ ]
$^{238}\text{U} \rightarrow ^{206}\text{Pb} + ^8\text{He} + 6e + 6\bar{\nu}_e$	51.7	4.47	3.26	$0.95 \times 10^{-4}$	$7.41 \times 10^7$
$^{232}\text{Th} \rightarrow ^{208}\text{Pb} + ^4\text{He} + 4e + 4\bar{\nu}_e$	42.7	14.0	2.25	$0.27 \times 10^{-4}$	$1.63 \times 10^7$
$^{40}\text{K} \rightarrow ^{40}\text{Ca} + e + \bar{\nu}_e$	1.32	1.28	1.31	$0.36 \times 10^{-8}$	$2.69 \times 10^4$

$\bar{\nu}_e$  denotes electron antineutrinos

where:

Q is the energy release for the overall decay chain.

$\tau_{1/2}$  is the half-life of the parent isotope.

$E_{\max}$  is the maximum antineutrino energy in the decay chain.

$\varepsilon_H$  is the heating rate, per kg of the parent isotope.

$\varepsilon_{\bar{\nu}_e}$  is the electron antineutrino source rate, per kg of the parent isotope.

**Uranium and Thorium Resources, Table 2** U, Th, and K global inventories, radiogenic heating, and neutrino luminosities according to the bulk silicate Earth (BSE) model

	$m$ [ $10^{17}$ kg]	$H_R$ [ $10^{12}$ W]	$L_v$ [ $10^{24}$ s $^{-1}$ ]
U	0.8	7.6	5.9
Th	3.1	8.5	5.0
$^{40}\text{K}$	0.8	3.3	21.6

may vent into the atmosphere, uranium is lost only through radioactive decay or through the relatively rare formation of a natural reactor. Therefore, the primordial inventory of uranium, reduced by radioactive decay, remains present somewhere in the Earth. The crucial question is “where.”

The natural distribution of elements in the Earth’s crust is controlled by two major factors. The first is the set of ambient geological fractionating processes that leads to regions of depletion and concentration of the element. The second factor includes the overall geochemical characteristics of the element. Elements that are concentrated by a small number of fractionation processes can be expected to have a multimodal distribution, with a peak in the tonnage versus grade curve for each of the modes of geochemical concentration. For elements having a large number of applicable concentration processes, the peaks overlap and the resulting tonnage versus grade curve takes on a log-normal

characteristic. For example, the element chromium, whose distribution at high concentrations is solely governed by fractional crystallization in mafic magmas (i.e., high in magnesium and iron), one would expect a bimodal distribution of concentrations, with one peak at the average crustal abundance and the high concentration peak at the mafic fractionation concentration. On the other hand, most elements, uranium included, can undergo a wide variety of fractionating processes and deposits would be expected over a wide range of concentrations. In this latter case, the tonnage versus grade distribution would be expected to be log-normal. Bear in mind that geological conditions change over time and therefore the distribution patterns have varied with time.

In considering uranium in particular, it is important to examine the tectonic and igneous processes that have redistributed the uranium within the crust. In the past four billion years, the most important processes are continental accretion and plate tectonics. In the accretion process, the crust formed into masses of continental dimensions. In the second, continuing, process, the continental crust and the oceanic crust have taken on quite different characteristics in terms of uranium concentration.

### Igneous Processes

Igneous processes begin with the melting of mantle rocks at depths of 60–200 km, followed by the migration of less dense liquids to the surface. The migration of these less dense minerals to the

surface is a predominant process in the formation of the continental crust. The extruded liquid forms crust in two general locations, at mid-oceanic ridges, where the upwelling material forms new oceanic crust and in subduction zones, where the oceanic crust plunges back into the mantle, usually passing under the edge of a continent.

The behavior of uranium in igneous processes is dominated by two characteristics of the element. In the +4 oxidation state, the condition expected in the Earth's mantle, the  $\text{U}^{+4}$  ion has an ionic radius of  $97 \times 10^{-12}$  m (picometers, pm) about the same as  $\text{Na}^{+1}$  ion (97 pm). Other ions common in the core and mantle are significantly smaller in radius:  $\text{Fe}^{+2}$ , 74 pm;  $\text{Ni}^{+2}$ , 69 pm,  $\text{Mg}^{+2}$ , 66 pm; and  $\text{Al}^{+3}$ , 51 pm. Thus, like sodium and other large ions, uranium ions selectively enter partial melts within the mantle and are transported to the surface.

The second characteristic of uranium is its radioactivity, serving as a source of heat for melting the mantle and core. Like  $\text{Th}^{+4}$  (ionic radius 102 pm) and  $\text{K}^{+1}$  (133 pm), these heat-producing elements are readily fractionated out of the mantle and toward the surface. Deffeyes notes that the Earth would be a radically different place if the heat-producing elements had small radii, since the geothermal energy source would then be located deep within the core and the convection currents driving plate tectonics would be much stronger [19].

The rocks forming the oceanic crust at mid-oceanic ridges are characterized by a uniform uranium concentration of about 0.1 wppm. Conversely, the crust formed above subduction zones is characterized by uranium concentrations of about 2 wppm. The wide difference in concentration is due to the differences in the source materials and to the different chemistry. The upwelling mantle at the oceanic ridge has a uranium concentration of about 0.005 wppm, while the subduction zones have as their source material oceanic crust and bits of continental crust, with an average uranium concentration of about 0.1 wppm. The continuous upwelling at the oceanic ridges serves as a mechanism for depleting the core and mantle of uranium and incorporating that uranium in the oceanic crust. The relatively low concentration of uranium in the oceanic crust is augmented with

uranium from continental runoff, which subsequently precipitates in the ocean basins. At the subduction zones, the oceanic crust is again subjected to partial melting and the uranium is again fractionated in the melt and transported to the surface.

### Average Vertical Distribution of Uranium and Thorium

As a result of the various igneous processes, the average concentration of uranium is highest at the surface of the continental crust and decreases approximately exponentially with depth.

The anticipated variation of uranium concentration with depth is given by the equation  $U(z) = U(z = 0)e^{(-z/h_r)}$ , where  $z$  is the depth in m,  $h_r$  is the depth parameter (discussed below), and  $U(z)$  is the concentration at depth  $z$ , in wppm.  $U(z = 0)$  is the average continental crustal abundance of uranium at the surface, 2.76 wppm.

This approximation is based on the presence of heat-producing elements, U-238, Th-232, and K-40, in the continental crust, measurements of the thermal conductivity of the crustal materials, and the linear temperature distribution with depth measured at many locations. The heat produced in the crust is divided about evenly between U-238 and Th-232, since the crustal abundance mass ratio between Th and U is 3.9. K-40 is about four orders of magnitudes lower, although potassium has a crustal abundance of 2.1%, since K-40 is only 117 ppm of natural potassium and the thermal energy output of K-40 is about four orders of magnitude below U-238 and Th-232, as shown by Lachenbruch, below [20, 21] (Table 3).

Obviously, this method assumes one-dimensional heat transport and a fairly uniform thermal conductivity, without a significant contribution from flowing fluids. A more recent review by Brady et al. [22] provides more details on the technique.

Several measured values of the depth parameter  $h_r$  are listed in Table 4 [23].

If we assume a depth parameter of 8,500 m, based on the above data, then 11% of the crustal uranium inventory would be expected to be within 1,000 m of the surface and 21% within 2,000 m.

**Uranium and Thorium Resources, Table 3** Sources of heat in the upper continental crust

Isotope	Thermal output
U-238	0.095 mW/kg
Th-232	0.027 mW/kg
K-40	3.6 nW/kg

**Uranium and Thorium Resources, Table 4** Temperature distribution depth parameter

Location	$h_r$ (m)
Sierra Nevada	10,000
Eastern US	7,500
Norway and Sweden	7,200 $\pm$ 700
Eastern Canadian Shield	7,100 $\pm$ 1,700
Canadian Appalachians	10,000 $\pm$ 2,000
US Appalachians	8,100 $\pm$ 1,300

Note: In the other references, the depth parameter is denoted D, rather than  $h_r$

### Geochemical Beneficiation Processes

Uranium occurs in ores such as uraninite [ $\text{UO}_2$ , pitchblende], carnotite [ $\text{K}_2(\text{UO}_2)_2\text{V}_2\text{O}_8 \cdot 3(\text{H}_2\text{O})$ ], autunite [ $\text{Ca}(\text{UO}_2)_2(\text{PO}_4) \cdot 11(\text{H}_2\text{O})$ ], uranophane [ $\text{Ca}(\text{UO}_2)_2(\text{HSiO}_4)_2 \cdot 5\text{H}_2\text{O}$ ], davydite [ $\text{Ce}_{0.75}\text{La}_{0.25}\text{Y}_{0.75}\text{U}_{0.25}\text{Ti}_{15}\text{Fe}_3 + 5\text{O}_{38}$  and  $\text{La}_{0.7}\text{Ce}_{0.2}\text{Ca}_{0.1}\text{Y}_{0.75}\text{U}_{0.25}\text{Ti}_{15}\text{Fe}_3 + 5\text{O}_{38}$ ], torbernite [ $\text{Cu}(\text{UO}_2)_2(\text{PO}_4)_2 \cdot 12\text{H}_2\text{O}$ ], and other minerals containing  $\text{U}_3\text{O}_8$  (actually a stable complex oxide of  $\text{U}_2\text{O}_5 \cdot \text{UO}_3$ ).

The governing characteristic in the geochemical transport of uranium is the fact that uranium is highly soluble in oxidizing environments and essentially insoluble in reducing environments. The change in the Earth's atmosphere from a reducing to an oxidizing condition about 1.8 billion years ago is thus responsible for a fundamental change in the dominant processes in uranium transport. In the earlier age, igneous processes and fractionation of uranium in partial melts due to its large ionic size were dominant. In the last 1.8 billion years, the transport of uranium by means of groundwater oxygenated at the surface has been dominant.

Thus, in the period more than 1.8 billion years ago, uranium was primarily concentrated in placer deposits as a chemically inert and physically dense phase. Because of the low solubility of

uranium in reducing environments, rivers, lakes, groundwater, and thus the sea contained very low uranium concentrations. The placer deposits at Elliot Lake, Canada, and at Witwatersrand, South Africa, are typical of the deposits formed during this period.

With the dominance of photosynthesis in the last 1.8 billion years, the atmospheric and groundwater conditions have been oxidizing, and uranium minerals have been highly soluble in the sedimentary weathering cycle. Placer deposits no longer formed and, in fact, began to dissolve. The uranium content of rivers, lakes, and groundwater increased, and gradually, the uranium concentration in the oceans also increased. Nevertheless, the uranium concentration remained well below saturation.

In a few isolated locations, however, oxidation of organic-rich beds by groundwater led to locally reducing conditions. In these locations, the uranium ions or their complexes would reach supersaturation and re-precipitate. An important example of this re-precipitation is in the Mesozoic sandstones of the Colorado Plateau. The uranium ores are found in organic-rich zones where the oxygen in groundwater was removed by carbon-rich debris. Precipitation of uranium has also occurred where restricted circulation in the oceans and organic-rich sediments led to anoxic conditions. Good examples are the black Chattanooga Shale and the phosphorite shale of the Phosphoria Formation [9].

### Specific Deposit Types

Before the discovery of the McArthur River deposit, the highest-grade uranium ores were obtained from igneous sedimentary deposits such as Great Bear Lake in Canada, Joachimsthal in the Czech Republic, and Katanga in the Congo. The deposits at Oklo in the Gabon Republic in Africa were of high enough concentration, and the uranium, 1.7 billion years ago, contained 3%  $^{235}\text{U}$  rather than the present 0.711% such that several critical natural reactors occurred in the deposit [24]. The reactor zones released about 15,000 MW-years of fission energy over the course of about 250,000 years. These deposits were formed by the movement of hot water through fractures in

blocks of rock heated by their own uranium and thorium content.

Precambrian sandstones overlie much older Precambrian granites and metamorphic rocks. At the interface, there is a discontinuity in the age of the rocks. This type of discontinuity is termed an unconformity. Unconformity deposits, such as those in Saskatchewan and Northern Australia, occur where uranium from the sandstone has formed into veins in the open spaces of the interface and has been heated to temperatures of several hundred degrees Celsius.

### Roll-Front Deposits

As mentioned earlier, uranium oxide precipitates when the solution enters a reducing environment. The uranium oxide can be redissolved in situ by oxygenated leach solutions. In sandstone deposits, the uranium minerals have been deposited in the interstices between the sand grains. The deposits are often moving very slowly through the sandstone because of the flow of groundwater, much like the movement of a front through a liquid chromatography column. Oxygenated water from the surface enters the sandstone where reducing agents, such as sulfides or organic matter, are located in the interstitial spaces. The organic carbon in one pore volume of sandstone can remove all the oxygen dissolved in 50,000 pore volumes of oxygenated groundwater.

Therefore, the front between the oxygenated groundwater and oxygen-free groundwater moves slowly through the sandstone. Uranium dissolved at the surface and uranium dissolved from the sandstone by the oxygenated groundwater is swept along and precipitated at the front. Upstream of the front, the uranium is present in the groundwater as the soluble hexavalent uranyl carbonate complex. As the oxygen is removed from the groundwater at the front, the soluble hexavalent uranium is reduced to the insoluble quadrivalent state.

The quadrivalent uranium precipitates in the form of the mineral uraninite ( $\text{UO}_2$ ). Thus, the location of ore bodies is often associated with deposits of carbonaceous materials where the carbon, in much larger quantities compared with the

uranium, has removed the oxygen from the groundwater.

Based on the various modes for the formation of uranium ore bodies, reviewing the large body of prior research, Deffeyes and MacGregor estimated the uranium content of the various crustal regimes in a report for the USDOE in 1978 [19].


The distribution of mass versus grade for the various types of uranium deposits is shown in Fig. 2 with additional data [17]. The three gray bars on the left (grade  $>1,000$  ppm U) indicate deposits of the type now mined for uranium alone. The expected log-normal distribution is shown and the mass and grade of two Canadian mines discovered since 1978 are also indicated: (1) the McArthur River deposit, 137,000 t U of proven reserves averaging 18 wt% U and (2) the Cigar Lake deposit, 90,000 t U at an average grade of 17 wt% U. Other known larger but lower-grade deposits, such as the Olympic Dam in Australia, have not been shown.

Present mining activities are recovering uranium at market prices of \$150/kg from ores containing 0.027 - 20%  $\text{U}_3\text{O}_8$ . Given the log-normal distribution and the known quantities of the various uranium mineralizations, a tenfold increase in the price of uranium (and thus a tenfold decrease in economically viable ore grade) would result in a 300-fold increase in the amount of uranium available. Equivalently, the World Nuclear Association (formerly the Uranium Institute) estimates that a doubling of uranium prices would result in a tenfold increase in supply [9].

The slope of the log-normal curve at presently mined grades is also shown in Fig. 2. This slope, about +3.5, indicates that for a doubling of the cost of mining (i.e., mining ore at half the present concentration), the economically available resources of uranium would increase by more than an order of magnitude ( $2^{3.5} \approx 11$ ). This estimate presumes a continuation of present mining techniques and does not consider the increased use of in situ leaching (ISL) and recovery of uranium as a by-product in gold, copper, and phosphate mining.

### Uranium and Thorium Resources

**Fig. 2** Distribution of uranium in the Earth's crust

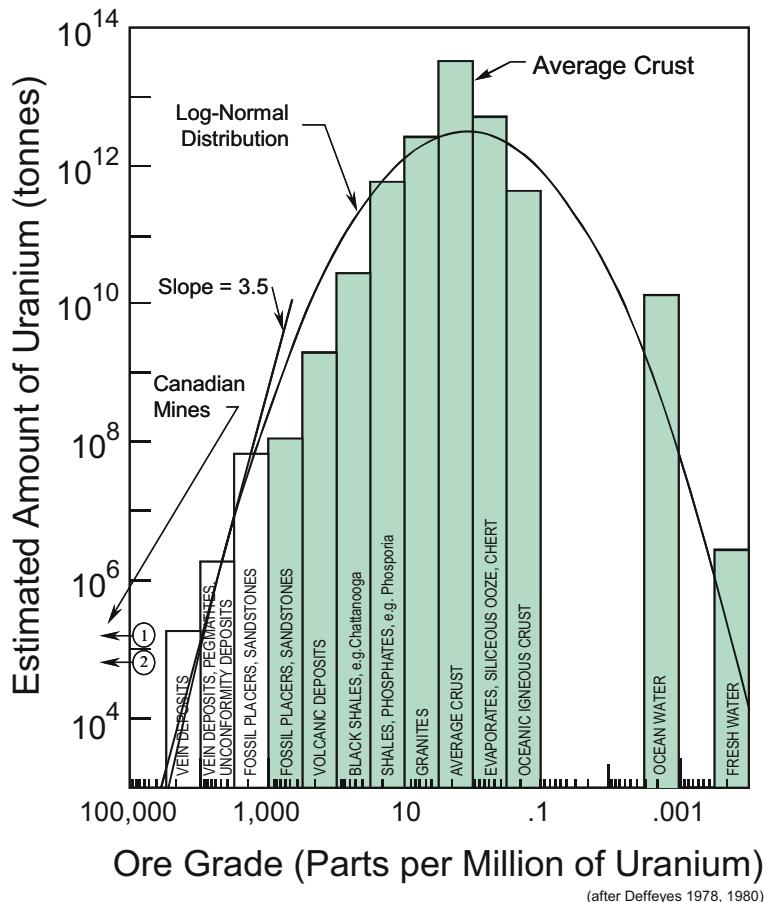

(after Deffeyes 1978, 1980)

## Unconventional Resources

### Existing Enrichment Tails

Another potential source of uranium is the re-enrichment of depleted uranium by using today's overcapacity of enrichment. Because of the low price of natural uranium in recent years, many enrichment plants have been operating with tails assays of up to 0.3%  $^{235}\text{U}$ . The 1.18 million tons of depleted uranium currently stored at enrichment plants could therefore supplant a few hundred thousand tons of natural uranium if demand required. The inventory of depleted uranium is expected to increase by about 51,400 t U per year though at least in 2010. The enrichment capacity in 2015 was reported to be 58 MSWU/year, to be compared with an annual demand of

47 MSWU/year [25]. The present spare capacity in enrichment plants in the world, around 11 MSWU/year, theoretically represents an equivalent of around 4000 tons/year of natural uranium if this spare capacity was utilized for enrichment of depleted uranium with an assay of 0.3% and a new tails assay of 0.1%.

The economics of re-enrichment depend on the  $^{235}\text{U}$  assay of the depleted uranium and the relationship between the price of uranium and the cost of enrichment services. A tails assay of above 0.3% is preferable if re-enrichment of depleted uranium is to be considered a possibility. Re-enrichment of depleted uranium for the production of low-enriched uranium (LEU) in the Russian Federation has taken place for several years in times of excess enrichment capacity.

However, decreasing amounts of excess enrichment capacity make re-enrichment a marginal source of light water reactor fuel. On the other hand, the eventual use of enrichment tails as breeding blankets for fast reactors, as will be discussed shortly, represents a large long-term source of fuel.

### **Gold and Phosphate Tailings**

In addition to the discovery of new resources through increased exploration, improvements in mining technology are also lowering the cost of previously high-cost deposits. In particular, in situ leaching (ISL) is of growing significance and could be applied to existing gold and phosphate tailing piles. The resource base of 16.2 million tons U does not include uranium in gold and phosphate tailings. The phosphate deposits are estimated at 22 million t U.

### **Uranium from Seawater**

The recovery of uranium from seawater places an upper limit on the cost of uranium. Uranium is dissolved in seawater at 3 mg/m<sup>3</sup> (3 wppb) and represents a well-known resource of 4.2 billion tons, 250 times the known land-based resource. The uranium content of the oceans is relatively constant and large-scale extraction can be done without local depletion of the resource. Since only about 3% of global population lives in landlocked countries, extraction of uranium from seawater is truly the bounding cost for uranium. Further discussion of the technologies for uranium extraction from seawater is contained in the following section.

### **New Technologies for Uranium Extraction**

The current prices for uranium provide little motivation for the development of new extraction technologies. However, regulations to minimize the impact of mining on the environment and radiation exposure to workers have led to the use of technologies where uranium is extracted in situ or where ores previously mined for another element are processed for uranium extraction. In

addition, the technologies described above for the extraction of uranium from seawater could have a major impact in minimizing environmental impact and radiation exposure.

### **In Situ Leaching**

During conventional mining, the rock of the ore body is removed from the ground, transported to a mill, and treated to remove the minerals of economic value. The opening of the mine, the transport of the ore, the milling, and the disposal of remaining treated rock can create severe environmental impacts. In situ leaching (ISL), sometimes known as solution mining, involves the use of liquids to dissolve the desired elements from the ore body without removing it from the ground. The liquid is pumped through the ore body and returned to the surface, where the desired elements are removed from the solution by precipitation, by electrochemistry, or by other means. The leaching liquid is then returned to the ore body and the process is repeated. ISL eliminates the need to remove large quantities of ore from the ground and to transport it to the mill, thus minimizing surface disturbance. ISL also eliminates the need to dispose of the tailings or waste rock. However, for ISL to be effective, the ore body must be permeable to the flow of the leaching liquid. Furthermore, the ISL site must be located so as not to contaminate groundwater away from the ore body.

Today, because of its reduced surface impact and lower cost, ISL is used for 85% of US uranium production. Most of the operations, in Wyoming, Nebraska, and Texas, are less than 10 years old. Worldwide, about 16% of the world uranium production uses ISL, including all the production in Uzbekistan and Kazakhstan.

ISL can be used to extract uranium from deposits below the water table in permeable sand or sandstone, provided that the deposit is confined above and below by impermeable strata. Suitable candidates are often roll-front deposits as described earlier. The uranium mineral is usually uranium oxide or uranium silicate coatings on the individual sand grains. The ISL process replicates, in a few months, the conditions that led to

the formation of the roll-front deposit in the sandstone initially.

There are two types of ISL, depending on the chemistry of the deposit and groundwater. When the ore body is limestone or gypsum, i.e., containing significant amounts of calcium, then an alkaline leaching agent such as sodium bicarbonate and CO<sub>2</sub> must be used. Otherwise, an acid leaching agent, such as weak sulfuric acid plus oxygen at a pH of 2.5–2.8 (about the same as vinegar), is preferred. ISL in Australia is primarily acid, while ISL in the USA is primarily alkaline.

Generally, the uranium is extracted by progressively drilling wells into the deposit on a rectangular grid with ~30 m spacing. The leaching fluid is pumped into four wells surrounding a central extraction well, into which a submersible pump has been lowered. The wells are cased to assure that the fluids do not enter strata above the deposit. In the USA the production life of an individual alkaline ISL well is typically 6–10 months. The most successful operations have extracted 80% of the uranium from the ore. Production life is often limited when the sandstone is plugged by mobilized clay and silt. Sometimes the blockages can be dislodged by reversing the flow through the field or by increasing the injection pressure.

The uranium is recovered from the extracted solution in an ion exchange or solvent extraction process. Solvent extraction is preferred if the groundwater is saline, while ion exchanges are most effective if the chloride content is below 3,000 ppm. With alkaline leaching, ion exchange is effective until the total dissolved solids reach 3,000 ppm. The uranium is then stripped from the resin or solution for further processing [26].

Before the process solution is reinjected, it is reoxygenated or recharged with sulfuric acid, for alkaline or acidic processes, respectively. About 1% of the process solution is bled off to maintain a pressure gradient toward the wellfield. The pressure gradient ensures that groundwater from any surrounding aquifer flows into the wellfield and that ISL mining solutions do not enter the aquifer.

### Recovery of Uranium from Seawater

The recovery of uranium from seawater is highly speculative and may never prove to be

economic. One cubic meter of seawater contains 3 mg of natural uranium, which can deliver 244 MJ<sub>th</sub> in a breeder or about 2.5 MJ<sub>th</sub> in a present-day LWR. Simple calculations show that the pumping energy needed in an extraction plant could easily consume all the energy available from the uranium, particularly in the LWR case. Thus, seawater extraction conceptual designs relying on ion exchange or adsorption have utilized ocean currents or wave action to move the seawater past the uranium-collecting surfaces.

However, the magnitude of the seawater resource places an upper limit on the cost of uranium for several reasons. First, seawater is available to nearly all countries of the world at virtually the same uranium concentration and without local depletion due to the extraction of uranium. Secondly, because no group of countries can form a cartel over the uranium supply if seawater extraction is practiced, the price of uranium is unlikely to be driven artificially high through market manipulation. Furthermore, the only present limitation on the extraction of uranium from seawater is knowledge of the technology and resins. Thus, one would expect that, if conventional sources of uranium become limiting, a healthy competition in research and development would drive down the cost of extraction.

Uranium recovery from seawater has been studied in Japan for the very long term or to face a very strong development of fission energy. In a laboratory-scale experiment performed by the Japan Atomic Energy Agency (JAEA) uranium is trapped by an amidoxime adsorbent which has been prepared on nonwoven polyethylene material with the aid of radiation-induced co-grafting. This experiment, 7 km offshore from Sekinehama in Aomori Prefecture, Japan, produced more than one kilogram of U on 350 kg of nonwoven fabric during a total submersion time of 240 days [27]. However, at this stage of the study, it is difficult to predict the practical application of uranium recovery from seawater. An economic assessment has been reported indicating a possible cost for this uranium process in a 1,000 t U/yr commercial plant of approximately \$600/kg U [28].

## Impact of Uranium Scarcity and Higher Extraction Costs

Table 5 shows the approximate impact of increases in the price of natural uranium on the cost of electricity from a light water reactor. In this set of calculations, the cost of natural uranium is set at \$140/kg U (approximately average price of domestic U to US utilities, 2011); \$500/kg U, representing an optimistic cost of extraction from seawater; and \$1,000/kg U, representing a more pessimistic (or perhaps more realistic) cost for extraction from seawater. Two burnups are shown for each uranium price, 45 MW-day (thermal) per kg of initial uranium (MWd-d/kg) and 60 MWd/kg. The specific power of the fuel remains constant at 37.9 kWth/kg of initial uranium, as does the interest charged on the fuel during the fuel cycle. In the cases with higher-cost uranium, the tails assay (“tails U-235 content”) to optimize the balance between raw materials and enrichment costs. As shown in the last two lines of the table, an increase in the cost of natural uranium from \$140/kg U to \$1,000/kg U results in an increase in the cost of electricity of about \$0.018 per kilowatt-hour. For comparison, an increase in the prices of natural gas of \$2.80 per million BTU, as has occurred five times since 2005, also results in an increase in the cost of electricity of \$0.018/kW-hour.

**Uranium Compared with Future Energy Needs**  
A simple calculation is needed to place the magnitude of current uranium mining in perspective. If we assume that the world population reaches a steady-state level of 10 billion and each of those people consumes energy at the average rate of a US resident in 2011, then the total annual world consumption of energy would be about  $3.7 \times 10^{21} \text{ J}_{\text{th}}$ . While that high rate of consumption would probably not be sustainable for a variety of other reasons, the required natural uranium input to a system of fast reactors to produce  $3.7 \times 10^{21} \text{ J}_{\text{th}}$  would be about 45,000 t U. Average worldwide uranium usage, from both mining and the downblending of HEU, is now about 59,000 t U per year [8].

## The Need for Fast Reactors

The early development of fast breeder reactors and of thermal breeder reactors using thorium was driven in part by the apparent global scarcity of fissile isotopes to fuel a rapidly growing set of nuclear reactors. Slow growth in nuclear power and large discoveries of natural uranium in a few regions of the world have reduced the global urgency for breeding more fissile material. In those regions of the world lacking known uranium resources, particularly Europe and Japan, there has been continuing interest in the development of sodium-cooled fast breeder reactors. Such reactors reduce the need for natural uranium by a factor of  $\sim 50$ , compared with light water reactors, and thus the cost and availability of natural uranium is a much smaller consideration.

However, beyond the breeding of fissile isotopes, the use of a fast neutron spectrum offers unique capabilities for the consumption of the long-lived actinides, particularly plutonium, neptunium, americium, and curium.

In the long term, the capability of a fast reactor to make use of both  $^{238}\text{U}$  and  $^{235}\text{U}$  will be critical in meeting future energy needs. However, in the next century, fast reactors will be crucial for the management of actinides and the reduction of the long-term radiotoxicity of the nuclear fuel cycle by at least two orders of magnitude.

## Comparison of Fossil Fuel and Uranium Reserves

It is interesting to compare the cited uranium known reserves and the inventory of depleted uranium with the estimated reserves of coal, oil, and natural gas. In Table 6, the reserves of fossil fuels and uranium are compared on the basis of known, economically recoverable reserves.

Fossil fuel reserves are those of the World Energy Council, the *Oil & Gas Journal* and *World Oil* [29]. In the use of Table 6, the caveat cited above applies. Resources of both fossil fuels and of uranium are undoubtedly much larger than the reserves cited. Nevertheless, it is noteworthy that the uranium resources are energetically equivalent to about 20% of natural gas or oil resources, even with the use of LWRs only. The 1.2 million tons of depleted uranium currently in

**Uranium and Thorium Resources, Table 5** Impact of uranium costs on the cost of electricity

Impact of uranium costs on the cost of electricity

	Current uranium prices		Uranium from unconventional sources				Units
	UO <sub>2</sub> fuel 45 MWd/kg	UO <sub>2</sub> fuel 60 MWd/kg	UO <sub>2</sub> fuel 45 MWd/kg	UO <sub>2</sub> fuel 60 MWd/kg	UO <sub>2</sub> fuel 45 MWd/kg	UO <sub>2</sub> fuel 60 MWd/kg	
	Specific power	37.9	37.9	37.9	37.9	37.9	kWth/kg
<b>Cycle parameters</b>							
Total cycle length	3.6	4.8	3.6	4.8	3.6	4.8	Years
Capacity factor	90%	90%	90%	90%	90%	90%	
Effective full power days	1,183	1,578	1,183	1,578	1,183	1,578	efpd
Burnup	45	60	45	60	45	60	MWd/kg ihm
Feed U-235 content	0.711%	0.711%	0.711%	0.711%	0.711%	0.711%	wt %
Product U-235 enrichment	4.00%	5.34%	4.00%	5.34%	4.00%	5.34%	wt %
Tails U-235 content	0.25%	0.25%	0.20%	0.20%	0.10%	0.10%	wt %
Separative work	5.874	8.692	6.546	9.636	8.953	13.020	kg-SWU/kg fuel
Natural uranium	8.089	10.964	7.439	10.050	6.385	8.569	kg/kg fuel
	0.180	0.183	0.166	0.168	0.142	0.143	kg/MWd
<b>Rates</b>							
Interest rate	5.0%	5.0%	5.0%	5.0%	5.0%	5.0%	Per year
Natural uranium	\$ 140	\$ 140	\$ 500	\$ 500	\$ 1,000	\$ 1,000	/kg U
	\$ 54	\$ 54	\$ 193	\$ 193	\$ 385	\$ 385	/lb U <sub>3</sub> O <sub>8</sub>
Conversion of U <sub>3</sub> O <sub>8</sub> to UF <sub>6</sub>	\$ 11	\$ 11	\$ 11	\$ 11	\$ 11	\$ 11	/kg natural U
Separative work	\$ 150	\$ 150	\$ 150	\$ 150	\$ 150	\$ 150	/kg-SWU
<b>Costs</b>							
Natural uranium	\$ 1,132	\$ 1,535	\$ 3,719	\$ 5,025	\$ 6,385	\$ 8,569	/kg fuel
Separative work	\$ 881	\$ 1,304	\$ 982	\$ 1,445	\$ 1,343	\$ 1,953	/kg fuel
Conversion	\$ 89	\$ 121	\$ 82	\$ 111	\$ 70	\$ 94	/kg fuel
Fabrication	\$ 500	\$ 500	\$ 500	\$ 500	\$ 500	\$ 500	/kg fuel
Total cost	\$ 2,602	\$ 3,459	\$ 5,283	\$ 7,081	\$ 8,298	\$ 11,116	/kg fuel
Interest during use	\$ 234	\$ 415	\$ 475	\$ 850	\$ 747	\$ 1,334	/kg fuel
<b>Total fuel cost</b>	\$ 2,837	\$ 3,874	\$ 5,758	\$ 7,931	\$ 9,045	\$ 12,450	/kg fuel
	\$ 63.19	\$ 64.73	\$ 128.27	\$ 132.50	\$ 201.48	\$ 208.00	/MWth-day
	\$ 0.772	\$ 0.790	\$ 1.566	\$ 1.618	\$ 2.460	\$ 2.540	/million BTU
	\$ 7.81	\$ 8.00	\$ 15.86	\$ 16.38	\$ 24.91	\$ 25.72	/MWe-hr
COE increase due to high uranium prices			\$ 8.05	\$ 8.38	\$ 16.91	\$ 17.71	/MWe-hr
			<b>0.8</b>	<b>0.84</b>	<b>1.69</b>	<b>1.77</b>	<b>cents per kWe-hr</b>

**Uranium and Thorium Resources,**  
**Table 6** Comparison with fossil reserves

<b>Coal</b>	909	Billion tons
=	2.01E + 22	Jth
=	19,089	Quadrillion BTU (quad)
<b>Petroleum</b>	1,340	Billion barrels
=	8.20E + 21	Jth
=	7,772	Quad
<b>Natural gas</b>	6,261	Trillion cubic feet
=	6.84E + 21	Jth
=	6,480	Quad
<b>Total fossil reserves</b>	3.52E + 22	Jth
=	33,341	Quad
<b>Uranium</b>	5.404	Million t natural U
+	1.2	Million t depleted U
=	2.33E + 21	Jth in LWRs
$\Gamma$	2,211	Quad in LWRs
=	5.36E + 23	Jth in fast reactors
=	508,000	Quad in fast reactors

storage itself represents an energy source larger than the fossil reserves if used in a fast reactor.

## Future Directions

Uranium is ubiquitous in the continental crust and concentrated in economically recoverable deposits by several relatively well-understood processes. Today, we are mining uranium from the richest and most convenient of the deposits though exploration is still at a relatively low level. Uranium and thorium are often being extracted as by-products of mining for other elements, particularly from IOCG deposits. It is likely that other similarly rich deposits exist in relatively unexplored regions of Asia and Africa.

Prices in the present uranium market are dominated by large discoveries in the last 20 years and by the conversion of military HEU to civilian purposes. The continued use of nuclear energy and the end of downblending can be expected to

raise uranium prices, encourage exploration, and return the uranium to a slightly higher-priced equilibrium.

However, because of the wide range of igneous and geochemical processes that are responsible for the formation of uranium deposits, we can expect that uranium will be found in significant quantities with renewed exploration.

Emerging technologies for the extraction of uranium, particular in situ leaching, will make resources in sandstone and shale economically recoverable and minimize the surface disruption due to open pit mining and the occupational radiation exposures of underground mining.

In more distant future, the extraction of uranium from seawater will make this fuel available to virtually every nation. While extraction from seawater is likely to be five to ten times more expensive than uranium is today, the overall increase in the cost of electricity or other energy products would be minimal.

Therefore, the need for fast reactors in the near term, with a global view in mind, is not driven by a scarcity of uranium but rather by a need to effectively manage the long-lived actinides in spent fuel. A fast neutron spectrum is uniquely capable of fissioning the higher actinides and reducing the long-term radiotoxicity and volume of the nuclear fuel cycle. Likewise, although thorium is more abundant than uranium, the primary use of thorium will probably not be for the breeding of  $^{233}\text{U}$ , but rather as a host material for the transmutation of the higher actinides in fast neutron spectrum reactors.

There are many challenges in the development of safe, proliferation-resistant, and economical reactors and fuel cycles. Fortunately, uranium and thorium resources do not appear to be a near-term limitation.

## Bibliography

1. Bates RL, Jackson JA, American Geological Institute (eds) (1984) Dictionary of geological terms, 3rd edn. Anchor Books, New York
2. Manson B, Pigford TH, Levi HW (1981) Nuclear chemical engineering. McGraw-Hill Book Company, New York

3. NRC Glossary Yellowcake. <http://www.nrc.gov/reading-rm/basic-ref/glossary/yellowcake.html>. Updated 27 May 2011
4. Williams PJ et al (2005) Iron oxide copper gold deposits: geology, space-time distribution, and possible modes of origin. *Economic geology* 100th anniversary volume. Society of Economic Geologists, Littleton, pp 371–405
5. Ludhova L, Zavatarelli S (2013) Review article: studying the Earth with geoneutrinos. *Adv High Energy Phys* 2013. Article ID 425693, 16 pp. Hindawi Publishing Corporation. <http://dx.doi.org/10.1155/2013/425693>
6. Davies JH, Davies DR (2010) Earth's surface heat flux. *Solid Earth* 1(1):5–24
7. Huang Y, Chubakov V, Mantovani F, Rudnick RL, McDonough WF (2013) A reference Earth model for the heat-producing elements and associated geoneutrino flux. *Geochem Geophys Geosyst* 14(6):2003–2029
8. Uranium 2014: resources, production and demand, NEA No. 7209, A joint report by the OECD nuclear energy agency and the International Atomic Energy Agency, 2014
9. Supply of uranium, World Nuclear Association 2015. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/uranium-resources/supply-of-uranium.aspx>. Accessed 13 Mar 2016
10. Margaret Burbidge E, Burbidge GR, Fowler WA, Hoyle F (1957) Synthesis of the elements in stars. *Rev Mod Phys* 29(4):547
11. Adam B (2000) Supernova explosions in the Universe. *Nature* 403:727–733
12. Shinya W et al (2003) The r-process in supernova explosions from the collapse of O-Ne-Mg cores. *Astrophys J* 593:968–979
13. Deffeyes KS, MacGregor ID (1978) Uranium distribution in mined deposits and in the Earth's crust. Final report, GJBX—1(79). Dept of Geological and Geophysical Sciences, Princeton University, Princeton, prepared for the USDOE, Grand Junction Office
14. Araki T et al (2005) Experimental investigation of geologically produced antineutrinos with KamLAND. *Nature* 436:499–503
15. Fiorentini G, Lissia M, Mantovani F, Vannucci R (2004) Geo-Neutrinos: a short review 1. <http://arxiv.org/hep-ph/0409152.pdf>
16. Enomoto S, Ohtani E, Inoue K, Suzuki A Neutrino geophysics with KamLAND and future prospects. <http://arxiv.org/ftp/hep-ph/papers/0508/0508049.pdf>
17. Herring JS (2004) Uranium and thorium resources. In: Cleveland CJ (ed) The encyclopedia of energy, editor in chief. Academic
18. Collaboration B (2010) Observation of geo-neutrinos. *Phys Lett B* 687:299–304
19. Deffeyes KS, MacGregor ID (1980) World uranium resources. *Sci Am* 242(1):66–76
20. Lachenbruch AH (1968) Preliminary geothermal model of the Sierra Nevada. *J Geophys Res* 73(22):6977
21. Lachenbruch AH (1970) Crustal temperature and heat production: implications of the linear heat-flow relation. *J Geophys Res* 75(17):3291
22. Brady RJ, Ducea MN, Kidder SB, Saleeby JB (2006) The distribution of radiogenic heat production as a function of depth in the Sierra Nevada Batholith, California. *Lithos* 86:229–244
23. Schubert G, Turcotte DL, Olson P (2001) Mantle convection in the earth and planets. Cambridge University Press, Cambridge, p 146
24. Davis ED, Gould CR, Sharapov EI Oklo reactors and implications for nuclear science [nucl-th]. arXiv:1404.4948
25. Uranium enrichment World Nuclear Association, 2015. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/conversion-enrichment-and-fabrication/uranium-enrichment.aspx>. Accessed 14 Mar 2016
26. In Situ Leach (ISL) Mining of Uranium, World Nuclear Association, updated July 2014, <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/mining-of-uranium/in-situ-leach-mining-of-uranium.aspx>. Accessed 14 Mar 2016
27. Seko N et al (2003) Aquaculture of uranium in seawater by fabric-adsorbent submerged system. *Nucl Technol* 144:274–278
28. Joint Nuclear Energy Action Plan, Fuel Cycle Technology Working Group, Uranium extraction from seawater, 1st Information Exchange Meeting, Lawrence Berkeley National Laboratory, 2010, Meeting Record
29. EIA 2010 Annual Energy Review 2009, DOE/EIA-0384(2009), Energy Information Administration, US Department of Energy, 2010



## Nuclear Fuel Reprocessing

Michael F. Simpson<sup>1</sup> and Jack D. Law<sup>2</sup>

<sup>1</sup>Department of Metallurgical Engineering,  
University of Utah, Idaho Falls, ID, USA

<sup>2</sup>Fuel Cycle Science and Technology Division,  
Idaho National Laboratory, Idaho Falls, ID, USA

### Article Outline

Glossary

Objective

Introduction

Reprocessing Technology

Future Directions

Bibliography

### Glossary

**Actinides** All elements including and beyond actinium ( $Z > 89$ ) in the periodic table. In spent fuel, the major actinides of interest are uranium, plutonium, neptunium, americium, and curium.

**Cathode processor** A high-temperature vacuum distillation furnace used to separate salt from metallic actinides deposited on an electrorefiner cathode.

**Centrifugal contactors** Liquid-liquid extraction equipment used for aqueous solvent extraction that consists of a spinning rotor to intensely mix the different phases.

**Ceramic waste** The glass-bonded sodalite matrix used to encapsulate waste salt from electrorefiner operation.

**COEX™** French process for coextracting uranium and plutonium using extraction methods similar to PUREX.

**Electrorefiner** An electrochemical system used to separate actinides from spent fuel using a molten salt electrolyte.

**Experimental Breeder Reactor-II** A sodium-cooled, fast test reactor operational at Argonne National Laboratory-West from 1963 to 1994.

**Geologic repository** A permanent nuclear waste disposal site located deep within a geological formation.

**Metal waste** The stainless steel-zirconium matrix used to encapsulate cladding hulls and noble metals left in anode baskets after U electrorefining is completed.

**Minor actinides** Elements with  $Z > 92$  other than U and Pu. In spent fuel, the primary minor actinides of concern are Np, Am, and Cm.

**Mixer-settler** Liquid-liquid extraction equipment used for aqueous solvent extraction requiring a relatively large footprint.

**Noble metals** Elements found in spent nuclear fuel that have chloride forms that are thermodynamically less stable than uranium chloride.

**Pulsed columns** Liquid-liquid extraction equipment used for aqueous solvent extraction involving a single column consisting of trays of perforated plates to promote interphase mass transport.

**PUREX** Nuclear reprocessing technology that separates actinides from the spent fuel via liquid-liquid extraction involving acidic aqueous and organic liquid phases.

**Pyroprocessing** Nuclear fuel treatment technology that uses electrochemical reactors with molten salt electrolytes to separate actinides from fission products.

**Solvent extraction** A separations method for extracting species from a liquid phase. In this entry, it refers to a process for removing uranium from spent fuel that utilizes dissolution in acid followed by liquid-liquid extraction between aqueous and organic liquid phases.

**Spent fuel** Nuclear fuel that has gone through at least one irradiation cycle in a nuclear reactor. It contains a mixture of actinides and fission products.

**UREX** A variant of the PUREX process that separates uranium from spent fuel without recovering pure plutonium.

**V-blender** A v-shaped vessel that is designed to efficiently blend two or more different kinds of powders with or without applied heat.

## Objective

The objective of this entry is to give a basic overview of the technology elements behind nuclear fuel reprocessing. It should serve as a starting point for more detailed study with the aid of the “Bibliography” section to obtain more technical details on this subject. Several more process concepts have been proposed, tested, and demonstrated other than those listed in this entry. For the sake of conciseness, only two fundamentally different technologies are described here – aqueous and pyrochemical fuel reprocessing. In the case of pyrochemical fuel reprocessing, focus has been placed on the LiC-KCl electrorefining technology developed originally at Argonne National Laboratory.

## Introduction

Nuclear reprocessing is the chemical treatment of spent fuel involving separation of its various constituents. Principally, it is used to recover useful actinides from the spent fuel. Radioactive waste that cannot be reused is separated into streams for consolidation into waste forms. The first known application of nuclear reprocessing was within the Manhattan Project to recover material for nuclear weapons. Currently, reprocessing has a peaceful application in the nuclear fuel cycle. A variety of chemical methods have been proposed and demonstrated for reprocessing of nuclear fuel. The two most widely investigated and implemented methods are generally referred to as aqueous reprocessing and pyroprocessing. Each of these technologies is described in detail in this chapter with numerous references to published articles.

Reprocessing of nuclear fuel as part of a fuel cycle can be used both to recover fissionable

actinides (primarily U and Pu isotopes) and to stabilize radioactive fission products into durable waste forms. It can also be used as part of a breeder reactor fuel cycle that could result in an almost 70-fold increase in energy utilization per unit of natural uranium [1]. Reprocessing can also impact the need for geologic repositories for spent fuel. The volume of waste that needs to be sent to such a repository can be reduced by first subjecting the spent fuel to reprocessing. The extent to which volume reduction can occur is currently under study by the US Department of Energy via research at various national laboratories and universities. Reprocessing can also separate fissile and nonfissile radioactive elements for transmutation.

The current known reserves of uranium that can be economically harvested are 5.5 million metric tons U at a maximum market price of about \$80/lb. At the current usage rate of 65,000 metric tons U/year, this quantity of uranium will last for about 85 years [2]. However, nuclear power expansion in India, China, and other countries will soon lead to a substantial increase in the global usage rate for uranium. Increased investment in uranium exploration will undoubtedly reveal additional recoverable resources. And the inevitable increase in cost of uranium will lead to a higher fraction of economically recoverable resources. Reprocessing of spent fuel and use in light water reactors can also serve to improve efficiency of uranium resource utilization. Estimates range from about 10 % to 30 % for reduction of natural uranium usage as a result of reprocessing spent fuel and reuse in nonbreeding reactors.

## Reprocessing Technology

### Aqueous Reprocessing

#### General Description

With this technology, nuclear fuel is dissolved into an acidic solution. The resulting solution is then chemically processed to separate the metals of interest, typically uranium and/or plutonium. Minor actinides as well as other fission products

may also be separated using advanced aqueous processes. Specific unit operations utilized in the past primarily consist of precipitation and liquid-liquid extraction. Precipitation was the primary method used in the defense industry initially for the production of plutonium. Liquid-liquid extraction was later developed as an improved method for reprocessing in the defense industry and also became the primary method of reprocessing of commercial nuclear fuel internationally. Since the vast majority of aqueous reprocessing applications continue to utilize liquid-liquid extraction, this will be the primary focus of discussion in this entry.

Liquid-liquid extraction (also called solvent extraction) was initially utilized in the petroleum industry beginning in the 1930s. It has since been utilized in numerous applications including petroleum, hydrometallurgical, pharmaceutical, and nuclear industries. Liquid-liquid extraction describes a method for separating components of a solution by exploiting an unequal distribution of the component(s) between two immiscible liquid phases. In most cases, this process is carried out by intimately mixing the two immiscible phases, allowing for the selective transfer of solute(s) from one phase to the other, then allowing the two phases to separate. Typically, one phase will be an aqueous solution, usually containing the component(s) to be separated, and the other phase will be an organic solvent, which has a high affinity for some specific components of the solution. The process is reversible by contacting the solvent loaded with solute(s) with another immiscible phase that has a higher affinity for the solute than the organic phase. The transfer of solute from one phase into the solvent phase is referred to as extraction, and the transfer of the

solute from the solvent back to the second (aqueous) phase is referred to as back-extraction or stripping. The two immiscible fluids must be capable of rapidly separating after being mixed together, and this is primarily a function of the difference in densities between the two phases.


While limited mass transfer can be completed in a single, batch equilibrium contact of the two phases, one of the primary advantages of liquid-liquid extraction processes is the ability to operate in a continuous, multistage countercurrent mode. This allows for very high separation factors while operating at high processing rates. Countercurrent operation is achieved by repeating single-stage contacts, with the aqueous and organic streams moving in opposite directions as shown in Fig. 1.

In this flow diagram, the aqueous feed stream containing the solute(s) to be extracted enters at one end of the process ( $A_{N+1}$ ), and the fresh solvent (organic) stream enters at the other end ( $O_0$ ). The aqueous and organic streams flow countercurrently from stage to stage, and the final products are the solvent loaded with the solute(s),  $O_N$ , leaving stage N and the aqueous raffinate,  $A_1$ , depleted in solute(s) and leaving stage 1. In this manner, the concentration gradient in the process remains relatively constant. The organic at stage  $O_0$  contains no solute(s), while the raffinate stream is depleted of solute(s). Streams  $A_{N+1}$  and  $O_N$  contain the highest concentration of the solute(s).

For the process to be economical, the solvent must be recycled. In order to recycle the solvent, the solute is subsequently stripped from the solvent, and the solvent is then recycled back to the countercurrent extraction process. This allows the solvent to be recycled indefinitely, until it has degraded (due to acid hydrolysis or radiolytic degradation) or the solvent composition has

### Nuclear Fuel Reprocessing,

**Fig. 1** Countercurrent – multistage extraction process flow diagram

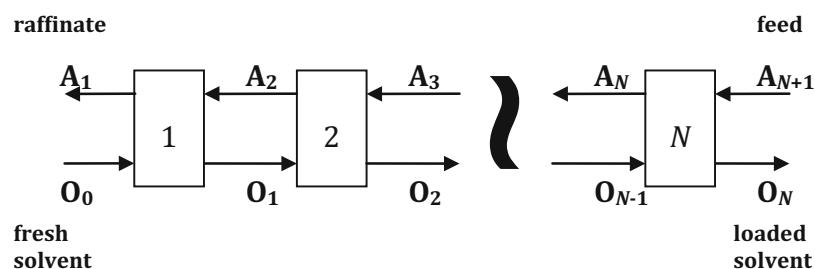

changed due to solubility in the aqueous phase and/or evaporation.

#### History of Aqueous Separation Technology

Aqueous separations processes for nuclear reprocessing evolved from early US defense programs for the separation of Pu for weapons manufacture. The bismuth phosphate process began operation at the Hanford Nuclear Reservation in 1944 for the separation of Pu from irradiated slugs from the B reactor [3]. The first continuous solvent extraction reprocessing plant replaced the bismuth phosphate process at Hanford in 1952. This facility used the reduction oxidation (REDOX) process to separate Pu. The REDOX process utilized methyl isobutyl ketone as an extractant. In the REDOX process, uranium and plutonium nitrate are preferentially extracted from the fission products in a high salting strength aqueous solution [4, 5]. The uranium and plutonium are then selectively stripped from the solvent by adjusting the valence state of the Pu to back-extract it and use a low salting strength strip solution to back-extract U. Additional cycles of extraction were used to decontaminate the products. General Electric's Knolls Atomic Power Laboratory developed the PUREX process in the 1950s. PUREX-based operations at Savannah River F Canyon began in 1954 and replaced the REDOX process at Hanford in 1956 [3]. The PUREX process became the standard method of reprocessing used nuclear fuel throughout the world.


#### PUREX Process Technology

PUREX-based reprocessing consists of leaching the spent fuel from the cladding using a nitric acid solution, chemical adjustment and filtration of the resulting feed solution, several cycles of solvent extraction to separate and purify the uranium and plutonium, solidification of the resulting uranium and/or plutonium product, as well as the waste solutions. The plutonium oxide product, with or without uranium, is then recycled as mixed oxide (MOX) fuel. This resulting MOX fuel can be used as an alternative to low enriched uranium in light water reactors. MOX fuel is widely used in Europe, and there are plans for use in Japan. About 40 reactors in Europe (Belgium,


Switzerland, Germany, and France) are licensed to use MOX fuel [6]. Existing aqueous commercial reprocessing facilities throughout the world utilize, primarily, the PUREX solvent extraction process or a variant of this process to accomplish the separation of U and Pu. Pure plutonium can also be separated with this process and used to make nuclear weapons.

The front end of the PUREX process involves mechanical chopping of the spent nuclear fuel assemblies into small pieces (~1 cm long) followed by leaching of the spent fuel in a nitric acid solution. The chopped pieces of the pins, as well as spacers and other fittings, must then be separated from the leached fuel solution. This has been performed through the use of perforated baskets that hold the hardware, such as in the batch operations performed at the THORP facility in the United Kingdom, or through the use of a continuous dissolver, such as the wheel dissolver at the UP2 and UP3 plants in France which holds the hardware in buckets formed in sections of the wheel as the wheel rotates through the nitric acid solution [7]. The dissolver solution, after further clarification and feed adjustment, is then processed through the use of the PUREX technology to separate and purify the uranium and plutonium from the dissolver product solution.


The PUREX process utilizes 20–40 vol% tributyl phosphate in a hydrocarbon diluent to extract uranium and plutonium from the acidic solution resulting from the dissolution of spent nuclear fuel. In general, metals in the +4 and +6 oxidation state are extracted in the PUREX process. The chemical equilibria for U (VI) in a nitrate media are

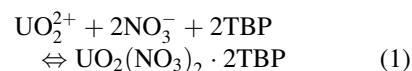

The chemical equilibria for the actinides in the +4 oxidation state are

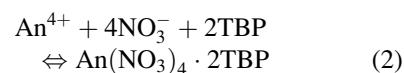

Plutonium maintained in the +4 oxidation state is, therefore, coextracted with the U. Pu (III) and

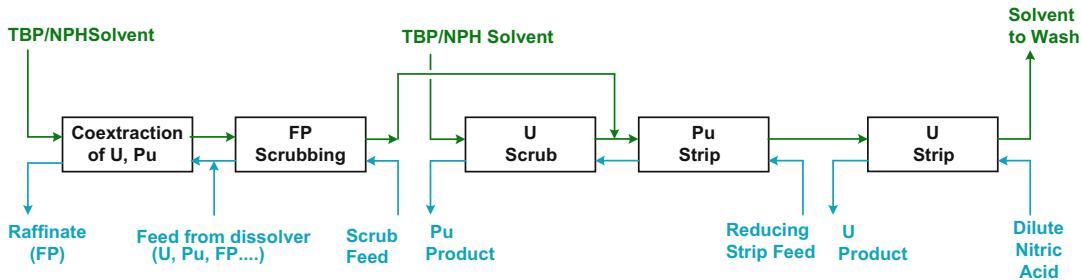

**Nuclear Fuel Reprocessing, Fig. 2** Typical PUREX first cycle flowsheet

other actinides and lanthanides in the +3 or lower oxidation state are not extracted in the PUREX Process. Neptunium, if maintained in the +6 oxidation state, can be coextracted with the U and Pu. The strong extraction of the +4 and +6 oxidations states, along with the weak extraction of the other oxidations states, results in the effective use of the PUREX process for separation of uranium and plutonium from nearly all of the other metals present in the spent nuclear fuel.

A typical PUREX process first extraction cycle is provided in Fig. 2. The solution resulting from the dissolution of the spent nuclear fuel is the feed to the coextraction section of the flowsheet. The aqueous feed flows countercurrent to the PUREX solvent, and the U and Pu are extracted by the TBP into the normal paraffin hydrocarbon (NPH) organic phase. The loaded organic phase enters the fission product (FP) scrub section in which a nitric acid scrub solution (approx. 2 M HNO<sub>3</sub>) is used to remove coextracted fission products, such as Zr and Ru, from the solvent. The scrub solution containing the Zr and Ru combines with the feed solution entering the extraction section. The solvent then enters a Pu strip section in which the Pu is back-extracted from the organic phase. This is accomplished by reducing the Pu from the extractable +4 oxidation state to the inextractable +3 state. A strip solution containing a reductant, such as hydroxylamine nitrate, U (IV), or ferrous sulfamate, is typically used [8].

Reduction and back-extraction of the Pu also result in back-extraction of a portion of the uranium. The strip product from the Pu strip section therefore enters a uranium scrub section in which the Pu strip solution is contacted with a fresh

solvent feed to reextract this uranium into the organic phase. The organic phase containing the reextracted U combines with the loaded solvent from the extraction section which enters the Pu strip section. Once the Pu has been back-extracted from the PUREX solvent, the solvent enters the uranium strip section, which utilizes dilute nitric acid (typically 0.01 M HNO<sub>3</sub>) at elevated temperature to back-extract the U into the aqueous phase.

The resulting solutions from the first cycle PUREX extraction process include a solvent solution that is washed with a carbonate or hydroxide solution to remove degradation products and recycled back to the extraction section, a raffinate stream which is depleted of the U and Pu and disposed of as waste, and the Pu and U product streams. The U and Pu product streams are typically further processed with additional PUREX cycles to purify these streams [9].

#### PUREX Process Waste Treatment

The separation of the Pu and U from spent nuclear fuel results in a high-level waste (HLW) requiring immobilization and storage. The immobilization technology currently in use in the United Kingdom, France, and Japan is vitrification of the waste to form a stable borosilicate glass waste form suitable for long-term storage [10]. The glass waste produced is poured into canisters and is stored until long-term geological storage is available. Appropriate geological repositories are currently being pursued in these countries. Low (LLW) and intermediate-level wastes (ILW) are also generated from aqueous reprocessing and require treatment and disposal.

## Advanced Aqueous Separations Process Technology

Advanced aqueous separations processes are being developed throughout the world including the United States, France, the United Kingdom, Japan, Russia, and China. The goals of the development of advanced aqueous processes include closing the nuclear fuel cycle and reducing the proliferation risk of the technologies. Reduction in proliferation risk is being addressed through development of modified PUREX processes which do not separate pure plutonium. In addition, advanced separation processes are being developed to separate the actinides for reactor recycle to close the fuel cycle.

## Advanced Aqueous Reprocessing Strategies

Numerous strategies are being developed internationally for advanced aqueous reprocessing processes. The goals of these processes typically are to accomplish separations beyond the Pu and U that are separated with the PUREX process in order to reduce the volume, radiotoxicity, and heat generation of the spent nuclear fuel. The components targeted include the minor actinides as a group, the short-lived fission products (Cs and Sr), and/or individual actinides, such as Am. The minor actinides or Am separated from the spent fuel would be recycled for burning in a fast reactor. If separated, the Cs and Sr could be placed into decay storage.

A wide variety of advanced processes are currently being developed to accomplish these advanced separations. Major research efforts on advanced processing are ongoing in France, Japan, the United Kingdom, the United States, China, and Russia [11–17]. These technologies are at various stages of maturity, and none have been implemented into full-scale reprocessing facilities to date.

Advanced aqueous processing has the potential to significantly reduce the volume, heat load (long term and short term), and radiotoxicity of HLW requiring disposal in a geological repository [18]. These processes, however, will result in the generation of a significant quantity of LLW requiring treatment and disposal. These wastes include spent solvent, solvent treatment solutions, and

decontamination solutions, among others. Additionally, solid waste is generated from facility operations (e.g., gloves, shoe covers, cleaning supplies, filters) and will require treatment and disposal.


The primary focus of recent development of advanced PUREX processes is to prevent the separation of pure Pu, thus reducing proliferation risk, as well as controlling Np and Tc chemistry to allow for the extraction of these metals.

In France, the COEX™ process is being developed which coextracts the U and Pu and producing a Pu/U product instead of a pure Pu product [19]. This is accomplished by adjusting the chemistry of the PUREX process to allow some U to be back-extracted from the solvent with the Pu. The process also uses a coconversion process to produce a (Pu, U) oxide product. Coextraction of Np is also being evaluated with the COEX™ process to produce a (Pu, U, Np) oxide product [19]. The Rokkasho reprocessing plant in Japan, which has been constructed and is currently undergoing operational testing, also uses a PUREX process that has been modified to combine uranium with the separated plutonium in a 50/50 mix prior to denitration [20]. In the United States, the uranium extraction (UREX) process has been developed which separates the uranium from spent nuclear fuel. The UREX process is a modification of the PUREX process in which the Pu is prevented from extracting with the U by adding acetohydroxamic acid as a reductant/complexant [21, 22].

## Aqueous Reprocessing Equipment

The solvent extraction equipment utilized for industrial-scale aqueous reprocessing must enable continuous processing at high throughputs while efficiently mixing and separating the two phases. In the nuclear industry, specific constraints, such as remote operation and maintenance, must be considered, since the solutions processed are highly radioactive. There are three basic types of equipment used in industrial-scale nuclear solvent extraction processes: mixer-settlers, columns, and centrifugal contactors. A detailed description of the three types of equipment follows.

*Mixer-Settlers.* This equipment consists of a small mixing chamber followed by a larger

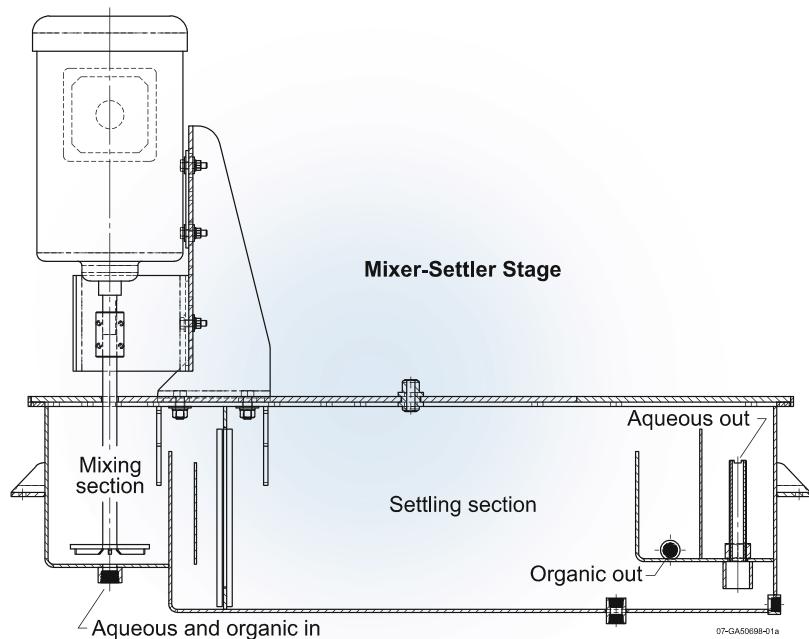**Nuclear Fuel  
Reprocessing,**
**Fig. 3** Diagram of a mixer-settler


gravity-settling chamber as shown in Fig. 3. Each mixer-settler unit provides a single stage of extraction. The two phases enter the mixing section where they are mixed using an impeller. The two-phase solution flows into the settling section where the phases are allowed to separate by gravity due to their density differences. Typical mixer-settlers have mixing times on the order of a few minutes and settling times of several minutes. The separate phases exit the settling section by flowing over a weir (less dense phase – typically organic) or through an underflow then over a weir (more dense phase – typically aqueous). The separation interface is controlled by the height of the weirs on the outlets of the settler section. Only minimal instrumentation is required, and mechanical maintenance is limited to occasional mixing motor replacement. In a countercurrent process, multiple mixer-settlers are installed with mixing and settling chambers located at alternating ends for each stage (since the outlet of the settling sections feed the inlets of the adjacent stage's mixing sections).

Mixer-settlers are best suited for use when a process requires longer residence times and when the solutions are easily separated by gravity. They require a large facility footprint, but do not require

much headspace and need limited remote maintenance capability for occasional replacement of mixing motors [23, 24].

*Columns.* There are two basic types of columns employed industrially, packed columns and pulse columns with plates or trays. Packed columns are filled with some type of packing material, such as Raschig rings, to create a tortuous path for the two solutions as they flow through the column (typically aqueous feed downward and solvent upward), ensuring that the two phases are in constant contact. Packed columns have no moving parts and are relatively simple to operate, but they are not very efficient. Since columns do not have discrete stages, such as mixer-settlers or centrifugal contactors, the number of stages is determined by the height equivalent of a theoretical stage (HETS) [25]. For most packed columns, this HETS of extraction is usually several feet, meaning that a countercurrent process utilizing several stages to effect a given separation factor would require very tall columns. To reduce the height of a theoretical stage in the column, other packing (trays or perforated plates) is used, and mechanical energy is applied to force the dispersed phase into smaller droplets, improving mass transfer. The most

common type of column used today, particularly in the nuclear industry, is the pulse column.


In a pulse column, liquids are continuously fed to the column and flow countercurrently, as is done with a packed column, but mechanical energy is applied to pulse the liquids in the column up and down. This is normally done by injecting pressurized air into a pulse leg that pushes liquid into the column, then venting the pulse leg to fill the pulse leg with solution from the column. The pulse action lifts and lowers the solution in the column, usually only a few inches. The column is filled with perforated plates or other plates to promote droplet formation as the dispersed phase is pushed through the plates. This pulsing action reduces droplet size of the dispersed phase and improves mass transfer. A perforated plate pulse column is shown in Fig. 4. There are a number of plate designs used. Early pulse columns used sieve plates, which are flat plates with holes drilled into them. A more effective plate is the nozzle plate, which has different contours on the top and bottom of the plate (making it directional, in that it must be configured according to the continuous phase in the column).


French and Japanese pulse columns employ a disk and doughnut configuration, where the plates are solid (no openings) but the alternating plates enable effective contacting of the phases [25].

The separation interface is controlled during column operation using bubble probes in the disengaging section. The probes are interfaced to a controller that drains heavy phase from the bottom of the column. The bubble probes allow operators to monitor the weight of the column, which gives them a good indication of column performance, by determining the ratio of heavy and light phases in the column. In addition, pulsing devices and pulse speed controllers are required as pulse frequency and amplitude must be controlled during operation. Periodic maintenance is required only for the pulsing equipment, which is located out of cell, above the columns. Pulse columns are used when a process requires intermediate residence times, as adjusting flow rate easily varies residence time. They require a small facility footprint, but do require much headspace (typically 40–50 ft). Pulse columns do not need remote maintenance capability, as all moving parts (pulser

### Nuclear Fuel Reprocessing,

**Fig. 4** Pulse column with perforated plates

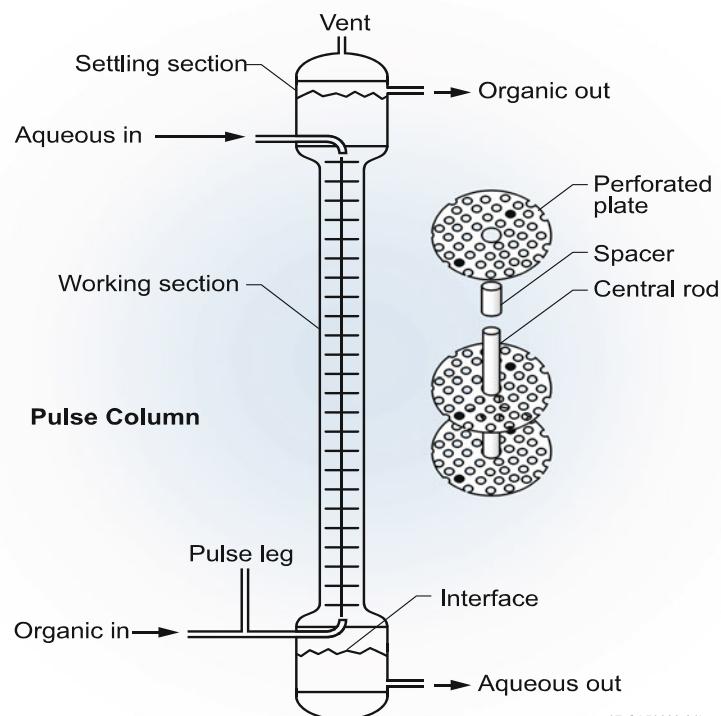

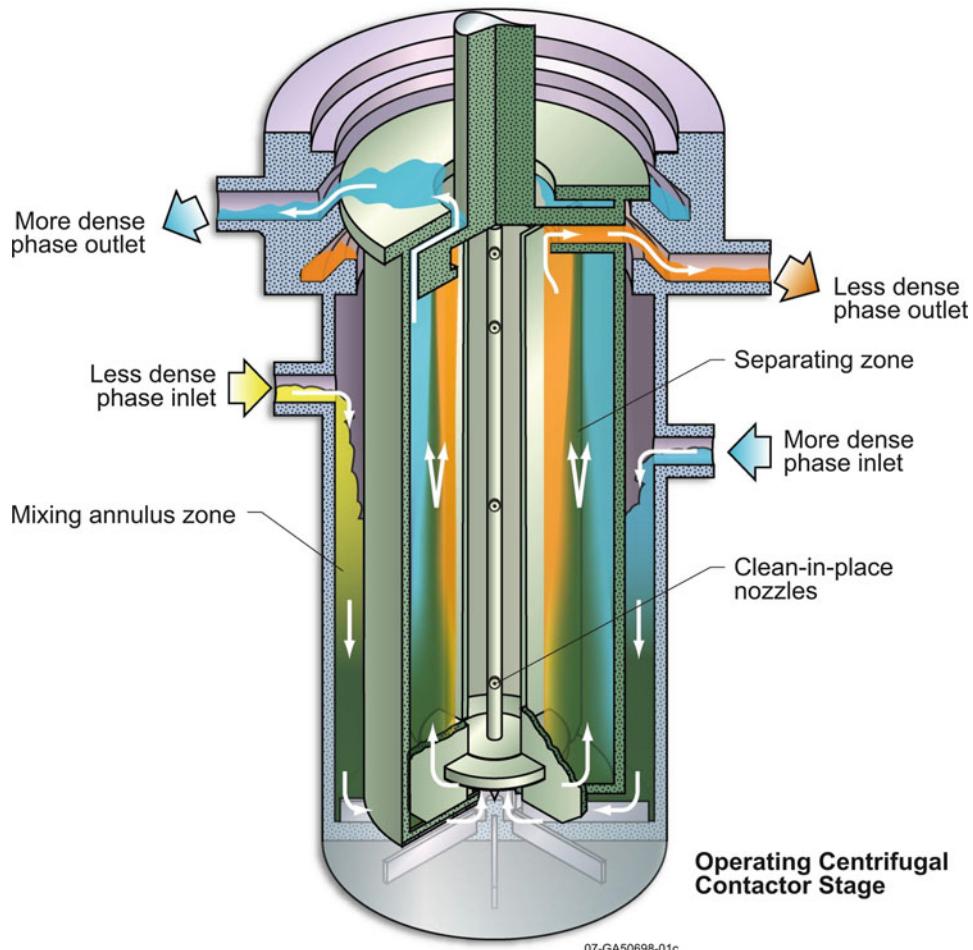

**Nuclear Fuel Reprocessing, Fig. 5** Cutaway view of an operating centrifugal contactor

equipment) are located outside the shielded cell. Extensive literature has been published on pulse columns [9, 26–29]. Pulse columns are the primary type of aqueous separation equipment utilized in the nuclear industry today.

**Centrifugal Contactors.** Centrifugal contactors, like mixer-settlers, are discrete-stage units, providing one stage of extraction per unit and are readily linked together as each rotor pumps separated fluids to the next stage inlet in each direction. The primary difference between a centrifugal contactor and a mixer-settler is the separation of the two-phase mixture. Centrifugal contactors employ a spinning rotor that intensely mixes the two phases and separates the two phases inside the rotor where the centrifugal forces can be

as high as 300 g. This results in efficient and fast phase separation. The separated phases exit the contactor by overflow and underflow weirs, similar to a mixer-settler. A cutaway view of an operating centrifugal contactor is shown in Fig. 5.

Centrifugal contactors have high single-stage efficiency (routinely greater than 95 % of theoretical for chemical processes with rapid kinetics). Process flow interruptions cause no loss of process concentration profiles if centrifugal contactor rotors are kept spinning. Thus centrifugal contactor based processes can be “paused” for a period of time sufficient to reestablish flow or even replace a motor without significant loss of product or rework. Centrifugal contactors require minimal instrumentation for process

operation. Computer control via commercial software allows monitoring of motor amperage, rotor rpm, inlet flow rates, temperatures, and many other process parameters. Centrifugal contactors are used when a process requires short residence times, on the order of several seconds. They require a small facility footprint and minimal headspace, but they do require remote maintenance capability for periodic removal of the motor and/or rotor.

Centrifugal contactors have been the subject of much recent development work over the past 40 years, while the designs of pulse column and mixer-settlers have changed little over the same time period [30–32]. Early designs included a paddle wheel to mix the phases below the spinning rotor [33]. This precluded removal of the rotor assembly. The annular centrifugal contactor was subsequently developed, which allowed the motor and rotor assembly to be easily removed [34]. Other designs included multistage units, units for low-mix applications (higher phase separation), and clean-in-place units that have an array of internal spray nozzles to facilitate solids removal as necessary [35–37]. Design of remote operation and maintenance capabilities has also continued, resulting in more efficient remote handling [38, 39].


## Pyroprocessing

### General Description

Pyroprocessing is currently considered an alternative reprocessing technology to aqueous processing technology. While this technology has yet to reach the commercialization stage, it has been the subject of extensive, government-funded research and development worldwide at the laboratory scale and engineering scale. Pyroprocessing is currently being evaluated in the Republic of Korea (ROK) for management of the used fuel from commercial pressurized water reactors. The US Department of Energy maintains research funding to Argonne National Laboratory and Idaho National Laboratory to develop the technology for future implementation into a closed fuel cycle featuring fast reactors. Researchers from the United States and ROK are currently collaborating under the US-ROK Joint

Fuel Cycle Study (2011–2021) with the objective of evaluating the feasibility of the application of pyroprocessing to the ROK used fuel management problem. For treatment of used metal fuel, pyroprocessing was initially developed during the Integral Fast Reactor (IFR) program, which was carried out at Argonne National Laboratory from about 1984 to 1995 [40, 41]. With the shutdown of Experimental Breeder Reactor-II in 1995, the IFR program was converted into a spent fuel treatment program to condition the 25 metric tons of heavy metal from that reactor for permanent disposal [42]. Treatment of this fuel continues at Idaho National Laboratory (previously Argonne National Laboratory-West) in the Fuel Conditioning Facility hot cell under US DOE support. As part of its development of pyroprocessing technology, Korea Atomic Energy Research Institute (KAERI) has recently started operation of the PRIDE facility, which contains an engineering-scale mock-up of the full process for treating simulated used fuel. It features an integrated process for treating used oxide fuel and processing salt waste but is not designed to handle actual used fuel. Also, Russia has already demonstrated production of MOX based on pyroprocessing and plans to develop a closed fuel cycle using the technology by 2020.

Pyroprocessing accomplishes separation of used fuel in a dry system via a combination of high temperature electrochemical processes and vacuum distillation processes. Pyroprocessing utilizes molten salt electrolytes as the media for separations rather than acidic aqueous solutions and organic solvents [43]. These electrolytes are principally used to support electrochemical separations such as uranium electrorefining and electrolytic reduction of oxide fuel. The process includes vacuum furnaces that accomplish salt/metal separations and melt metal deposits into ingots for either waste disposal or fuel fabrication. Ceramic and metal waste streams are generated that immobilize fission products and, optionally, plutonium and minor actinides into high-level waste forms. For eventual commercial implementation, it is expected that plutonium and minor actinides will be recycled and used for fast reactor fuel fabrication.

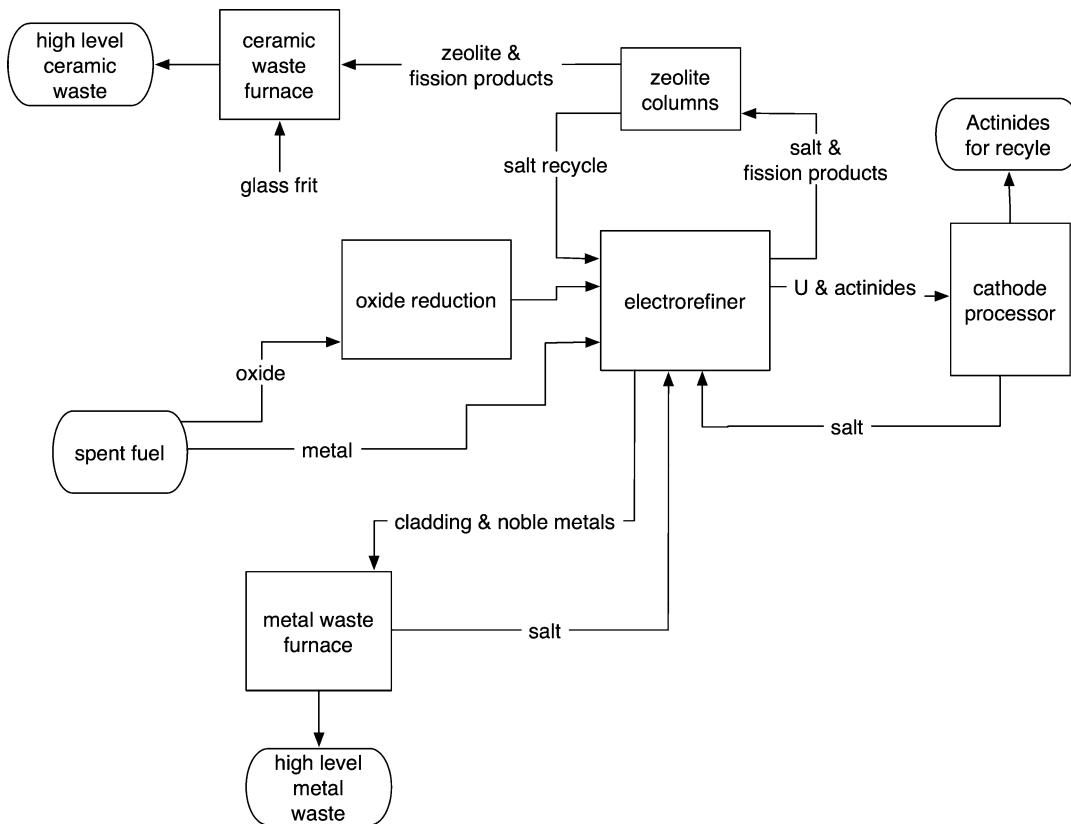

**Nuclear Fuel Reprocessing, Fig. 6** Sample flowsheet for pyroprocessing with options for treating spent metal or oxide fuel


While PUREX and related aqueous reprocessing technology has superior maturity, pyroprocessing does have unique benefits that make it a credible alternative and in some cases a preferred alternative. This includes use of process liquids that are compatible with high burnup, low-cooled fuel, improved criticality safety due to the lack of neutron moderators in the process, waste processing that is integrated with the separations flowsheet, and inability to produce pure plutonium from used fuel.

#### Process Technology

There are many variants of the pyroprocessing flowsheet, but the IFR scheme shown in Fig. 6 can be used as a reference.

The electrorefiner is at the center of the flowsheet and is used to perform the primary separation of actinides from fission products [44, 45]. It

contains a molten salt electrolyte – typically LiCl-KCl-UCl<sub>3</sub> maintained at 450–500 °C. The eutectic composition of LiCl-KCl (44.2 wt% LiCl, 55.8 wt% KCl) is maintained to keep the melting point at approximately 350 °C. The UCl<sub>3</sub> content varies depending on desired operating conditions from about 0.5 to 10 wt%. It is used as a charge carrier for electrotrotransport through the electrolyte. After the spent fuel is chopped into segments, it is loaded into anode baskets, and the baskets are lowered into the electrorefiner. As current is passed between the anode and cathode, U metal is oxidized to U<sup>3+</sup> at the anode and reduced back to metallic form at the steel cathode. The deposit contains high purity uranium and is typically dendritic. A photograph of an electrorefiner currently operating in the Fuel Conditioning Facility at Idaho National Laboratory and an example of a U cathode deposit are shown in Fig. 7.

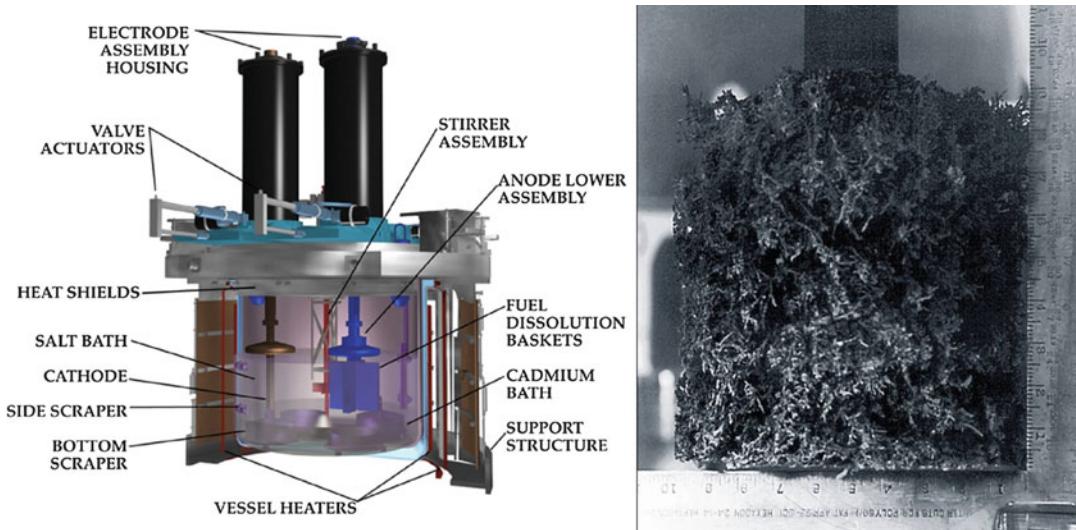

**Nuclear Fuel Reprocessing, Fig. 7** Mark-IV electrorefiner and dendritic uranium deposit on cathode mandrel

Selectivity for uranium electrorefined is achieved based on the standard reduction potentials of the metals found in spent fuel. The uranium potential is about  $-1.2$  V versus an Ag/AgCl reference electrode. More electroactive metals such as plutonium, rare earths, cesium, and strontium form stable chlorides and accumulate in the molten salt. Less electroactive metals such as Zr, Fe, Ni, Mo, etc. remain in the fuel basket. By controlling the potential of the anode within an appropriate range of limits, uranium becomes the most noble metal that is oxidized, which results in it being selectively deposited on the cathode. Under normal conditions, Pu and minor actinides cannot deposit at the cathode, because their back-reaction with  $\text{UCl}_3$  is thermodynamically spontaneous. However, codeposition of U and TRU can be achieved via a combination of elevating the TRU to U ratio in the salt and utilizing a liquid cadmium cathode (LCC) [46, 47]. In the molten cadmium phase, TRU elements have a very low activity coefficient compared to U. Another way of understanding the effect of cadmium is that it promotes the formation of intermetallics with Pu and the other transuranics, which are stable in the metal phase. This allows for TRU metals to be present in quantities comparable to that of uranium in the cadmium. Alternatively, U/TRU codeposition on an inert solid cathode can be

achieved if the cathode potential is sufficiently negative. This typically is driven by high current density via a low cathode area and high anode area. Through either approach, contamination of the cathode product with rare earth fission products is a concern. It is expected that recycled fast reactor fuel can accommodate some rare earths, but their content should obviously be kept at a minimum for optimal fuel performance.


Fission product elements segregate between the anode basket and the molten salt during the electrorefining process. Noble metals such as Tc, Ru, and Rh remain with the cladding hulls in the anode basket. Active metals that typically include Group I and II elements in addition to lanthanides are oxidized to chloride form and accumulate in the salt. If sodium metal is used as a bonding agent, as in the case of EBR-II fuel, this sodium is oxidized to sodium chloride, which accumulates in the ER electrolyte.

Note that based on Fig. 6 both metal fuel and oxide fuel can be treated via pyroprocessing. Treatment of metallic fuel is relatively straightforward due to the fact that it is already in a state compatible with the ER. Oxide fuel must first be converted to metallic form. This can be accomplished in an oxide reduction step. Various methods have been investigated for reducing spent oxide fuel. Early efforts were focused on


chemical reduction via lithium. Similar to electrorefining, a molten salt is used for carrying out this reaction. In this case, it is LiCl saturated with lithium metal at 650 °C. The lithium reduction reaction is as follows [48]:



More recently, a similar process based on electrochemical reactions has been favored for development. It also uses a vessel containing molten LiCl at 650 °C, but it contains lithium oxide in the salt rather than lithium metal. The reactions for the electrolytic process are shown below [49]. And a drawing of the electroreduction cell is shown in Fig. 8.

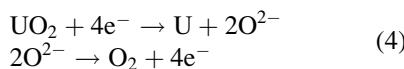

The generated oxygen bubbles out of the salt as a gas and can be sent to an off-gas treatment system to remove any entrained or volatile contaminants. The advantages of the electrolytic method based on the above reactions are that lithium oxide concentration in the molten salt can be kept low (~1 wt%), and there is no need for a separate vessel to regenerate lithium metal from lithium oxide. Low lithium oxide concentration is important for being able to achieve high reduction efficiency for the rare earths. Lithium oxide is also problematic when it is carried over into the electrorefiner, where it will

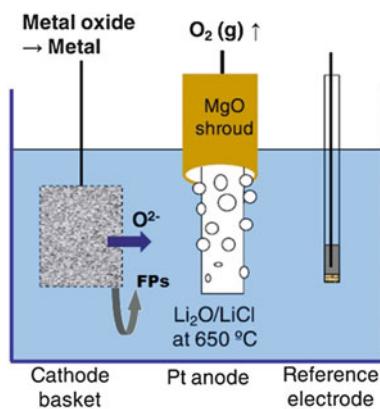

**Nuclear Fuel Reprocessing, Fig. 8** Cell configuration for electrolytic reduction of oxide fuel

spontaneously react with UCl<sub>3</sub> from the electrorefiner salt to form insoluble uranium oxides.


U or U/TRU product deposited on the cathode in the electrorefiner is transferred to a cathode processor, which is essentially a vacuum distillation furnace. A drawing of the Idaho National Laboratory's cathode processor is shown in Fig. 9. The salt is separated from the metals and recycled to the electrorefiner. The purified metals can be fed into a process for fabricating metallic fuel for fast reactors. For the case of the EBR-II Spent Fuel Treatment process, the cathode processor operates at a temperature up to 1200 °C and achieves pressures less than 1 torr [50].

After an electrorefining run, the anode basket contains the cladding hulls; undissolved actinides; inert fuel matrix material such as zirconium, adhering salt; and noble metal fission products such as Tc, Mo, Rh, and Ru. All of this material is removed from the anode baskets and loaded into an inductively heated vacuum distillation furnace that is used to distill adhering salt and consolidate the metals into an ingot. The metal ingot becomes a waste form that has been tested and shown to be suitable for disposal in an HLW repository [51, 52].

Electrorefiner salt becomes progressively more contaminated with fission product chlorides as well as sodium chloride in the process of treating fuel. Once the contamination level has exceeded a predetermined limit, the salt must be removed from the electrorefiner and either disposed or processed through a purification step and returned to the electrorefiner. The basis for that limit can be fission product decay heat, salt melting point, or criticality limits. Another potential limiting factor is contamination of the metallic actinide products recovered in the cathode processor. High concentrations of rare earth fission products in the salt, for example, have been shown to lead to high rare earth contamination levels in the actinide product. Not shown in Fig. 6 is that an actinide drawdown step would be needed prior to any other electrorefiner salt treatment. This would serve the purpose of separating actinides out of the salt (temporarily), so that they do not interfere with processes designed to separate fission products.

### Nuclear Fuel Reprocessing,

**Fig. 9** Cathode processor used in Idaho National Laboratory's Fuel Conditioning Facility

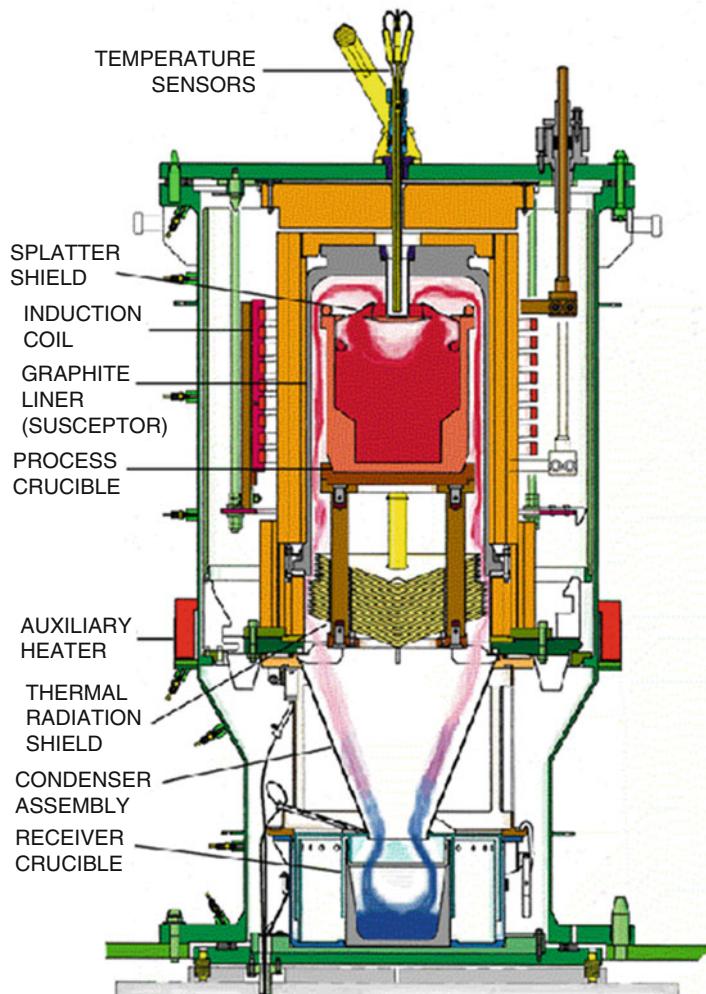

This drawdown could be performed electrochemically (electrowinning) or via addition of a reducing metal such as lithium. The process flowsheet shown in Fig. 6 includes zeolite ion exchange columns for achieving the separation of fission products from the salt. Zeolite-A has been shown to exhibit selectivity for the fission product ions when in contact with molten chloride salt [53–56]. Other alternatives that have been considered for treating the salt to remove fission products and other contaminants include selective precipitation, zone freeze refining, and adsorption by nonzeolitic materials [57].

The current baseline technology for dealing with the salt waste from electrorefining EBR-II spent fuel is to nonselectively immobilize the salt

into a ceramic waste form consisting of glass-bonded sodalite [58, 59]. In this process, salt is removed from the electrorefiner, sized via crushing and milling to a fine particulate, and absorbed into zeolite-4A in a high temperature blending operation. A V-blender capable of heating and mixing particulate material to 500 °C is used for this absorption step. Prior to being loaded into the V-blender, it is necessary to dry the zeolite to less than 1 wt% water. This drying is used to maximize salt absorption in the zeolite while minimizing evolution of water vapor in a high temperature, corrosive environment. Drying the zeolite should also minimize pores in the final ceramic waste form. Zeolite drying is accomplished via mechanically

fluidizing the zeolite under vacuum at temperatures up to 550 °C [58, 59]. Heating the zeolite-4A to temperatures of 600 °C or higher has been determined to cause structural damage that inhibits its ability to absorb salt [60]. Final consolidation into the ceramic waste form occurs after borosilicate glass binder has been mixed with the salt-loaded zeolite, loaded into a steel canister, and heated to a maximum temperature of 915–950 °C. During the process of consolidation, the zeolite-A phase converts to sodalite. In the glass-bonded sodalite waste form, the fission products are distributed between the glass and sodalite phases [61].

If an ion exchange process with zeolite-A has been used to selectively remove fission products from the salt, the resulting fission product loaded zeolite-A can be similarly converted into a glass-bonded sodalite ceramic waste form. Zeolite-A used for ion exchange is typically in pelletized form and must be milled to a fine particulate prior to blending with additional dried zeolite-4A and borosilicate glass. The flowsheet shown in Fig. 6 includes zeolite ion exchange followed by conversion of this zeolite into the ceramic waste form.

Various alternatives for salt waste disposal are currently being evaluated by the US Department of Energy, including direct disposal in a salt repository, immobilization of the salt into a glass matrix, and dechlorination of the salt followed by immobilization in a suitable solid matrix. The objective of these efforts is to increase the concentration of waste in the waste forms and ultimately minimize the impact of pyroprocessing used fuel on a permanent geologic repository.

## Future Directions

In the United States, the current focus is on research and development into both aqueous reprocessing and pyroprocessing technology to support a future decision on closing the fuel cycle. The US Department of Energy established the Fuel Cycle Research and Development program in 2009 for carrying out this research in

national laboratories and universities. At this time, there are no large-scale demonstration projects planned. Meanwhile, plans to open a geologic repository for spent nuclear fuel and waste in Nevada's Yucca Mountain have been suspended. The government commissioned a high-level study (Blue Ribbon Commission) to evaluate alternative options for disposal of the spent fuel and waste, but no action has been taken on the recommendations that were received [62].

In Japan, the main option for reprocessing spent nuclear fuel is based on aqueous process technology. The Rokkasho plant has been built based on such technology and has a design capacity of 800 tons of spent light water reactor fuel per year, which will enable it to extract up to 8 tons of plutonium per year for MOX fuel production. Its startup has been delayed until early 2016. Pyroprocessing is considered an option for fast reactors once they have been included in the Japanese energy fleet. Japan recently vowed to work with France to develop fast breeder reactors, but a commercial fast reactor is not planned for completion in Japan until about 2050.

In France, advanced aqueous processing technologies are being developed and assessed to support future recycling of Am and Cm or the minor actinides together with U and Pu to fast reactors. Pilot-scale demonstration is planned within the next decade with a goal of industrial deployment to support the deployment of Generation IV fast reactors. France is also in the process of selecting a site for a geological repository for disposal of HLW with a goal to open the repository in 2025. Research related to the study of geological formations and the capacity as a deep geological repository for HLW is being conducted at the Meuse/Haute Marne Underground Research Laboratory located in Bure, France.

Russia is currently reprocessing spent fuel from civilian power reactors as well as spent HEU fuel from naval and other reactors at Mayak's RT-1 aqueous reprocessing plant. The Experimental-Demonstration Center (EDC), which will be a 100 metric tons/year pilot facility for evaluation of the fuel cycle based on modified PUREX extraction technology, is currently being designed. This facility will also be used to develop

other advanced processing technologies for processing used fuel from thermal reactors. The current goal is to support completion of a new aqueous reprocessing facility around 2025. Research is also actively being performed relative to pyroprocessing technologies for the processing of spent fuel from future fast reactors. To this end, the Multipurpose Pyroprocessing Complex (MPC) is being designed at the Research Institute of Atomic Reactors (RIAR) to support molten salt processing development at a capacity of up to 2500 kg fast reactor used fuel per year.

In South Korea (Republic of Korea), on-site wet storage capacity for spent nuclear fuel at its 20 operating nuclear power plants is rapidly approaching current limits. In December 2008, Atomic Energy Commission of South Korea decided to develop a closed fuel cycle associated with pyroprocessing and sodium fast reactors (SFR) with metallic fuels. A demonstration SFR is planned to operate from 2030 initially with U-Zr metal fuels and later with recycled U/TRU/Zr metal fuels produced from pressurized water reactor (PWR) spent nuclear fuel in a pyroprocessing facility that is planned to be operated from 2025. Pyroprocessing technology research and development continues at Korea Atomic Energy Research Institute with plans to build an engineering-scale facility in the near future, subject to nuclear cooperation negotiations with the United States. Aqueous reprocessing technology is currently not being actively studied and is not considered a candidate for commercialization in the Republic of Korea. The lack of a high-level waste repository is another problem faced by the country due to severely limited land resources. Waste minimization is, thus, a major objective with pyroprocessing technology research and development in South Korea.

## Bibliography

- Cochran RG, Tsoufianidis N (1993) The nuclear fuel cycle: analysis and management, 2nd edn. American Nuclear Society, Washington D.C., p 214
- OECD, IAEA (2008) Uranium 2007: resources, production, and demand. Nuclear Energy Agency, Paris
- Gray LW (1999) From separations to reconstitution – a short history of plutonium in the US and Russia. Lawrence Livermore National Laboratory, UCRL-JC-133802
- Evans TF, Tomlinson RE (1954) Hot semiworks REDOX studies. Hanford Atomics Products Operations, HW-31767
- REDOX technical manual (1951) Hanford Works, HW-18700
- Hore-Lacy I (2009) Mixed oxide fuel (MOX) (World Nuclear Association (Content Partner); Cutler J. Cleveland (Topic Editor)). In: Cleveland CJ (ed) Encyclopedia of earth. Environmental Information Coalition, National Council for Science and the Environment, Washington, DC
- Denniss IS, Jeapes AP (2001) Reprocessing irradiated fuel. In: Wilson PD (ed) The nuclear fuel cycle: from ore to wastes. Oxford University Press, Oxford, UK, p 120
- Poczynajlo A (1988) Studies on reductive back extraction of plutonium in PUREX process. *J Radioanal Nucl Chem* 125(2):445–465
- Long JT (1967) Engineering for nuclear fuel reprocessing. Gordon and Breach Science Publishers, New York
- Petitjean V, Fillet C, Boen R, Veyer C, Flament T (2002) Development of vitrification process and glass formulation for nuclear waste conditioning. In: Proceedings of waste management 2002, Tucson
- Spent fuel reprocessing options (2008) International Atomic Energy Administrations, IAEA-TECDOC-1587, Vienna
- Boullis B (2008) Future nuclear fuel cycles: prospects and challenges. In: Moyer B (ed) Solvent extraction: fundamentals to industrial applications. Proceedings of ISEC 2008 international solvent extraction conference, Tucson, AZ, vol 1. pp 29–42
- Nash K (2008) Key features of the TALSPEAK and similar trivalent actinide-lanthanide partitioning processes. In: Moyer B (ed) Solvent extraction: fundamentals to industrial applications. Proceedings of ISEC 2008 international solvent extraction conference, Tucson, AZ, vol 1. pp 511–519
- Laidler J (2008) An overview of spent-fuel processing in the Global Nuclear Energy Partnership. In: Moyer B (ed) Solvent extraction: fundamentals to industrial applications. Proceedings of ISEC 2008 international solvent extraction conference, Tucson, AZ, vol 1. pp 695–701
- Riddle C, Baker J, Law J, McGrath C, Meikrantz D, Mincher B, Peterman D, Todd T (2005) Development of a novel solvent for the simultaneous separation of strontium and cesium from acidic solutions. *Solvent Extr Ion Exch* 23(3):449–461
- Christiansen B, Apostolidis C, Carlos R, Courson O, Glatz JP, Malmbeck R, Pagliosa G, Römer K, Serrano-Purroy D (2004) Advanced aqueous reprocessing in P&T strategies: process demonstrations on genuine fuels and targets. *Radiochim Acta* 92:475–480

17. Miguiditchian M, Chareyre L, Hérès X, Hill C, Baron P, Masson M (2007) GANEX: adaptation of the DIAMEX-SANEX process for the group actinide separation. In: Proceedings of GLOBAL 2007 advanced nuclear fuel cycles and systems, Boise
18. Wigeland R, Bauer T, Fanning T, Morris E (2006) Separations and transmutation criteria to improve utilization of a geologic repository. *Nucl Technol* 154(1):95–106
19. Drain F, Emin JL, Vinoche R, Baron P (2008) COEX process: cross-breeding between innovation and industrial experience. In: Proceedings from waste management 2008, Tucson
20. Katsuta, Tadahiro, and Tatsujiro Suzuki (2011). Japan's spent fuel and plutonium management challenge. *Energy Policy* 39(11):6827–6841
21. Pereira C, Vandegrift G, Regalbuto M, Bakel A, Bowers D, Gelis A, Hebdon A, Maggots L (2007) Lab-scale demonstration of the UREX + 1a process using spent fuel. In: Proceedings from waste management 2007, Tucson
22. Nuñez L, Vandegrift G (2000) Evaluation of hydroxamic acid in uranium extraction process: literature review. Argonne National Laboratory, ANL00/35
23. Colven TJ Jr (1956) Mixer-settler development-operating characteristics of a large-scale mixer-settler. Savannah River Laboratory, DP-140
24. Davidson JK, Shafer AC, Haas WO (1957) Application of mixer-settlers to the PUREX process. In: The symposium on the reprocessing of irradiated fuels, book 1. United States Atomic Energy Commission, TID-7534
25. Benedict M, Pigford TH, Levi HW (1981) Nuclear chemical engineering. McGraw-Hill, New York, p 210
26. Milot JF, Duhamet J, Gourdon C, Casamatta G (1990) Simulation of a pneumatically pulsed liquid-liquid extraction column. *Chem Eng J* 45:111–122
27. Sege G, Woodfield FW (1954) *Chem Eng Prog* 50(8)
28. Geier RG (1954) Application of the pulse column to the PUREX process. USACC, Report TID-7534
29. Richardson GL, Platt AM (1961) Progress in nuclear energy, series IV, technology engineering and safety, vol 4. Pergamon Press, New York
30. Leonard RA (1988) Recent advances in centrifugal contactor design. *Separation Sci Technol*, 23(12&13): 1473–1487
31. Jubin RT et al (1988) Developments in centrifugal contactor technology. Oak Ridge National Laboratory, ORNL/TM-10768
32. Meikrantz DH et al (2001) Annular centrifugal contactors for multiple stage extraction processes. *Chem Eng Commun* 188
33. Watts C (1977) Solvent extraction equipment evaluation study – part 2. Battelle Northwest Laboratory, BNWL-2186 Pt. 2
34. Bernstein GL et al (1973) A high-capacity annular centrifugal contactor. *Nucl Technol* 20
35. Drain F et al (2003) Forty years of experience with liquid-liquid extraction equipment in the nuclear industry. In: Proceedings from waste management conference 2003, Tucson
36. Meikrantz DH et al (1996) Rotor sleeve for a centrifugal separator. US Patent # 5,571,070
37. Macaluso LL, Meikrantz DH (1999) Self-cleaning rotor for a centrifugal separator. US Patent # 5,908,376
38. Garn TG, Meikrantz DH, Law JD (2008) Remote evaluation of a three-stage 5 cm annular centrifugal contactor remote module at the INL. Idaho National Laboratory, INL/EXT-08-13670
39. Meikrantz DH, Garn TG, Law JD, Macaluso LL (2009) Evaluation of a new remote handling design for high throughput annular centrifugal contactors. Idaho National Laboratory INL/EXT-09-16824
40. Chang YI (1989) The integral fast reactor. *Nucl Technol* 188(2):129–138
41. Till CE, Chang YI, Hannum WH (1997) The integral fast reactor – an overview. *Prog Nucl Energy* 31(1–2):3
42. Benedict RW (1997) EBR-II spent fuel treatment demonstration project. *Trans Am Nucl Soc* 77:75–76
43. Ackerman JP (1991) Chemical basis for pyrochemical reprocessing of nuclear fuel. *Ind Eng Chem Res* 30(1):141–145
44. Willit JL, Miller WE, Battles JE (1992) Electrorefining of uranium and plutonium – a literature review. *J Nucl Mater* 195(3):229–249
45. Goff KM, Benedict RW (2005) Electrorefining experience for pyrochemical reprocessing of spent EBR-II fuel. In: Proceedings of global 2005, Tsukuba
46. Li SX, Herrmann SD, Benedict RW, Goff KM, Simpson MF (2009) Actinide recovery experiments with bench-scale liquid cadmium cathode in real fission product-laden molten salt. *Nucl Technol* 165:190–199
47. Vaden D, Li SX, Westphal BR, Davies KB, Johnson TA, Pace DM (2008) Engineering-scale liquid cadmium cathode experiments. *Nucl Technol* 162(2): 124–128
48. Karel EJ, Gourishankar KV, Smith JL, Chow LS, Redey L (2001) Separation of actinides from LWR fuel using molten-salt-based electrochemical processes. *Nucl Technol* 136:342–353
49. Gourishankar K, Redey L, Williamson M (2002) Electrochemical reduction of metal oxides in molten salts. In: Light metals 2002. TMS, Warrendale, PA
50. Westphal BR, Marsden KC, Price JC, Laug DV (2008) On the development of a distillation process for the electrometallurgical treatment of irradiated spent nuclear fuel. *Nucl Eng Technol* 40(3):163–174
51. Westphal BR, Keiser DD, Rigg RH, Laug DV (1994) Production of metal waste forms from spent fuel treatment. In: Proceedings of the DOE spent nuclear fuel meeting: challenges and initiatives, Salt Lake City, 13–16 Dec 1994
52. Abraham DP, McDeavitt SM, Park J (1996) Metal waste forms from the electrometallurgical treatment of spent nuclear fuel. In: Proceedings of the embedded topical meeting on DOE spent nuclear fuel and fissile material management, Reno, 16–20 June 1996

53. Pereira C, Hash MC, Lewis MA, Richmann MK, Basco J (1999) Incorporation of radionuclides from the electrometallurgical treatment of spent fuel into a ceramic waste form. Mater Res Soc Symp Proc 556:115
54. Ahluwalia RK, Geyer HK, Pereira C, Ackerman JP (1998) Modeling of a zeolite column for the removal of fission products from molten salt. Ind Eng Chem Res 37:145
55. Lexa D, Johnson I (2001) Occlusion and ion exchange in the molten (lithium chloride-potassium chloride-alkali chloride) salt + zeolite 4A system with alkali metal chlorides of sodium, rubidium, and cesium. Metall Mater Trans 32B:429
56. Phongikaroon S, Simpson MF (2006) Two site equilibrium model for ion exchange between multivalent cations and zeolite-A in a molten salt. AIChE J 52(5):1736–1743
57. Kim EH, Park GI, Cho YZ, Yang HC (2008) A new approach to minimize pyroprocessing waste salts through a series of fission product removal process. Nucl Technol 162(2):208–218
58. Simpson MF, Sachdev P (2008) Development of electrorefiner waste salt disposal process for the EBR-II spent fuel treatment project. Nucl Eng Technol 40(3):175
59. Simpson MF, Goff KM, Johnson SG, Bateman KJ, Battisti TJ, Toews KL, Frank SM, Moschetti TL, O'Holleran TP (2001) A description of the ceramic waste form production process from the demonstration phase of the electrometallurgical treatment of EBR-II spent fuel. Nucl Technol 134:263–277
60. Thomas JL, Mange M, Eyraud C (1971) In: Gould RF (ed) Molecular sieve zeolites-I. American Chemical Society, Washington, D.C
61. Ebert WE (2005) Testing to evaluate the suitability of waste forms developed for electrometallurgically treated spent sodium-bonded nuclear fuel for disposal in the Yucca Mountain repository. Argonne National Laboratory, ANL-05/43, Sept 2005
62. Hamilton LH, Scowcroft B, Ayers MH, Bailey VA, Carnesale A, Domenici PV, Eisenhower S, Hagel C, Lash J, Macfarlane AM, Meserve RA (2012) Blue Ribbon Commission on America's Nuclear Future: report to the Secretary of Energy. Blue Ribbon Commission on America's Nuclear Future (BRC), Washington, DC



## Nuclear Facilities Decommissioning

David R. Turner

Department of Physics and Environmental Sciences, St. Mary's University, San Antonio, TX, USA

### Article Outline

Glossary

Definition of the Subject

Introduction

Types of Nuclear Facilities

General Methodologies for Decommissioning

Status of Decontamination and Decommissioning

Future Directions

Bibliography

### Glossary

**Decommissioning** Nuclear decommissioning is a term used to describe the process of removing a nuclear facility or site safely from service and reducing residual radioactivity to a level that permits (i) release of the property for unrestricted use and termination of the license or (ii) release of the property under restricted conditions and termination of the license. Although waste classification and management is an important aspect of decommissioning, the details of radioactive waste management and disposal are not addressed in this article.

**Decontamination** The removal of undesired residual radioactivity from facilities, soils, or equipment, prior to the release of a site or facility and termination of a license. Also known as remediation, remedial action, and cleanup.

**Exposure pathway** The route by which radioactivity travels through the environment to

eventually cause radiation exposure to a person or group.

**Financial assurance** A guarantee or other financial arrangement that ensures funds for decommissioning will be available when needed.

**Institutional controls** Administrative and physical measures to control access to a site and minimize disturbances to engineered measures established to control the residual radioactivity.

**Monitoring** The measurement of radiation levels, concentrations, surface area concentrations, or quantities of radioactive material and the use of the results of these measurements to evaluate potential exposures and doses.

**Nuclear fuel cycle** Consists of the different stages necessary to produce nuclear power. Specific stages include (i) the *front end* of the nuclear fuel cycle where uranium is mined and fuel is prepared, (ii) the *service period* in which the fuel is used during reactor operation, and (iii) the *back end*, which involves safe management, containment, and either reprocessing or disposal of spent nuclear fuel. Because uranium fuel is the most common type of nuclear fuel, this article focuses on the uranium nuclear fuel cycle.

**Radiological survey** An evaluation of the radiological conditions and potential hazards at a site related to the production, use, transfer, release, disposal, or presence of radioactive material or other sources of radiation. Radiological surveys can be used to provide the basis for acquiring necessary technical information to develop, analyze, and select appropriate cleanup techniques.

**Residual radioactivity** Radioactivity in structures, materials, soils, groundwater, and other media at a site resulting from activities under the licensee's control, excluding background radiation.

### Definition of the Subject

The collective process of safely shutting down, dismantling, cleaning up, reclaiming, and

monitoring nuclear facilities is collectively known as nuclear decommissioning. Nuclear power has been used as a source of energy for more than 50 years, and more than 500 nuclear reactors have been constructed and operated worldwide [1]. In addition to power plants, the nuclear fuel cycle requires different types of facilities to mine uranium, produce fresh nuclear fuel and fuel assemblies, and manage spent nuclear fuel and associated radioactive wastes after the fuel can no longer be effectively used to produce power. Many of the facilities associated with the nuclear fuel cycle that supports these reactors, as well as the reactors themselves, have either reached or are approaching the end of their planned service life. Indeed, despite a recent increase in reactor construction, much of the current reactor fleet is more than 30 years old [2]. Also, some countries such as Germany, Belgium, Switzerland, and Sweden have initiated national policies to either eliminate or phase out nuclear power over time [3, 4]. Owners and operators of nuclear facilities, as well as government agencies responsible for their regulation, must evaluate economic and public policy considerations to determine whether to renew facility licenses or to permanently remove facilities from service and decommission them to release the sites for other potential uses.

Definitions of nuclear decommissioning, radiological dose limits for different levels of site release (e.g., restricted, unrestricted), and even terminology can vary from country to country depending on the nature of the laws and regulations that govern the nuclear fuel cycle. The International Atomic Energy Agency (IAEA) defines decommissioning as "...the administrative and technical actions taken to allow the removal of some or all of the regulatory controls from a facility" [5]. Similarly, the Nuclear Energy Agency (NEA) sponsored by the Organisation for Economic Cooperation and Development (OECD) broadly defines decommissioning as covering "all of the administrative and technical actions associated with cessation of operation and withdrawal from service" [1]. The World Nuclear Association (WNA) defines the two main objectives of decommissioning as rendering the site permanently safe and restoring it, "as far as

practicable, for reuse" for nuclear or nonnuclear activities. Reuse can apply to different components of a nuclear facility, including land, water bodies, buildings, equipment, and materials [6].

For national programs that are based on well-established regulations, planned decommissioning begins when a facility is taken off-line and removed from service. Some early nuclear facilities were designed and constructed without explicit consideration of end-of-life-cycle issues such as decommissioning, and these "legacy" sites continue to be identified and cleaned up. In the absence of a financial surety, decommissioning these sites is often at public expense. Planning for decommissioning should begin at the design stage, before a facility enters operation [5, 7]. For example, early decisions about construction materials, site layout, spill prevention and control measures, waste management, and financial assurance can all influence decommissioning activities at the end of a facility's life cycle and may be made (or be required) before a facility receives an operating license. Similarly, some national nuclear regulatory programs require that decommissioning plans be submitted with the initial license application and periodically reevaluated and updated during the operating life of the facility [7, 8]. Decommissioning is generally considered complete when the facility is removed from regulatory control (e.g., the license is terminated) and the site is made available for other uses. As will be discussed throughout this article, a planned decommissioning process can extend over decades.

The processes and technologies involved are similar to those used for other industrial facilities, but because of the nature of the materials used in the nuclear fuel cycle, nuclear decommissioning tends to be a regulated process that requires special procedures to safely handle and dispose of radioactive materials. The specific methods used in nuclear decommissioning vary widely, depending on factors such as the type, size, age, operational history, and design of a given nuclear facility. National policies differ on detailed objectives, and individual countries are likely to have different issues of concern such as the future use

of nuclear power, the continued availability of trained staff, socioeconomic effects on surrounding communities that may result from shutting down a large facility, and financial issues associated with funding decommissioning activities.

For these reasons, there is no unique or preferred “one size fits all” approach to the nuclear decommissioning process. The intent of this article is neither to endorse any particular approach, nor is it to describe all potential aspects of nuclear decommissioning in detail, but rather to provide a broad overview of generally applicable principles. This article also focuses on decommissioning facilities associated with the commercial-scale production of nuclear power. Other processes that use or generate nuclear materials such as military programs, nuclear medicine, and industrial operations that produce radioactive materials as a by-product are beyond the intended scope of this discussion. Furthermore, this article is focused on normal operations. Accidents at nuclear facilities are handled on a case-by-case basis using emergency procedures, and the severity and extent of the accident will greatly influence the specific course that decommissioning will ultimately follow. Because of its inherent site- and incident-specific nature, decommissioning a site damaged by an accident is beyond the intended scope of this article. The reader is referred to the references identified in the Bibliography for further information and more detailed discussion of the processes described here.

## Introduction

In 2012, nuclear reactors provided almost 11% of the world’s electricity. Thirteen countries relied on nuclear energy to provide more than 25% of their total electricity, led by France with 76.8% [9]. Currently (March 2016) 442 nuclear power reactors are in operation, with 66 new reactors under construction, mostly in China and Southeast Asia [10]. Worldwide, two reactors are in long-term shutdown, and a total of 157 reactors are in permanent shutdown [10]. But power production is only part of the nuclear energy process. In addition to nuclear reactors, generating nuclear power

requires different types of facilities to support the nuclear fuel cycle. For example, as of August 2003, the IAEA reported that there were 423 operating nuclear fuel cycle facilities, with 19 more under construction. Eventually, decisions will need to be made with regard to closing and decommissioning these facilities in a safe manner and potentially returning the land to other uses.

More than 50 years since the first nuclear power reactor went online, many of the facilities associated with commercial-scale nuclear power generation are now approaching the end of their planned service life. For example, the European Union estimates that at least one-third of the 152 nuclear power plants operating in its member countries will need to be decommissioned by 2025 [3], and the IAEA reported that 297 nuclear fuel cycle facilities were shut down or in the process of being decommissioned worldwide as of August 2003 [5]. An even larger number of manufacturing and research facilities (about 1,600) that use radioactive material will need to be decommissioned “over the coming decades” [11].

At the same time, increased global energy demand, coupled with a growing concern about the effects of carbon emissions from traditional fossil fuel sources, has sparked renewed interest in nuclear power generation. As an example, the US Nuclear Regulatory Commission (USNRC), the agency responsible for licensing and regulating commercial nuclear activities in the United States, reported in October 2015 that it was reviewing applications to construct and operate 16 new commercial nuclear reactors [12]. Although some countries are deemphasizing nuclear power, other countries, particularly in Asia, have indicated a renewed interest in nuclear power as a component of their overall energy portfolio [4, 9, 13].

The anticipated nuclear renaissance to counterbalance greenhouse gas emissions, however, has been complicated by issues such as the global recession that began in 2007 and the March 2011 Tōhoku earthquake (magnitude 9.0) and resulting tsunami that caused the failure of four reactors at the Fukushima Daiichi Nuclear Power Plant in Japan. Concerns over nuclear safety and the

costs associated with commissioning new reactors appear to have reduced plans for nuclear expansion [2, 14]. In addition, recent technological advances in horizontal drilling and hydraulic fracturing have increased global natural gas supplies and decreased prices to the point where it is making significant inroads as a fuel in power generation [15].

Together, these developments have complicated the future expansion of nuclear energy, but it seems likely that interest in nuclear energy and all stages of the commercial nuclear fuel cycle will continue for the foreseeable future [14]. For this reason, methods to safely take nuclear facilities out of service and decommission them will continue to be an important component of global energy policy. It is these planned decommissioning methods that are the subject of this article.

Although primarily developed for nuclear power plants, there are three basic types of alternative decommissioning strategies that may be generally applicable to other nuclear facilities:

- A strategy of immediate decontamination and dismantlement [1, 8] (also defined as DECON [12, 16]) begins soon after the nuclear facility closes.
- Safe storage [1], deferred or delayed decontamination and dismantlement [8], or SAFSTOR [17, 18] refer to decommissioning strategies where a nuclear facility is left intact after closing, placed in a stable condition, and maintained and monitored until subsequent dismantlement and decommissioning. Similarly, uranium production facilities (mines and mills) may be placed on standby status when uranium prices are low and deposits cannot be produced at a profit.
- A strategy of entombment [1, 8] or ENTOMB [17, 18] involves encasing radioactive materials onsite in a long-lived, structurally sound material such as concrete. IAEA removed this strategy as an option for planned decommissioning of nuclear reactors, limiting its use to exceptional situations such as a severe accident [19]. This strategy was used in the United States to decommission several small early research reactors.

ENTOMB is still an option for US commercial reactors undergoing decommissioning, but to date no USNRC licensees have pursued entombment for decommissioning [20].

The first two strategies may also be combined. For example, some facilities at a site may be immediately dismantled, while other structures are placed in safe storage. Generally, decommissioning activities are anticipated to be completed in a period of decades from the end of operations [17, 18].

Once the decommissioning strategy is selected for a given facility, general activities associated with nuclear decommissioning may include:

- Characterizing the features of the site and conducting radiological surveys to determine radiation background and residual radiation levels
- Developing a site-specific decommissioning plan
- Estimating cost
- Conducting safety and performance assessments
- Decontaminating structures, equipment, and components for reuse or recycling
- Dismantling and removing buildings, structures, and equipment from the site
- Remediating contaminated soils and groundwater
- Performing waste management and disposal
- Conducting final inspections and surveys
- Reclaiming disturbed lands
- Implementing active institutional controls and monitoring

Specific decommissioning activities and technologies are determined on a case-by-case basis and can depend on many things at a given site, such as the duration, type, and scale of operations; the geologic setting of the site; socioeconomic considerations; and the regulatory policies of the government. In addition, a key part of a decommissioning plan is estimating future costs to establish financial arrangements that ensure resources are available to complete the decommissioning process.


## Types of Nuclear Facilities

As described in section “[Introduction](#),” generating electricity from nuclear power plants is only part of the nuclear fuel cycle [21], and decisions will need to be made with regard to the safe closure and decommissioning of each of these facilities. To understand any unique aspects that will need to be addressed during nuclear decommissioning, it is important to describe the general nature of the activities that are conducted at each type of facility in the nuclear fuel cycle. Because uranium fuel is the most common type of nuclear fuel, this article focuses on the uranium nuclear fuel cycle (Fig. 1).

To support the nuclear fuel requirements of commercial power-generating facilities, there are facilities that:

- Produce uranium by mining
- Mill ore to concentrate the uranium and package it for transportation
- Purify and transform the uranium concentrate into a form suitable for fuel manufacture through a process called uranium conversion
- Enrich the uranium in isotopes (235-U) that can produce sustainable nuclear reactions
- Fabricate reactor fuel components and fuel assemblies

These facilities are part of the “front end” of the nuclear fuel cycle. Decommissioning issues for the front end of the fuel cycle are typically associated with naturally occurring radioactivity, such as uranium and radium, and hazards associated with the chemical processing of natural uranium-bearing ores [5].

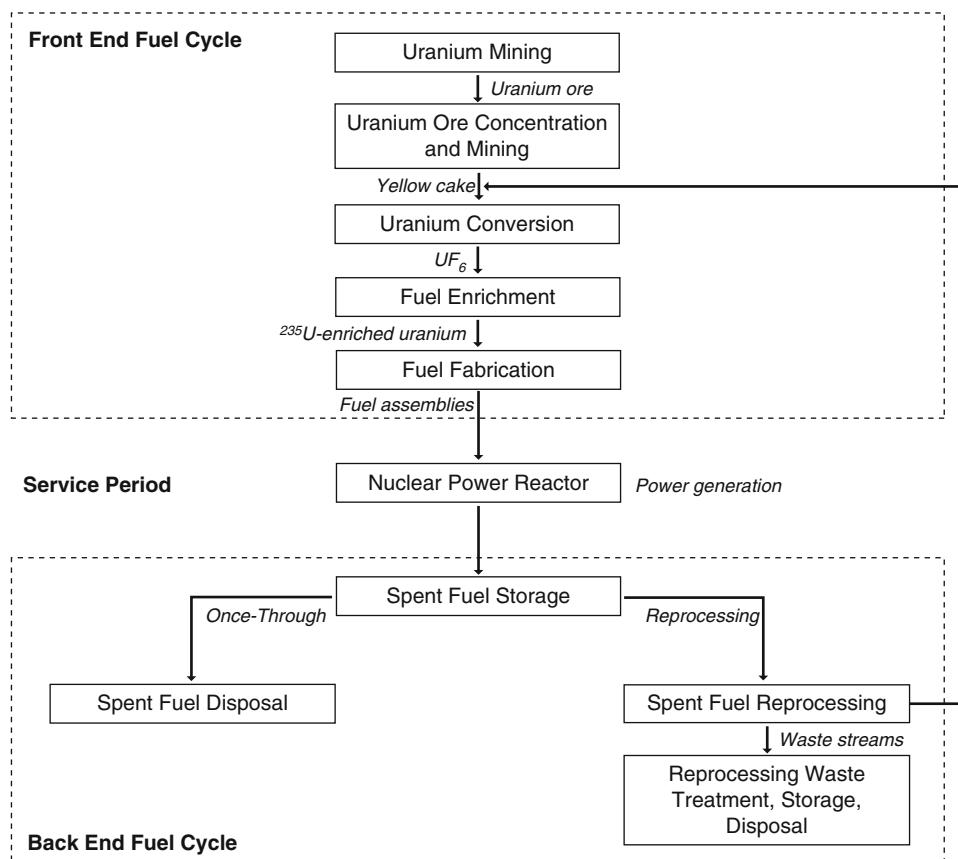

**Nuclear Facilities Decommissioning, Fig. 1** Simplified diagram representing the nuclear (uranium) fuel cycle

After the nuclear fuel is used in a commercial reactor to produce electrical power during the service period, the management of the spent nuclear fuel at the “back end” of the nuclear fuel cycle can include facilities that:

- Reprocess the fuel to extract nuclear materials and recycle uranium back into the front end of the fuel cycle
- Store or permanently dispose of spent nuclear fuel

At the back end of the fuel cycle, high-level sources of radioactivity and direct irradiation from spent nuclear fuel are decommissioning concerns in addition to natural radioactivity and chemical processing hazards [6]. An example of the typical material balance for the annual operation of a 1,000 MW electric (MWe) nuclear power reactor [22] is included in Table 1.

**Nuclear Facilities Decommissioning,**  
**Table 1** Material balance for the annual operation of a 1,000 MWe nuclear power reactor [22]

Type of nuclear facility	Material balance <sup>a</sup>
Mining	20,000 mt [22,000 t] of 1 % uranium ore
Milling	230 mt [250 t] uranium oxide concentrate ( $\text{U}_3\text{O}_8$ ) containing 195 mt [215 t] of uranium
Uranium conversion	288 mt [317 t] uranium hexafluoride ( $\text{UF}_6$ )
Fuel enrichment	35 mt [39 t] $\text{UF}_6$ , containing 24 mt [27 t] enriched uranium (4 % U-235), 11 mt [12 t] depleted uranium (0.25 % U-235) tails
Fuel fabrication	27 mt [30 t] $\text{UO}_2$ , containing 24 mt [30 t] enriched uranium
Reactor operation	8,640 million kWh electricity at full output (assuming 100 % load factor)
Spent nuclear fuel	27 mt [30 t] spent nuclear fuel containing 23 mt [25 t] uranium (0.8 % U-235 as $\text{UO}_2$ ), 240 kg [529 lb] plutonium, 720 kg [1,587 lb] fission products, and transuranic elements

<sup>a</sup>Assuming enrichment to 4 % U-235 with 0.25 % tails assay; core load 72 mt [79 t] U, refueling so that 24 mt [26 t] U/year replaced; operation – 45,000 MWday/t (45 GWday/t) burnup, 33 % thermal efficiency

Each of these facilities will require nuclear decommissioning at the end of its life cycle. Usually, the operator of a facility develops a decommissioning plan (see section “[Developing a Site-Specific Decommissioning Plan](#)”) to identify specific activities, estimate costs, and lay out a schedule [23–26]. The plan is submitted to the regulatory agency to ensure that it complies with the applicable regulations. Once it is approved, the initial decommissioning plan is periodically updated and becomes more detailed as the facility evolves during its operational life. At the end of the facility life cycle, the decommissioning plan serves as a blueprint for the nuclear decommissioning process. During decommissioning, the regulatory agency may periodically inspect the site to ensure that the decommissioning plan is being implemented correctly.

The following sections introduce the types of nuclear facilities associated with generating nuclear power and identify features that may influence nuclear decommissioning decisions and activities. The listing is not intended to be exhaustive, nor is it intended to provide a detailed discussion of the complex regulatory controls that may apply for a given type of nuclear facility. The reader is referred to the references identified in the Bibliography for further reading.

## Front-End Fuel Cycle Facilities

### Uranium Mining

At the start of the nuclear fuel cycle, uranium mining focuses on extracting natural uranium ore from the earth. Uranium mining may be done through a conventional process of excavation by open pit or underground mining techniques. During excavation, uranium ore is segregated from waste rock or overburden and shipped to a uranium mill for further processing (see section “[Uranium Milling](#)”). Open pit and underground uranium mines are typically decommissioned and reclaimed in accordance with regulations applicable to the mining industry in general [27]. In many ways decommissioning a uranium mine is subject to challenges similar to those faced in cleaning up mining operations for other

resources such as coal and metals. For example, excavations may need to be backfilled, pit walls and disturbed surfaces recontoured, and revegetated to meet applicable mine reclamation standards. Groundwater contamination plumes with elevated levels of uranium and associated heavy metals (e.g., arsenic, selenium) need to be remediated and monitoring systems installed, as appropriate.

Alternatively, uranium recovery may be through a process called in situ leaching (ISL) where chemical fluids are injected through a series of wells into the subsurface to dissolve uranium from ore minerals. The now uranium-enriched solution is pumped back to the surface for subsequent extraction and processing [16, 27–29]. Decommissioning of ISL uranium facilities is different from cleaning up conventional uranium mining operations. For example, because there are no large-scale excavations associated with the ISL uranium recovery technology, surface land disturbance is much less than with conventional mining methods, and large amounts of waste rock are not generated. This can simplify the reclamation effort, but impacts to groundwater are potentially greater. For this reason, plugging and abandoning injection and production wells, and restoring groundwater quality to premining levels, tends to be a focus in decommissioning ISL facilities [16]. In addition, although the surface facilities such as wellheads and pump houses necessary to support ISL uranium mining may be small compared to conventional operations, the well fields themselves may be very large. For example, the permitted areas for ISL operations in Wyoming and Texas may be as large as 6,500 ha [16,000 acres] and individual well fields may contain hundreds to thousands of wells [16].

### Uranium Milling


While varying depending on the deposit and the type of ore, uranium ores typically have a concentration of about 1% or less uranium ( $\text{U}_3\text{O}_8$ ) by weight, although it can be as high as 20%. Decommissioning uranium milling facilities is generally concerned with naturally occurring radioelements such as uranium, thorium, and radium. For conventional uranium mining and

milling operations (Fig. 2), uranium is concentrated through milling (crushing, grinding, separation) and subsequent chemical processing of the ore using alkaline or acid leaching solutions to produce a product called “yellow cake,” a coarse powder that is approximately 70% or more  $\text{U}_3\text{O}_8$  by weight. Milling operations are similar for ISL uranium, but because the mill input is uranium-bearing solutions instead of solid ore, the crushing and grinding and leaching circuits are not necessary.

Depending on the economics of the operation, a mill may be colocated with a uranium mine, or it may be separated, charging a “toll” to accept and mill ore (conventional) or uranium-bearing solutions (ISL) from nearby uranium mines. Because of the throughput of uranium-bearing solutions and the handling of yellow cake, some of the buildings, pipes, and equipment in the mill may become radioactively contaminated with natural radioelements over time and will need to be decontaminated and/or disposed of during decommissioning. Spills and unintentional releases of uranium-rich solutions can lead to soil and groundwater contamination that may need to be remediated during decommissioning. In addition, during conventional milling, large quantities of waste solids are produced by the crushing, grinding, and leaching circuits. These waste solids, or “tailings,” are placed in large impoundments that will also need to be decommissioned at the end of the mill’s operational life. ISL facilities do not treat solid rock and therefore produce no tailings. Because these facilities handle large volumes of uranium-rich solutions, however, they may have one or more evaporation ponds that will eventually need to be decommissioned. Although specific activities will vary depending on size, age, operational conditions, and design, decommissioning of a uranium mill (both for conventional and ISL facilities) includes general activities described in section “[General Methodologies for Decommissioning](#).”

### Uranium Conversion

Although natural uranium ores are concentrated and purified during milling to produce yellow cake, the uranium must be further purified and converted to a gas state in preparation for

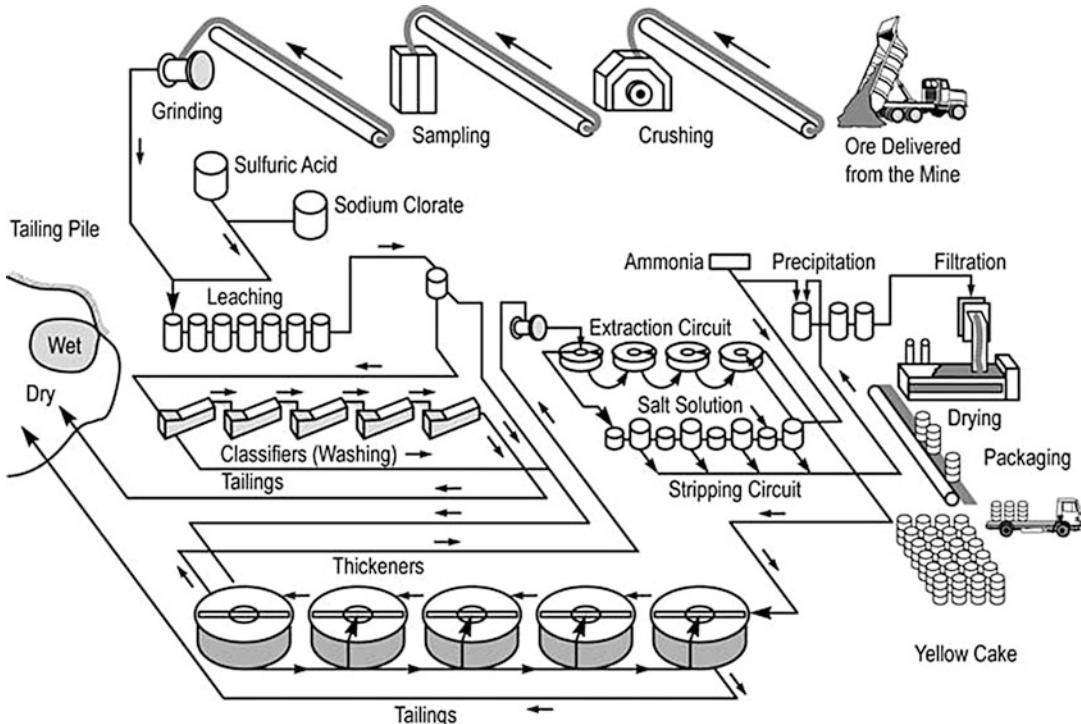

**Nuclear Facilities Decommissioning, Fig. 2** A typical conventional uranium mill [27]

increasing the fissionable  $^{235}\text{U}$  content of the uranium to produce nuclear fuel. The nature of these chemical processes and the size and complexity of uranium conversion facilities strongly influence the decommissioning process. Uranium conversion facilities are designed to remove impurities from the yellow cake and convert solid uranium into uranium hexafluoride ( $\text{UF}_6$ ), the only uranium compound that exists as a gas at suitable temperatures [5, 22]. The  $\text{UF}_6$  gas is then pressurized and cooled to a liquid state [5]. The liquid is stored in cylinders and allowed to solidify for shipment to a fuel enrichment plant (see section “Fuel Enrichment”). Some uranium conversion facilities also recycle uranium scrap that may come from manufacturing facilities or other production plants [5].

The uranium conversion process involves strong acids and alkali agents to dissolve the yellow cake powder. As with mining and milling, the operational risks associated with uranium conversion are chemical as well as

radiological, and the safe removal and disposal of hazardous chemicals used in the conversion process must be taken into consideration as part of the decommissioning process. Because it is predominantly an industrial chemical facility, the types of decommissioning issues for a uranium conversion facility are similar to those described in section “[Uranium Milling](#)” for buildings, equipment, and land reclamation at uranium mills. No tailings are produced during uranium conversion. Groundwater and soil contamination from spills and leaks are possible and will need to be identified, remediated, and monitored in accordance with applicable regulations [24]. The size and complexity of uranium conversion plants can lead to significant decommissioning costs. For example, alternative decommissioning options for the 243-ha [600-acre] Sequoyah Fuels uranium conversion plant site in Gore, Oklahoma, varied from about US\$23 million to US\$303 million (2015 dollar value), depending on the option selected for disposal of contaminated materials [30].

### Fuel Enrichment

Natural uranium is composed of 238-U (99.274%) and 235-U (0.711%) and contains trace amounts of 234-U (<0.01%). Nuclear reactor fuel requires increasing (or enriching) the fissionable 235-U above these natural levels to sustain the nuclear reactions. During the fuel enrichment process, gaseous UF<sub>6</sub> is gradually enriched in 235-U to about 3–5% – levels that are sufficient for fabricating commercial reactor fuel [31, 32]. One product of the enrichment process of special concern during decommissioning is depleted uranium tails, where the 235-U content has been reduced to below natural levels (about 0.2–0.35%) [33]. This waste stream is commonly stored at the site in gas cylinders of UF<sub>6</sub>, although it may also be converted to solid form such as uranium oxide. Depleted uranium emits low levels of radiation and is also a toxic heavy metal, so during decommissioning, this waste must be managed and disposed in accordance with both radiological and hazardous waste criteria [32, 34].

Gaseous diffusion is the process most widely used for nuclear fuel enrichment. The gaseous diffusion process takes advantage of the different diffusion rates that result from the slight differences in mass for 238-U and 235-U. Gaseous UF<sub>6</sub> is pumped through a permeable porous barrier media. The lower molecular weight 235U has a higher diffusion rate and moves through the barrier media more readily than the higher molecular weight 238-U; the UF<sub>6</sub> gas that passes through the media is therefore slightly enriched in 235-U [35]. The process is repeated through many barriers until the desired enrichment levels are achieved.

These types of plants are large industrial facilities, with a footprint of about 300–600 ha [750–1,500 acres] that contains a large amount of piping and pumps to move the UF<sub>6</sub> gas through the permeable barrier system [5]. During operations, the primary hazards in gaseous diffusion plants that may influence subsequent decommissioning include the chemical and radiological hazard of a UF<sub>6</sub> release [36]. There is also a potential for mishandling the enriched uranium, which could create a criticality accident

(inadvertent nuclear chain reaction). Because these are large facilities, decontamination and decommissioning of inactive buildings and areas may occur, while other parts of the facility continue to operate. Surveillance, maintenance, and security will continue for active parts of the facility. Depending on the operating history of the plant, including spills and unintentional releases, decommissioning and cleanup activities at fuel enrichment facilities may include assessing and remediating soil or groundwater and waste management activities, such as disposing of contaminated materials. The size and complexity of a gaseous diffusion plant can lead to large costs for full decommissioning of all facilities. For example, the US Government Accountability Office (GAO) estimated that cleanup activities at three fuel enrichment plants (Paducah, Kentucky; Oak Ridge, Tennessee; Portsmouth, Ohio) cost about US\$3.4 billion (2015 dollars) from 1993 through 2003, and total costs through final decommissioning in 2044 would exceed revenues into the Uranium Enrichment Decontamination and Decommissioning Fund by about US\$3.7 billion to US\$7.2 billion (2015 dollars) [37]. New technologies such as gas centrifuge and laser separation are being considered for the next generation of fuel enrichment facilities, and the decommissioning issues are likely to be different, with perhaps less waste generated during operation [31].

### Fuel Fabrication

For a typical commercial light-water reactor, nuclear fuel is the solid form of uranium oxide (UO<sub>2</sub>). Fuel fabrication facilities use chemical processes to convert the 235-U enriched UF<sub>6</sub> into UO<sub>2</sub> in the form of a fine powder [33]. Because many of the materials (such as UF<sub>6</sub>) are the same, specific factors that may influence the decommissioning of fuel fabrication facilities will be similar to those identified for uranium conversion and fuel enrichment facilities (see sections “Uranium Conversion” and “Fuel Enrichment”). This powder is then compacted and sintered (heated at a high temperature to fuse the particles together) to produce fuel pellets. These pellets are loaded into metal tubes to

produce fuel rods. Hardware is then used to configure the fuel rods into fuel assemblies of the appropriate dimensions and design for a nuclear power reactor. Although this article focuses on the uranium nuclear fuel cycle, other nuclear fuels can also be fabricated, including mixed oxide (MOX) fuels formed from combining uranium and plutonium oxides, thorium fuels based on the 232-Th decay chain with 233-U as the fissile fuel element, uranium metal alloy fuels, and microsphere fuel particles [33].

Heavy water (containing more than the natural proportion of the hydrogen isotope deuterium, 2-H) is used as a moderator in some types of nuclear reactors. Heavy water is extracted from normal water through several chemical processes, the most common of which is distillation through electrolysis or isotopic exchange [29].

Chemical, radiological, and criticality hazards at fuel fabrication facilities are similar to hazards at enrichment plants. Most at risk from these hazards are the plant workers. These facilities generally pose a low risk to the public.

### Service Period: Nuclear Power Plants

As indicated, the three decommissioning strategies described in section “[Introduction](#)” were initially developed for nuclear reactors and power plants. The principal concerns during the decommissioning of these reactors and power plants are the safe cessation of operation; the safe management, storage, and disposition of highly irradiated spent nuclear fuel; draining and treatment of water and other fluids from the reactor cooling systems; and the decontamination and disposal of contaminated equipment, materials, and other systems that may contain contamination or activation products at the site.

At a very basic level, nuclear reactors operating today use the heat from the controlled fission of 235-U (and perhaps 239-Pu in the case of MOX fuel) to boil water that turns a turbine and produces electrical power. As described previously, there are 442 nuclear power reactors operating in 31 countries worldwide, with 66 new reactors under construction. In addition, there are 243 (April 2016) research and test reactors and

critical assemblies (i.e., producing little or no power) operating in 56 countries. These smaller reactors, predominantly located at research universities and government facilities, are used for research, education, and training purposes [38]. As of April 2016, the IAEA reported that in addition to 243 research reactors operating worldwide, there are seven new research reactors under construction and another 11 in the planning stages. To date, another 153 reactors have been placed in either permanent (134 reactors) or temporary (19 reactors) shutdown, with another 352 research/test reactors decommissioned [38].

There is no single design that is representative of all reactors. Of the operating nuclear power reactors, about 400 are water cooled and moderated [39] and are predominantly pressurized water reactors (PWR), boiling water reactors (BWR), and pressurized heavy water reactors (PHWR). For example, all of the 100 licensed, operating commercial nuclear reactors in the United States are either BWR (35 reactors) or PWR (65 reactors) types [40]. Other operating reactor types include gas-cooled reactors, graphite-moderated reactors, and fast breeder reactors.

Early prototype nuclear reactors are sometimes called Generation I reactors. The current nuclear reactor designs are sometimes called Generation II (large central nuclear power plants) and Generation III (advanced LWR) reactors [33, 41]. Current research and development efforts are focused on designing the next generation, or Generation IV reactors, with a goal to provide more efficient and safe nuclear power generation that is also more resistant to nuclear proliferation [33, 42–44]. In the United States, the Next Generation Nuclear Program initiated with the Energy Policy Act of 2005 focuses on developing a very-high-temperature gas-cooled reactor (VHTR) operating at temperatures greater than 950 °C for the production of electricity, process heat, and hydrogen [43]. Other designs are also being considered for the next generation of nuclear reactors, predominantly those based on gas-cooled (such as pebble bed modular reactors), water-cooled (super-critical water-cooled reactors), and fast-spectrum technologies (cooled by sodium, lead, or inert gases) [33, 41].

The different current and future design types and sizes of reactors make decommissioning inherently a site- and reactor-specific process. Each current and future reactor design will have its own design-specific decommissioning requirements that must be taken into consideration.

### Back-End Fuel Cycle Facilities

After the nuclear fuel is irradiated in a reactor and the useful energy has been extracted, it is called spent nuclear fuel. The removal of spent nuclear fuel from the reactor is generally considered part of the transition from the operational phase of the power plant and not as part of the decommissioning process. The back end of the nuclear fuel cycle consists of facilities that handle spent nuclear fuel. Currently, most commercial nuclear power is based on an open or “once-through” uranium fuel cycle, where the fuel is used in a power plant one time and then removed as spent nuclear fuel [45].

### Fuel Reprocessing Facilities

When the spent nuclear fuel is removed from the reactor, it is predominantly composed of uranium oxide (96%), other actinides like plutonium and americium (1%), and other fission products such as cesium and strontium (3%) [35]. The spent nuclear fuel must be cooled both thermally and radioactively in a water-filled spent fuel pool and later placed in dry cask storage at the reactor site.

Fuel reprocessing facilities are designed to recover materials such as uranium and plutonium from irradiated spent nuclear fuel. After sufficient cooling, the spent nuclear fuel is dissolved using solvents, and the usable components (mostly uranium and plutonium) are separated from waste materials such as other actinides and fission products [5, 46]. The recovered uranium and plutonium are recycled into the front end of the nuclear fuel cycle and refabricated to produce new nuclear fuel (such as MOX) or used for defense purposes. Waste materials, in the form of sludges, salt cake, or calcined wastes, and the reprocessing solutions are collected for disposal. Liquid wastes are generally not suitable for disposal, and decommissioning, and

cleanup may include vitrification to solidify waste solutions in the form of borosilicate glass.

Because of the high radiological dose rates and contamination levels associated with irradiated spent nuclear fuel, human access is limited for major parts of the facility. This leads to decontamination and decommissioning that is more complicated than facilities such as uranium mills and fuel fabrication facilities at the front end of the nuclear fuel cycle. Facilities tend to be very large, and large volumes of liquid wastes are produced and stored for subsequent disposal.

Examples of fuel reprocessing facilities in the United States include US Department of Energy (USDOE) facilities at Hanford, Washington, and the Savannah River site in South Carolina. The only commercial fuel reprocessing facility in the United States, located at West Valley, New York, ceased operations in 1972. The Carter administration elected to defer reprocessing of commercial nuclear fuel in 1977, and there are no commercial fuel reprocessing facilities currently operating in the United States. The USDOE has completed vitrification of the liquid wastes at West Valley, storing the borosilicate glass logs on site [47, 48]. Decommissioning activities at West Valley are ongoing. Large reprocessing facilities are also located at Sellafield in the United Kingdom, Ozersk (Mayak) in Russia, and La Hague in France [49].

### Waste Management and Disposal

As with many aspects of nuclear decommissioning, the nature and amount of waste produced during cleanup activities will depend on the age and size of a given facility, as well as the nature and history of operations at the site. As described in IAEA [50], four different types of waste or “waste streams,” each with different disposal options, are typically produced during nuclear decommissioning. The first three are types that include radioactive waste:

- Primary waste is generated during dismantling activities and may include internal plant components such as a reactor pressure vessel and associated piping, equipment such as pumps and valves, special facilities such as glove

boxes and radiation hot cells, and building materials. These components of the primary waste streams may be radioactive through activation by both short- and long-lived radionuclides during plant operations or by surface contamination. Primary wastes can include a variety of materials, but typically metal and concrete rubble are the largest component by volume of this waste stream [50].

- Secondary wastes are generated during different steps in decontamination and dismantling. These may include solutions, absorbents, and filters used to treat surfaces to reduce radioactive contamination.
- Tools and equipment, such as cutting equipment and protective gear personnel use during decontamination and dismantling, may become contaminated. To minimize costs and waste volumes, some equipment may be decontaminated so it can continue to be used.

In addition to these radioactive wastes, decommissioning can potentially produce large volumes of nonradioactive wastes, such as construction debris, sanitary wastes, hazardous chemicals, and asbestos. These wastes are similar to those that might be encountered during the decommissioning of a typical, nonnuclear industrial facility. Some of these materials like furniture, non-irradiated scrap metal, and office equipment can be reused and recycled. The remainder of this waste stream typically has a well-established disposal path through municipal landfills and sanitary disposal systems.

Radioactive waste can occur in a variety of forms, including gases, liquids, and solids, with radiological characteristics that depend on the concentration and half-lives of the different radionuclides. For these reasons, classification of waste is particularly important, as it will determine the methods to be used in handling, segregating, conditioning, packaging, and transporting wastes. Waste classification also establishes the applicable acceptance criteria for different waste storage and disposal options, which in turn can have a strong effect on decommissioning planning and

implementation and, ultimately, the total cost of decommissioning [50].

Although it varies from country to country, the classification of radioactive waste is typically based on some combination of the types of processes from which the waste was generated, the radionuclide content of the waste, the timing of the waste generation (e.g., legacy wastes generated prior to developing a robust licensing process), as well as chemical, physical, and biological properties of the waste [35, 50, 51]. The following sections provide general descriptions based on waste classifications proposed in IAEA [52]. Note, however, that specific classification of waste streams and the methods for their management, treatment, and disposal are defined by the policies, laws, and regulations that a nation applies to commercial-scale nuclear power generation and subsequent nuclear decommissioning and waste management activities. For these reasons, waste classification is complex and may vary from country to country [51]; the descriptions presented here are for informational purposes only and are not an endorsement of a particular radioactive waste classification system.


## Uranium Mill Tailings and Groundwater Restoration

For conventional mining and milling operations, processing the ore results in a waste stream of solid waste material, sands, fine-grained slurries (sometimes called slimes), and processing liquids. These materials are collectively referred to as tailings and are pumped from the mill to a tailings impoundment for disposal (see Figs. 2 and 3).

Generally, there are a number of tailings impoundments and evaporation ponds at each mill site [27], and the total volume can be quite large. The amount and nature of the tailings, however, depends on the capacity of the mill and the length of time the facility is in operation. For example, the former Climax Uranium Company mill in Grand Junction, Colorado, produced 2 million metric tons [2.2 million tons] of tailings that were placed in a 46-ha [114-acre] tailings impoundment [53]. The nature of the material in

### Nuclear Facilities Decommissioning,

**Fig. 3** Schematic cross section of a tailings impoundment [27]

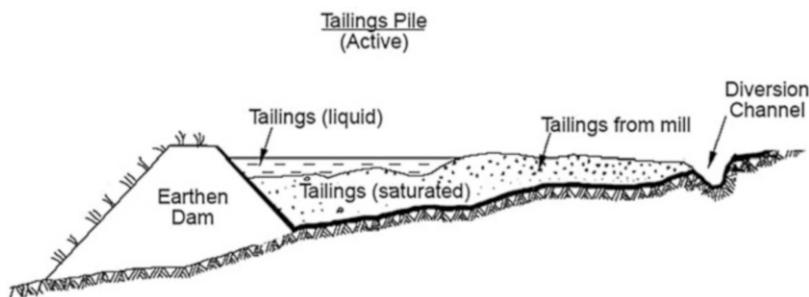

each impoundment or pond varies, depending on which part of the mill process produced the tailings. In addition, with the approval of the regulatory agency, operators may use tailings impoundments for onsite disposal of wastes associated with decommissioning and dismantling buildings, structures, and equipment, as well as for soils, pond liners, and sludges that have been radiologically contaminated.

Tailings have become a major focus in regulating active uranium mining and milling operations, as well as cleaning up legacy tailings from older, inactive sites. For example, in 1978, the US Congress enacted the Uranium Mill Tailings Radiation Control Act (UMTRCA) to provide government funds to clean up and stabilize tailings from inactive legacy mills [27]. In a 1995 summary study of UMTRCA sites, the USDOE noted that tailings reclamation was the costliest aspect of the decommissioning process for conventional uranium mills [27]. During reclamation planning, the operator uses computer models to evaluate geotechnical stability. Although site-specific tailings reclamation methods are established in a reclamation plan that is evaluated for compliance with the government regulations that govern the cleanup [27, 29, 54, 55], general steps include:

- Shape and recontour the tailings pile and install drainage diversion systems to minimize erosion hazards from surface runoff.
- Allow the tailings to settle and dehydrate. Establish survey monuments so settling can be monitored.
- Install a low permeability engineered cover to minimize infiltration into the pile and radon

emissions from the tailings. Generally this cover consists of clays and/or geotextiles.

- Install a final cover for erosion protection.
- Establish a monitoring system to ensure that the design and construction of the reclaimed tailings work as expected. Long-term stewardship during a period of institutional controls may include active measures to maintain and repair the tailings covers.

For active operations, regulations typically call for lining tailings impoundments and installing monitoring systems to prevent migration of contaminants (e.g., radionuclides and associated heavy metals) from the tailings into underlying aquifers [29, 55]. For older and inactive operations, however, the tailings impoundments may not be lined. This can lead to contaminants leaching into the underlying groundwater system over time; these contaminants need to be remediated when the tailings are reclaimed. Depending on the importance of local groundwater resources to nearby communities and the siting and design of the impoundment, the level of effort needed to clean up groundwater may be extensive and long term.

Because uranium milling at an ISL facility does not produce tailings, the amount of material at the surface to be decommissioned and ultimately reclaimed is significantly less. Because there are no large tailings impoundments associated with ISL facilities, contaminated decommissioning wastes (e.g., equipment, building components, soils, evaporation pond sludges and liners) must either be transported to a licensed disposal facility, or an onsite disposal cell will need to be built.

The ISL process does, however, alter groundwater chemistry in the production well fields. After uranium extraction from the ore deposit is no longer economically feasible, the groundwater quality is restored to pre-extraction conditions through a series of treatment steps [16, 56]. As with tailings reclamation, site-specific methods are determined with approval of the regulatory agency, but general steps for groundwater restoration include:

- Groundwater sweep, where groundwater is pumped from the production zone to draw in surrounding natural groundwater. The pumped groundwater may be treated to remove contaminants, and reinjected.
- Reverse osmosis, where groundwater is pumped from the production zone and passed through a pressurized, semipermeable membrane (reverse osmosis) system to remove dissolved chemicals. The cleaner water is then reinjected, and the more concentrated brines are pumped to evaporation ponds or disposed of by injection in deep wells.
- Stabilization, where chemicals such as hydrogen sulfide may be injected into the production zone to establish chemical conditions that cause dissolved chemicals to precipitate out as minerals.
- Monitoring, where the groundwater quality is tested to ensure that conditions have stabilized and meet the restoration criteria.

Groundwater restoration occurs when the economics for producing a well field are no longer favorable. Because ISL facilities typically have more than one well field, it is common for groundwater restoration to begin in one well field while other well fields are still actively producing uranium [16, 56].

After groundwater restoration, the physical components of the well field are then restored. Piping, well casing, and pipeline materials are hauled to a licensed disposal facility. Surface facilities such as tanks and buildings are dismantled, removed, and disposed. Pumps are removed for reuse in other well fields, and the wells are

filled with cement, plugged, and abandoned. Any soils contaminated by well field spills are removed and disposed, and the disturbed land is graded, recontoured, and revegetated.

**Spent Nuclear Fuel and High-Level Waste** As described previously in section “[Fuel Reprocessing Facilities](#),” after the economic energy has been extracted from nuclear fuel, the fuel is removed from the reactor. At this point, it is referred to as spent nuclear fuel. Spent nuclear fuel is highly radioactive because of the decay of fission and activation products that result from the nuclear reactions that occur when the fuel is inside the reactor core. Although it is no longer hot enough to generate electricity, it is well above ambient temperatures.

For these reasons, spent nuclear fuel must be carefully handled, stored, and shielded to provide both radiation protection to workers and the public and to manage the thermal heat generated by the cooling fuel. In most cases, spent nuclear fuel is stored at or near the reactor, either in dedicated spent fuel pools that use water to provide both cooling and radiation protection or in air-cooled concrete and steel dry casks [16].

As described in section “[Fuel Reprocessing Facilities](#),” after spent nuclear fuel has been cooled and radioactivity has decreased through decay of short-lived radionuclides, spent nuclear fuel may be reprocessed. The fuel reprocessing process typically produces a liquid waste stream that contains fission and activation products that remain after potentially valuable radioelements such as plutonium and uranium are removed. This liquid waste stream is typically stored in large tanks for subsequent treatment. Treatment may include processing the liquid wastes into different forms such as sludges, salt cake, or a calcined solid. These forms still produce radiation and must be shielded to provide protection to workers. Current practice in countries such as France, Japan, the United Kingdom, and the United States involves using high-temperature furnaces to vitrify liquid wastes into a solid glass waste form.

In most countries in Europe, Asia, and North America, the ultimate disposal path for spent nuclear fuel and reprocessing high-level radioactive waste (HLW) is permanent geologic disposal in an underground repository [57]. At present, a large number of different geologic settings are under consideration. No country has licensed and constructed a geologic repository, however, and spent nuclear fuel and reprocessing HLW are typically managed through onsite interim storage.

**Intermediate-Level Waste** Intermediate-level radioactive waste (ILW) is defined in IAEA [52] as “... waste which, because of its radionuclide content requires shielding but needs little or no provision for heat dissipation during its handling and transportation.” This waste may be further classified into components consisting of short-lived radionuclides that will decay to low levels during a period on the order of hundreds of years in which institutional controls such as fencing or access restrictions can be considered to be effective in minimizing radiological dose [52]. Conversely, long-lived ILW is dominated by radionuclides that will not decay to sufficiently low levels.

In the United States, a transuranic (TRU) waste stream includes man-made alpha radiation-emitting radionuclides with an atomic number greater than that of uranium (i.e., 92) and a half-life longer than 20 years [58]. TRU is produced during reactor fuel assembly, weapons fabrication, and fuel chemical processing operations [18]. Specifically, TRU is that portion of the waste stream that is not classified as spent nuclear fuel, HLW, or low-level radioactive waste (LLW) [35, 58].

A wide variety of storage options exist for the storage and disposal of ILW and TRU. Storage may be through retrievable burial, underground bunkers, concrete caissons, aboveground concrete pads, and inside buildings [35]. Since 1999 in the United States, the USDOE has been disposing TRU waste in a bedded salt deposit about 700 m [2,300 ft] below the ground surface at the Waste Isolation Pilot Plant (WIPP) in Carlsbad, New Mexico [35].

**Low-Level Waste** LLW has low radionuclide content. Similar to ILW, IAEA [52, 59] suggests that LLW be further divided on the basis of whether it consists predominantly of short-lived or long-lived radionuclides. LLW tends to be defined by what it is not (i.e., not HLW, ILW, or TRU) rather than what it is, so it can include a broad range of materials and radioactivity levels [35, 58]. For example, LLW may contain small amounts of radioactivity spread through a large volume of material, or it may contain sufficiently high levels of radioactivity to require shielding for its safe handling [18, 35, 60]. LLW wastes generated during nuclear decommissioning may involve a wide range of materials including rags, papers, filters, ion-exchange resins, discarded protective clothing, contaminated soils and construction rubble, piping, and tanks.

Because of the generally low levels of radioactivity, LLW is typically disposed using near-surface burial. Depending on its physical and chemical properties, LLW may be packaged in drums, casks, special boxes, or other sealed containers [35]. Contaminated soil and construction debris may be disposed directly into the cell without a container. Some large components such as pipes and tanks may be cut up or flattened to reduce the volume. LLW disposal facilities may be either commercial or government operations, although commercial facilities are still typically governed by government regulation. Similar to municipal landfills, LLW disposal cell designs may include a liner, and an engineered cover system may be installed to reduce water infiltration into the underlying groundwater system [18]. Monitoring systems and institutional controls are installed to ensure waste isolation (air, water, and soil) and to limit access to the disposal facility [58].

**Hazardous and Mixed Wastes** Depending on their age and size, decommissioning of nuclear facilities may involve management and disposal of hazardous wastes that result from the processes employed during facility operations or from building standards used during the initial construction of the plant. For example, hazardous

chemicals such as acidic, alkaline, and organic solutions used during uranium milling or fuel reprocessing may require special handling, treatment, and segregation prior to disposal. In addition, hazardous materials such as asbestos may be encountered when older buildings are dismantled and may require special treatment and disposal. If these hazardous wastes are free from radioactive contamination, their ultimate disposal path would be based on hazardous waste regulations.

Radioactive wastes may also be mixed with hazardous wastes. The management and disposal of these wastes can be complicated, as there may be more than one agency with jurisdiction and more than one set of waste handling criteria may apply. For example, in the United States, the US Environmental Protection Agency (USEPA) has authority over hazardous waste through the Resource Conservation and Recovery Act, and the USNRC and USDOE have regulatory authority over radioactive wastes through the Atomic Energy Act. In this case, the management and disposal options to be considered for decommissioning wastes may need to comply with both hazardous and radiation safety requirements [61].

**Uncontaminated Wastes** As with other industrial operations, nuclear facilities may also produce wastes that contain little or no radioactive contamination. If the radioactivity of these wastes falls below levels established by the applicable regulations and statutes, they may require no additional nuclear regulatory control. Also, as described in section “[Safety and Performance Assessment](#),” some decommissioning wastes can be decontaminated below the applicable “clearance” levels and released from regulatory control [62]. IAEA [52] identifies these as “exempt” wastes and notes that they can be disposed of using conventional methods and systems.

As structures are dismantled and steel, concrete, and other surfaces (e.g., parking lots) are removed, large volumes of construction debris may be generated during nuclear facility decommissioning. Because some of these structures are not associated with nuclear-related activities, construction debris of this nature may meet

the requirements of exempt waste. The specific levels of radioactivity that establish the criteria to be used in identifying exempt wastes will typically differ from country to country. As a result, the volume of exempt waste and disposal paths will also vary.

## General Methodologies for Decommissioning

Specific decommissioning activities and technologies, as well as the sequence of their application, will vary depending on the size, age, operational conditions, and design of a nuclear facility and on the regulatory framework that governs decommissioning. As indicated previously, this entry provides a general discussion of typical decommissioning activities. This discussion is not a recommendation of particular approaches or technologies, and the reader is referred to the references identified in the Bibliography for further reading.

## Developing a Site-Specific Decommissioning Plan

Nuclear decommissioning is perhaps most effective when the process is laid out in a decommissioning plan. For the lead organization (either commercial or government) with responsibility for decommissioning, the plan provides the opportunity to develop a strategy that, among other things, identifies specific decommissioning issues at a given site, determines the types of processes and methodologies to be used, specifies the desired end state of the facility, and establishes the schedules and financing mechanisms for decommissioning. For large, complex commercial nuclear fuel cycle facilities such as a power plant or a fuel enrichment plant, the decommissioning plan is an extensive document that is supported by a large number of underlying technical and policy reports and references. Although the specific contents of a decommissioning plan can depend on the type of facility, the regulatory framework, and other policy issues, some of the general topics to be covered include [23]:

- Facility description and operational history
- Radiological status
- Alternate decommissioning strategies and selection of a preferred alternative
- Project management
- Decommissioning activities
- Surveillance and maintenance during decommissioning
- Waste management
- Cost estimate and funding mechanisms
- Safety and performance assessment
- Environmental impact assessment
- Health and safety for workers and the public
- Quality assurance
- Emergency planning
- Physical security and safeguards
- Final radiation survey

Typically, a site-specific decommissioning plan is developed and refined in stages. An initial plan describing major structures, systems, and features is developed as the facility is designed and constructed. The initial plan is designed to provide basic information and establish project baselines prior to facility startup. The initial decommissioning plan is also intended to provide a framework for cost estimates (see section “[Estimates of Decommissioning Costs](#)”) to ensure that the necessary funds will be in place to cover decommissioning when the facility ceases operation. During the operational life of the facility, the initial decommissioning plan is periodically updated to reflect the operator’s experience and understanding of the site. As with any large industrial facility, nuclear facilities may change as technology or regulatory oversight develops or as the economics of the plant change. As the plant approaches the end of its operational life, the decommissioning plan becomes more detailed. The final decommissioning plan is developed just prior to a facility ceasing operations. The regulatory agency typically reviews this plan and must approve it before the operator can implement the decommissioning strategy [23]. Once the decommissioning plan is approved, it then becomes the basis for subsequent activities, although it may continue to be revised throughout

a decommissioning process that can extend over decades.

### Site Characterization

Site characterization provides the context for nuclear decommissioning. Ideally, site characterization includes a description of the size and location of the facility, building and systems, the operational history of the site, as well as a description of spills or other releases that may affect the decommissioning process. Nonradiological hazardous process chemicals and other materials like asbestos that require special treatment and disposal may also be identified in the site characterization survey.

One objective in undertaking site characterization is to establish the preoperational baselines and background values that may be used to determine criteria for successful decommissioning. For example, an understanding of background water quality is used to establish site-specific levels for groundwater restoration, as well as action levels for monitoring. Site characterization should identify the geographical and geological context of the facility in relationship to important resources for the area such as critical habitat or historical and cultural areas. In addition, site characterization may include a discussion of the socioeconomic impacts of the facility, because this may be an important consideration in selecting among different decommissioning strategies [1]. The site characterization and radiological surveys are intended to be of sufficient detail to provide data for planning the decommissioning effort, including selection of specific remediation techniques, establishing decommissioning schedules, estimating costs and waste volumes, and identifying important health and safety considerations to be considered during decommissioning [25].

For the purposes of nuclear decommissioning, site characterization pays special attention to the radiological status of the site, focusing on establishing the extent to which buildings, systems, equipment, soils, and water may contain residual activity [23]. These radiological “hot spots” can be determined using historical information (e.g., location of historic spills, known storage locations, sites identified by ongoing

monitoring during operations), conducting surveys with radiation detection equipment, and collecting soil and water samples for subsequent analysis [23, 25, 63, 64].

A key component of site characterization is locating and maintaining existing records [65, 66]. A lack of information on past activities has been a special challenge for decommissioning Cold War legacy sites.

### Selecting a Decommissioning Strategy

The reasons for taking a nuclear facility out of service may be based on economics, national policy decisions about the suitability of nuclear power, safety, or obsolescent technology [67]. As described in section “[Introduction](#),” decommissioning strategies for nuclear facilities generally fall into one of three categories:

- A strategy of immediate decontamination and dismantlement [1, 8, 68, 69] (also defined as DECON [17, 18]) begins soon after the nuclear facility closes. For nuclear reactors, spent nuclear fuel is removed, stored, and cooled, pending permanent disposal or reprocessing, and equipment, buildings, structures, and portions of the facility that contain radioactive contaminants are either removed or decontaminated to meet regulatory requirements for releasing the property. In general, this strategy imposes the largest requirements for resources (funding) and personnel in the short term. It takes advantage of the existence of a trained workforce with experience in operating the facility.
- Safe storage [1, 68], deferred or delayed decontamination [8, 69], or SAFSTOR [17, 18] refer to decommissioning strategies where a nuclear facility is left intact after closing, placed in a stable condition, and maintained and monitored until subsequent dismantlement and decommissioning. One purpose in choosing this strategy is to allow radioactivity to decay during a period of safe storage, perhaps on the order of decades, potentially reducing the radiological hazards and the quantity of nuclear waste that must be disposed. This strategy may also benefit from continuing developments in decommissioning technology and waste management options.
- This approach places a premium on knowledge management, as the operations workforce may not be available when decommissioning begins years after the end of operations. This decommissioning strategy may be forced if there are insufficient funds available to cover the costs of immediate decontamination and dismantlement or if some aspects of the regulatory framework, such as a spent nuclear fuel disposal site, are not available when operations cease [8, 70].
- Safe storage may allow one part of a large facility to be closed while the rest of the facility completes its life cycle. For example, one reactor unit at a nuclear power plant may be closed and the fuel removed while the remaining reactor units continue to produce electricity. When the decision is made to close the remaining portions, all of the components can then be decommissioned together, with accompanying potential benefits from optimizing the use of staff and specialized equipment for decommissioning. An example of this approach is the Peach Bottom Unit 1 reactor in York County, Pennsylvania, which was shut down in 1974 and placed in SAFSTOR. Reactor Units 2 and 3 continue to operate and are scheduled for shutdown in 2034, at which point final decommissioning will begin [71].
- A strategy of entombment [1, 8, 68, 69] or ENTOMB [17, 18] involves encasing radioactive materials onsite in a long-lived, structurally sound material such as concrete. The entombment structures are maintained and monitored as appropriate, with institutional controls (e.g., fencing, security personnel) to limit access. For some facilities, the intent of entombment is permanent encapsulation [8], and computer models are used to simulate performance for thousands of years [24]. Because entombment effectively creates a surface waste disposal site, it is not generally a suitable decommissioning strategy for facilities associated with fuel enrichment, fuel fabrication, and fuel reprocessing [69]. In addition, an entombment strategy may also limit the options for releasing the site for reuse.

The first two decommissioning strategies may also be combined. For example, some facilities at a site may be immediately dismantled, while other structures are placed in safe storage. For large sites like fuel enrichment plants, nuclear decommissioning activities may be occurring at some facilities at the same time as active operations [5]. Generally, it is anticipated that decommissioning activities will be completed in a period of decades from the end of operations [17].

Because there are a wide variety of nuclear facilities, there is no unique approach to decontamination and decommissioning. Several factors may be considered in selecting the decommissioning strategy [1, 8, 69] for a specific site, including:

- The status of the policies and regulatory framework that establish, among other things, the national direction of the nuclear industry and legal requirements for nuclear decommissioning
- The financial costs (both direct and indirect) associated with a given decommissioning strategy and the amount of funding available
- The availability of waste management and disposal facilities for the types and volumes of waste to be generated during decommissioning
- Risks to health and safety of both workers and members of the public
- Potential environmental impacts associated with a given decommissioning strategy
- Knowledge management concerns and the availability of trained and experienced personnel to conduct the decommissioning activities
- The desired end state for the site, and potential socioeconomic impacts to local communities and other stakeholders, including options for release and reuse of the site after decommissioning is complete

These factors need to be considered within the context of the specific site before selecting the preferred alternative. As described previously, the reasons for selecting one alternative as opposed to another should be discussed in the decommissioning plan.

## Estimates of Decommissioning Costs

The facility owner is generally responsible for ensuring that there are sufficient resources to cover activities associated with decommissioning a nuclear facility. These activities may include decontamination, decommissioning, reclamation, and groundwater restoration, as well as surveillance and monitoring that may be necessary for long-term stewardship. Cleanup of government facilities and legacy sites that were established prior to the development of a regulatory framework for nuclear decommissioning is generally the responsibility of the national (or state/provincial) governments. Funds for these government responsibilities may be raised by general appropriations (taxes) or user fees imposed on the beneficiaries of nuclear power.

Methods used to accumulate and manage funds for decommissioning commercial nuclear facilities vary from country to country [1]. One common method to establish a decommissioning fund is to impose a requirement that a portion of business revenues be set aside for decommissioning and waste management. Typically, the types of financial mechanisms that are acceptable for estimating, creating, and maintaining a decommissioning fund are either established by the regulatory agency responsible for the facility license or directly by legislation [1, 26].

In countries with a robust regulatory framework, the owner/operator is commonly required to present estimates for the cost of decommissioning activities as part of the license application. A detailed discussion of estimating decommissioning costs is contained in USNRC [26]. In general, cost estimates are generally specific to the size, type, and location of the facility, and they incorporate assumptions about:

- The transition between operations and facility shutdown and the work associated with that process, such as postoperational cleanout
- The definition for the end state of the decommissioning process (e.g., unrestricted release, restricted release)
- The availability and suitability of established approaches to decommissioning methods versus the need for unique and perhaps untested technologies

- Availability and capacity of facilities for managing or disposing of residual spent fuel and radioactive waste

Once the regulatory agency or governing body evaluates and accepts the proposed cost estimates, the type and amount of the financial surety (e.g., letter of credit, prepaid cash, government bond) is established and administered in accordance with government regulations. The regulatory agency (as in Canada, the United States, and Sweden) or a waste management body (as in Belgium and Spain) then reviews the fund on a regular basis, generally between 1 and 5 years [1, 26]. As identified during the review, the decommissioning fund may be updated and the amount adjusted either upward or downward to account for inflation, changes in technology, or completed decommissioning activities.

As noted previously, the actual costs of nuclear decommissioning can vary substantially. The IAEA provided estimates for median decommissioning costs associated with various types of nuclear facilities based on a combination of expert judgment and decommissioning experience and using assumptions with respect to operating life and time to decommission [5]. These estimates (in US\$, 2003 value) are summarized in Table 2. Because the cost of decommissioning

will depend strongly on site-specific issues such as local geology, facility age and design, and operational history, the actual costs for a given site may fall outside these ranges.

The estimates reported in IAEA [5] are general in nature and are not intended to bound all potential costs, particularly for very large government facilities. One general conclusion that can be made from these estimates is that management of spent nuclear fuel and radioactive wastes can represent a significant proportion of the total costs of decommissioning. For example, estimated costs for decommissioning the Sequoyah Fuels uranium conversion site near Gore, Oklahoma, varied from US\$23 million (2015 dollars) for the no-action alternative of long-term stewardship, to about US\$43 million (2015 dollars) for onsite disposal of most contaminated wastes, to as much as US\$303 million (2015 dollars) for transportation and offsite disposal of all contaminated wastes [30]. For nuclear reactors in the United States, one measure of decommissioning costs is contained in the biannual status reports for the fund established by the USNRC in 1988 to ensure adequate resources to decommission all USNRC-licensed nuclear power plants. In 2013, the review indicated that as of December 31, 2012, the amount accumulated in the fund was US\$45.7 billion (2012 dollars). Site-specific estimates for different power plants ranged from about US\$500

**Nuclear Facilities Decommissioning, Table 2** Estimated costs associated with decommissioning different nuclear facilities [5]

Type of nuclear facility	Estimated decommissioning cost (min to max [median] in US\$ million, 2003 value <sup>b</sup> )	Operational life (year)	Time to decommission (year)
Uranium milling	0.800	25	1
Uranium conversion/recovery	150	30	3
Uranium enrichment	600	30	10
Fuel fabrication	250	30	2
Nuclear power reactor <sup>a</sup>	250–500 [350]	40	10 (after 5-year transition period)
Fuel reprocessing	800	30	15
Industrial facilities	0.050–3 [0.200]	20	1

<sup>a</sup>Cost estimates for decommissioning nuclear power reactors do not include the processing of operational waste, removal and disposition of spent nuclear fuel, the draining of operational systems, or the development of a waste disposal facility

<sup>b</sup>To adjust to 2015 dollars, multiply by 1.298

million (2012 dollars) for a PWR reactor at Fort Calhoun Station to about US\$2.4 billion (2012 dollars) for the two PWR reactors at the San Onofre Nuclear Generating Station in California [72]. These cost issues indicate the importance of accurately characterizing a site and identifying appropriate opportunities to decontaminate, recycle, and reuse materials [73].

### Safety and Performance Assessment

Safety is among the highest-priority issues in nuclear decommissioning. Safety assessments, typically developed by both operators and regulators, are engineering analyses that involve calculations and computer simulations to evaluate potential radiological doses. The purpose of the safety assessment is to identify and evaluate potential hazards to ensure that nuclear decommissioning can be done in a manner that is safe for workers, members of the public, and the environment [74].

In general, the safety assessment should be systematic and be linked to the relevant safety criteria, taking into consideration potential radiological doses to workers and members of the public, discharges to the environment, and exposure to chemical and other nonradiological hazards [23, 63, 74, 75]. To meet these objectives, a safety assessment consists of:

- Estimates of system performance for all the situations selected
- Evaluation of the level of confidence in the estimated performance
- Overall assessment of compliance with safety requirements

The standards and criteria to be used in developing these assessments vary from country to country depending on the regulatory framework that is in place. Also, the nature of the safety assessment may vary depending on the complexity of the decommissioning strategy needed for a given nuclear facility. A general framework proposed by the IAEA [74] includes:

- The scope of the assessment, based on the physical state of the nuclear facility

- The objectives of the assessment
- The applicable safety requirements and criteria to be used in evaluating potential exposures to workers, members of the public, and the environment
- Outputs from the safety assessment, generally in the form of doses that can be compared to the relevant safety requirements and criteria
- A description of the approach used to implement the safety assessment, whether through simplified calculations or complicated computer models, and a discussion of how the approach is appropriate to the magnitude and time frames of the potential hazards
- Time frames for all phases of the decommissioning activities considered in the safety assessment
- A definition of all phases of nuclear decommissioning and the anticipated end point
- A definition of the final end state of the facility that is anticipated after all decommissioning activities are complete

In practice, a safety assessment starts with a description of the facility and all of the anticipated decommissioning activities that comprise the decommissioning strategy (see section “[Selecting a Decommissioning Strategy](#)”). To evaluate off-normal scenarios, a safety assessment also includes identification of potential hazards and initiating events (both natural events such as earthquakes and human-made events such as fire) and potential exposure pathways. These are screened, usually on the basis of probability of their occurrence and the resulting consequence should they occur. Plausible scenarios are developed and used in the engineering analysis to quantify the likelihood and magnitude of potential radiological and safety consequences. In addition, the safety assessment should identify relevant experience and lessons learned from the decommissioning of similar facilities, if available.

For disposing of longer-lived radionuclides, some regulatory frameworks and decommissioning strategies use a performance assessment that provides a quantitative evaluation of potential releases of long-lived radionuclides over time periods of hundreds to thousands of years. Similar to safety

assessments, but with a much longer time horizon, performance assessments typically involve computer simulations based on site-specific features, events, and processes (biological, physical, and chemical) that may affect the long-term performance of engineered barrier systems. A performance assessment also simulates the release of radionuclides from any engineered barrier system and their subsequent migration through the geosphere surrounding the facility. Finally, future potential radiological doses may be calculated for a hypothetical receptor group located away from the facility [43]. Because of the long time frame, it is not possible to include all potential conditions that might affect performance, so simplified models, or abstractions, are used to simulate important aspects of the engineered and geological systems. This can introduce uncertainty into the calculations that should be characterized and evaluated to determine whether there is sufficient confidence that the applicable regulatory criteria will be met [24, 43].

In essence, the idea of safety and performance assessments is intended to answer these questions: *What can go wrong? How likely is it?, and What are the consequences?* [43]. Where there is uncertainty in conceptual models of the system or in the model parameters, simplifying assumptions should be chosen in such a way that ensures the models will be transparent, conservative, and not underestimate potential radiological doses. Statistical analysis and sensitivity studies can help to characterize the nature and relative importance of the uncertainty. Depending on the results of the safety and/or performance assessment, the planned decommissioning activities may be modified to reduce risks or compensate for uncertainty or limited information [74].

### **Decontaminating Structures, Equipment, and Components for Reuse or Recycling**

The objectives of decontamination include reducing the potential radiological exposure of workers and members of the public during decommissioning, minimizing the volume of radioactive waste, and increasing the potential for reusing and recycling equipment, material, and land at the site of a nuclear facility [76].

Although specific technologies to be used during decommissioning activities will vary depending on size, age, operational conditions, and design, general decontamination methods include [77–79]:

- Chemical methods that use agents such as acids, oxidants, or chemical foams and gels to remove contamination fixed to surfaces. The nature of the chemical agent may be determined based on the properties of the surface to be decontaminated. Chemical decontamination methods may generate a liquid waste stream that requires further treatment to remove radioactive wastes (and generate subsequent secondary waste streams).
- Mechanical methods that rely on cutting, grinding, or other physical techniques to remove contaminated surfaces or layers.

The techniques used for decontamination will vary by material and from site to site, depending on issues such as the operational history of the facility, the level of contamination, and the type of material to be decontaminated [76, 78]. For example, chemical decontamination methods may not be appropriate for porous materials such as concrete, where fluids may migrate into the material.

In addition to technical feasibility, other considerations in selecting decontamination techniques may include the applicable clearance criteria and the potential doses to workers or members of the public to reach these levels. The selection process may also include evaluating the cost of decontamination versus the cost of disposal without decontamination, taking into account estimates of the volume, nature, category, and activity of any primary and secondary wastes that might result. For example, decontamination methods should be selected in such a way as to minimize the amounts of secondary wastes (e.g., cutting fluids or washdown fluids) produced. It is also important to ensure that selected decontamination methods are compatible with and do not compromise existing or planned key treatment, conditioning, storage, and disposal systems [76]. For example, high-pressure jets may not be

an appropriate method for cleaning liquid waste storage tanks that are decades old and have experienced some corrosion.

### Dismantling and Removing Buildings, Structures, and Equipment from the Site

Equipment removed from buildings (Fig. 4) during the cleanup process is typically categorized as (i) salable for unrestricted use after radiation checks and decontamination; (ii) potentially contaminated, but may be salvageable for sale to other nuclear facilities; and (iii) contaminated and must be disposed. The responsible regulatory authority generally establishes the levels of contamination for these different categories.

Dismantling and removing buildings, foundations, structures, and equipment from a nuclear facility is sometimes referred to as “construction in reverse,” and similar types of heavy equipment (e.g., trucks, cranes, earthmoving equipment) are used during dismantling (see Figs. 4 and 5). In addition, cutting equipment and even demolition explosives may be needed to break large structures down into smaller pieces that can be handled and transported more easily (Figs. 5 and 6). For high radiation areas, remote techniques such as underwater cutting may be necessary to provide for worker radiation protection [76].

#### Nuclear Facilities Decommissioning,

**Fig. 4** A steam generator is removed from a reactor building [90]

Where salvage is not economically or technically feasible, larger pieces of equipment (e.g., pipes, tanks) may be cut up and flattened, and building materials reduced to rubble to minimize waste volume and make handling for subsequent disposal easier. How much volume needs to be reduced may depend on the available waste disposal capacity and regulations that govern transportation and disposal. Pavement in roads and parking lots may also be removed for disposal as construction debris.

### Remediating Contaminated Soils and Groundwater

Remediating residual radioactivity in soils and water generally uses technologies that are well established in the environmental industry. Evaluating and selecting a specific technique is an important part of decommissioning and depends on many site-specific issues such as the physical and chemical state of the residual radioactive material, the availability of equipment and a trained workforce, the availability of appropriate waste disposal capacity, and stakeholder sentiment. The following discussion is intended only as a brief summary of commonly available methods for remediation.

The most common remediation method used for contaminated soils involves excavating the



**Nuclear Facilities Decommissioning,**

**Fig. 5** Demolition of a reactor containment building [90]

**Nuclear Facilities Decommissioning,**

**Fig. 6** Dismantling industrial buildings at a nuclear facility [48]



soil for disposal in a LLW facility (Fig. 7). If the contamination layer is not deep, this may be an economically viable approach. If the contamination is widespread, however, the volume of material to be disposed in this fashion may be quite

large and may increase the costs of waste disposal. Alternatively, the soil may be excavated and treated using physical and chemical separation techniques to isolate and reduce the volume of contaminated material [32]. For example, in

**Nuclear Facilities****Decommissioning,****Fig. 7** Removing

uncontaminated soil and debris for offsite disposal

[48]



some cases residual radioactivity may be more closely associated with fine clay-sized particles in the soil that can be separated by using screens or other physical separation methods. Chemical extraction methods use solutions such as organic acids to bind to the contamination and remove it from the soil. After separation of the contaminated and uncontaminated soil fractions, the uncontaminated soils are used as clean fill, and contaminated soils are treated or processed for disposal. If chemical methods are used, the leachate may be treated to remove the dissolved radionuclides to meet water standards.

Contaminated surface water and groundwater typically require treatment to meet applicable standards. Widely available technologies for contaminated groundwater include pumping and treating to pull the contaminant plume back toward the extraction well. The contaminated water is then treated through a process such as ion exchange and is either injected back into the aquifer or discharged to a suitable surface water disposal system. A more recent technology for treating contaminated groundwater is the construction of a passive permeable reactive barrier or slurry wall system (Fig. 8).

Built below the ground surface so that they intercept the groundwater plume, the reactive materials in the barrier are selected to chemically react with the contaminants and immobilize them in the subsurface. Reactive materials that may be used to remove uranium from groundwater include different forms of iron, such as metallic (zero-valent) or amorphous ferrihydrite [32]. The contamination will remain in place until the barrier is excavated, and barrier longevity and long-term performance are important engineering issues.

Other technologies rely on in place or in situ methods to reduce or immobilize soil and water contamination. For soils, contamination may be reduced or immobilized through mixing in amendments such as apatite or phosphate that will chemically react with the contamination. Alternatively, soil contamination may be immobilized in place by grouting or capping. Bioremediation is a collection of more recent technologies that use biological organisms to preferentially extract or otherwise break down toxic and radiological contamination from both soils and groundwater [80]. For example, sunflowers have been demonstrated to take up uranium from

**Nuclear Facilities Decommissioning,**

**Fig. 8** Building a slurry wall to remediate contaminated groundwater [48]



waste at a site in Ashtabula, Ohio, and at a small pond contaminated with uranium near the Chernobyl nuclear power plant site in Pripyat, Ukraine [32, 80].

In addition to active remediation technologies, monitored natural attenuation of contaminated soils and groundwater may be also be applicable, if it can be demonstrated to meet applicable criteria in a reasonable time frame [81, 82]. This method relies on monitoring soils and groundwater, while the natural physical, chemical, or biological processes already occurring at the site contain and reduce volume, mass, and toxicity of the contamination in place. Where site conditions such as soil type and groundwater flow are favorable, monitored natural attenuation can be an attractive option because it is typically less disruptive and costly than more active remediation measures. However, because it can be perceived by stakeholders as “doing nothing,” monitored natural attenuation is generally proposed as one part of a broader remediation strategy and

combined with active remediation measures [81, 82]. For example, a contamination source may be excavated and removed, while monitored natural attenuation is implemented for the associated groundwater contaminant plume.

**Waste Management and Disposal**

As described in section “[Waste Management and Disposal](#),” decommissioning wastes can fall into several different classes. Waste classification ultimately depends on the type of historical operations at the site and will influence the decommissioning strategy and waste management options that are selected for a facility. Once the physical, chemical, and radiological properties are characterized and the waste is classified and the applicable criteria are determined, the basic options for waste management are either onsite storage/disposal or transport offsite to an approved waste disposal facility.

For nuclear power plants, one of the final phases of operations before decommissioning is to remove the fuel (defuel) from the reactor and

place the spent nuclear fuel from the reactor in interim storage, either in pools or dry casks. This step would be necessary regardless of the decommissioning strategy selected [78]. As they are generated during operations, other wastes may be collected, segregated, chemically adjusted, and decontaminated onsite and then placed in temporary monitored storage onsite until a final disposition path is determined [51]. A partial list of examples of the types of wastes that may be encountered during the decommissioning of nuclear facilities is presented in Table 3.

Waste may be treated to prepare it for final disposal. Treatment concepts include volume reduction and separation and removal of radionuclides and other hazardous wastes [51]. Some treatment options include incineration or compaction to reduce volume and evaporation or ion exchange to remove radionuclides from liquid wastes. Some of these techniques can generate secondary wastes such as liquids, sludges, and filters that need to be managed as well.

Radioactive wastes may also be conditioned to produce a form that is more suited for handling, transportation, storage, and disposal. Low-level and intermediate-level wastes may be immobilized by mixing with grouts, cements, and bitumen, while liquid high-level wastes from fuel reprocessing may be vitrified into a glass waste form or otherwise modified to produce a solid waste form. These wastes are placed in packages or specially designed containers for interim storage, transportation, and subsequent offsite disposal (Fig. 9). This may be at a licensed disposal site, a specially constructed disposal cell, or an existing tailings impoundment that is being reclaimed and used as a disposal cell. The materials must meet waste acceptance criteria for the disposal facility.

Alternatively, waste may be disposed in place with monitoring and an engineered system for long-term disposal [48]. Onsite waste management, including a decommissioning strategy of entombment, must comply with applicable regulations for near-surface storage and disposal facilities [62]. In this case, a performance assessment (see section “[Safety and Performance Assessment](#)”) may be used to evaluate both engineered

and natural barrier performance over long times. Depending on the nature of the waste and the site-specific conditions, different design options (backfill, concrete vaults, engineered covers) may be evaluated along with a combination of long-term monitoring and institutional controls [51]. Institutional controls such as fencing, signage, and physical security are generally only assumed to be effective for a period on the order of hundreds of years, while the performance of engineered and natural barriers is evaluated over periods as long as 10,000 years [24, 25].

## Conducting Final Inspections and Surveys

During decommissioning, the national regulatory agency will typically conduct onsite reviews and inspections to ensure that the approved decommissioning plan is being followed [19] and the decommissioning activities are being conducted in a safe manner that complies with applicable regulations. After decommissioning is complete, there should be a final survey to evaluate the residual radioactivity that remains at the site. The specific goal of this survey is to determine the extent to which the site complies with the criteria set by the governing regulatory authority for subsequent reuse and/or release of the site [64, 76] – one of the objectives of decommissioning (see section “[Definition of the Subject](#)”).

This survey may be carried out in phases, as decommissioning work is completed, to enable parts of the site to be released from regulatory control. The final survey data are submitted to the regulatory authority, including a description of the applicable reuse/release criteria, the methods and procedures used, and the measurement results. Typically, the sampling and surveys will be focused on areas such as previous waste burial sites or spill locations identified as contaminated during the site characterization survey. These areas are sometimes called Class 1 areas [64], and sampling and surveys will be more extensive. Areas that are less likely to be contaminated, called Class 2 and Class 3 areas, receive lesser surveying and sample coverage. The results typically include an analysis to demonstrate the statistical significance of the results as compared to natural background radiation levels [25, 63, 64, 76].

**Nuclear Facilities Decommissioning, Table 3** Partial list of the types of waste materials for different nuclear facilities

Type of nuclear facility	Examples of waste materials
Uranium mine	Waste rock
	Fuels and lubricants
	Contaminated soils and groundwaters
Uranium mill	Drums
	Insoluble waste and filter materials
	Liquid effluent
	Tailings and sludges
	Liquid nitrates
	Ion-exchange resins
	Tanks, pipes, and equipment
	Contaminated soils and groundwater
Uranium conversion	Solid CaF <sub>2</sub>
	CaF <sub>2</sub> sludges with/without minor uranium
	Nonradiological chemical waste
	Tanks, pipes, and equipment
	Contaminated soils and groundwaters
Uranium enrichment	Depleted uranium tails
	Tanks, pipes, and equipment
	Contaminated soils and groundwaters
Fuel fabrication	Uranium scrap material
	Filters
	Wash water and decontamination/cleaning solutions
	Waste oils
	Spent acids and solvents
	Equipment
	Contaminated soils and groundwaters
Nuclear power plants	Reactor vessel and internal components
	Coolant system equipment and components
	Activated concretes and steels
	Evaporator concentrates
	Tanks, pipes, and equipment
	Contaminated debris and soils
Spent fuel reprocessing	Filters
	Activated and contaminated metal components
	Spent solvents, decontamination, and metal cleaning agents
	Fuel cladding
	Laboratory analytical equipment and solutions
	Tanks, pipes, and equipment
	Contaminated debris, soils, and groundwater

## Reclaiming Disturbed Land

After decommissioning and dismantlement of buildings and structures is complete, the decommissioning strategy may call for reclaiming disturbed land to preoperational condition. This is generally accomplished by adding clean topsoil, installing drainage and erosion controls if necessary, regrading and recontouring the surface to match the surrounding topography, and revegetating with native vegetation (Fig. 10). In addition, land reclamation efforts should include monitoring to ensure that drainage and erosion controls are functioning as intended, revegetated areas are stable, and invasive species have not become established. Many of these techniques are similar to those used to reclaim surface mines [83].

The amount of disturbed land to potentially reclaim can vary significantly for different nuclear facilities, especially conventional uranium mining and milling operations that produce significant quantities of waste rock and tailings covering hundreds of hectares [acres]. The type of reclamation will depend, in part, on the intended use of the land once the license is terminated. For example, a site intended for unrestricted release as a recreation area may have a more extensive land reclamation program than a site that will ultimately be released for future industrial uses.

## Status of Decontamination and Decommissioning

Because commercial nuclear fuel cycle facilities and nuclear power plants are governed at the national level using different policy, statutory, and regulatory frameworks, the status of nuclear decommissioning around the world is difficult to estimate [5]. A brief summary based on the estimates of international nuclear organizations such as the IAEA, NEA, and WNA is provided here and in Table 4.

- In 2014, total worldwide production of uranium was about 66,000 metric tons of U<sub>3</sub>O<sub>8</sub>. The leading countries for uranium production include Kazakhstan, Canada, and Australia, followed by Niger, Namibia, Russia,

**Nuclear Facilities Decommissioning,**

**Fig. 9** Low-level radioactive waste packages for offsite disposal [48]




Uzbekistan, and the United States [46]. Uranium has been mined for decades, and some of the older mines are small and not well documented. In 2007, the WNA estimated that more than 100 mines have been “retired from operations,” although decommissioning is not complete at all of them [6].

- Uranium mines and mills exist in countries with known uranium ore reserves, and uranium is also recovered from phosphates. As of May 2016, the IAEA reported that 56 uranium mines, mills, and recovery facilities were operating worldwide, with 84 plants shut down or in decommissioning and 65 fully decommissioned. An additional 28 facilities were under construction [86].
- Uranium conversion plants to produce UF<sub>6</sub> operate in the United States, Canada, France, United Kingdom, China, and Russia. As of May 2016, the IAEA reported that 28 uranium conversion facilities were operating worldwide, with 19 plants shut down or in decommissioning and seven fully decommissioned. Three additional uranium conversion facilities were under construction [86].
- Major fuel enrichment plants are operated in the United States, France, and Russia, with smaller plants located in the United Kingdom, Netherlands, Germany, Japan, and China [33]. As of May 2016, the IAEA reports that 20 fuel enrichment facilities were operating worldwide, with 11 plants shut down or in decommissioning and eight fully decommissioned. Three additional fuel enrichment plants are under construction [86].
- Fuel fabrication and/or heavy water production facilities operate in most countries with nuclear programs. As of May 2016, the IAEA reports that 65 fuel fabrication and heavy water production facilities were operating worldwide, with 36 plants shut down or in decommissioning and 35 fully decommissioned. Four additional fuel enrichment plants were under construction [86].
- As of March 2016, the IAEA reports that 442 commercial nuclear reactors with a total generating capacity of over 384 GW are operating worldwide, mostly in North America, Europe, and Asia [10]. Currently, an additional

**Nuclear Facilities Decommissioning,**

**Fig. 10** Reclamation and revegetation of site after decommissioning a commercial nuclear power plant [20]

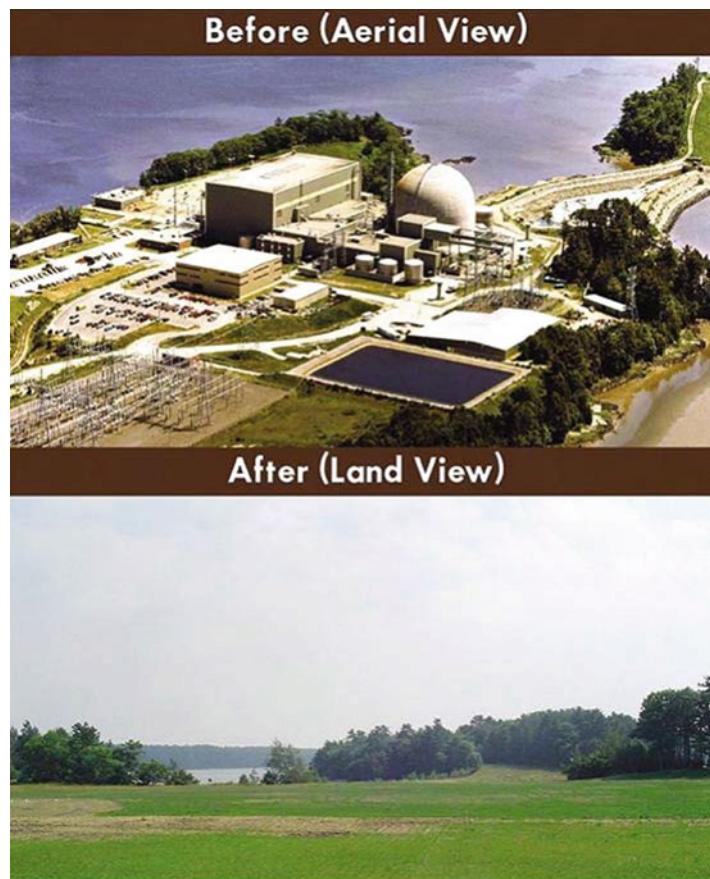

**Nuclear Facilities Decommissioning, Table 4** Decommissioning status for nuclear fuel cycle facilities as of May 2016 [86]

Type of nuclear facility	Operating/undergoing commissioning	Planned/under construction	Deferred/shutdown/being decommissioned	Decommissioned
Uranium mining/milling/recovery	56	28	84	65
Uranium conversion	28	3	19	7
Uranium enrichment	20	3	11	8
Fuel fabrication/heavy water production	65	4	36	35
Fuel reprocessing	9	1	35	9

66 nuclear power reactors are under construction worldwide, and two nuclear reactors are in long-term shutdown [10]. Historically, a total of 110 commercial power reactors and 46 experimental or prototype reactors have been taken out of service. Of these, 17 have been fully decommissioned and dismantled,

over 50 are being decommissioned, more than 50 are in SAFSTOR, and three have been entombed (ENTOMB), with the remaining reactors in DECON waiting for final decommissioning [2, 5, 10, 84]. Smaller research reactors are also operating around the world. Russia has the largest number of

research and test reactors, followed by the United States, Japan, France, Germany, and China. In addition, research and test reactors are also located in developing countries in Africa, South America, and Asia. After peaking in the mid-1970s at about 370 reactors in 55 countries, the number of research and test reactors worldwide has generally declined (ref. [85]). As of April 2016, more than 500 research and test reactors have been shut down or decommissioned [38].

- As of May 2016, the IAEA reports that eight spent fuel reprocessing plants (two pilots, one laboratory, and five commercials) were operating worldwide. Another 35 reprocessing facilities are deferred, canceled, in standby/shutdown, or in decommissioning, with nine facilities fully decommissioned. One fuel reprocessing plant (Rokkasho in Japan) was in the process of commissioning, and an additional pilot plant was under construction in China [86].

## Future Directions

As noted previously, interest in commercial nuclear power has been revived as a result of concerns with carbon emissions from traditional fossil fuels. As a result, many nations have reported an increase in proposed construction projects for new reactors. Although many of these proposed projects will use current Generation II and III reactor designs, there are research and development programs focused on designing the next Generation IV reactors [43].

The different current and future design types and sizes of reactors will make decommissioning inherently a site- and reactor-specific process. Each current and future reactor design will have its own design-specific decommissioning requirements that must be taken into consideration. In addition, changes in reactor design or the use of nuclear fuels based on MOX or thorium may lead to different fuel requirements that will change the nature of decommissioning at the front end of the nuclear fuel cycle.

Much of the decommissioning experience gained to date is focused on an open or “once-

through” uranium fuel cycle. Programs such as the Global Nuclear Energy Partnership and its successor, the International Framework for Nuclear Energy Cooperation, are evaluating the potential of a closed fuel cycle, where fuel is reprocessed and used more than once to generate power [45, 87]. This approach, along with changes in ongoing nuclear reactor operations, would change the amount and characteristics of spent nuclear fuel for handling, storage, and disposal. In addition, closing the fuel cycle would require new nuclear fuel cycle facilities and change the waste streams produced at the back end of the fuel cycle. For these reasons, a change from an open to a closed nuclear fuel cycle may need new waste disposal options that will influence the selection of the decommissioning strategy for these types of facilities.

Although new decontamination techniques are continually being developed [32, 78], existing technology that has been previously been applied with demonstrated success may continue to be preferred by stakeholders (members of the public, government agencies) to an untried method, particularly if trained staff and specialized equipment are readily available. As decommissioning costs and potential benefits are better understood, newer techniques may be more applied. In addition, many nations are looking at extending the service life of existing nuclear facilities and reactors. At the same time, the nuclear workforce is aging, placing a premium on knowledge management and recordkeeping to ensure valuable information and experience are not lost [66, 88, 89]. Decommissioning decisions are perhaps many decades in the future, but should be taken into consideration as designs are developed for advanced reactors and the nuclear facilities that support them.

## Bibliography

### Primary Literature

1. NEA (2002) The decommissioning and dismantling of nuclear facilities. Paris. Status, approaches, challenges. Report No. NEA 3714. Nuclear Energy Agency/Organisation for Economic Co- Operation and Development, Issy-les- Moulineaux. <http://www.oecd-nea.org/>

- rwm/reports/2002/3714-decommissioning.pdf. Accessed 8 Mar 2016
2. UNEP (2012) UNEP year book. Emerging issues in our global environment. Chapter 3: closing and decommissioning nuclear power reactors. Another look following the Fukushima accident. [http://www.unep.org/yearbook/2012/pdfs/UYB\\_2012\\_CH\\_3.pdf](http://www.unep.org/yearbook/2012/pdfs/UYB_2012_CH_3.pdf). Accessed 8 Mar 2016
  3. Commission of the European Communities (2007) Communication from the Commission to the Council and the European Parliament. Nuclear illustrative programme. Presented under Article 40 of the Euratom Treaty for the Opinion of the European Economic and Social Committee. Commission of the European Communities, Brussels. Oct
  4. NEA (2015) NEA annual report 2014. Nuclear Energy Agency, Issy-les-Moulineaux. <http://www.oecd-nea.org/pub/activities/ar2014/ar2014.pdf>. Accessed 8 Mar 2016
  5. IAEA (2004) Status of the decommissioning of nuclear facilities around the world. IAEA, Vienna, August. [http://www-pub.iaea.org/MTCD/publications/PDF/Pub1201\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/Pub1201_web.pdf). Accessed 8 Mar 2016
  6. WNA (2006) Safe decommissioning of civil nuclear industry sites. World Nuclear Association, London, September. <http://www.world-nuclear.org/our-association/publications/position-statements/safe-decommissioning-of-civil-nuclear-industry-sit.aspx>. Accessed 8 Mar, 2016
  7. NEA (2010) Applying decommissioning experience to the design and operation of new nuclear power plants. Report No. 6924. Nuclear Energy Agency, Issy-les-Moulineaux, <https://www.oecd-nea.org/rwm/reports/2010/nea6924-applying-decommissioning.pdf>. Accessed 8 Mar 2016
  8. IAEA (2005) Selection of decommissioning strategies: issues and factors: report by an expert group. IAEA-TECDOC-1478. IAEA, Vienna, November. [http://www-pub.iaea.org/MTCD/publications/PDF/TE\\_1478\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/TE_1478_web.pdf). Accessed 8 Mar 2016
  9. Nuclear Energy Institute (2016) World statistics: nuclear energy around the world. Nuclear Energy Institute, Washington, DC, <http://www.nei.org/Knowledge-Center/Nuclear-Statistics/World-Statistics>. Accessed 8 Mar 2016
  10. IAEA (2016) The database on nuclear power reactors. IAEA, Vienna, <https://www.iaea.org/pris/>. Accessed 8 Mar 2016
  11. Reisenweaver D, Laraia M (2000) Preparing for the end of the line. Radioactive residues from nuclear decommissioning. IAEA Bull 42:51–54, [www.iaea.org/sites/default/files/42305085154.PDF](http://www.iaea.org/sites/default/files/42305085154.PDF). Accessed 8 Mar 2016
  12. USNRC (2015) New reactor licensing applications: updated October 7, 2015. U.S. Nuclear Regulatory Commission, Washington, DC, <http://www.nrc.gov/reactors/new-reactors/new-licensing-files/new-rx-licensing-app-legend.pdf>. Accessed 8 Mar 2016
  13. IAEA (2015) Energy, electricity and nuclear power estimates for the period up to 2050, Reference data series no. 1. IAEA, Vienna, <http://www-pub.iaea.org/MTCD/Publications/PDF/rds1-35web.pdf>. Accessed 8 Mar 2016
  14. Joskow PL, Parsons JE (2012) The future of nuclear power after Fukushima. Econ Energy Environ Pol 1(2):99–113
  15. McMahon J (2013) How fracking killed nuclear power. *Forbes*. June 16. <http://www.forbes.com/sites/jeffmcmahon/2013/06/16/fracking-not-wind-killed-exelons-nuclear-upgrades/#19a24dd022b8>. Accessed 10 Mar 2016
  16. USNRC (2009) Generic environmental impact statement for in-situ leach uranium milling facilities – final report. NUREG-1910, vol 1 and 2. U.S. Nuclear Regulatory Commission, Washington, DC, June. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1910/>. Accessed 16 Mar 2016
  17. USNRC (2013) Regulatory guide 1.184. Decommissioning of nuclear power reactors. Revision 1. U.S. Nuclear Regulatory Commission, Washington, DC, October. <http://pbadupws.nrc.gov/docs/ML13144/ML13144A840.pdf>. Accessed 9 Mar 2016
  18. USNRC (2000) Staff responses to frequently asked questions concerning decommissioning of nuclear power reactors, Final report. NUREG-1628. U.S. Nuclear Regulatory Commission, Washington, DC, June <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1628/>. Accessed 9 Mar 2016
  19. IAEA (2013) Planning, management and organizational aspects of the decommissioning of nuclear facilities. IAEA TECDOC No. 1702. [http://www-pub.iaea.org/MTCD/Publications/PDF/TE-1702\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/TE-1702_web.pdf). Accessed 9 Mar 2016
  20. USNRC (2015) Backgrounder: decommissioning nuclear power plants. U.S. Nuclear Regulatory Commission, Washington, DC, May. <http://www.nrc.gov/reading-rm/doc-collections/fact-sheets/decommissioning.pdf>. Accessed 9 Mar 2016
  21. NEA (2005) Decommissioning of nuclear power facilities. It can and has been done. Nuclear Energy Agency, Issy-les-Moulineaux, <http://www.oecd-nea.org/rwm/reports/2004/nea5728-decom.pdf>. Accessed 28 May 2009
  22. WNA (2015) The nuclear fuel cycle. World Nuclear Association, London, June. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/introduction/nuclear-fuel-cycle-overview.aspx>. Accessed 9 Mar 2016
  23. IAEA (2005) Standard format and content for safety related decommissioning documents, Safety reports series no. 45. IAEA, Vienna, November. [http://www-pub.iaea.org/MTCD/publications/PDF/Pub1214\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/Pub1214_web.pdf). Accessed 9 Mar 2016
  24. USNRC (2006) Consolidated decommissioning guidance. Decommissioning process for materials licensees, Final report. NUREG-1757, Vol. 1, Rev. 2. U.S. Nuclear Regulatory Commission, Washington, DC, September. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1757/>. Accessed 9 Mar 2016

25. USNRC (2006) Consolidated decommissioning guidance. Characterization, survey, and determination of radiological criteria, Final report. NUREG-1757, Vol. 2, Rev. 1. U.S. Nuclear Regulatory Commission, Washington, DC, September. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1757/>. Accessed 9 Mar 2016
26. USNRC (2003) Consolidated NMSS decommissioning guidance. Financial assurance, recordkeeping, and timeliness, Final report. NUREG-1757, Vol. 3, Revision 1. U.S. Nuclear Regulatory Commission, Washington, DC, September. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1757/>. Accessed 9 Mar 2016
27. USDOE (1995) Decommissioning of U.S. Uranium production facilities. DOE/EIA-0592. U.S. Department of Energy, Energy Information Administration, Washington, DC, February. [pbadupws.nrc.gov/docs/ML1428/ML1428A295.pdf](http://pbadupws.nrc.gov/docs/ML1428/ML1428A295.pdf). Accessed 9 Mar 2016
28. Taylor G, Farrington V, Woods P, Ring R, Molloy R (2004) Review of environmental impacts of the acid in-situ leach uranium mining process. CSIRO land and water client report. Commonwealth Scientific and Industrial Research Organisation, Clayton South, August
29. IAEA (2004) The long term stabilization of uranium mill tailings, Final report of a co-ordinated research project, 2000–2004. IAEA-TECDOC-1403. IAEA, Vienna, August. [www-pub.iaea.org/MTCD/publications/PDF/te\\_1403\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/te_1403_web.pdf). Accessed 9 Mar 2016
30. USNRC (2008) Environmental impact statement for the reclamation of the Sequoyah Fuels Corporation Site in Gore, Oklahoma – final report. NUREG-1888. U.S. Nuclear Regulatory Commission, Washington, DC, May. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1888/>. Accessed 9 Mar 2016
31. USNRC (2015) Backgrounder: uranium enrichment. U.S. Nuclear Regulatory Commission, Washington, DC, February. <http://www.nrc.gov/reading-rm/doc-collections/fact-sheets/enrichment.pdf>. Accessed 9 Mar 2016
32. USEPA (2006) Depleted uranium technical brief. EPA-402-R-06-011. Office of Air and Radiation, U.S. Environmental Protection Agency, Washington, DC, December. <http://www.epa.gov/sites/production/files/2015-05/documents/402-r-06-011.pdf>. Accessed 9 Mar 2016
33. Bodansky D (2004) Nuclear energy. Principles, practices, and prospects, 2nd edn. Springer-Verlag, LLC., New York City
34. USDOE (1999) Final programmatic environmental impact statement for alternative strategies for the long-term management and use of depleted uranium hexafluoride. DOE/EIS-0269. U.S. Department of Energy, Office of Nuclear Energy, Science, and Technology, Washington, DC, April. [pbadupws.nrc.gov/docs/ML0607/ML060730522.pdf](http://pbadupws.nrc.gov/docs/ML0607/ML060730522.pdf). Accessed 9 Mar 2016
35. Interstate Technology and Regulatory Council (2008) Decontamination and decommissioning of radiologically contaminated facilities. Interstate Technology and Regulatory Council, Washington, DC, January. <http://www.itrcweb.org/Documents/RAD5.pdf>. Accessed 9 Mar 2016
36. USNRC (2007) Uranium enrichment. U.S. Nuclear Regulatory Commission, Washington, DC, June. <http://www.nrc.gov/materials/fuel-cycle-fac/ur-enrichment.html>. Accessed 9 Mar 2016
37. GAO (2007) Uranium enrichment: extension of decontamination and decommissioning fund may be needed to cover projected cleanup costs. GAO-08-277T. U.S. Government Accountability Office, Washington, DC, November. <http://www.gao.gov/new.items/d08277t.pdf>. Accessed 9 Mar 2016
38. WNA (2016) Research reactors. World Nuclear Association, London, September. <http://www.world-nuclear.org/information-library/non-power-nuclear-applications/radioisotopes-research/research-reactors.aspx>. Accessed 17 May 2016
39. WNA (2016) Nuclear power reactors. World Nuclear Association, London, January. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/nuclear-power-reactors/nuclear-power-reactors.aspx>. Accessed 10 Mar 2016
40. USNRC (2015) Power reactors. U.S. Nuclear Regulatory Commission, Washington, DC, August. <http://www.nrc.gov/reactors/power.html>. Accessed 9 Mar 2016
41. NEA (2014) Technology roadmap update for generation IV nuclear energy systems. Nuclear Energy Agency/Organisation for Economic Co- Operation and Development, Issy-les- Moulineaux, January. <https://www.gen-4.org/gif/upload/docs/application/pdf/2014-03/gif-tru2014.pdf>. Accessed 9 Mar 2016
42. Argonne National Laboratory (2013) Major programs: generation IV (Gen IV). Argonne National Laboratory, Argonne, October. <http://www.ne.anl.gov/research/genIV/>. Accessed 9 Mar 2016
43. USDOE (2010) Next generation nuclear plant licensing strategy. A report to congress. U.S. Department of Energy, Office of Nuclear Energy, Washington, DC, August. [http://energy.gov/sites/prod/files/4.4\\_NGNP\\_ReporttoCongress\\_2010.pdf](http://energy.gov/sites/prod/files/4.4_NGNP_ReporttoCongress_2010.pdf). Accessed 9 Mar 2016
44. USNRC (2015) Performance assessment for waste disposal and decommissioning. U.S. Nuclear Regulatory Commission, Washington, DC, Updated April 29, 2015, <http://www.nrc.gov/about-nrc/regulatory/performance-assessment.html>. Accessed 9 Mar 2016
45. USDOE (2008) Draft global nuclear energy partnership programmatic environmental impact statement. DOE/ EIS-0396. U.S. Department of Energy, Office of Nuclear Energy, Washington, DC, October. <http://energy.gov/nepa/downloads/eis-0396-draft-programmatic-environmental-impact-statement>. Accessed 9 Mar 2016
46. WNA (2015) World uranium mining production. World Nuclear Association, London, June. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/mining-of-uranium/world-uranium-mining-production.aspx>. Accessed 8 Mar 2016
47. Andrews A (2008) Nuclear fuel reprocessing: U.S. policy development, CRS report for Congress, Order Code RS22542. Congressional Research Service,

- Washington, DC, March 27, 2008. <http://www.fas.org/sgp/crs/nuke/RS22542.pdf>. Accessed 9 Mar 2016
48. USDOE (2010) Final environmental impact statement for decommissioning and/or long-term stewardship at the West Valley demonstration project and Western New York nuclear service center. DOE/EIS-0226. U.S. Department of Energy, West Valley, January. <http://energy.gov/nepa/downloads/eis-0226-final-environmental-impact-statement>. Accessed 9 Mar 2016
  49. WNA (2015) Processing of used nuclear fuel. World Nuclear Association, London, November. <http://world-nuclear.org/information-library/nuclear-fuel-cycle/fuel-recycling/processing-of-used-nuclear-fuel.aspx>. Accessed 9 Mar 2016
  50. IAEA (2007) Disposal aspects of low and intermediate level decommissioning waste, Results of a coordinated research project 2002–2006. IAEA-TECDOC-1572. IAEA, Vienna, December. [http://www-pub.iaea.org/MTCD/publications/PDF/TE\\_1572\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/TE_1572_web.pdf). Accessed 9 Mar 2016
  51. IAEA (2000) Radioactive waste management profiles: a compilation of data from the waste management database No. 3. IAEA, Vienna, April. <http://www-pub.iaea.org/MTCD/publications/PDF/rwmp-3/RWMP-V3.pdf>. Accessed 9 Mar 2016
  52. IAEA (2009) Classification of radioactive waste, General safety guide no. GSG-1. IAEA, Vienna, April. [http://www-pub.iaea.org/MTCD/publications/PDF/Pub1419\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/Pub1419_web.pdf). Accessed 9 Mar 2016
  53. Environmental Law Institute (1999) Institutional controls case study: grand junction. Environmental Law Institute, Washington, DC, <http://www.eli.org/sites/default/files/eli-pubs/d9.14.pdf>. Accessed 9 Mar 2016
  54. USNRC (2003) Standard review plan for the review of a reclamation plan for mill tailings sites under title II of the uranium mill tailings radiation control act of 1978, Final report. NUREG-1620, Rev. 1. U.S. Nuclear Regulatory Commission, Washington, DC, <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1620/>. Accessed 9 Mar 2016
  55. USNRC (2008) Design, construction, and inspection of embankment retention systems at uranium recovery facilities, Regulatory guide 3.11, Revision 3. U.S. Nuclear Regulatory Commission, Washington, DC, November. <http://pbadupws.nrc.gov/docs/ML0823/ML082380144.pdf>. Accessed 9 Mar 2016
  56. IAEA (2005) Guidebook on environmental impact assessment for *in situ* leach mining projects. IAEA-TECDOC-1428. IAEA, Vienna, May. [http://www-pub.iaea.org/MTCD/publications/PDF/TE\\_1428\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/TE_1428_web.pdf). Accessed 9 Mar 2016
  57. National Research Council (2001) Disposition of high-level waste and spent nuclear fuel. The continuing societal and technical challenges. National Academy Press, Washington, DC
  58. USDOE (2007) Radioactive waste management manual. DOE M 435.1-1. U.S. Department of Energy, Office of Environmental Management, Washington, DC, January. [https://www.emcbc.doe.gov/Content/Office/doe\\_m\\_435.1\\_1\\_chg\\_1.pdf](https://www.emcbc.doe.gov/Content/Office/doe_m_435.1_1_chg_1.pdf). Accessed 9 Mar 2016
  59. IAEA (2011) Disposal of radioactive waste, IAEA safety standards series no. SSR-5. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1449\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1449_web.pdf). Accessed 9 Mar 2016
  60. IAEA (2008) Managing Low radioactivity material from the decommissioning of nuclear facilities, Technical reports series no. 462. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/publications/PDF/trs462\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/trs462_web.pdf). Accessed 9 Mar 2016
  61. League of Women Voters Education Fund (1993) The nuclear waste primer. The League of Women Voters Education Fund, Washington, DC
  62. IAEA (2004) Application of the concepts of exclusion, exemption and clearance, IAEA safety standards series, safety guide no. RS-G-1.7. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1202\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1202_web.pdf). Accessed 9 Mar 2016
  63. USNRC (2001) Multi-agency radiation survey and site investigation manual (MARSSIM), NUREG-1575, Rev. 1/EPA 402-R-97-016, Rev. 1/DOE/EH-0624, Rev. 1. U.S. Nuclear Regulatory Commission, Washington, DC, June. <http://www.epa.gov/radiation/download-marssim-manual-and-resources>. Accessed 9 Mar 2016
  64. NEA (2006) Releasing the sites of nuclear installations. A status report, Report no. NEA 6187. Nuclear Energy Agency, Issy-les-Moulineaux, <https://www.oecd-nea.org/rwm/reports/2006/nea6187-release.pdf>. Accessed 9 Mar 2016
  65. IAEA (2008) Long term preservation of information for decommissioning projects, Technical reports series no. 467. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/trs467\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/trs467_web.pdf). Accessed 9 Mar 2016
  66. IAEA (2002) Record keeping for the decommissioning of nuclear facilities: guidelines and experience, Technical reports series no. 411. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/publications/PDF/TRS411\\_scr.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/TRS411_scr.pdf). Accessed 9 Mar 2016
  67. Energy Information Administration (2006) When do commercial reactors permanently shut down? The recent record. Energy Information Administration, U.S. Department of Energy, Washington, DC, June. <http://www.eia.doe.gov/cneaf/nuclear/closures/closure16.html>. Accessed 14 June 2009
  68. European Commission (2009) Decommissioning in short. European Commission, Brussels, <http://www.eu-decom.be/about/decominshort/whatis.html>. Accessed 9 Mar 2016
  69. IAEA (2007) Decommissioning strategies for facilities using radioactive material, Safety reports series no. 50. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1281\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1281_web.pdf). Accessed 9 Mar 2016
  70. IAEA (2002) Safe enclosure of nuclear facilities during deferred dismantling, Safety reports series no. 26.

- IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1142\\_scr.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1142_scr.pdf). Accessed 9 Mar 2016
71. USNRC (2009) Peach bottom – unit 1. U.S. Nuclear Regulatory Commission, Washington, DC, Updated April 16, 2009, <http://www.nrc.gov/info-finder/decommissioning/power-reactor/peach-bottom-atomic-power-station-unit.html>. Accessed 9 Mar 2016
  72. USNRC (2013) Summary findings resulting from the staff review of the 2013 decommissioning funding status reports for operating power reactor licensees. SECY-13-0105. <http://www.nrc.gov/reading-rm/doc-collections/commission/secys/2013/2013-0105scy.pdf>. Accessed 9 Mar 2016
  73. OECD/NEA (2010d) Towards greater harmonization of decommissioning cost estimates. NEA No. 6867. <http://www.oecd-nea.org/rwm/reports/2010/nea6867-harmonisation.pdf>. Accessed 10 Mar 2016
  74. IAEA (2008) Safety assessment for the decommissioning of facilities using radioactive material, IAEA safety standards series, safety guide no. WS-G-5.2. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1372\\_web.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/Pub1372_web.pdf). Accessed 9 Mar 2016
  75. Interstate Technology and Regulatory Council (2002) Determining cleanup goals at radioactively contaminated sites: case studies. Interstate Technology and Regulatory Council, Washington, DC, April. <http://www.itrcweb.org/Guidance/GetDocument?documentID=72>. Accessed 9 Mar 2016
  76. IAEA (1999) Decommissioning of nuclear power plants and research reactors, IAEA safety standards series, safety guide no. RS-G-2.1. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/Publications/PDF/P079\\_scr.pdf](http://www-pub.iaea.org/MTCD/Publications/PDF/P079_scr.pdf). Accessed 9 Mar 2016
  77. USEPA (2006) Technology reference guide for radio logically contaminated surfaces. EPA-402-R-06-003. Office of Air and Radiation, U.S. Environmental Protection Agency, Washington, DC, April. <http://www.epa.gov/sites/production/files/2015-05/documents/402-r-06-003.pdf>. Accessed 9 Mar 2016
  78. IAEA (1999) State of the art technology for decontamination and dismantling of nuclear facilities, Technical reports series no. 395. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/publications/PDF/TRS395\\_scr/D395\\_Part1\\_scr.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/TRS395_scr/D395_Part1_scr.pdf). Accessed 9 Mar 2016
  79. NEA (1999) Decontamination techniques used in decommissioning activities. Nuclear Energy Agency/ Organisation for Economic Co- Operation and Development, Issy- les-Moulineaux, <http://www.oecd-nea.org/rwm/reports/1999/decontec.pdf>. Accessed 9 Mar 2016
  80. USEPA (2004) Radionuclide biological remediation resource guide. EPA-905-B-04-001. Region 5, Superfund Division, U.S. Environmental Protection Agency, Washington, DC, April. <https://clu-in.org/download/remed/905b04001.pdf>. Accessed 9 Mar 2016
  81. USEPA (1999) Use of monitored natural attenuation at superfund, RCRA corrective action, and underground storage tank sites. Office of solid waste and emergency response (OSWER) directive No. 9200.4-17P. Office of Solid Waste and Emergency Response, U.S. Environmental Protection Agency, Washington, DC, April. <nepis.epa.gov/Adobe/PDF/20001SUG.pdf>. Accessed 9 Mar 2016
  82. Interstate Technology and Regulatory Council (2010) Technical/regulatory guidance: a decision framework for applying monitored natural attenuation processes to metals and radionuclides in groundwater. APMR-1. Interstate Technology and Regulatory Council, Washington, DC, <http://www.itrcweb.org/Guidance/GetDocument?documentID=5>. Accessed 9 Mar 2016
  83. Norman DK, Wampler PJ, Throop AH, Schnitzer EF, Roloff JM (1997) Best management practices for reclaiming surface mines in Oregon and Washington. Washington Department of Natural Resources, Olympia, December. <http://www.oregongeology.org/pubs/ofr/O-96-02.pdf>. Accessed 9 Mar 2016
  84. WNA (2016) Decommissioning nuclear facilities. World Nuclear Association, London, January. <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/nuclear-wastes/decommissioning-nuclear-facilities.aspx>. Accessed 8 Mar 2016
  85. IAEA (2016) Research reactors worldwide. International Atomic Energy Agency, Vienna. [http://www-naweb.iaea.org/napc/physics/ACTIVITIES/Research\\_Reactors\\_Worldwide.htm](http://www-naweb.iaea.org/napc/physics/ACTIVITIES/Research_Reactors_Worldwide.htm). Accessed 8 Mar 2016
  86. IAEA (2016) Nuclear fuel cycle information system, list of nuclear fuel cycle facilities. Vienna. <https://infcis.iaea.org/NFCIS/Facilities/Facilities>. Accessed 17 May 2016
  87. The International Framework for Nuclear Energy Cooperation. <http://www.ifnec.org/Home.aspx>. Accessed 9 Mar 2016
  88. IAEA (2016) Nuclear knowledge management. IAEA, Vienna, <https://www.iaea.org/nuclearenergy/nuclearknowledge/>. Accessed 9 Mar 2016
  89. IAEA (2004) Planning, managing, and organizing the decommissioning of nuclear facilities. IAEA-IECDOC-1394. IAEA, Vienna, [http://www-pub.iaea.org/MTCD/publications/PDF/te\\_1394\\_web.pdf](http://www-pub.iaea.org/MTCD/publications/PDF/te_1394_web.pdf). Accessed 9 Mar 2016
  90. USNRC (2005) U.S. Nuclear Regulatory Commission's decommissioning program. NUREG/BR-0325. U.S. Nuclear Regulatory Commission, Washington, DC, January. <http://phadupws.nrc.gov/docs/ML0527/ML052720422.pdf>. Accessed 9 Mar 2016

## Books and Reviews

ASTM International (2015) ASTM E1281-15, standard guide for nuclear facility decommissioning plans, ASTM International. ASTM International, West Conshohocken

- National Research Council (1998) A review of decontamination and decommissioning technology development programs at the department of energy. National Academies Press, Washington, DC
- National Research Council (2001) Research opportunities for deactivating and decommissioning department of energy facilities. National Academies Press, Washington, DC
- OECD (2014) Nuclear site remediation and restoration during decommissioning of nuclear installations: a report by the NEA Co-operative programme on decommissioning, radioactive waste management. OECD Publishing, Paris, [http://www.oecd-ilibrary.org/nuclear-energy/nuclear-site-remediation-and-restoration-during-decommissioning-of-nuclear-installations\\_9789264222182-en](http://www.oecd-ilibrary.org/nuclear-energy/nuclear-site-remediation-and-restoration-during-decommissioning-of-nuclear-installations_9789264222182-en). Accessed 9 Mar 2016
- Taboas A, Moghissi A, LaGuardia T (2004) The decommissioning handbook. American Nuclear Society, LaGrange
- Till JE, Meyer HR (eds) (n.d.) NUREG/CR-3332. U.S. Nuclear Regulatory Commission, Washington, DC. September
- USDOE (2000) Decommissioning handbook. Procedures and practices for decommissioning. DOE/EM-0383. USDOE, Office of Environmental Management, Washington, DC, January
- USNRC (1983) Radiological assessment. A textbook on environmental dose analysis
- USNRC (2002a) Generic environmental impact statement on decommissioning of nuclear facilities. Regarding the decommissioning of nuclear power reactors. NUREG-0586, supplement 1, vol 1. U.S. Nuclear Regulatory Commission, Washington, DC. November. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr0586/s1/v1/index.html>. Accessed 10 Mar 2016
- USNRC (2002b) Generic environmental impact statement on decommissioning of nuclear facilities. Regarding the decommissioning of nuclear power reactors. NUREG-0586, Supplement 1, Vol. 2. U.S. Nuclear Regulatory Commission, Washington, DC. November. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr0586/s1/v2/index.html>. Accessed 10 Mar 2016
- Argonne National Laboratory (USA) Decontamination and decommissioning. <http://www.dd.anl.gov/>. Accessed 8 Mar 2016
- Canadian Nuclear Laboratories Decommissioning and waste management. <http://www.cnl.ca/en/home/commercial/decommissioning-waste-management.aspx>. Accessed 8 Mar 2016
- IAEA Nuclear safety and security: decommissioning. <http://www-ns.iaea.org/tech-areas/waste-safety/decommissioning.asp>. Accessed 8 Mar 2016
- IAEA Nuclear knowledge management (NKM) <https://www.iaea.org/nuclearenergy/nuclearknowledge/>. Accessed 8 Mar 2016
- Nuclear Decommissioning Authority (UK) <https://www.gov.uk/government/organisations/nuclear-decommissioning-authority>. Accessed 8 Mar 2016
- Nuclear Energy Institute (NEI) <http://www.nei.org/Search?searchtext=decommissioning&searchmode=AnyWord>. Accessed 9 Mar 2016
- NEA (2014) Technology roadmap update for generation IV nuclear energy systems. Nuclear Energy Agency/Organisation for Economic Co-Operation and Development, Issy-les- Moulineaux, January. <https://www.gen-4.org/gif/upload/docs/application/pdf/2014-03/gif-tru2014.pdf>. Accessed 9 Mar 2016
- NEA Working Party on Decommissioning and Dismantling (WPDD) <http://www.oecd-nea.org/rwm/wpdd/>. Accessed 8 Mar 2016
- Union of Concerned Scientists. Nuclear Power <http://www.ucsusa.org/nuclear-power#.VuDsIOaIVF>. Accessed 9 Mar 2016
- U.S. Nuclear Regulatory Commission (USA) Decommissioning of nuclear facilities. <http://www.nrc.gov/waste/decommissioning.html>. Accessed 9 Mar 2016
- U.S. Department of Energy (USA) Deactivation and decommissioning <http://energy.gov/em/services/site-facility-restoration/deactivation-decommissioning-dd>. Accessed 9 Mar 2016
- World Information Service on Energy Uranium Project <http://www.wise-uranium.org/index.html>. Accessed 9 Mar 2016
- WNA (2015) Generation IV nuclear reactors. World Nuclear Association, London, <http://www.world-nuclear.org/information-library/nuclear-fuel-cycle/nuclear-power-reactors/generation-iv-nuclear-reactors.aspx>. Accessed 9 Mar 2016

## Websites

American Nuclear Society (ANS) Decommissioning and environmental sciences division. <http://desd.ans.org/>. Accessed 9 Mar 2016



---

# Radioactive Waste Management: Storage, Transport, and Disposal

Audeen W. Fentiman  
School of Nuclear Engineering, Purdue University, West Lafayette, IN, USA

## Article Outline

Glossary  
Definition of the Subject  
Introduction  
High-Level Radioactive Waste: Including Used (Spent) Nuclear Fuel (SNF)  
Low-Level Radioactive Waste  
Transuranic Waste  
Future Directions  
Bibliography

## Glossary

**Fission** Process by which a nucleus splits into two smaller nuclei, emitting two or three neutrons and energy

**Half-life** The time required for half of the nuclei in a sample of a radioactive isotope to emit radiation and be transformed to another isotope

**High-level radioactive waste (HLW)** Used nuclear fuel or the highly radioactive materials that are generated when used nuclear fuel is reprocessed

**Low-level radioactive waste (LLW)** Radioactive waste that is not high-level radioactive waste, used nuclear fuel, or mill tailings

**Transuranic waste (TRU)** Wastes that are not classified as high-level waste and contain more than 100 nCi/g of alpha-emitting transuranic isotopes ( $Z > 92$ ) with half-lives of more than 20 years

**Used nuclear fuel or spent nuclear fuel (SNF)**

Terms used to designate nuclear fuel that has been irradiated in a reactor to produce power

## Definition of the Subject

Radioactive materials are widely used in our society, and when they are, radioactive wastes can be produced. In addition to being used to generate about 20% of the electricity used in the USA and 11% of the electricity used worldwide, radioactive materials are important in medicine, industry, and research. For example, radioactive materials are used to help diagnose and treat disease as thickness gages in manufacturing, as components of some smoke detectors, to kill bacteria in food, to trace the movement of nutrients through plants, and to power spacecraft leaving the solar system. Just as there are many uses of radioactive materials, there are many types of radioactive waste, each of which must be stored for a time, treated (prepared either for disposal or recycling), transported, and ultimately disposed of in a licensed facility. Some radioactive materials are utilized in weapons production, an activity which also results in generation of radioactive wastes, although this chapter shall focus on civilian uses of radioactive materials. Proper management of radioactive wastes is essential to ensure that society continues to realize the benefits of radioactive materials without undue risk to human health or the environment, and all aspects of radioactive waste management are highly regulated.

## Introduction

This chapter addresses four types of radioactive waste, used nuclear fuel, high-level radioactive waste (HLW), low-level radioactive waste (LLW), and transuranic waste (TRU). Used nuclear fuel (sometimes called spent nuclear fuel) is fuel that has reached the end of its useful life and has been taken out of a nuclear power plant. It is highly radioactive. High-level waste is a category of radioactive waste that includes used nuclear fuel and the highly radioactive wastes that are generated when used nuclear fuel is reprocessed. These two materials are expected to

be disposed of in the same facility and thus are lumped together in one category. As the name implies, this waste is highly radioactive. Low-level radioactive waste is material that is not HLW or TRU; LLW typically consists of items with low concentrations of radioactive materials with relatively short half-lives (<100 years). There are several categories of low-level radioactive material, and the category assigned to any particular container of low-level waste depends on the type and amount of contamination on the waste material. Finally, transuranic waste is a very specialized type of waste containing materials that have an atomic number greater than that of uranium. One section of this chapter is devoted to each type of waste, and within each section, methods for storing, treating, transporting, and disposing of the waste will be discussed.

### **High-Level Radioactive Waste: Including Used (Spent) Nuclear Fuel (SNF)**

Ninety-nine nuclear power plants in the USA generate about 20% of the electricity used each year [1]. Worldwide, over 438 nuclear power plants generate about 11% of the electricity [2]. Some countries rely heavily on nuclear power. For example, over 75% of the electricity in France is generated by nuclear power plants, and over 40% of the electricity in Sweden, Belgium, and Slovakia is from nuclear power [3].

The fuel for the nuclear power plants is uranium dioxide ( $\text{UO}_2$ ), which is typically pressed into ceramic pellets. About 5% of the uranium in the fuel is  $^{235}\text{U}$  which fissions, releasing energy that is ultimately converted to electricity. The other 95% of the uranium in the fuel is  $^{238}\text{U}$  which is mostly inert although a small fraction of the  $^{238}\text{U}$  atoms is converted to plutonium while the reactor is operating and another small fraction fissions. The ceramic  $\text{UO}_2$  pellets are small cylinders about 0.6 in. long and 0.4 in. in diameter [4]. Stacks of pellets are sealed in zircaloy tubes about 12 ft long, and a  $17 \times 17$  array of rods constitutes one typical fuel assembly. About 180 fuel assemblies are loaded into an

average-sized pressurized water reactor. The other type of nuclear reactor commonly used in the USA, the boiling water reactor, is fueled with about 500–750 smaller fuel assemblies.

As the reactor operates,  $^{235}\text{U}$  nuclei fission after they absorb a neutron, breaking into two smaller nuclei. A small number of neutrons emitted during fission strike other  $^{235}\text{U}$  atoms, causing more fissions and releasing more energy. This process is known as a chain reaction. Eventually, most of the  $^{235}\text{U}$  atoms in a fuel assembly have fissioned, and there are not enough of those atoms remaining to sustain the chain reaction. At that point, about one third of the fuel assemblies are removed from the reactor and fresh ones inserted in their place. Most nuclear power plants operate for 18–24 months before they need to be refueled. The fuel assemblies that are removed during refueling are referred to as used nuclear fuel or spent nuclear fuel.

The composition of the used nuclear fuel is shown in Table 1. Approximately 95% of the used nuclear fuel is  $^{238}\text{U}$ . Less than 1% of the used fuel is plutonium. Some plutonium isotopes, primarily  $^{239}\text{Pu}$ , fission and can be incorporated into new fuel rods. The remainder of the used fuel consists of fission products, that is, the atoms created when the  $^{235}\text{U}$  atoms split, and minor actinides which were formed when some  $^{238}\text{U}$  atoms absorbed neutrons. Many fission products are highly radioactive and emit penetrating gamma rays.

When the used nuclear fuel is removed from the reactor, it is transferred to the spent fuel pool in a structure adjacent to the reactor building. The spent fuel pool is an in-ground, concrete, steel-reinforced, stainless steel-lined pool that is filled with at least 20 ft of water [6]. Used fuel

**Radioactive Waste Management: Storage, Transport, and Disposal, Table 1** Composition of used nuclear fuel [5]

Material	Percent of used fuel (%)
Uranium ( $^{235}\text{U}$ and $^{238}\text{U}$ )	95.6
Plutonium (all isotopes)	0.9
Minor actinides	0.1
Stable fission products	2.9
Radioactive fission products	0.5

assemblies are placed vertically in the pool. Water in the pool cools the fuel assemblies and serves to shield workers and equipment in the area of the pool from the radiation emitted by the fuel assemblies.

Perhaps surprisingly, the spent fuel pool at a nuclear power plant is not designed to be large enough to hold all of the used fuel that will be discharged from the nuclear power plant over its lifetime. A nuclear power plant's initial license is for 40 years. By early 2010, over half of the nuclear power plants in the USA had been granted license extensions of 20 years [7]. Thus, nuclear power plants are expected to operate at least 60 years, and it will be necessary to store some used fuel outside of the spent fuel pool. At the time the first nuclear power plants were built in the 1960s, it was presumed that used nuclear fuel would be reprocessed and recycled after the fuel assemblies had cooled for several years. Thus there was no need to build a spent fuel pool to hold all of the discharged fuel. In April 1977, US policy on reprocessing was changed when President Carter issued a statement that the USA would "defer indefinitely the commercial reprocessing and recycling of plutonium" [8]. The Nuclear Waste Policy Act of 1982 mandated construction of a geologic repository for permanent disposal of used nuclear fuel and required the Department of Energy to begin disposing of the used nuclear fuel not later than January 31, 1998 [9]. Once again, it did not appear that the spent fuel pool would need to hold all of the used nuclear fuel from a nuclear power plant, since there would be a place to send the used fuel for disposal. However, the geologic repository has not been built, and spent fuel pools at many of the older nuclear power plants are full or nearly full.

Many power plants are now moving some of their older used fuel assemblies that have been cooling in the spent fuel pool for many years to dry storage casks to make room in the pool for more fuel coming out of the reactor. The typical dry storage cask is a cylinder about 19 ft high and 8 ft in diameter made of concrete or steel. Dry storage casks come in different sizes, but they usually hold approximately 30 fuel assemblies and weigh about 100 t when loaded [10]. Spent

fuel assemblies are sealed in an inner canister which is then placed in the dry storage cask. Some of the dry storage casks are designed to sit vertically on a concrete pad near the reactor building. In other dry storage systems, the casks are placed horizontally into a concrete bunker near the reactor building.

Across the USA, as of 2015, there are about 74,000 t [11] of used nuclear fuel stored either in spent fuel pools or dry storage casks at the nuclear power plants where it was generated. (Because uranium is a very dense material (19.05 g/cm<sup>3</sup>), denser even than lead (11.35 g/cm<sup>3</sup>), a ton of used fuel does not occupy much space. If all of the used fuel assemblies that have been discharged from US nuclear power plants since they began to operate were stacked on a football field 100 yards long and 53 1/3 yards wide, the stack would be about eight yards high.) The Nuclear Regulatory Commission which is responsible for overseeing safety at the nuclear power plants has said that the used fuel can be safely stored at the power plant where it was generated for up to 100 years [12].

Ultimately, the used nuclear fuel must be disposed of permanently or reprocessed with as many of the constituents as possible being recycled and reused and the remainder being disposed of permanently. Until a decision about the final disposition of used nuclear fuel is made, the used fuel will continue to be stored either at the power plants where it was generated or at central storage facilities. Regardless of where the fuel is stored or whether it is reprocessed or buried, a system for transporting the used nuclear fuel will be required. Regulations governing the transportation system have been in place for decades, and some used fuel has been moved in licensed transportation casks. The next several paragraphs will describe recent US policy for disposing of used nuclear fuel, the options for central storage of used fuel if the fuel currently in dry storage casks is moved from the reactors to a central location, and the transportation system in place to move that used fuel.

Current US policy for disposal of used nuclear fuel was set by the Nuclear Waste Policy Act of 1982 and its 1987 amendments which provided for permanent disposal of used nuclear fuel in a

deep geologic repository. The repository was to hold 70,000 t of used nuclear fuel and vitrified high-level waste from Department of Energy (DOE) facilities. The DOE was responsible for designing, building, and operating the repository, and the DOE was to begin taking used fuel from nuclear power plants by January 31, 1998. The Office of Civilian Radioactive Waste Management was established within the DOE to manage both the repository and the transportation system for used nuclear fuel. In addition, the law required a monitored retrievable storage facility (MRS) where used fuel from reactors throughout the USA could be stored temporarily and then put into standard packages for disposal. The bill also established the Nuclear Waste Fund to pay for the design, construction, and operation of the used nuclear fuel management system. A charge of one mill (one tenth of a cent) for every kilowatt hour of electricity generated by a nuclear power plant is the source of money for the Nuclear Waste Fund. Between 1982 and 2014, more than \$30 billion dollars were collected for the Nuclear Waste Fund [13].

Three possible sites for the deep geologic repository were identified, and each was to be characterized to determine whether it was an appropriate location for nuclear waste disposal. The sites were in (1) Deaf Smith County, Texas, (2) Richland, Washington, on the Hanford Site, and (3) Yucca Mountain, Nevada, near the Nevada Test Site where nuclear weapons had been tested underground. Each of the three sites offered a different type of rock in which the repository would be located. The Texas site was in salt, the Washington site in basalt, and the Nevada site in tuff. Local opposition to construction of a nuclear waste repository was strong in all three locations, and efforts to characterize the sites were often thwarted. Little progress was made toward identifying the best location for the repository.

In 1987, the US Congress passed the Nuclear Waste Policy Amendments Act. This law identified the Yucca Mountain site in the Nevada desert as the location of the nation's deep geologic repository. The law established a position of nuclear waste negotiator to find a volunteer site for the MRS since the site in Tennessee identified

pursuant to the 1982 Nuclear Waste Policy Act was rejected.

The geologic repository for used nuclear fuel was required to be licensed by the Nuclear Regulatory Commission (NRC). Following passage of the 1987 law, work began at the Nevada site to gather scientific evidence required to prepare an application for a license to construct and operate the geologic repository. Information required for the license application is specified in 10 CFR Part 60, Disposal of High-Level Radioactive Wastes in Geologic Repositories [14]. Scientists working on the application needed to show that they understood not only the characteristics of each of the components of the repository but also how the components would interact and perform over time. Since the repository was to accommodate both used nuclear fuel from commercial nuclear power plants and vitrified high-level waste from nuclear weapons programs, data on composition of both waste forms as well as chemical and physical properties were required. Information required on packages that confined the waste included proposed materials, dimensions, and response to heat, pressure, radiation, water, and other possible corrosive chemicals in the rock and soil. Detailed information on the design of the engineered repository was required. DOE had to show that the repository would be safe for workers while the waste was being emplaced, that any specific container of buried waste could be retrieved for 50 years after it had been emplaced, and that the repository would confine the waste over a specified period. Data required for the site, itself, included characteristics of the rocks and soil, groundwater speed and direction, and an inventory of flora and fauna species in the area of the repository.

Between 1987 and 2007, the team of scientists characterizing Yucca Mountain spent approximately \$7 billion gathering data on the site and preparing the required documents including an environmental impact statement and the license application. The repository design called for a network of tunnels approximately 1,200 ft below the surface. Each tunnel was to be reinforced with steel supports to keep the rock from collapsing onto the waste packages. Rails on the floor of each

tunnel would allow casks to be moved into place. Casks designed to hold about 30 used fuel assemblies or half a dozen cylinders of vitrified waste from DOE facilities would be made of thick steel. An inverted U-shaped titanium shield was proposed to cover the casks in each tunnel to divert any water that might reach the repository from the desert above.

On June 3, 2008, DOE delivered to the Nuclear Regulatory Commission the application for a license to construct and operate the nuclear waste repository at Yucca Mountain. According to the Nuclear Waste Policy Act, the NRC had 3 years to review the application but could request an additional year. Following the presidential election in 2008, funding for the Yucca Mountain project was reduced, and in March 2010, the DOE withdrew its application for a license for a nuclear waste repository at Yucca Mountain “with prejudice.” At almost the same time, the DOE created the Blue Ribbon Commission on America’s Nuclear Future. The charter of this commission was “to conduct a comprehensive review of policies for managing the back end of the nuclear fuel cycle, including all alternatives for the storage, processing, and disposal of civilian and defense used nuclear fuel, high-level waste, and materials derived from nuclear activities.”

The Blue Ribbon Commission issued its report in January 2012. In its report the commission stated that the USA should have a deep geologic repository for final disposal of used nuclear fuel and centralized interim storage until the geologic repository could be built. The commission did not address recycling or reprocessing of used nuclear fuel. However, since several other countries that generate electricity using nuclear power do reprocess used nuclear fuel, reprocessing is briefly addressed here.

Reprocessing of used nuclear fuel currently involves chopping up the used fuel rods, dissolving the fuel in a concentrated nitric acid solution, and chemically separating the various elements in the used fuel. The uranium and plutonium, which constitute about 96% of the used fuel, can be recycled and used in fabricating new fuel rods. The remaining material is typically dried, mixed with glass frit, melted, and poured

into metal cylinders. Many countries that rely heavily on nuclear power either reprocess their own used nuclear fuel or send it to other countries that have reprocessing facilities. The USA does not reprocess used fuel from commercial nuclear power plants.

The reprocessing method currently used in most countries is the PUREX method which was developed in the USA to reprocess fuel from government-run reactors to recover plutonium for use in nuclear weapons. A small amount of used fuel from commercial nuclear power plants was reprocessed at a facility in West Valley, New York, between 1966 and 1972, but the facility was shut down because it was not economical. Since the USA decided not to reprocess used nuclear fuel in 1977, no additional reprocessing of commercial nuclear fuel has occurred. One objection to use of the PUREX method was that it isolates plutonium from other materials in the used fuel, supposedly making it easier for terrorists to divert the plutonium.

Research is being conducted in the USA on reprocessing methods that would not isolate plutonium. Some of the methods under consideration are for reprocessing used fuel from the light-water reactors that are currently operating in the USA. Other methods are being developed for different types of fuel that might be used in the next generation of reactors (commonly referred to as generation IV) now being designed for use around the world. Reprocessing facilities are complex and expensive to build. Japan completed construction of a nuclear fuel recycling facility in Rokkasho at a cost of approximately \$20 billion [15]. It is likely that US policy makers will want more information on the types of nuclear power plants that will be operating in the USA over the next century and results of research programs on reprocessing methods in hand before deciding what type of reprocessing facility, if any, to build in the USA.

Since it appears that the USA will not be disposing of used nuclear fuel or reprocessing it in the near future, storage of used nuclear fuel at a central facility (or facilities) is being studied. Central storage is not a new concept. The Nuclear Waste Policy Act of 1982 called for establishing a monitored retrievable storage (MRS) facility,

and the Nuclear Waste Policy Amendments Act of 1987 provided for a person to seek a community willing to host the MRS. No MRS has been sited. A consortium of utilities, called Private Fuel Storage, negotiated with the Skull Valley Band of the Goshute Indian tribe to establish a central used fuel storage facility on the tribe's land in Utah. An application was submitted on the NRC for a license to construct and operate the storage facility, and on February 21, 2006, the NRC granted a license but said that construction could not begin until it obtained "necessary approvals from other agencies, including the Bureau of Land Management, the Bureau of Indian Affairs, and the Surface Transportation Board" [16]. Neither the Bureau of Land Management nor the Bureau of Indian Affairs has approved the site. At the request of Senators Barbara Boxer, Harry Reid, and John Ensign, the US General Accountability Office did a study of a central storage facility option and an on-site storage facility option, along with the Yucca Mountain repository. The study, which was issued in November 2009, concluded that while a centralized interim storage facility could be built relatively quickly, finding a site could be difficult, and since the facility would not be a final disposal site, any waste going to the centralized storage facility would have to be transported twice [17].

Eventually, the used nuclear fuel currently stored at the nuclear power plants must be transported to a central storage facility, a processing facility, or a permanent disposal site. Some used nuclear fuel has been transported in the USA, for example, between nuclear power plants owned by the same company or from a power plant to a government research facility. Both the NRC and the US Department of Transportation have regulations governing transportation of used nuclear fuel. The NRC regulation is Title 10, Part 71 of the Code of Federal Regulations (10 CFR Part 71) [18], which specifies requirements for the packages that carry the highly radioactive material, called Type B packages. The regulation also specifies how packages for transporting used nuclear fuel are to be approved. Each Type B package must have a Radioactive Material Package Certificate of Compliance from the

NRC. Procedures for applying for the certificate of compliance can be found in NUREG-1617, "Standard Review Plan for Transportation Packages for Spent Nuclear Fuel" [24]. Packages for used nuclear fuel are designed for transportation by truck and by rail.

To receive a certificate of compliance, a Type B package, which is often called a shipping cask, one must undergo a series of tests that simulate accident conditions a cask might encounter en route. The first four tests, conducted sequentially on a single cask, are:

1. Drop test. Drop the cask from 30 ft onto a hard, unyielding surface in an orientation most likely to damage the cask.
2. Puncture test. Drop the cask from 40 in. onto a 6 in. diameter shaft in an orientation most likely to result in damage.
3. Fire test. Engulf the cask fully in a fire at least 1,475 °F for 30 min.
4. Immersion test. Place the cask under 3 ft of water for 30 min [19].

In order to receive the certificate of compliance, the cask must not release any radioactive materials during or following the series of tests. A new, undamaged cask must pass a fifth test, immersion in water at a pressure equivalent to that exerted by water 50 ft deep, before the certificate can be issued.

Several different shipping casks have been designed to be transported by truck. Those casks carry between one and nine used fuel assemblies. A typical rail cask carries 36 fuel assemblies, but the number varies because there are different sizes of fuel assemblies. The shipping casks are usually cylindrical with their walls made of several layers of different materials. The innermost and outermost layers are usually steel to provide structural strength. One layer of material between the steel shells is designed to absorb gamma rays emitted by the used fuel. Steel, lead, and depleted uranium are some materials that are used to absorb gamma rays. Another layer is made of a material that slows down and absorbs neutrons. *The Radioactive Materials Packaging Handbook* [20], written at the Oak Ridge National Laboratory in 1998,

contains detailed information required to design and manufacture a shipping cask for used nuclear fuel.

NRC regulations govern routes to be used for transporting used nuclear fuel and physical protection for the shipments. The Department of Transportation regulations specify methods for selecting routes (49 CFR 397) and labeling of the shipping casks (49 CFR 172). In addition, drivers of trucks transporting radioactive materials must meet training and experience requirements and undergo a background investigation.

## Low-Level Radioactive Waste

Low-level radioactive waste is defined in the Low-Level Radioactive Waste Policy Act of 1980 as radioactive waste that is not high-level radioactive waste, spent nuclear fuel, or mill tailings [21]. There are four classes of low-level radioactive waste (LLW) based on the concentration of radioisotopes with short half-lives and the concentration of radioisotopes with longer half-lives in the waste. The classes are designated as A, B, C, and Greater Than Class C (GTCC). Tables 11 and 2 in 10 CFR Part 61 are used to determine the class of LLW in a particular container.

LLW is generated by almost any activity that involves radioactive material. Some examples of LLW are lab coats and shoe covers worn when working with radioactive materials, medical equipment involved in treating a patient with radiopharmaceuticals, and laboratory supplies and equipment used in experiments involving radioactive tracers. Radioactive tracers are very commonly used. They are radioactive isotopes that move through a system (e.g., the human body, a growing plant, or an ecosystem) along with the material being studied. Since small amounts of radiation can be detected, the researchers can measure radiation from the tracer to determine how the substance of interest is moving through the system. For example, tracers are used in the development of virtually all new medicines to study how the medicine or its metabolites move through the body. Hospitals, universities,

and research laboratories operated by corporations or government agencies often generate LLW.

The largest amount of commercial LLW is generated by industry, including the nuclear power industry. Equipment and materials from power plant maintenance activities, samples collected during environmental monitoring, and protective clothing are disposed of as LLW. In addition, LLW is generated during the various stages of nuclear fuel fabrication.

Often LLW is initially in liquid form. For example, it is sometimes more cost-effective to wash protective clothing than to dispose of it. Likewise, it may be more economical to decontaminate some equipment using a solvent than to dispose of the equipment. In these cases, the wash water and the solvent become LLW. Environmental samples are routinely dissolved in a liquid for analysis, yielding liquid LLW. Since LLW disposal facilities will not accept large amounts of liquid wastes, most liquid LLW must be solidified. Several methods can be used including evaporation, ion exchange, flocculation, and filtration. The liquid waste could simply be mixed with a solidifying agent such as concrete. However, since the cost of disposal is determined, in part, by the volume of the waste, methods that minimize the volume are usually preferred.

Dry LLW is typically treated to reduce its volume prior to packaging for shipment to a disposal facility. Compaction, which results in a volume reduction to one half or one third of the initial volume, or super-compaction, which can result in a volume reduction to one tenth of the original volume, are commonplace. Incineration can reduce the volume to 1% of the original and is especially useful for combustible materials like wood that cannot be compacted easily.

Four disposal facilities for commercial LLW are currently operating in the USA. They are in Barnwell, South Carolina, Richland, Washington, Clive, Utah, and near Andrews, Texas. LLW disposal sites have been available since the early 1960s. Four early sites have been closed. They were in Sheffield, Illinois, Maxey Flats, Kentucky, West Valley, New York, and Beatty, Nevada.

While LLW disposal facilities have been operating in the USA since the 1960s, the law which currently governs LLW disposal was not passed by the US Congress until 1980. The Low-Level Radioactive Waste Policy Act of 1980 made each state responsible for arranging for disposal of its own LLW. States were encouraged to form compacts, groups of states that could collaborate to build one LLW disposal facility to serve all of the compact's members. If a state within a compact built an LLW disposal facility, that facility would not be required to accept LLW from any state outside of the compact. States that did not belong to a compact and chose to build their own disposal facility would not be able to exclude waste from other states. The law required states to form compacts by 1986. States did not meet that deadline, and in 1985, the Low-Level Radioactive Waste Policy Amendments Act was passed. It gave the states until 1992 to form compacts. At one time, all states have belonged to a compact. Some have left the compact, and some compacts have been reconstituted.

Until 2008, the lack of new disposal facilities did not impact LLW generators' ability to dispose of their waste. The Richland, Washington, facility accepted Class A, B, and C waste from the Northwest and Rocky Mountain compacts, and the Barnwell, South Carolina, facility accepted Class A, B, and C waste from the rest of the country. Beginning in 2008, the Barnwell facility accepted waste only from the Atlantic Compact states. The Clive, Utah, facility accepts Class A - low-level waste from across the country, and the Andrews, Texas, facility accepts Class A, B, and C waste from the Texas Compact and generators outside of that compact with permission from the compact [22].

Packaging requirements are specified for each class of LLW in 10 CFR Title 61.56. Some requirements for Class A waste are: no cardboard or fiberboard containers may be used; wastes cannot be explosive or pyrophoric, emit toxic gasses, or contain biological pathogens or infectious material; and if the package contains liquids, it must also have enough absorbent material to absorb twice the volume of liquid present. Packing for Class B waste must meet all of the

requirements for Class A waste packaging plus a stability criterion which ensures that packages will remain intact when other packages are stacked on top of them. Class C waste packaging must meet all of the requirements of Class B waste packaging plus provide a barrier to inadvertent intrusion.

Low-level radioactive waste is typically disposed of in shallow land burial facilities. A facility must be designed to minimize contact of the buried waste with water. A trench about 30 ft deep and 100 ft wide is excavated in soil that drains well. Containers are placed in the trench in a way that minimizes void space, and any voids that are created are filled with sand. When a portion of the trench is full, it is covered with a cap that is designed to divert any water that falls on it away from the waste.

## Transuranic Waste

Transuranic wastes are defined in 40 CFR 191, Environmental Standards for the Management and Disposal of Spent Nuclear Fuel and High-Level and Transuranic Waste, as wastes that are not classified as high-level waste but contain more than 100 nCi/g of alpha-emitting transuranic isotopes (materials with  $Z > 92$ ) with half-lives of more than 20 years. Transuranic isotopes are generated in a reactor when U-238 absorbs neutrons. Most transuranic waste in the USA has been generated during weapons production when used nuclear fuel from government-operated reactors was reprocessed to recover plutonium for weapons. If the USA begins to reprocess used nuclear fuel from commercial nuclear power plants, transuranic wastes will be generated at the commercial fuel-reprocessing facilities as well.

Most transuranic (TRU) waste is solid. Typical wastes are protective clothing or equipment that has been contaminated with transuranic isotopes. TRU waste is packaged in steel, concrete, or wooden boxes. Since most of the transuranic isotopes emit alpha particles which cannot penetrate a sheet of paper, most TRU waste (about 97%) is referred to as contact-handled TRU, meaning that

people can handle the packages. Only 3% of the TRU must be handled remotely [23].

Transuranic waste is disposed of in the Waste Isolation Pilot Plant (WIPP). WIPP is a deep geologic repository in salt located near Carlsbad, New Mexico. It has been accepting and disposing of TRU waste since 1999. The US Department of Energy Report DOE-WIPP-069, Waste Acceptance Criteria for the Waste Isolation Pilot Plant, outlines requirements for TRU waste shipped to the facility for disposal. They include specifications for the container, data to accompany the package, and radiologic, physical, chemical, and gas generation properties of the waste.

TRU waste is transported to WIPP in Type B packages which are certified by the Nuclear Regulatory Commission after undergoing the rigorous tests described in the section on used nuclear fuel.

In February 2014, an underground salt truck fire and subsequent radionuclide release prompted the New Mexico secretary of the environment to issue an order on February 27, 2014, stating that WIPP “shall not accept shipment of any off-site generated waste until normal operating status of the Facility is resumed.” The Department of Energy expects to resume waste disposal operations at WIPP by the end of 2016.

## Future Directions

Future directions for radioactive waste management in the USA vary depending on the type of radioactive waste. Transuranic wastes are likely to continue to be shipped to the Waste Isolation Pilot Plant (WIPP) for disposal. For decades, low-level radioactive wastes have been disposed of in shallow land burial facilities. Currently, some states do not have a location for disposal of Class B and C wastes, but those constitute only about 1% of the low-level wastes and can be stored at the generation site until a disposal facility is available.

High-level radioactive waste disposal policy in the USA was reviewed extensively by the Blue Ribbon Commission on America’s Nuclear Future which concluded that the nation needs a deep geologic repository for permanent storage of

high-level waste, central interim storage facilities until the repository is ready, and a transportation system to move used fuel. In January 2013, the Department of Energy issued its “strategy for the management and disposal of used nuclear fuel and high-level radioactive waste” which incorporates many recommendations from the Blue Ribbon Commission and outlines a plan for implementing them. Meanwhile, used nuclear fuel is being stored at reactor sites and can be kept there for several decades while the federal government adopts a policy for its disposal and constructs the facilities required to carry out the policy. The nation has experience with all of the components of the system required to treat and dispose of HWL. Transportation casks for HLW have been built, certified, and used to transport that material. Used nuclear fuel belonging to the federal government and some used commercial fuel have been reprocessed. Research on advanced reprocessing methods is being conducted at national laboratories and universities. Research done at Yucca Mountain and experience at WIPP have provided extensive data on deep geologic repositories, which are the type of facility in which used nuclear fuel or reprocessing waste is likely to be placed. Several other countries that rely heavily on nuclear power for their electricity are currently reprocessing used nuclear fuel and conducting research on geologic repositories. Technical information related to treatment, storage, transportation, and disposal of high-level radioactive waste will be available when the policy decisions are made.

## Bibliography

### Primary Literature

1. Nuclear Energy Institute (2015) Unites States nuclear power plants. <http://www.nei.org/Knowledge-Center/Nuclear-Statistics/US-Nuclear-Power-Plants>. Accessed 14 Mar 2016
2. Nuclear Energy Institute (2015) World statistics. <http://www.nei.org/Knowledge-Center/Nuclear-Statistics/World-Statistics>. Accessed 14 Mar 2016
3. World Nuclear Association (2008) Nuclear shares of electricity generation. <http://www.world-nuclear.org/info/nshare.html>. Accessed 15 Mar 2010

4. Murray RL (1988) Nuclear energy. Pergamon Press, Oxford
5. Ryskamp JM (2003) Nuclear fuel cycle. [http://nuclear.inel.gov/docs/papers-presentations/nucle\\_fuel\\_CYCLE\\_3-5-03.PDF](http://nuclear.inel.gov/docs/papers-presentations/nucle_fuel_CYCLE_3-5-03.PDF). Accessed Jun 2008
6. US Nuclear Regulatory Commission (2007) Spent fuel pools. <http://www.nrc.gov/waste/spent-fuel-storage/pools.html>. Accessed Mar 2010
7. US Nuclear Regulatory Commission (2010) Nuclear power plant license extensions. <http://www.nrc.gov/reactors/operating/licensing/renewal/applications.html#complied>. Accessed Mar 2010
8. PBS Frontline (2010) Carter nuclear fuel reprocessing. <http://www.pbs.org/wgbh/pages/frontline/shows/reactor/readings/keeny.html>. Accessed Mar 2010
9. Nuclear Waste Policy Act of 1982 as amended (2010) <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr0980/v2/sr0980v2.pdf#pagemode=bookmarks&page=141>. Accessed Apr 2010
10. Board on Radioactive Waste Management (2006) Safety and security of commercial spent nuclear fuel storage: public report. National Academies Press, Washington, DC
11. Nuclear Energy Institute (2015) On-site storage of nuclear waste. <http://www.nei.org/Knowledge-Center/Nuclear-Statistics/On-Site-Storage-of-Nuclear-Waste>. Accessed 14 Mar 2016
12. Waste Confidence Decision, 49 FR 34694, August 31, 1984, as amended at 55 FR 38474, September 18, 1990; 72 FR 49509, August 28, 2007, Federal Register
13. Nuclear Energy Institute (2014) Infographics database. <http://www.nei.org/Master-Document-Folder/Multimedia/Infographics-Database/Nuclear-Waste-Fund-Fee-Suspended>. Accessed 15 Mar 2016
14. US Nuclear Regulatory Commission (1981) 10 CFR Part 60, disposal of high-level radioactive wastes in geologic repositories
15. vonHippel F (2009) Why reprocessing persists in some counties and not in others: the costs and benefits of reprocessing – for the Non-Proliferation Education Center. [www.npec-web.org/..../vonhippel%20-%20TheCostsandBenefits.pdf](http://www.npec-web.org/..../vonhippel%20-%20TheCostsandBenefits.pdf). Accessed Mar 2010
16. US Nuclear Regulatory Commission press release No. 06-028 (2006) Private Fuel Storage license application. <http://www.nrc.gov/reading-rm/doc-collections/news/2006/06-028.html>. Accessed Mar 2010
17. US General Accountability Office (2009) Nuclear waste management: key attributes, challenges, and costs for the Yucca mountain repository and two potential alternatives. GAO-10-48
18. US Code of Federal Regulations (CFR) (2010) 10 CFR Part 71. <http://www.nrc.gov/reading-rm/doc-collections/cfr/part071>. Accessed Mar 2010
19. Kutz M (2009) Environmentally conscious materials handling. Wiley, Hoboken
20. Arnold ED, Shappert LB, Bowman SM (1998) Radioactive materials packaging handbook: design, operations, and maintenance. Department of Energy, Oak Ridge National Laboratory, Oak Ridge
21. Low-level Radioactive Waste Policy Amendments Act of 1985. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr0980/v2/sr0980v2.pdf#pagemode=bookmarks&page=15>. Accessed Apr 2010
22. US Nuclear Regulatory Commission (2016) Locations of low-level waste disposal facilities. <http://www.nrc.gov/waste/llw-disposal/licensing/locations.html>. Accessed 14 Mar 2016
23. Saling JH, Fentiman AW (2002) Radioactive waste management. Taylor & Francis, New York
24. US Nuclear Regulatory Commission (2000) NUREG-1617 standard review plan for transportation packages for spent nuclear fuel. <http://www.nrc.gov/reading-rm/doc-collections/nuregs/staff/sr1617/>. Accessed Mar 2010

## Books and Reviews

- Office of Civilian Radioactive Waste Management Website (2010). <http://www.ocrwm.doe.gov/>. Accessed Mar 2010
- Ohio State University Extension (2010) Low-level radioactive waste fact sheets. <http://ohioline.osu.edu/rer-fact/index.html>. Accessed Mar 2010
- US Department of Energy (2002) Final environmental impact statement for a geologic repository for the disposal of spent nuclear fuel and high-level radioactive waste at Yucca mountain, Nye County, Nevada. DOE/EIS-0250
- US General Accountability Office (2007) Low-level radioactive waste management: approaches used by foreign countries may provide useful lessons for managing US Radioactive Waste. GAO-07-221
- US General Accountability Office (2008) Low-level radioactive waste: status of disposal availability in the United States and other countries. GAO-08-813T
- US Nuclear Regulatory Commission Website, Radioactive Waste (2010). <http://www.nrc.gov/waste.html>. Accessed Mar 2010
- Waste Isolation Pilot Plant Website (2010). <http://www.wipp.energy.gov/index.htm>. Accessed Mar 2010



## Nuclear Fusion

Thomas J. Dolan  
Department of Nuclear, Plasma, and Radiological  
Engineering, University of Illinois, Urbana, IL,  
USA

### Article Outline

Abbreviations  
Symbols  
Definition of the Subject  
Introduction  
Fusion Reactions  
Fusion Reactor Requirements  
Plasma Confinement Methods  
Magnetic Confinement  
Tokamaks  
Stellarators  
Reversed Field Pinch (RFP)  
Spheromaks  
Helicity Injected Torus: Steady Induction  
(HIT-SI)  
Field Reversed Configuration (FRC)  
Magnetized Target Fusion  
Open Magnetic Confinement Systems  
Other Concepts  
Inertial Confinement Fusion (ICF)  
Laser Development  
Hypervelocity Impact Fusion  
Challenges of Plasma Theory  
Magnetic Fusion Technology Issues  
Fusion Reactor Design Studies  
Fusion-Fission Hybrids  
Economics  
Bibliography

### Abbreviations

ARC      Affordable, reliable, compact  
ARIES     Advanced reactor innovative  
              engineering studies

ARPA	Advanced research projects agency
ASDEX	Axi-symmetric divertor Experiment
CFC	Carbon fiber composite
COE	Cost of electricity
DD	Deuterium-deuterium reaction or fuel
DT	Deuterium-tritium reaction or fuel
EAST	Experimental advanced superconducting Tokamak, Hefei
EBT	Elmo bumpy torus, ORNL
ECRH	Electron cyclotron resonance heating
or ECH	
EFDA	European Fusion Development Agreement
FLiBe	LiF-BeF molten salt mixture
FNSF	Fusion nuclear science facility
FRC	Field reversed configuration
GDT	Gasdynamic trap, Novosibirsk
HIT	Helicity injected torus, University of Washington
HTSC	High temperature superconductor
ICF	Inertial confinement fusion
ICRH	Ion cyclotron resonance heating
or ICH	
IDCD	Imposed dynamo current drive
IEC	Inertial electrostatic confinement
IFMIF	International Fusion Materials Irradiation Facility
ITER	International Thermonuclear Experimental Reactor
JET	Joint European torus
KSTAR	Korean superconducting Tokamak advanced research
LANL	Los Alamos National Laboratory
LENR	Low energy nuclear reactions
LHCD	Lower hybrid wave current drive or heating
or LH	
LHD	Large helical device
LLNL	Lawrence Livermore National Laboratory
MAST	Meg-ampere spherical Tokamak
MFTF	Mirror fusion test facility, LLNL
MHD	Magnetohydrodynamic model – treats plasma as a conducting fluid
MIF	Magneto-inertial fusion

MTF	Magnetized target fusion
NBI	Neutral beam injection
NCSX	National Compact Stellarator Experiment, PPPL
NIF	National Ignition Facility, LLNL
NIFS	National Institute for Fusion Sciences (Japan)
NRL	Naval Research Laboratory
NSTX	National Spherical Tokamak Experiment, PPPL
OH	Ohmic heating
ORNL	Oak Ridge National Laboratory
PF	Poloidal magnetic field
PoP	Proof of principle
PPPL	Princeton Plasma Physics Laboratory
Q	Fusion energy gain ratio = (fusion energy)/(input energy)
RAFM	Reduced activation ferritic martensitic steels
RF, rf	Radiofrequency
RFP	Reversed field pinch
SC	Superconducting magnet coils
SI	Steady injection
SNLA	Sandia National Laboratories Albuquerque
SRRS	Stimulated rotational Raman scattering
SSPX	Sustained spheromak physics experiment
TBR	Tritium breeding ratio
TF	Toroidal magnetic field
TFTR	Tokamak fusion test reactor, PPPL

Symbol	Units	Meaning
$\Phi_t$	Wb	Toroidal magnetic flux
$I_p$	MA	Maximum plasma current
K	$T^2 m^4$	Magnetic helicity
L	m	Plasma length
$m_e$	kg	Electron mass
$m_i$	kg	Ion mass
n	$m^{-3}$	Plasma electron density (electrons per $m^3$ )
Q		Fusion energy gain ratio
r	m	Minor plasma radius
R $R_o$	m	Major plasma radius and its value at plasma center
T	C K, keV	Temperature. 1 keV = 11.6 MK (MegaKelvin)
T	—	Tritium or triton
$T_e$	keV	Electron temperature
$T_i$	keV	Ion temperature
V	V	voltage
$v_{  }$	m/s	Particle velocity component along B field direction
$v_{\perp}$	m/s	Particle velocity component perpendicular to B field

## Definition of the Subject

Nuclear Fusion of hydrogen isotopes into helium and heavier elements is the energy source of our sun and the other stars. The goal of nuclear fusion research is to build “miniature suns” on earth that will provide clean energy for electricity generation, hydrogen production, and industrial applications, including uses of neutrons and heat.

## Symbols

Symbol	Units	Meaning
A	m	Magnetic vector potential
a		Minor plasma radius at plasma edge
B	T	Magnetic field
Beta, $\beta$	None	Ratio of (plasma pressure)/(magnetic field pressure)
$B_m$	T	Maximum magnetic field
$B_{max}$		
$B_o$	T	Central magnetic field
$B_p$	T	Poloidal magnetic field
$B_t$	T	Toroidal magnetic field
D	—	Deuterium or deuteron
$\Phi_p$	Wb	Poloidal magnetic flux

(continued)

## Introduction

The joining together of two light elements join to produce a heavier element is called a “nuclear fusion reaction”. For example a deuteron plus a triton can produce helium-4 plus a neutron

$$D + T \rightarrow {}^4\text{He}(3.5 \text{ MeV}) + n(14.1 \text{ MeV}), \quad (1)$$

where D = deuteron, T = triton, n = neutron, the reaction product kinetic energies are given in parentheses, and  $1 \text{ MeV} = 1.602 \times 10^{-13} \text{ J}$ . (Deuterium and tritium are isotopes of hydrogen having one neutron or two neutrons, respectively.)

The positively charged atomic nuclei repel each other, so they must have high speeds in order to approach close enough for reactions to occur, which correspond to high temperatures. Temperatures are usually expressed in keV, where  $1 \text{ keV} = 11.6 \text{ MK}$  (Mega-Kelvin).

One liter of water contains 0.034 g of deuterium. When burned in a nuclear fusion reactor this deuterium could yield as much energy as burning 300 liters of gasoline. Thus, there is enough deuterium in the rivers, lakes, and oceans of the world to provide the world's energy needs for millions of years. The first generation of fusion power plants will use deuterium and tritium fuels. Tritium has negligible abundance in nature, but can be bred by neutron absorption in lithium, so deuterium and lithium are the primary fuels. Table 1 lists some potential benefits of such fusion reactors.



Although the fuel for fusion reactors would be cheap, the reactor capital costs would be very high, so the cost of electricity could still be expensive (to be discussed later).

**Nuclear Fusion, Table 1** Potential benefits of fusion reactors



Abundant fuels (deuterium and lithium) – enough for millions of years
Cheap fuel
Lithium fuel $\approx 2 \times 10^{-13} \text{ \$/J}$ (assuming Li at 25 \\$/kg)
Deuterium fuel $\approx 7 \times 10^{-12} \text{ \$/J}$ (assuming D at 5,000 \\$/kg)
PWR fuel $\approx 9 \times 10^{-11} \text{ \$/J}$ (at 40 GWd/MTHM, 350 \\$/kg)
Coal $\approx 2 \times 10^{-9} \text{ \$/J}$ (at 40 \\$/short ton)
Natural gas $\approx 3 \times 10^{-9} \text{ \$/J}$ (at 3.4 \\$/1,000 ft <sup>3</sup> US industrial)
Gasoline $\approx 10^{-8} \text{ \$/J}$ (at 0.5 \\$/l)
Fuel available to all nations, could reduce conflicts over fossil fuels
Fuel has low mass, easy to transport
Clean – avoids pollutant emissions, less waste than fission or coal
Safe – no supercriticality hazard or meltdown hazard
Does not require expensive energy storage
No high-level radioactive waste
Neutrons from fusion reactors could be used to de-activate high level radioactive waste from fission reactors or to breed fission reactor fuel

## Fusion Reactions


Tritium has negligible abundance on earth, but it can be bred from lithium via the reactions

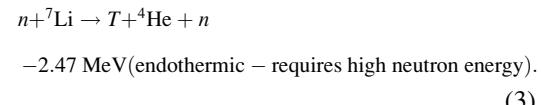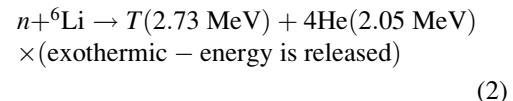

The fusion reactions with the highest probabilities at  $T < 80 \text{ keV}$  are

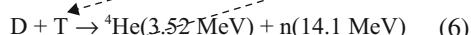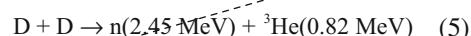

where H = proton, D = deuteron, T = triton (distinguish from T meaning temperature), n = neutron, and the energies of the reaction products are shown in parentheses. The TT reaction has a probability similar to those of the DD reactions. The two branches of the DD reaction have roughly equal probabilities. If the  ${}^3\text{He}$  and T produced by the DD reactions are recycled as fuel in the other two reactions (dashed arrows), the sum of reactions (4) to (7) yields

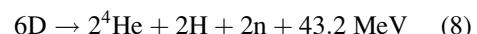

which is called the “catalyzed DD” fuel cycle, having an average energy yield of 7.2 MeV per deuteron. The only fuel input would be deuterium, avoiding the need to breed tritium from lithium, but the fusion power density would be much lower than from the DT fuel cycle using tritium bred from lithium.

Other reactions, such as  $H + {}^6\text{Li}$  and  $H + {}^{11}\text{B}$ , have lower reaction probabilities at  $T < 100 \text{ keV}$ , so they are more difficult to use, but they would have the potential advantage of emitting fewer (or no) neutrons, which lead to the production of radioactive materials.

**Nuclear Fusion, Table 2** Plasma heating methods

Ohmic heating	OH	Ohmic heating power density $P_{oh} = \eta J^2$ , ( $\text{W/m}^3$ ), where $J$ = current density ( $\text{A/m}^2$ ) and $\eta$ = plasma resistivity (ohm-m). At high temperatures $\eta$ is very low, and ohmic heating is ineffective
Neutral beam injection	NBI	Ions accelerated to high energies (typically 0.04–1 MeV) pass through a gas cell where some of them are neutralized. The neutral atoms can then penetrate across the magnetic field into the plasma, where they become ionized and trapped, depositing their energy in the plasma
Ion cyclotron resonance heating	ICRH	Radio waves are injected into the plasma at approximately the frequency of the ion spiral motion around the magnetic field lines, accelerating their motion. Frequency $f = eB/2\pi m_i$ (Hz), where $e$ = electronic charge, $B$ = magnetic field, $m_i$ = ion mass
Electron cyclotron resonance heating	ECRH	Microwaves injected into the plasma with near the frequency of electron spiral motion around the magnetic field lines. $f = eB/2\pi m_e$ (Hz), where $m_e$ = electron mass
Lower hybrid wave heating	LH	Waves are injected at the lower hybrid frequency, which is between the ECRH and ICRH frequencies
Compression		If the plasma is compressed, such as by increasing the magnetic field or by squeezing a metallic shell around the plasma, its temperature and pressure increase

## Fusion Reactor Requirements

In order to build a fusion reactor two requirements must be met, heating and confinement:

### Heating Requirement

The fuel must be heated to  $T \sim 15$  keV for the D + T reaction, and  $T \sim 40$  keV for the D + D fuel cycle. Ions with more positive charge, such as lithium and boron, repel each other more strongly, so higher temperatures would be required to use them as fuels.

[At such high temperatures hydrogen is in the **plasma state** (a sea of positive ions and negative electrons). The five states of matter are solid, liquid, gas, plasma, and “dark matter”. Other familiar forms of plasmas (some of them only partially ionized gases) include lightning, welding arcs, hot flames, and fluorescent lights.]

Table 2 lists some plasma heating methods.

### Confinement Requirement

The fuel must be confined long enough for part of it to “burn” (to fuse) before it is lost or cools off.

The heating and confinement requirements for a DT reactor may be expressed in the “triple product” parameter

$$n\tau_E T > 4 \times 10^{21} \text{ m}^{-3} \text{ s keV} \quad (9)$$

where  $n$  is fuel ion density ( $\text{ions/m}^3$ ),  $\tau_E$  is their energy confinement time (s), and  $T$  is their temperature (keV). The energy gain ratio is defined to be

$$Q = \frac{\text{(fusion energy per pulse)}}{\text{(input energy per pulse)}} \quad (10)$$

or

$$Q = \frac{\text{(fusion power)}}{\text{(input power)}}$$

if the reactor operates steady state.


For the DT fusion reaction  $Q$  is given approximately by the equation [1]

$$Q \approx 5(n\tau_E T) / [5 \times 10^{21} - n\tau_E T] \quad (11)$$

which is illustrated in Fig. 1.

Thus, to attain  $Q > 10$ , values of  $n\tau_E T \sim 4 \times 10^{21} \text{ m}^{-3} \text{ s-keV}$  are needed. (This equation and graph are only approximate, varying with the type of plasma confinement system.)

When confinement is very good, the alpha particles ( ${}^4\text{He}$  ions) produced by fusion reactions can deposit enough energy in the plasma to sustain its temperature. Then the input power for heating may be turned off. (Some input power may still be needed to drive a plasma electrical

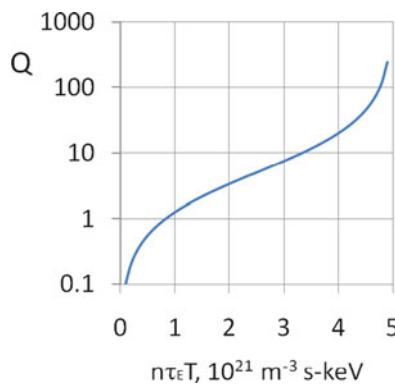

**Nuclear Fusion, Fig. 1** Energy gain ratio  $Q$  versus triple product

current.) This self-sustainment condition, called “ignition”, corresponds to the right side of Fig. 1, where  $Q$  reaches very high values. The precise value of the triple product that produces ignition varies from one type of confinement system to another and with plasma impurity content.

For DD reactions higher values of  $n\tau_E T$  are required, so the DT reaction will probably be used in the first generation fusion power plants.

Everything in nature tends towards a state of *thermodynamic equilibrium*, in which the temperatures of various bodies are uniform and equal to each other. Since we want to keep the chamber wall temperature below about 1,200 K and the fuel ion temperature  $>10^8$  K, the plasma confinement system must retard the establishment of thermodynamic equilibrium. Coulomb collisions and plasma instabilities bring the plasma closer to thermodynamic equilibrium, so avoiding it is a difficult problem.

### Plasma Confinement Methods

Plasma confinement methods are listed in Table 3.

**Nuclear Fusion, Table 3** Plasma confinement methods

Solid walls	Low-temperature plasmas, such as fluorescent lights, may be contained by glass or metal tubes. Hot plasma confinement in magnetic fields may be augmented by solid walls for brief periods of time, but prolonged contact cools the plasma rapidly by heat conduction and may overheat the wall
Gravity	Although stellar plasmas, such as the sun, are confined by gravity, the mass of a laboratory plasma is far too small for self-gravitational attraction to be significant. (The mass density and temperature at the center of the sun are about $150 \text{ g/cm}^3$ and 1.3 keV)
Inertia	If a DT fuel pellet is quickly compressed to ultrahigh densities, significant fusion burn can occur before the compressed pellet expands. The inertia of the pellet limits the expansion rate of the internal plasma. At $n = 10^{30} \text{ m}^{-3}$ , and $T = 10 \text{ keV}$ , a confinement time $\tau_E \sim 4 \times 10^{-10} \text{ s}$ would yield a triple product $n\tau_E T \sim 4 \times 10^{21} \text{ m}^{-3} \text{ s-keV}$ . The compression may be produced by laser beams or by particle beams
Radiofrequency waves	Radiofrequency waves and microwaves can confine low pressure plasma, but enormous power inputs would be required to confine high-pressure plasmas. These waves can augment magnetic confinement
Electrostatic fields	Electrostatic potential peaks can be established with high voltage grids or by creating local regions of higher plasma density. Positive peaks can inhibit ion motion, and negative peaks can inhibit electron motion. Purely electrostatic plasma confinement has only succeeded in confining low-pressure plasmas, but such electrostatic potential peaks can be used to augment magnetic confinement
Magnetic fields	Confinement by strong magnetic fields is the most promising means for prolonged containment of high-pressure plasmas. It is based on the fact that ions and electrons cannot travel across a magnetic field easily. Instead, they tend to travel in helical paths along the field lines


## Magnetic Confinement

Magnetic fields may be either “open” (Figs. 2 and 3) or “closed” (Fig. 4).


A plasma ion starting out at the center with velocity components  $v_{\parallel 0}$  parallel to magnetic field and  $v_{\perp 0}$  perpendicular to the magnetic field would experience a higher magnetic field as it moves toward the magnet coil. In the higher

field its rotational velocity component  $v_{\perp}$  would increase, and its parallel velocity component  $v_{\parallel}$  could decrease gradually to zero, where it would be reflected back towards the center (hence, the name “magnetic mirror”). The ion would oscillate back and forth between points a and b, restrained by a magnetic field gradient force

$$F = -(m_i v_{\perp}^2 / 2B) \nabla B \quad (12)$$

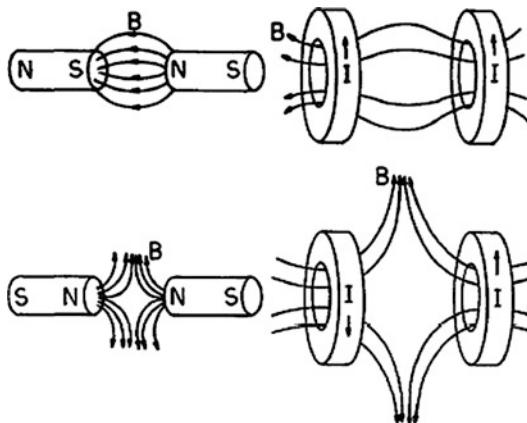

**Nuclear Fusion, Fig. 2** Simple magnetic “mirror” fields  $\mathbf{B}$  (top) and “spindle cusp” fields (bottom) produced by bar magnets (left side) or by a pair of circular magnet coils carrying currents  $I$  (right side). Plasma could be confined in the central regions

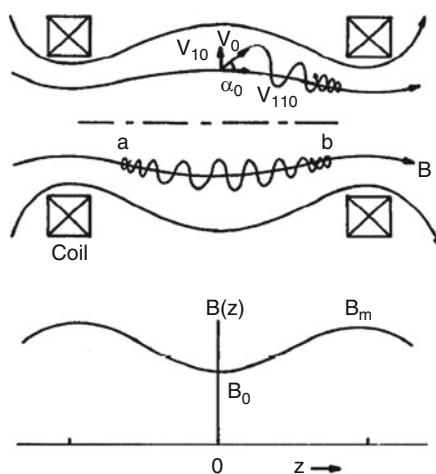

**Nuclear Fusion, Fig. 3** A simple magnetic mirror (top) and axial variation of magnetic field strength (bottom)

Electrons would also be confined in the same way. Although electrons and ions are reflected by high magnetic fields, those with high velocities  $v_{\parallel 0}$  along the field lines will escape, and confinement is limited by the time it takes for Coulomb collisions to increase their parallel velocities. The end loss problem can be eliminated by using a closed magnetic field, Fig. 4.

It might appear that electrons and ions could be confined forever as they spiral along the closed magnetic field lines, but the magnetic field gradient and curvature cause a drift velocity across the magnetic field. This drift can be compensated by twisting the magnetic field lines, producing a helical closed magnetic field, Fig. 5.


This twisting of the magnetic field, called “rotational transform,” may be produced by inducing a plasma electrical current in the toroidal direction (a “tokamak”), or by using specially shaped magnetic field coils (a “stellarator”).

There are many processes that cause plasma energy loss, Table 4.

In what follows we will describe tokamaks, stellarators, compact toroids, and open magnetic confinement systems, then inertial confinement systems, other fusion concepts, plasma theory issues, fusion technology issues, and fusion reactor design studies.


## Tokamaks

The name “tokamak” is an acronym for the Russian “тороидальная камера с магнитными катушками” (toroidal’naya kamera s magnitnymi katushkami – toroidal chamber with

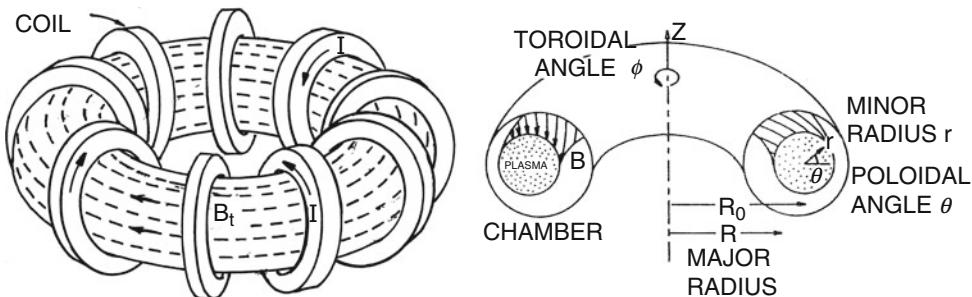

**Nuclear Fusion, Fig. 4** “Closed” (toroidal) magnetic field lines  $B_t$  (dashed lines) generated by circular magnet coils carrying currents  $I$ , and the definitions of “major

radius  $R$ ” and “minor radius  $r$ ”. The value of  $r$  at the plasma edge is called “ $a$ ”, and the value of  $R$  at the plasma center is called “ $R_o$ ”

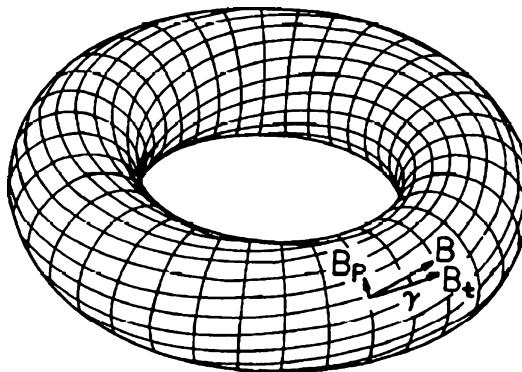

**Nuclear Fusion, Fig. 5** A helical magnetic field. The field lines  $B$  have components  $B_t$  in the “toroidal” direction (the long way around the torus) and  $B_p$  in the “poloidal” direction (the short way around the torus). Twisting the magnetic field compensates for the tendency of particles to drift across the magnetic field

magnetic coils). Figure 6 shows the main components of a tokamak.

Pulsing a current in the primary winding of the transformer induces a high current in the plasma, which generates the poloidal magnetic field. (Although this figure shows an iron core transformer, most modern tokamaks use air core transformers.) When the transformer saturates, the current gradually dies away. A “current drive” system, such as electromagnetic waves or neutral beam injection, is needed to sustain the current. Although Fig. 6 shows a plasma with circular cross section, most modern tokamaks have non-circular

cross sections, in order to facilitate higher beta values (ratios of plasma pressure to magnetic field pressure).

Over 200 tokamaks have been built worldwide. Table 5 shows the parameters of a few of them.

Figure 7 shows the interior of the European Fusion Development Agreement (EFDA) Joint European Torus (JET), which has a non-circular cross section.

The walls are lined with refractory tiles to withstand high heat fluxes. The Tokamak Fusion Test Reactor (TFTR) at Princeton Plasma Physics Laboratory (PPPL) demonstrated DT fusion power of 10 MW for a fraction of a second, but then funding was terminated. Using DT fuel JET briefly generated 16 MW of heat from fusion reactions. JET demonstrated the feasibility of using beryllium tiles on the walls. The walls are now lined with tungsten armor, in preparation for ITER, which will also use tungsten.

The National Spherical Torus Experiment (NSTX) and Mega Ampere Spherical Torus (MAST) are smaller, with very low aspect ratios  $R_o/a \sim 1.4$ , which facilitates high values of  $\beta$  (the ratio of plasma pressure to magnetic field pressure). They are called “spherical tokamaks.”

In order to attain higher triple product values, larger experiments are needed. The International Thermonuclear Experimental Reactor (ITER) Joint Project, under construction in Cadarache,

**Nuclear Fusion, Table 4** Plasma energy loss mechanisms

## 1. Particle and energy loss along magnetic field lines (open magnetic systems)

In simple magnetic mirrors the loss time is roughly the time for collisions to increase the ion velocity along the field lines. If electrostatic potential barriers are used, then the loss time is roughly the time for collisions to increase the particle energies over the barriers

## 2. Particle drift velocities across the magnetic field, driven by magnetic field gradient and curvature and by an electric field

## 3. Magnetohydrodynamic (MHD) plasma instabilities, whereby the plasma boundary, affected by gradients of pressure, current density, and magnetic field, pushes through the magnetic field towards the chamber wall

## 4. Radiation losses from line radiation, bremsstrahlung radiation (radiation from electrons during deceleration by collisions), cyclotron radiation, and recombination radiation. Radiation losses can be high when the plasma contains many impurity ions (such as iron), when the temperature is very high, or when the magnetic field is very strong (cyclotron radiation)


## 5. Energy transport across the magnetic field by heat conduction and convection

## 6. Interaction of electrons and ions with plasma waves can enhance energy transport. Such “microinstabilities” have required many decades of plasma theory, experiment, and computer simulation to be understood

## 7. Ion energy loss by charge exchange. (A hot ion grabs an electron from an atom, becomes neutralized, and is no longer confined by the magnetic field, which does not confine neutral atoms)

**Nuclear Fusion,**

**Fig. 6** Simplified diagram of a tokamak with circular plasma cross section  
(Courtesy of Culham Laboratory, UK)

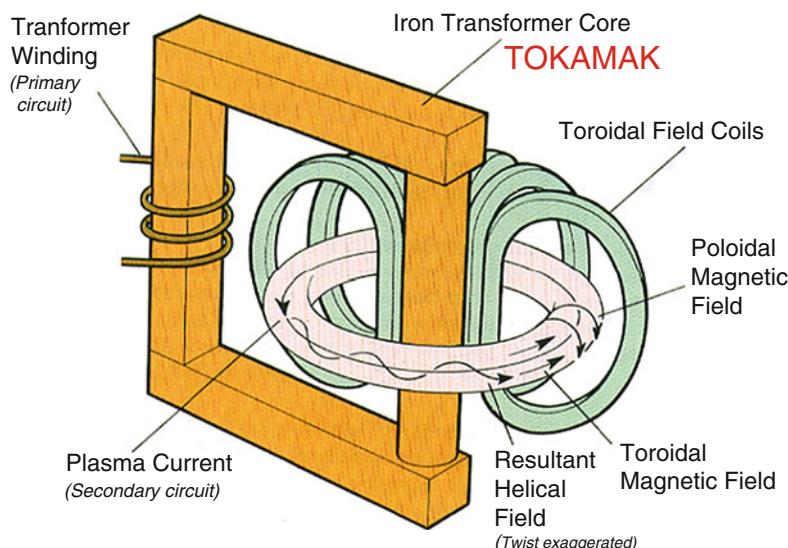

France, is a collaboration of China, the European Union, India, Japan, Korea, Russia, and the USA. It is planned to begin operation in about 2026, reaching full power operation about 6 years later.

Figure 8 shows how the experimentally attained values of the triple product have increased over the years of fusion research.

ITER is shown in Fig. 9.

In this figure

- Central solenoid – vertical post with green bands.
- Toroidal field coils – blue
- Poloidal field coils – lavender
- First wall and blanket – white
- Vacuum vessel – orange
- Divertor – red, at bottom of vacuum vessel
- Cryostat – outer white shell
- Person – inside red circle.

**Nuclear Fusion, Table 5** Parameters of some tokamaks. SC means superconducting coils. Parameters of future experiments are planned values [2]

Name	Country	Years	R <sub>o</sub> /a, m/m	B, T	I <sub>p</sub> , MA	ECRH + ICRH + LH, MW	NBI, MW	Remarks
TFTR	USA	1982–1997	2.4/0.8	6	3	11	39	Circular cross section plasma; achieved 10 MW fusion power for fraction of a second
DIII-D	USA	1986–	1.66/0.67	2.2	3	11	20	Beta = 12%, graphite walls, plasma shaping
Tore Supra	France	1988–	2.25/0.7	4.5 SC	2	16	1.7	Pulses lasting many minutes
T-15	Russia	1988–1995, 2009–	2.43/0.42	3.5 SC	1	11	9	5 s pulses
JT 60U	Japan	1991–2010	3.4/1.0	4.2	5	24	50	Record fusion triple product, would yield Q = 1.2 if DT fuel were used
JET	UK	1992–	3/1.25	4	6	29	24	Generated 22 MJ of DT fusion energy in 4 s. Has used Be wall tiles
MAST	UK	1999–	0.85/0.6	0.5	1.4	1	4	Spherical tokamak
NSTX	USA	1999–	0.85/0.6	0.6	1.4	3	7	Spherical tokamak
EAST	China	2006–	1.75/0.43	5 SC	0.5	8		First fully superconducting tokamak with non-circular cross section
KSTAR	Korea	2008–	1.8/0.5	3.5 SC	2	13	14	Fully superconducting coils
SST-1	India	2016–	1.1/0.2	3 SC	0.2	3	0.8	1,000 s pulses
JT 60 SA	Japan	2018–	3.16/1.02	2.7 SC	5.5	7	34	100 s pulses
ITER	France	2022–	6.2/2.0	5.3 SC	15	40	33	400 MW, 400 s pulses in 2023



ITER should demonstrate a power gain ratio  $Q > 10$  for hundreds of seconds. Other tokamaks worldwide are modifying their operations to gain experience that will enhance ITER operations, such as by using tungsten armor plates in JET, ASDEX-U, and WEST (Tore Supra), and by installing high power gyrotrons for electron cyclotron heating. Laboratories are paying a lot of attention to the problem of tritium processing and retention in metallic walls, which function

much better than graphite. Some tokamaks will try new divertor configurations (Super-X, Snowflake) that expand the plasma contact area. The problem of exhaust power flux to the divertor may also be mitigated by sweeping the strike line back and forth and by seeding the plasma with impurities, such as neon, which cool the plasma by radiation upstream of the divertor [4].

The next step planned after ITER will be a technology demonstration fusion power plant

**Nuclear Fusion,**

**Fig. 7** The interior of the Joint European Torus (JET) (Courtesy of Culham Laboratory, UK)

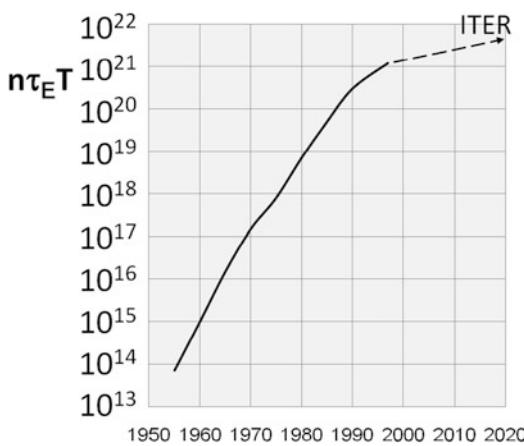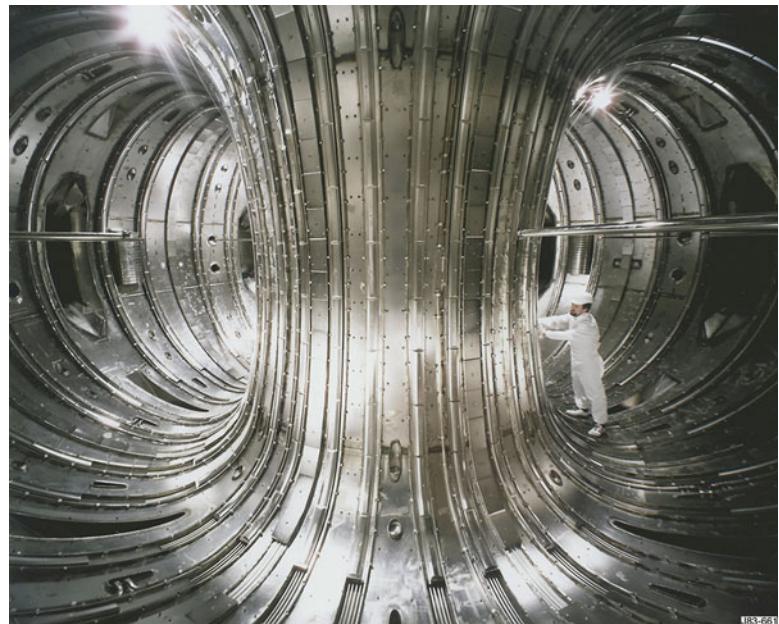

**Nuclear Fusion, Fig. 8** Triple product  $n\tau_E T$  ( $\text{m}^{-3}\text{s-keV}$ ) attained by tokamak experiments versus year. The dashed arrow points to planned ITER values [3]

called “DEMO” that generates electricity for commercial use.

**Helicity Injection**

Applying a voltage along a magnetic field injects “helicity” into the confinement system. By definition the helicity  $K$  in a volume bounded by a magnetic surface is

$$K = \int dV \mathbf{A} \cdot \mathbf{B} \quad (13)$$


where  $B$  is the magnetic field,  $A$  is the magnetic vector potential satisfying  $\mathbf{B} = \nabla \times \mathbf{A}$ , and  $dV$  is a volume element. Plasmas tend to conserve helicity while relaxing to a minimum energy state. Helicity injection induces current flow in the plasma. Helicity can be injected by passing an electric current along a magnetic flux surface, and it is dissipated (lost) by ohmic dissipation. If we apply a voltage  $V$  around a toroidal loop the helicity injection rate is approximately

$$\partial K / \partial t = 2V\Phi_t \quad (14)$$

where  $\Phi_t$  is the toroidal magnetic flux. A similar equation applies to a poloidal loop and poloidal flux.

For example, helicity may be injected into a tokamak by adding coils at the bottom to produce a poloidal flux component, as shown in Fig. 10 and applying a voltage along that flux surface.

This kind of helicity injection can be used to start up the National Spherical Torus Experiment (NSTX) without using a central solenoid. The  $J \times B_t$  force

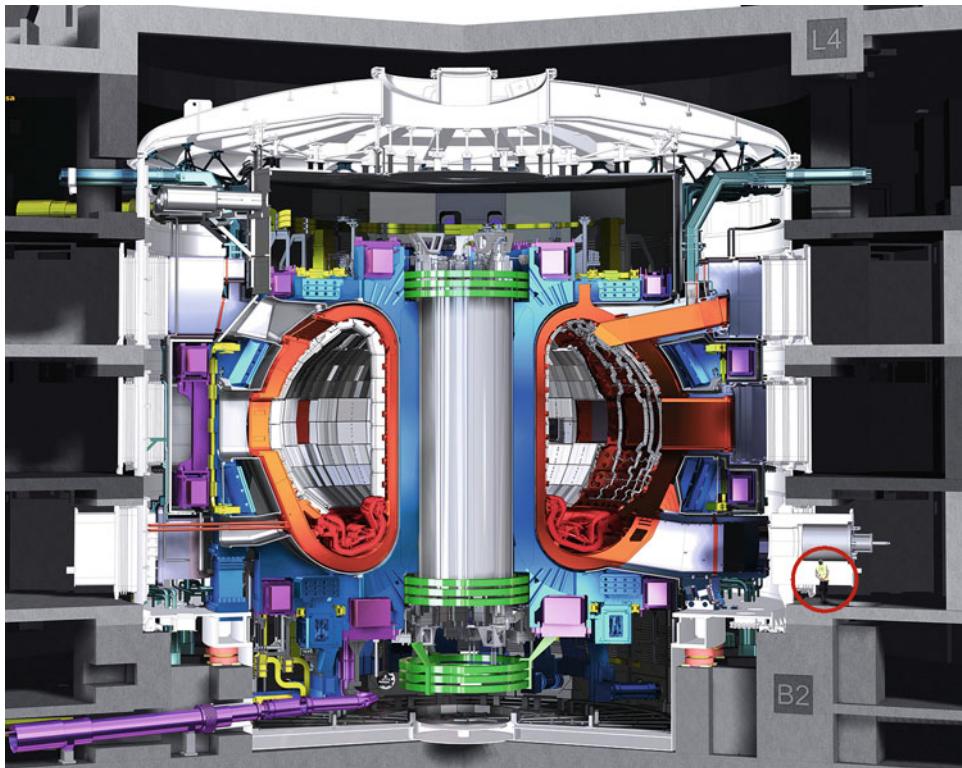

**Nuclear Fusion, Fig. 9** Cutaway view of ITER without plasma (Courtesy of ITER Organization)

( $B_t$  = toroidal field) drives the plasma upward, where it expands, and a toroidal plasma current is induced.

which is also linked to the EAST tokamak facility in Hefei, China.

### National Spherical Torus Experiment Upgrade (NSTX-U)

NSTX-U at the Princeton Plasma Physics Laboratory (PPPL), Fig. 11, began operating in 2015.

It has  $B < 1.0$  T,  $I_p < 2$  MA, heating power 10–18 MW, and pulse length  $\sim 5$  s. The research will

- Enhance understanding of plasma stability, turbulence, and transport
- Use lithium to help solve the plasma wall interaction problem
- Demonstrate high pressure plasma sustainment that may lead to a Fusion Nuclear Science Facility [5].

It can be operated remotely from a control room at General Atomics in San Diego, CA,


### Stellarators

Stellarators (including “heliotrons” and “torsatrons”) produce rotational transform by shaping the magnet coils, Figs. 12 and 13.

The Large Helical Device at the National Institute for Fusion Sciences in Japan, Fig. 14, is a “heliotron” (torsatron) with two helical coils.

LHD has attained  $T(0) = 8$  keV,  $T_e(0) = 10$  keV,  $\beta = 4.1\%$  at 1 T, 48 min operation at 1.2 MW, 2 keV. In 2017 LHD will install upgrades of NBI, ECH, ICRF, and diagnostics and will begin use of deuterium. Its goals include [6]:

- To maximize  $nT\tau_E$ ,
- To study isotope effects on confinement,
- To demonstrate confinement of high energy ions,

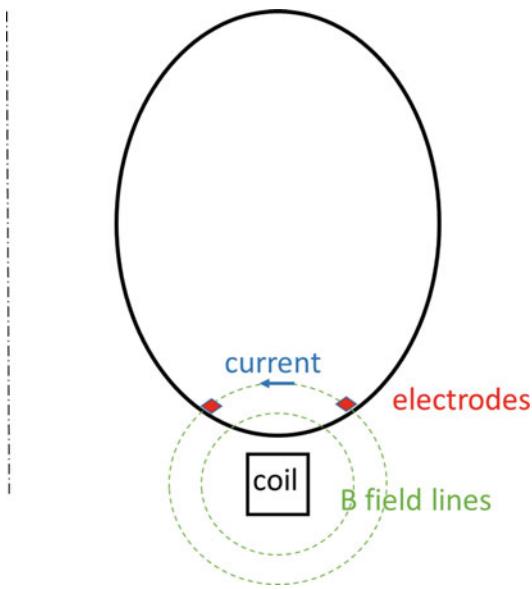

**Nuclear Fusion, Fig. 10** Simplified view of helicity injection in a torus, showing auxiliary coil producing flux surfaces (green dashed circles), electrodes (red), and current driven along  $B$  (blue). For simplicity, the other magnetic field components (toroidal and poloidal) are not shown

- To validate computer simulations
- To optimize control of plasma-wall interactions
- To study MHD stability at high  $\beta$  and low collisionality.

Figure 15 shows the Wendelstein 7-X experiment (also called W7-X), which uses modular coils to achieve a magnetic field shape suitable for plasma confinement. It began operation in December 2015.

Table 6 shows some parameters of these stellarators.

The W7-X will begin operation with an uncooled carbon limiter, then switch to an uncooled carbon divertor, then an actively cooled CFC divertor for longer, high-power pulses, and possibly a cooled metallic divertor after that [7]. The National Compact Stellarator Experiment (NCSX) construction was begun at PPPL to show

that a less expensive stellarator could work, but then funding was terminated.

Fusion reactor design studies based on stellarators have been done in Japan (FFHR-2ml), in Germany (HSR), and in the USA (ARIES-CS). All have minor radii  $a \sim 1.6\text{--}1.7$  m,  $B \sim 5\text{--}6$  T. Since stellarators do not require a strong plasma current, they have the following advantages over tokamaks:


- No strong disruptions of the plasma.
- Steady state operations at  $\beta \sim 5\%$
- Current drive is not required, so the input power is lower, and the energy gain ratio  $Q$  can be higher.
- Less danger of runaway electrons
- Potentially less plasma turbulence and better energy confinement.

The coils of stellarators are difficult to wind, join, support, and align, and space for energy recovery blankets is limited; but new ideas are being developed to optimize and simplify stellarator coils, Fig. 16.


## Reversed Field Pinch (RFP)

A reversed field pinch is a toroidal plasma with a relatively weak toroidal field and a strong plasma current. The plasma currents evolve into a stable configuration in which the direction of the toroidal component of the magnetic field at the plasma edge is in the opposite direction from the internal toroidal field, Fig. 17.

This strong variation of magnetic field direction with minor radius, called magnetic shear, helps preserve plasma stability. This type of experiment has been operated in China, Italy, Japan, the UK, the USA, and elsewhere. It offers the potential of a compact reactor with a simpler toroidal field system than tokamaks, but plasma energy confinement times may be shorter, and efficient current drive to sustain the RFP is difficult to achieve.

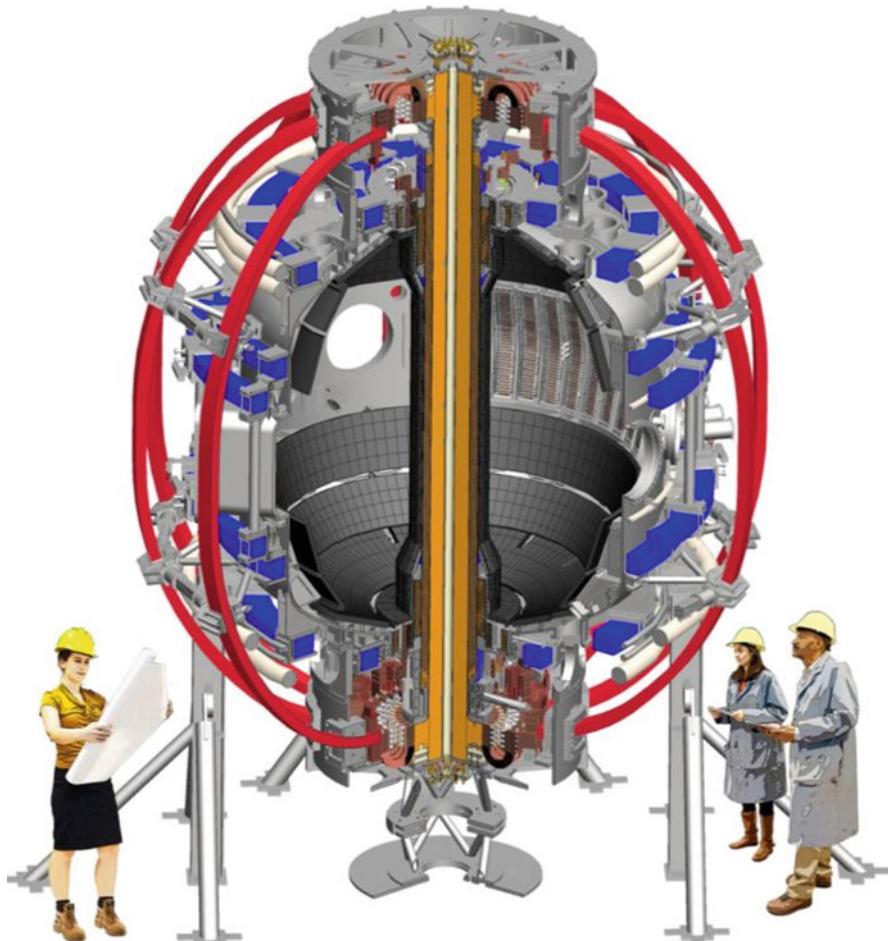

**Nuclear Fusion, Fig. 11** The NSTX-U experiment (Courtesy of PPPL)

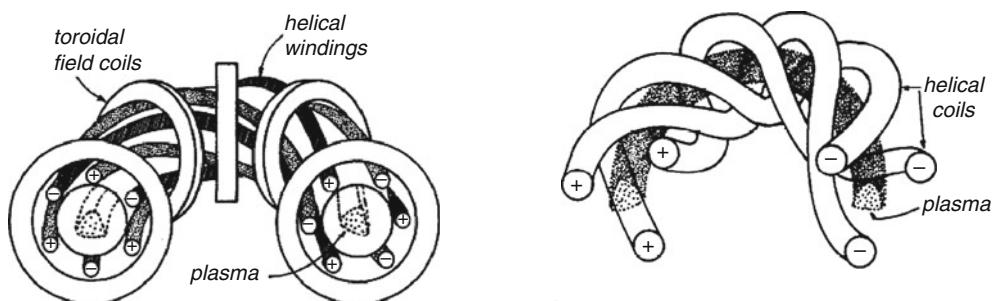


**Nuclear Fusion, Fig. 12** Magnet coils of a stellarator with three pairs of helical windings, which have currents in alternating directions (indicated by + and - signs). Other numbers of helical windings are also possible

**Nuclear Fusion, Fig. 13** A torsatron with three helical coils and no toroidal field coils.

**Nuclear Fusion,**

**Fig. 14** The two helical superconducting coils inside the Large Helical Device, operating since 1998 (Courtesy of the National Institute for Fusion Science, Japan)

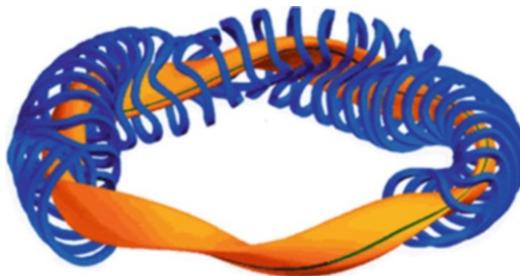

**Nuclear Fusion, Fig. 15** The coils (blue) of the Wendelstein 7-X experiment in Greifswald, Germany, and the resulting plasma shape (orange), which began operation in 2015 (Courtesy of the Max-Planck-Institut fuer Plasmaforschung, Greifswald, Germany)

## Spheromaks

Figure 18 compares a field reversed configuration (FRC) and a spheromak.

The FRC has only poloidal magnetic field components, with nearly zero toroidal field. The spheromak is a naturally stable configuration having both toroidal and poloidal magnetic field components.

Spheromaks can be produced by:

- A theta pinch (a one-turn coil with high azimuthal current)

- Pulsed flux cores (circular tubes containing both toroidal and poloidal field coils, PPPL [11])
- “Helicity injection” using a coaxial injector
- Steady-state helicity injection via external flux loops with sinusoidally varying fields.

Spheromak formation by helicity injection using a coaxial plasma gun is illustrated in Fig. 19. (This is similar to the scheme of Fig. 10.)


In step (1) A coil (black) generates a magnetic field (blue). (2) A puff of hydrogen is admitted into the vacuum (pink cloud). (3) A high voltage is applied between the inner and outer cylinders, ionizing the gas. (4) The plasma current flowing interacts with the magnetic field to produce a thrust that accelerates the plasma downward. (5) The plasma (pink) expands into the metal chamber (green). (6) Image currents in the walls create an opposing magnetic field that retards the plasma penetration into the wall. This is called a “sustained spheromak” configuration with quasi-closed field lines similar to tokamaks. The plasma has both toroidal and poloidal magnetic fields without the need for toroidal field coils. It is therefore simpler than tokamaks, and potentially less expensive. Some parameters of the Sustained Spheromak Physics Experiment (SSPX) are shown in Table 7.

**Nuclear Fusion, Table 6** Main parameters of the LHD and Wendelstein 7-X experiments. The LHD values shown here were not all attained simultaneously

Parameter	Units	LHD	Wendelstein 7-X
Startup		1998	2015
Major radius R	m	3.7	5.5
Approximate minor radius a	m	0.64	0.53
Magnetic field on axis	T	2.8	2.5
Heating power	MW	20	15
Average plasma density n	$\text{m}^{-3}$	$4 \times 10^{19}$	$\sim 10^{20}$
Ion temperature	keV	5.2	(Several)
Electron temperature	keV	3.8	(Several)
Energy confinement time	s	0.22	0.15
Beta	%	5	

### Nuclear Fusion,

**Fig. 16** Example of initial modular stellarator coils (*left*) replaced by simpler coils (*right*) [8]

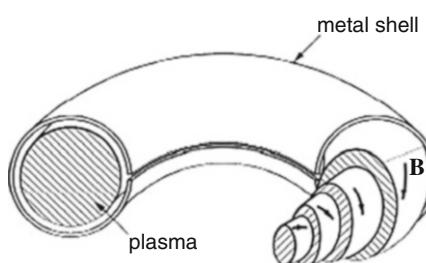

**Nuclear Fusion, Fig. 17** A reversed field pinch, showing how the direction of the magnetic field varies with radius [9]


Spheromak experiments generally last a few milliseconds, with electron temperatures less than 1 keV. Larger spheromak experiments with more heating auxiliary power and longer duration are needed to test this concept adequately. The SSPX was going to be sustained

by neutral beam injection, but financing was terminated [12].

### Helicity Injected Torus: Steady Induction (HIT-SI)

In the Helicity Injected Torus HIT-SI experiment at the University of Washington produces a small spheromak plasma by magnetic induction in external loops, which helps to avoid contamination by impurities from the electrodes of a coaxial gun, Fig. 20.


The brown coils induce sinusoidally varying toroidal magnetic flux  $\Phi_t(t)$  in the blue external flux loops (which resemble the handles on coffee cups), and the air-core transformers (green coils) induce sinusoidally varying toroidal voltages  $V(t)$  in the flux loops.

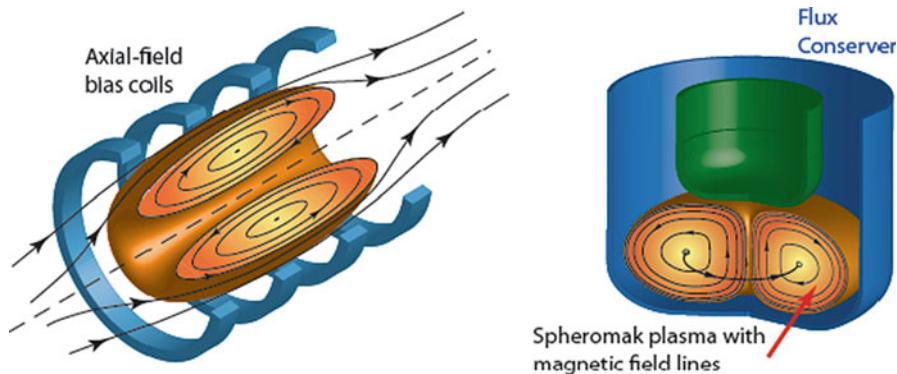

**Nuclear Fusion, Fig. 18** A field reversed configuration (*left*) and a spheromak (*right*). Neither has any coil or structure on the axis of the torus [10]

#### Nuclear Fusion,

**Fig. 19** Formation of a spheromak by coaxial plasma gun injection into a flux conserving chamber (Courtesy of Lawrence Livermore National Laboratory)

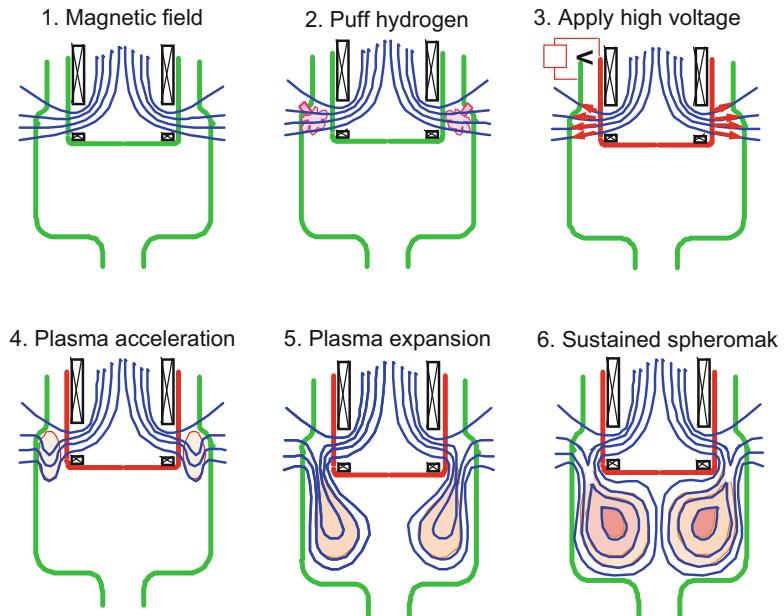

The combination of sinusoidally varying voltage  $V(t)$  and magnetic flux  $\Phi_t(t)$  injects helicity into the central chamber, according to Eq. 14. The central plasma undergoes magnetic reconnections as it relaxes to a “Taylor minimum energy state” [14], forming and sustaining a spheromak plasma. The power flow is proportional to the squares of the  $E$  and  $B$  fields. At least two injector loops are used, because the two sinusoidal helicity injection phases can be adjusted so that they combine to sustain

constant helicity injection power ( $\sin^2\omega t + \cos^2\omega t = 1$ ).

The HIT-SI parameters are  $a = 0.25$  m,  $R_0/a = 1.0$ ,  $I_{\text{tor}} = 55$  kA,  $I_{\text{inj}} = 18$  kA,  $n = 2.5 \times 10^{19} \text{ m}^{-3}$ ,  $B = 0.044$  T,  $T_e = 6$  eV. These are consistent with the theoretical model.

A breakthrough in this HIT concept is a new current drive method, termed the Imposed Dynamo Current Drive (IDCD). This mechanism eliminates the need for inefficient conventional current drives, such as RF or neutral beam

injection, and would reduce the complexity of a reactor design [15]. It can induce current in the plasma without destroying the magnetic surfaces required for good confinement [16].

The new HIT-SI3 experiment has three coplanar helicity injectors, which may provide some control of the plasma current density profile. The next experiment could be a “Proof of Principle” experiment HIT-PoP, which would have  $R = 1.0$  m,  $a = 0.5$  m,  $I_p = 3.2$  MA, 10 s pulse length,  $n = 5 \times 10^{19} \text{ m}^{-3}$ , and central  $T_e \sim 3$  keV. It should demonstrate effective IDCD, deuterium

**Nuclear Fusion, Table 7** Typical SSPX parameters (SSPX is now decommissioned) (Courtesy of Lawrence Livermore National Laboratory)

Flux conserver radius and height	$0.5 \times 0.5$ m
Radius of magnetic axis	0.31 m
Plasma minor radius	0.17 m
Peak discharge current	0.45 MA
Toroidal current	0.6 MA
Peak toroidal field	0.6 T
Edge poloidal field	0.35 T
Plasma duration	4.5 ms
Plasma density	$5 \times 10^{19} \text{ m}^{-3}$
Peak electron temperature	0.35 keV


plasma purity, and good energy confinement time scaling.

A conceptual Dynomak reactor design, based on IDCD, is illustrated in Fig. 21.

The main Dynomak parameters are shown in Table 8 [17].


The YBCO superconducting coils operating at 65 K control the plasma shape and position. A 50 cm thick  $\text{ZrH}_2$  shield protects the coils from radiation damage. The first wall of the plasma chamber contains a 1 cm layer of copper flux conserver, bonded to SS-316 structure, which promotes plasma stability. The FLiBe molten salt cools the first wall at 480 °C, absorbs heat in the blanket, drives a supercritical  $\text{CO}_2$  Brayton cycle heat engine at 580 °C to generate electricity (45% efficiency), and breeds tritium (breeding ratio 1.1). Cryogenic vacuum pumps remove helium ash and other gases from the chamber to prevent excessive dilution of the fuel, and the DT fuel gases are returned to the chamber.

An estimate of Dynomak reactor costs indicates that it would be less expensive than tokamaks and stellarators, and that the cost of electricity might be competitive with nuclear fission and coal power plants.

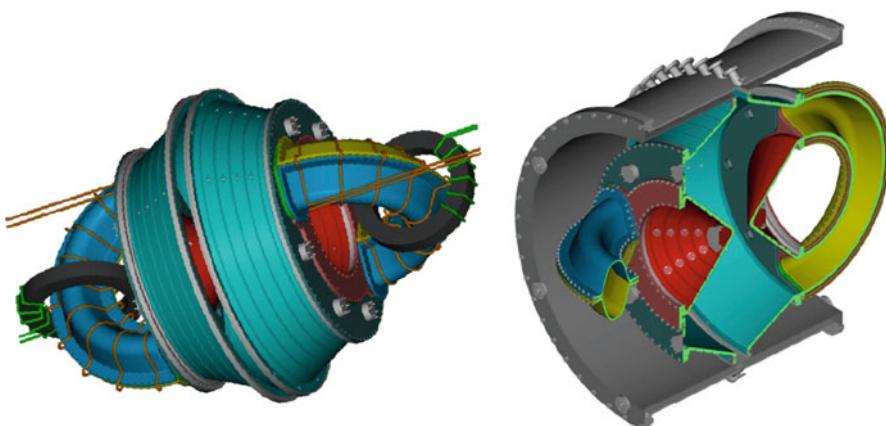

**Nuclear Fusion, Fig. 20** Drawing of HIT-SI. On the *left* shows the electrical connections to the machine. On the *right* shows a cutaway of the vacuum vessel. The plasma facing vacuum wall is alumina coated copper. The green

wires drive the primary of the injector loop voltage  $V_{\text{inj}}$  driving the plasma secondary current  $I_{\text{inj}}$ . The brown wires supply the injector flux  $\psi_{\text{inj}}$  [13]

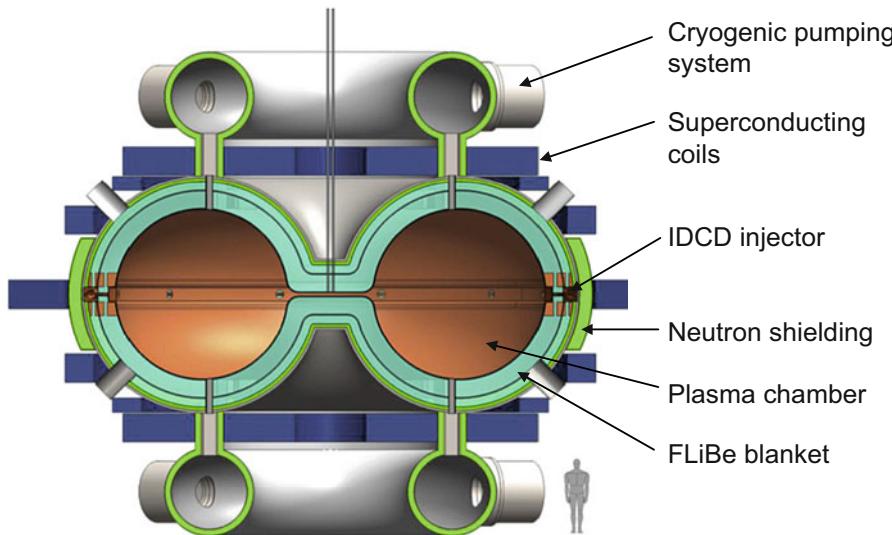

**Nuclear Fusion, Fig. 21** The Dynomak reactor concept (Courtesy of the University of Washington)

**Nuclear Fusion, Table 8** Dynomak parameters

Major radius R [m]	3.75
Aspect ratio R/a	1.5
Toroidal $I_p$ [MA]	41.7
Number density [ $10^{20} \text{ m}^{-3}$ ]	1.5
Wall-averaged $\beta$ [%]	16.6
Peak $T_e$ [keV]	20.0
Neutron wall loading [ $\text{MW m}^{-2}$ ]	4.2
Tritium Breeding Ratio (TBR)	1.12
Current drive power [MW]	58.5
Blanket flow rate [ $\text{m}^3 \text{ s}^{-1}$ ]	5.2
Thermal power [MW]	2,486
Electrical power [MW]	1,000
Thermal efficiency [%]	>45

internal magnetic field in the opposite direction from the external magnetic field (indicated by the small arrows in Fig. 22), hence the name “field reversed configuration”.

FRC plasmas can be formed by

- Programming a theta pinch coil (LANL, Fig. 22)
- Rotating magnetic fields (Australia [18])
- Neutral beam injection into a magnetic mirror (Tri Alpha Company).
- Merging two spheromaks plasmas with oppositely directed toroidal fields [19] (Tokyo University)

They appear to be stable, in spite of their weak or zero toroidal magnetic fields. After formation an FRC plasma can be compressed by a converging magnetic field or by an imploding metallic liner [20]. Such compression of a preformed plasma is called “Magnetized Target Fusion” (MTF) or (MIF) [21].


## Field Reversed Configuration (FRC)

A Field Reversed Configuration may be formed by a theta pinch coil, as shown in Fig. 22.

A theta pinch coil is usually a one-turn coil with a sudden current flowing in the theta (azimuthal) direction. The coil current may rise to its peak value in microseconds. This induces an axial magnetic field and an azimuthal current density that interact to compress the plasma radially. With careful programming of the coil current the plasma may form into an elongated torus with the

## Magnetized Target Fusion

The MTF target plasma could be either an FRC or a spheromak. Typical target plasma parameters might be  $n \sim 10^{22} - 10^{23} \text{ m}^{-3}$ ,  $T \sim 0.3 - 0.5 \text{ keV}$ ,

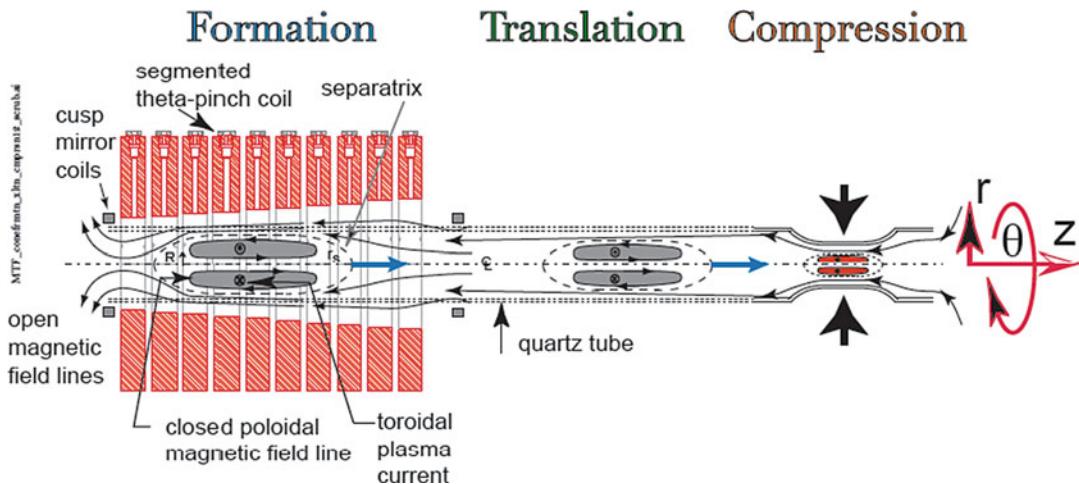

**Nuclear Fusion, Fig. 22** Formation of an FRC by a theta pinch coil, translation to another chamber, and compression by a metallic liner (Courtesy of Los Alamos National Laboratory)

$B \sim 3$  T, and duration  $t \sim 10$   $\mu$ s. The target plasma could be squeezed in place or be moved axially into another chamber (Fig. 22) where a high magnetic field would compress it to thermonuclear temperature ( $T \sim 10$  keV). Intense DT fusion burn could occur until the configuration disassembled, and it might be possible to achieve energy gain ratios  $Q > 5$  in a less expensive device than tokamaks or stellarators.

Several methods of target plasma compression are conceivable:

- Quickly increasing the magnet coil current around the FRC
- Compressing the target plasma by intense laser beams or particle beams (unlikely to work, because the target plasma size is centimeters instead of millimeters).
- Accelerating an FRC axially to high velocity into an increasing magnetic field, which might compress the plasma up to thermonuclear burn conditions [22].
- Compressing a metallic shell by increasing the external B field (Z machine, Sandia)
- Compressing a metallic shell by chemical explosives (studied in weapons labs)
- Compressing a metallic shell by hydraulic pistons (General Fusion)
- Compressing by spherically converging plasma jets (LANL)

In the USA the Advanced Research Projects Agency – Energy (ARPA-E) program supports research in high pressure plasmas, especially MTF, at densities intermediate between magnetic confinement fusion ( $10^{20}$  m $^{-3}$ ) and inertial confinement fusion ( $10^{30}$  m $^{-3}$ ). The goals of that program are to achieve high compression, a pulse repetition rate  $>1$  Hz, and low-cost drivers and targets. The densities and confinement times of various projects are shown in Fig. 23. More information is available at [www.arpa-e.energy.gov](http://www.arpa-e.energy.gov).

### Z Machine

The Magnetized Liner Inertial Fusion (MagLIF) is illustrated in Fig. 24.



The target plasma is about 6 mm long. The peak current in the pinch is 19 MA, and the shell radius decreases from 2.3 to 0.2 mm in about 60 ns, raising the internal pressure to 5 Gbar, and yielding  $>10^{12}$  2.45 MeV neutrons from DD fusion reactions. It is predicted that DT fusion yields of about 100 kJ could be achieved in future experiments on this machine.

### General Fusion

General Fusion Company of Burnaby, British Columbia, Canada, will form a vortex of molten PbLi, inject a compact toroid plasma target, and

**Nuclear Fusion,**

**Fig. 23** Experiments supported by the ARPA-E program [23] (Courtesy of The Advanced Research Projects Agency-Energy)

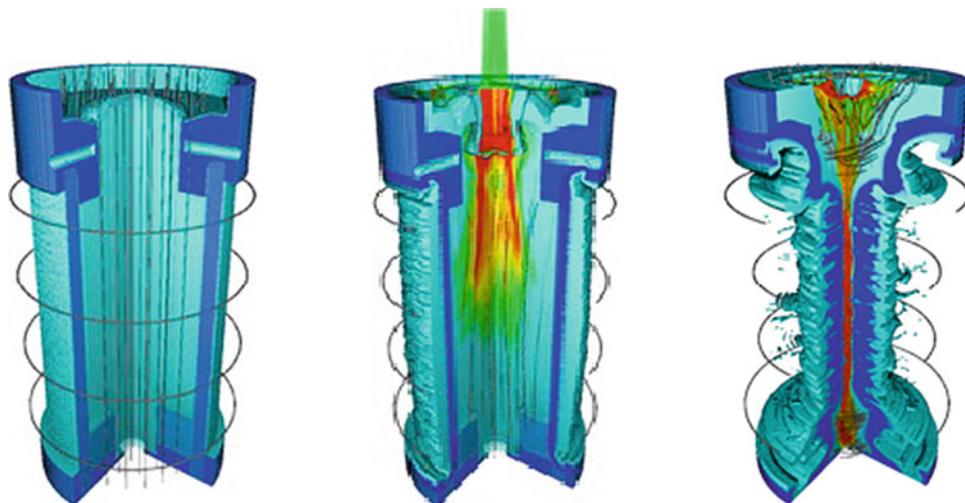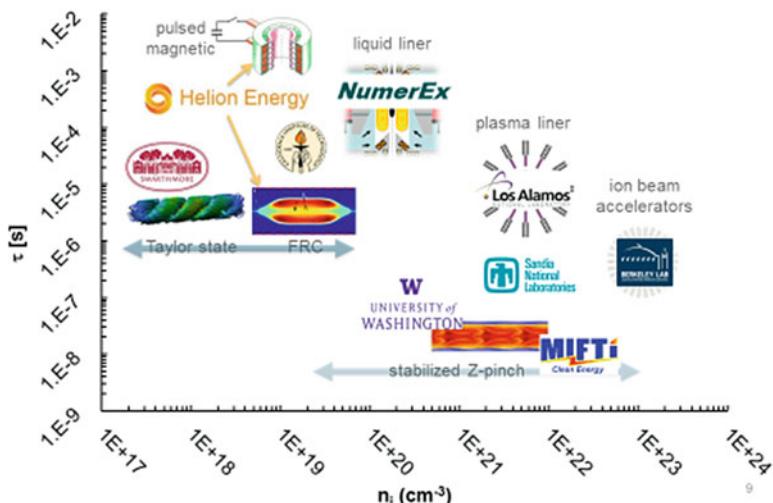**Breadth of ALPHA portfolio**

**Nuclear Fusion, Fig. 24** The MagLIF experiment. External coil produces initial 10 T magnetic field (*left*); 2 kJ, 0.53  $\mu$ m laser heats plasma to 0.2 keV (*center*); and


Z pinch implodes radially at >70 km/s, compressing the metallic shell and plasma (*right*) (Courtesy of Sandia National Laboratories, Albuquerque, NM, USA. [24])

then compress the vortex with radially converging hydraulic pistons, as shown in Fig. 25.

Conical plasma guns at top and bottom, powered by capacitors (light blue) inject DT spheromak target plasmas into a vortex of liquid PbLi in the 3-m diameter central region, driven by tangential ports at the equator (thin dark red tubes), with liquid metal removal at the top and

bottom (bright red tube). Then 300 steam-driven pistons (grey) strike anvil cylinders, which rebound at higher speed and compress the liquid metal, squeezing the plasma up to high density and temperature, where a shock wave ignites fusion burn.

The spheromaks have attained 200 eV temperature, and eventually should reach 600 eV.

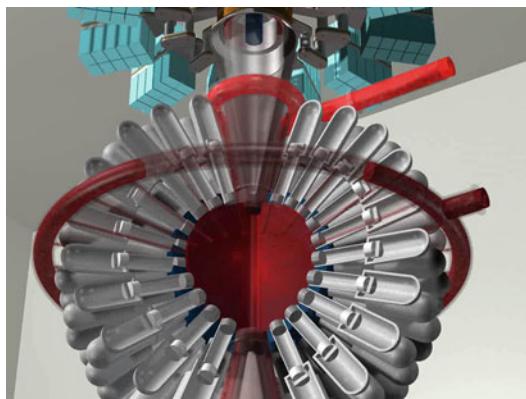

**Nuclear Fusion, Fig. 25** The general fusion reactor plan (Courtesy of General Fusion)

The spheromaks merge in the center of the sphere to form a single magnetized plasma target, which could have a spheromak, FRC, or tokamak magnetic topology. At maximum compression a fusion burst occurs releasing 14.1 MeV neutrons, which are slowed down by the liquid metal, causing it to heat up. A heat exchanger transfers the heat to a standard steam turbine-generator to produce electricity. Some of the steam is used to propel the hydraulic rams (pistons and anvils), and the cycle is repeated at about 1 Hz. The PbLi vortex breeds tritium fuel by neutron absorption in lithium and shields the chamber walls from radiation damage. Table 9 lists some parameters of the reactor.

A preliminary device has been built to test piston function and timing, Fig. 26.

The piston impact velocity reaches 50 m/s, and multiple-piston timing accuracy is  $\pm 5 \mu\text{s}$ .

Guided by computer simulations, experiments are underway to develop better injectors for target plasmas, which must last longer than the vortex compression time. If the compression distance were 30 cm and the average ram speed were 100 m/s, then the compression time would be 3 ms. The new small injectors may achieve 80  $\mu\text{s}$  energy confinement time and 800  $\mu\text{s}$  magnetic field duration.

#### Imploding Plasma Liners for Fusion

Researchers at LANL and the HyperV Technologies Corp. are developing imploding plasma

**Nuclear Fusion, Table 9** Some anticipated parameters [25]

<b>Initial conditions</b>		
Pistons kinetic energy	120	MJ
Initial plasma density	$1.25 \times 10^{17}$	$\text{cm}^{-3}$
Initial plasma temperature	100	eV
Initial magnetic field	7	Tesla
Initial plasma radius	20	cm
<b>Compression</b>		
Radial compression ratio	10	
Maximum fluid-plasma surface velocity	-2,600	m/s
Energy transfer to plasma	14	MJ
<b>Ignition</b>		
Peak plasma density	$1.16 \times 10^{20}$	$\text{cm}^{-3}$
Peak plasma temperature	25	keV
Peak plasma pressure	5	Mbar
Peak magnetic field	670	Tesla
Confinement time (FWHM of plasma density):	7	$\mu\text{s}$
<b>Energy output</b>		
Fusion energy produced	700	MJ
Energy gain	6	

liners formed via merging supersonic plasma jets [26], as illustrated in Fig. 27, to eventually compress a magnetized target plasma to fusion conditions, in support of a reactor-friendly embodiment of magneto-inertial fusion (MIF) called Plasma-Jet-Driven Magneto-Inertial Fusion (PJMIF) [27, 28]. MIF represents a potential low-cost “sweet spot” in thermonuclear-fusion parameter space for achieving fusion-ignition conditions [29].


The plasma liners will have high implosion velocity (50–100 km/s) to overcome thermal-transport rates inherent in dense, magnetized plasma targets and standoff distance from the target fusion burn, enabling both a high shot rate for rapid R&D and, eventually, a high repetition rate ( $\sim 1$  Hz) needed for attractive fusion-power-plant economics [30].

**Nuclear Fusion,**

**Fig. 26** Present experiment, with 14 full-size drivers (Courtesy of General Fusion)

**Nuclear Fusion,**


**Fig. 27** A spherical array of plasma guns shoot supersonic plasma jets (of a heavy element such as argon or xenon) radially inwards to form a spherically imploding plasma liner, which is intended to compress a magnetized, target plasma (not shown) to fusion conditions (Figure courtesy of HyperV Technologies Corp)

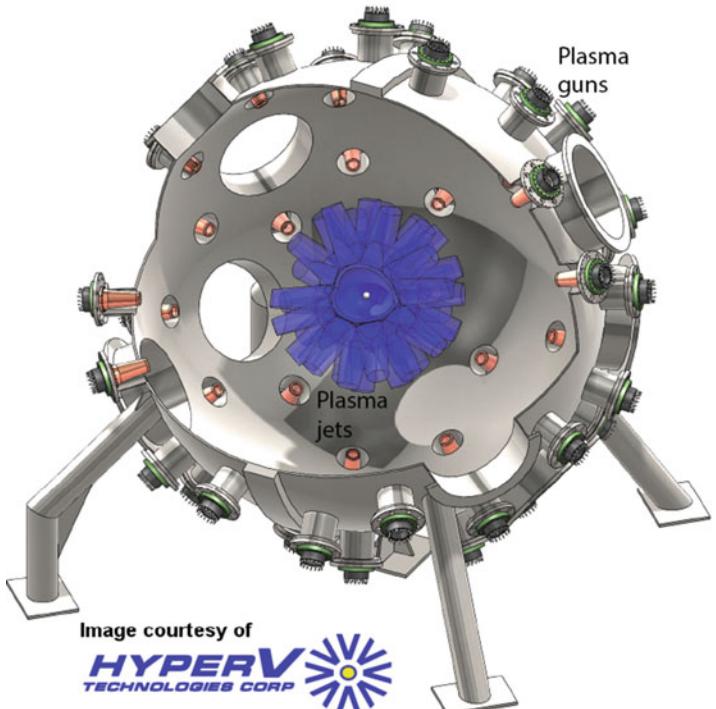

The low-cost but innovative, robust contoured-gap coaxial plasma guns [31] have been especially designed to form and accelerate the high-mass (few mg or more), high-density ( $>10^{17} \text{ cm}^{-3}$  ion density) plasma jets to high velocities ( $>50 \text{ km/s}$ ).

**Open Magnetic Confinement Systems**

Open magnetic confinement systems can avoid MHD instabilities if the magnetic field pressure is lower in the plasma confinement region than

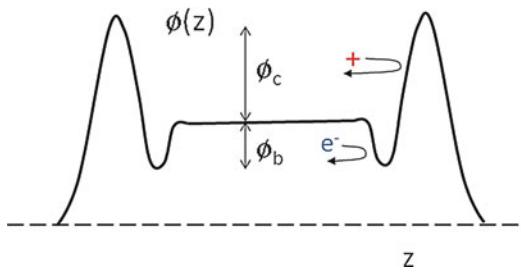

**Nuclear Fusion, Fig. 28** Electrostatic potential versus axial position in a tandem mirror

around the outside, a so-called “minimum-B” confinement system.

### Tandem Mirror

Due to rapid particle loss along the magnetic field lines a simple magnetic mirror can only achieve a power gain ratio  $Q \sim 1$ , which is inadequate for a power plant. This loss can be reduced by creating an electrostatic potential variation along the magnetic field with hills and valleys, as illustrated in Fig. 28.

The positive peaks  $\phi_c$  confine ions in the central cell, and the negative wells  $\phi_b$  confine electrons. The plasma density, temperature and electrostatic potential in tandem mirrors can be controlled by injection of neutral atom beams, by electron cyclotron resonance heating (ECRH), and by radiofrequency (RF) wave heating at selected axial locations. Such electrostatic potential control could make it possible to reduce the required length of a power plant with  $Q \sim 10$  from kilometers to less than 200 m. There have been tandem mirror experiments in Japan, Russia, Korea, and the USA. The Gamma-10 experiment in Japan with length  $L = 6$  m,  $a = 0.36$  m, and central cell  $B = 0.41$  T has confined plasma with  $n \sim 10^{18} \text{ m}^{-3}$ ,  $T_e \sim 0.3$  keV,  $T_i \sim 1$  keV. It has achieved values of  $\phi_c = 2$  kV [32].

### Gas Dynamic Trap

Figure 29 illustrates an axisymmetric magnetic mirror that could be used as a gasdynamic trap (GDT).

This GDT at the Budker Institute of Nuclear Physics, Novosibirsk, has  $B_{\max} = 10$  T in the end mirrors, mirror ratio  $R = B_{\max}/B_o = 30$  ( $B_o$  is in the central cell), length between mirrors = 7 m, central plasma radius  $a = 0.15$  m. The power and particle exhausts flow to large expander end tanks, which lowers the power flux. The experiment has achieved  $\beta > 50\%$ , ion energy  $E_i < 10$  keV,  $T_s \sim 0.9$  keV,  $n_e < 10^{20} \text{ m}^{-3}$  [33]. This experiment has overcome four shortcomings of previous magnetic mirror experiments [34]:

1. End wall bias generates rotational shear, which stabilizes MHD **flute** instability
2. Skewed neutral beam injection (NBI) generates warm ions, which fill the loss cone and stabilize the **ion cyclotron microinstabilities**
3. **Electron cyclotron** resonance heating raises  $T_e$  to 0.9 keV
4. Tandem mirror end plug reduces end losses by a factor of 5, increases  $Q$ .


Korea has the Hanbit tandem mirror, and the University of Science and Technology of China (USTC) has built the KMAX tandem mirror experiment, which has  $B_{\max} \sim 0.12$  T and  $B_o \sim 0.03$  T.

### Electrostatically Plugged Cusps

High voltage electrodes can also produce electrostatic potential hills and valleys along magnetic field lines, similar to those of a tandem mirror. The electrons are confined by the magnetic field and the negative electrodes, and the ions are confined in a negative electrostatic potential well created by the electrons’ negative charge. For example, the Jupiter-IIM electrostatically plugged magnetic cusp experiment in the Ukraine demonstrated low diffusion rates of plasma across the magnetic field [35]. This is one of the few devices that achieved a nearly “classical” diffusion rate (the minimum rate). Radiofrequency fields can also be used to plug magnetic cusps.

### RF Plasma Confinement

Potential wells in standing radiofrequency (rf) fields can contain low-pressure plasmas

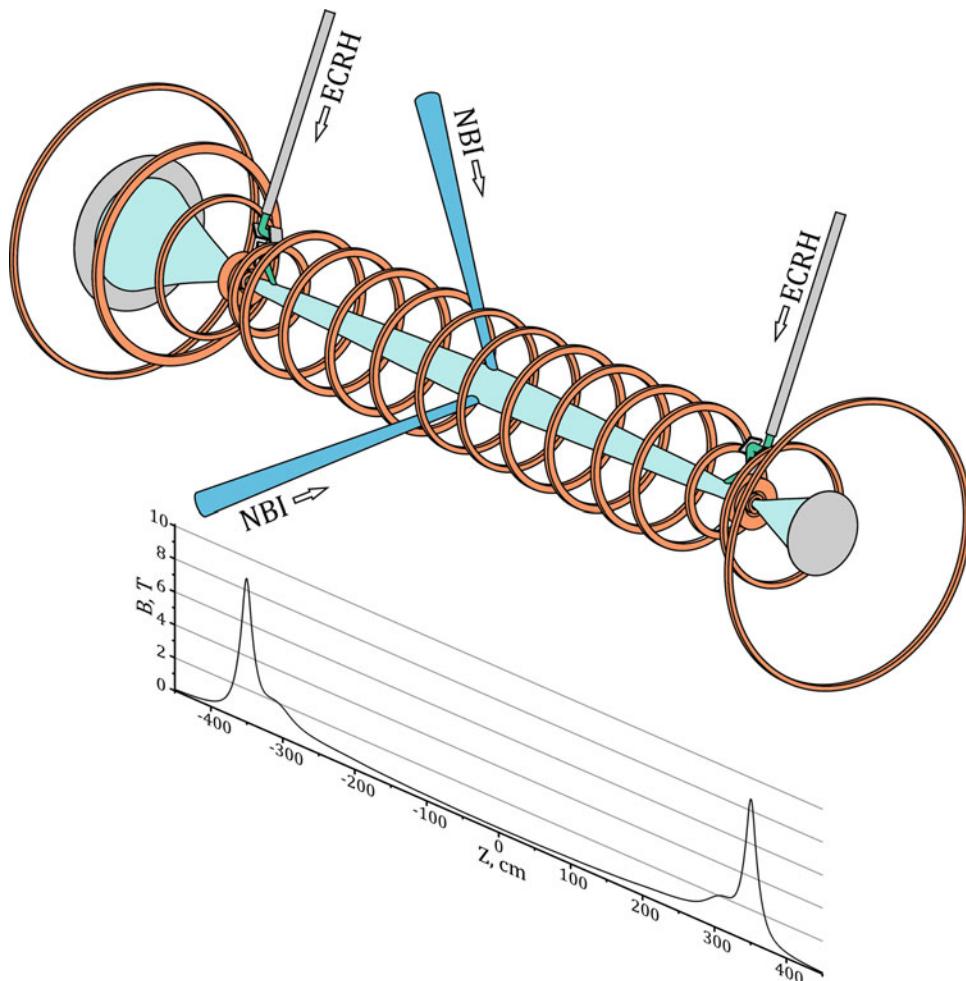


**Nuclear Fusion, Fig. 29** A gasdynamic trap. The plasma is shown in *light blue*, and the coils, in *brown* (Courtesy of the Budker Institute of Nuclear Physics, Russian Federation)

effectively, but for high-pressure plasmas of a fusion reactor excessively high rf power levels would be required. RF fields have been used to reduce end losses from open magnetic confinement systems, as in the RFC-XX experiment in Japan. High voltage rf electrodes accelerated ions to higher rotational energies, which inhibited their ability to escape through the point cusps and line cusps. The maximum plasma parameters obtained were  $n = 2 \times 10^{19} \text{ m}^{-3}$ ,  $T_i = 1 \text{ keV}$  and  $\beta = 4\%$  when the antenna was excited with the  $m = -1$  mode [36].

### Polywell

The Polywell concept has a spherical array of six or more magnetic point cusps all pointing outwards, with electron injection creating a negative potential well that focuses ions into the center of the sphere [37]. It is a form of electrostatic plugging of a cusped magnetic field [38]. Good ion focusing to small radii would be required to achieve satisfactory fusion power density. This experiment is currently (2016) inactive, due to termination of funding.

**Nuclear Fusion,**  
**Fig. 30** The Maryland centrifugal experiment  
 (Courtesy of the University of Maryland)

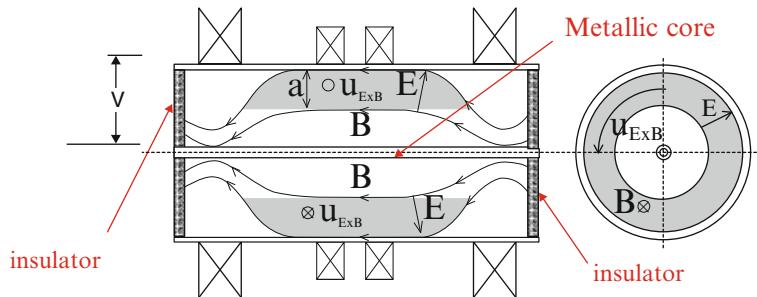

### Rotating Plasmas

Rotating plasmas can be formed by putting high voltage electrodes in the ends of a magnetic mirror to create a strong radial electric field, which causes the plasma to rotate azimuthally at high speed. Rapid electron flow makes the electrostatic potential nearly uniform along a magnetic field line. This rotation can accelerate ions up to keV energies, and the angular momentum reduces end losses from the magnetic mirror. Figure 30 shows the Maryland Centrifugal Experiment.

This experiment has a central  $B \sim 0.3$  T,  $a \sim 0.2$  m,  $L \sim 1.4$  m,  $n \sim 3 \times 10^{20} \text{ m}^{-3}$ ,  $T \sim 20\text{--}60$  eV, applied voltage 5–20 kV, pulse length 1–10 ms, and has achieved rotational speeds of 100 km/s.

### Tri Alpha Energy

The Tri Alpha Energy Company produces and sustains an FRC plasma by neutral beam injection into a magnetic mirror plasma, Fig. 31.

The total 15 keV neutral beam injection power is  $>10$  MW, lasting 8 ms. The equilibrium plasma parameters are  $n \sim 2 \times 10^{19} \text{ m}^{-3}$ ,  $T_e \sim 120$  eV,  $T_i \sim 500$  eV. The electron energy decay time ( $\sim 0.25$  ms at  $T_e = 0.1$  keV) is proportional to  $T_e^{1.6}$ . Biased electrodes at the end act to suppress plasma position wobble and the  $n = 2$  instability mode. At high beam energies such a reactor might be able to use the neutron-free reaction  $p + {}^{11}\text{B} \rightarrow {}^4\text{He} + {}^4\text{He} + {}^4\text{He}$ , hence the name “Tri-Alpha.” The fact that energetic beam ions circle the axis helps maintain stability [39].

### Other Concepts

#### Plasma Focus


The plasma focus uses a coaxial plasma gun to accelerate a blob of plasma to high velocities, as illustrated in Fig. 32.

At time  $t_1$  high voltage breakdown along the insulator forms a plasma that is accelerated axially by the  $J \times B$  force. At  $t_2$  the plasma reaches the end of the gun, and at  $t_3$  electromagnetic forces cause it to collapse into a high density blob, causing a brief burst of fusion reactions before the plasma expands and cools. At low currents ( $<0.3$  MA) the fusion yield increases proportional to  $I^4$ , where  $I$  is the plasma current, but this favorable scaling saturates at high currents, and economical power production appears to be unlikely at reasonably attainable currents ( $\sim 10$  MA). Plasma focus devices are useful as sources of neutrons and x-rays, and many have been built around the world.


#### Levitated Dipole Experiment

The Levitated Dipole Experiment magnetically levitates a superconducting coil ring, Fig. 33.

The resulting magnetic surfaces are good for plasma confinement. This experiment has a low-density background plasma plus a hot electron plasma produced by absorption of microwaves. The superconducting ring gradually absorbs heat, so it must be periodically shut down and re-cooled. If this scheme were used for a fusion reactor, heating and radiation damage to the ring would be significant issues.

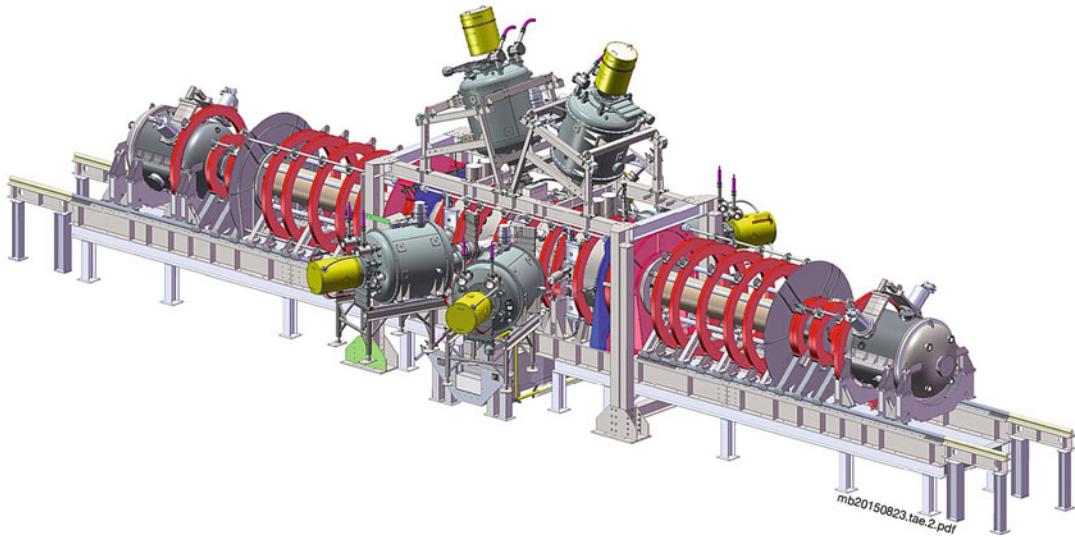

**Nuclear Fusion, Fig. 31** The C-2U facility. Red circles are magnetic field coils. Yellow cylinders are neutral beam injectors. Both ends contains plasma guns, biasing electrodes, and divertors (Courtesy of Tri Alpha Company)

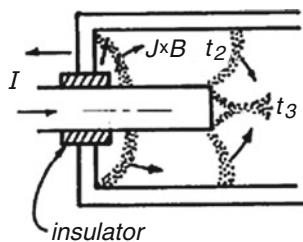

**Nuclear Fusion, Fig. 32** Plasma acceleration by a coaxial gun

### Inertial Electrostatic Confinement (IEC)

Plasma may also be confined by concentric spherical grids, Fig. 34.

Electrodes from the cathodes oscillate in and out of the accelerating grid, ionizing background gas. With tens of kV applied and deuterium plasma, small devices of this type have produced DD fusion reaction neutron emission rates  $\sim 10^7$  neutrons/s. In a high-power fusion reactor, however, the electrodes would tend to melt. IEC devices are useful as sources of neutrons and energetic charged particles.

### Muon Catalyzed Fusion

Negative mu mesons (muons), which can be produced by accelerators or cosmic rays, can bind to

deuterons to form atoms. Since the muon is 207 times heavier than an electron, the radius of its orbit is 207 times smaller than that of an electron. This small atomic size allows the shrunken deuterium atom to approach very close to another deuteron or triton, close enough for a nuclear fusion reaction to occur. After a fusion reaction occurs the muon is released, and it can bind to another deuteron (or triton) and catalyze a second fusion reaction [41]. The muon may also be captured by other nuclei, such as by an alpha particle ( ${}^4\text{He}$  nucleus), which stops the reaction chain. This “helium sticking” problem has limited the number of experimentally attained fusion reactions to about 100 per muon, which is not enough to achieve an energy gain, since about 6 GeV energy are required to generate each muon by an accelerator, and the DT fusion reaction yields only 17.6 MeV.

### Inertial Confinement Fusion (ICF)

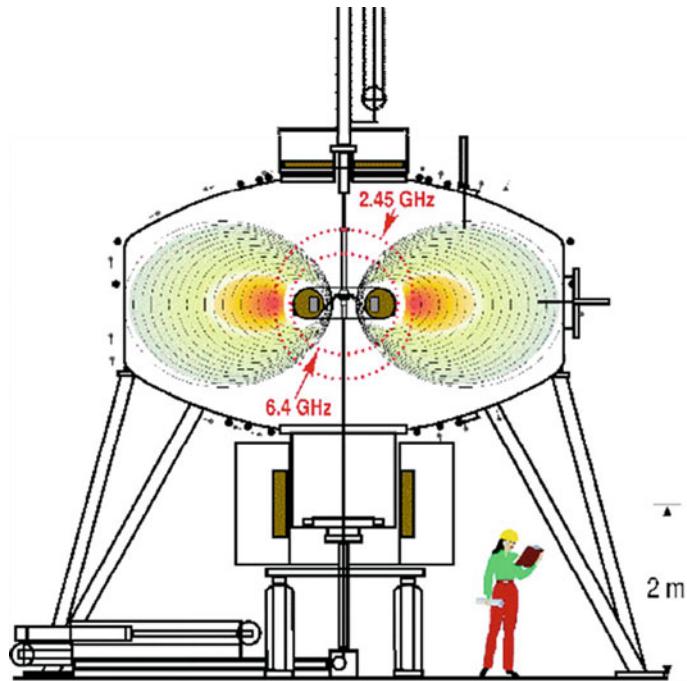
#### Target Compression

Figure 35 shows the general idea of an inertial confinement fusion (ICF) power plant.


The goal is to ignite frequent small explosions in a blast chamber. The target injector


**Nuclear Fusion,**

**Fig. 33** The Levitated Dipole Experiment, showing the magnetic surfaces surrounding the levitated coil. The *dotted red curves* indicate the resonant surfaces for ECRH with frequencies 2.45 and 6.4 GHz (Courtesy of Columbia University and Massachusetts Institute of Technology [40])

**Nuclear Fusion,**

**Fig. 34** Plasma confinement by spherical grids. In this configuration the accelerating grid is positive, and the center electrode is negative. The electrodes are supported by high voltage insulators, not shown

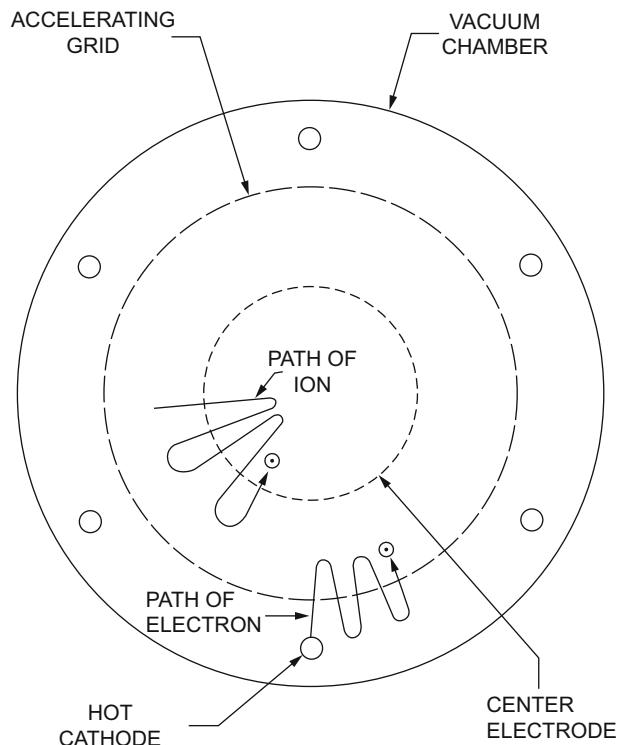

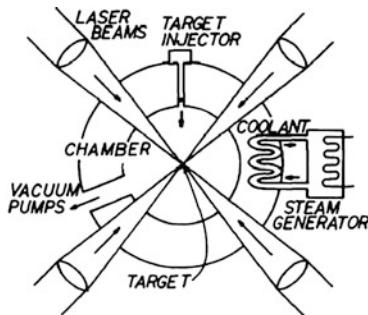

**Nuclear Fusion, Fig. 35** The general idea of a laser ICF power plant

shoots fuel capsules (“targets”) into the chamber several times per second. When the target reaches the center of the chamber laser beams ablate its surface, which causes an inwards force that compresses the target to ultrahigh density. Then a high power laser pulse raises part of the compressed target to ignition temperature, and a thermonuclear burn wave causes a miniature explosion. The explosion energy is deposited in the chamber walls and absorbed in a blanket and coolant, which could be liquid metal, molten salt, or helium gas. The hot coolant boils water in a steam generator, and the steam drives a turbine to generate electricity (Rankine cycle). Alternatively, a high pressure gaseous coolant, such as helium, could drive a gas turbine directly (Brayton cycle) without making steam. Instead of using laser beams, the target compression could also be done by heavy ion beams or by exploding wires and x-rays. Figure 36 shows the steps of target compression and burn.

The laser beam heats the plasma surrounding the target shell (Step a of Fig. 36). The plasma ablates the target surface away, causing an inward pressure similar to the forward thrust of a rocket caused by rearward expulsion of burning fuel (Step b). The heating to ignition (Step c) may be done by a shock wave to the center of the volume (Step c) or by a sudden PetaWatt laser beam or electron beam impact on the outside (“fast ignition”), which requires less heating energy. Then a thermonuclear burn wave can spread to surrounding fuel (Step d).

The National Ignition Facility at Lawrence Livermore National Laboratory, California; the Laser MegaJoule facility in France; and the GEKKO-XII in Japan are all large laser facilities approaching ignition of targets. For example, Fig. 37 shows the National Ignition Facility (NIF) in Livermore, California.

Figure 38 shows a man inside the spherical NIF target chamber.


The NIF experiments approached target ignition in 2014, but did not yet achieve it. NIF uses glass lasers with low efficiency, and it requires hours between shots to replace the target, which is suspended on a thin quartz fiber. For “ignition campaign” experiments the target holder must also provide cryogenic refrigeration. The pulse repetition rate in a reactor would be limited by replacement of the target and by evacuation of gases between shots.

If the target capsule irradiation is not extremely uniform, a Rayleigh-Taylor instability [42] can break up the shell before compression is complete, as in Fig. 39.

The Omega laser facility at the Laboratory for Laser Energetics, University of Rochester, NY, achieved 50 Gbar target compression using direct drive (laser beams interacting directly with the target surface) and is aiming at 100 Gbar, which could encourage use of direct drive on NIF. The hydroefficiency (fraction of laser energy absorbed in the target) is optimized by making the beam size slightly smaller than the target diameter [43].

Alternatively, target pellets may be mounted inside a hollow cylinder, called a “Hohlraum”, Fig. 40, in an effort to achieve more uniform compression.

The laser beams enter through holes in the ends of the cylinder and irradiate the inside walls of the Hohlraum, causing them to emit intense x-rays. The x-rays illuminate the 2.2 mm diameter target capsule, ablating its surface and compressing the frozen DT fuel to ultrahigh density. This “indirect drive” was thought to provide better compression than the “direct drive” where the laser beams interact directly with the target surface, but the Hohlraum targets have not met expectations. They are also more complex and more difficult

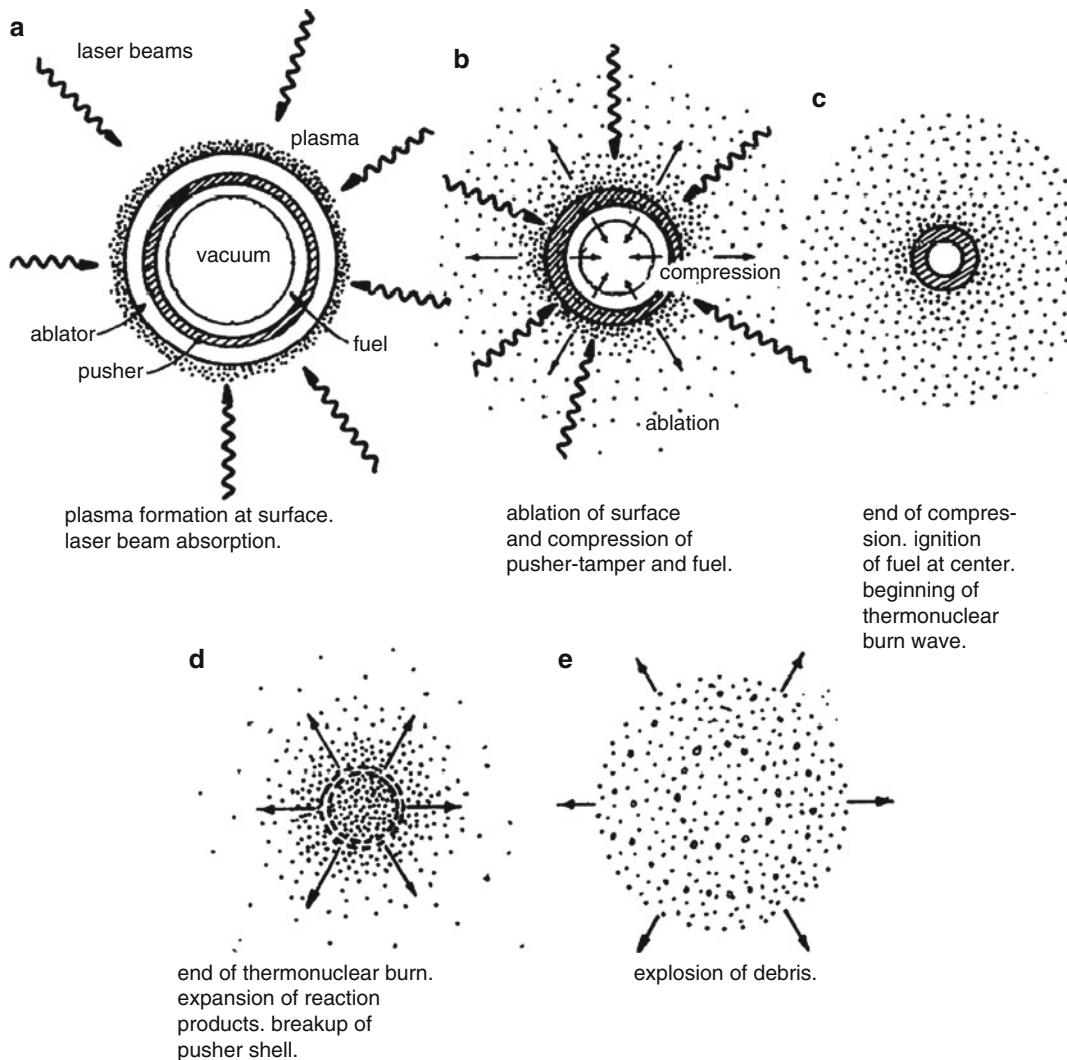


**Nuclear Fusion, Fig. 36** Ablation, compression, and burn of an ICF target

to inject into a chamber and align with the laser beams.

As of 2015 NIF experiments had not yet achieved ignition, but they had achieved about  $10^{16}$  neutrons per shot, with about half of them coming from alpha particle heating of the plasma (approaching ignition). The target compression was hindered by asymmetries due to the fuel capsule support and laser-plasma interactions. NIF may be converted to using laser alignment for direct drive in the future.

Various methods are under consideration to improve compression. Broad laser **bandwidths**


(multi-THz) may help suppress parametric laser plasma instabilities that limit ablation pressure. The bandwidth may be broadened to 3–10 THz by stimulated rotational Raman scattering (SRRS) in a gas cell. Using **deeper ultraviolet** wavelengths reduces laser plasma interactions and increases hydrodynamic efficiency. For example, KrF excimer laser (248 nm) and the ArF (193 nm) have suitable wavelengths. The Nike KrF excimer laser at the Naval Research Laboratory (NRL) has a native bandwidth  $>1$  THz. Such a gas laser medium is easier to cool than glass lasers, allowing higher pulse repetition rates [44].

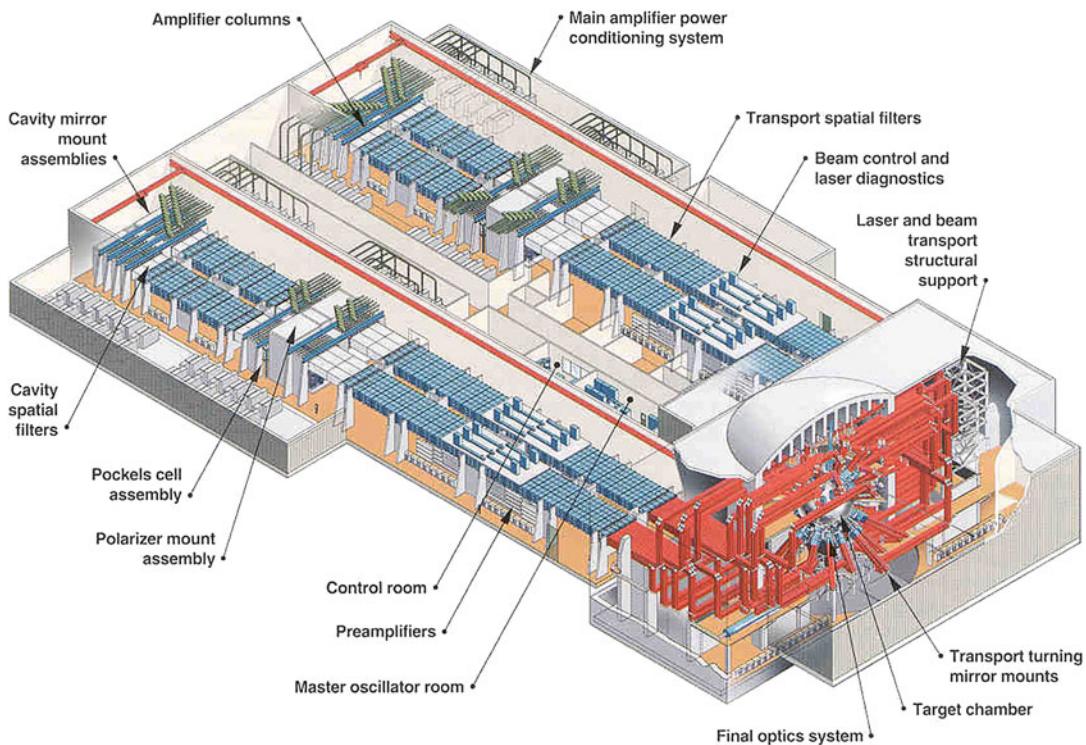


**Nuclear Fusion, Fig. 37** The National Ignition Facility, USA. 192 laser beams (in red tubes) go to the target chamber (Courtesy of Lawrence Livermore National Laboratory)



**Nuclear Fusion, Fig. 38** The NIF target chamber, with holes where the laser beams enter. (A wide angle lens makes the 10 m diameter chamber appear to be larger than it is) (Courtesy of Lawrence Livermore National Laboratory)

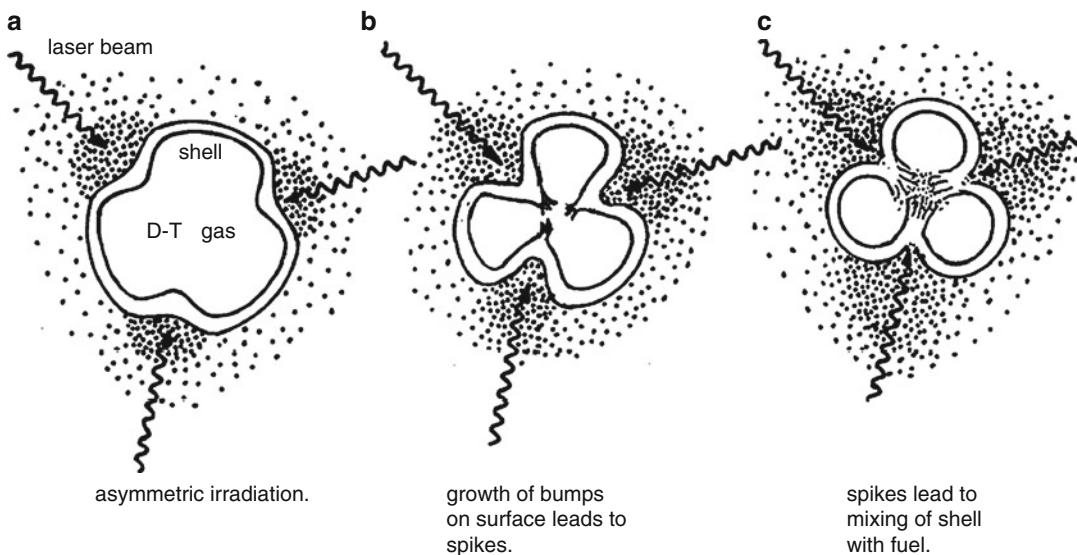

**Nuclear Fusion, Fig. 39** Growth of the Rayleigh-Taylor instability, causing breakup of the target shell (exaggerated for clarity)

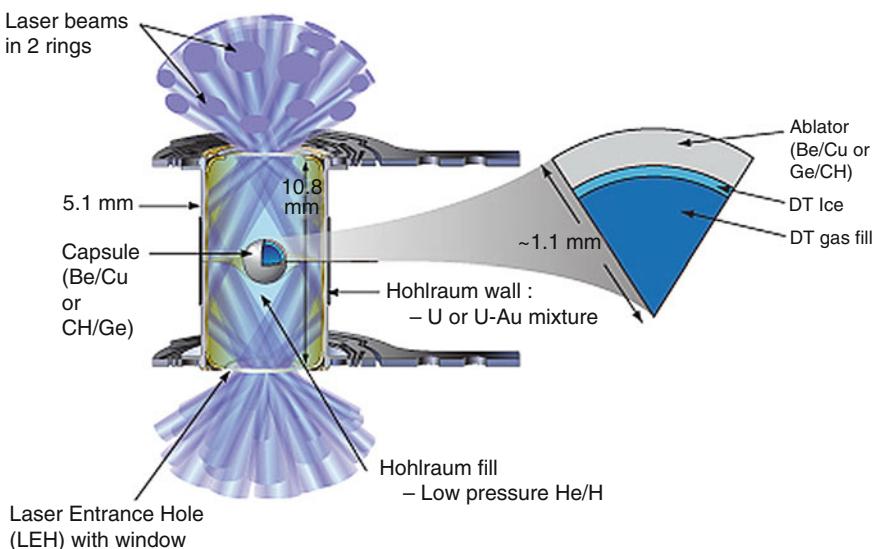

**Nuclear Fusion, Fig. 40** A Hohlraum target for NIF (Courtesy of Lawrence Livermore National Laboratory)

Table 10 shows that many issues must be resolved before ICF reactors can become practical.

Potential solutions are available for most issues, but technology development has not yet been completed, especially for efficient, reliable, cost-effective drivers.

Table 11 lists some issues of target design and manufacture.

In experiments on NIF Los Alamos National Laboratory (LANL) has shown that beryllium target capsules result in lower growth rates of laser-plasma instabilities, achieving a target pressure  $\sim 80$  Gbar. They have also developed a

**Nuclear Fusion, Table 10** Technical issues of ICF reactor development

Theory	Understand the physics of laser plasma interaction, absorption, reflection, heat transport, compression, instabilities, ignition, and burn
Experiments	Attain satisfactory values of the critical elements for high energy gain
	Beam-to-fuel coupling efficiency
	Avoiding fuel preheating before compression is complete
	Implosion symmetry
Target manufacture	Driver energy per unit fuel mass
	Develop an automated system to manufacture high-gain spherical targets accurately and cheaply.
	Select target materials to avoid production of long-lived radioisotopes.
Target shelf life	Use cryogenic refrigeration to keep the DT fuel frozen.
	Tritium decay heat can damage the cryogenic target, so targets have a finite shelf life
Target injection	Develop a target injection and guidance system to ensure that the target is at the focus of the beams when the driver is fired
Diagnostics	Measure the parameters of experiments, such as implosion velocity, density distributions, energy distributions, ablated matter, laser beam reflection, implosion symmetry, and fusion reaction products, with fine spatial and temporal resolution
Chambers	Develop reactor chambers to withstand repeated ( $>3 \times 10^8$ ) explosions without failure. (A 1,000 MJ yield has the explosive energy of 240 kg of TNT, but less momentum)
Chamber clearing	Remove debris and gases rapidly between explosions, in order to avoid scattering and attenuating the incident driver beams
Drivers	Develop laser or ion beams with high energy (1–10 MJ), high pulse repetition rate (1–10 Hz), proper pulse shape (duration 10–20 ns), suitable wavelength (lasers), good efficiency ( $\geq 8\%$ ), and low enough cost
Reliability	Develop power supplies, power conditioning equipment, diodes, and optical components to operate reliably for $>10^9$ shots

**Nuclear Fusion, Table 11** Target design and manufacture issues

Hydrodynamic stability and high compression
Good sphericity
Fast fill and layering
Uniform thickness shells
Very smooth surfaces
Minimum preheat of fuel
High-Z material to stop electrons and x-rays
Minimum production of long-lived radioisotopes
Easy handling and storage
Capable of high-velocity acceleration and injection without damage
Cheap materials, like plastics
Simple, inexpensive fabrication
Target cost goal typically $<10$ cents per target

method to deposit a 50  $\mu\text{m}$  layer of CH foam inside a high density carbon capsule shell. The foam can be used to wick liquid DT fuel to form a dense

liquid layer for ignition implosions, which may perform better than frozen DT layers [45].

## Laser Development



Great improvements are needed in laser efficiency, pulse repetition rate, and target injection rates. In the USA two experiments are aimed at high average power lasers: Electra and Mercury.

The **Electra KrF laser** experiment at the Naval Research Laboratory is illustrated in Fig. 41.

Electron beams in vacuum from the cathode pass through the foil into the Kr and F<sub>2</sub> gases in the laser cell, where they cause excitation, resulting in a laser beam that exits through the amplifier window. Electra will run at 5 Hz with a laser output of 400–700 J. This will be large enough to develop technologies that can be scalable to the 50–150 kJ needed for a fusion power plant beam line.

**Nuclear Fusion,**

**Fig. 41** The Electra KrF laser (Courtesy of Naval Research Laboratory)

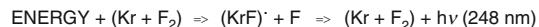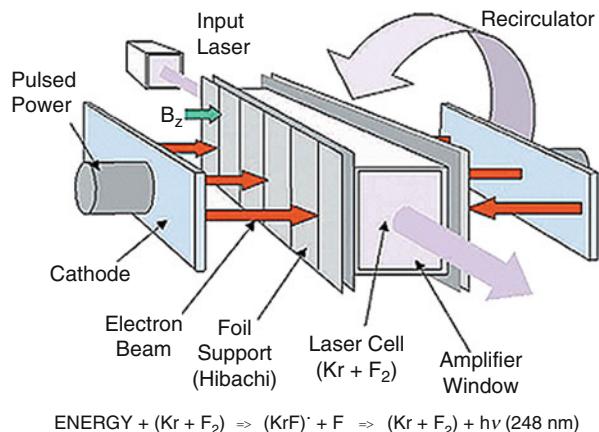**Nuclear Fusion,**

**Fig. 42** The Mercury diode-pumped solid state laser (Courtesy of the Lawrence Livermore National Laboratory)

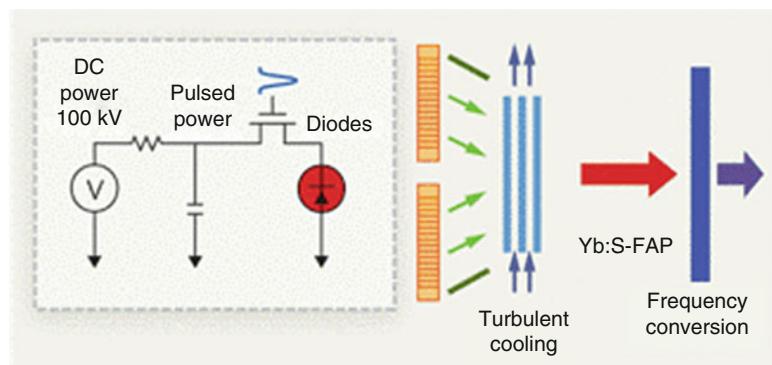


Figure 42 shows the **Mercury diode-pumped solid state laser**.

The material in which light amplification occurs is crystalline strontium fluoroapatite doped with ytterbium (Yb:S-FAP), which has a long excited state lifetime and high saturation fluence. High-power diodes (yellow) inject 900 nm wavelength light (green arrows) into the Yb:S-FAP (blue plates), which emits near 1047 nm (large red arrow). About 15–20% of the diode energy is dissipated as heat in the Yb:S-FAP, which is removed by turbulently flowing helium gas [46]. This infrared light frequency is tripled in the frequency conversion crystal (blue) before transmission to the target. The Mercury laser should deliver 100 J pulses at a rate of 10 Hz. If successful, this could be scaled up by using many units to MJ energies for a power plant. With mass production of diodes, their cost may fall to pennies per Watt, as needed for an economical power plant.


Researchers at the Institute for Laser Engineering, Osaka University, are developing Nd:Cr:YAG ceramic laser plates with much higher thermal conductivity than glass amplifiers, so they can achieve much higher power flows without damage. They are also developing a system to ignite a compressed target capsule using a picosecond laser beam or a pulsed relativistic electron beam, guided by a conical gold tube. The FIREX-II experiment will aim to achieve ignition at  $\rho R \approx 1.2 \text{ g/cm}^2$ , where  $\rho$  and  $R$  are the compressed fuel density and radius [47].

## Hypervelocity Impact Fusion

Small pellets (mass  $\sim 1 \text{ g}$ ) would be accelerated to velocities  $> 10^5 \text{ m/s}$  and shot at a solid target. Either the projectile or the target would contain DT fuel. During impact, intense compression and shock heating would occur, igniting some of the

**Nuclear Fusion,**

**Fig. 43** Hypervelocity impact projectile and target shaped to provide good compression

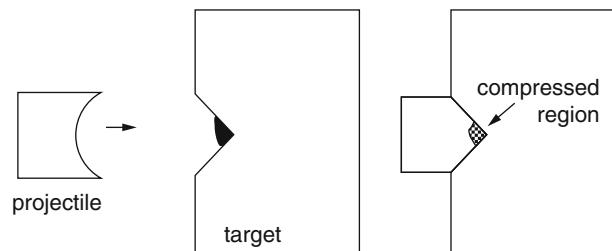

fuel. The compression could be made nearly three-dimensional by shaping the projectile and target, Fig. 43.

If compression is great enough, a high energy gain ratio  $Q > 30$  may be attained. The fusion yield should be low enough that the blast chamber is not destroyed and high enough for economical power generation. The required projectile energy is about 25 MJ. Possible means of acceleration include electromagnetic rail guns, electrostatic accelerator, light gas guns, travelling electromagnetic wave accelerator, and laser ablation.

**"Cold fusion"**

Evidence for low energy nuclear reactions (LENR) has been reported from many types of experiments: electrolysis of water, gas discharges, gas diffusion through thin films, electron beam impact, exploding wires, and laser irradiation. The evidence includes apparent heat generation, x-rays, and transmutations. Such phenomena were once called "cold fusion" after the 1989 hypothesis by Fleischmann and Pons that the energy generation by their electrolysis cell was a result of nuclear fusion reactions [48]. Many theories have been proposed to explain the LENR phenomena, but so far no theory has gained widespread acceptance, and some people are skeptical that nuclear reactions are occurring.

**Challenges of Plasma Theory**

In order to model fusion reactor behavior plasma physics theory must take into account many phenomena, Table 12.

Many of these models are based on simplifications of the Boltzmann transport theory and Maxwell's equations. Because these phenomena are

diverse and often involve nonlinear differential equations, there is no unified theory that encompasses all of them. Instead, these phenomena may be modeled separately and the models stitched together to get an approximate picture of plasma behavior. Analytic theories are useful to understand how individual phenomena vary with input parameters, but are limited by the simplifying assumptions that are needed to make the equations solvable.

Large-scale computer simulations are widely used to model these effects. Three-dimensional models can be used to predict plasma behavior. The successful modeling of many phenomena lends confidence to predictions of the behavior of future experiments, such as ITER, but experimental data will still be needed to confirm the predictions.

**Magnetic Fusion Technology Issues**

Many areas of technology are required for successful development of magnetic fusion power, Table 13.

Most of these issues have been successfully resolved during the six decades of fusion research. The ITER experiment should demonstrate the successful combination of many of these technologies, but will not demonstrate much tritium breeding, durable wall materials, high availability, or electrical power generation.

**Magnets**

The ITER toroidal field coil assembly is shown in Fig. 44


Use of high-temperature superconductors (HTSC) such as ReBCO, is becoming feasible for fusion devices [49]. Coils could carry high

**Nuclear Fusion, Table 12** Some phenomena to be modeled by plasma theory

Magnetohydrodynamic (MHD) instabilities	Motion of plasma boundary, driven by gradients of plasma pressure, magnetic field, and current density
Radiation losses	Line radiation, bremsstrahlung, cyclotron radiation
Coulomb collision effects on velocity distributions	Boltzmann or Fokker-Planck equation
Plasma wave generation, cutoffs, and resonances	Maxwell equations coupled to conservation of particles, momentum, and energy
Wave-particle interactions and microinstabilities	Anisotropic or non-Maxwellian distributions; kinetic theory (based on Boltzmann equation).
Nuclear fusion reactions	Cross sections averaged over ion velocity distributions
Particle and energy transport	Transport coefficients (diffusion, convection, conduction) in conservation equations; scaling laws derived from experimental data
Plasma-wall interactions	Sputtering, vaporization
Impurity control	Edge plasma, impurity transport, and divertor theory
Plasma heating and current drive	Neutral beam injection, wave heating

**Nuclear Fusion, Table 13** Fusion technology issues

Component	Issues
Magnet coil systems	High magnetic field, superconducting cable, stresses, quench protection
Plasma heating, fueling, current drive	Plasma compression Magnetic induction Electromagnetic waves Particle beam injection Plasma guns Pellet injectors
First wall	High heat flux, heat removal, radiation damage, tritium trapping
Blanket, shield	Tritium breeding ratio, neutron and gamma shielding, heat removal, radiation damage
Divertors (channels that remove plasma exhaust energy and impurities)	High heat flux, sputtering, vaporization, tritium trapping, vacuum pumping
Energy conversion	Efficient conversion of fusion energy into electrical energy, such as with a steam cycle or gas turbine. High efficiency requires high coolant temperature, which causes materials problems.
Materials issues	Structural materials, insulators, windows, blankets, tungsten, tritium trapping
Vacuum systems	Pumping speed, conductance, cryopanels
Cryogenic systems	Coolant flow, refrigeration, liquefaction, heat shields
Plasma diagnostic systems	Space-time mapping of magnetic field, electric field, current density, plasma density, temperature, impurities, plasma waves, turbulence, nuclear reactions
Control systems	Plasma control, heating, current drive, magnets, fusion burn, electrical power plant
Maintenance	Magnets, first wall, heating systems, diagnostics, heat transfer systems
Safety and environmental systems	Routine emissions, accident scenarios, decommissioning, waste disposal
Power plant designs	Criteria for attractive power plants Reliability, availability, and maintenance Economics Fusion-fission hybrids

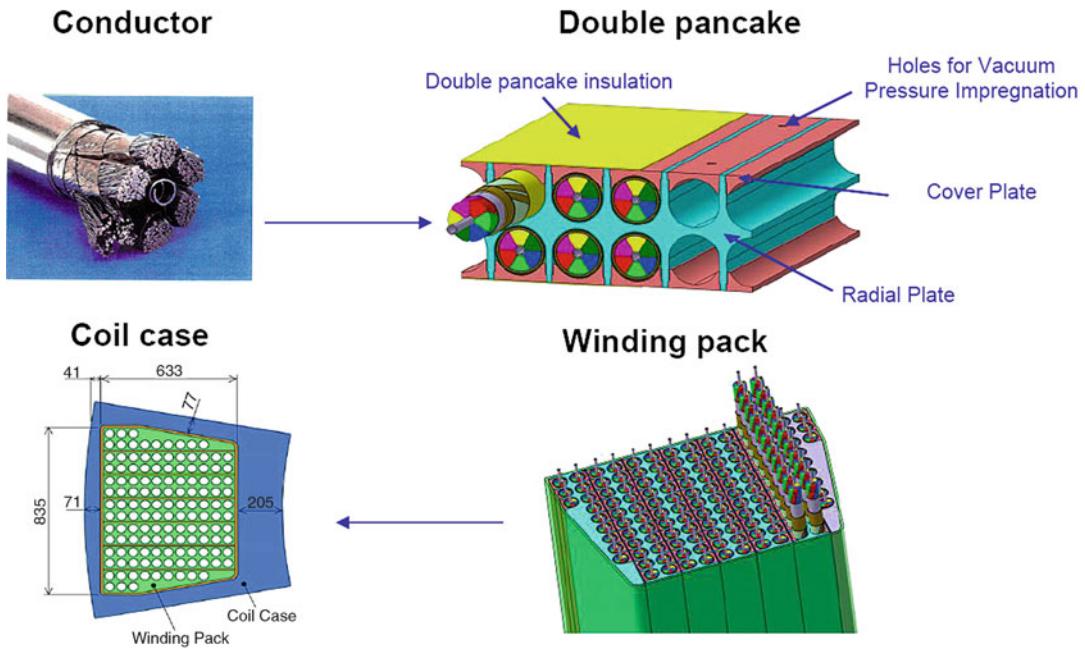

**Nuclear Fusion, Fig. 44** The ITER TF conductor is laid into the grooves, double insulated, assembled into a winding pack, then welded into the coil case. Dimensions are mm (Courtesy of ITER Organization)

current densities ( $>200$  A/cm tape width) at  $B = 25$  T while cooled to 20 K (instead of the usual 4 K for low-temperature superconductors). The small ST25 tokamak has 6 HTSC toroidal field coils, which can carry 300 A current at 77 K and higher currents at 20 K. It operated for 29 h at low plasma power in July, 2015 [50]. A 26 T ReBCO magnet has been demonstrated; MIT is testing an HTSC coil that requires no insulation; and a 32 T magnet is under construction at the National High Magnetic Field Laboratory. HTSC coils could also have demountable joints, making assembly and replacement relatively easy. HTSC development is underway in Germany, Italy, Japan, Switzerland, and the USA [51]. HTSC coils could simplify the design of magnets, cryostats, and instrumentation; and reduce the refrigeration power and cost.

### Plasma-Wall Interactions


ITER must deal with transient heat loads caused by “edge localized modes” (ELMs) and disruptions, which can potentially damage the first walls. A robotic system to replace damaged wall

tiles will be tested under high radiation levels in ITER. Development of first wall materials that can resist high heat fluxes and are resistant to damage by 14-MeV neutrons will not be completed by ITER, which uses more conventional structural materials, such as SS-316.

In parallel with the ITER project the International Fusion Materials Irradiation Facility (IFMIF), to be built in Japan, will bombard a flowing lithium target with 40 MeV deuteron beams to produce an intense flux of energetic neutrons for testing small samples of candidate fusion reactor materials at damage rates up to 40 displacements per atom (dpa) per year. Figure 45 shows a drawing of IFMIF [52].

Such irradiation testing is severely needed to qualify candidate fusion reactor materials. The Gas Dynamic Trap volumetric neutron source is another good facility for such testing.

Coating the plasma chamber walls with **lithium** may help improve plasma performance. Usually many of the deuterons escaping from the plasma hit the wall, where they are neutralized. Some of them re-emerge from the wall as cold

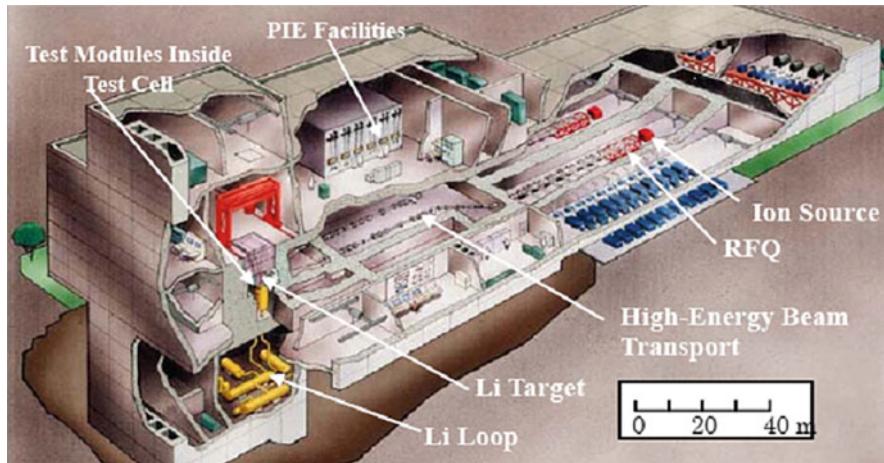

**Nuclear Fusion, Fig. 45** The International Fusion Materials Irradiation Test Facility (Courtesy of the International Energy Agency)

neutral gas, which keeps the plasma edge temperature low, making a steep temperature gradient, which causes rapid heat conduction. Lithium absorbs escaping deuterium, reducing backflow of cold deuterium gas, and flattening the temperature profile, which can reduce plasma electron turbulence and heat conduction rates [53].

### Materials Issues

Fusion reactors may need to avoid operation that produces fine-scale cavities in structural materials, because such cavities may store large quantities of tritium, posing a hazard during accidents. Radioactivity induced in reduced activation ferritic and martensitic (RAFM) steels can decay to a safe level in 100 years, but those steels may have lower creep strength at  $T > 500^{\circ}\text{C}$ , which limits the stress and temperatures at which they may be safely used. Computational thermodynamics modeling has identified thermomechanical treatment processes that can improve the microstructure and performance of steels with 9–12% Cr. New alloys are being developed and tested in 2016–2017. Castable nanostructured alloys (CNAs) have increased yield strength and creep (slow deformation) resistance at 600–650  $^{\circ}\text{C}$ . ORNL researchers are studying

inexpensive 3Cr-3WV(Ta) steels, which may also have improved creep and welding properties. SiC/SiC composites are being qualified for jet turbines, and they may also become useful as high-temperature structural materials in fusion reactors [54].

Several tritium breeding materials are under consideration for the fusion reactor blankets: PbLi, lithium ceramics (such as  $\text{Li}_4\text{SiO}_4$ ), and FLiBe. Possible coolants include Water, helium, and flowing PbLi or FLiBe [55, 56].

## Fusion Reactor Design Studies

### Utility Criteria

Electric power utility companies have many criteria for power plant selection and siting [57], including:

- Output of power plant, compatibility with power grid
- Grid stability
- Required transmission lines
- Capital cost per kW
- Simplicity of plant
- Construction time
- Reliability and availability of power plant

- Ease and speed of maintenance
- Plant lifetime
- Load-following (ability to vary output to meet demand)
- Seismic activity and flood danger
- Availability of fuel, and fuel cycle costs
- Decommissioning costs
- Adequacy of resources, such as helium, lithium, beryllium, and niobium
- Feasibility of shipping large, heavy components
- Staff numbers, skills, and costs
- Security requirements and costs
- Government laws and regulations
- Ease of licensing
- Intervener lawsuits
- Safety
- Environmental issues
- Plant emissions and waste products
- Willingness of financial institutions to invest
- Public acceptance

The availability of fusion power plants is difficult to predict, because current experiments often have equipment failure rates that would be unacceptable to utilities. The availability of some systems can sometimes be improved by providing redundant components, with slight increases in cost. Repair of large superconducting magnets would be difficult, so designers usually try to ensure that they will last for the life of the plant; but modular stellarator coils or demountable joints could facilitate easier maintenance.

Fusion reactors have an economy of scale, which means that a 3,000 MWe power plant would probably have a much lower COE than a 300 MWe plant, but utilities may not wish to build very large power plants, to avoid large grid perturbations during outages and financing difficulties [58].

### Hydrogen Production

The electricity from a fusion power plant could also be used to make hydrogen by high temperature electrolysis. The hydrogen could be used as fuel for transportation and industrial processes. If the fusion reactor blanket could operate at  $T >$

800 °C, then the heat could be used directly for hydrogen production by a thermo-chemical system, such as one using a sulfur-iodine cycle [59]. Another application of fusion energy could be fissile fuel production.

### Fusion-Fission Hybrids

Present light water fission reactors burn mainly the fissile isotope  $^{235}\text{U}$ , which is only 0.72% of natural uranium. (“Fissile” means that it can be fissioned by slow neutrons.) The other 99.27% is mostly  $^{238}\text{U}$ , which does not fission easily. A strong neutron source is needed in order to convert the  $^{238}\text{U}$  into  $^{239}\text{Pu}$ , which is another fissile fuel, if we are to generate energy from the other 99% of the uranium resources.

That strong neutron source could be a “fast” fission reactor, such as a liquid metal fast breeder reactor, but it takes years for such a reactor to generate enough fuel to start up a second reactor. The neutron source could be a high power accelerator beam (like IFMIF), but fusion plasma neutron sources would be better where large quantities of materials are to be irradiated.

A fusion-fission hybrid would use uranium or thorium (which breeds  $^{233}\text{U}$ ) in the fusion reactor blanket, in addition to lithium. The blanket could be optimized either to produce more heat and electricity from the hybrid plant or to breed fissile fuel ( $^{239}\text{Pu}$  or  $^{233}\text{U}$ ) for use in satellite fission reactors. Hybrid blanket design studies indicate that one hybrid reactor could provide fuel for about five light water reactors. An “Energy Park” could have a fusion reactor plus several fission reactors and a fission reactor fuel reprocessing plant. With modern reactor designs much of the spent fuel radioactive wastes could be recycled in the fission reactors or “incinerated” (transmuted to stable isotopes) in the fusion reactor blanket [60]. No matter what applications of fusion energy are desired, a new facility is needed to demonstrate key technology solutions.

## Fusion Nuclear Science Facility

US researchers are planning a “Fusion Nuclear Science Facility” (FNSF), which could accomplish some goals that ITER will not do:

- Operate continuously for many days
- Test materials at radiation damage levels  $>20$  dpa (displacements per atom)
- Achieve tritium breeding ratio TBR  $\geq 1.0$
- Operate with high coolant temperature  $>600$  °C

These demonstrations are needed to prepare for the DEMO reactor [61].


## High-Field Reactor Concept

Since the fusion power density is proportional to  $B^4$ , a reactor with  $B = 9.2$  T could have nine times the power density of one with 5.3 T (the ITER value). MIT has designed the “Affordable, Robust, Compact” (ARC) reactor, which would use very high magnetic fields to reduce the size and cost of a combined fusion nuclear science facility (FNSF) and demonstration fusion pilot power plant, Fig. 46.

This reactor has  $R = 3.3$  m,  $a = 1.1$  m, and  $B_t = 9.2$  T, using rare earth copper oxide (REBCO) superconducting toroidal field coils, with a peak field at the coil  $\sim 23$  T. The coils have demountable joints, which facilitate assembly and disassembly for replacement or maintenance. Figure 47 shows one model of a joint.

The REBCO tapes are glued or clamped to the steel structure, oriented such that the Hastelloy layer is between the REBCO layer and the steel structure. This way, the electrical resistance from the REBCO layer to the surface of the tape is minimum. Clamping the two halves together and applying pressure as shown completes the circuit. Cooling channels are located in both structural pieces, at the base of each comb.


Thus, the vacuum vessel can be repaired quickly if the first wall is damaged, and many wall materials, divertor panels, and cooling methods could be tested in this device. Plasma current drive is provided by two inboard RF launchers using 25 MW of lower hybrid wave power and 13.6 MW of ion cyclotron fast wave power, which provide some control of plasma profiles. The 7.8 MA plasma current can be sustained non-inductively with a bootstrap fraction (current generated by plasma transport) of 63%. Low-pressure, slowly flowing FLiBe molten salt serves as the blanket neutron moderator, tritium breeder ( $TBR \geq 1.1$ ), radiation shield, and coolant at about 600 °C. The fusion power and total thermal power are 525 MW and 708 MW. The FLiBe can heat helium gas to drive a 40% efficient Brayton cycle turbine to generate 283 MWe gross power, and a net power output of 190 MWe. The fusion energy gain  $Q = (\text{fusion power out}) / (\text{input power}) = 525/38.6 \approx 13.6$ . The advanced technologies

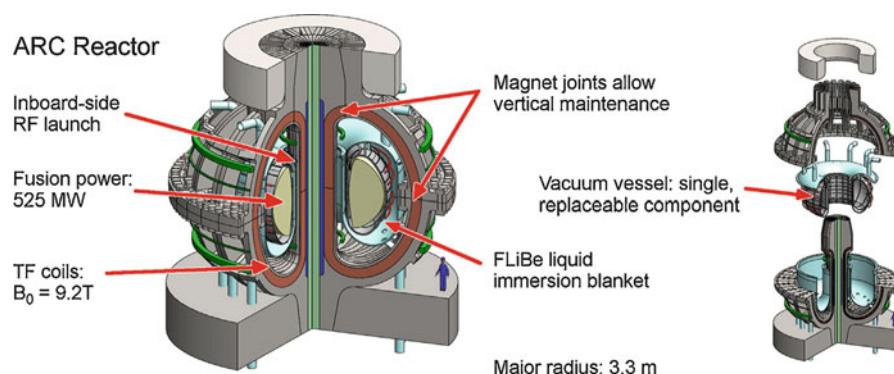

**Nuclear Fusion, Fig. 46** The ARC reactor design. The drawing on the right shows how vertical maintenance can be done (Courtesy of MIT and Elsevier Press [62])

**Nuclear Fusion,**

**Fig. 47** Schematic drawing of comb-style joint before mounting (*top*) and after mounting (*bottom*)  
(Courtesy of MIT and Elsevier Press [63])

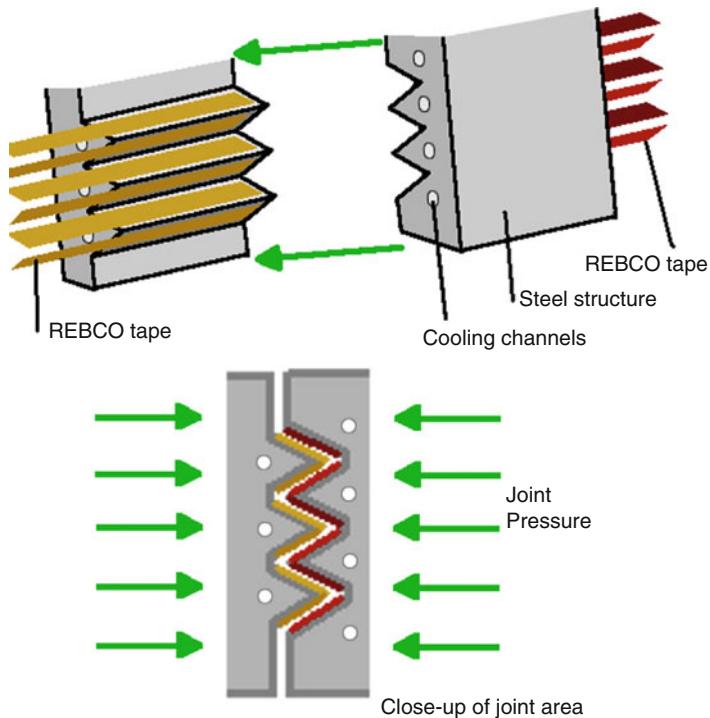

- High-field superconducting coils
- Demountable joints for rapid maintenance
- Efficient non-inductive current drive could enable this innovative reactor to attain most of the goals of the FNSF and the Pilot power plant soon, at reasonable cost [63].

EBT-P, MFTF-B, TFTR, SSPX, ITER (1999, funding resumed years later), NCSX.

Huge tokamaks like ITER are unlikely to be competitive with other energy sources [64]. There are, however, several promising avenues of fusion research, such as:

- Gas dynamic traps and tandem mirrors
- High energy beam driven fusion, such as Tri Alpha
- Sustained spheromaks, such as Dynomak
- Magnetized target fusion
- Compact or modular stellarators
- Compact, high magnetic field toroids with demountable joints, like ARC
- Liquid lithium protection of chamber walls

Fusion power plants might become economically competitive if:

- Cheaper fusion reactors were developed, such as those listed above
- Fusion-fission hybrids were developed

**Economics**

Fusion reactor design teams in Europe, Japan, and the USA have done many design studies of tokamaks, stellarators, inertial fusion, and other types of fusion power plants. The capital costs of fusion reactors are very high, but the fuel costs are very low. The resulting cost of electricity (COE) is typically predicted to be about 1.5 times as high as the COE from coal plants and nuclear fission reactors.

Lack of funding continuity has impeded progress in some places. For example, the United States terminated funding for the following fusion projects under construction or in operation:

- Carbon emissions were taxed, or
- Public opposition made it difficult to build new fission reactors or coal power plants.

**Acknowledgments** The following provided helpful comments on this article: Ralph Moir, Chan Choi, Lee Cadwallader, Nicholas Tsoulfanidis, Alex Parrish, Daniel Prater, and the Institute for Plasma Research (Gandhinagar, India). Charlou Dolan drew many of the figures.

## Bibliography

1. Freidberg J (2006) Plasma physics and fusion energy. Cambridge University Press, Cambridge, UK
2. All-the-world's tokamaks (2010) <http://www.toodlepip.com/tokamak>
3. Bolt H (2001) Materials for fusion. European White Book on Fundamental Research in Materials Science. Max-Planck-Gesellschaft, Munich, Section 2.9, Figure 2.17. (See also <http://www.mpg.de/bilderBerichte/Dokumente/dokumentation/europWhiteBook/>)
4. Laudon X (2015) EU strategy to fusion power. Fusion Power Associates Annual Meeting. Washington DC, 16–17 December 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
5. Prager S (2015) Comments on fusion development strategy for the US. Fusion Power Associates Annual Meeting. Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
6. Zarnstorff MC (2015) Stellarator paths to DEMO, fusion power associates annual meeting. Washington DC, 16–17 December 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
7. Laudon X (2015) op. cit
8. Prager S (2015) op. cit
9. Hazeltine R et al (2009) Research needs for magnetic fusion energy sciences. Report of the Research Needs Workshop (ReNeW). U.S. Department of Energy, Bethesda, p 203, 8–12 June, 2009
10. Hazeltine R et al (2009) Research needs for magnetic fusion energy sciences. Report of the Research Needs Workshop (ReNeW). U.S. Department of Energy, Bethesda, p 213, 8–12 June, 2009
11. Dolan TJ (1982) Fusion research. Pergamon Press, Elmsford, New York, Chapter 12
12. Hooper EB, Bulmer RH, Cohen BI, Hill DN, Holcomb CT, Hudson B, McLean HS, Pearlstein LD, Romero-Talamás CA, Sovinec CR, Stallard BW, Wood RD, Woodruff S (2012) Sustained spheromak physics experiment (SSPX): design and physics results. *Plasma Phys Control Fusion* 54:113001. <https://doi.org/10.1088/0741-3335/54/11/113001> (26pp)
13. Jarboe TR et al (2012) Imposed-dynamo current drive. *Nucl Fusion* 52:083017
14. Taylor JB (1974) Relaxation of toroidal plasma and generation of reverse magnetic fields. *Phys Rev Lett* 33:1139–1141
15. Jarboe TR et al (2012) op.cit
16. Jarboe TR, Nelson BA, Sutherland DA (2015) A mechanism for the dynamo terms to sustain closed-flux current, including helicity balance, by driving current which crosses the magnetic field. *Phys Plasmas* 22:072503
17. Sutherland DA et al (2014) The dynamak: an advanced spheromaks reactor concept with imposed-dynamo current drive and next-generation nuclear power technologies. *Fusion Eng Des* 89:412–425
18. Hugrass WH, Jones IR, McKenna KF, Phillips MGR, Storer RG, Tuczek H (1980) Compact torus configuration generated by a rotating magnetic field: the Rotamak. *Phys Rev Lett* 44:1676–1679
19. Kawamori E, Ono Y (2005) Effect of ion skin depth on relaxation of merging spheromaks to a field-reversed configuration. *Phys Rev Lett* 95(18):085003
20. Tacetti JM et al (2003) FRX-L: a field-reversed configuration plasma injector for magnetized target fusion. *Rev Sci Instrum* 74(10):4314–4323
21. Wurden GA et al (2015) Magneto-inertial fusion. *J Fusion Energy*. Accessed online at file:///C:/Users/Thomas%20Dolan/Downloads/Wurden-JFE-MIF-article-2015%20(1).pdf
22. Slough J et al (2007) The pulsed high density experiment: concept, design, and initial results. *J Fusion Energ* 26:199–205
23. McGrath P (2015) ALPHA: accelerating low-cost plasma heating and assembly. Fusion Power Associates Annual Meeting, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
24. Sinars D (2015) Status of the magnetized liner inertial fusion research program in the United States. Fusion Power Associates Annual Meeting, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
25. Laberge M (n.d.) General fusion. Fusion Power Associates Annual Meeting, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
26. Hsu SC (n.d.) Spherically imploding plasma liners as a standoff magneto-inertial-fusion driver. ARPA-E project slicksheet; <http://arpa-e.energy.gov/?q=slicksheet-project/plasma-liners-fusion>; downloaded on Jan. 19, 2016
27. Hsu SC et al (2012) Spherically imploding plasma liners as a standoff driver for magnetoinertial fusion. *IEEE Trans Plasma Sci* 40:1287
28. Thio YCF et al. (1999) Magnetized target fusion in a spheroidal geometry with Standoff Drivers. In: Current trends in International Fusion Research – Proc. 2nd International Symposium, Ed. E. Panarella (NRC Canada, Ottawa, 1999), p 113

29. Lindemuth IR, Siemon RE (2009) The fundamental parameter space of controlled thermonuclear fusion. *Am J Phys* 77:407
30. Hsu SC (n.d.) Plasma liners and the potential for a standoff magneto-inertial fusion reactor. (see slide 5), talk presented at the ARPA-E Workshop “Drivers for Economical Fusion Technologies,” Oct. 29–30, 2013, Berkeley. <http://arpa-e.energy.gov/?q=document/drivers-fusion-workshop-hsu-presentation>
31. Witherspoon FD et al (2009) A contoured gap coaxial plasma gun with injected plasma armature. *Rev Sci Instrum* 80:083506
32. Ichimura M et al (2006) ICRF experiments and potential formation on the GAMMA 10 tandem mirror. *Plasma Sci Technol* 8(1):87–90
33. Bagryansky PA et al (2015) Overview of ECR plasma heating experiment in the GDT magnetic mirror. *Nuclear Fusion* 55:053009. <https://doi.org/10.1088/0029-5515/55/5/053009>
34. Simonen T (2015) A magnetic mirror strategy to fusion power. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
35. Dolan TJ (1994) Magnetic electrostatic plasma confinement. *Plasma Phys Control Fusion* 36:1539–1593
36. Sato E (1985) Radio-frequency containment (RFC-XX-M). *Nucl Fusion* 25(9):1197–1199
37. Park J et al (2014) High energy electron confinement in a magnetic Cusp configuration, arXiv 1406.0133v1, 2014.06.01. Accessed at <http://arxiv.org/pdf/1406.0133v1.pdf>
38. Dolan TJ (1994) op. cit.
39. Binderbauer M (2015) Progress at Tri Alpha Energy. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. (Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015))
40. Kesner J et al (2006) Innovative confinement concepts workshop. Austin, February 14, Paper BP1.00031
41. Balin DV et al (2011) High precision study of muon catalysed fusion in D2 and H2 gas. *Phys Part Nucl* 42(2):185–214, See also [https://en.wikipedia.org/wiki/Muon-catalyzed\\_fusion](https://en.wikipedia.org/wiki/Muon-catalyzed_fusion)
42. Dolan TJ (1982) Fusion research. Pergamon Press, Elmsford, Chapter 15
43. McCrory RL (2015) Perspectives on inertial fusion energy. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
44. Obenschain S (2015) Fusion development strategies more robust approaches to laser ICF. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
45. Rej D (2015) op. cit.
46. Ebbers C, Caird J, Moses E (2009) Laser focus world 45, No.3, March 1
47. Azuchi H (2015) Laser fusion status in Japan. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
48. Storms E (2014) The explanation of low energy nuclear reactions. Infinite Energy Press, Concord
49. Hazeltine R et al (2009) Research needs for magnetic fusion energy sciences. Report of the Research Needs Workshop (ReNeW), Bethesda, MD, 8–12 June, 2009, U.S. Department of Energy, Thrust 7, pp 285–293
50. Kingham D. (2015) High temperature superconducting magnets and other innovations for fusion. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
51. Minervini JV (2015) High temperature superconducting magnets for fusion. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
52. IFMIF International Team (2004) International Fusion Materials Irradiation Facility (IFMIF) comprehensive design report. International Energy Agency, Paris
53. Zakharov LE et al (2004) Ignited spherical tokamaks. *Fusion Eng Des* 72:149–168
54. Zinkle S (2015) Materials prospects for fusion power plants. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
55. Dolan TJ (2014) Magnetic fusion technology. Springer, London
56. Laudon (2014) op. cit.
57. Kaslow J et al (1994) Criteria for practical fusion power systems: report from the EPRI fusion panel. *J Fusion Energy* 13(2/3):181–183
58. Dolan TJ (1993) Fusion power economy of scale. *Fusion Technol* 24:97–111
59. Terada A et al (2007) Development of hydrogen production technology by thermochemical water splitting IS process, pilot test plan. *J Nucl Sci Technol* 44(3):477–482
60. Freidberg J et al (2009) Research needs for fusion-fission hybrid systems. Report of the Research Needs Workshop (ReNeW. U.S. Department of Energy, Gaithersburg, Maryland, Sept 30 – Oct 2, 2009
61. Kessel CE (2015) Tokamak fusion nuclear science facility. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015)
62. Sorbom BN et al (2015) ARC: a compact, high-field, fusion nuclear science facility and demonstration power plant with demountable magnets. *Fusion Eng Des*. <https://doi.org/10.1016/j.fusengdes.2015.07.008>
63. Sorbom, ibid
64. Hirsch RL (2015) Fusion research: time to face reality. *Fusion Power Associates Annual Meeting*, Washington DC, 16–17 December, 2015. (Available at [http://fire.pppl.gov/fpa\\_annual\\_meet.html#2015](http://fire.pppl.gov/fpa_annual_meet.html#2015))

**The Following Books May Be of General Interest**

- Braams CM, Stott PE (2002) Nuclear Fusion: Half a century of magnetic confinement fusion research. Institute of Physics, Philadelphia
- Chen FF (1984) Introduction to plasma physics and controlled thermonuclear fusion. Plenum, New York
- Chen FF (2011) An indispensable truth – how fusion power can save the planet. Springer, New York

- Dinklage A et al (2005) Plasma physics – confinement, transport, and collective effects. Springer
- Dolan TJ (1982) Fusion research. Pergamon Press, Elmsford
- Dolan TJ (ed) (2014) Magnetic fusion technology. Springer, New York
- Freidberg J (2006) Plasma physics and fusion energy. Cambridge University Press, Cambridge, UK
- Kikuchi M, Lackner K, Tran MQ (eds) (2012) Fusion physics. IAEA, Vienna, 1129 pages



## Nuclear Power Economics

M. R. Deinert

Department of Mechanical Engineering,  
The Colorado School of Mines, Golden  
CO, USA

### Article Outline

- Glossary
- Definition of the Subject
- Introduction
- Present and Future Value
- Present Value Costs
- Lead and Lag Times in Cost Calculations
- Estimating Uncertainties
- Costs and Their Uncertainties
- Discount and Interest Rates
- Cost Comparisons and External Costs
- Future Directions
- Bibliography

### Glossary

- c** Onetime costs [\$]
- C<sub>e</sub>** Cost of electricity [\$]
- E<sub>p</sub>** Electricity production [kW(e)]
- FV** Future value in constant dollars [\$]
- FV'** Future value in nominal dollars [\$]
- HM** Heavy metal refers to the uranium and/or transuranic component of fuel
- i** Inflation rate per year
- kg** Kilogram
- kW** Kilowatt
- kWh** Kilowatt hour
- kWh(e)** Kilowatt hour electric
- mill** \$ 0.001
- MOX** Mixed oxide fuel
- MWh(e)** Megawatt hour electric
- n** Number of years
- p(t)** Distributed costs [\$/year]
- Pu** Plutonium

**PV** Present value [\$]

**r** Nominal yearly rate of return in discrete discounting

**r(x<sub>i</sub>,x<sub>j</sub>)** Correlation coefficient

**SD** Standard deviation

**SF** Spent fuel (also called used nuclear fuel; SF will be used in this work)

**SW** Separative work

**t** Time [year]

**U** Uranium

**UOX** Uranium dioxide fuel

**VHLW** Vitrified high-level waste

**x<sub>i</sub>** Denotes a cost component

**α** Linear cost escalation rate [\$/year<sup>2</sup>]

**β** Linear cost escalation intercept [\$/year]

**δ** Delta function


**ρ** Real discount or interest rate [1/year]

### Definition of the Subject

Financial viability is an important consideration when deciding whether to proceed with any large-scale engineering project. Many studies of nuclear power economics have been undertaken in an attempt to predict its overall costs or competitiveness [1–4]. While these studies tend to differ in their assumptions about construction and operating expenses, they all use similar frameworks for the analysis. In essence, the idea is to predict the total cost of producing electric power over the lifetime of a facility and compare that to the market value of the electricity produced. All other things being equal, the larger the ratio of revenue to cost, the better the project.

### Introduction

Economic assessments of nuclear power tend to be complicated, not just because of the number of components that have to be factored in Fig. 1. The costs of any large project also depend on how it is financed and whether this is done through the issuing of bonds by the entity undertaking the

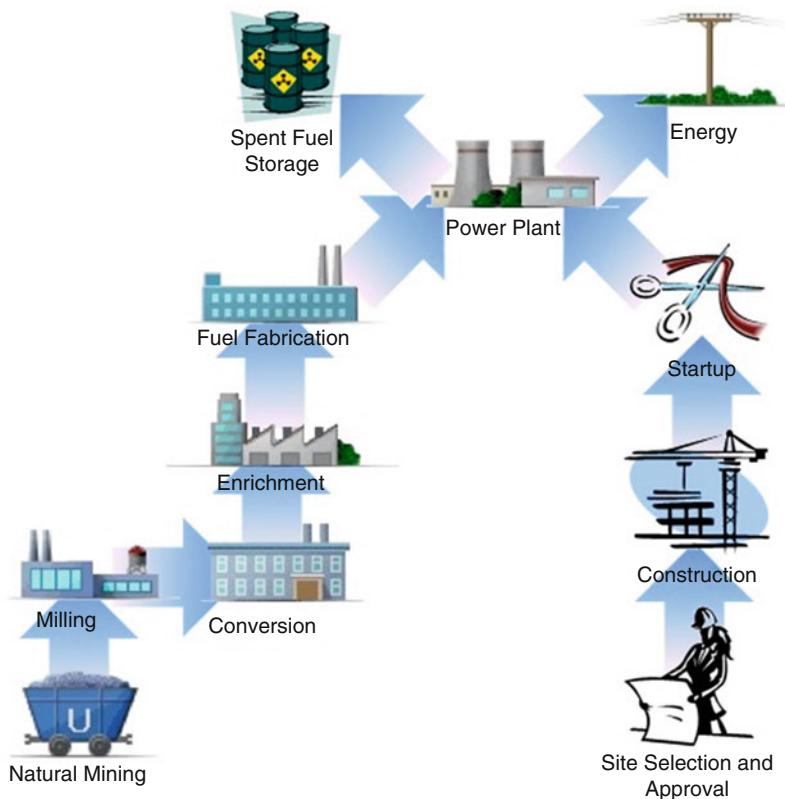

**Nuclear Power Economics, Fig. 1** Components of a nuclear power facility. Construction of a nuclear power facility begins with site selection and approval. Facility construction (reactor and related facilities) comes next, with final start-up typically coming 6–12 years after the start of construction activities. The process of producing uranium fuel typically starts 2 years prior to fuel placement

in a reactor with uranium mining, milling, conversion enrichment, and fuel fabrication. Finally, fuel is transported to the reactor site. The fuel pipeline will function continuously as the reactor operates. Interim on-site storage is common until permanent storage facilities are established (Figure courtesy of Robert Bell, The University of Texas at Austin)

project, borrowed money, allocation of liquid assets, and/or the use of complex financial instruments such as derivatives. Tax rates, both federal and local, can also play an important role. The revenue stream from a nuclear power facility itself depends on whether the markets into which the electricity is fed are regulated or unregulated and whether arrangements exist that involve the sale of electricity at fixed rates to municipalities where the facilities reside. The effect of hard to predict market forces can affect the price of electricity itself.

In addition, nuclear power has some peculiarities that are unique to the industry. Among these is the need to safely store the radioactive waste products that are contained in spent nuclear fuel, for extended periods of time. At present, only the US Waste Isolation Pilot Plant, in Carlsbad, NM, is actively

used for this purpose and then only for transuranics (a very specific class of high-level waste) from the US nuclear weapons program. Because of lack of permanent storage/disposal facility, interim storage facilities exist at civilian nuclear power facilities to handle spent nuclear fuel, but the final disposal costs remain uncertain [2]. In addition, most modern reactors run on a uranium fuel that has been enriched to contain more of the  $^{235}\text{U}$  isotope than is present in natural uranium. (Natural uranium is made up, primarily, of two isotopes,  $^{238}\text{U}$  and  $^{235}\text{U}$  (there is also a very small amount of  $^{234}\text{U}$ ). The  $^{238}\text{U}$  isotopes comprise 99.3% of the uranium atoms and  $^{235}\text{U}$  0.711%. It is the  $^{235}\text{U}$  isotope that readily undergoes fission in the thermal reactors that dominate the civilian nuclear power industry.) Because this isotope can also be used to make nuclear

**Nuclear Power Economics, Table 1** Life cycle cost estimates for electricity produced from nuclear, coal, and gas. The different costs of electricity reflect different life cycle assumptions between the two studies [4, 11]. Costs were adjusted to 2007 dollars

Production	MIT [4] [cents/kWh (e)]	University of Chicago [11] [cents/kWh(e)]
Nuclear	8.4	5.6
Coal	6.2	4.5
Gas	6.5	3.4

weapons, concerted efforts have been undertaken to limit the development of enrichment facilities outside of a few highly industrialized countries [5, 6]. This of course has the effect of forcing nuclear power facilities in less industrialized countries to buy fuel from external sources. Consequently, a common concern is that the fuel supply could be restricted for political reasons [7]. Uncertainties in fuel availability and spent fuel disposal introduce an element of financial risk that is difficult to quantify. Another potential complication comes from uncertainty in whether construction of a nuclear power plant will actually lead to an operational facility. It has in fact happened that facilities have been undertaken whose construction has been halted or which have been completed but closed before becoming commercially operational (The Shoreham Nuclear Power Plant in Long Island, NY, is an example of this. The facility was completed in the mid 1980s but public protest resulted in its closure before it produced commercial power.)

Because of the above factors, and others, it is difficult to make blanket statements about economics of nuclear power, and facilities need to be evaluated on an individual basis. However, several recent studies have taken a look at nuclear power relative to competing technologies (see Table 1, with somewhat mixed results that reflect the different assumptions that went into the analyses). In the current article, we focus largely on a discussion of how the cost of a nuclear power facility would be computed when taking into consideration factors such as its construction, operation, maintenance, and decommissioning (Table 1).

Many of the elements that contribute to the life-cycle cost of a nuclear power plant are common to other types of facilities as well. These include:

*Capital costs* – The costs associated with building the plant and its components.

*O&M* – The cost to operate and maintain facilities.

*Depreciation* – This is a charge recorded against earnings that takes into consideration the lifetime of capital components and the fact that they must be replaced as a part of operating expenses. Depreciation of capital components is typically added to the yearly operations and maintenance costs.

*Interest* – The money paid for the use of borrowed capital or for bonds that have been issued.

*Taxes* – Both federal and local may apply.

*Interest rate* – The annual amount of money paid to a lender or bondholder for the use of capital as a percentage of the amount to be repaid.

*Discount rate* – Effectively the same as the interest rate, see section on discount rates.

Several other factors that affect the cost of nuclear power are particular to the industry. These include:

*Fuel costs* – A peculiarity of nuclear power facilities is that they do not always buy the fuel that is used to run them. Instead, they will often lease it, sometimes from a company that was created explicitly for the purpose of doing this. The reason has to do with accounting practices, and it is sometimes cost-effective for a utility to acquire its fuel in this way [8].

*Nuclear waste fund fee* – This is a fee levied in the USA to cover the federal government's obligation to take possession of spent nuclear fuel and dispose of it [8]. The current rate is \$0.001/kWh of electricity produced, which is paid into the Nuclear Waste Fund (the Nuclear Waste Fund was established under US Code Title 42, Chapter 108, Subchapter III, 10222 (Nuclear Waste Policy Act of 1983) (i.e., the Nuclear Waste Policy Act of 1983)). This monetary unit is so common within the utility industry that it is often given a special unit called a "mill," where 1 mill = \$0.001 [8].

*On-site spent fuel storage cost* – The cost to store spent nuclear fuel on-site.

*Decommissioning costs* – The costs associated with removing the power plant and its

components along with returning the site to an unrestricted use.

By far the dominant cost for a typical nuclear power plant is that of constructing the facility itself [4]. From the perspective of the people who are building a facility, the cash flows that are required for construction depend not only on the facility cost, and the time required to build it, but also on how it is financed. For example, cash flows associated with a facility financed with cash will be different than those for one financed with a loan that is to be paid back over a fixed period of time, or a bond. Once a facility is built, there are operation and maintenance charges to keep it in working order, and these are spread out over the operating life of the facility. Taxes on property begin as soon as land is acquired, and those on the facility itself depend on the location and municipality, but are likely to be yearly as are taxes on income. Depreciation too is spread out over the operating life of a component (discussion of common depreciation methods can be found in [4]), and decommissioning costs are incurred at the end of a facility's life. However, it is typical that money must be set aside for decommission costs well in advance of them.

## Present and Future Value

The variable nature of the cash inflows and outflows complicates the cost analysis for any industrial facility, but especially those with long lifetimes as is typical with nuclear power plants. When undertaking a life cycle cost study, it is also important to recognize that not all money is equivalent. Specifically, a dollar paid or earned today has a different value than does one paid or earned a year from now. The reason for this stems from the fact that money can devalue due to inflation, but also because money held today can be invested and earn interest. Conversely, money received in the future has less value, both because it may have devalued and also because of the inability to invest it until it is received. These concepts are captured in what is often referred to as the “time value of money” [9]. For example, 100 dollars invested today, at a yearly return of 5%, will yield

105 dollars in 1 year. In the parlance of financial engineering, 100 dollars invested this way has a *future value* of 105 dollars, and 105 dollars received in 1 year has a *present value* of 100 dollars. From the perspective of an investor who expects a yearly return of 5%, both are equivalent.

In the absence of inflation, the relationship between *future value* (FV) and *present value* (PV) is simple:

$$FV = PV(1 + \rho)^n \quad (1)$$

Here,  $\rho$  is the yearly real rate of return,  $n$  is the number of years over which the investment takes place (not necessarily an integer), and PV is said to be *compounded* over  $n$  years. Conversely, the *present value* of FV (received in  $n$  years) is given by

$$PV = FV/(1 + \rho)^n \quad (2)$$

An important point that is often overlooked is that  $PV = FV$  when the expected rate of return is zero. This situation can effectively arise in environments where the rate of return is equal to the inflation rate. Equation 2 is an example of *discounting*. When the effects of inflation,  $i$ , are factored into Eqs. 1 and 2, we get:

$$(1 + i)^n FV = PV(1 + \rho)^n(1 + i)^n \quad (3)$$

Letting  $FV' = (1 + i)^n FV$ , we then get:

$$PV = FV'/(1 + \rho)^n(1 + i)^n \quad (4)$$

Here, PV is the present value in constant dollars (i.e., year  $n = 0$  dollars), and  $FV'$  is the future value in nominal dollars (i.e., year  $n$  dollars). Equations 3 and 4 give the present and future values in constant, or inflation adjusted, dollars. The quantity  $\rho = r - i - i_r$  is referred to as the “real rate of return” as opposed to the “nominal rate of return.” It is important when performing an economic analysis to be clear and consistent about whether a real or nominal rate of return is being assumed. From here out we will assume a real rate.

Equations 1, 2, 3, and 4 are discrete representations of simple compounding and discounting, and there are several very good descriptions of how they can be extended to more complex

situations in general [10] and to the nuclear power industry in particular [1, 8]. However, as these references quickly show, applying discrete financial models becomes cumbersome when the system being analyzed is complex. An alternative is to use continuous approximations to Eqs. 3 and 4, which then become:

$$FV = PV e^{\rho t} \quad (5)$$

and

$$PV = FV e^{-\rho t} \quad (6)$$

Here,  $\rho$  is again the real rate of return per unit time  $t$ . With continuous discounting, the relationship between real and nominal discount rates is given by  $r = \rho + i$ .

## Present Value Costs

Nuclear power facilities typically operate over extended time periods, and some in the USA are even in the process of receiving license extensions that will bring their operating life spans to 60 years [11]. As a result, the present value of funds that are used to build, maintain, fuel, or decommission a nuclear facility will depend significantly on when the costs occur. Therefore, the only way to accurately estimate the total cost of a facility is to compute its total *present value* relative to a specific date (usually the date of start-up of the facility). This process is called *levelizing*. In fact, in the USA, all large-scale government projects are required to perform this type of leveled cost analysis [12]. Expenses that take place before the reference date have what is called a *lead time*, as they happen *ahead of* the reference time. Expenses that take place after the reference time have a *lag time*, as they happen behind the reference time [1, 13]. A framework for how to levelize the costs for nuclear power facilities in terms of lead and lag times was given in a study done by the Organization for Economic Cooperation and Development (OECD) in collaboration with the Nuclear Energy Agency (NEA) [1]. Continuous discounting can be used within this framework to levelize all costs, as well as the revenue from electricity production, to

the date at which fresh fuel is loaded into a reactor. Continuous discounting is mathematically simpler than its discrete alternative and often introduces negligible error relative to the large variances for unit cost predictions.

With this approach leveled costs are easily obtained by multiplying the time-dependent costs,  $p(t)$ , by the discounting factor  $e^{-\rho(t)t}$  and integrating the product:

$$PV = \int_{t_1}^{t_2} p(t) e^{-\rho(t)t} dt \quad (7)$$

where  $PV$  [\$] is again the present value of a cash outflow,  $p(t)$  [\$/year],  $\rho(t)$  is the real interest or discount rate [1/year], and  $t$  is the time [year]. It is common in many studies to assume that  $\rho(t)$  is constant, though this is not necessary. The total cost of a system over its life is given by the sum over the  $j$  costs incurred from its construction, operation, and decommissioning:

$$C_e = \sum_j PV_j \quad (8)$$

The leveled cost of electricity can then be calculated using [14]:

$$\int_0^{t_p} LCOE \cdot E_p(t) \cdot e^{-\rho t} \cdot dt = C_e \quad (9)$$


which gives:

$$LCOE = \frac{C_e}{\int_0^{t_p} E_p(t) \cdot e^{-\rho t} \cdot dt} \quad (10)$$

It might seem counter intuitive that a unit of energy, being immutable, should be discounted. However, it is the revenue from the electricity that is being discounted, not the electricity. Another interpretation was given by Hannon [14] who suggested that the energy discount rate reflects a society's desire to convert "a present surplus

**Nuclear Power  
Economics,**

**Fig. 2** Common payment, cost, and revenue distributions. Common distributions for  $p(t)$  applicable to Eq. 7 are shown. In the figure,  $c_0$  stands for onetime cost and  $p(t)$  for distributed cost. The left-hand side of the time axis is assumed to represent  $t = 0$

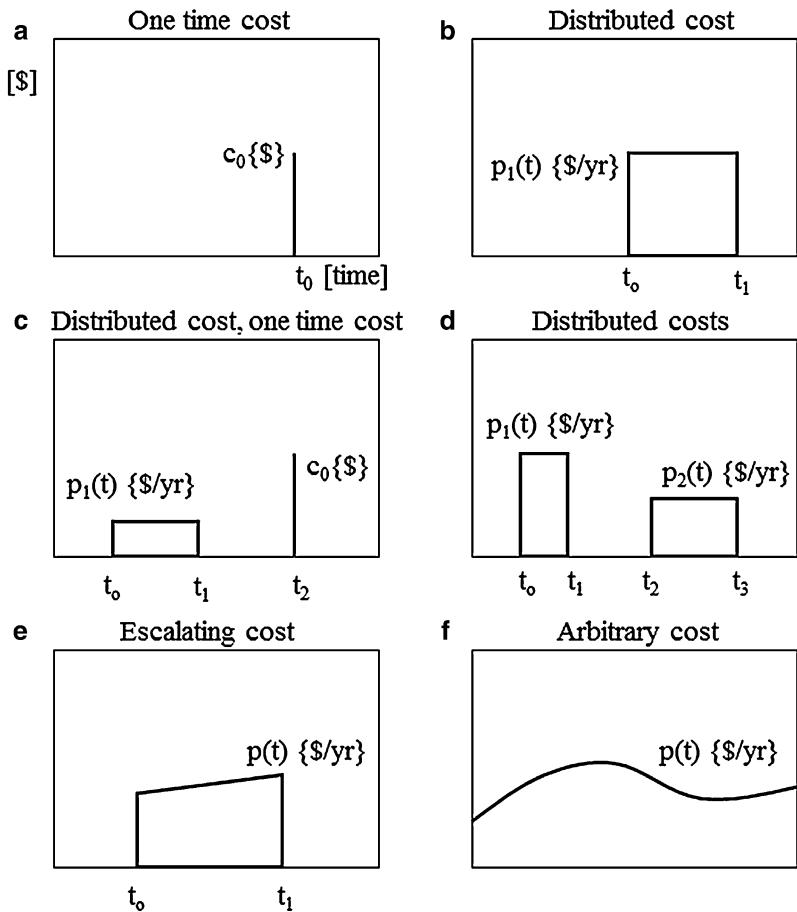

energy into an energy-transformation process so that a greater surplus of energy can be created in the future, rather than consuming the energy now.”

**Examples.** Figure 2 shows several distributions for  $p(t)$  that are relevant to nuclear power systems and out of which any cost or revenue distribution can be built. Equation 7 is easy to apply to each situation when it is done systematically.

- (a) The present value of a onetime cost,  $c_0$ , that occurs at time  $t_0$  is easy to derive using Eq. 7. We start by noting that:

$$\begin{aligned} p &= 0 & 0 \leq t < t_0 \\ p &= c_0 & t = t_0 \\ p &= 0 & t > t_0 \end{aligned} \quad (11)$$

Assuming a constant discount rate, Eq. 7 becomes:

$$PV = \int_0^{t_0} c_0 \delta(t_0) e^{-\rho t} dt \quad (12)$$

where  $\delta(t_0)$  is the delta function (zero everywhere but  $t_0$ ). Equation 12 then just gives:

$$PV = c e^{-\rho t_0} \quad (13)$$

which is just Eq. 6 again.

- (b) The present value of a uniformly distributed cost is only slightly more complicated to calculate. Here:

$$\begin{aligned} p &= 0 & 0 \leq t < t_0 \\ p &= c_1 & t_0 \leq t \leq t_1 \\ p &= 0 & t > t_1 \end{aligned} \quad (14)$$

Equation 7 then becomes:

$$PV = \int_{t_0}^{t_1} c_1 e^{-\rho t} dt \quad (15)$$

which has the simple solution:

$$PV = \frac{c_1 [e^{-\rho t_0} - e^{-\rho t_1}]}{\rho} \quad (16)$$

- (c) The present value of a distributed cost *and* a onetime cost is just the sum of the results given in Eqs. 13 and 16:

$$PV = c_0 e^{-\rho t_2} + \frac{c_1 [e^{-\rho t_0} - e^{-\rho t_1}]}{\rho} \quad (17)$$

It is implicit in Eq. 17 that the discount rate is the same for both distributions; however, this is not always the case and not a necessary restriction.

- (d) The present value of *two* uniformly distributed costs is just obtained using the result in Eq. 15 twice:

$$\begin{aligned} PV &= \frac{c_1 [e^{-\rho t_0} - e^{-\rho t_1}]}{\rho} \\ &\quad + \frac{c_2 [e^{-\rho t_2} - e^{-\rho t_3}]}{\rho} \end{aligned} \quad (18)$$

Here,  $c_1$  and  $c_2$  are the uniform cost rates for the respective distributions. It is again implicit that the discount rate is the same for both distributions, though this is again not a necessary restriction.

- (e) Linearly escalating costs are also easy to deal with. Here, the cost function is given by:

$$\begin{aligned} p &= 0 & 0 \leq t < t_0 \\ p &= \alpha t + \beta & t_0 \leq t \leq t_1 \\ p &= 0 & t > t_1 \end{aligned} \quad (19)$$

where  $\alpha$  has units of [\$/year<sup>2</sup>] and  $b$  [\$/year]. In this case Eq. 7 becomes:

$$PV = \int_{t_0}^{t_1} (\alpha t + \beta) e^{-\rho t} dt \quad (20)$$

Equation 20 has the simple solution:

$$\begin{aligned} PV &= \alpha \left( \frac{t}{\rho} - \frac{1}{\rho^2} \right) (e^{-\rho t_1} - e^{-\rho t_0}) \\ &\quad + \frac{\beta}{\rho} (e^{-\rho t_1} - e^{-\rho t_0}) \end{aligned} \quad (21)$$

In general, Eq. 7 is integrable as long as  $p(t)$  is known. While the formulas above may seem at first glance to be complicated, they are far simpler and more compact than their discrete discounting alternatives.

## Lead and Lag Times in Cost Calculations


A critical factor in using the above equations, and when performing economic analyses in general, is to know when costs occur relative to a specified date. As already pointed out, this is captured in what are referred to as “lead” and “lag” times, and the reference time is typically taken to be the date of the facilities’ first operation. Components that affect the cost of nuclear power are shown schematically in Fig. 1. In very general terms, the costs associated with nuclear power production can be broken into *capital costs* (which include the construction of physical infrastructure such as the reactor plant, spent fuel storage facilities, facilities involved in producing nuclear fuel, etc.), *operating costs* (which include operations and maintenance costs, taxes, fuel costs, as well as spent nuclear fuel disposal costs), and *decommission costs* (which include dismantling of physical infrastructure and site remediation).

*Power facility construction.* Historically, this has been by far the dominant factor affecting the cost of nuclear power [3, 4]. The lead time is highly variable (Fig. 3), but 8 years or more is typical for modern large-scale facilities. How this cost is distributed depends on how a facility is financed (Fig. 2f).

*Power facility O&M.* Operations and maintenance costs for the facilities are usually computed on a yearly basis and can be approximated with a uniform distribution as in Fig. 1b. Large capital outlays for replacement of major components can often be assumed to be onetime costs as in Fig. 2a [3, 4].

### Nuclear Power Economics,

**Fig. 3** Reactors under construction and build times. The total number of nuclear power facilities under construction and the time for facility completion (from start of construction to date of the first operation) are shown. The data are from the International Atomic Energy Agency Data Center

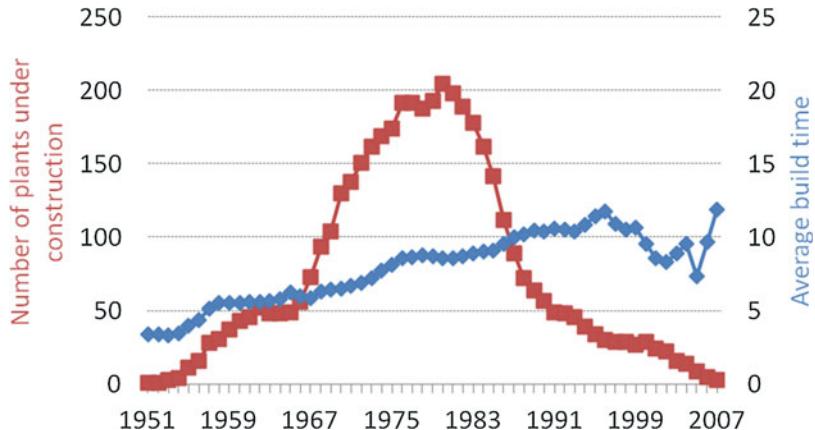

*Cooling water.* Availability of cooling water has become a potential constraint for nuclear power plants in some locations. A facility's water use depends on its efficiency, as well as how it is cooled (open loop, closed loop, evaporation pond, etc.). A typical range of water withdrawals for modern Rankine cycle power plants is 2000–4000 liters/MWh(e), for closed-loop systems, and 100,000–220,000 liters/MWh(e) for open-loop systems. Water consumption rates are considerably smaller (Water consumption describes water that is taken from a source (ground or surface water), used, and not returned to that source. A cooling tower consumes water through evaporation, for example. Water withdrawal describes water that is taken from a source, used, and then returned to that source.) Cost estimates for water vary widely, but \$25 per 1000 m<sup>3</sup> has been reported and can be based on consumption, or withdrawal, rates and will depend on local water markets and regulatory structures [15].

*Uranium mining.* The extraction of uranium ore typically occurs 2 years prior to its use as fuel in a reactor. Uranium is mined as U<sub>3</sub>O<sub>8</sub> and is typically sold in this form, modeled as a one-time cost that would recur with the refueling schedule of a reactor.

*Uranium conversion.* The U<sub>3</sub>O<sub>8</sub> requires conversion into UF<sub>6</sub> if the uranium is to be enriched to a higher<sup>235</sup>U content that occurs in natural uranium. Uranium must be enriched for use as fuel in most commercial light-water reactors worldwide [16]. The lead time for conversion is typically 1.5 years, modeled as a onetime cost that would recur with the refueling schedule of the reactor.

*Enrichment.* Enrichment typically occurs 1 year before fuel placement in the reactor, modeled as a onetime cost that would recur with the refueling schedule of the reactor.


*Fuel fabrication.* Most reactors worldwide use uranium dioxide fuel that is surrounded by a protective “cladding” and configured in assemblies that can be placed into a reactor. Fabrication usually takes place 0.5 years before fuel emplacement, modeled as a onetime cost that would recur with the refueling schedule of the reactor.

*Leasing or buying nuclear fuel.* Not all nuclear utilities buy their fuel. Instead, many lease it, sometimes from a company or trust that has been created specifically for the purpose of doing this. The lease company covers all expenses for the fuel (mining, conversion, enrichment, fuel manufacture transportation, and storage) until it is on-site to be loaded into the core. During this time, the utility pays nothing. Once the fuel begins producing power, the utility will pay the lease company a prorated amount that covers the lease company’s expenses plus some degree of profit. In some situations this arrangement is financially advantageous though this depends on the accounting practices of the utility and possible constraints from regulatory agencies. Typically, the total cost obligation is met when the fuel has been used to completion. The cost function for the leased fuel can be linearly decreasing (Fig. 2e) or of some other shapes [8].

*Interim spent fuel storage.* When the fuel reaches the end of its useful life, it is discharged from the core and is stored on-site either under water or in air-cooled vaults until it is removed for

### Nuclear Power Economics,

**Fig. 4** Recycle-based fuel cycle. A schematic representation of a reprocessing-based fuel cycle is shown. Instead of spent fuel going to storage, it is sent to reprocessing, and the plutonium and possibly other *transuranic* elements (such as neptunium, americium, and curium) are recycled to make a new fuel. The recycled transuramics would not, however, require enrichment. The high-level waste is comprised of by-products of reprocessing (Figure courtesy of Robert Bell, The University of Texas at Austin)

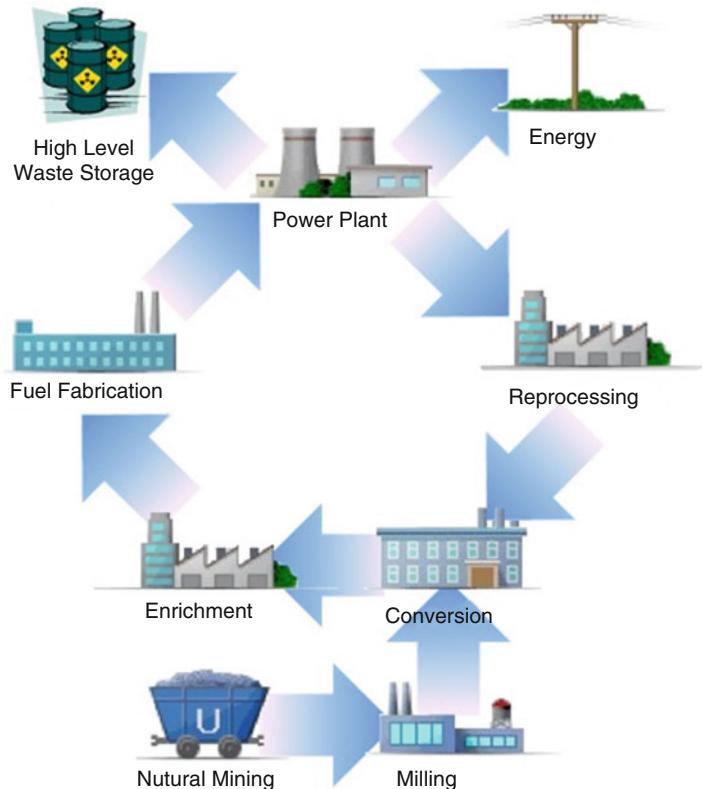

final disposal or reprocessing. The residence time in interim storage is highly variable, and the spent fuel from some US reactors has remained in this type of on-site storage for decades. Spent fuel storage is typically calculated per unit time and per unit mass, and it is therefore a linearly increasing cost (Fig. 2e) at most reactor facilities [3, 4].

*Spent fuel recycle.* Some countries, notably France, reprocess spent nuclear fuel and use the plutonium that it contains to manufacture what is called *mixed oxide fuel* (MOX – a mixture of plutonium oxide and uranium oxide) that can be used in addition to standard enriched uranium fuel (Fig. 4). In countries where this is done, spent fuel will cool in storage pools for 6–12 years before being sent to reprocessing. The distribution of this cost depends on whether funds are continuously set aside to meet this obligation or whether it is considered to be a series of onetime costs that occur as spent fuel is sent to recycle.

*Spent fuel disposal.* Most countries with domestic nuclear power assume that long-lived nuclear waste products will go into some form

of geological storage. At present, only the US Waste Isolation Pilot Plant, in Carlsbad, NM, is actively used for this purpose and then only on a scale sufficient to handle transuranic waste from past US nuclear weapons efforts. As a result, the actual time at which spent fuel will leave interim storage for final disposal is unclear at most power plants (the final disposal of high-level waste from reprocessing is similarly unclear in countries where this is undertaken). Many reactor facilities whose spent fuel pools are nearing capacity have begun to transition fuel assemblies to on-site dry storage. In the USA, the Nuclear Waste Policy Act of 1987 gives responsibility for the disposal of spent nuclear fuel to the federal government [17]. In order to cover the associated expenses, the US nuclear power facilities pay 1 mill/kWh(e) into the Nuclear Waste Fund for the purpose of covering the final disposal costs [17, 18]. The cost is incurred quarterly and, as a result, constitutes a series of recurrent onetime costs for nuclear utilities in the USA (i.e., Fig. 2a).

## Estimating Uncertainties

Equation 8 has the convenient feature of being linear with respect to the total cost of each fuel cycle component. As a result,  $C_e$  can be scaled to account for changes in unit cost, provided that time points for the integral in Eq. 7 remain fixed. Uncertainty in unit costs causes a corresponding uncertainty in the prediction of  $C_e$ . These effects can be accounted for by using the well-known formula for error propagation where the variance of  $C_e(x_i)$  is given by:

$$\begin{aligned} \text{var}(C_e) &= \sum_i \left( \frac{\partial C_e}{\partial x_i} \right)^2 \text{var}(x_i) \\ &+ 2 \sum_i \sum_{j \neq i} \left( \frac{\partial C_e}{\partial x_i} \right) \left( \frac{\partial C_e}{\partial x_j} \right) \sqrt{\text{var}(x_i)} \\ &\times \sqrt{\text{var}(x_j)} r(x_i, x_j) \end{aligned} \quad (22)$$

Here, the inputs,  $x_i$ , represent the  $PV_i$  in Eq. 8 with respective variances  $\text{var}(x_i)$ . The term  $r(x_i, x_j)$  is the correlation coefficient, 1 for fully correlated,  $-1$  for anticorrelated, and 0 for uncorrelated. The maximum and minimum variances are given by assuming that  $r = 1, -1$  respectively with uncorrelated,  $r = 0$ , typically giving a variance that falls into the midrange. Equation 22 is much simplified in the case of  $r = 0$ . The electricity cost is assumed to have a Gaussian distribution which can be justified by the central limit theorem [19], with the standard deviation of  $E_c$  being the square root of the variance. It should also be pointed out that Eq. 22 can be used for cost sensitivity studies.

## Costs and Their Uncertainties

Numerous studies have investigated the economics of nuclear power, notably the series of reports produced between 1987 and 2002 by the Organization for Economic Cooperation and Development and the Nuclear Energy Agency (OECD/NEA) [1, 13, 20–22] along with recent reports from groups at MIT and the University of Chicago. The 1994 OECD/NEA study [1], in

particular, developed a framework for assessing the economics of nuclear fuel cycles. The study derived the expected levelized cost of a fuel cycle over the lifetime of a reactor, including transients (at start-up and shutdown). The fuel cycle was divided into front-end components (uranium ore requirements, conversion to  $UF_6$ , enrichment, fuel fabrication, and transport) and back-end components (spent fuel transport, reprocessing, direct disposal, or high-level waste (HLW) vitrification and disposal). Cash outflows to meet these obligations were discounted to a reference date using a discrete model as was revenue from electricity, and the subsequent expected cost in  $"/\text{kWh}(e)$  was calculated.

The 1994 study [1] gave the most comprehensive cost estimates available at the time. Data were obtained from the literature and through a survey of OECD member states and gave reliable results where industries were well established. Because no actual disposal facility existed for SF or vitrified HLW, these estimates were considered to be particularly uncertain [1]. The cost data were updated in the 2002 OECD/NEA study and estimated standard deviations were added [13]. Because no permanent repository is in operation, it is difficult to estimate what it would cost. However, the experience and cost studies at Yucca Mountain in the USA provide some indication. Here, the cost estimates for the repository rose in constant dollars from \$ 32.2 bn to \$ 57.5 bn between 1989 and 2001 (Fig. 4) [18, 23–26], for a repository that was designed to hold 86,000 metric tons of spent nuclear fuel. Representative costs, lead/lag times, and standard deviations for nuclear power systems are given in Table 2.

## Discount and Interest Rates

The values of  $\rho$  that are used in discounting will have a significant effect on an economic analysis. As a result, discount rates have been widely discussed in the context of decision theory and in cost-benefit analyses of things that can have intergenerational effects such as environmental damage, resource allocation, or nuclear waste disposal. For economic comparisons, or cost studies, discounting accounts for the fact that payments made could instead have been invested and earned a rate of return.

**Nuclear Power Economics, Table 2** Unit costs of various components of the fuel cycle for a light-water reactor with and without spent fuel recycle. For the variables listed *U* denotes uranium, *Pu* plutonium, *HM* heavy metal, *SD* standard deviation, *SW* separative work, *% loss* the percentage of material lost during a particular fuel cycle step, *SF* spent fuel, *MOX* mixed oxide fuel, *VHLW* vitrified high-level waste, and *lead/lag* refers to the time at which a particular cost is incurred relative to loading of a fuel batch into the reactor. The lead time for construction is relative to

Fuel cycle component	Basis	\$	SD (%)	% loss	Lead/lag (years)	Ref.
Reactor facility construction	\$/kW (e) installed	3560	15		-12 -> -8	[11], [13], NA, see text
Reactor operations and maintenance	\$/kW installed /year	142	15			[13], same as capital costs, NA, NA
Uranium mining and milling	\$/kgU	30	33		-2.0	[13], [13], NA, [1]
$U_3O_8$ to $UF_6$ conversion	\$/kgU	5	40	0.5	-1.5	[13], [13], [29], [1]
Enrichment	\$/kgSW	80	37.5	0.5	-1.0	[13], [13], [29], [1]
UOX fabrication	\$/kgU	250	20	0.5	-0.5	[13], [13], [29], [1]
On-site interim SF <sub>UOX</sub> storage	\$/kgHM/year	30	5		+5	[13], [13], NA, NA
SF <sub>UOX</sub> conditioning and disposal	\$/kgHM	668	24		+40	[13], [13], NA, [1]
<b>Spent fuel recycle</b>						
SF <sub>UOX</sub> transport to reprocessing	\$/kgHM	50	20		+10.5	[13], [13], NA, see caption
SF <sub>UOX</sub> reprocessing	\$/kgHM	800	12.5	2.0	+11	[13], [13], [13], see caption
MOX fabrication	\$/kgHM	1100	18	1.0	+12.5	[13], [13], [1], see caption
On-site interim SF <sub>MOX</sub> storage	\$/kgHM/year	30	5		+17.5	[13], [13], NA, NA
SF <sub>MOX</sub> transport to disposal site	\$/kgHM/	50	20		+22.5	[13], [13], NA, see caption
SF <sub>MOX</sub> conditioning and disposal	\$/kgHM	668	24		+57.5	Same as UOX, [13], NA, see caption
VHLW conditioning and disposal	\$/kgHM	288	12.5		+56	[13], [13], NA, see caption

Alternately, future payments could be met by setting aside a smaller amount of money today, and letting compound interest makes up the difference. In both cases, the appropriate discount rate would be one that reflects what one could obtain by investing the funds in bonds, stocks, or other investments and receiving the market rate of return (Fig. 5).

There is no single discount rate that is accepted for near-term analysis of utilities, nuclear power included, but values between 5% and 10% (in real terms) are common and reflect the historical range of return by the US utility sector [4]. However, there are problems in using this discount rate for projects that run on intergenerational time scales. The

first start-up of the reactor. References are given for each data column in an order from left to right; NA designates “not applicable.” All costs are adjusted to 2000 dollars. The standard deviation for the reactor facility construction cost was calculated from the cost data for seven reactors whose capital costs were given in [3]. It should be noted that many of the above costs are highly speculative, and other estimates are given in other studies; see, for example, [30]. Lag times for


dominant concerns are well summarized in several different studies [27, 28], but the main point is that a discount rate that is this high would suggest that money so invested would eventually grow to be larger than the domestic product of any country where the investment was made. As a result, some economists suggest that discount rates appropriate for intergenerational projects would have to tend toward a country’s real rate of GDP growth and can be assumed to be around 1–2% [27, 28].

The question of which discount rate to use in evaluating nuclear power facilities is far from academic. Cost studies are often used to compare different systems or management strategies. A high

### Nuclear Power

#### Economics, Fig. 5 Yucca

Mountain life cycle cost over time. The total system life cycle cost (TSLCC) predicted for Yucca Mountain is shown over the period between 1985 and 2001 in year 2000 dollars (inflation adjustment done using GDP deflator). In that time, the predicted cost has nearly doubled from \$32.2 to 57.5 billion in constant dollars, with the repository intended to hold 86,000 metric tons of spent fuel heavy metal [18, 23–26]. In this context, “heavy metal” refers only to the mass of uranium and transuramics within the spent uranium dioxide fuel

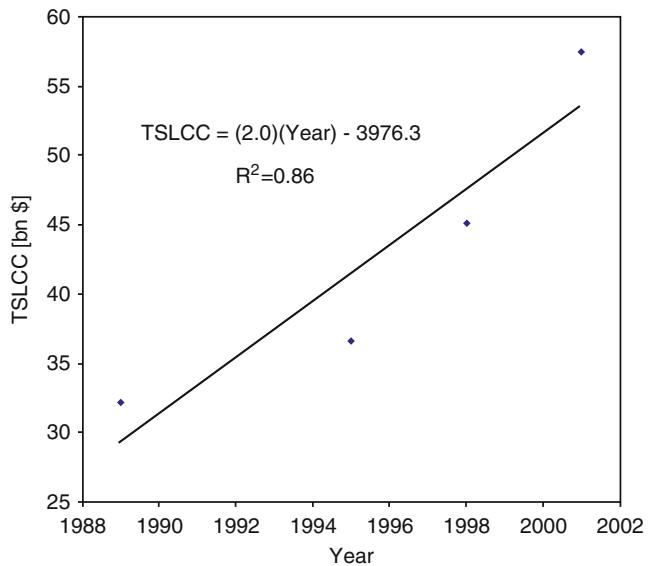

discount rate can make the present value of far-off costs appear negligible. In other words, using a high discount rate in a cost-benefit study of a politically divisive issue, such as spent fuel disposal, can have the perverse effect of suggesting that it would always be cheaper to delay action. In fact, this type of argument has been advanced in the USA to advocate for pushing off the development of reprocessing or permanent geological disposal.

### Cost Comparisons and External Costs

Using Eq. 8, or similar, one can calculate the cost associated with the generating electricity by various means. Results of such studies are shown in Tables 1 and 2. However, making true comparisons for the “cost” of generating electricity between different types of power systems can be complicated by the effect of externalities that are often difficult to capture in an economic analysis. Factoring in the true cost of carbon dioxide emissions would be an example. Carbon dioxide emissions from fossil-fueled plants are obvious. They are not so obvious for nuclear, wind, or solar power facilities. While nuclear power facilities have no direct emissions, there are carbon signatures associated with the materials out of which they are made, the processes


involved in facility construction, as well as for operations, maintenance, and decommissioning. The same is true for wind and solar power systems, where one draws the boundary for an analysis (i.e., does one include the carbon dioxide needed to produce, say, the machinery for the processing of facility materials) can have a significant effect on the total carbon signature that is associated with a specific power source and, through this, its total potential cost. Because of the complexity of handling externalities (and the cost of carbon emissions is only one example), how best to do this remains an area of active research and debate.

### Future Directions

Electricity demand varies with location, time of day, and time of year. The minimum demand at any point within a year is referred to as *base load*. The utility industry typically gauges demand requirements with what are called *load demand* and *load duration curves* (Figs. 6 and 7). Commercial nuclear power plants have historically been designed to operate at their maximum licensed power. The fraction of time that these facilities are in operation has also increased steadily over the years, to an industry average of


### Nuclear Power Economics,

**Fig. 6** Electricity load curve and generation source. The figure shows the variation in electricity demand over a 24 h period and the sources used to meet that demand. The data are from the Electricity Reliability Council of Texas, for July 13, 2009 (Figure courtesy of Stuart Cohen, The University of Texas at Austin)

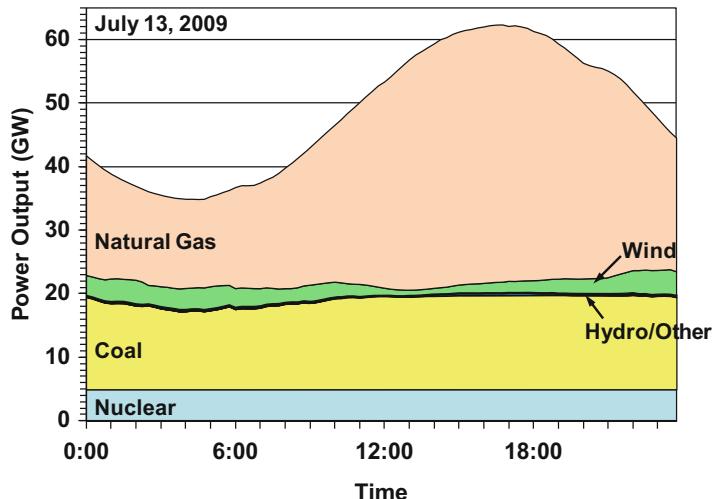

### Nuclear Power

**Economics, Fig. 7** Load duration curve. The figure shows the number of hours during 2009 during which a given electric demand needed to be met. The base load for the year is shown at the far right. The data are from the Electricity Reliability Council of Texas, for July 13, 2009 (Figure courtesy of Stuart Cohen, The University of Texas at Austin)

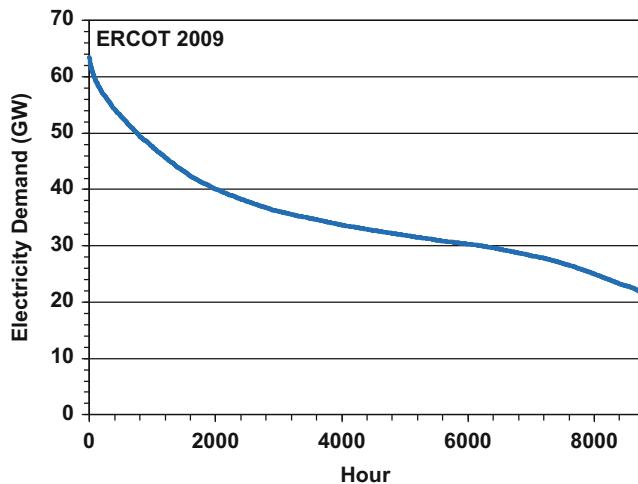

around 90%. As a result, commercial nuclear power is used to meet base load requirements, along with coal, hydroelectric, and to a smaller extent wind. Additional load requirements are met with smaller-scale facilities (called *peaking power plants*) that typically run on oil or gas.

Because of perceived economies of scale, nuclear power plants have been built on an increasingly large scale (The first-generation light-water reactors were designed for power outputs of 300–600 MWe. In the USA today, most nuclear power facilities are rated for 800–1000 MWe, but it is expected that the next generation of reactor will produce between 1100 and 1400 MWe). Recently though, this

idea has begun to be revisited, and there are calls for the development of smaller-scale facilities with peak power outputs of as little as a few tens of megawatts. Such plants, known as *small modular reactors*, could be used to meet local base load requirements, or as peaking plants. A shift in the industry to include smaller-scale facilities could have dramatic effects on the economics of nuclear power. Smaller facilities would likely have shorter build times and far lower capital costs. Many utilities also charge different rates depending on when electricity is used, and this too would affect the economics of nuclear package plants that might be used to meet peak load requirements.

**Acknowledgments** Special thanks to Andrew Osborne, Brady Stoll, and Geoff Recktenwald for editorial comments. Thanks to Eric Bickel and Michael Webber for useful discussions and to Nick Tsoulfanidis for editorial comments and for acting as editor for this series.

## Bibliography

1. OECD/NEA (1994) The economics of the nuclear fuel cycle. OECD/NEA, Paris, Technical report
2. Bunn M, Fetter S, Holdren JP, van der Zwaan B (2003) The economics of reprocessing vs. direct disposal of nuclear fuel. Harvard University, Boston, Technical report DE-FG26-99FT4028
3. Anolabehere S, Deutch J, Driscoll J, Holdren PE, Joskow PL, Lester RK, Moniz EJ, Todreas NE, Beckjord ES (2003) The future of nuclear power. MIT, Boston, Technical report
4. Tolley GS, Jones DW (2004) The economic future of nuclear power. University of Chicago, Chicago, Technical report
5. Garwin RL, Charpak G (2002) Megawatts and Megatons – the future of nuclear power and nuclear weapons. The University of Chicago Press, Chicago
6. Goldschmidt P (2010) Multilateral nuclear fuel supply guarantees & spent fuel management: what are the priorities? *Daedalus* 139:7–19
7. Stern R (2007) The Iranian petroleum crisis and United States national security. *Proc Natl Acad Sci U S A* 104:377–382
8. Cochran R, Tsoulfanidis N (1990) The nuclear fuel cycle: analysis and management, 1st edn. American Nuclear Society, La grange Park
9. Brealey R, Myers S, Allen F (2002) Principles of corporate finance, 9th edn. McGraw-Hill Higher Education, London
10. Schneider EA, Deinert MR, Cady B (2009) The cost impact of delaying the US spent nuclear fuel reprocessing facility. *Energy Econ* 31:627–634
11. Deutch J, Forsberg C, Kadak A, Kazimi M, Moniz E, Parsons J (2009) Update of the MIT 2003 future of nuclear power. MIT, Cambridge, MA
12. Executive Order #12866: Regulatory Planning and Review (1993)
13. OECD/NEA (2002) Accelerator driven systems and fast burner reactors in advanced nuclear fuel cycles. OECD/NEA, Paris, Technical report
14. Hannon B (1982) Energy discounting. *Technol Forecast Soc Chang* 21:281–300
15. Stillwell AS, King CW, Webber ME, Duncan IJ, Hardberger A (2010) The energy-water nexus in Texas. *Ecol Soci* 16(1):2. <http://www.ecologyandsociety.org/vol16/iss1/art2/>
16. Benedict M, Pigford TH, Levi HW (1981) Nuclear chemical engineering, 2nd edn. McGraw-Hill, New York
17. Nuclear Waste Policy Amendments Act (1987)
18. DOE (2002) Nuclear waste fund fee adequacy: an assessment. DOE/Office of Civilian Radioactive Waste Management, Washington, DC, DEO/RW-0534
19. Shapiro SS (1990) Selection, fitting, and testing statistical models. In: Wadsworth HW (ed) Handbook for statistical methods for scientists and engineers. McGraw Hill, New York
20. OECD/NEA (1987) Nuclear energy and its fuel cycle—prospects to 2025. OECD/NEA, Paris, Technical report
21. OECD/NEA (1993) The cost of high-level waste disposal in geological repositories – an analysis of factors affecting cost estimates. OECD/NEA, Paris
22. OECD/NEA (1996) Future financial liabilities of nuclear activities. OECD/NEA, Paris, Technical report
23. GAO (1990) Changes needed in DOE user-fee assessments to avoid funding shortfall. United States General Accounting Office, Washington, DC, Technical report RCED-90-65
24. DOE (1995) Analysis of the total system life cycle cost of the civilian radioactive waste management program. DOE/Office of the Civilian Radioactive Waste Management Program, Washington, DC, Technical report DOE/RW 0479
25. DOE (1998) Analysis of the total system life cycle cost for the civil radioactive waste management program. DOE/Office of Civilian Radioactive Waste Management Program, Washington, DC, Technical report DOE/RW-0510
26. DOE (2001) Analysis of the total system life cycle cost of the civilian radioactive waste management program. DOE/Office of Civilian Radioactive Waste Management, Washington, DC, Technical report DOE/RW-0533
27. Rabl A (1996) Discounting of long term costs: what would future generations prefer us to do? *Ecol Econ* 17:137–145
28. Arrow K (1999) Discounting, morality, and gaming. In: Portney PR, Weyant JP (eds) Discounting and intergenerational equity. RFF Press, Washington, DC
29. Rasmussen N, Burke T, Choppin G, Croff G, Garrick J, Grunder H, Hebel L, Hunter T, Kazimi M, Kintner E et al (1996) Nuclear wastes: technologies for separations and transmutation. National Academy Press, Washington, DC
30. Shropshire D, Williams K, Boore W, Smith J, Dixon B, Dunzik-Gougar M, Adams R, Gombert D (2007) Advanced fuel cycle cost basis. US DOE, The Idaho National Laboratory, Washington, DC, INL/EXT-07-12107



## Radiation Sources

Richard E. Faw and J. Kenneth Shultz  
Department of Mechanical and Nuclear  
Engineering, Kansas State University, Manhattan,  
KS, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
Radiation-Producing Reactions  
Radioactivity  
Sources of Neutrons  
Sources of Photons  
Sources of X-rays  
Cosmic Rays, Solar Radiation, and Trapped  
    Radiation Belts  
Radiation Sources Used in Human Activities  
Future Directions  
Bibliography

### Glossary

**Absorbed dose** A general term for the energy transferred from radiation to matter. Specifically, the absorbed dose is the amount of energy absorbed in a unit mass of matter from ionizing radiation. Units are the gray (Gy) and rad, respectively, equivalent to 1 J/kg and 100 ergs/g. Thus, 1 Gy equals 100 rad.

**Activity** The decay rate (expected number of nuclear transformations per unit time) in a radioactive sample. Units are the becquerel (Bq) equal to one decay per second, and the curie (Ci) equal to  $3.7 \times 10^{10}$  decays per second.

Richard E. Faw: deceased.

**Alpha particle** The nucleus of a  ${}^4\text{He}$  atom, composed of two neutrons and two protons and denoted by  $\alpha$ .

**Committed dose** The dose equivalent accumulated over the rest of a person's life following the ingestion or inhalation of radioactive material into the body.

**Coulomb force** The electrostatic force between two charges. It is proportional to the product of the charges and inversely proportional to the square of the distance between them. The force is attractive if the charges are of opposite sign, and repulsive if of like sign.

**Dose equivalent** A measure of the health risk associated with the absorption of radiation locally in the human body. It equals the local absorbed dose multiplied by a *quality factor* to correct for the relative biological effect associated with different radiations. Units are the sievert (Sv) or rem.

**Effective dose** An overall measure of the risk of cancer or hereditary illness associated with radiation exposure. It is a weighted average dose to multiple organs and tissues of the body, with weighting over both quality factor and the relative sensitivity of each organ or tissue. Units are the sievert (Sv) or rem for the dose in grays and rads, respectively.

**Hadron** A subatomic particle that reacts via strong nuclear forces. Hadrons include mesons (e.g., pions and kaons) and baryons (e.g., protons and neutrons). Hadrons do not include bosons (e.g., photons) and leptons (e.g., electrons, muons, and neutrinos).

**Meson** A subatomic particle, a subclass of hadrons, composed of an even number of other subatomic particles called quarks. Most important are the pi meson (pion) and K meson (kaon).

**Nuclide** A term used to refer to a particular atom or nucleus with a specific neutron number  $N$  and atomic (proton) number  $Z$ . The nuclide with  $N$  neutrons and  $Z$  protons and electrons is denoted as  ${}_Z^AX$  where  $X$  is the chemical symbol (determined by  $Z$ ) and  $A = Z + N$  is the mass

number. If the nuclide is radioactive, it is called a *radionuclide*.

**Photon** A quantum of electromagnetic radiation with energy  $E = h\nu$  where  $h$  is Planck's constant and  $\nu$  is the frequency. Photons produced by changes in the structure of a nucleus are called *gamma photons*, and those produced by atomic electron rearrangement are called *x-rays*.

**Positron** The antiparticle of the electron with the same mass  $m_e$  but with a positive charge equal in magnitude to the negative charge of the electron. A positron, denoted by  $\beta^+$ , quickly after its formation annihilates with an ambient electron converting the two electron masses into two photons each with energy  $m_e c^2 = 0.511 \text{ MeV}$ .

## Definition of the Subject

This entry treats sources of only ionizing radiation, such as electrons, protons, high-energy photons, neutrons, and similar radiations that have the ability to cause ionization, either directly or indirectly, and, thus, to induce chemical and physical changes along their passages through materials. Not included are sources of relatively lower frequency electromagnetic radiation from radio waves to ultraviolet light.

Characterization of sources requires characterization of radiations as well. Many sources encountered are radioactive isotopes of elements in the periodic table. These sources, as they decay radioactively, emit ionizing radiation. Some of the ionizing radiation is in the form of alpha particles, gamma rays, and x-rays, all characteristically monoenergetic in nature. Some is in the form of beta particles, distributed in energy but with well-defined maxima. Other sources are not directly associated with radioisotopes. X-ray machines and accelerators release ionizing radiation generally distributed in energy but with some monoenergetic components. The radiation belts surrounding the earth are composed of electrons and protons distributed in energy. Solar radiation and galactic cosmic rays are ionizing radiations widely distributed in type and energy. The nuclear fission process results in prompt

emission of gamma rays and neutrons very widely distributed in energy. Fission also yields an extremely wide range of *fission products*, which radioactively decay over long periods of time.

Characterization of sources, to be meaningful, also begs discussion of radiation doses and radiation effects. There are acute effects accompanying high exposures. There are also known carcinogenic effects of human exposure and suspected mutational and hereditary effects. Therefore, a portion of this entry is devoted to examination of health effects associated with exposure to ionizing radiation.

This entry is divided into two parts. In the first several sections, the quantitative technical characterization of physical processes that produce ionizing radiation are reviewed. In latter sections, a qualitative examination is given of the various types of radiation sources encountered in the environment, workplace, laboratory, or medical facility.

## Introduction

Throughout our lives, ionizing radiation is ever present, though rarely sensed. Radioactive sources are present in the food we eat, in the water we drink, and in the air we breathe. Most of these sources have but brief sojourns in our bodies, but some are taken up in bone and permanently retained. These sources, isotopes of elements in the periodic table, decay radioactively, emitting ionizing radiation most often in the form of gamma and x-rays, alpha particles, beta particles, and electrons. The ionization taking place in the body accounts for biological effects, good and bad.

Radiation also reaches us from sources outside our bodies. Radioactivity is present in our soils and minerals, and in our construction materials. Electromagnetic radiation of all wavelengths, including radio waves, microwaves, radar, and light, of both man-made and natural origins, constantly, bombard us. Photons are far more prevalent in number than atoms in our universe; for every nucleon there are about  $10^9$  photons. Cosmic rays and the subatomic debris they create

during interactions in the atmosphere also impinge on us. Neutrinos from fusion reactions in our sun reach us in such numbers that tens of billions per second pass through every square centimeter of our skin. Most of this radiation, for example, neutrinos and radio waves, fortunately, passes harmlessly through us. Other radiation such as light and longer wavelength electromagnetic radiation usually interacts harmlessly with our tissues. However, shorter wavelength electromagnetic radiation, for example, ultraviolet light, x-rays and gamma rays, and charged particles produced by nuclear reactions can cause various degrees of damage to our cells.

The types and sources of radiation just described may be naturally occurring, may be a legacy of the era of nuclear weapons testing, or may be a result of human enterprise, for example, uranium in coal ash, radium in mine tailings, medical wastes, and fission or activation products in wastes from nuclear power production. All vary with latitude, longitude, and altitude – even on a small scale.

There are also population groups especially affected, but in different ways, by exposure to ionizing radiation from many sources. First among these in importance are patients and providers of medical radiation exposures. In the USA, as of 2006, collective effective doses to patients accruing from medical exposure, about 900,000 person-Sv annually, amount to almost half the total for the entire population. Computed tomography and nuclear medicine procedures dominate the exposure, with fluoroscopy and radiology accounting for about 230,000 person-Sv annual effective dose. Interventional fluoroscopy, while of great value to the patient, contributes in a major way to provider dose. Brachytherapy and beam therapy using photons, electrons, and protons lead to high therapeutic radiation exposures to patients, of course. Modern beam therapy utilizes exquisite beam shielding techniques to minimize doses to off-target patient tissues. Of all occupational groups, medical workers are greatest in number and accrue the highest collective doses, namely, 549 person-Sv annually in the USA. However, recordable individual worker annual doses are about 0.75 mSv as compared to 1.87 mSv for the fewer workers in commercial nuclear power.

Another population group consists of astronauts and aviation flight crews especially in high-altitude, international flights. Radiation from solar and galactic sources lead to high occupational radiation exposures. For astronauts, the life-threatening risk of solar-flare radiation exposures is a major concern.

Radiation sources used in industry affect another significant occupational group. Industrial radiography using x-ray, gamma-ray, or even neutron sources is an important component of occupational exposure. Other sources find wide use in measurement devices and sensor appliances.

For radiation to produce biological damage, it must first interact with tissue to alter molecular bonds and change the chemistry of the cells. Likewise, for radiation to produce damage in structural and electrical materials, it must cause interactions that disrupt crystalline and molecular bonds. Such radiation must be capable of creating ion-electron pairs and is termed *ionizing* radiation. Fast-moving charged particles, such as alpha particles, beta particles, and fission fragments, can directly ionize matter. Neutral particles, such as photons and neutrons, cannot interact directly with the electrons of the matter through they pass; rather they cause interactions that transfer some of their energy to charged secondary particles, which in turn produce ionization as they slow.

## Radiation-Producing Reactions

### Origins of Ionizing Radiation

Ionizing radiation is invariably the consequence of physical reactions, involving subatomic particles, at the atomic or nuclear level. The possible radiation-producing reactions are many, and usually, although not always, involve altering the configuration of neutrons and protons in an atomic nucleus or the rearrangement of atomic electrons about a nucleus. These reactions can be divided into two categories:

*Radioactive Decay* In the first type of radiation-producing reaction, the nucleus of an atom spontaneously changes its internal arrangement of neutrons and protons to achieve a more stable

configuration. In such spontaneous *radioactive* transmutations, ionizing radiation is almost always emitted. The number of known different atoms, each with a distinct combination of  $Z$  and  $A$  is about 3,200. Of these, only 266 are stable and 65 are long-lived radioisotopes all of which are found in nature. The remaining nuclides have been made by humans and are radioactive with lifetimes much shorter than the age of the solar system. Both naturally occurring and manufactured radionuclides are the mostly commonly encountered sources of ionizing radiation.

**Binary Reactions** The second category of radiation-producing interactions involves two impinging atomic or subatomic particles that react to form one or more reaction products. Examples include neutrons interacting with nuclei of atoms, or photons interacting with nuclei or atomic electrons. Many binary reactions, in which an incident subatomic particle  $x$  strikes an atom or nucleus  $X$ , produce only two reaction products, typically a residual atom or nucleus  $Y$  and some subatomic particle  $y$ . These binary two-product reactions are often written as  $X(x,y)Y$ , for example,  $^{14}\text{N}(\alpha,p)^{17}\text{O}$ .

**Energetics of Radiation-Producing Reactions** In any nuclear reaction, total energy must be conserved. The total energy (kinetic plus rest-mass energy) of the initial particles must equal the total energy of the final products, that is,  $\sum_i [E_i + m_i c^2] = \sum_i [E'_i + m'_i c^2]$ , where  $E_i$  ( $E'_i$ ) is the kinetic energy of the  $i$ th initial (final) particle with a rest mass  $m_i$  ( $m'_i$ ), and  $c$  is the speed of light.

Any change in the total kinetic energy of particles before and after the reaction,  $\Delta E$ , must be accompanied by an equivalent change in the total rest mass of the particles before and after the reaction,  $\Delta m$ , that are related by Einstein's famous equation  $\Delta E = \Delta m c^2$ . To quantify this change in the kinetic or rest-mass energies, a so-called  $Q$ -value is defined as

$$\begin{aligned} Q &= (\text{rest mass of initial particles})c^2 \\ &\quad - (\text{rest mass of final particles})c^2 \\ &= (\text{KE of final particles}) - (\text{KE of initial particles}) \end{aligned}$$

The  $Q$  value of a nuclear reaction may be either positive or negative. If the rest masses of the reactants exceed the rest masses of the products, the  $Q$  value of the reaction is positive with the decrease in rest mass being converted into a gain in kinetic energy. Such a reaction is *exoergic*. Radioactive decay is such a spontaneous exoergic nuclear reaction in which the  $Q$ -value energy is converted into the kinetic energy of the products.

Conversely, if  $Q$  is negative, the reaction is *endothermic*. For this case, kinetic energy of the initial particles is converted into rest-mass energy of the reaction products. The kinetic energy decrease equals the rest-mass energy increase. Such reactions cannot occur unless the colliding particles have at least a certain amount of kinetic energy, the so-called *threshold energy* for the reaction. For the binary, two-product reaction  $X(x,y)Y$ , the threshold kinetic energy of  $x$  incident on a stationary  $X$  is, neglecting Coulombic barrier effects, given approximately by

$$E_{th} \simeq -\left(1 + \frac{m_x}{m_X}\right)Q.$$

In any reaction, linear momentum must also be conserved. Thus, the momentum of the reaction products must equal that of the reactants. For two-product nuclear reactions, conservation of linear momentum requires that the products, depending on their recoil directions, have very definite amounts of kinetic energy. By contrast, for reactions with three or more products, there is no unique division of the reaction energy, and the products generally have a continuous distribution of kinetic energies.

### Physical Characterization of Sources

The most fundamental type of source is a *point source*. Clearly, no real source can have zero size, but a real source can be approximated as a point source provided (1) that the volume is sufficiently small, that is, with dimensions much smaller than the dimensions of the attenuating medium

between source and detector, and (2) that there is negligible interaction of radiation with the matter in the source volume. The second requirement may be relaxed if source characteristics are modified to account for source self-absorption and other source-particle interactions.

In general, a point source may be characterized as depending on energy, direction, and time. In almost all cases, time is not treated as an independent variable because the time delay between a change in the source and the resulting change in the radiation field is usually negligible. Therefore, the most general characterization of a point source used here is in terms of energy and direction. Most radiation sources treated in shielding practice are isotropic, so that source characterization requires only knowledge of energy dependence. Radioisotope sources are certainly isotropic, as are fission sources and capture gamma-ray sources.

A careful distinction must be made between the activity of a radioisotope and its source strength. *Activity* is precisely defined as the expected number of atoms undergoing radioactive transformation per unit time. It is *not* defined as the number of particles emitted per unit time. Decay of two very common laboratory radioisotopes illustrate this point. Each transformation of  $^{60}\text{Co}$ , for example, results in the emission of two gamma rays, one at 1.173 MeV and the other at 1.333 MeV. Each transformation of  $^{137}\text{Cs}$ , accompanied by a transformation of its decay product  $^{137\text{m}}\text{Ba}$ , results in emission of a 0.662-MeV gamma ray with probability 0.85.

The SI unit of activity is the becquerel (Bq), equivalent to one transformation per second. In medical and health physics, radiation source strengths are commonly calculated on the basis of *accumulated activity*, Bq s. Such time-integrated activities account for the cumulative number of transformations in some biological entity during the transient presence of radionuclides in the entity. Of interest in such circumstances is not the time-dependent dose rate to that entity or some other nearby region, but rather the total dose accumulated during the transient. Similar practices are followed in dose evaluation for reactor transients, solar flares, nuclear weapons, and so on.

Radiation sources may be distributed along a line, over an area, or within a volume. Source characterization requires, in general, spatial and energy dependence. Occasionally, it is necessary to include angular dependence. This is especially true for effective area sources associated with computed angular flows across certain planes. Energy dependence may be discrete, such as for radionuclide sources, or continuous, as for bremsstrahlung or fission neutrons and photons.

## Radioactivity

### Radioactive Decay Dynamics

The decay of a radioactive nuclide is a stochastic phenomenon. The time an individual radionuclide decays cannot be predicted; rather, only the probability of decay in a specified time interval can be predicted. The rate at which a sample of a large number of identical radionuclides decays is determined by the *radioactive decay constant*  $\lambda$  for the nuclide. This constant is the probability, per unit time, that a radionuclide decays in an infinitesimal time interval. That  $\lambda$  is constant for a given radionuclide species implies that the expected number of radionuclides,  $N(t)$ , at time  $t$  is  $N(t) = N(0)e^{-\lambda t}$ , where  $N(0)$  is the initial number of radionuclides in the sample. The exponential decay of radionuclides is sometimes called the *radioactive decay law*.

Generally, the number of radionuclides in a sample is not of interest. Rather the *activity*  $A(t)$  or rate at which a radionuclide sample decays,  $dN(t)/dt$ , is desired since this quantity determines the rate of radiation emission from the sample. From the radioactive decay law, it is found that  $dN(t)/dt = \lambda N(t) \equiv A(t)$ , so that the activity of a radionuclide sample also decays exponentially, that is,  $A(t) = A(0)e^{-\lambda t}$ . The standard unit of activity is the becquerel (Bq) equal to one radioactive decay per second. The traditional unit is the curie (Ci) =  $3.7 \times 10^{10}$  Bq (approximately the activity of 1 g of  $^{226}\text{Ra}$ ).

The rate at which a radioactive sample decays is commonly described by its *half-life*  $T_{1/2}$ . The half-life is the time required for half of the sample to decay, or, equivalently, for the sample activity

to halve. From the radioactive decay law, it is found  $T_{1/2} = \ln 2/\lambda \simeq 0.693/\lambda$ .

### Types of Radioactive Decay

There are several types of spontaneous changes (or *transmutations*) that can occur in radioactive nuclides. In each transmutation, the nucleus of the parent atom  ${}_Z^A P$  is altered in some manner and one or more particles of radiation are emitted. If the number of protons in the nucleus is changed, then the number of orbital electrons in the daughter atom D must subsequently also be changed, either by releasing an electron to or absorbing an electron from the ambient medium. The most commonly encountered types of radioactive decay are

- *Gamma decay* ( $\gamma$ )  ${}_Z^A P^* \rightarrow {}_Z^A P + \gamma$ : An excited nucleus decays (usually within  $10^{-8}$  s) to its ground state by the emission of one or more gamma photons. The excited parent is often the product of radioactive decay or a binary nuclear reaction.
- *Isomeric transition* (IT)  ${}_Z^{Am} P^* \rightarrow {}_Z^A P + \gamma$ : This is a special case of gamma decay, in which the excited parent has a lifetime much greater than usual nuclear lifetimes ( $10^{-8}$  s), ranging from seconds to thousands of years. Such a long-lived excited nucleus is said to be *metastable* and is called an *isomer*.
- *Internal conversion* (IC)  ${}_Z^A P^* \rightarrow [{}_Z^A P]^{+1} + e^-$ : The excitation energy of a nucleus is used to eject an orbital electron (usually a K-shell electron).
- *Alpha decay* ( $\alpha$ )  ${}_Z^A P \rightarrow {}_{Z-2}^{Z-4} D + \alpha$ : An  $\alpha$  particle is emitted leaving the daughter with 2 fewer neutrons and 2 fewer protons than the parent. The transition often is to an excited nuclear state of the daughter which decays by emission of one or more gamma photons.
- *Beta decay* ( $\beta^-$ )  ${}_Z^A P \rightarrow {}_{Z+1}^A D + \beta^- + \bar{\nu}$ : In effect, a neutron in the nucleus decays to a proton. An electron ( $\beta^-$ ) and antineutrino ( $\bar{\nu}$ ) are emitted, which share the decay energy. The daughter is often produced in an excited nuclear state and subsequently emits gamma photons.
- *Positron decay* ( $\beta^+$ )  ${}_Z^A P \rightarrow {}_{Z-1}^A D + \beta^+ + \nu$ : In effect, a proton in the nucleus changes into a

neutron. A positron ( $\beta^+$ ) and neutrino ( $\nu$ ) are emitted, which share the decay energy. If the daughter is produced in an excited state, gamma decay results. The emitted positron, after slowing in the ambient medium, annihilates with an ambient electron producing two 0.511-MeV gamma rays.

- *Electron capture* (EC)  ${}_Z^A P \rightarrow {}_{Z-1}^A D^* + \nu$ : An orbital electron is absorbed by the nucleus, converts a nuclear proton into a neutron, emits a neutrino ( $\nu$ ), and, generally, leaves the nucleus in an excited state, which decays by the emission of one or more gamma photons.
- *Spontaneous fission* (SF)  ${}_Z^A P \rightarrow {}_{Z_H}^{A_H} D_H + {}_{Z_L}^{A_L} D_L + n(1_0^0 n) + m(\gamma)$ : A heavy nucleus spontaneously splits or fissions into a heavy ( $H$ ) and light ( $L$ ) fission fragment. The fission fragments are produced in highly excited nuclear states and decay by prompt neutron and gamma photon emission within  $10^{-13}$  s of the fission event, releasing, on the average,  $n$  neutrons and  $m$   $\gamma$  photons. The resulting *fission products* are usually radioactive and undergo a chain of  $\beta^-$  decays releasing several delayed gamma photons and beta particles until a stable nucleus is reached. In some instances, ternary rather than binary fission takes place, releasing a light product such as tritium.


Many radionuclides decay by more than a single decay mechanism. For example, electron capture is always in competition with positron decay. An example of a radionuclide that decays by three mechanisms is  ${}^{64}\text{Cu}$  whose decay scheme is shown in Fig. 1.

In any radioactive decay that alters the proton number  $Z$ , electron rearrangements necessarily result. The resulting cascade of orbital electrons to lower energy levels results in emission of x-rays and, in competition, ejection of what are called *Auger electrons*.

### Naturally Occurring Radionuclides

#### Singly Occurring Primordial Radionuclides

Of the many radioactive species present when the earth was formed, only those very few with half-lives comparable to the age of the earth remain in

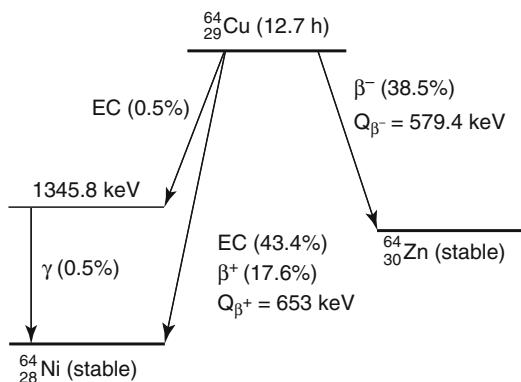

**Radiation Sources, Fig. 1** The radioactive decay scheme for  $^{64}\text{Cu}$  per decay, on average a beta particle of maximum energy 0.579 MeV is emitted with a probability of 0.385, a positron of maximum energy 0.653 MeV is emitted with a probability of 0.176, and a gamma ray of energy 1.346 MeV is emitted with a probability of 0.005 (Source: NUDAT 2.5, National Nuclear Data Center, Brookhaven National Laboratory)

the environment. Of these few primordial radionuclides not belonging to a decay chain, only  $^{40}\text{K}$  and  $^{87}\text{Rb}$  contribute significantly to human exposure. Of minor consequence are the nuclides  $^{138}\text{La}$ ,  $^{147}\text{Sm}$ , and  $^{176}\text{Lu}$ . The radionuclide  $^{87}\text{Rb}$  has a half-life of  $4.8 \times 10^{10}$  years and decays by beta-particle emission. In the human body, its main impact is on bone-surface cells. The radionuclide  $^{40}\text{K}$  is a major contributor to human exposure from natural radiation. Present in an isotopic abundance of 0.0118%, it has a half-life of  $1.227 \times 10^9$  years, decaying both by electron capture and beta-particle emission. Annual human doses are about 140  $\mu\text{Gy}$  to bone surface, 170  $\mu\text{Gy}$  on average to soft tissue, and 270  $\mu\text{Gy}$  to red marrow [1].  $^{40}\text{K}$  also contributes in a major way to external exposure. The population-average specific activity of the nuclide in soil is 420 Bq/kg [2]. Based on a soil density of 1,600 kg/m<sup>3</sup>, and dose conversion factors from [3],  $^{40}\text{K}$  in the soil contributes 120  $\mu\text{Sv}$  effective dose annually.

#### Decay Series of Terrestrial Origin

Two actinide decay series, identified by the long-lived parents  $^{238}\text{U}$  and  $^{232}\text{Th}$  contribute appreciably to human exposure to natural radiation. Another series headed by  $^{235}\text{U}$  contributes very little. Members of the two important series are

listed in Table 1. Many of the radionuclides in these series decay by emission of alpha particles with energies from 4 to 6 MeV. Others in the series emit beta particles accompanied by gamma rays. With long-lived parent radionuclides and short-lived daughter products, the chain might be thought to exist in a state of secular equilibrium, that is, each component having the same decay rate per unit volume of the host medium. However, some of the chain members are more soluble than others, and some are gaseous. Thus, unless the host medium is a rigid solid, such as granite, decay rates are far from equilibrium state.

Ingestion of elements in the uranium and thorium decay chains is unavoidable. Table 2 illustrates the consequences in terms of the committed effective dose incurred by ingestion but perhaps experienced long thereafter.

The portions of the series headed by the gases  $^{220}\text{Rn}$  and  $^{222}\text{Rn}$  are of special importance in public health. The gases escape from soil and rock into the atmosphere and into the airspace within homes. Their daughter products, some of which emit alpha particles, may be inhaled, with risk of radiation damage to radiation-sensitive cells in the lungs potentially leading to lung cancer.  $^{222}\text{Rn}$  and its daughters ordinarily present a greater hazard than  $^{220}\text{Rn}$  (thoron) and its daughters, largely because the much shorter half-life of  $^{220}\text{Rn}$  makes decay more likely prior to release into the atmosphere. Globally, the mean annual effective dose equivalent due to  $^{222}\text{Rn}$  daughters is about 1 mSv (100 mrem) while that due to  $^{220}\text{Rn}$  daughters is estimated to be about 0.2 mSv (20 mrem).

#### Cosmogenic Radionuclides

Cosmic-ray interactions with constituents of the atmosphere, sea, or earth, but mostly with the atmosphere, lead directly to radioactive products. Capture of secondary neutrons produced in primary interactions of cosmic rays, leads to the formation of many more radionuclides. Of the nuclides produced in the atmosphere, only  $^3\text{H}$ ,  $^7\text{Be}$ ,  $^{14}\text{C}$ , and  $^{22}\text{Na}$  contribute appreciably to human radiation exposure.

Over the past century, combustion of fossil fuels and the emission of carbon dioxide not

**Radiation Sources, Table 1** Principal radioisotopes in two naturally occurring primordial decay series (Source: NUDAT 2.5, National Nuclear Data Center, Brookhaven National Laboratory)

Thorium series		Uranium series		
Nuclide and decay mode	Half-life <sup>a</sup> $T_{1/2}$	Nuclide and decay mode	Half-life <sup>a</sup> $T_{1/2}$	
$^{232}_{90}\text{Th}$ $\alpha$	<b>14.05</b> Gy	$^{238}_{92}\text{U}$ $\alpha$	<b>4.468</b> Gy	
$^{228}_{88}\text{Ra}$ $\beta$	5.75 years	$^{234}_{90}\text{Th}$ $\beta$	24.10 days	
$^{228}_{89}\text{Ac}$ $\beta$	6.15 h	$^{234\text{m}}_{91}\text{Pa}$ $\beta$	1.159 min	
$^{228}_{90}\text{Th}$ $\alpha$	1.912 years	$^{234}_{92}\text{U}$ $\alpha$	245.5 ky	
$^{224}_{88}\text{Ra}$ $\alpha$	3.66 days	$^{230}_{90}\text{Th}$ $\alpha$	75.4 ky	
$^{220}_{86}\text{Rn}$ $\alpha$	55.6 s	$^{226}_{88}\text{Ra}$ $\alpha$	1,600 years	
$^{216}_{84}\text{Po}$ $\alpha$	0.145 s	$^{222}_{86}\text{Rn}$ $\alpha$	3.8235 days	
$^{212}_{82}\text{Pb}$ $\beta$	10.64 h	$^{218}_{84}\text{Po}$ $\alpha, \beta$	3.098 min	
$^{212}_{83}\text{Bi}$ $\alpha, \beta$	60.55 min	$^{214}_{82}\text{Pb}$ $\beta$	26.8 min	
$^{212}_{84}\text{Po}$ $\alpha$	0.299 $\mu$ s	$^{214}_{83}\text{Bi}$ $\alpha, \beta$	19.9 min	
$^{208}_{81}\text{Ti}$ $\beta$	3.053 min	$^{214}_{84}\text{Po}$ $\alpha, \beta$	164 $\mu$ s	
$^{208}_{82}\text{Pb}$	$\infty$	$^{210}_{82}\text{Pb}$ $\beta$	22.2 years	
		$^{210}_{83}\text{Bi}$ $\alpha, \beta$	5.012 days	
		$^{210}_{84}\text{Po}$ $\alpha$	138.4 days	
		$^{206}_{82}\text{Pb}$	$\infty$	

<sup>a</sup>Gy =  $10^9$  years, ky =  $10^3$  years,  $\mu$ s =  $10^{-6}$  s

**Radiation Sources, Table 2** Annual intake and effective dose from ingestion of uranium, thorium, and daughters. For population weighted averages, apply 5% infants, 30% children, and 65% adults

Nuclide	Activity intake (Bq/year)			Committed effective dose ( $\mu$ Sv/year)		
	Infants	Children	Adults	Infants	Children	Adults
$^{238}\text{U}$	1.9	3.8	5.7	0.23	0.26	0.25
$^{234}\text{U}$	1.9	3.8	5.7	0.25	0.28	0.28
$^{230}\text{Th}$	1.0	2.0	3.0	0.42	0.48	0.58
$^{226}\text{Ra}$	7.8	15	22	7.5	12	8.0
$^{210}\text{Pb}$	11	21	30	40	40	28
$^{210}\text{Po}$	21	39	58	180	100	85
$^{232}\text{Th}$	0.6	1.1	1.7	0.26	0.32	0.36
$^{228}\text{Ra}$	5.5	10	15	31	40	21
$^{228}\text{Th}$	1.0	2.0	3.0	0.38	0.30	0.25
$^{235}\text{U}$	0.1	0.2	0.2	0.011	0.011	0.011
Total				260	200	110

Source: Reference [2]

containing  $^{14}\text{C}$  has diluted the cosmogenic content of  $^{14}\text{C}$  in the environment. Moreover, since World War II, artificial introduction of  $^{14}\text{C}$ ,  $^3\text{H}$ , and other nuclides into the environment by human activity has been significant, especially as a result of atmospheric nuclear tests. Consequently, these radionuclides no longer exist in natural equilibria in the environment.

The tritium  $^3\text{H}$  nuclide is produced mainly from interactions of neutrons with nitrogen and oxygen. Tritium has a half-life of 12.3 years and, upon decay, releases one low-energy beta particle of mean energy 5.7 keV. Tritium exists in nature almost exclusively in water form (HTO) but, in foods, may be partially incorporated into organic compounds. The nuclide  $^{14}\text{C}$  is produced mainly

**Radiation Sources, Table 3** Cosmogenic radionuclides and consequential mean doses to the population

Nuclide	Half-life	Global inventory (PBq)	Troposphere conc. (mBq/m <sup>3</sup> )	Annual effective dose ( $\mu$ Sv/year)
<sup>3</sup> H	12.32 years	1,275	1.4	0.01
<sup>7</sup> Be	53.22 days	413	12.5	0.03
<sup>14</sup> C	5,700 years	12,750	56.3	12
<sup>22</sup> Na	2.602 years	0.44	0.0021	0.15

Source: Reference [2]

from the interactions of neutrons with nitrogen in the atmosphere. It exists in the atmosphere as CO<sub>2</sub>, but the main reservoir is the ocean. It has a half-life of 5,700 years and decays by beta particle emission of mean energy 49.5 keV.

<sup>7</sup>Be is also produced by cosmic ray interactions with nitrogen and oxygen in the atmosphere. It decays by electron capture, 10.4% of which events yield a 0.478-MeV gamma ray. <sup>22</sup>Na decays by positron emission (90%) and electron capture (10%). The positron emission yields two annihilation photons as well as a positron of mean energy 215 keV. Both the positron emission and electron capture yield a 1.275-MeV gamma ray. Table 3 lists natural inventories, atmospheric concentrations, and effective doses to populations. Note that 1 PBq = 10<sup>15</sup> Bq.

average, 2.43 fission neutrons. A fission caused by a 10-MeV neutron, by contrast, yields 3.8 fission neutrons. For <sup>239</sup>Pu, fission by thermal or 10 MeV neutrons yield 2.87 or 4.2 neutrons. The fission of <sup>238</sup>U is induced only by fast neutrons, a 10-MeV neutron yielding 3.9 fission neutrons.

Since the advent of fission reactors, many transuranic isotopes have been produced in significant quantities. Many of these isotopes have appreciable spontaneous fission probabilities, and consequently they can be used as very compact sources of fission neutrons. For example, 1 g of <sup>252</sup>Cf releases  $2.3 \times 10^{12}$  n/s, and very intense neutron sources can be made from this isotope, limited in size only by the need to remove the fission heat through the necessary encapsulation. Almost all spontaneously fissioning isotopes decay much more frequently by  $\alpha$  emission than by fission.

The energy dependence of the fission neutron spectrum has been investigated extensively, particularly for the important isotope <sup>235</sup>U. All fissionable nuclides produce prompt-fission neutrons with energy frequency distributions that go to zero at low and high energies, reaching a maximum at about 0.7 MeV, and have an average energy of about 2 MeV. The fraction of prompt fission neutrons emitted per unit energy about  $E$ ,  $\chi(E)$ , can be described quite accurately by a Watt distribution

$$\chi(E) = ae^{-E/b} \sinh \sqrt{cE},$$

where the parameters  $a$ ,  $b$ , and  $c$  depend on the fissioning isotope. For example,  $a = 0.5535$  MeV,  $b = 1.0347$  MeV, and  $c = 1.6214$  MeV<sup>-1</sup> for thermal-neutron fission

## Sources of Neutrons

### Fission Neutrons

Many heavy nuclides fission after the absorption of a neutron, or even spontaneously, producing several energetic fission neutrons. Almost all of the fast neutrons produced from a fission event are emitted within 10<sup>-14</sup> s of the fission event, and are called *prompt neutrons*. Generally, less than 1% of the total fission neutrons are emitted as *delayed neutrons*, which are produced by the neutron decay of fission products at times up to many seconds or even minutes after the fission event. As the energy of the neutron which induces the fission in a heavy nucleus increases, the average number of fission neutrons also increases. For example, the fission of <sup>235</sup>U by a thermal neutron (average energy 0.025 eV) produces, on the

of  $^{235}\text{U}$ , whose fission-neutron spectrum is often used as an approximation for other fissioning isotopes.

### Fusion Neutrons

Neutrons can be produced as products of nuclear reactions in which energetic charged particles hit target atoms. Most such reactions require accelerators to produce the energetic charged particles and, hence, such neutrons are to be encountered only near accelerator targets.

One major exception to the insignificance of charged-particle-induced reactions are those in which light elements fuse exoergically to yield a heavier nucleus and which are accompanied quite often by the release of energetic neutrons. The resulting fusion neutrons are usually the major source of radiation to be shielded against. The two neutron-producing fusion reactions of most interest in the development of thermonuclear fusion power are



When these reactions are produced by accelerating one nuclide toward the other, the velocity of the center of mass must first be added to the center-of-mass neutron velocity before determining the neutron energy in the laboratory coordinate system. In most designs for fusion power, the velocity of the center of mass is negligible, and the concern is with monoenergetic 2.45- or 14.1-MeV fusion neutrons. The 14.1-MeV fusion neutrons are also produced copiously in a thermonuclear explosion.

A beam of relatively low-energy deuterons (100–300 keV) incident on a deuterium or tritium target can produce a significant number of thermonuclear neutrons. Thus, these D-D or D-T reactions are used in relatively compact accelerators, called *neutron generators*, in which deuterium ions are accelerated through a high voltage (100–300 kV) and allowed to fall on a thick deuterium- or tritium-bearing target. Typically, in such devices, a 1-mA beam current produces up to

$10^9$  14-MeV neutrons per second from a thick tritium target.

### Photoneutrons

A gamma photon with energy sufficiently large to overcome the neutron binding energy (about 7 MeV in most nuclides) may cause a  $(\gamma, n)$  reaction. Very intense and energetic photoneutron production can be realized in an electron accelerator where the bombardment of an appropriate target material with the energetic electrons produces intense bremsstrahlung (see section “Sources of X-rays”) with a distribution of energies up to that of the incident electrons. The probability a photon will cause a  $(\gamma, n)$  reaction increases with the photon energy, reaching a maximum over a broad energy range of approximately 20–23 MeV for light nuclei ( $A \lesssim 40$ ) and 13–18 MeV for medium and heavy nuclei. The peak energy of this broad (often called *giant*) nuclear resonance can be approximated by  $80 A^{-1/3}$  MeV for  $A > 40$ . The width of the resonance varies from about 10 MeV for light nuclei to 3 MeV for heavy nuclei. Consequently, in medical or accelerator facilities that produce photons with energies above about 15 MeV, neutron production in the surrounding walls can lead to a significant neutron field.

However, the gamma photons produced in radioactive decay of fission and activation products in nuclear reactors generally have energies too low, and most materials have a photoneutron threshold too high for photoneutrons to be of concern. Only for the light elements  $^2\text{H}$ ,  $^6\text{Li}$ ,  $^7\text{Li}$ ,  $^9\text{Be}$ , and  $^{12}\text{C}$  are the thresholds for photoneutron production sufficiently low that these secondary neutrons may have to be considered. In heavy-water- or beryllium-moderated reactors, the photoneutron source may be very appreciable, and the neutron field deep within an hydrogenous shield is often determined by photoneutron production in deuterium, which constitutes about 0.015 atom percent of the hydrogen. Capture gamma photons arising from neutron absorption have particularly high energies, and thus may also cause a significant production of energetic photoneutrons.

The photoneutron mechanism can be used to create laboratory neutron sources by mixing intimately a beryllium or deuterium compound with a radioisotope that decays with the emission of high-energy photons. Alternatively, the encapsulated radioisotope may be surrounded by a beryllium- or deuterium-bearing shell. A common reactor photoneutron source is an antimony-beryllium mixture, which has the advantage of being rejuvenated by exposing the source to the neutrons in the reactor to transmute the stable  $^{123}\text{Sb}$  into the required  $^{124}\text{Sb}$  isotope (half-life of 60.2 days).

One very attractive feature of such  $(\gamma,n)$  sources is the nearly monoenergetic nature of the neutrons if the photons are monoenergetic. However, in large sources, the neutrons may undergo significant scattering in the source material and thereby degrade the nearly monoenergetic nature of their spectrum. These photoneutron sources generally require careful use because of their inherently large photon emission rates. Because nominally only one in a million high-energy photons actually interacts with the source material to produce a neutron, these sources generate gamma rays that are of far greater biological concern than are the neutrons.

### Alpha-Neutron Sources

Many compact laboratory neutron sources use energetic alpha particles from various radioisotopes (*emitters*) to induce  $(\alpha,n)$  reactions in appropriate materials (*converters*). Although a large number of nuclides emit neutrons if bombarded with alpha particles of sufficient energy, the energies of the alpha particles from radioisotopes are capable of penetrating the potential barriers of only the lighter nuclei.

Of particular interest are those light isotopes for which the  $(\alpha,n)$  reaction is exoergic ( $Q > 0$ ) or, at least, has a low threshold energy. For endoergic reactions ( $Q < 0$ ), the threshold alpha energy is  $-Q(1 + 4/A)$ . Thus, for an  $(\alpha,n)$  reaction to occur, the alpha particle must (1) have enough energy to overcome the repulsive Coulombic force field of the nucleus, and (2) exceed the threshold energy for the reaction. Converter materials used to make practical  $(\alpha,n)$  sources

include lithium, beryllium, boron, carbon, fluorine, and sodium.

The converter nuclides  $^{18}\text{O}$  and  $^{19}\text{F}$  are responsible for neutron production in many areas of the nuclear fuel cycle. Alpha particles emitted by uranium and plutonium range between 4 and 6 MeV in energy and can cause  $(\alpha,n)$  neutron production when in the presence of oxygen or fluorine. In particular,  $(\alpha,n)$  neutrons often dominate the spontaneous fission neutrons in  $\text{UF}_6$  or in aqueous mixtures of uranium and plutonium such as found in nuclear waste.

A neutron source can be fabricated by mixing intimately a light converter element, such as lithium or beryllium, with a radioisotope that emits energetic alpha particles. Most of the practical alpha emitters are actinide elements, which form intermetallic compounds with beryllium. Such a compound, for example,  $\text{PuBe}_{13}$ , ensures both that the emitted alpha particles immediately encounter converter nuclei, thereby producing a maximum neutron yield, and that the radioactive actinides are bound into the source material, thereby reducing the risk of leakage of the alpha-emitting component.

The neutron yield from an  $(\alpha,n)$  source varies strongly with the converter material, the energy of the alpha particle, and the relative concentrations of the emitter and converter elements. The degree of mixing between converter and emitter and the size, geometry, and source encapsulation may also affect the neutron yield. For example, a  $^{239}\text{Pu}/\text{Be}$  source has an optimum neutron yield of about 60 neutrons per  $10^6$  primary alpha particles.

The energy distributions of neutrons emitted from  $(\alpha,n)$  sources are continuous below some maximum neutron energy with definite structure at well-defined energies determined by the energy levels of the converter and the excited product nuclei. The use of the same converter material with different alpha emitters produces similar neutron spectra with different portions of the same basic spectrum accentuated or reduced as a result of the different alpha-particle energies. Average energies of neutrons typically are several MeV. For example, the neutrons produced by a  $^{239}\text{Pu}/\text{Be}$  source have an average energy of 4.6 MeV.

### Activation Neutrons

A few highly unstable nuclides decay by the emission of a neutron. The delayed neutrons associated with fission arise from such decay of the fission products. However, there are nuclides other than those in the fission-product decay chain which also decay by neutron emission. Only one of these nuclides,  $^{17}\text{N}$ , is of importance in nuclear reactor situations. This isotope is produced in water-moderated reactors by an ( $n,p$ ) reaction with  $^{17}\text{O}$  (threshold energy, 8 MeV). The decay of  $^{17}\text{N}$  by beta emission (half-life 4.4 s) produces  $^{17}\text{O}$  in a highly excited state, which in turn decays rapidly by neutron emission. Most of the decay neutrons are emitted within  $\pm 0.2$  MeV of the most probable energy of about 1 MeV, although neutrons with energies up to 2 MeV may be produced.

### Spallation Neutron Sources

In a spallation neutron source, pulses of very energetic protons (up to 1 GeV), produced by an accelerator, strike a heavy metal target such as mercury or liquid bismuth. Such an energetic proton when it strikes a target nucleus “spalls” or knocks out neutrons. Additional neutrons boil off as the struck nucleus heats up. Typically, 20–30 neutrons are produced per spallation reaction. These pulses of neutrons are then slowed down or thermalized by passing them through cells filled with water, or even liquid hydrogen if very slow neutrons are needed.

### Sources of Photons

#### Radioactive Decay

Radioactive sources serve a wide variety of purposes in educational, medical, research, industrial, governmental, and commercial activities. The radionuclides in these sources almost always leave their decay daughters in excited nuclear states whose subsequent transitions to lower-energy states usually result in the emission of one or more photons.

### Prompt Fission Photons

The fission process produces copious gamma photons either within the first  $6 \times 10^{-8}$  s after the fission event (the *prompt fission gamma photons*) or from the subsequent decay of the fission products. These photons are of extreme importance in the shielding and gamma-heating calculations for a nuclear reactor. Consequently, much effort has been directed toward determining their nature.

Most investigations of prompt fission gamma photons have centered on the thermal-neutron-induced fission of  $^{235}\text{U}$ . For this nuclide, it has been found that the number of prompt fission photons is  $8.13 \pm 0.35$  photons per fission over the energy range 0.1–10.5 MeV, and the energy carried by this number of photons is  $7.25 \pm 0.26$  MeV per fission. The energy spectrum of prompt gamma photons from the thermal fission of  $^{235}\text{U}$  between 0.1 and 0.6 MeV is approximately constant at 6.6 photons  $\text{MeV}^{-1}$  fission $^{-1}$ . At higher energies, the spectrum falls off sharply with increasing energy. The measured energy distribution of the prompt fission photons can be represented by the following empirical fit over the range 0.1–10.5 MeV:

$$N(E) = \begin{cases} 6.6 & 0.1 < E < 0.6 \text{ MeV} \\ 20.2e^{-1.78E} & 0.6 < E < 1.5 \text{ MeV} \\ 7.2e^{-1.09E} & 1.5 < E < 10.5 \text{ MeV}, \end{cases}$$

where  $E$  is in MeV and  $N(E)$  is in units of photons  $\text{MeV}^{-1}$  fission $^{-1}$ .


Investigation of  $^{233}\text{U}$ ,  $^{239}\text{Pu}$ , and  $^{252}\text{Cf}$  indicates that the prompt fission photon energy spectra for these isotopes resembles very closely that for  $^{235}\text{U}$ , and hence for most purposes, it is reasonable to use the  $^{235}\text{U}$  spectrum for other fissioning isotopes.

### Fission-Product Photons

With the widespread application of nuclear fission, an important concern is the consideration of the very long lasting gamma activity produced by the decay of fission products.

In the fission process, most often two fragments are produced (*binary fission*) with a

distribution in mass shown in Fig. 2. About 0.3% of the time, a third light fragment is produced (*ternary fission*), most often  $^3\text{H}$ . As seen in Fig. 2, the mass distribution or *fission-product chain yield* is bimodal, with many products having atomic mass number around 95 and around 140. Among the former are the important long-lived radionuclide  $^{90}\text{Sr}$ , several isotopes of the halogen bromine, and various isotopes of the noble gas krypton. Among the heavy fragments are the important long-lived radionuclide  $^{137}\text{Cs}$ , radioisotopes of halogen iodine, notably  $^{131}\text{I}$ , and isotopes of the noble gas xenon. The fission-products are neutron-rich and decay almost exclusively by  $\beta^-$  emission, often forming long decay chains. From the range of mass numbers produced (see Fig. 2), about 100 different decay chains are formed. An example of a short chain is

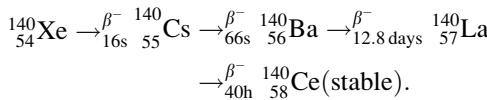

The total gamma-ray energy released by the fission product chains is comparable to that released as prompt fission gamma photons. The gamma-ray energy release rate declines rapidly in the time after fission. About three-fourths of the delayed


gamma-ray energy is released in the first 1,000 s after fission. In most calculations involving spent nuclear fuel, the gamma activity at several months or even years after removal of fuel from the nuclear reactor is of interest and only the long-lived fission products need be considered.

It has been found that the gamma energy released from fission products is relatively independent of the energy of the neutrons causing the fissions. However, the gamma-ray energy released and the photon energy spectrum depend significantly on the fissioning isotope, particularly in the first 10 s after fission. Generally, fissioning isotopes having a greater proportion of neutrons to protons produce fission-product chains of longer average length, with isotopes richer in neutrons and hence with greater available decay energy. Also, the photon energy spectrum generally becomes less energetic as the time after fission increases.

For very approximate calculations, the energy spectrum of delayed gamma photons from the fission of  $^{235}\text{U}$ , at times up to about 500 s, may be approximated by the proportionality  $N(E) \sim e^{-1.1E}$ , where  $N(E)$  is the delayed gamma yield (photons  $\text{MeV}^{-1}$  fission $^{-1}$ ) and  $E$  is the photon energy in MeV. The time dependence for the total gamma photon energy emission

## Radiation Sources,

**Fig. 2** The probability (%) that a fission product with mass number  $A$  is produced in the thermal-neutron-induced fission of  $^{235}\text{U}$  and  $^{239}\text{Pu}$

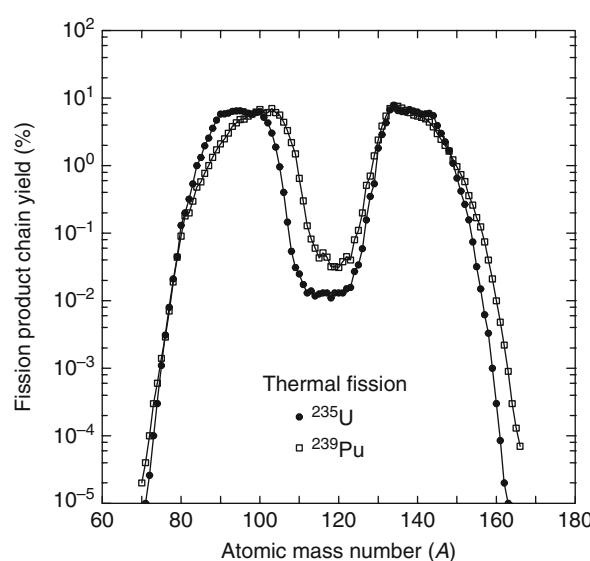

rate  $F(t)$  ( $\text{MeV s}^{-1} \text{ fission}^{-1}$ ) is often described by the simple decay formula  $F(t) = 1.4 t^{-1.2}$ ,  $10 \text{ s} < t < 10^7 \text{ s}$ , where  $t$  is in seconds. More complicated (and accurate) expressions for  $F(t)$  have been obtained from fits to experimental data; but for preliminary calculations the simpler result is usually adequate. It is observed that both  $^{235}\text{U}$  and  $^{239}\text{Pu}$  have roughly the same total gamma-ray-energy decay characteristics for up to 200 days after fission, at which time  $^{235}\text{U}$  products begin to decay more rapidly until at 1 year after fission, the  $^{239}\text{Pu}$  gamma activity is about 60% greater than that of  $^{235}\text{U}$ .

For accurate calculations involving fission products, the variation with time after fission of the energy spectra of the photons must be taken into account. Often the energy spectra are averaged over discrete energy intervals and the energy emission rate in each energy group is considered as a function of time after fission. Computer codes, based on extensive libraries of radionuclide data, have been developed to compute the abundances and decay rates of the hundreds of fission-product radionuclides. An example of such calculations is shown in Fig. 3.

### Capture Photons

The compound nucleus formed by neutron absorption is initially created in a highly excited

state with excitation energy equal to the kinetic energy of the incident neutron plus the neutron binding energy, which averages about 7 MeV. The decay of this nucleus, usually within  $10^{-12} \text{ s}$ , and usually by way of intermediate states, typically produces several energetic photons. Generally, the probability a neutron causes an  $(n,\gamma)$  reaction is greatest for slow-moving *thermal neutrons*, that is, neutrons whose speed is in equilibrium with the thermal motion of the atoms in a medium. At high energies, it is more likely that a neutron scatters, thereby losing some of its kinetic energy, and then slows toward thermal energies.


Capture photons may be created intentionally by placing a material with a high thermal-neutron  $(n,\gamma)$  cross section in a thermal neutron beam. The energy spectrum of the resulting capture gamma photons can then be used to identify trace elements in the sample. More often, however, capture gamma photons are an undesired secondary source of radiation.

### Inelastic Scattering Photons

The excited nucleus formed when a neutron is inelastically scattered decays to the ground state within about  $10^{-14} \text{ s}$ , with the excitation energy being released via one or more photons. Because of the constraints imposed by the conservation of energy and momentum in all scattering

#### Radiation Sources,

**Fig. 3** Total gamma-ray ( $G$ ) and beta-particle ( $B$ ) energy emission rates as a function of time after the thermal fission of  $^{235}\text{U}$ . The curves identified by the numbers 1–6 are gamma emission rates for photons in the energy ranges 5–7.5, 4–5, 3–4, 2–3, 1–2, and 0–1 MeV, respectively

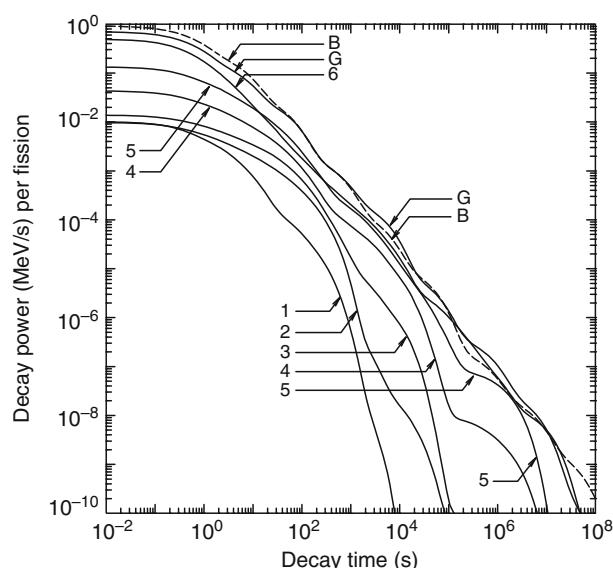

interactions, inelastic neutron scattering cannot occur unless the incident neutron energy is greater than  $(A + 1)/A$  times the energy required to excite the scattering nucleus to its first excited state. Except for the heavy nuclides, neutron energies above about 0.5 MeV are typically required for inelastic scattering.

The detailed calculation of secondary photon source strengths from inelastic neutron scattering requires knowledge of the fast-neutron fluence, the inelastic scattering cross sections, and spectra of resultant photons, all as functions of the incident neutron energy. The cross sections and energy spectra of the secondary photons depend strongly on the incident neutron energy and the particular nuclide. Such inelastic scattering data are known only for the more important structural and shielding materials, and even the known data require extensive data libraries. Fortunately, in most situations, these secondary photons are of little importance compared to the capture photons. Although inelastic neutron scattering is usually neglected with regard to its secondary-photon radiation, it is a very important mechanism in the attenuation of fast neutrons, better even than elastic scattering in some cases.

### Activation Photons

For many materials, absorption of a neutron produces a radionuclide with a half-life ranging from a fraction of a second to many years. The radiation produced by the subsequent decay of these activation nuclei may be very significant for materials that have been exposed to large neutron fluences, especially structural components in a reactor or accelerator. Many radionuclides encountered in research laboratories, medical facilities, and industry are produced as activation nuclides from neutron absorption in some parent material (see Table 4). Such nuclides decay, usually by beta emission, leaving the daughter nucleus in an excited state, which usually decays quickly to its ground state with the emission of one or more gamma photons. Thus, the apparent half-life of the photon emitter is that of the parent (or activation nuclide), while the number and energy of the photons are characteristic of the nuclear structure of the decay daughter.

Although most activation products of concern in shielding problems arise from neutron absorption, there is one important exception in water-moderated nuclear reactors. The  $^{16}\text{O}$  in the water can be transmuted to  $^{16}\text{N}$  in the presence of fission neutrons by an  $(n,p)$  reaction with a threshold energy of 9.6 MeV.  $^{16}\text{N}$  decays with a 7.4-s half-life emitting gamma photons of 6.13 and 7.10 MeV (yields of 0.69 and 0.05 per decay). This gamma-ray source is very important in coolant channels of power reactors.

### Positron Annihilation Photons

Positrons, generated either from the positron decay of radionuclides or from pair production interactions induced by high-energy photons, slow down in matter within about  $10^{-10}$  s and are subsequently annihilated with electrons. With rare exception, the rest-mass energy of the electron and positron is emitted in the form of two annihilation photons, each of energy  $m_e c^2$  ( $=0.511$  MeV).

### Sources of X-rays

The interaction of photons or charged particles with matter leads inevitably to the production of secondary x-ray photons. The x-rays in many applications have energies  $\lesssim 100$  keV, and hence are easily attenuated by any shield adequate for the primary radiation. Consequently, the secondary x-rays are often completely neglected in analyses involving higher-energy photons. There are many cases, though, when the energies of x-rays and Auger electrons must be accounted for as well as those of the x-rays. An example is the evaluation of radiation dose to the total body, or an organ of the body, after a radionuclide intake. This is a situation in which the source and receiver volumes may be the same.

There are important situations in which x-ray production is the only source of photons. To estimate the intensity, energies, and doses from the x-ray photons, it is necessary to understand how the x-rays are produced and some characteristics of the production mechanisms. There are two principal methods whereby secondary x-ray photons are generated: the rearrangement of atomic

**Radiation Sources, Table 4** Important radioisotopes produced by reactors and accelerators for use in medical, research, and industrial applications. Those isotopes

commercially available for medical use are shown in bold. Decay data from NUDAT 2.5, National Nuclear Data Center, Brookhaven National Laboratory

Nuclide	Half-life	Decay modes <sup>a</sup>	Nuclide	Half-life	Decay modes <sup>a</sup>
<b><sup>3</sup>H</b>	12.33 years	$\beta^-$ *	<b><sup>81m</sup>Kr</b>	13.1 s	EC IT
<b><sup>11</sup>C</b>	20.39 min	$\beta^+$ EC	<b><sup>85</sup>Kr</b>	10.76 years	$\beta^-$
<b><sup>13</sup>N</b>	9.965 min	$\beta^+$ EC	<b><sup>82</sup>Sr<sup>b</sup></b>	25.6 days	EC *
<b><sup>14</sup>C</b>	5,730 years	$\beta^-$ *	<b><sup>89</sup>Sr</b>	50.5 days	$\beta^-$
<b><sup>15</sup>O</b>	122.2 s	$\beta^+$ EC	<b><sup>90</sup>Sr<sup>c</sup></b>	28.90 years	$\beta^-$ *
<b><sup>18</sup>F</b>	109.8 min	$\beta^+$ EC	<b><sup>99</sup>Mo<sup>d</sup></b>	65.94 h	$\beta^-$
<b><sup>22</sup>Na</b>	2.602 years	$\beta^+$ EC	<b><sup>103</sup>Pd</b>	16.99 days	EC
<b><sup>26</sup>Al</b>	7.17E5 years	$\beta^+$ EC	<b><sup>110m</sup>Ag</b>	249.8 days	$\beta^-$ IT
<b><sup>28</sup>Mg</b>	20.91 h	$\beta^-$	<b><sup>111</sup>In</b>	2.80 days	EC
<b><sup>32</sup>Si</b>	153 years	$\beta^-$ *	<b><sup>113m</sup>In</b>	99.48 min	IT
<b><sup>32</sup>P</b>	14.26 days	$\beta^-$ *	<b><sup>123</sup>I</b>	13.27 h	EC
<b><sup>33</sup>P</b>	25.3 days	$\beta^-$ *	<b><sup>125</sup>I</b>	59.40 days	EC
<b><sup>35</sup>S</b>	87.51 days	$\beta^-$ *	<b><sup>131</sup>I</b>	8.025 days	$\beta^-$
<b><sup>36</sup>Cl</b>	3.01E5 years	$\beta^\pm$ EC	<b><sup>133</sup>Xe</b>	5.243 days	$\beta^-$
<b><sup>46</sup>Sc</b>	83.79 days	$\beta^-$	<b><sup>137</sup>Cs<sup>e</sup></b>	30.1 years	$\beta^-$ *
<b><sup>51</sup>Cr</b>	27.70 days	EC	<b><sup>140</sup>La</b>	1.679 days	$\beta^-$
<b><sup>54</sup>Mn</b>	312.1 days	$\beta^-$ EC	<b><sup>148</sup>Gd</b>	70.9 years	$\alpha$ *
<b><sup>57</sup>Co</b>	271.7 days	EC	<b><sup>153</sup>Sm</b>	46.3 h	$\beta^-$
<b><sup>57</sup>Cu</b>	196 ms	$\beta^+$ EC	<b><sup>159</sup>Gd</b>	18.48 h	$\beta^-$
<b><sup>57</sup>Cr</b>	21.1 s	$\beta^-$ *	<b><sup>169</sup>Yb</b>	32.02 days	EC
<b><sup>59</sup>Fe</b>	44.50 days	$\beta^-$	<b><sup>170</sup>Tm</b>	128.6 days	$\beta^-$ EC
<b><sup>60</sup>Co</b>	5.271 years	$\beta^-$	<b><sup>186</sup>Re</b>	89.25 h	$\beta^-$ EC
<b><sup>64</sup>Cu</b>	12.70 h	$\beta^\pm$ EC	<b><sup>191</sup>Os</b>	15.4 days	$\beta^-$
<b><sup>65</sup>Zn</b>	244.1 days	$\beta^+$ EC	<b><sup>192</sup>Ir</b>	73.83 days	$\beta^-$ EC
<b><sup>67</sup>Ga</b>	3.261 days	EC	<b><sup>198</sup>Au</b>	2.696 days	$\beta^-$
<b><sup>68</sup>Ga</b>	67.71 min	$\beta^+$ EC	<b><sup>201</sup>Tl</b>	73 h	EC
<b><sup>75</sup>Se</b>	119.8 days	EC	<b><sup>204</sup>Tl</b>	3.78 years	$\beta^-$ EC *
<b><sup>81</sup>Rb</b>	4.570 h	$\beta^+$ EC	<b><sup>210</sup>Pb</b>	22.2 years	$\alpha\beta^-$
<b><sup>82</sup>Rb</b>	1.273 min	$\beta^+$ EC	<b><sup>241</sup>Am</b>	432.6 years	$\alpha$

<sup>a</sup>Decays without any gamma photon emission are denoted by \*

<sup>b</sup>In equilibrium with decay product <sup>32</sup>Rb (1.273 min,  $\beta^+$  EC)

<sup>c</sup>In equilibrium with decay product <sup>90</sup>Y (64 h,  $\beta^-$ )

<sup>d</sup>In equilibrium with decay product <sup>99m</sup>Tc (6.01 h, IT)

<sup>e</sup>In equilibrium with decay product <sup>137m</sup>Ba (2.552 min, IT)

Source: References [4, 5]

electron configurations leads to characteristic x-rays, and the deflection of charged particles in the nuclear electric field results in bremsstrahlung.

### Characteristic X-rays and Fluorescence

The electrons around a nucleus are arranged in shells or layers, each of which can hold a maximum number of electrons. The two electrons in the innermost shell (*K* shell) are the most tightly bound, the six electrons in the next shell (*L* shell) are the next most tightly bound, and so on outward

for the *M*, *N*,... shells. If the normal electron arrangement around a nucleus is altered, say by ejection of an inner electron, the electrons begin a complex series of transitions to vacancies in the inner shells (thereby acquiring higher binding energies) until the unexcited state of the atom is achieved. In each electronic transition, the difference in binding energy between the final and initial states is either emitted as a photon, called a *characteristic x-ray*, or given up to another electron which is ejected from the atom, called an

*Auger electron.* The discrete electron energy levels and the transition probabilities between levels vary with the  $Z$  number of the atom, and thus the characteristic x-rays provide a unique signature for each element.

The number of x-rays with different energies is greatly increased by the multiplicity of electron energy levels available in each shell ( $1, 3, 5, 7, \dots$  distinct energy levels for the  $K, L, M, N, \dots$  shells, respectively). To identify the various characteristic x-rays for an element, many different schemes have been proposed. One of the more popular uses the letter of the shell whose vacancy is filled together with a numbered Greek subscript to identify a particular electron transition (e.g.,  $K_{\alpha 1}$  and  $L_{\gamma 5}$ ).

#### Production of Characteristic X-Rays

There are several methods whereby atoms may be excited and characteristic x-rays produced. A photoelectric absorption leaves the absorbing atom in an ionized state. If the incident photon energy is sufficiently greater than the binding energy of the  $K$ -shell electron, which ranges from 14 eV for hydrogen to 115 keV for uranium, it is most likely (80–100%) that a vacancy is created in the  $K$  shell and thus that the  $K$  series of x-rays dominates the subsequent secondary radiation. These x-ray photons produced from photoelectric absorption are often called *fluorescent radiation* and are widely used to identify trace elements in a sample by bombarding the sample with low-energy photons from a radioactive source or with x-rays from an x-ray machine and then observing the induced fluorescent radiation.

Characteristic x-rays can also arise following the decay of a radionuclide. In the decay process known as *electron capture*, an orbital electron, most likely from the  $K$  shell, is absorbed into the nucleus, thereby decreasing the nuclear charge by one unit. The resulting  $K$ -shell vacancy then gives rise to the  $K$  series of characteristic x-rays. A second source of characteristic x-rays which occurs in many radionuclides is a result of *internal conversion*. Most daughter nuclei formed as a result of any type of nuclear decay are left in excited states. This excitation energy may be

either emitted as a gamma photon or transferred to an orbital electron which is ejected from the atom. Again, it is most likely that a  $K$ -shell electron is involved in this internal conversion process.

#### X-Ray Energies

To generate a particular series of characteristic x-rays, an electron vacancy must be created in an appropriate electron shell. Such vacancies are created only when sufficient energy is transferred to an electron in that shell so as to allow it to break free of the atom or at least be transferred to an energy level above all the other electrons. The characteristic x-rays emitted when electrons fill a vacancy in a shell always have less energy than that required to create the vacancy. The most energetic x-rays arise from an electron filling a  $K$ -shell vacancy and, since the binding energy of  $K$ -shell electrons increases with the atomic number  $Z$ , the most energetic x-rays are  $K$ -shell x-rays from heavy atoms. For example, the  $K_{\alpha}$  x-ray energy varies from only 0.52 keV for oxygen ( $Z = 8$ ) to 6.4 keV for iron ( $Z = 26$ ) to 98 keV for uranium ( $Z = 92$ ). By comparison, the  $L$  series of x-rays for uranium occurs at energies around 15 keV. Thus, in most shielding situations, only the  $K$  series of x-rays from heavy elements are sufficiently penetrating to be of concern.

#### X-Ray Yields

The *fluorescent yield* of a material is the fraction of the atoms with a vacancy in an inner electron shell that emit an x-ray upon the filling of the vacancy. The fluorescent yield increases dramatically with the  $Z$  number of the atom. For example, the fluorescent yield for vacancies in the  $K$  shell increases from 0.0069 for oxygen ( $Z = 8$ ) to 0.97 for uranium ( $Z = 92$ ). Thus, the secondary fluorescent radiation is of more concern for heavy materials.

#### Bremsstrahlung

A charged particle gives up its kinetic energy either by collisions with electrons along its path or by photon emission as it is deflected, and hence accelerated, by the electric fields of nuclei. The photons produced by the deflection of the charged

particle are called *bremsstrahlung* (literally, “braking radiation”). For a given type of charged particle, the ratio of the rate at which the particle loses energy by bremsstrahlung to that by ionizing and exciting the surrounding medium is

$$\frac{\text{Radiation loss}}{\text{Ionization loss}} \simeq \frac{EZ}{700} \left( \frac{m_e}{M} \right)^2,$$

where  $E$  is in MeV,  $m_e$  is the electron mass, and  $M$  is the mass of the charged particle. From this result, it is seen that bremsstrahlung is more important for high-energy particles of small mass incident on high- $Z$  material. In shielding situations, only electrons ( $m_e/M = 1$ ) are ever of importance for their associated bremsstrahlung. All other charged particles are far too massive to produce significant amounts of bremsstrahlung. Bremsstrahlung from electrons, however, is of particular radiological interest for devices that accelerate electrons, such as betatrons and x-ray tubes, or for situations involving radionuclides that emit only beta particles.

#### Energy Distribution of Bremsstrahlung

The energy distribution of the photons produced by the bremsstrahlung mechanism is continuous up to a maximum energy corresponding to the maximum kinetic energy of the incident charged particles. The exact shape of the continuous bremsstrahlung spectrum depends on many factors, including the energy distribution of the incident charged particles, the thickness of the target, and the amount of bremsstrahlung absorbed in the target and other masking material.

For monoenergetic electrons of energy  $E_o$  incident on a target thick compared to the electron range, the number of bremsstrahlung photons of energy  $E$ , per unit energy and per incident electron, emitted as the electron is completely slowed down can be approximated by the Kramer distribution

$$N(E_o, E) \simeq 2kZ \left( \frac{E_o}{E} - 1 \right), \quad E \leq E_o,$$

where  $k \simeq 0.0007 \text{ MeV}^{-1}$  is a normalization constant. The fraction of the incident electron’s

kinetic energy that is subsequently emitted as bremsstrahlung can then be calculated from this approximation as  $kZE_o$ , which is usually a small fraction. For example, about 10% of the energy of a 2-MeV electron, when stopped in lead, is converted into bremsstrahlung.

#### Angular Distribution of Bremsstrahlung

The angular distribution of bremsstrahlung is generally quite anisotropic and varies with the incident electron energy. Bremsstrahlung induced by low-energy electrons ( $\lesssim 100 \text{ keV}$ ) is emitted over a relatively broad range of directions around the direction of the incident electron. As the electron energy increases, the direction of the peak intensity shifts increasingly toward the forward direction until, for electrons above a few MeV, the bremsstrahlung is confined to a very narrow forward beam. The angular distribution of radiation leaving a target is very difficult to compute since it depends on the target size and orientation. For thin targets, the anisotropy of the bremsstrahlung resembles that for a single electron-nucleus interaction, while for thick targets multiple electron interactions and photon absorption in the target must be considered.

#### X-ray Machines

The production of x-ray photons as bremsstrahlung and fluorescence occurs in any device that produces high-energy electrons. Devices that can produce significant quantities of x-rays are those in which a high voltage is used to accelerate electrons, which then strike an appropriate target material. Such is the basic principle of all x-ray tubes used in medical diagnosis and therapy, industrial applications, and research laboratories.

Although there are many different designs of x-ray sources for different applications, most designs for low-to-medium voltage sources ( $\lesssim 180 \text{ kV}$ ) place the electron source (cathode) and electron target (anode) in a sealed glass tube. The glass tube acts as both an insulator between the anode and cathode and a chamber for the necessary vacuum through which the electrons are accelerated. The anodes of x-ray tubes incorporate a suitable metal upon which the electrons

impinge and generate the bremsstrahlung and characteristic x-rays. Most of the electron energy is deposited in the anode as heat rather than being radiated away as x-rays, and thus heat removal is an important aspect in the design of x-ray tubes. Tungsten is the most commonly used target material because of its high atomic number and because of its high melting point, high thermal conductivity, and low vapor pressure. Occasionally, other target materials are used when different characteristic x-ray energies are desired. For most medical and dental diagnostic units, voltages between 40 and 150 kV are used, while medical therapy units may use 6–150 kV for superficial treatment or 180 kV to 50 MV for treatment requiring very penetrating radiation.

The energy spectrum of x-ray photons emitted from an x-ray tube has a continuous bremsstrahlung component up to the maximum electron energy, that is, the maximum voltage applied to the tube. If the applied voltage is sufficiently high as to cause ionization in the target material, there will also be characteristic x-ray lines superimposed on the continuous bremsstrahlung spectrum. Absorbing filters are used to minimize low-energy x-rays, which are damaging to skin. As the beam filtration increases, the low-energy x-rays are preferentially attenuated and the x-ray spectrum *hardens* and becomes more penetrating. These phenomena are illustrated in Fig. 4. Calculated exposure spectra of x-rays are shown for the same operating voltage but for two different amounts of beam filtration. As the filtration increases, lower energy x-rays are preferentially attenuated; the spectrum hardens and becomes more penetrating. Readily apparent in these spectra are the tungsten  $K_{\alpha 1}$  and  $K_{\alpha 2}$  characteristic x-rays.

The characteristic x-rays may contribute a substantial fraction of the total x-ray emission. For example, the  $L$ -shell radiation from a tungsten target is between 20% and 35% of the total energy emission when voltages between 15 and 50 kV are used. Above and below this voltage range, the  $L$  component rapidly decreases in importance. However, even a small degree of filtering of the x-ray beam effectively eliminates the low-energy portion of the spectrum containing the  $L$ -shell

x-rays. The higher-energy  $K$ -series x-rays from a tungsten target contribute a maximum of 12% of the x-ray emission from the target for operating voltages between 100 and 200 kV.

### Synchrotron Photons


When a charged particle moving in a straight line is accelerated by deflecting it in an electromagnetic field, the perturbation in the particle's electric field travels away from the particle at the speed of light and is observed as electromagnetic radiation (photons). Such is the origin of bremsstrahlung produced when fast electrons (beta particles) are deflected by the electric field of a nucleus.

This same mechanism can be used to produce intense photon radiation by deflecting an electron beam by magnetic fields. In a special accelerator called a *synchrotron*, highly relativistic electrons are forced to move in a circular path inside a storage ring by placing *bending magnets* along the ring. Photons are emitted when the beam is accelerated transversely by (1) the bending magnets (used to form the circular electron beam), and by (2) insertion device magnets such as *undulators*, *wigglers*, and *wavelength shifters*.

Because the electrons are very relativistic, the synchrotron radiation is emitted in a very narrow cone in the direction of electron travel as they are deflected. Undulators cause the beam to be deflected sinusoidally by a weak oscillatory magnetic field, thereby producing nearly monochromatic photons. By contrast, a wiggler uses a strong oscillatory magnetic field which, because of relativistic effects, produces distorted sinusoidal deflections of the electron beam and synchrotron radiation with multiple harmonics, that is, a line spectrum. If very strong magnetic fields are used, many harmonics are produced that merge to yield a continuous spectrum ranging from the infrared to hard x-rays. By placing undulators or wigglers at a specific location in the storage ring, very intense and narrowly collimated beams of photons with energies up to a few keV can be produced to use, for example, in x-ray diffraction analysis.

### Radiation Sources,

**Fig. 4** Measured photon spectra from a Machlett Aeromax x-ray tube (tungsten anode) operated at a constant 140 kV potential. This tube has an inherent filter thickness of 2.50-mm aluminum equivalent and produces the spectrum shown by the thick line. The addition of an external 6-mm aluminum filter hardens the spectrum shown by the thin line. Both spectra are normalized to unit area. Data are from [6]

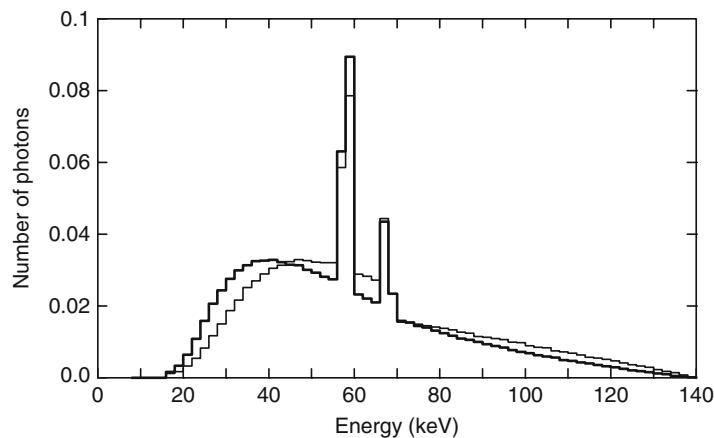

### Cosmic Rays, Solar Radiation, and Trapped Radiation Belts


The earth is subjected continuously to radiation with sources in our sun and its corona, from sources within our galaxy, and from sources beyond our galaxy. In addition, surrounding the earth are belts of trapped particles with solar origins. Radiation reaching the earth's atmosphere consists of high-energy electrons and atomic nuclei. Hydrogen nuclei (protons) constitute the major component, with heavier atoms decreasing in importance with increasing atomic number. The highest energy particles originate in our galaxy and more distant galaxies and are referred to as galactic cosmic radiation (GCR). Cascades of nuclear interactions in the atmosphere give rise to many types of secondary particles. Of much lower energy are particles of solar origin, which are highly variable in time and are associated with solar activity. Sources of these particles are sometimes associated with solar flares but are more generally identified with solar particle events (SPE) or coronal mass ejections (CME). The number of solar flare events and SPE emissions fluctuate with the 11-year cycle associated with solar activity. GCR intensity is modulated by SPE emissions, being minimal when solar activity is maximal.

### Galactic Cosmic Radiation

At the earth's surface, cosmic radiation dose rates are largely due to muons and electrons. The intensity and angular distribution of galactic radiation reaching the earth is affected by the earth's magnetic field and perturbed by magnetic disturbances generated by solar flare activity. Consequently, at any given location, cosmic ray doses may vary in time by a factor of 3. At any given time, cosmic ray dose rates at sea level may vary with geomagnetic latitude by as much as a factor of 8, being greatest at the pole and least at the equator. Cosmic ray dose rates also increase with altitude. At geomagnetic latitude 55°N, for example, the absorbed dose rate in tissue approximately doubles with each 2.75 km (9,000 ft) increase in altitude, up to 10 km (33,000 ft). Figure 5 illustrates the relative importance, in terms of dose rate, for cosmic rays and their reaction products in the atmosphere. Cosmic ray dose rates affecting populations vary strongly with latitude. Table 5 describes this variation. The outdoor and indoor average effective dose rates for space radiation in the most heavily populated urban areas in the USA are 45 and 36 nSv/h [7]. Population averaged annual doses are about the same in the northern and southern hemispheres, and globally amount to 31 nSv/h for charged particles plus 5.5 nSv/h for neutrons. GCR energies span a

**Radiation Sources,**

**Fig. 5** Components of the dose equivalent rate from cosmic rays in the atmosphere (Reproduced from [2], derived from [5])

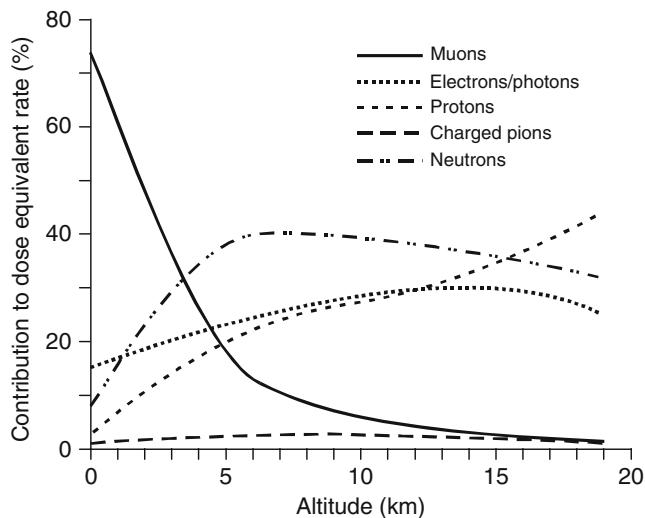

**Radiation Sources, Table 5** Cosmic ray dose rate variation at sea level as a function of latitude for the northern and southern hemispheres

Latitude (deg N-S)	Population% in latitude band (N-S)	Effective dose rate (nSv/h)	
		Charged particles	Neutrons
60–70	0.4–0	32	10.9
50–60	13.7–0.5	32	10
40–50	15.5–0.9	32	7.8
30–40	20.4–13	32	5.3
20–30	32.7–14.9	30	4
10–20	11–16.7	30	3.7
0–10	6.3–54	30	3.6

Source: Reference [2]

vast range and there is no way of shielding astronauts from GCR effects. On the earth's surface, the GCR presence results in a source of steady low-dose-rate radiation.

As a result of nuclear reactions of cosmic rays with constituents of the atmosphere, secondary neutrons, protons, and pions, mainly, are produced. Subsequent pion decay results in electrons, photons, and muons. Muon decay, in turn, leads to secondary electrons, as do scattering interactions of charged particles in the atmosphere. Cosmic ray debris that reaches the surface of the earth consists mainly of muons and electrons with a few neutrons. Except for short-term influences of

solar activity, galactic cosmic radiation has been constant in intensity for at least several thousand years. The influence of solar activity is cyclical and the principal variation is on an 11-year cycle. The geomagnetic field of the earth is responsible for limiting the number of cosmic rays that can reach the atmosphere thus accounting for the strong effect of latitude on cosmic-ray dose rates.

**Solar Particle Events**

Both SPE and CME emissions are mainly hydrogen and helium nuclei, that is, protons and alpha particles, predominantly the former. Electrons are thought to be emitted as well, but with energies

less than those of protons by a factor equal to the ratio of the rest masses. Energy spectra are highly variable, as are temporal variations of intensity. A typical course of events for a flare is as follows. Gamma and x-ray emission takes place over about 4 h as is evidenced by radio interference. The first significant quantities of protons reach the earth after about 15 h and peak proton intensity occurs at about 40 h after the solar eruption.

Solar particle events are closely related to solar flares associated with sunspots with intense magnetic fields linking the corona to the solar interior. CME emissions are not directly connected to flares, but originate in the corona driven by the energy of the sun's magnetic field. While of too low energy to contribute to radiation doses at the surface of the earth, these radiations, which fluctuate cyclically with an 11-year period, perturb earth's magnetic field and thereby modulate galactic cosmic-ray intensities with the same period. Maxima in solar flare activity lead to minimal GCR intensity. SPE and CME emissions, in comparison to galactic cosmic rays, are of little significance as a hazard in aircraft flight or low orbital space travel. On the other hand, these radiations present considerable, life-threatening risk to personnel and equipment in space travel outside the earth's magnetic field. Protection of astronauts in space missions beyond low-earth orbit is addressed in [8].

### Trapped Radiation Belts

Released continuously from the sun, as an extension of the corona, is the solar wind, a plasma of low-energy protons and electrons. The solar wind does not present a radiation hazard, even in interplanetary space travel. However, it does affect the interplanetary magnetic field and the shape of the geomagnetically trapped radiation belts. These radiation belts are thought to be supplied by captured solar-wind particles and by decay into protons and electrons of neutrons created by interactions of galactic cosmic rays in the atmosphere. The trapped radiation can present a significant hazard to personnel and equipment in space missions.

The earth's geomagnetically trapped radiation belts are also known as Van Allen belts in

recognition of James A. Van Allen and his coworkers who discovered their existence in 1958. There are two belts. The inner belt consists of protons and electrons, the protons being responsible for radiation doses in the region. The outer belt consists primarily of electrons. The particles travel in helical trajectories determined by the magnetic field surrounding the planet. They occur at maximum altitude at the equator and approach the earth most closely near the poles. At the equator, the inner belt extends to about 2.8 earth radii. The center of the outer belt is at about 5 earth radii. The solar wind compresses the trapped radiation on the sunny side of the earth and the compression is enhanced by solar flare activity. In the earth's shadow, the belts are distended as the solar wind sweeps the magnetosphere outward. In a plane through the earth, perpendicular to the earth-sun axis, the proton and electron belts are maximum in intensity at altitudes of about 3,000 and 18,000 km, respectively.

In the southern Atlantic Ocean, there is an eccentricity of the geomagnetic field with respect to the earth's center, and magnetic field lines dip closer to earth. This region, the South Atlantic Anomaly, is the primary source of radiation exposure to astronaut crew members in low-altitude and low-inclination missions. Radiation protection guidance for low-earth orbit missions is found in [9] and [10].

### Radiation Sources Used in Human Activities

Life on earth is continually subjected to radiation of natural origin. Exposure is from sources outside the body, arising from cosmic radiation and radionuclides in the environment, and from sources inside the body, arising from ingested or inhaled radionuclides retained in the body. Natural sources are the major contributors to human radiation exposure and represent a reference against which exposure to man-made sources may be compared. Table 6 summarizes radiation doses to man resulting from natural sources. Listed in the table are both doses to individual organs or tissues of the body and the effective dose

**Radiation Sources, Table 6** Summary of US annual doses from natural background radiation

Radiation source	Average annual dose equivalent (mrem)				
	Bronchial epithelium	Other soft tissues	Bone surfaces	Bone marrow	Effective dose equivalent
Cosmic radiation	27	27	27	27	27
Cosmogenic nuclides	1	1	1	3	1
External terrestrial	28	28	28	28	28
Inhaled nuclides	2,400				200
Nuclides in the body	36	36	110	50	39
Totals (rounded)	2,500	90	170	110	300

Source: Reference [11]

equivalent, which is a composite dose weighted by the relative radiation sensitivities of many organs and tissues of the body.

Since the early 1980s, there has been negligible change in exposure to naturally occurring radiation, an increase estimated from 3 to 3.1 mSv annually. However, in the USA, medical diagnostic exposures have increased by a factor of 5.5 by 2006, an increase from 0.53 to 3 mSv annually. Of the 3 mSv total, 1.47 mSv is from computed tomography (CT) scans, 0.43 mSv for interventional fluoroscopy, 0.77 mSv for nuclear medicine procedures, and 0.33 mSv for conventional radiography and fluoroscopy [10].

### Sources in Medicine

Very shortly after their discoveries at the end of the nineteenth century, radium and x-rays were used for medical purposes – radium sources being concentrated from natural materials and x-rays being generated using new technology. These were the only radiation sources seeing significant use until the 1930s, when research into nuclear fission began and when high-energy particle accelerators were developed for nuclear research. In the first half of the twentieth century, x-rays revolutionized diagnostic medicine. In the second half, accelerator radiation and radionuclides produced by accelerators and nuclear reactors established radiography, radiation therapy, and nuclear medicine, both diagnostic and

therapeutic, as mature medical sciences. Table 4 lists the radioisotopes commonly used in medicine and industry. Some of these radionuclides are produced in nuclear reactors, either as products of fission or as products of neutron absorption. Nuclei of these isotopes are rich in neutrons and tend to decay by emission of negative beta particles, thereby becoming more positive in charge and more stable. Other isotopes are produced in accelerators. These generally have nuclei deficient in neutrons and tend to decay either by emission of a positron or capture of an electron, either process leaving the nucleus more negative and more stable.

There are three broad categories of medical procedures resulting in human radiation exposure: (1) diagnostic x-ray examinations, including mammography and computed tomographic (CT) scans, (2) diagnostic nuclear medicine, and (3) radiation therapy.

### Diagnostic X-Rays

Of all the radiation exposures to the general public arising from human activity, the greatest is due to medical procedures, and collective exposures from diagnostic x-rays dominate all other medical exposures. Also, the population subgroup receiving diagnostic x-rays is not small. In the USA, about 250 million medical x rays are delivered annually, as are about 70 million CT scans. About 900 thousand persons receive radiation therapy annually [2, 7].

### Diagnostic Nuclear Medicine

Internally administered radionuclides are used medically for imaging studies of various body organs and for non-imaging studies such as thyroid uptake and blood volume measurements. Such uses present hazards for both patients and medical staff. Radiopharmaceuticals are also used for *in vitro* studies such as radioimmunoassay measurements and thus are of potential hazard to medical staff. Frequencies of procedures, while steadily increasing, vary widely from country to country. As of 2000, in industrialized countries, about 10–40 examinations involving radiopharmaceuticals are carried out annually per 1,000 population. In developing countries, annual frequencies are on the order of 0.2–2 examinations per 1,000 population. In the USA in 2006, for example, some 18 million radionuclide administrations were performed annually for diagnostic purposes [2, 7].

### Radiation Therapy

There are three broad categories of radiation therapy—teletherapy, brachytherapy, and therapy using administered radiation sources. *Teletherapy* involves external beams from sources such as sealed  $^{60}\text{Co}$  sources, x-ray machines, and accelerators that generate electron, proton, neutron, or x-ray beams. *Brachytherapy* involves sources placed within body cavities (*intracavitary* means) or placed directly within tumor-bearing tissue (*interstitial* means). In the USA, Europe, and Japan, the frequencies for teletherapy and brachytherapy procedures exceed 2,000 annually per million population.

Thyroid disorders, including cancer, for many years have been treated by  $^{131}\text{I}$ , usually by oral administration. Introduced about 1980, in association with the development of techniques for producing monoclonal antibodies, were new cancer diagnosis and treatment methodologies called radioimmunoimaging and radioimmunotherapy. The therapy involves administration of large doses of antibodies tagged with radionuclides and selected to bind with antigens on the surfaces of tumor cells. Imaging involves administration of very much smaller doses, with the goal of detecting the presence of tumor cells using

standard camera and scanner imaging techniques. Imaging requires the use of radionuclides such as  $^{99\text{m}}\text{Tc}$ , which emit low-energy gamma rays. Therapy involves the use of radionuclides emitting beta particles and electrons, with minimum emission of gamma rays, thus limiting radiation exposure, to the extent possible, to tumor cells alone. Among radionuclides used in radioimmunotherapy are  $^{75}\text{Se}$ ,  $^{90}\text{Y}$ ,  $^{111}\text{In}$ ,  $^{125}\text{I}$ ,  $^{186}\text{Re}$ , and  $^{191}\text{Os}$ .

### Occupational Medical Exposure

A world survey conducted by the United Nations for the years 1990–1994 reports the annual average effective dose 1.39 mSv to some 550,000 workers receiving measurable doses (2.3 million total). Of this group, the greatest number were involved in diagnostic radiology (350,000 at 1.34 mSv). Overall, exposures were in the range of 0.9–1.7 mSv annually [2].

### Accelerator Sources

The earliest particle accelerators were the x-ray tubes of the late nineteenth century. Indeed, the radio and television (cathode-ray) tubes of the twentieth century are low-voltage electron accelerators. As electrons beams are stopped, x-rays are produced, inadvertently in the case of radio tubes, and deliberately in the case of x-ray generators.

Modern charged-particle accelerators date from the early 1930s, when Cockroft and Walton in England, and Lawrence and Livingston in America developed particle accelerators for research purposes using beams of electrons or ions. Over the years, steady advances have been made in types of accelerators, in the energies of the particles accelerated, and in the magnitude of the current carried by the charged particle beams. Accelerators continue to serve at the frontiers of atomic and nuclear physics as well as the materials sciences. Moreover, accelerators play an ever more important role in diagnostic and therapeutic medicine and in industrial production processes such as radiography, analysis of materials, radiation processing, and radioisotope production.

Particle accelerators may be classified technologically as direct (potential drop) accelerators

and indirect (radio-frequency, plasma) accelerators. Among the former are the Van de Graaff and Cockcroft-Walton devices. Among the latter are linear accelerators, betatrons, cyclotrons, and synchrotrons. In the linear accelerator, the particles travel in straight lines, accelerated by the electric fields along their paths. In cyclic accelerators, magnets are used to direct particles into approximately circular paths, along which they may pass through the same accelerating electric fields many times along their paths. The ultimate energies reached by the accelerated particles have increased from about  $10^6$  eV in the accelerators of the 1930s to  $10^{12}$  eV in modern research accelerators.

By their very nature and function, accelerators are intense radiation sources. In certain applications, accelerated beams of charged particles are extracted from accelerators and directed onto external receivers. Medical applications and radiation processing see this use of accelerators. In other applications, charged particle beams impinge on internal target receivers designed to act as desired sources of secondary radiations such as x-rays or neutrons. In all cases, beams are stopped by targets within which secondary x-rays, neutrons, and other particles such as mesons may be produced as undesirable but unavoidable by-product radiations. Radiation shielding integral with the accelerator as well as structural radiation shielding surrounding the accelerator are necessary for personnel protection.

The production of secondary radiations arises mainly from three phenomena, direct nuclear reactions of ions or electron with accelerator components, electromagnetic cascades, and hadronic cascades. Among the secondary radiations are neutrons, which in turn may be absorbed in accelerator and structural materials thereby leading to capture gamma rays and radioactive reaction products.

Representative of the direct nuclear reactions are those of relatively low-energy proton or deuteron beams in light-element targets. A popular method of generating energetic neutrons, for example, involves interactions of deuterons accelerated to 150 keV with tritium atoms in a target. The resulting reaction,  ${}^3\text{H}(d,n){}^4\text{He}$ , produces an

approximately isotropic and monoenergetic source of 14-MeV neutrons. Other such reactions include  ${}^3\text{H}(p,n){}^3\text{He}$ ,  ${}^2\text{H}(d,n){}^3\text{He}$ , and  ${}^7\text{Li}(p,n){}^7\text{Be}$ .

The electromagnetic cascade involves exchanges of the kinetic energy of an electron to electromagnetic energy of multiple photons in the bremsstrahlung process, followed by creation of the rest-mass and kinetic energies of an electron-positron pair in the pair-production process experienced by the photons. As the positrons and electrons lose kinetic energy radiatively, more photons are produced, and the cascade continues. The cascade is quenched when photons have insufficient energy to generate the rest masses of the electron-positron pair and when electron radiative energy losses fall below collisional energy losses.

In high-energy electron or proton accelerators, hadronic cascades may be produced when particles collide with atoms in the accelerator target or, inadvertently, with some other accelerator component, giving rise to many reaction products, including pions, kaons, protons, and neutrons. There is also exchange with the electromagnetic cascade via photodisintegration reactions and by production of energetic gamma rays upon decay of  $\pi^0$  mesons. Propagation of the hadronic cascade occurs through reactions of the secondary protons and neutrons, and is especially important for nucleon energies of 150 MeV or greater. The cascade process produces most of the induced radioactivity at high-energy accelerators. Many reaction-product nuclei are in highly excited nuclear states and relax by emission of neutrons, whose subsequent absorption leads, in many cases, to radioactive by-products.

Water, plastics, and oils in the radiation environments of high-energy accelerators yield  ${}^7\text{Be}$  and  ${}^{11}\text{C}$ . Aluminum yields these same radionuclides plus  ${}^{18}\text{F}$ ,  ${}^{22}\text{Na}$ , and  ${}^{24}\text{Na}$ . Steel, stainless steel, and copper yield all the aforementioned, plus a very wide range of radionuclides, especially those of V, Cr, Mn, Co, Fe, Ni, Cu, and Zn. Neutron absorption in structural concrete also leads to a wide range of radionuclides, among which  ${}^{24}\text{Na}$  is a major concern. This nuclide has a half-life of 15 h and, in each decay, emits high-energy beta particles and gamma rays.

### Industrial Isotope Sources

Radionuclides used in industry contribute very little to collective population doses, although individual occupational exposures may be significant. The largest sources are those used in radiography, typically comprising 10–100 Ci of  $^{192}\text{Ir}$ ,  $^{137}\text{Cs}$ ,  $^{170}\text{Tm}$ , or  $^{60}\text{Co}$ . Borehole logging is accomplished using somewhat lower activity gamma-ray sources and neutron sources such as mixtures of plutonium, americium, or californium with beryllium. Much lower activity sources, often  $^{90}\text{Sr}$  –  $^{90}\text{Y}$  beta-particle sources, are used for various instrumentation and gaging applications.

There are many consumer products containing radiation sources. While these sources are very weak and no one individual receives significant radiation exposure, many persons are involved. For example, the soil, water supplies, and building materials contain low concentrations of naturally occurring radionuclides. Electronic devices emit very low levels of x-rays, and devices ranging from luminous timepieces to smoke detectors contain weak radiation sources. Even the use of tobacco exposes smokers to alpha particles from naturally occurring  $^{210}\text{Po}$  in the tobacco leaf.

Various modern technologies have led to human radiation exposures in excess of those which would have occurred in the absence of the technologies. For example, the mining of coal and other minerals and their use is responsible for increased releases of naturally occurring radionuclides to the environment. World production of coal is about 4 billion tonnes annually. About 70% is used in generation of electricity, the balance mainly in domestic heating and cooking. Coal contains  $^{40}\text{K}$ , and the  $^{238}\text{U}$  and  $^{232}\text{Th}$  decay chains in widely varying concentrations. Depending on the nature of combustion, radionuclides are partitioned between fly ash and bottom ash. The smaller-sized fly ash particles are more heavily enriched with radionuclides, particularly  $^{210}\text{Pb}$  and  $^{210}\text{Po}$ . The average ash content of coal is about 10% by weight, but may be as high as 40%. Efficiency of ash removal in power plants is quite variable- from only 80% removal to as much as 99% removal, the average being about 97.5%. In domestic use of coal, as much as 50% of the total ash is released into the

atmosphere. In terms of doses to individual tissues, the main impact of atmospheric releases during combustion is the dose to bone surface cells accruing from inhalation of  $^{232}\text{Th}$  present in the downwind plumes of particulates from plants.

Annually, some 1.4 billion tonnes of phosphate rock are mined and processed for use in production of fertilizers and phosphoric acid. By-product (phospho)gypsum finds wide use in the construction industry. The USA produces about 38% of the phosphate rock, the former Soviet Union 19%, and Morocco 14%. Sedimentary phosphate rock contains high concentrations of radionuclides in the  $^{238}\text{U}$  decay chain. Most airborne radioactivity releases are associated with dust produced in strip mining, grinding, and drying of the ore. Utilization of the phosphates leads to both internal and external radiation exposure, the greatest exposure resulting from use of by-product gypsum in construction.

### The Nuclear Power Industry

In mid-2008, there were 439 nuclear power plants operating around the world, with a total electrical generating capacity of 372,000 MW. An additional 42 nuclear plants were under construction in 15 countries. Most of the generating capacity consisted of pressurized-water and boiling-water reactors, which use ordinary water as coolant. Gas-cooled reactors, heavy-water reactors, light-water graphite reactors, and sodium-cooled reactors provided the balance of the capacity.

#### Nuclear Power Reactors

The fission process and production of neutrons associated with reactor operation lead to a wide array of radioactive fission products and activation products arising from neutron absorption. Moreover, large quantities of uranium and plutonium are fissioned in modern nuclear power plants (typically 3 kg/day) to produce the thermal energy needed to produce electricity. Consequently, large quantities of fission products are produced and accumulate in the fuel. Also contained within the fuel are actinides produced by cumulative neutron absorption in uranium, thorium, and plutonium fuels. The actinides are characterized by

spontaneous fission in competition with alpha-particle decay, and require sequestration to the same degree as the fission products.

One way of categorizing the generated radionuclides is by their physical-chemical behavior, namely, (1) noble gases (2)  $^3\text{H}$  and  $^{14}\text{C}$ , (3) halogens, and (4) particulates. These divisions are based on the relative ease of isolation of the radionuclides from airborne effluents. The noble gases include the many isotopes of the krypton and xenon fission products as well as the activation product  $^{41}\text{Ar}$ . These elements cannot be removed from a gas stream by filtration. Halogens include the many isotopes of the bromine and iodine fission products. If they are present in a gas stream, they are likely to be in a chemical form unsuitable for filtration, and effective removal requires adsorption on a material such as activated charcoal. Other radionuclides and the halogens in ionic form may be removed from a gas stream by filtration. In aqueous liquids, the particulates may be isolated by evaporation, filtration, or ion exchange. The halogens, unless in ionic form, cannot be isolated by evaporation or filtration, nor can noble gases. Special cases are  $^3\text{H}$  in the form of tritiated water and  $^{14}\text{C}$  as carbon dioxide. The tritium can be isolated only with very great difficulty, and  $\text{CO}_2$  removal requires chemical treatment.

There are two sources of radionuclides in reactor coolant, leakage from defective fuel rods and activation products produced by neutron interactions in the coolant itself or with fuel and structure in contact with the coolant. Activation product sources are inevitable, and include a number of radionuclides which may be produced in the coolant. For example,  $^{16}\text{N}$  is produced as a result of neutron interactions with oxygen,  $^{41}\text{Ar}$  as a result of neutron absorption in naturally occurring argon in the atmosphere and  $^3\text{H}$  as a result of neutron absorption in deuterium and, especially in pressurized-water reactors, by neutron-induced breakup of  $^{10}\text{B}$ . Of course, in a sodium-cooled fast reactor, activation of natural sodium to short-lived  $^{24}\text{Na}$  is an important consideration for in-plant radiation protection. Other activation products include isotopes of iron, cobalt, chromium, manganese, and other constituents of

structural and special-purpose alloys. The radionuclides are leached into the coolant stream. They then may be adsorbed on surfaces or trapped as particulates in the boundaries of coolant streams within the plant, only later to be resuspended in the coolant. These sources can be minimized by carefully specifying the alloy and trace-element concentrations in plant components.

### Uranium Mining and Fuel Fabrication

In the preparation of new fuel for nuclear reactors, the radiation sources encountered are natural sources associated with the uranium and thorium decay chains.

The principal release of radiation sources associated with uranium mining, underground or open pit, is release of natural  $^{222}\text{Rn}$  to the atmosphere. Airborne particulates containing natural uranium daughter products also arise from open pit mining and from ore crushing and grinding in the milling process. Mill tailings can also become a long-term source of radiative contamination due to wind and water erosion, leaching, and radon release, the degree depending on the tailing-stabilization program followed. Mining and milling operations are generally conducted in remote areas, and liquid releases containing dissolved uranium daughter products are of little impact on human populations.

The product of milling is  $\text{U}_3\text{O}_8$  "yellow cake" ore concentrate. In this phase of the nuclear fuel cycle, the concentrate is purified and most often converted to  $\text{UF}_6$  for enrichment in  $^{235}\text{U}$  via gaseous diffusion or centrifuge processes. Prior to fuel fabrication, the uranium is converted to the metallic or the ceramic  $\text{UO}_2$  form suitable for use in fuel elements. Large quantities of uranium depleted in  $^{235}\text{U}$  are by-products of the enrichment process. Under current practice, the depleted uranium is held in storage as being potentially valuable for use in breeder reactors. In this stage of the nuclear fuel cycle, there are relatively minor liquid and gaseous releases of uranium and daughter products to the environment.

### Fuel Reprocessing

As nuclear fuel reaches the end of its useful life in power generation, there remain within the fuel

recoverable quantities of uranium and plutonium which may be extracted for reuse in the fuel reprocessing stage of the nuclear fuel cycle. Whether or not the fuel is reprocessed is governed by economic and political considerations. Among the former are costs of reprocessing as compared to costs of mining, milling, conversion, and enrichment of new stocks of uranium. Among the latter are concerns over the potential diversion of plutonium to nuclear-weapons use.

In the reprocessing of oxide fuels, the spent fuel is first dissolved in nitric acid. Plutonium and uranium are extracted into a separate organic phase from which they are ultimately recovered and converted into the oxide form. The aqueous phase containing fission and activation products is then neutralized and stored in liquid form pending solidification and ultimate disposal. Because one reprocessing plant may serve scores of power plants, inventories of radionuclides in process may be very great and extraordinary design features and safety procedures are called for. Because of the time delays between removal of fuel from service and reprocessing, concerns are with only relatively long-lived radionuclides, notably  $^3\text{H}$ ,  $^{14}\text{C}$ ,  $^{85}\text{Kr}$ ,  $^{90}\text{Sr}$ ,  $^{106}\text{Ru}$ ,  $^{129}\text{I}$ ,  $^{134}\text{Cs}$ , and  $^{137}\text{Cs}$ .

During the dissolution step of reprocessing, all the  $^{85}\text{Kr}$ , the bulk of the  $^{14}\text{C}$  (as  $\text{CO}_2$ ), and portions of the  $^3\text{H}$  and  $^{129}\text{I}$  appear in a gas phase. This gas is cleaned, dried, and released through a tall stack to the atmosphere. All the  $^{85}\text{Kr}$  is thus released; however, the major part of the  $^3\text{H}$  is removed in the drying process and the bulk of the  $^{129}\text{I}$  and  $^{14}\text{C}$  is removed by reaction with caustic soda. The  $^{14}\text{C}$  may then be precipitated and held as solid waste. Depending on the degree of liquid-effluent cleanup, some of the  $^{129}\text{I}$  and other fission products subsequently may be released to the environment.

#### Waste Storage and Disposal

Wastes generated in the nuclear fuel cycle fall into the broad categories of high-level wastes (HLW) and low-level wastes (LLW). The former, comprising unprocessed spent fuel or liquid residues from fuel reprocessing, accounts for only about 1–5% of the waste volume, but about 99% of the waste activity. The latter is comprised of

**Radiation Sources, Table 7** Collective doses incurred by the public and workers from the nuclear fuel cycle, normalized to unit electrical energy generation

Operation	Committed dose (person Sv) per GWy(e)		
	General population		Occupational
	Local/ regional	Waste/ global <sup>a</sup>	
Mining	0.19	—	1.72
Milling	0.008	—	0.11
Mine tailings	0.04	7.5	—
Fuel fabrication	0.003	—	0.1
Reactor operation	0.44	0.5	3.9
Fuel reprocessing	0.13	0.05	3.0
Transportation	<0.1	—	—
Global dispersion	—	40	—
Research	—	—	1.0
Enrichment	—	—	0.02
Total	0.91	50	9.8

<sup>a</sup>For solid waste and global dispersion, committed dose is for 10,000 years

Source: Reference [2]: (1995–1997 general, 1990–1994 occupational)

in-reactor components, filter media, ion-exchange resins, contaminated clothing and tools, and laboratory wastes. For the most part, LLW consists of short-lived beta-particle and gamma-ray emitters. Wastes of low specific activity, but containing long-lived alpha-particle emitters, for example,  $^{239}\text{Pu}$ , require special handling more in the nature of that required for HLW.

In the USA, fuel elements from commercial reactors are presently not processed. By the year 2000, the cumulative spent fuel reached about 16,000 m<sup>3</sup>, amounting to 40,000 t of uranium and fission products. Most of this spent fuel will be stored at the plant sites where it is generated which are primarily in eastern states.

#### Nuclear Power and Occupational Exposure

Table 7 summarizes a United Nations survey of occupational exposures as well as public exposures based on nuclear power operations in the 1990s. Improvements continue to be made and US occupational annual committed occupational

doses have by 2007 declined from about 3 to 1.1 person Sv per GWy(e).

### Nuclear Explosives

Large fractions of radioactive debris from atmospheric nuclear weapons tests are distributed globally, and the radionuclides remain in the biosphere indefinitely. The hazard is better characterized by the long-term dose commitment than by the dose rate at any instant and location. The fusion and fission energy released in a nuclear-weapon explosion is usually measured in units of megatons (Mt). One megaton refers to the release of  $10^{15}$  cal of explosive energy- approximately the amount of energy released in the detonation of  $10^6$  metric tons of TNT. The quantity of fission products produced in a nuclear explosion is proportional to the *weapon fission yield*. For a 1-Mt weapon fission yield, there must be the complete fissioning of about 56 kg of uranium or plutonium. The quantities of  $^3\text{H}$  and  $^{14}\text{C}$ , which are produced in the atmosphere by interactions of high-energy fission neutrons, are also proportional to the *weapon fusion yield*. There are several fusion reactions used in thermonuclear devices, with a 1-Mt weapon fusion yield requiring, for example, the fusion of 7.4 kg of tritium with 4.9 kg of deuterium.

The disposition of weapon debris may be divided into three categories, local fallout, tropospheric fallout, and stratospheric fallout. Local fallout, comprising as much as 50% of the debris and consisting of large particles, is defined as that deposited within 100 miles of the detonation site. Depending on detonation altitude and weather conditions, a portion of the weapon's debris is injected into the stratosphere and a portion remains in the troposphere. These two atmospheric regions are separated by the tropopause (about 16 km altitude at the equator and 9 km at the poles). Temperature decreases with elevation in the troposphere. This hydrodynamically unstable condition leads to the development of convective weather patterns superimposed upon generally westerly winds. In the stratosphere, temperature is more nearly constant or, in equatorial regions, even rises with elevation. Vertical convective motion is

relatively slight and the tropical temperature inversion restricts transfer of material in the stratosphere from hemisphere to hemisphere.

Debris in the troposphere is distributed in longitude but remains within a band of about  $30^\circ$  of latitude. The mean lifetime of radioactive debris in the troposphere is about 30 days and tropospheric fallout is important for radionuclides with half-lives of a few days to several months. Over the years, the bulk of the radioactive debris from weapons tests has been injected into the stratosphere in the northern hemisphere and at altitudes less than 20 km. Mechanisms for transfer of the debris to the troposphere and thence to fallout on the earth's surface are complex. At elevations less than 20 km, the half-life for transfer of aerosols between hemispheres is about 60 months, while the half-life for transfer to the troposphere is only about 10 months, with little material crossing the tropopause in equatorial regions. Consequently, the bulk of the fallout from any one test occurs over the hemisphere of injection and in temperate regions. In terms of the megatons of fission energy, in the period prior to 1980, 78% of the debris was injected into the stratosphere- 70% into the northern hemisphere and 8% into the southern.

Eight radionuclides contribute significantly to the committed effective dose equivalent to the population. These are  $^{137}\text{Cs}$ ,  $^{131}\text{I}$ ,  $^{14}\text{C}$ ,  $^{239}\text{Pu}$ ,  $^{90}\text{Sr}$ ,  $^{106}\text{Ru}$ ,  $^{144}\text{Ce}$ , and  $^3\text{H}$ . Because of its long half-life, 5,730 years, the commitment from  $^{14}\text{C}$  extends over many human generations. The collective effective dose equivalent commitment into the indefinite future due to weapons tests to date is equivalent to about four extra years of exposure of the current world population to natural background radiation.

High-level radioactive wastes generated in the USA in the production of nuclear weapons have accumulated for decades. The wastes are stored at three sites, one in the state of Washington, one in Idaho, and one in South Carolina. The approximately 9,000 t of waste has a volume of 380,000 cubic meters and there are plans to dispose of this waste in a repository used also for disposal of spent fuel for nuclear power plants.

## Future Directions

### Accelerators

Research, materials processing, and teletherapy accelerators employ higher and higher energy beams and beam currents. The production of secondary radiations associated with beam interactions with targets and structure lead to radiation sources of new types and increased magnitudes. Proton-beam accelerators grow in use for specialized radiation therapy. Synchrotrons deliver beams of protons with energies up to 250 MeV, with increased demands for new and better radiation surveillance, shielding, and dosimetry. Minimization of radiation damage to accelerator components calls for more precise beam simulation in the design process as well as more robust components.

### Space Activities

In low-earth orbit, galactic cosmic rays (GCR) properties are well known except for short-term enhancements caused by solar particle events (SPE), especially in polar regions [10]. Consequences may be important in extravehicular activities (EVA) outside the Space Shuttle or International Space Station. There is a need for real-time measurement of instantaneous absorbed dose and effective dose rates as well as cumulative doses. Improved modeling of the space environment is needed so that longer-term predictions may be of conditions in orbit.

For activities beyond low-earth orbit, there is also a need for improved forecasting capabilities [8] for SPE. There is also a need for development and validation of space radiation transport codes, accounting for neutrons, protons, light and heavy ions, mesons, and electromagnetic cascades. Radiation spectrometers are needed for combined measurements of neutron doses and doses from high-energy charged particles. As to biological effects, there is need for more sophisticated risk assessment methodology – at one extreme addressing late somatic and carcinogenic effects – at the other extreme addressing thresholds for symptoms affecting mission

requirements, namely, central nervous system effects, dermal and immune issues.

### Nuclear Power

Extending the operating lives of nuclear power plants brings on the need for increased attention to maintenance, corrosion control, and surveillance of piping and components. Similarly, extending the in-core operating life of individual fuel assemblies places intense demands on design, manufacturing, and quality assurance. Likewise, greater fuel “burnup” requires increased attention to actinide source inventories and secondary neutron production in spent fuels. Plant operating lives of 60 or more years need support of strong technical and manufacturing infrastructure.

No doubt the future will also see new generations of plants operating with radically advanced designs, with breeding capability, and using mixed  $^{235}\text{U}/^{239}\text{Pu}$  fuels as well as fuels utilizing the  $^{232}\text{Th}$  fuel cycle. These changes will bring on new design and operational challenges as well as the continued support of the physics community in broadening the evaluated nuclear data files (ENDF) and the evaluated nuclear structure data files (ENSDF).

Methods of storage and disposal of spent nuclear fuel continues to involve a complex mixture of technical, economic, political, and emotional issues. Resolution of the political and emotional issues seems to be the more demanding challenge.

### Medical Applications

Challenges in nuclear medicine vary from nation to nation, but a recent survey [4] identified a number of universal concerns.

Hybrid imaging, employing dual use of CT, PET, MRI, and SPECT methods, introduces new combinations of radiation sources – positron emitters for PET, x-rays for CT, and gamma ray emitters for SPECT. Accounting for these mixed sources brings new challenges in facility design, treatment planning, patient and staff protection, as well as management of wastes. The same is true for radionuclides used in nuclear-medicine therapy such as delivery of radionuclides to malignant

tumor cells using monoclonal antibody and related techniques.

In many countries, there is a need for improvement of domestic medical radionuclide production to alleviate the shortage of accelerator- and nuclear reactor-produced medical radionuclides available for research, diagnosis, and treatment. Finally, improvements in detector technology, image reconstruction algorithms, and advanced data processing techniques are needed to facilitate translation from research laboratory to the clinic.

### Industrial and Commercial Activities

Sources of ionizing radiation find use in a very broad array of applications, examples being radiography and tracer techniques in manufacturing and density and moisture gauging in highway construction. Sources find their way into the home via  $^{241}\text{Am}$  in smoke detectors and into public buildings via  $^3\text{H}$  in exit signs. There is a very sad history of injury and death caused by the loss, abandonment, and theft of such sources. Better control of inventory, use, storage, and disposal of such sources is badly needed as well as better oversight by regulatory bodies.

## Bibliography

### Primary Literature

1. UN (1982) Sources and effects of ionizing radiation. Reports of the United Nations Scientific Committee on the effects of atomic radiation. United Nations, New York
2. UN (2000) Sources and effects of ionizing radiation. Reports of the United Nations Scientific Committee on the effects of atomic radiation. United Nations, New York
3. Eckerman KF, Ryman JC (1993) External exposure to radionuclides in air, water, and soil. Federal guidance report 12, EPA-402-R-93-081. U.S. Environmental Protection Agency, Washington, DC
4. National Research Council (2007) Advancing nuclear medicine through innovation. Committee on State of the Science of Nuclear Medicine. National Academy of Sciences, Washington, DC
5. World Nuclear Association (2006) Radioisotopes in industry (Information paper). [www.world-nuclear.org/info/inf56.html](http://www.world-nuclear.org/info/inf56.html)

6. Fewell TR, Shuping RE, Hawkins KR (1981) Handbook of computed tomography and X-ray spectra. Report HHS (FDA) 81-8162
7. NCRP (2009) Ionizing radiation exposure of the population of the United States. Report no 160. National Council on Radiation Protection and Measurements, Bethesda
8. NCRP (2006) Information needed to make radiation protection recommendations for space missions beyond low-earth orbit. Report no 153. National Council on Radiation Protection and Measurements, Bethesda
9. NCRP (2000) Radiation protection guidance for activities in low-earth orbit. Report no 132. National Council on Radiation Protection and Measurements, Bethesda
10. NCRP (2002) Operational radiation safety program for astronauts in low-earth orbit. Report no 142. National Council on Radiation Protection and Measurements, Bethesda
11. NCRP (1987) Exposure of the population in the United States and Canada from natural background radiation. Report no 94. National Council on Radiation Protection and Measurements, Bethesda

### Books and Reviews

- Cohen BL (1986) A national survey of  $^{222}\text{Rn}$  in U.S. homes and correlating factors. *Health Phys* 51:175–183
- Cohen BL, Shah RS (1991) Radon levels in United States homes by states and counties. *Health Phys* 60: 243–259
- Eisenbud M (1987) Environmental radioactivity, 3rd edn. Academic, Orlando
- Faw RE, Shultis JK (1999) Radiological assessment: sources and doses. American Nuclear Society, La Grange Park
- Firestone RB, Shirley VS (eds) (1996) Table of isotopes, 8th edn. Wiley-Interscience, Malden
- Haffner JW (1967) Radiation and shielding in space. Academic, New York
- Glasstone S, Dolan PJ (eds) (1977) The effects of nuclear weapons. United States Departments of Energy and Defense, Washington, DC
- ICRP (1987) Radiation dose to patients from radiopharmaceuticals. ICRP publication 53. Annals of the ICRP 18(1–4). International Commission on Radiological Protection, Pergamon Press, Oxford
- Kocher DC (1981) Radioactive decay tables. Report DOE/TIC-11026. National Technical Information Service, Springfield
- NAS (1971) Radioactivity in the marine environment. Report of the panel on radioactivity in the marine environment. Committee on Oceanography, National Research Council, National Academy of Sciences, Washington, DC

- NAS (1988) Health risks of radon and other internally deposited alpha-emitters. Report of the BEIR Committee [The BEIR-IV Report]. National Research Council, National Academy of Sciences, Washington, DC
- NAS (1990) Health effects of exposure to low levels of ionizing radiation. Report of the BEIR Committee [The BEIR-V Report]. National Research Council, National Academy of Sciences, Washington, DC
- NCRP (1975) Natural background radiation in the United States. Report no 45. National Council on Radiation Protection and Measurements, Washington, DC
- NCRP (1977) Radiation protection design guidelines for 0.1-100 MeV particle accelerator facilities. Report no 51. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (1984) Exposures from the Uranium series with emphasis on radon and its daughters. Report no 77. National Council on Radiation Protection and Measurements, Washington, DC
- NCRP (1987a) Ionizing radiation exposure of the population of the United States. Report no 93. National Council on Radiation Protection and Measurements, Washington, DC
- NCRP (1987b) Radiation exposure of the U.S. population from consumer products and miscellaneous sources.
- Report no 95. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (1989a) Exposure of the U.S. population from diagnostic medical radiation. Report no 100. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (1989b) Exposure of the U.S. population from occupational radiation. Report no 101. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (1989c) Radiation protection for medical and allied health personnel. Report no 105. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (2003) Radiation protection for particle accelerator facilities. Report no 144. National Council on Radiation Protection and Measurements, Bethesda
- Shultz JK, Faw RE (2000) Radiation shielding. American Nuclear Society, La Grange Park
- Slaback LA Jr, Birk B, Schleien B (1997) Handbook of health physics and radiological health. Lippincott Williams & Wilkins, Hagerstown
- UN (1977/1982/1988/1993/2000) Report of the United Nations Scientific Committee on the effects of atomic radiation. United Nations, New York
- Weber DA, Eckerman KF, Dillman LT, Ryman JC (1989) MIRD: radionuclide data and decay schemes. Society of Nuclear Medicine, New York



## Ionizing Radiation Detectors

Wm. David Kulp III  
SAIC, McLean, VA, USA

### Article Outline

#### Glossary

Definition of the Subject  
Introduction  
Gas-Filled Detectors  
Scintillation Detectors  
Semiconductor Detectors  
Neutron Detectors  
Future Directions  
Bibliography

### Glossary

**Alpha particle** A particle emitted during radioactive decay that is comprised of two protons and two neutrons, equivalent to the nucleus of a  ${}^4\text{He}$  atom.

**Beta particle** An electron or a positron (the positively charged antimatter twin of an electron) emitted during radioactive decay.

**Electron volt (eV)** A unit of energy measurement defined by the kinetic energy gained by a free electron when accelerated through a potential difference of 1 V; approximately equivalent to  $1.602 \times 10^{-19}$  J.

**Gamma radiation** Highly energetic electromagnetic radiation (energy greater than approximately 100 keV) emitted from the nucleus during radioactive decay.

**Ionizing radiation** Particles or light with sufficient energy to remove an electron from an atom or molecule.

The information in this entry has been prepared by the author solely in his personal capacity.

**Nuclide** A species of atomic nuclei, defined by the number of protons and neutrons present in the nucleus; nuclides are represented by chemical symbol and atomic mass number. Two examples are  ${}^{12}\text{C}$  (carbon-14, 6 protons and 8 neutrons) and  ${}^{235}\text{U}$  (uranium-235, 92 protons and 143 neutrons).

**Radioactive** Describes an unstable atomic nucleus that releases energy through ionizing radiation.

**Scintillator** A type of detector that uses fluorescence to detect radiation.

**Spectroscopy** The measurement of radiation intensity as a function of radiation energy; a device or system of detectors capable of spectroscopy is referred to as a spectrometer.

### Definition of the Subject

Equipment to detect, identify, and measure radioactivity is a key component in the safe and responsible development of nuclear science and technology. Whether designed to monitor radioactive processes, provide an alert, or characterize the radiation measured, these systems “see” what is undetectable to human senses. Used in nuclear power, industry, medical imaging, nuclear medicine, scientific exploration, and nuclear security, radiation detectors provide information about the radiation present and can be used to interpret what the source of the radioactivity is.

Experimental data exist for about 2,900 nuclides, or species of atomic nuclei, characterized in the laboratory. Yet less than 300 nuclides are found in measurable abundance in the environment. Most of these naturally occurring nuclides are stable nuclei, meaning that they do not decay to other nuclei over time. However, some unstable, or radioactive, nuclei are found in everyday objects. Examples of naturally occurring radioactive material (NORM) are  ${}^{40}\text{K}$  in bananas and the nuclides in the uranium and thorium decay series that are found in cat litter. The identification of radioactive nuclides is accomplished through

detection and measurement of the radiation emitted during the decay of the unstable nucleus.

The decay of a radioactive atomic nucleus results in energy being released in the form of particles or electromagnetic radiation. Particles emitted during radioactive decay include alpha particles, beta particles, neutrons, and photons. Alpha and beta radiation are electrically charged particles ejected from the decaying nucleus. Alpha particles are positively charged helium nuclei. Beta particles are electrons or positrons (the antiparticle of an electron), which carry negative and positive charges, respectively. Neutrons have no electrical charge. Photons, X- and gamma rays, are electromagnetic radiation; treated as particles, they have zero charge, zero rest mass, and travel at the speed of light.

## Introduction

The detection and characterization of radiation originated with Wilhelm Conrad Röntgen, who was awarded the first Nobel Prize in Physics in 1901 [1]. This work was continued and led to the discovery of spontaneous radioactivity, for which Antoine Henri Becquerel, Pierre Curie, and Marie Curie shared the 1903 Nobel Prize in Physics [1]. The mature nature of the field is demonstrated by the many textbooks available on nuclear physics and radiation detection. Suggested reading for in-depth study with focused discussion on radiation detection are Glasstone [2], Kantere [3], Knoll [4], Krane [5], Leo [6], and Tsoulfanidis [7].

Nuclear radiation ranges in energy from a few thousand electron volts (kilo-electron volts, or keV) to millions of electron volts (mega-electron volts, or MeV). Particles in the keV or MeV energy range are energetic enough that as they pass through matter they can cause the ejection of one or more electrons from a neutral atom in the material, ionizing the atom. Because of this interaction, nuclear radiation is also referred to as ionizing radiation. The physical processes that lead to ionization as radiation passes through matter depend upon the kind of radiation. Charged particles, photons, and neutral particles all interact with matter in different ways.

Alpha particles and other heavy, charged particles interact with matter through a variety of mechanisms, but the primary reaction is simply Coulomb scattering, an interaction between charged particles that is kinematic in nature. When energy is imparted to a target atom in the material, an inelastic collision has occurred with atomic electrons. Where no energy is transferred to the target material, the incident particle has elastically scattered from a target nucleus. These interactions have two basic results for the incident particle: (1) the particle loses energy and (2) the particle is deflected from its initial trajectory.

Electrons and positrons also lose energy through Coulomb scattering in matter. However, they are more easily deflected in the electric field near an atomic nucleus due to the small mass of these particles or in collisions with atomic electrons (same mass). When electrons collide, energy is directly transferred to the atomic electrons. When electrons are accelerated or decelerated, electromagnetic energy is emitted in a process known as bremsstrahlung. Above a few MeV in energy, this mechanism is the predominant interaction for high-energy electrons and positrons.

Gamma rays and X-rays are very different than the charged particles discussed above. They are electromagnetic radiation, called photons; a photon has zero electric charge and zero rest mass. Photons have three main interactions with matter:

1. The photoelectric effect, where an atomic electron is ejected from an atom after the absorption of the photon
2. Compton scattering, the scattering of photons by free electrons
3. Pair production, where a photon is transformed into an electron-positron pair

Neutrons are similar to photons in that they lack electric charge and will not interact with matter through Coulomb scattering. Instead, a neutron interacts with nuclei through the strong force. This is a relatively rare occurrence due to the short range of the strong force (effective only within  $10^{-15}$  m). The result of interaction may be:

1. Elastic scattering from nuclei, so that no nuclear reaction takes place.
2. Inelastic scattering, where the target nucleus is left in an excited state.
3. Neutron capture, where the target nucleus is transformed through absorption of the neutron; most of the time the new nucleus is radioactive and decays by emitting beta particles and/or gamma rays (and neutrons, too, in a few cases).
4. Nuclear reactions with the emission of a charged particle.
5. Fission, the splitting of a heavy atomic nucleus.

Radiation detectors make use of these interactions with matter to produce a measurable effect that signals the presence of radioactivity. In general, a radiation detector can be characterized through three traits: (1) the radiation absorber (the materials of which the detector is made), (2) an observable that signals the interaction with radiation, and (3) a way to measure the signal.

The radiation absorber may be gas, liquid, or solid and can be made from a range of materials. The choice of detection medium phase depends on the type of radiation to be detected. The range of heavy charged particles in a solid absorber is very short (microns), but a charged particle will definitely have Coulomb interactions and thus produce a signal. Neutrons and gamma rays, on the other hand, may penetrate centimeters of solid matter without producing any observable response. For detecting neutrons, the use of enriched isotopes (e.g.,  $^{235}\text{U}$ - $^{238}\text{U}$ ,  $^6\text{Li}$ - $^7\text{Li}$ ,  $^{10}\text{B}$ - $^{11}\text{B}$ ) may be used in order to take advantage of specific nuclear reactions that have higher probabilities of occurring.

The choice of observable effect produced by the detector is usually more dependent upon the application and the material used as the radiation absorber, rather than the type of radiation. Early researchers Henri Becquerel and Marie and Pierre Curie recorded data on photographic plates. While this method of observation provided long-lasting visible evidence of radiation, other detection methods such as electrical signals, scintillation light emissions, and changes in temperature are

more advantageous for modern radiation detection. For example, light emissions produce the fastest detector response, thus a scintillation detector is the best choice for a measurement that requires precision timing. On the other hand, semiconductor detectors provide excellent energy resolution with good timing resolution and are used for detailed nuclear spectroscopy.

If the radiation detection application requires only a qualitative measure of the presence of radiation, then an effective method of measurement would be an audible alarm that sounds when a threshold radiation level is reached, measured as a current generated within the detector volume. Nuclear science, however, requires quantitative analysis of the number and energy of individual particles emitted by atomic and nuclear transitions. For nuclear spectroscopy, it is therefore necessary to measure each electrical pulse registered in the detector, amplify the pulses and perhaps shape the signals as necessary, and record these signals for later analysis.

Given the different types of radiation and the range of energies, no single detector will be sensitive to all nuclear radiations at all applicable energies. Further, the diverse applications for radiation detection preclude a general list of radiation detectors that could be considered comprehensive. In the sections that follow, the most common detector types will be discussed and some recent advancements in the field will be introduced.

## Gas-Filled Detectors

Ionizing radiation produces pairs of positively charged ions and negatively charged electrons as it passes through matter. It follows that a simple way to measure radioactivity is to apply an electric field across the radiation-absorbing material and count the ion-electron pairs produced in the detector. Such a detector can be envisioned as a parallel-plate capacitor filled with a gas. An electric potential applied across the capacitor creates an electric field that separates the electrons and ions. The electrons drift toward the positively charged anode plate, while the ions drift in the opposite direction toward the negatively charged

cathode. This separation prevents the electrons and ions from recombining and enables measurement of the electric signal produced by the ionizing radiation.

### Ionization Chambers

The applied voltage across the capacitor influences how quickly charged particles move in the ionization chamber. Electrons and ions tend to recombine to form neutral atoms at low voltages, with the result that only a weak signal is collected. This recombination region is indicated in the range where  $V < V_1$  in Fig. 1. Above some threshold potential, the electric field prevents recombination. This is indicated in the region where  $V_1 < V < V_2$ , where the total charge detected is insensitive to the applied voltage, as all of the electron-ion pairs that are created by the initial ionizing event are collected. A detector operating in this region collects only the charge produced directly by the incident radiation and is thus called an ionization chamber.

How big is the output electrical signal from an ionization chamber? The average energy required to produce an ion in dry air is about 30 electron volts (eV). An ionization chamber consisting of two square plates, each 10-cm long on a side, separated by a 1-cm air gap has a capacitance of  $9 \times 10^{-12}$  F. Based on the energy to produce one ion in air, a 1-MeV gamma ray that deposits all of its energy in this detector would produce a maximum of about  $3 \times 10^4$  electron-ion pairs, and a 2-MeV gamma ray would produce twice as many pairs. The voltage pulse resulting from these events would be about 0.5 or 1 mV, respectively.

To analyze individual pulses, the small signals produced by the direct radiation interaction require amplification. The two curves illustrated in Fig. 1 correspond to radiations that deposit different energies in the detector, e.g., an alpha particle and a beta particle or two gamma rays of different energies. The more energetic radiation produces more electron-ion pairs, resulting in a larger output signal.

### Proportional Counters

A larger output signal can also be generated by increasing the applied voltage across the

capacitor. The increased electric field accelerates the ions and electrons in the chamber to higher kinetic energy. Above a second threshold voltage, indicated as  $V_2$  in Fig. 1, free electrons, produced by the incident radiation, are accelerated to sufficient energy such that they ionize additional gas atoms during collisions and produce more free electrons. This process is known as *charge multiplication* and results in a larger output signal.

The electrons produced in the knock-on reactions are called *secondary electrons*. The secondary electrons accelerate and produce additional ionization, resulting in a *Townsend avalanche*, where  $10^3$ – $10^5$  secondary events occur for each original ion produced. As shown in the region  $V_2 < V < V_3$ , the number of electron-ion pairs is proportional to the number of pairs produced in the primary event. Detectors operating in this range are called *proportional counters*. Using such a detector, the measurement of the incident particle energy is possible because the final signal is proportional to the energy deposited in the detector.


Proportional counters are typically cylindrical in shape, as shown in Fig. 2. This geometry results in an electric field that has an inversely proportional  $1/r$  dependence, where  $r$  is the distance from the center of the detector. The site of the original interaction is not critical in such a detector. However, as an electron accelerates closer to the central anode wire, the field becomes very intense, resulting in a Townsend avalanche, indicated as a shower of electrons in Fig. 2. Because this occurs near the anode, the secondary electrons created are highly localized and no additional cascades form.

Increasing the applied voltage beyond  $V = V_3$ , the total ionization produced through charge multiplication continues to increase, but with reduced proportionality. This is the result of the creation of clouds of ions near the anode wire that have significantly lower drift speeds than the electrons. As a result, as the voltage increased in the region  $V_3 < V < V_4$ , the ions build up space charge that shields the anode and changes the effective electric field.


Further increasing the voltage beyond  $V_4$  results in a discharge occurring in the gas. Instead

**Ionizing Radiation Detectors, Fig. 1**

The number of ion-electron pairs collected in a gas-filled detector depends on the applied voltage and on the energy deposited in the active volume of the detector. The blue curve represents a particle that produces more ionization for a given voltage compared with a particle represented by the red curve, for example, an alpha particle and a beta particle, respectively

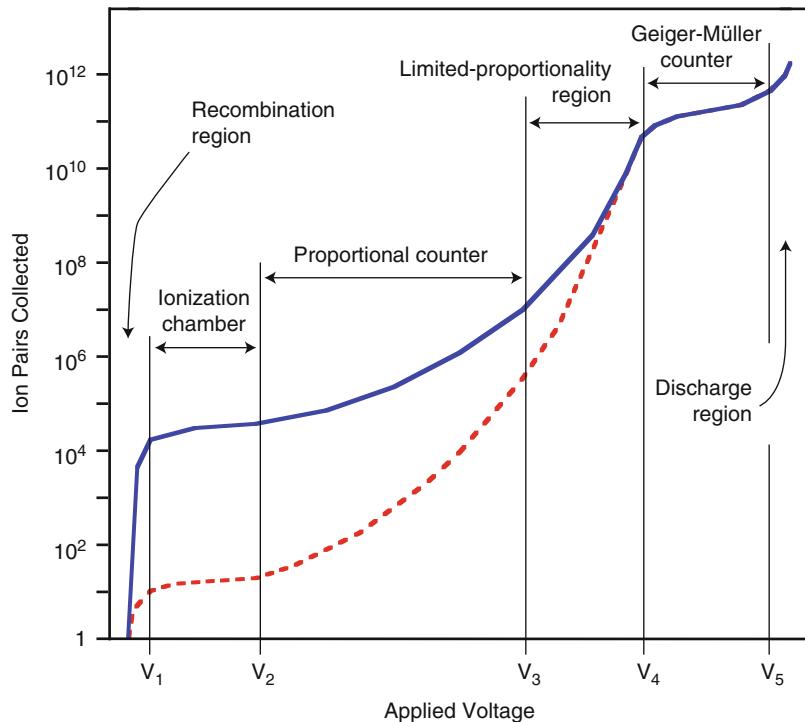**Ionizing Radiation Detectors,**

**Fig. 2** Radiation enters a proportional counter through a thin window and interacts with the gas within the cylinder, creating electron-ion pairs. The electrons accelerate toward the anode wire and produce avalanches of secondary electrons

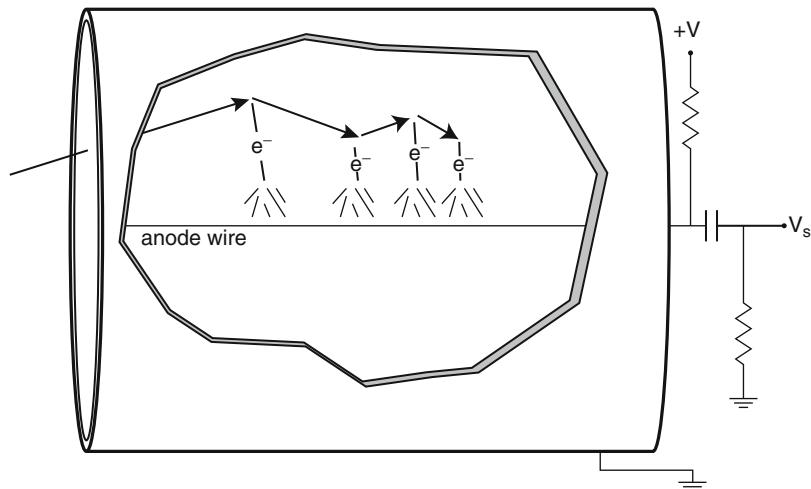

of a single, localized avalanche for each original electron-ion pair, *secondary avalanches* occur all along the anode wire. The secondary avalanches are the result of photons emitted by de-exciting gas molecules in the detector causing further ionization and avalanches elsewhere in the detector. A saturation effect thus takes place in the region indicated by  $V_3 < V < V_4$ : the discharge always


has the same output, independent of the energy of the initial event.

**Geiger-Müller Counters**

Detectors operating in the  $V_4 < V < V_5$  region are called *Geiger-Müller counters*. As shown in Fig. 1, there is no difference in count rate due to the energy initially deposited in the detector.

### Ionizing Radiation Detectors

**Fig. 3** The operating point of a Geiger-Müller tube is the middle of a region between a threshold voltage,  $V_t$ , and a breakdown voltage,  $V_b$ . In this region, called the *Geiger plateau*, the count rate changes very little as a function of the applied voltage. Beyond the breakdown voltage, the tube discharges continuously

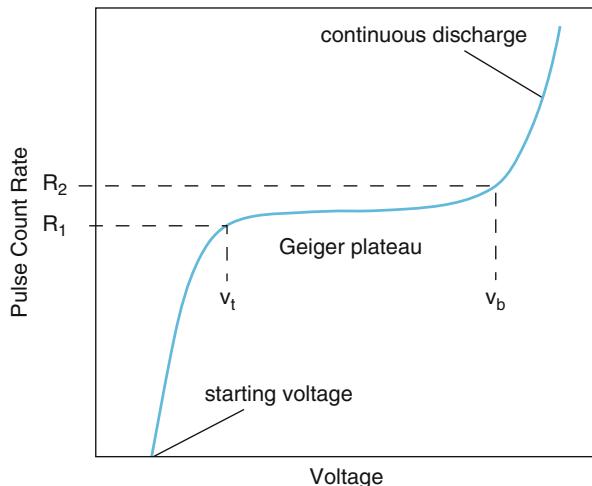

Moreover, while the measured pulse size changes because the charge collected increases with increasing voltage, the pulse count rate does not change significantly, as shown in Fig. 3.

What is happening here is that the potential difference is so large in the active region of the detector that secondary avalanches cause a chain reaction of avalanches and total breakdown occurs. The discharge ends only when a large number of slow-moving secondary ions are formed near the anode wire. This localized concentration of ions represents a *space charge* that reduces the magnitude of the electric field, diminishing the attractive force accelerating the secondary electrons and quenching the breakdown so that all radiation interacting with the detector produces the same current, regardless of particle type or initial energy.

Increasing the voltage to  $V > V_s$  results in continuous breakdown in the gas, producing a steady current, whether radiation is present or not. This discharge region should be avoided in order to prevent damage to the detector. For this reason, Geiger-Müller tubes are typically operated at a voltage in the middle of the Geiger plateau.

In general, gas-filled detectors are the simplest detectors to operate, but have relatively low radiation detection efficiency. For electrons, ions, and low-energy X-rays and gamma rays, the low density of matter in the active volume of the detector is sufficient. However, for high-energy photons, gas-filled detectors lack sufficiently high density

to stop the radiation effectively. Practically, this is demonstrated using a rule of thumb: the thickness of material required to attenuate by half the intensity of a beam of 1 MeV photons is  $\sim 10 \text{ g/cm}^2$ . To halve the intensity of a 1 MeV source of gamma rays using air (density =  $0.00129 \text{ g/cm}^3$  at standard temperature and pressure) would require a detector 78-m thick. In comparison, only 2.7-cm thickness of sodium iodide (density =  $3.667 \text{ g/cm}^3$ ) is needed to reduce the beam intensity by half.

### Scintillation Detectors


The principle of operation for a scintillation detector is very different from that of a gas-filled detector. Rather than collecting the electrons produced directly in the ionizing event in the radiation absorber, scintillation detectors use light as the observable that signals radiation detection.

The basic principle of operation of a scintillation detector, illustrated in Fig. 4, is as follows:

1. Incident radiation ionizes an atom in the scintillator material.
2. The excited atom *fluoresces*, i.e., produces light as it relaxes to its initial state.
3. The light strikes the front surface of a *photomultiplier tube (PMT)* called a *photo-cathode* that yields a *photoelectron* through the photoelectric effect.

### **Ionizing Radiation Detectors,**

**Fig. 4** Ionizing radiation produces flashes of light in a scintillation detector. This light is focused to produce photoelectrons, which are multiplied to produce a measurable signal

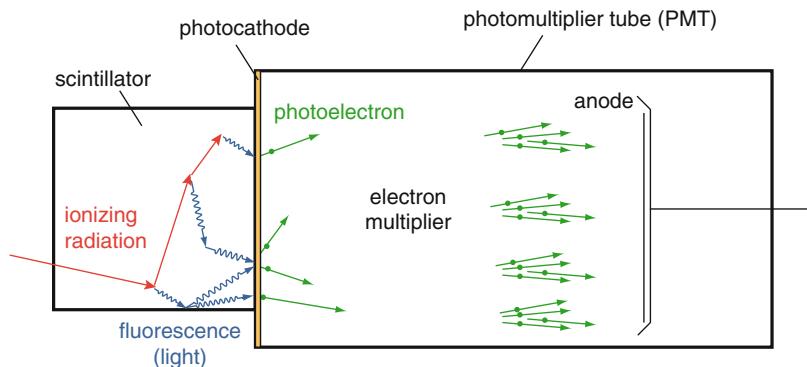

4. The photoelectrons are accelerated and multiplied through a series of electrodes (called *dynodes*) to produce a shower of secondary electrons.
5. The secondary electrons are collected at the anode as an output signal pulse.
4. Emits light within a wavelength range that matches existing light sensors
5. Emits light pulses with a short decay time constant ( $\tau$ )

The scintillator medium may be a solid, liquid, or gas. Scintillator material may be selected from organic crystals, organic liquids, plastics, glasses, inorganic crystals, glasses, and gases. With the exception of the crystalline detectors, organic scintillators are referred to using manufacturer designations. For example, a common liquid scintillator used in fast neutron detection is known as NE-213 (Nuclear Enterprises), BC-501A (Bicron/St. Gobain), and EJ-301 (Eljen). Plastic scintillation detectors, such as NE-102A (alternatively marketed as BC-400 or EJ-212), are manufactured by dissolving organic scintillators in a solvent such as styrene or polyvinyltoluene (PVT) that can be polymerized. These detectors have a notable advantage in that they may be cut or shaped as needed and are fairly durable, but the choice of material ultimately depends on the detection application.

The characteristics of a good scintillator are:

1. Efficient *luminescence*, i.e., it converts most of the energy deposited in the material into light
2. Transparent to its own light output to enable light transmission through the absorbing material
3. Has an index of refraction approximately that of glass ( $n = 1.5$ ) to allow coupling to a light sensor

Organic scintillator detectors are characterized by the shortest decay time constants; however, these lighter compounds lack the efficiency of detectors made using materials of higher atomic number. Inorganic crystals can be made from materials as heavy as bismuth (atomic number,  $Z = 83$ ) and typically have better energy resolution than organic scintillators. Scintillators in common use are:

- Anthracene ( $C_{14}H_{10}$ ), an organic crystal with a short decay constant ( $\tau = 30$  ns) used in general radiation detection
- Stilbene ( $C_{14}H_{12}$ ), a very fast ( $\tau < 5$  ns) organic crystal used in neutron detection
- NE-102A, a general-purpose plastic scintillator ( $\tau = 2.4$  ns)
- NE-213, an organic liquid used in neutron detection ( $\tau = 3.7$  ns)
- NaI(Tl) (sodium iodide activated with a thallium dopant), an inorganic crystal in wide use in radiation detection ( $\tau = 230$  ns)
- LiI(Eu) (lithium iodide doped with europium), an inorganic crystal used in neutron detection ( $\tau = 1,200$  ns)
- $Bi_4Ge_3O_{12}$  (bismuth germanate, or BGO), used in PET scanners and in nuclear spectroscopy ( $\tau = 300$  ns)
- $BaF_2$  (barium fluoride), used for fast timing in nuclear spectroscopy (two components to the pulse  $\tau = 0.6$  and 630 ns, respectively)

## Semiconductor Detectors

Semiconductor detectors are essentially solid-state ionization chambers. Ionizing radiation excites electrons into the conduction band of the semiconductor crystal. These electrons and the positively charged *holes* left behind in the valence band of the semiconductor migrate under the influence of the applied electric field, which is on the order of a few thousand volts.

Semiconductor detectors require less energy per charge generated, on the order of 3 eV, compared with about 30 eV in gaseous detectors. This difference results in semiconductor detectors having superior energy resolution compared with gaseous detectors. The full width at half maximum (FWHM) of a measured pulse-height distribution is the width of the distribution at half the maximum height of the peak and is a measure of the resolution of a detector. The FWHM is a function of the number of charge carriers produced and may be expressed as

$$FWHM = 2.355 \sqrt{FE\varepsilon},$$

where  $F$  is the Fano factor, a measure of the deviation from Poisson statistics of the charge carriers generated;  $E$  is the energy of the radiation deposited in the detector; and  $\varepsilon$  is the ionization energy required to generate an electron-hole charge carrier pair. The resolution of typical semiconductors is compared with that of theoretically ideal ( $F = 1$ ) detectors in Table 1. The measured resolutions differ from the theoretical value

because the electron-hole pair production process does not obey Poisson statistics and due to inhomogeneities in detector materials.

The effect of improved energy resolution is illustrated in Fig. 5, where the upper pulse-height spectrum shows the response of an array of barium fluoride ( $BaF_2$ ) scintillation detectors, while the lower spectrum is that collected using an array of high-purity germanium (HPGe) semiconductor detectors. Individual lines resolved by the HPGe detector appear as a continuum with mound-like features in the  $BaF_2$  spectrum. This difference makes semiconductor detectors the tool of choice in nuclear spectroscopy. With a higher atomic number ( $Z = 32$ ), germanium detectors are typically used for gamma-ray spectroscopy, while silicon detectors ( $Z = 14$ ) are used in X-ray spectroscopy and in charged particle spectroscopy.


However, because the band gap in a semiconductor is on the order of about 1 eV, there is a measurable output signal from some semiconductor detectors at room temperature. To reduce this thermal noise, these detectors are cooled with liquid nitrogen and operated at cryogenic temperatures (77 K). This operational constraint on semiconductor detectors, in addition to the need for high voltage, has limited widespread use of these devices. However, improvements in material quality and automated spectrum analysis using libraries of known radioactive source decay spectra have led to increased use of semiconductor detectors in applications other than scientific research.

**Ionizing Radiation Detectors, Table 1** Ideal resolution of gaseous, scintillation detectors compared with measured resolution of semiconductor detectors [4] at liquid nitrogen (77 K) and room (300 K) operational temperatures

Material	Ionization energy	FWHM (122 keV)	FWHM (662 keV)	FWHM (1,332 keV)
Ideal gaseous detector	30 eV	4.5 keV	11 keV	15 keV
Ideal scintillation detector	500 eV	18 keV	43 keV	61 keV
Ideal semiconductor detector	3 eV	1.4 keV	3.3 keV	4.7 keV
Si (77 K)	3.76 eV	0.55 keV		
Ge (77 K)	2.98 eV	0.4 keV	0.9 keV	1.3 keV
CdTe (300 K)	4.43 eV	3.5 keV		
HgI <sub>2</sub> (300 K)	4.3 eV	3.2 keV	5.96 keV	
CZT (300 K)	5.0 eV		11.6 keV	

### **Ionizing Radiation Detectors,**

**Fig. 5** Gamma-ray spectra from the radioactive decay of  $^{152}\text{Eu}$  demonstrate the difference in energy resolution between that of a barium fluoride ( $\text{BaF}_2$ ) scintillator detector array (top) and that of a high-purity germanium semiconductor detector array (Spectra courtesy of D. Cross)

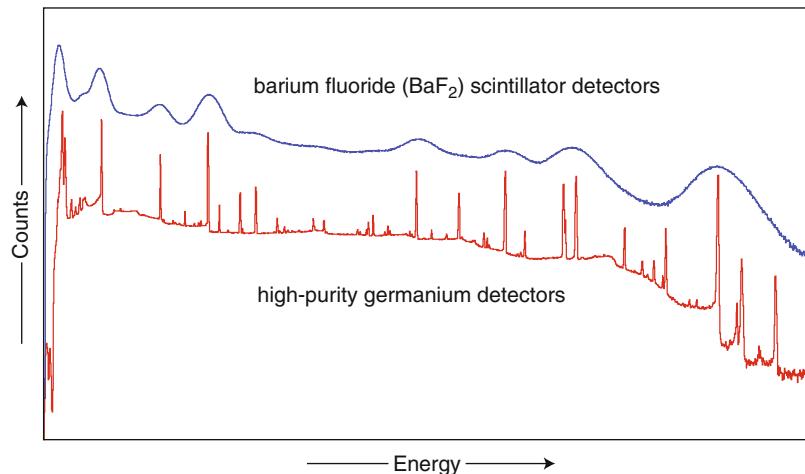

### **Neutron Detectors**

The absence of an electrical charge complicates neutron detection. Neutrons do not directly produce ionization in matter. However, neutrons interact with atomic nuclei through absorption or scattering and are thus detected through reaction products that do produce ionization.

Absorption through neutron-induced nuclear reactions is most probable at very low energies (eV); the probability of a reaction occurring increases with decreasing neutron energy with a  $1/v$  relationship, i.e., inversely proportional to the neutron velocity. Most nuclear power reactors are designed to work at thermal energies (on the order of 0.025 eV), where a neutron has a speed of 2,200-m per second and the probability is high for neutron-induced fission in uranium. The  $1/v$  relationship implies that nuclear reactions will be most useful for detecting *slow* neutrons, categorized by a neutron energy  $<0.5$  eV. Neutrons with an energy above this threshold are more effectively detected through scattering in the detector material.

### **Slow Neutron Detectors**

Nuclear reactions used to detect slow neutrons (neutron energy  $<0.5$  eV) typically produce heavy charged particles such as protons and alpha particles. These reactions are referred to as activation reactions, because they usually leave the product nucleus in an excited state, which subsequently decays through gamma-ray

emission. Two common reactions used in detectors are the  $(n, p)$  and  $(n, \alpha)$  activation reactions. In the  $(n, p)$  reaction a neutron,  $n$ , is absorbed and a proton,  $p$ , is emitted. Similarly, in the  $(n, \alpha)$  reaction an alpha particle,  $\alpha$ , is emitted. These reactions release considerable energy (approximately 1–4 MeV), so that the incident energy of a slow neutron ( $<0.5$  eV) cannot be determined from the reaction. Subsequently, detectors designed for slow neutrons are used only for indicating the presence of neutrons and not for neutron spectroscopy.

The primary reactions used to detect slow neutrons are:

- $^{10}\text{B}(n,\alpha)^7\text{Li}$ , where the detector requires enriched boron that is  $>90\%$   $^{10}\text{B}$  (boron is naturally found in ratios of 19.8%  $^{10}\text{B}$  and 80.2%  $^{11}\text{B}$ )
- $^6\text{Li}(n,\alpha)^3\text{H}$ , which uses  $^6\text{Li}$  enriched to over 90% (the natural abundance of lithium is 7.59%  $^6\text{Li}$  and 92.41%  $^7\text{Li}$ )
- $^3\text{He}(n,p)^3\text{H}$ , where the detector relies on rare  $^3\text{He}$  gas that has a natural abundance of 0.00137% and is very expensive to produce
- $^{157}\text{Gd}(n,\gamma)^{158}\text{Gd}$ , used in liquid scintillator detectors

Because the nuclear reactions require the use of specific isotopes, the availability of enriched isotopes contributes to the cost of fabrication for these detectors. In the case of  $^3\text{He}$ , this cost is significant,

if sufficient quantities of the material can be acquired at all. Helium-3 is not only for neutron detection but also for cryogenics and is in high demand in many fields of research. Manufactured through the decay of tritium produced in a nuclear reactor,  ${}^3\text{He}$  was available in greater quantities during the Cold War, because tritium is a critical component in thermonuclear weapons.

### Fast Neutron Detectors

Neutron-induced nuclear transformations such as the  ${}^6\text{Li}(\text{n},\alpha)$  and  ${}^3\text{He}(\text{n},\text{p})$  reactions may be used to detect fast neutrons. Unlike the case for slow neutrons, where the incident neutron energy is negligible compared with the reaction energy, it is possible to measure the neutron energy. However, the efficiency of these detectors is limited because the reaction probability decreases rapidly with increasing neutron energy. More commonly, scattering reactions are used to detect and measure the energy of fast neutrons.

Kinematics limit the energy that may be transferred in the neutron-nucleus collision. Because the mass of the neutron and the mass of the proton are nearly the same, it is possible to transfer all of the neutron energy in a single collision through the  $(\text{n},\text{p})$  reaction. As the mass of the recoil nucleus increases, the fraction of energy transferred decreases. For the case of a deuterium recoil nucleus (atomic mass A = 2), a maximum of 88.9% of the energy can be transferred. In the case of  ${}^3\text{He}$ , this maximum value falls to 75%. It is evident that a radiation absorber made from light nuclei is preferred, as it is possible to transfer more energy to the detector nuclei in fewer collisions. To provide higher efficiency, a solid-state detector is preferable, and materials with relatively high concentrations of hydrogen are desired.

The *proton recoil scintillation detector* takes advantage of kinematics and the high availability of scintillators that contain hydrogen. The kinematic advantage of these detectors is that the energy distribution of the recoil protons does not depend on the collision angle, so that in the ideal case, the recoiling proton is equally likely to have zero energy to the maximum transferable energy. The recoiling

protons will most likely deposit their full energy in the scintillator, resulting in a rectangular-shaped pulse-height distribution. The shape of the detector output pulse may be used to separate gamma rays from neutrons, and the energy of the incident neutrons may be determined by comparing the response of the detector with calibration spectra obtained using a monoenergetic neutron source.

The availability of organic scintillators in many forms, including plastic and liquid detectors, provides a broad range of available materials for detector construction. The hydrogen in the aromatic compounds provides an efficient mechanism for energy transfer in the absorbing medium, but the response of the detector is complicated by the presence of other elements such as carbon and oxygen. If the source of neutrons is pulsed, such as at an accelerator facility, then the energy may be extracted using a *time-of-flight* method. This method relates the detection time to the pulse structure of the beam used to create the neutrons and extracts the neutron energy from the amount of time it takes for the neutron to travel to the detector.

### Moderating Detectors

A third type of neutron detector uses a layer of hydrogen-containing material to slow down, or *moderate*, neutrons in order to use neutron-induced nuclear reactions as the detection method. Called *moderating detectors*, these systems are useful if there is a broad range of neutron energies to be detected or if the neutron energy distribution is unknown. This type of detector has a relatively slow response time due to the moderating process. This is unsuitable for situations where the neutron energy distribution changes with time or when it is desirable to relate the neutron with another event, such as the detection of a gamma ray.

Examples of moderating detectors include *Bonner sphere spectrometers* and *spherical neutron dosimeters*. Used to detect fast neutrons, the Bonner sphere spectrometer consists of a set of different-diameter solid polyethylene moderating spheres that slow down incident neutrons and a thermal neutron detector such as a lithium iodide scintillator. The spheres are placed over the

detector in turn, and the count rate is recorded for each sphere. The neutron energy spectrum is then interpreted from this data using computer algorithms and comparison with calibration data.

A spherical neutron dosimeter is essentially the same construction as a Bonner sphere spectrometer, but only uses a single sphere. The sphere is modified to provide a response that coincidentally resembles the neutron dose equivalent delivered curve as a function of energy. This detector is often used for neutron monitoring to provide neutron dose estimates.

## Future Directions

Advances in radiation detection may result from the development of new radiation absorber materials, the refinement of methods to signal radiation interactions, and innovations in signal measurement. Some recent advances are discussed in the following section. The impact of these new developments and future directions may have an effect on the ability to detect small quantities of nuclear materials for safety and security, provide better tools for medicine and medical imaging, characterize the rarest nuclei in the cosmos, provide key data for understanding astronomical interests such as supernovas and neutron stars, and investigate dark matter and the nature of neutrinos.

### Advancements in Detector Materials (Radiation Absorbers)


It is the interaction of radiation with matter which provides a signal to be measured. Perhaps because of this, and because of the limitations of current radiation detectors, it may be presumed that the primary need in radiation detection is in the characterization of new materials that are sensitive to radiation. Indeed, the physical characteristics of some of materials in use are not optimal. Some examples are found in gamma-ray detectors: HPGe crystals require cryogenics temperatures for operation and the hygroscopic nature of NaI(Tl) leads to performance degradation as water is absorbed in the crystal. In other cases, the optimal materials are simply difficult to acquire: the scarcity of  ${}^3\text{He}$  for cryogenics and

for neutron detectors since the reduction of tritium production is a case in point [8].

There are many open areas of research, including applications in nanotechnology and crystal growth. Nanocrystals of lanthanum halides suspended in a scintillating liquid have been demonstrated to distinguish between gamma ray and neutron radiation [9]. Suspension of nanoparticles in plastic scintillator materials promises rugged, flexible, and inexpensive detectors with moderate energy resolution and detection efficiency for nuclear security applications. Development of crystal growth techniques for newer CdZnTe-based detectors [10] may reduce the defects found in these detectors and enable the growth of larger crystals and enhance both the efficiency and the resolution of these detectors. It is important to note, however, that the common materials already in use have been selected through years of research and that a breakthrough in detector materials may take decades to come to fruition.

Near-term improvements may come from refining methods to make detectors, as in the case of the high-purity germanium crystal. Originally, germanium semiconductors required a lithium dopant in the crystal matrix. This dopant would degrade as the lithium migrated out of the crystal, unless the detector was constantly kept at liquid nitrogen temperature. By refining the technique for growing germanium crystals, the lithium dopant is no longer used in these detectors.

Simply modifying compounds already in use can advance the field, as well. A case in point is in the use of deuterated benzene scintillators for neutron detection. Benzene ( $\text{C}_6\text{H}_6$ ) is commonly used in neutron scintillation detectors. In neutron spectroscopy, neutron energy is generally extracted using the time-of-flight method. This is because the detector response is essentially featureless, as shown (Fig. 6) in spectra 6(a) and 6(b) taken with NE-213 scintillators. On the other hand, spectra 6(c) and 6(d) are from deuterated benzene scintillators measured at the same energies. The peaks in these spectra appear due to the kinematics of scattering from deuterium. By combining these detectors with advanced pulse shape analysis electronics, the energy information may be extracted in addition to the time-of-flight

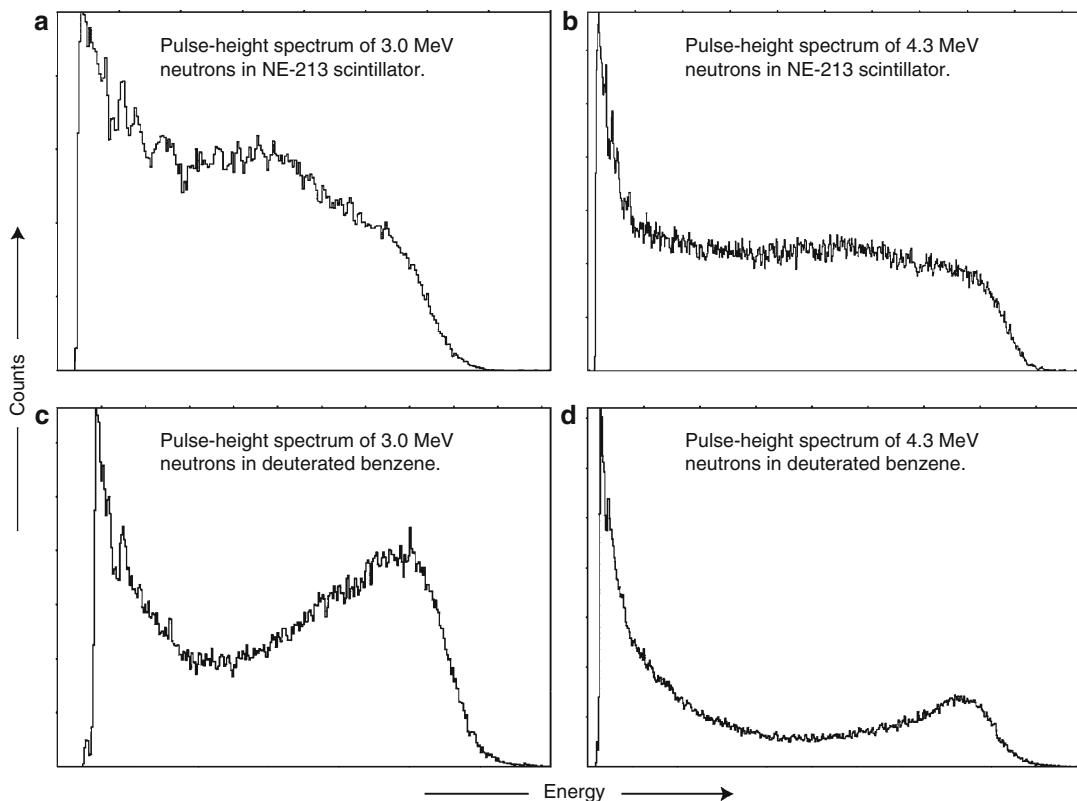

**Ionizing Radiation Detectors, Fig. 6** Pulse-height spectra of monoenergetic neutrons collected using NE-213 scintillators and deuterated benzene scintillators.

Neutron energy may be extracted from the deuterated benzene detectors using pulse shape discrimination electronics (Spectra courtesy of P. E. Garrett)

method, allowing for fast neutron spectroscopy in laboratory experiments.

#### Advancements in Detection Methods (Observables)


The types of detectors discussed here, gas-filled ionization detectors, scintillation detectors, semiconductor detectors, and neutron detectors represent the majority of radiation detectors currently in use. The primary observables have been the electric signals or light output based on direct or indirect ionization to signal the interaction of radiation in the detector. These represent the basic interactions which can be measured in common detectors.

Another possible observable is to measure temperature changes in a material to indicate radiation

detection. Such a detector is called a *bolometer*, and the radiation absorber in this kind of detector is a material that has an electrical resistance that is highly dependent upon the material temperature. These detectors are at the forefront of dark matter and neutrinoless (no neutrinos emitted) double-beta decay experiments [11] and are typically small metal, semiconductor, or even superconductor devices. The size is limited in order to maximize the temperature rise and the measured change in resistance. A drawback to this kind of detector is the need to maintain a consistent temperature.

One simple advancement in this area is to combine multiple types of detectors to filter the signal that is recorded for later use. An example of this is found in the *Compton-suppressed*

**Ionizing Radiation Detectors, Fig. 7** The spectrum of a  $^{60}\text{Co}$  source with characteristic gamma-ray lines at 1173 and 1332 keV collected using (a) a high-purity Ge semiconductor (HPGe) detector, and (b) the same HPGe detector operated in anticoincidence with a Compton-suppression shield of scintillators

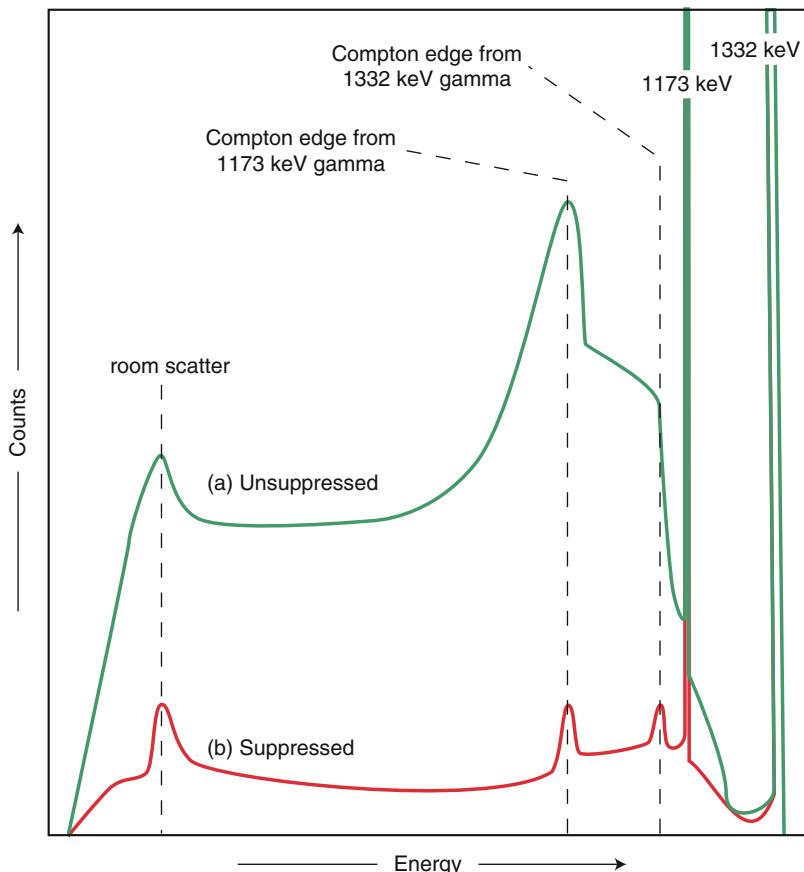

germanium detector [12]. A germanium semiconductor detector is surrounded by high-efficiency scintillation detectors that act as an anticoincidence shield. If a gamma ray is detected only in the HPGe detector, but not in the surrounding detectors, it is presumed to have deposited the full energy in the germanium crystal. However, when signals are detected in coincidence with the surrounding scintillators, this indicates that the gamma ray has scattered out of the HPGe detector and a full-energy pulse will not be detected. By suppressing these Compton-scattering events using nanosecond coincidence timing circuits, the background spectrum of the detector can be greatly reduced, as shown in Fig. 7. This enables the detection of much lower intensity peaks than would normally be visible with an unsuppressed detector.

### Advancements in Signal Measurement

The basic method for radiation spectroscopy is to measure signal outputs and record the data to build up statistics for interpretation. Typically, each signal is passed through electronic circuits comprised of amplifiers, discriminators, and analog-to-digital convertors in order to electronically record each event as it is detected. Computer analysis is later used to scan the recorded data, sort out events that fit requisite criteria, and fit the data for interpretation.

Nuclear safety and security applications require rapid identification of radioisotopes in the field, without expert interpretation on a dedicated computer. Analysis of the whole gamma-ray spectrum must be carried out, automatically identifying peaks in the spectrum, discriminating between peaks close to each other, and appropriately

fitting the peaks. The fitted peaks are compared with library peak spectra in order to identify radioisotopes of interest.

In some cases, such as in neutron detection, pulse-shape discrimination is used to distinguish between the types of radiation detected. This is typically done offline during the computer analysis in order to separate the neutrons from gamma rays. An advancement to this technique is to use a computer in the data acquisition system in order to fit and digitize pulses during the data collection and record only the signals of interest.

Very advanced gamma-ray spectrometers, GRETA (gamma-ray energy tracking array) [13] and AGATA (advanced gamma tracking array) [14], are being constructed in the United States and in Europe, respectively, to follow gamma-ray interactions as they scatter in germanium detectors. These *gamma-ray tracking spectrometers* use segmented germanium crystals connected by electronic contacts to determine where gamma rays interact in the detector. Offline computer analysis is used to reconstruct the history of interaction. The full energy of the gamma ray is determined by summing up the energy of the individual interactions, and the first point of interaction in the detector may be determined for use in analysis based on angular distributions.

The GRETA and AGATA spectrometers are the most advanced research-class systems in gamma-ray spectroscopy and come with multimillion dollar (euro) price tags. Such systems are in development to support large groups of scientists at national laboratories and as such are of specialized

interest, rather than directly applicable to the general field of radiation detection. However, the future in this area will be closely tied to computational power and to the development of specialized electronics and programs for signal processing and data analysis. Adoption of better in-line and off-line computational power may overcome some of the inherent barriers in radiation detection and open opportunities for the development of new materials and new observables for detectors.

## Bibliography

1. (1967) Nobel lectures, physics 1901–1921. Elsevier Publishing Company, Amsterdam
2. Glasstone S (1958) Sourcebook on atomic energy. D. Van Nostrand Company, Princeton
3. Kantele J (1995) Handbook of nuclear spectroscopy. Academic Press, San Diego
4. Knoll GF (2010) Radiation detection and measurement. Wiley, New York
5. Krane KS (1988) Introductory nuclear physics. Wiley, New York
6. Leo WR (1994) Techniques for nuclear and particle physics experiments. Springer, New York
7. Tsoulfanidis N (1995) Measurement and detection of radiation. Taylor & Francis, Washington, DC
8. Kouzes RT et al (2010) Nucl Instrum Methods A 623:1035
9. Guss P et al (2013) J Appl Phys 113:064303
10. Erickson JC, Yao HW, James RB, Hermon H, Greaves M (2000) J Electron Mater 29:699
11. Arnaboldi C et al (2008) Phys Rev C 78:035502
12. Nolan PJ, Gifford DW, Twin PJ (1985) Nucl Instrum Methods A 236:95
13. Deleplanque MA et al (1999) Nucl Instrum Methods Phys Res A 430:292
14. Eberth J, Simpson J (2008) Prog Part Nucl Phys 60:283



# Health Physics

John W. Poston Sr.

Department of Nuclear Engineering, Texas A&M University, College Station, TX, USA

## Article Outline

### Glossary

#### Definition of the Subject

#### Introduction

#### Early History and Development

#### The Health Physics Profession

#### Radiation Exposure to the US Population

#### Future Directions

#### Bibliography

## Glossary

**Absorbed dose** The amount of energy deposited by ionizing radiation per unit mass of the material. Usually expressed in the special radiologic unit the rad or in the SI units the gray (Gy). One Gy equals 1 J/kg or 100 rad.

**Dosimeter** Any device worn or carried by an individual into a radiation area to establish total exposure, absorbed dose, or equivalent dose (or the rates) in the area or to the individual worker while occupying the area.

**Dosimetry** The theory and application of principles and techniques associated with the measurement of ionizing radiation.

**Epilation** Loss of hair due to damage to the follicles in the skin. Temporary epilation occurs for acute exposures in the range of 300–500 rad (3–5 Gy) with permanent epilation occurring above about 700 rad (7 Gy).

**Equivalent dose (formally the dose equivalent)** The product of the absorbed dose and the radiation-weighting factor (formerly the quality factor) for the type of radiation for

which the absorbed dose is measured or calculated. The equivalent dose is used to express the effects of radiation-absorbed dose from many types of ionizing radiation on a common scale. The special radiologic unit is the rem or in the SI units the sievert (Sv). One Sv is equal to 1 J/kg or 100 rem.

**Erythema** Reddening of the skin due to exposure to radiation, similar to sunburn or thermal burns depending on the severity of exposure; it occurs for acute exposures in the range 600–800 rad (6–8 Gy).

**Exposure** A quantity defined as the charge produced in air by photons interacting in a volume of air of known mass. An old quantity that is generally no longer used. Also, a general term used to indicate any situation in which an individual is being irradiated.

**Ionization** The process of removing one or more electrons from an atom or a molecule. The positively charged atom and the negatively charged electron are called an *ion pair*.

**Isotope** One of two or more atoms with the same number of protons (same atomic number Z) but a different number of neutrons (N) in their nuclei. A radioisotope is an isotope of a chemical element that is unstable and transforms by emission of nuclear particles and electromagnetic radiation to reach a more stable state. This term is often misused because unless the materials are the same element this term should not be used (see radionuclide below).

**Nuclide** A general term that indicates an atomic nucleus that is characterized by its atomic number (number of protons), number of neutrons, atomic mass, and energy state.

**Radiation** Used in this section to mean ionizing radiation. That is, particles or electromagnetic radiation emitted from the nucleus with sufficient energy to cause ionization of atoms and molecules, either directly or indirectly, composing the material with which the radiation is interacting.

**Radionuclide** A nuclide that is radioactive and, upon decaying, emits ionizing radiation.

## Definition of the Subject

**Health physics:** The theory and practice of radiation protection [1].

## Introduction

The term health physics probably has a large number of definitions because it means many things to many practitioners of nuclear technology. As indicated above, health physics basically means radiation protection or radiation safety. The term itself has its origins in the Manhattan Engineering District (MED) days during World War II. Dr. Arthur Holly Compton and his deputy, Dr. Robert S. Stone, recognized the need for a group of individuals whose sole responsibilities were to protect the workers from the potential harmful effects of radiation while allowing the MED work to move forward as rapidly as possible. However, such individuals did not exist at the time, and the decision was made to select individuals from the medical physics profession, who understood radiation exposures and the biological effects of radiation, and those with expertise in measuring low levels of radiation exposure. The former group of individuals was recruited from the ranks of those in hospitals and cancer therapy clinics across the country, while the latter group was recruited from cosmic-ray physicists (Compton himself was a cosmic-ray physicist). There was a need to select a name for these individuals, and a number of names were considered. It was important that the name selected did not reveal the work of those involved in the MED activities. Since Dr. Stone was in charge of the Health Division at the Chicago Lab and the members of the group were physicists, the name health physics seemed to come naturally. There was also a clear intent to hide from those without the need to know exactly what was going on at the Lab. Thus, the term health physics was selected with the full intent that it be somewhat nebulous.

Dr. K. Z. Morgan, a cosmic-ray physicist and one of the original eight health physicists, defined health physics as the study and practice of radiation protection [2]. In a lighter moment, he also

defined health physics as “what health physicist do.” Health physicists are professionals dedicated to the protection of the human race and the environment from the harmful effects of radiation, while recognizing that there are enormous benefits to be derived from the use of nuclear technology [3, 4]. A health physicist is constantly balancing the risk of radiation exposure with the benefit from the use of the nuclear technology. In simple terms, health physicists strive to keep the radiation risk as small as possible and the benefit as large as possible. If one visualizes an old-fashioned balance or scale, the risk would be very small, and the benefit would be large. It is not their intent to balance the scale but to have “benefit pan” outweigh the “risk pan” so that the scale is tilted significantly.

Current approaches to health physics (i.e., radiation protection) are based on three principles, summarized in three words: justification, optimization, and limitation. First, there should not be any unnecessary radiation exposures: the benefit must exceed the risk from the exposure. Second, all exposures to radiation should be kept as low as reasonably achievable (this is called the ALARA principle but, in other countries, this is called “optimization”). Finally, no radiation exposures should exceed the recommended regulatory limits on radiation exposures.

Those facilities licensed by either the US Nuclear Regulatory Commission (USNRC) or by agreement states generally apply an exposure limit of 5 rem/year (0.05 Sv/year) for occupationally exposed workers. But health physicists use the three principles to drive exposures as far below the regulatory limits as is possible. The ALARA principle has not only kept exposures below the regulatory limits but also has resulted in a significant reduction in the collective doses and average worker doses at nuclear utilities in the USA. The average doses to workers at both pressurized water reactors (PWRs) and boiling water reactors (BWRs) in the USA have been reduced to levels of only a few hundred mrem per worker per year. In 2007, the average dose equivalent to a worker in the US nuclear power plant was 130 mrem [5]. Federal and state licensees have worked diligently to keep the average exposures at this level.

## Early History and Development

Even though the terms health physics and health physicist were not used until the early 1940s, the need to protect individuals from harmful radiation exposure dates back to just after the discovery of X-rays by Wilhelm Roentgen in 1885 and natural radioactivity by Henri Becquerel in 1896. With such amazing discoveries, many scientists began to investigate these phenomena for themselves, and many were perhaps unnecessarily exposed to radiation. Many researchers took the matter into their own hands and established exposure guidelines and restrictions for use specifically in their laboratories. However, often these exposure guidelines were based on observable effects such as the production of erythema and even evidence of epilation. Even with these informal and non-unified guidelines, there were still individuals who experienced harm from excessive radiation exposures.

In 1899, the British Roentgen Society formed a committee to collect data on the effects of X-rays. These efforts were hampered by the general belief that X-rays were harmless [6]. Later, the British X-ray and Radium Protection Committee adopted recommendations in 1921. It is important to notice the name of this committee because it indicates the limited nature of the early use of radioactivity and radiation-producing machines. In the USA, the American Roentgen Ray Society established a standing committee on radiation protection in 1920, and recommendations of this committee were adopted at the annual meeting of the Society in 1922 [2].

It was not until 1925, at the First International Congress on Radiology, that there was an international effort to begin to control radiation exposure. This effort resulted in the formation of the International Committee on X-ray and Radium Protection in 1928 at the Second International Congress held in Stockholm [7]. These efforts resulted in two current organizations, the International Commission on Radiological Protection (ICRP) and the International Commission on Radiation Units and Measurements (ICRU). These international activities were paralleled by similar efforts in the United States. In 1929, the Advisory Committee

on X-ray and Radium Protection was formed as an outgrowth of discussions between the American Roentgen Ray Society, the Radiological Society, and the Radium Society. This committee ultimately became the National Council on Radiation Protection and Measurements (NCRP) and was chartered by Congress in 1964 to provide advice and counsel on these matters to the federal government [7]. General overviews of the profession as well as discussion of the early development of the profession can be found in the bibliography provided at the end of this section [8–10].

The International Commission on Radiological Protection (ICRP) is responsible for making general recommendations on approaches to radiation protection. These recommendations are intended to provide the basic framework for radiation protection for those nations with nuclear technology programs, but it is the responsibility of each country to adapt these recommendations to the current state of their nuclear technology program. In the United States, the National Council on Radiation Protection and Measurements (NCRP) reviews the recommendations of the ICRP and provides a set of recommendations that are intended for use in the United States. The Environmental Protection Agency is responsible for establishing the general recommendations for all federal agencies, and this guidance is signed into law by the President of the United States. Then, each federal agency is required to promulgate a set of regulations to govern their activities. For example, the USNRC regulations are found in Title 10 Code of Federal Regulations part 20 (10CFR20), and the Department of Energy regulations are in 10CFR835.

But, in the United States, things are not so simple. In the federal government, at least one agency has not revised their recommendations in response to the 1987 EPA guidance and is still functioning under the 1959 version of the Code of Federal Regulations. Most agencies are using the 1977 recommendations of the ICRP in compliance with the EPA guidance. The 35 agreement states in United States have promulgated regulations that are in compliance with the EPA guidance. However, the Department of Energy has instructed their contractors to implement the

newer recommendations published by the ICRP in 1990. Even though these recommendations are similar, some significant differences must be recognized and understood. But, the situation in the United States is not currently very simple.

## The Health Physics Profession

Health physicists are found in essentially all activities involving the use of ionizing radiation, including research, education, medical uses, industrial applications, consulting services, and state and federal regulatory agencies [3, 4]. Although most health physicists are involved in only one of these areas, it is common for the professional health physicist to become active in many of the above areas. There is always a need to train employees and educate the general public concerning the hazards of radiation and the appropriate methods of protection. A health physicist must ensure that the state and federal regulations regarding radiation exposure are followed and that legal limits are not exceeded. In addition, it is the health physicist's responsibility always to seek better ways of accomplishing tasks so that exposures to ionizing radiation are kept as low as reasonably achievable, releases to the environment are controlled and appropriate, and all uses of radiation or radioactivity result in a positive benefit.

Health physics is a course of study in a number of universities across the country, both at the baccalaureate and graduate levels. Many universities grant advanced degrees in health physics and related fields (physics, radiobiology, radiochemistry, etc.). The courses of study are found in colleges of engineering, schools of public health, physics departments, biology departments, and chemistry departments. There seems to be no official "home" for these programs. However, this situation provides a certain interdisciplinary flavor to the profession, because each academic program is different and students can find an institution that best satisfies their interests and needs.

Health physics is an exciting, interesting, and challenging profession. Controlling radiation exposures to the lowest possible levels, while allowing the use of nuclear technology for the benefit of society, requires a broad background in a number of technical areas. This broad general understanding includes physics, chemistry, biology, anatomy, physiology, ecology, electronics, and a number of other disciplines. Opportunities for employment exist within a number of allied professional activities, such as medicine, cancer therapy, research, education, and regulatory affairs. Health physics and its related fields present the individual with daily challenges that require the application of sound professional judgment so that other work can proceed safely.

Opportunities within the profession have increased dramatically over the past few years. Projections indicate that the demand for health physicists will exceed supply for the foreseeable future. Many of the early leaders of the profession have retired, and a large number of those active in the profession have more than 30 years of experience. The demands for qualified health physicists will likely stay high for a very long time as the use of nuclear technology continues to increase.

## Radiation Exposure to the US Population

Health physicists have the responsibility to protect the general population from unnecessary radiation exposure, just as they do with occupationally exposed workers. A question that often arises is "what is the average radiation exposure to members of the public?" The NCRP has answered this question in a series of reports over a number of years. In 1987, the NCRP estimated that the average dose equivalent to a member of the US population was 360 mrem/year (3.6 mSv/year) [11]. A large majority of this exposure was due to naturally occurring radiation sources such as cosmic rays, solar radiation, internally deposited radionuclides, and, especially, radon gas (200 mrem/year).

In the most recent NCRP report [12], the average equivalent dose was estimated to be 620 mrem/year (6.2 mSv/year). The significant increase in this average was due to the use of medical technology involving radioactivity (nuclear medicine) and radiation-producing devices used in diagnosis and in cancer therapy (48%). Occupational exposures to radiation were estimated to be <0.1% of the total average equivalent dose. This is perhaps a testament to the dedication of health physicists, and the industry in general, to keep these exposures ALARA.

## Future Directions

The practice of radiation safety and control (health physics) will continue to evolve as more and more challenges are added to the daily routine of the professionals. Revisions of dose/risk estimates continue to result in lower recommended radiation exposure limits. Some of these may be unjustified but, nevertheless, place an increased burden on those responsible for occupational exposures. One big challenge in the United States is the impact of the use of radiation-producing machines and radioactive materials in medicine. The increase in the average annual exposure to the general population is astounding and is a concern to those dedicated to the profession of health physics, and the concept that all exposures should be justified.

## Bibliography

1. Poston JW Sr (1987) Health physics. In: Encyclopedia of physics science and technology, vol 6. Academic, New York
2. Morgan KZ, Turner JE (1973) Principles of radiation protection. Robert E. Kreiger, Huntington
3. Health Physics Society (2015) Health physics: a profession of the nuclear age. Health Physics Society, 1313 Dolley Madison Blvd., Suite 402, McLean, VA 22101
4. Health Physics Society (2015) Prospectus. Health Physics Society, 1313 Dolley Madison Blvd., Suite 402, McLean, VA 22101
5. Nuclear Energy Institute (2009) Radiation safety at nuclear power plants, June 2009. <http://www.nei.org/keyissues/safetyandsecurity/factsheets/safetystudiespublicworkers>. Accessed 20 May 2010
6. Kathren RL, Tarr NE (1974) The origins of the Health Physics Society. *Health Phys* 27:419–428
7. Taylor LS (1971) Radiation protection standards. CRC, Cleveland
8. Taylor LS (1958) Brief history of the National Committee on Radiation Protections and Measurements (NCRP) covering the period 1929–1946. *Health Phys* 1:3–10
9. Taylor LS (1958) History of the International Commission on Radiological Protections (ICRP). *Health Phys* 1:97–104
10. Claus WD (1958) What is health physics? *Health Phys* 1:56–61
11. National Council on Radiation Protection and Measurements (1987) Ionizing radiation exposure of the population of the United States. National Council on Radiation Protection and Measurements, Bethesda
12. National Council on Radiation Protection and Measurements (2009) Ionizing radiation exposure of the population of the United States. National Council on Radiation Protection and Measurements, Bethesda, NCRP Report 160



## Dosimetry

John W. Poston Sr.

Department of Nuclear Engineering, Texas A&M University, College Station, TX, USA

### Article Outline

#### Glossary

Definition of the Subject

Introduction

Thermoluminescence Dosimetry

Estimates of Absorbed Doses to Organs of the Body

Thermoluminescence Dosimetry for Neutrons

Optically Stimulated Luminescence

Electronic Dosimeters

Summary

Future Directions

Bibliography

### Glossary

**Absorbed dose** The amount of energy deposited by ionizing radiation per unit mass of the material. Usually expressed in the special radiologic unit **rad** or in the SI unit the gray (**Gy**). One Gy equals 1 J/kg or 100 rad.

**Dosimeter** Any device worn or carried by an individual to establish total exposure, absorbed dose, or equivalent (or the rates) in the area or to the individual worker while occupying the area.

**Equivalent dose** (Formerly the dose equivalent) The product of the absorbed dose and the radiation-weighting factor (formerly the quality factor) for the type of radiation for which the absorbed dose is measured or calculated. The equivalent dose is used to express the effects of radiation-absorbed dose from many

types of ionizing radiation on a common scale. The special radiologic unit is the **rem** or in the SI unit the sievert (**Sv**). One Sv is equal to 100 rem.

**Exposure** A quantity defined as the charge produced in air by photons interacting in a volume of air of known mass. An old quantity that is generally no longer used. Also, a general term used to indicate any situation in which an individual is being irradiated.

**Ionization** The process of removing one or more electrons from an atom or a molecule. The positively charged atom and the negatively charged electron are called an *ion pair*.

**Isotope** One of two or more atoms with the same number of protons but a different number of neutrons in their nuclei. Isotopes of the same chemical element have the same chemical properties but have, usually, very different nuclear properties.

**Nuclide** A general term to indicate an atomic nucleus characterized by its atomic number (number of protons), number of neutrons, atomic mass, and energy state.

**Radiation** Used in this section to mean ionizing radiation. That is, particles or electromagnetic radiation emitted from the nucleus with sufficient energy to cause ionization of atoms and molecules composing the material with which the radiation is interacting.

**Radioisotope** An isotope of a chemical element that is unstable and transforms (decays) by emission of nuclear particles and electromagnetic radiation to reach a more stable state.

**Radionuclide** Another name used for a radioisotope. A radioactive nuclide.

### Definition of the Subject

*Dosimetry* is best defined as “the theory and application of principles and techniques associated with the measurement of ionizing radiation” [1].

## Introduction

The term “dosimetry” can be best explained by assuming it was derived from combining two words: “dose” and “measurement.” The word dose is shorthand for several quantities associated with the profession of health physics (i.e., radiation protection and safety). The terms include the “absorbed dose,” which is a measure of the energy deposited per unit mass of material, and the “equivalent dose,” which includes consideration of the biological effects of different radiations, when the same absorbed dose is delivered to matter. The term “equivalent dose” is now used instead of the older term “dose equivalent” to signify changes in the ICRP-recommended radiation and tissue weighting factors. There are many other “dose terms” used in health physics, but these will not be included here because the fundamental quantity associated with dosimetry is the absorbed dose. Of course, the term measurement implies the use of some sort of detector that is sensitive to the ionizing radiation being measured. These “detectors” can take many forms from photographic film, first used more than 100 years ago, to sophisticated solid-state detectors being introduced today.

Scientists have been detecting radiation for more than a century using a wide variety of detectors. Initially, the detectors were either photographic film or simple ionization chambers filled with air. Crude scintillation systems led to the invention of detectors such as the Geiger-Müller counter and more sophisticated proportional counters and detectors designed for specific applications and/or to detect a specific radiation. A discussion of these detectors would fill a textbook [2–5] and see also entry C. Radiation Detection Devices (in this encyclopedia). For this reason, this discussion of dosimetry will focus on two of the more modern dosimeters used to monitor the absorbed dose to occupationally exposed workers in nuclear facilities across the United States.

As indicated above, *dosimetry* is best defined as “the theory and application of principles and techniques associated with measurement of ionizing radiation” [1]. In reality, two basic areas

encompass the term “dosimetry.” These are called external dosimetry and internal dosimetry. Again, these terms are shorthand descriptions of the more complex exposure conditions being considered. External dosimetry simply means the measurement of radiation that exists outside the human body. Basically, this type of dosimetry uses radiation detection devices and instrumentation to establish the characteristics of the radiation field. These measurements provide information in many forms, for example, the energy or energy spectrum of the radiation, the radiation intensity, the types of radiation present, and other useful information. In many cases, the radiation detectors used for these measurements are called “dosimeters,” an indication that the sole purpose is to measure the radiation-absorbed dose and which leads to an estimate of the equivalent dose. It is important to remember that, because the radiation source and the dosimeters are both outside the body, the measurement does not provide a direct measurement of the absorbed dose to the organs of the body. Methods used to provide estimates of the absorbed doses to organs and tissues of the body will be discussed later.

When a radionuclide or radionuclides are taken into the body, through inhalation, ingestion, injection, or assimilation through the intact skin, there is a completely different set of challenges facing the dosimetrist. Internal dosimetry is defined as “a process of measurement and calculation that results in an estimate of the absorbed dose to organs and tissues of the body from an intake of radioactive material” [1]. Internal dosimetry is primarily confined to the use of mathematical models and calculational techniques based on an internationally agreed upon set of standard assumptions. The dose estimate relies on mathematical models that describe the uptake, distribution, and retention of the radioactive material in the body. However, the calculations may be based on a set of measurements, such as the concentration of airborne radioactivity in a work area, the activity of radioactive material deposited in the body or specific organs in the body, or measurement of the concentration of radioactivity in excreta, such as urine or feces. Even with these measurements as initial input, internal dosimetry

must rely on models of a reference human and calculational techniques. These aspects will not be discussed here.

This section will focus on a discussion of external dosimetry methods, which are primarily used to monitor radiation exposures of occupationally exposed workers conducting licensed activities in the United States. Radiation dosimeters that are no longer widely used, such as film badges and pocket ionization chambers, will not be discussed.

## Thermoluminescence Dosimetry

In 1950, Daniels suggested that the thermoluminescence (TL) phenomenon could be used as a radiation dosimeter [3]. This suggestion came late in the development of radiation dosimeters even though it was known that Henri Becquerel, as well as his father, had mentioned this phenomenon in his scientific papers. In addition, the relation between X-ray exposure and thermoluminescence was observed as early as 1904. Nevertheless, after many struggles and failures in the research of Cameron and his colleagues, thermoluminescence and thermoluminescence dosimetry (TLD) became a reality and flourished in the late 1960s and 1970s [3]. For a very long time, TLD has been the most popular method of personnel monitoring.

In these dosimeters, the absorbed dose is determined by observing the emitted light from an inorganic crystal after exposure to radiation. The light is released from the crystal as it is heated under controlled conditions. The heat energy originally was provided by electrical heating, but subsequent developments in TLD led to the use of high-intensity light as an alternate method. Regardless of the method of heating, the amount of light emitted is directly proportional to the radiation energy deposited in the TL material. This light is normally measured with a photomultiplier tube sensitive to the wavelength of the emitted light. It must be remembered that the TLDs are not “absolute dosimeters” and, therefore, require proper calibration in the radiation fields to which the dosimeters will be exposed.

Detailed explanations of the TL phenomenon have been offered by a number of scientists, but a simple bandgap model can be used to explain the basic mechanism. The usual procedure is to refer to the energy-level diagram in an insulating crystal. In a pure crystal, radiation impinging on the crystal would free electrons, and these electrons would pass from the valence band to the conduction band. These electrons would not remain in the conduction band for a long period and would return to the valence band releasing the energy acquired in the form of light. In a pure crystal, this light would be absorbed and would not escape the crystal. In TLDs, dopants (impurities) are added to the crystal, and these impurities reside in the forbidden or bandgap between the valence and conduction bands. When these crystals are exposed to radiation, the loss of electrons from the valence band creates positively charged atoms (“holes”). The electrons and holes may migrate through the crystal until they recombine or are “trapped” by the impurity atoms (dopants) residing in the bandgap. Thus, the energy absorbed by the crystal is stored until it is released, in the form of light, through heating the crystal (thus, thermoluminescence). This light, which is now characteristic of the impurity sites, can escape the crystal and can be measured with an external detector (i.e., a photomultiplier tube).

It is important to realize that these trapping sites may exist at many different levels in the bandgap, and it is not correct to assume that all electrons (or holes) are trapped at exactly the same energy level. Thus, the light intensity may vary as a function of temperature, and the plot of the light intensity as a function of temperature (called a “glow curve”) may exhibit a number of peaks and valleys depending on the number of trapping levels in the crystal. Either the total light emitted or the height of a particular peak may be used to determine the absorbed dose (upon proper calibration). It is also important that the heating cycle be very reproducible to avoid causing fluctuations in the peak heights.

There are a large number of inorganic materials that have been studied for use as TLDs. Table 1 presents a summary of the characteristics of some of the most popular materials (but there are many

**Dosimetry, Table 1** Summary of characteristics of thermoluminescence dosimetry (TLD) materials

TLD material	Effective atomic number ( $Z_{\text{eff}}$ )	Temperature of main peak (°C)
CaSO <sub>4</sub> : Mn	15.3	110
CaSO <sub>4</sub> : Dy	15.5	220
CaF <sub>2</sub> : Mn	16.3	260
CaF <sub>2</sub> :Dy	16.3	180
LiF:Mg, Ti <sup>a</sup>	8.2	195
Li <sub>2</sub> B <sub>4</sub> O <sub>7</sub> : Mn	7.4	200
Al <sub>2</sub> O <sub>3</sub> :C	10.2	185

<sup>a</sup>LiF:Mg,Ti is the standard material to which all other TLD materials are compared

other possible TLD materials). In dosimetry, it is common to use materials that are “tissue equivalent” in terms of the interactions of photons or other radiations with the dosimeters. Thus, the closer the effective atomic number of the material is to that of tissue (~7.6), the more tissue equivalent is the material. For historical reasons, LiF is the standard to which all other TLD materials are compared. The standard LiF is the natural form of lithium with the normal concentrations of the isotopes of Li-6 (7.4%) and Li-7 (92.6%). Also in this table are listed the temperatures of the “main peak.” This designation is the peak in the TLD glow curve that is used to determine the absorbed dose. One big disadvantage of TLDs is that the dosimeter can only be read (evaluated) once. Heating the crystal essentially releases all the electrons or holes that are trapped and an opportunity to confirm the reading is not possible.

Table 2 compares other characteristics of the TLD materials. These include the “light output” of the material when exposed to <sup>60</sup>Co radiation compared to the light output for the standard, that is, LiF. The data for Li<sub>2</sub>B<sub>4</sub>O<sub>7</sub>:Mn are somewhat misleading because the measurements quoted in this table were made with the standard photomultiplier tube used for all other TLD materials. However, because the wavelength of light from the Li<sub>2</sub>B<sub>4</sub>O<sub>7</sub>:Mn is different, the output can be improved significantly by replacing

the normal photomultiplier with one with a photocathode sensitive to the correct wavelength of light. The energy response is the ratio of the light output at energy of 30 keV to that from irradiation with <sup>60</sup>Co. Except for Li<sub>2</sub>B<sub>4</sub>O<sub>7</sub>:Mn, most materials overrespond to low-energy photon radiation.

As can be seen in Table 2, the usual TLD materials are very sensitive to radiation with lower limits of detection in the range of tenths of microgray. Upper limits range from only 10 Gy to more than 10<sup>4</sup> Gy. The term “fading” is an indication of the ability of the TLD material to retain the stored energy and thus the stored information necessary to assign the absorbed dose from the wearing of the dosimeter. As is shown, LiF:Mg,Ti, Li<sub>2</sub>B<sub>4</sub>O<sub>7</sub>:Mn, and Al<sub>2</sub>O<sub>3</sub>:C have good energy storage capability, which has led to a focus on these three materials.

## Estimates of Absorbed Doses to Organs of the Body

In the United States, federal regulations require the reporting of three quantities for all occupationally exposed workers who are anticipated to receive doses in excess of 10% of the federal limits. These quantities are the “deep-dose equivalent,” the “eye-dose equivalent,” and the “shallow-dose equivalent.” The deep-dose equivalent is defined as the dose at 1-cm depth in the body, which produces an overestimate of the absorbed doses because most organs and tissues of the body are located deeper than 1 cm (or 1,000 mg/cm<sup>2</sup>). The eye-dose equivalent considers the dose to the lens of the eye, which is assumed to be at a depth of 300 mg/cm<sup>2</sup>. Finally, the shallow-dose equivalent (or more properly the skin-dose equivalent) is assumed to be at a depth of 7 mg/cm<sup>2</sup>.

Now the question arises, “How does one measure these absorbed doses, and the subsequent equivalent doses, with radiation dosimeters located outside the body of the worker?” The approach taken has been used for many years and is not new. It has been applied since the Manhattan Project era and is an accepted method to provide these dose estimates. The technique involves using

**Dosimetry, Table 2** Summary of dosimetric characteristics of TLD materials

TLD material	Efficiency to Co-60	Energy response	Useful dose range	Fading
CaSO <sub>4</sub> :Mn	70	~10	0.2 µGy to 10 <sup>2</sup> Gy	50% in 24 h
CaSO <sub>4</sub> :Dy	20	~12.5	0.2 µGy to 10 <sup>3</sup> Gy	2% in 1 month
				8% in 6 months
CaF <sub>2</sub> :Mn	10	~13	10 µGy to 3 × 10 <sup>3</sup> Gy	10% in 16 h
				15% in 2 weeks
CaF <sub>2</sub> :Dy	30	~12.5	0.1 µGy to 10 <sup>4</sup> Gy	10% in 24 h
				16% in 2 weeks
LiF:Mg,Ti	1.0	1.25	10 µGy to 3 × 10 <sup>3</sup> Gy	5% in 1 year
Li <sub>2</sub> B <sub>4</sub> O <sub>7</sub> :Mn	0.15	0.9	0.5 µGy to 10 <sup>4</sup> + Gy	<5% in 3 months
Al <sub>2</sub> O <sub>3</sub> :C	70	2.9	0.5 µGy to 10 Gy	<3% in 1 year

multiple detector elements, that is, typically four TLDs, and covering these TLDs with different thicknesses of materials (called filters) to represent these depths. So, the TLD designated to measure the deep-dose equivalent is covered with a material having a density thickness of 1,000 mg/cm<sup>2</sup>. The eye-dose equivalent is determined by covering the TLD with material with a density thickness of 300 mg/cm<sup>2</sup>. Usually, there are two different materials of this density thickness in the dosimeter. Finally, there is a thin filter included to allow extrapolation to the depth of 7 mg/cm<sup>2</sup>. It is very difficult to provide a direct measurement at such an extremely shallow depth.

### Thermoluminescence Dosimetry for Neutrons

TLDs have their primary application in dosimetry for X-ray and gamma-ray fields. In addition, the TLDs have limited sensitivity to beta radiation. Because certain materials in the TLDs interact with neutrons, TLDs can be used to measure both thermal and fast neutron dose – with proper calibrations. Table 3 lists the pertinent information regarding three types of LiF TLDs as these are applied to neutron dosimetry. As can be seen in this table, the natural LiF TLD has the normal concentrations on Li-6 and Li-7. This material is designated as TLD-100. The other two materials are designated TLD-600 and TLD-700. TLD-600 contains a high concentration of the isotope Li-6 with less than 5% Li-7. TLD-700 contains

**Dosimetry, Table 3** Characteristics of lithium fluoride TLDs for neutron dosimetry

TLD type	Li-6 (%)	Li-7 (%)	Thermal neutron cross section
Natural (TLD-100)	7.4	92.6	N/A
TLD-600	95.62	4.38	950 barns
TLD-700	0.007	99.993	0.033 barns

essentially all the isotope Li-7 with a very small amount of Li-6. Notice also the differences in the thermal neutron cross sections (probability to absorb neutrons) for these two isotopes. These differences play a role in the dosimetry of both thermal and fast neutrons.

Thermal neutron dosimetry is based on the “difference technique” used to separate the photon and thermal neutron dose from each other. This technique is similar in some ways to the standard method using bare and cadmium-covered gold foils to measure the thermal neutron fluence in a nuclear reactor core. Basically, the LiF TLD-600 is sensitive to photon radiation as well as to thermal neutron radiation. The LiF TLD-700 has the same photon sensitivity but essentially no sensitivity to thermal neutrons. Thus, when used in a mixed photon and thermal neutron field, the TLD-600 will provide the absorbed dose for both the photons and the thermal neutrons. The TLD-700 will provide only the absorbed dose from the photon radiation, and the difference between the doses indicated by the two dosimeters is the thermal neutron dose.

Fast neutron dosimetry uses a similar technique, but to obtain the fast neutron dose, the “albedo technique” is used. The albedo technique relies upon the dosimeter being held closely to the body, and the fast neutron dose is measured as the fast neutrons enter the body, are moderated there by tissue, are subsequently reflected from the body, and hit the dosimeter. There are many designs of albedo fast neutron dosimeters, but the concept is the same as that outlined above. The fast neutron dose is obtained by using the difference technique as before.

Note that using TLDs to measure either thermal neutron or fast neutron dose requires very careful calibration of the dosimeters in radiation fields approximating those in which the exposures are anticipated. In addition, in very high photon radiation fields with a low percentage of thermal or fast neutrons, these dosimeters may provide data that is highly suspect. This is often the consequence of subtracting two very large numbers (large photon dose) to obtain an estimate of the very low thermal or fast neutron dose. Other methods of neutron dosimetry, for example, track-etch detectors, may be preferred in these situations.

## Optically Stimulated Luminescence

Currently, the dosimetry method of choice for dosimetry appears to be optically stimulated luminescence (OSL). Even though film and TLD are still used to some extent, many facilities are switching over to this newer technology. OSL may be used, not only for personnel monitoring but also for environmental monitoring and medical dosimetry. Basically, OSL is very similar to TLD in terms of the basic physics associated with the energy deposition, storage, and release. The major difference is that, instead of using heat, laser light is used to release (“detrap”) the electrons. The laser is pulsed at a rate of 4,000 times per second and is directed to only a small area on the material. This provides an opportunity for multiple readings on the same dosimeter, if necessary, as the laser can be focused on another region of the crystal. In a similar fashion to the development of TLDs in the

latter part of the twentieth century, many materials have been studied for possible use as OSL dosimeters. These materials include halides, sulfates, sulfides, and oxides [6].

However, the material of choice is an  $\text{Al}_2\text{O}_3:\text{C}$  crystalline detector. Single crystals of  $\text{Al}_2\text{O}_3:\text{C}$  are ground into a powder and mixed with a polyester base. This mixture is deposited on a polyester film about 0.03 cm thick, which can be fabricated in a thin strip for incorporation into a dosimeter. This material has a good response to photon radiation as well as a response to beta radiation. Copper (0.18 g/cm<sup>2</sup>) and tin (0.39 g/cm<sup>2</sup>) filters, as well as an open area, are used in the dosimeter (as described above) to provide the dosimetry quantities of interest. Commercially available dosimeters have a dose measurement range for photons of 1 mrem to 1,000 rem (10  $\mu\text{Sv}$  to 10 Sv) over an energy range from 5 keV to more than 40 MeV. For beta radiation, the dose measurement range is from 10 mrem to 1,000 rem (100  $\mu\text{Sv}$  to 10 Sv) over an energy range of 150 keV to 10 MeV (average energy). The commercially available OSL dosimeters may be used for up to 1 year. If the packaging is not compromised, the dosimeter is unaffected by heat, moisture, and pressure [7].

## Electronic Dosimeters

Currently, in many situations, such as in a nuclear power plant, it is common to wear two types of dosimeters. One of these dosimeters is usually a TLD or an OSL type. This dosimeter is usually designated as the “dosimeter of record.” That is, these dosimeters are worn for long periods of time (i.e., 1 month, 3 months, or perhaps 1 year) and provide a measure of the total dose received by the exposed worker over the wearing period. It is these doses that are reported annually to the US Nuclear Regulatory Commission, as required by the federal regulations. The second dosimeter is a modern, electronic dosimeter that may contain as many as three small detector elements (usually solid-state detectors such as silicon diodes). Electronic dosimeters are used to monitor the work and may be worn for short periods of time. The

primary function of these dosimeters is work and dose control. The dosimeters feature adjustable alarm points that may be set by a computer, before use, based on the anticipated total dose received or maximum dose rate encountered. Workers are trained to recognize the alarms and understand the proper response to these alarms.

There are many different electronic dosimeters but most have similar characteristics. A typical dosimeter would use small silicon diode detectors, which would be sensitive to both photons (50 keV to 6 MeV) and beta radiation (>60 keV up to more than 2 MeV). Doses from 0.1 mrem (1  $\mu$ Sv) to 10 Sv can be measured with dose rates ranging from 0.01 mrem/h (0.1  $\mu$ Sv/h) to 1,000 rem/h (10 Sv/h). Most dosimeters feature both audible and visible alarms. Typically, these dosimeters are lightweight, from 50 g up to perhaps 200 g. A unique feature of some of these dosimeters, and a good radiation protection practice, is the use of permanent stations throughout the plant that interrogate the dosimeters as the worker passes by the station and transmits this information to a central station. Other types of dosimeters contain small transmitters that transmit the accumulated dose (or dose rates) to central locations, which are monitored by the radiation safety staff. As technology moves forward, it is difficult to predict what the future holds in terms of the next generation of dosimeters.

## Summary

The measurement of radiation energy deposited in material, that is, the measurement of the absorbed dose, is the primary goal of the practice of dosimetry. Over the last 100 years or more, dosimetry has taken many forms as science and technology have made significant progress. Many of the techniques have been relegated to the history books as other more advanced techniques have been

introduced. This short discussion of dosimetry was intended to present the basic concepts and to provide two examples of modern dosimeters used to monitor personnel that are occupationally exposed to ionizing radiation, as well as to introduce the use of electronic dosimeters, which are used widely in nuclear utilities.

## Future Directions

Approaches to dosimetry have changed rapidly with developments in electronics and computers. The last decade or so has seen the design and manufacture of dosimeters that are small but incorporate computer capabilities. These dosimeters allow the setting of dose and dose rate alarms, remote interrogation of the dosimeters to monitor worker exposure, and many other features. It appears these trends will continue as the demand for "smarter" dosimeters, with many more capabilities, for use in nuclear facilities as well as in emergency response continues to increase.

## Bibliography

1. Poston JW Sr (1987) Dosimetry. In: Encyclopedia of physical science and technology, vol 6. Academic, New York
2. Knoll GF (2000) Radiation detection and measurements, 3rd edn. Wiley, New York
3. Eichholz GG, Poston JW (1979) Principles of nuclear radiation detection. Ann Arbor Science Publishers, Ann Arbor
4. Tsoulfanidis N (1995) Measurement & detection of radiation, 2nd edn. Taylor & Francis, Washington, DC
5. Kase KR, Bjarngard BE, Attix FH (eds) (1985) The dosimetry of ionizing radiation, vol I–III. Academic, New York
6. Boetter-Jensen L, McKeever SWS, Wintle AG (2000) Optically stimulated luminescence dosimetry. Elsevier, Maryland Heights
7. R. S. Landauer, Inc (2010) <http://www.osldosimetry.com/luxel/>. Accessed 9 May 2010



## Radiation Shielding

J. Kenneth Shultz and Richard E. Faw  
Department of Mechanical and Nuclear  
Engineering, Kansas State University, Manhattan,  
KS, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
History of Shielding  
Practice of Radiation Shielding  
Basic Analysis Methods  
Intermediate Methods for Photon Shielding  
Intermediate Methods for Neutron Shielding  
Gamma-Ray and Neutron Reflection  
Radiation Streaming Through Ducts  
Gamma-Ray and Neutron Skyshine  
Transport Theory  
Future Directions  
Bibliography

### Glossary

**Albedo** A quantity describing how neutrons or photons incident on the surface of some medium (e.g., a wall) are reflected or reemitted from the surface.

**Buildup factor** A factor to account for production of secondary photons in a shield. The transmitted dose from only uncollided photons times the buildup factor equals the dose from all photons, uncollided plus secondary photons.

**Dose** A general term for the energy transferred from radiation to matter. Specifically, the absorbed dose is the amount of energy

Richard E. Faw: deceased.

© Springer Science+Business Media, LLC, part of Springer Nature 2018  
N. Tsoulfanidis (ed.), *Nuclear Energy*,  
[https://doi.org/10.1007/978-1-4939-6618-9\\_25](https://doi.org/10.1007/978-1-4939-6618-9_25)

369

Originally published in  
R. A. Meyers (ed.), *Encyclopedia of Sustainability Science and Technology*, © Springer Science+Business Media New York 2016  
[https://doi.org/10.1007/978-1-4939-2493-6\\_25-5](https://doi.org/10.1007/978-1-4939-2493-6_25-5)

imparted to matter from ionizing radiation in a unit mass of that matter. Units are the gray (Gy) and rad, respectively, equivalent to 1 J/kg and 100 ergs/g.

**Flux** A measure of the intensity of a radiation field. Specifically, it equals the number of radiation particles entering, in a unit time, a sphere of cross-sectional area  $\Delta A$  divided by  $\Delta A$ , as  $\Delta A \rightarrow 0$ . The flux, integrated over a specified time interval is called the *fluence*.

**Interaction coefficient** A quantity, denoted by  $\mu$ , describing how readily a photon or neutron interacts with a given medium. Specifically, it is the probability a radiation particle of energy  $E$  will interact in a specified manner per unit distance of travel, for infinitesimal distances. It thus has units of inverse length. The total interaction coefficient  $\mu = \sum_i \mu_i$  where  $\mu_i$  is the coefficient for the  $i$ th type of interaction (e.g., scattering, absorption).

**Neutron** A neutral subatomic particle that collectively with positively charged protons forms an atomic nucleus. Although both are composite particles composed of quarks and gluons, for the energies considered in this entry they can be viewed as fundamental unchangeable particles

**Photon** A quantum of electromagnetic radiation with energy  $E = h\nu$ , where  $h$  is Planck's constant and  $\nu$  is the frequency. Photons produced by a change in the structure of the nucleus are called *gamma photons* and those produced by atomic electron rearrangement are called *x-rays*.

**Skyshine** A term for the radiation that reaches some point of interest after being scattered by the atoms in the atmosphere back to the point of interest.

**Transport equation** Also known as the linearized Boltzmann equation, it describes rigorously the spatial, energy, and angular distribution of neutrons or photons in any medium with arbitrary source distributions.

From its solution, the radiation flux or dose anywhere in the medium can be determined.

## Definition of the Subject

We live in a world that abounds in radiation of all types. Many radiations, such as the neutrinos or visible light from our sun present little risk to us. Other radiations, such as medical x-rays or gamma rays emitted by radioactive materials, have the potential to cause us harm. In this entry, only the transport of *indirectly ionizing radiation* is considered. These radiations consist of chargeless particles such as neutrons or photons that, upon interacting with matter, produce energetic secondary charged particles called *directly ionizing radiation*. It is these secondary charged particles that, through ionization and excitation of ambient atoms along their paths, cause radiation damage to biological tissues or other sensitive materials.

To mitigate radiation damage, a *shield* is often interposed between a source of ionizing radiation and the object to be protected so that the radiation levels near the object are reduced to tolerable levels. Typically, a shield is composed of matter that effectively diminishes the radiation that is transmitted. (However, there are noncorporeal shields such as magnetic fields that deflect moving charged particles. The earth's magnetic field serves as such a shield to protect us from charged particles reaching earth from outer space.) The term *radiation shielding* refers usually to a system of shields constructed for a specific radiation protection purpose. The term also refers to the study of shields – the topic of this entry.

## Introduction

The origins of shielding go back to the science of optics in which the exponential attenuation of light was long recognized. The exponential attenuation of radiation rays is still widely used for neutron and photon shielding. Also the governing field equation that describes how radiation migrates through matter was introduced in 1872

by Ludwig Boltzmann who used it to study the kinetic theory of gas. All this occurred before the discovery of ionizing radiation! The *radiation transport equation* is just a special case of the Boltzmann equation applied to situations in which radiation particles do not interact among themselves.

The study of shielding has many aspects: transport of (deeply penetrating) indirectly ionizing radiation in the shield, the production of very slightly penetrating secondary (directly ionizing) radiation in the shield and its surroundings, the radiation levels in the vicinity of the shield, deposition of heat in the shield, radiation penetration through holes in the shield, radiation scattered around the shield, selection of shielding materials, optimization of the shielding configuration, and the economics of shield design. It also involves understanding of related matters such as radiation source characteristics, radiation protection standards, and the fundamentals of how radiation interacts with matter.

The restriction of this entry to indirectly ionizing radiation is of a practical nature. Sources of charged particles, such as the alpha and beta particles emitted in some types of radioactive decay, can and do cause biological damage, particularly if the radioactive material is ingested. Here, however, it is assumed that the radiation sources are external to the body or the sensitive material of interest. Such external sources also usually emit far more penetrating indirectly ionizing radiation, and any shield that is effective against indirectly ionizing radiation is usually more than adequate to stop the directly ionizing radiation.

## History of Shielding

To appreciate better the current state of shielding practice, it is important to understand how the discipline developed and what were the driving forces that caused it to mature. In this section, a brief overview of the history of shielding is presented. (A greatly expanded version of the following synopsis is provided by Shultz and Faw [1].)

## Early History

The hazards of x-rays were recognized within months of Roentgen's 1895 discovery, but dose limitation by time, distance, and shielding was at the discretion of the individual researcher until about 1913. Only then were there organized efforts to create groups to establish guidelines for radiation protection. And it was not until about 1925 that instruments became available to quantify radiation exposure.

In 1925, Mutscheller [2] introduced important concepts in x-ray shielding. He expressed the erythema dose (An *ED* value of unity represents a combination of time, distance, and beam current just leading to a first-degree burn) *ED* quantitatively in terms of the beam current *i* (mA), exposure time *t* (min), and source-to-receiver distance *r* (m), namely,  $ED = 0.00368it/r^2$ , independent of x-ray energy. Mutscheller also published attenuation factors in lead as a function of lead thickness and x-ray average wavelength.

Evolutionary changes to x-ray shielding were made during the decades preceding World War II. These included consideration of scattered x-rays, refinements in shielding requirements in terms of x-ray tube voltages, recommendations for use of goggles (0.25-mm Pb equivalent) and aprons (0.5-mm Pb equivalent) for fluoroscopy, and specifications for tube-enclosure shielding and structural shielding for control rooms.

The other major source of ionizing radiation before World War II was the medical and industrial use of radioactive radium discovered by Marie and Pierre Curie in 1898. Not until 1927 were lead shielding standards recommended for radium applicators, solutions, and storage containers. For example, the International X-Ray and Radium Protection Committee recommended that tubes and applicators should have at least 5 cm of lead shielding per 100 mg of radium. It was not until 1941 that a tolerance dose for radium, expressed in terms of a maximum permissible body burden of 0.1  $\mu\text{Ci}$ , was established. This was done largely in consideration of the experiences of early "radium-dial" painters and the need for standards on safe handling of radioactive luminous compounds [3].

## Manhattan Project and the Early Postwar Period

*Early reactor shielding.* During World War II, research on nuclear fission, construction of nuclear reactors, production of enriched uranium, generation of plutonium and its separation from fission products, and the design, construction, testing, and deployment of nuclear weapons all were accomplished at breakneck speed in the Manhattan Project. Radiation sources new in type and magnitude demanded not only protective measures such as shielding but also examination of biological effects and establishment of work rules.

The construction of nuclear reactors for research and for plutonium production required shield designs for both gamma rays and neutrons. However, with only sparse empirical data and large uncertainties about how neutrons and gamma rays migrate through shields, shield designers acted very conservatively. For example, shielding for both Fermi's 1943 graphite pile in Chicago and the 1947 X-10 research reactor at what is now Oak Ridge National Laboratory was adequate for gamma rays and overdesigned for neutrons. Operation of the X-10 reactor, built to provide data for the design of plutonium-production reactors, revealed problems with streaming of gamma rays and neutrons around access holes in the shield. The water-cooled graphite plutonium-production reactors at Hanford, Washington used iron thermal shields and high-density limonite and magnetite concrete as biological shields.

By the 1940s, the importance of scattered gamma rays was certainly known from measurements, and use of the term *buildup factor* to characterize the relative importance of scattered and unscattered gamma rays had its origin during the days of the Manhattan Project. Neutron diffusion theory and Fermi age theory were established, but shielding requirements for high-energy neutrons were not well understood. Wartime radiation shielding was an empirical, rule-of-thumb craft.

*Nuclear reactors* for propulsion. The Atomic Energy Act of 1946 transferred control of nuclear matters from the Army to the civilian Atomic Energy Commission (AEC). That same year, working with the AEC, the US Navy began

development of a nuclear powered submarine and the US Air Force, a nuclear powered aircraft. Both of these enterprises demanded minimization of space and weight of the nuclear-reactor power source. Such could be accomplished only by minimizing design margins and that required knowledge of mechanical, thermal, and nuclear properties of materials with greater precision than known before.

Research reactors were constructed at various national laboratories in the USA and Britain to provide the much needed shielding data. The first such research program was begun in 1947 at Oak Ridge National Laboratory with the construction of the X-10 graphite reactor. The X-10 graphite reactor had a 2-ft square aperture in its shielding from which a neutron beam could be extracted, the intensity being augmented by placement of fuel slugs in front of the aperture. Attenuation of neutrons could then be measured within layers of shielding materials placed against the beam aperture. Early measurements revealed the importance of capture gamma rays produced when neutrons were absorbed. Improved experimental geometry was obtained by using a converter plate containing enriched uranium instead of relying on fission neutrons from fuel slugs. A broadly uniform beam of thermal neutrons incident on the plate generated a well-defined source of fission neutrons. A water tank was adjacent to the fission source, with shielding slabs and instrumentation within the tank. This *Lid Tank Shielding Facility*, LTSF, was the precursor of many so-called *bulk-shielding facilities* incorporated into many water-cooled research reactors.

Although a nuclear powered aircraft never flew, the wealth of information gained on the thermal, mechanical, and shielding properties of many special materials is a valuable legacy. To obtain shielding data in the absence of ground reflection of radiation, several specialized facilities were constructed. A test reactor was suspended by crane for tests of ground reflection. Then an aircraft shield test reactor was flown in the bomb-bay of a B-36 aircraft to allow measurements at altitude. The Oak Ridge tower shielding facility (TSF) went into operation in 1954, and remained in operation for almost 40 years. Designed for the aircraft nuclear

propulsion program, the facility allowed suspension of a reactor hundreds of feet above grade and separate suspension of aircraft crew compartments. In its long life, the TSF also supported nuclear defense and space nuclear applications.

Streaming of radiation through shield penetrations and heating in concrete shields due to neutron and gamma-ray absorption were early shielding studies conducted in support of gas-cooled reactor design. Additional efforts were undertaken soon thereafter at universities as well as government and industrial laboratories. Shielding material properties, neutron attenuation, the creation of capture and inelastic scattering gamma rays, reflection and streaming of neutrons and gamma rays through ducts and passages, and radiation effects on materials were major research topics.

### The Decade of the 1950s

This era saw the passage in the USA of the Atomic Energy Act of 1954, the Atoms for Peace program, and the declassification of nuclear data. During this decade, many simplified shielding methods were developed that were suitable for hand calculations. The first digital computers appeared and were quickly used for radiation transport calculations. The US Air Force also started a short-lived nuclear rocket program.

*Advances in neutron shielding methods.* These advances resulted from measurements at the LTSF and other bulk-shielding facilities. One advancement was the measurement of point kernels, or Green's functions, for attenuation of fission neutrons in water and other hydrogenous media. The other was the discovery that the effect of water-bound oxygen, indeed the effect of homogeneous or heterogeneous shielding materials in hydrogenous media, could be modeled by exponential attenuation governed by effective "removal" cross sections for the non-hydrogen components. The LTSF allowed measurement of removal cross section for many materials.

*Advances in gamma-ray shielding methods.* As the decade began, researchers at the National Bureau of Standards investigated electron and photon transport. Much of this effort dealt with the moments method for solving the transport

equation describing the spatial, energy, and angular distributions of radiation particles emitted from fixed sources. From such calculations, *buildup factors* to account for scattered photons were determined for various shielding media and shield thicknesses. Various empirical formulas were also developed to aid in the interpolation of the buildup-factor data.

*Advances in Monte Carlo computational methods.* The Monte Carlo method of simulating radiation transport computationally has its roots in the work of John von Neumann and Stanislaw Ulam at Los Alamos in the 1940s. Neutron-transport calculations were performed in 1948 using the ENIAC digital computer which had commenced operations in 1945. In this decade, major theoretical advances in Monte Carlo methods were made and many clever algorithms were invented to allow Monte Carlo simulations of radiation transport through matter. Little did the pioneers of this transport approach realize that Monte Carlo techniques would become indispensable in modern shielding practice.

### The Decade of the 1960s

The 1960s saw the technology of nuclear-reactor shielding consolidated in several important publications. Blizzard and Abbott [4] edited and released a revision of a portion of the 1955 Reactor Handbook as a separate volume on radiation shielding, recognizing that reactor shielding had emerged from nuclear-reactor physics into a discipline of its own. In a similar vein, the first volume of the Engineering Compendium on Radiation Shielding [5] was published. These two volumes brought together contributions from scores of authors and had a great influence on both practice and education in the field of radiation shielding.

This exciting decade also saw the beginning of the Apollo program, the start of the NASA NERVA (Nuclear Engine for Rocket Vehicle Application) program, the deployments in space of SNAP-3, a radioisotope thermoelectric generator in 1961, and SNAP-10A nuclear-reactor power system in 1965. It also saw the Cuban missile crisis in October 1962 and a major increase in the cold-war apprehension about

possible use of nuclear weapons. The Apollo program demanded attention to solar flare and cosmic radiation sources and the shielding of space vehicles. Cold-war concerns demanded attention to nuclear-weapon effects, particularly structure shielding from nuclear-weapon fallout. Reflection of gamma rays and neutrons and their transmission through ducts and passages took on special importance in structure shielding. The rapid growth in access to digital computers allowed introduction of many computer codes for shielding design and fostered advances in solving various approximations to the Boltzmann transport equation for neutrons and gamma rays. Similar advances were made in treating the slowing down and transport of charged particles.

*Space shielding.* Data gathered over many years revealed a very complicated radiation environment in space. Two trapped-radiation belts had been found to surround the earth, an inner proton belt and an outer electron belt. Energy spectra and spatial distributions in these belts are determined by the earth's magnetic field and by the solar wind, a plasma of low-energy protons and electrons. The radiations pose a risk to astronauts and to sensitive electronic equipment. Uniform intensities of very-high-energy galactic cosmic rays demand charged-particle shielding for protection of astronauts in long duration missions. The greatest radiation risk faced by Apollo astronauts was from solar flare protons and alpha particles with energies as great as 100 MeV for the former and 400 MeV for the latter. The overall subject of space radiation shielding is treated by Haffner [6].

*Structure shielding.* Structure shielding from nuclear-weapon fallout required careful examination of the atmospheric transport of gamma rays of a wide range of energies and expression of angular distributions and related data in a manner easily adopted to analysis of structures. There was a need to assess, at points within a structure, the ratios of interior dose rates to that outside the building, called *reduction factors*. These factors were measured experimentally and also calculated with the transport moments method which had been used so successfully in calculation of buildup factors.

*Other shielding advances.* Of great importance to structure shielding, but also of interest in reactor and nuclear plant shielding, were the development of simplified methods to quantify neutron and gamma-ray streaming through ducts and voids in shields. This decade saw the development of removal-diffusion methods to describe quite accurately the penetration and slowing down of fast fission neutrons in shields. Finally, a simplified approach was developed to describe how gamma rays or neutrons incident on some material are scattered back. The central concept in this approach is the *particle albedo*, a function that describes how radiation incident on a thick medium, a concrete wall for example, is reemitted or reflected back from the surface. Measurements, theoretical calculations, and approximating formulas for both neutron and gamma-ray albedos were developed in this decade.

*Digital computer applications.* Radiation transport calculations are by nature very demanding of computer resources. The community of interest in radiation transport and shielding has been served magnificently for more than four decades by the Radiation Safety Information Computational Center (RSICC). Established in 1962 as the Radiation Shielding Information Center (RSIC) at Oak Ridge National Laboratory, RSICC's mission is to provide in-depth coverage of the radiation transport field to meet the needs of the international shielding community.

The 1960s saw many new “mainframe” computer codes developed and disseminated. Among these codes were gamma-ray “point-kernel” codes such as ISOSHLD and QAD, with versions of both still in use after almost four decades. The discrete-ordinates method of solving the Boltzmann transport equation was devised in the 1950s and put into practice in the 1960s in a series of computer codes, such as DTF, DOT, and ANIS-N. The spherical harmonics method of treating neutron spatial and energy distributions in shields was advanced by Shure [7] in one-dimensional  $P_3$  calculations. Progress in Monte Carlo methods advanced in pace with discrete-ordinates methods, and the multigroup Monte Carlo code for neutron and gamma-ray transport, MORSE,

was introduced at the end of the decade. The continuous energy Monte Carlo code, now known as MCNP, also began in this decade at Los Alamos National Laboratory. A general-purpose particle-transport code MCS was written in 1963 to be followed by the MCN code for three-dimensional calculations written in 1965.

### The Decade of the 1970s

The Nuclear Non-Proliferation Treaty (NPT) of 1968 and the National Environmental Policy Act (NEPA) of 1969 had major impacts on the radiation shielding field in the 1970s and succeeding decades. The NPT precluded nuclear fuel reprocessing and led to ever-increasing needs for on-site storage of spent fuel at nuclear power plants. NEPA required exhaustive studies of off-site radiation doses around nuclear power plants and environmental impacts of plant operations. Early in the 1970s, there were major disruptions in oil supplies caused by the OPEC embargo. The response in the USA was an energy policy that forbade electricity production using oil or natural gas. The result was placement of many orders for nuclear power plants despite NPT and NEPA constraints. In the field of radiation shielding, special attention was given to plant design issues such as streaming of neutrons and gamma rays through voids, passageways, and shield penetrations, and to operational issues such as fission-product inventories in fuels and gamma-ray skyshine, particularly associated with  $^{16}\text{N}$  sources.

Information essential for plant design, fuel management, and waste management is data tracking radionuclide activities in reactor fuel and process streams, and corresponding strengths and energy spectra of sources, including fission products, activation products, and actinides. To accomplish this, the ORIGEN codes were developed at Oak Ridge National Laboratory and the CINDER code was developed at Los Alamos National Laboratory. Assessment of radiation doses from airborne beta-particle emitters was also studied for the first time. Although the ETRAN Monte Carlo code for electron transport was available at the National Bureau of Standards,

work began in the mid-1970s at Sandia Laboratory on the TIGER code and at Stanford Linear Accelerator Center on the EGS code, both for coupled photon and electron transport by the Monte Carlo method.

Design needs brought new attention to buildup factors and to attenuation of broad beams of neutrons and gamma rays. Definitive compilations were made of buildup factors and also the attenuation and reflection by shields obliquely illuminated by photons. Detailed results were also obtained for transmission of neutrons and secondary gamma rays through shielding barriers. This decade also saw the publication of two important NCRP reports [8, 9] dealing with neutron shielding and dosimetry and with design of medical facilities that protected against effects of gamma rays and high-energy x-rays.

Design and analysis needs also fostered continuing attention to computer codes for criticality and neutron-transport calculations. A series of more robust discrete-ordinates transport codes were developed. Advances in Monte Carlo calculations were also made. The MCN code was merged with the MCG code in 1973 to form the MCNG code for treating coupled neutron-photon transport. Another merger took place with the MCP code in 1977, allowing detailed treatment of photon transport at energies as low as 1 keV. This new code was known, then and now, as MCNP.

## The 1980s and 1990s

These years saw the consolidation of resources for design and analysis work. In the 1980s, personal computers allowed methods such as point-kernel calculations to be programmed. In the 1990s, personal computers took over from the mainframe computers in even the most demanding shielding design and analysis. Comprehensive sets of fluence-to-dose conversion factors became available for widespread use. Radionuclide decay data became available in databases easily used for characterizing sources. Gamma-ray buildup factors were computed with precision and a superb method of data fitting was devised. All these

carried point-kernel as well as more advanced shielding methodology to a new plateau.

*Databases.* Kocher [10] published radioisotope decay data for shielding design and analysis that largely supplanted earlier compilations. Then a new MIRD compendium [11] and ICRP-38 database became the norms, with the latter especially useful for characterizing low-energy x-ray and Auger electron emission. Today a wealth of nuclear structure and decay data is available on the web from the National Nuclear Data Center at Brookhaven National Laboratory (<http://www.nndc.bnl.gov/index.jsp>).

*Advances in buildup factors.* Refinements in the computation of buildup factors continued to be made over the years. Computer codes now could account for not only Compton scattering and photoelectric absorption, but also positron creation and annihilation, fluorescence, and bremsstrahlung. Calculation of buildup factors incorporating all these sources of secondary photon radiation was made leading to a comprehensive set of precise buildup factors standardized for use in design and analysis [12]. Also a new five-parameter buildup-factor formulation, called the *geometric progression* formula, was introduced. Although difficult to use for hand calculations, it is an extraordinarily precise formula and is today used in most modern point-kernel codes. Both the calculated buildup factors and the coefficients for the geometric progression buildup factors are tabulated in the design standard [12].

*Cross sections and dose conversion factors.* Authoritative cross-section data are now available in the ENDF/B (evaluated nuclear data file) (<http://www.nndc.bnl.gov/exfor/endf00.htm>) database containing evaluated cross sections, spectra, angular distributions, fission product yields, photoatomic and thermal scattering law data, with emphasis on neutron-induced reactions. The National Institute of Science and Technology (NIST) has long been the repository for gamma-ray interaction coefficients. The Institute also sponsors the XCOM cross-section code, which may be executed on the NIST Internet site (<http://physics.nist.gov/PhysRefData/Xcom/Text/XCOM.html>) or downloaded for personal use.

Gamma-ray fluence-to-dose conversion factors for local values of exposure or kerma may be computed directly from readily available energy transfer or energy absorption coefficients for air, tissue, etc. Neutron conversion factors for local values of tissue kerma were computed by Caswell et al. [13]. As the second century of radiation protection begins, there are two classes of fluence-to-dose conversion factors in use for neutrons and gamma rays. One very conservative class is to be used for operational purposes at doses well below regulatory limits. This class is based on doses at fixed depths in 30-cm diameter spherical phantoms irradiated in various ways. The other class is to be used for dose assessment purposes, and not for personnel dosimetry. This class is based on the anthropomorphic human phantom and weight factors for effective dose equivalent [14] or effective dose [15].

*Computer applications.* The 1980s and 1990s were decades of revolution for the computational aspects of radiation shield design and analysis. The advent of inexpensive personal computers with rapidly increasing speeds and memory freed the shielding analyst from dependence on a few supercomputers at national laboratories. Many shielding codes that could previously run only on large mainframe computers were reworked to run on small personal computers, thereby, allowing any shielding analysts to perform detailed calculations that only a privileged few were able to do previously.

At the same time, many improvements were made to the transport codes and their algorithms. MCNP has gone through a series of improvements adding new capabilities and improvements, such as new variance reduction methods, tallies, and physics models. It has also spun off a second version MCNPX with a capability of treating 34 types of particles with energies up to 150 MeV. Also in these decades many other Monte Carlo transport codes were developed by researchers in many nations. Each version has unique features and capabilities. General-purpose discrete-ordinates codes were also extensively improved with many novel acceleration schemes introduced to improve their speeds. An excellent review of many such improvements is given by Adams and Larsen [16].

## Practice of Radiation Shielding

Shielding design and shielding analysis are complementary activities. In design, the source and maximum target dose are specified, and the task is to determine the type and amount of the shielding required to reduce the target dose to that specified. In analysis, the source and shielding are identified and the task is to determine the dose at some point (s) of interest. Whether one is engaged in a hand calculation or in a most elaborate Monte Carlo simulation, one is faced with the tasks of (1) characterizing the source, (2) characterizing the nature and attenuating properties of the shielding materials, (3) evaluating at a target location the radiation intensity and perhaps its angular and energy distributions, and (4) converting the intensity to a dose or response meaningful in terms of radiation effects.

### Source Characterization

Source geometry, energy, and angular distribution are required characteristics. Radionuclide sources, with isotropic emission and unique energies of gamma and x-rays are relatively easy to characterize. Activity and source strength must be carefully distinguished, as not every decay results in emission of a particular gamma or x-ray. Careful consideration must be given to a low-energy limit below which source particles may be ignored, else computation resources may be wasted. Similarly, when photons of many energies are emitted, as in the case of fission-product sources, one is compelled to use a group structure in source characterization, and much care is needed in establishing efficient and appropriate group energy limits and group average energies. When the source energies are continuously distributed, as is the case with fission neutrons and gamma rays, one option is to use a multigroup approach, as might be used in point-kernel calculations. Another option, useful in Monte Carlo simulations, is to sample source energies from a mathematical representation of the energy spectrum.

A point source is very often an appropriate approximation of a physical source of small size. It is also appropriate to represent a line, plane, or volume source as a collection of point sources, as is done in the point-kernel method of shielding

analysis. Radionuclide and fission sources are isotropic in angular distribution; however, there are cases for which it is efficient to identify a surface and to characterize the surface as a secondary source surface. Such surface sources are very often non-isotropic in angular distribution. For example, consider the radiation emitted into the atmosphere from a large body of water containing a distributed radiation source. The interface may be treated approximately, but very effectively, as a plane source emitting radiation not isotropically, but with an intensity varying with the angle of emission from the surface.

### Attenuating Properties

The total microscopic cross section for an element or nuclide,  $\sigma(E)$ , multiplied by the atomic density, is the linear interaction coefficient  $\mu(E)$ , also called the macroscopic cross section, the probability per unit (differential) path length that a particle of energy  $E$  interacts with the medium in some way. Its reciprocal, called the *mean free path*, is the average distance traveled before interaction. Usually, the ratio  $\mu/\rho$ , called the mass interaction coefficient, is tabulated because it is independent of density. Various subscripts may be used to designate particular types of interactions, for example,  $\sigma_a(E)$  for absorption or  $\sigma_f(E)$  for fission. Likewise, additional independent variables may be introduced, with, for example,  $\sigma_s(E, E')dE'$  representing the cross section for scattering from energy  $E$  to an energy between  $E'$  and  $E' + dE'$ . Information resources for attenuating properties are described in this entry's historical review, as are resources for radionuclide decay data.

### Intensity Characterization

The intensity of a neutron or photon field is usually described in terms of radiation crossing the surface of a small spherical volume  $V$ . The *fluence*  $\Phi$  is defined, in the limit  $V \rightarrow 0$ , as the expected or average sum of the path lengths in  $V$  traveled by entering particles divided by the volume  $V$ . Equivalently,  $\Phi$  is, again in the limit  $V \rightarrow 0$ , the expected number of particles crossing the surface of  $V$  divided by the cross-sectional area of the volume. The time derivative of the fluence is the

fluence rate or *flux density*  $\dot{\Phi}$ . Note that the fluence, though having units of reciprocal area, has no reference area or orientation. Note too that the fluence and flux are point functions. The fluence, a function of position, may also be a distribution function for particle energies and directions. For example,  $\Phi(r, E, \Omega)dEd\Omega$  is the fluence at  $\mathbf{r}$  of particles with energies in  $dE$  about  $E$  and with directions in solid angle  $d\Omega$  about the direction  $\Omega$ . When a particular surface, with outward normal  $\mathbf{n}$ , is used as a reference, it is useful to define radiation intensity in terms of the flow  $J_n(\mathbf{r}, E, \Omega)dEd\Omega \equiv \mathbf{n}\Omega\Phi(\mathbf{r}, E, \Omega)dEd\Omega$  across the reference surface.

### Fluence-to-Dose Conversion Factors

Whether the shield designer uses the simplest of the point-kernel methods or the most comprehensive of the Monte Carlo or discrete-ordinates methods, fluence-to-dose conversion factors generally have to be used. The radiation attenuation calculation deals with the particle fluence, the direct measure of radiation intensity. To convert that intensity into a measure of radiation damage or heating of a material, to a field measurement such as *exposure*, or to a measure of health risk, conversion factors must be applied.

The shielding analysis ordinarily yields the energy spectrum  $\Phi(\mathbf{r}, E)$  of the photon or neutron fluence at a point identified by the vector  $\mathbf{r}$ . Use of a Monte Carlo code normally yields the energy spectrum as a function of energy, whence the dose or, more generally, response  $R(\mathbf{r})$  is given by the convolution of the fluence with the fluence-to-dose factor, here called the response function  $\mathcal{R}(E)$ , so that

$$R(\mathbf{r}) = \int_E dE \mathcal{R}(\mathbf{r}, E) \Phi(\mathbf{r}, E). \quad (1)$$

Point-kernel, or other energy-multigroup methods yield the energy spectrum at discrete energies, or in energy groups, and the dose convolution is a summation rather than an integration.

While the fluence is most always computed as a point function of position, the response of interest may be a dose at a point (called a *local dose*) or

it may be a much more complicated function such as the average radiation dose in a physical volume such as an anthropomorphic phantom. Local and phantom-related doses are briefly discussed later.

Suppose the local dose of interest is the kerma, defined as the expected sum of the initial kinetic energies of all charged particles produced by the radiation field in a mass  $m$ , in the limit as  $m \rightarrow 0$ . Then the response function is given by

$$\mathcal{R}_K(E) = \kappa \sum_i \frac{N_i}{\rho} \sum_j \sigma_{ji}(E) \varepsilon_{ji}(E). \quad (2)$$

in which  $\rho$  is the mass density,  $N_i$  is the atoms of species  $i$  per unit volume (proportional to  $\rho$ ),  $\sigma_{ji}(E)$  is the cross section for the  $j$ th interaction with species  $i$ , and  $\varepsilon_{ji}(E)$  is the average energy transferred to secondary charged particles in the  $j$ th interaction with species  $i$ . A units conversion factor  $\kappa$  is needed to convert from, say, units of MeV cm<sup>2</sup>/g to units of rad cm<sup>2</sup> or Gy cm<sup>2</sup>. For neutrons, a quality factor multiplier  $Q(E)$  is needed to convert to units of *dose equivalent* (rem or Sv). For photons, Eq. 2 reduces to

$$\begin{aligned} \mathcal{R}_K(E) \text{ (Gy cm}^2\text{)} &= 1.602 \\ &\times 10^{-10} E [\mu_{tr}(E)/\rho], \end{aligned} \quad (3)$$

where  $E$  is in MeV and  $\mu_{tr}/\rho$  is the mass energy transfer coefficient in units of cm<sup>2</sup>/g for the material to which energy is transferred.

More related to radiation damage is the local *absorbed dose*, defined as the expected energy imparted, through ionization, excitation, chemical changes, and heat, to a mass  $m$ , in the limit as  $m \rightarrow 0$ . Under conditions of *charged-particle equilibrium*, the neutron or gamma-ray kerma equals the absorbed dose, less the energy radiated away as bremsstrahlung. Such equilibrium is approached in a region of homogeneity in composition and uniformity in neutron or photon intensity. Then the absorbed dose is given by Eq. 3 with  $\mu_{tr}$  replaced by the energy absorption coefficient  $\mu_{en}$  to account for any bremsstrahlung losses.

The second type of response function or dose is that related to the local dose within a simple geometric phantom or some sort of average dose within an

anthropomorphic phantom. The phantom dose, in fact, is a point function and serves as a standardized reference dose for instrument calibration and radiation protection purposes. Even though the radiation fluence, itself a point function, may have strong spatial and angular variation as well as energy variation, it is still possible to associate with the radiation fluence a phantom-related dose. The procedure is as follows. The fluence is treated, for example, as a very broad parallel beam of the same intensity as the actual radiation field, incident in some fixed way on the phantom. This is the so-called expanded and aligned field. For a geometric phantom, the dose is computed at a fixed depth. For an anthropomorphic phantom, the dose is computed as an average of doses to particular tissues and organs, weighted by the susceptibility of the tissues and organs to radiation carcinogenesis or hereditary illness. Many phantoms have been used with various directions of incident radiation. The calculated response functions are then tabulated as a function of the radiation energy. Additional details of phantom doses and their tabulations are given by Shultis and Faw [17].

## Basic Analysis Methods

To say modern shielding practice has been reduced to running large “black-box” codes is very misleading. Randomly varying model parameters, such as shield dimensions, placement, and material, is a very inefficient way to optimize shielding for a given situation. Using the concepts and ideas behind the earlier simplified methods often allows a shield analyst to select materials and geometry for a preliminary design before using large transport codes to refine the design. In this section, fundamental methods for estimating neutron or photon doses are reviewed. Such indirectly ionizing radiation is characterized by straight-line trajectories punctuated by “point” interactions. The basic concepts presented here apply equally to all particles of such radiation.

It should be noted that throughout this entry, calculated doses are the *expected* or *average* value of the stochastic measured doses, that is, the mechanistically calculated dose represents the statistical average of a large number of dose

measurements which exhibit random fluctuations as a consequence of the stochastic nature of the source emission and interactions in the detector and surrounding material.

### Uncollided Radiation Doses

In many situations, the dose at some point of interest is dominated by particles streaming directly from the source without interacting in the surrounding medium. For example, if only air separates a gamma-ray or neutron source from a detector, interactions in the intervening air or in nearby solid objects, such as the ground or building walls, are often negligible, and the radiation field at the detector is due almost entirely to uncollided radiation coming directly from the source.

In an attenuating medium, the uncollided dose at a distance  $r$  from a point isotropic source emitting  $S_p$  particles of energy  $E$  is

$$D^o(r) = \frac{S_p \mathcal{R}}{4\pi r^2} e^{-l}, \quad (4)$$

where  $l$  is the total number of mean-free-path lengths of material a particle must traverse before

reaching the detector, namely,  $\int_0^r ds\mu(s)$ . Here  $\mathcal{R}$  is

the appropriate response function. The  $1/(4\pi r^2)$  term in Eq. 4 is often referred to as the *geometric* attenuation and the  $e^{-l}$  term the *material* attenuation. Equation 4 can be extended easily to a source emitting particles with different discrete energies or a continuous spectrum of energies.

### Point Kernel for Uncollided Dose

Consider an isotropic point source placed at  $\mathbf{r}_s$  and an isotropic point detector (or *target*) placed at  $\mathbf{r}_t$  in a homogeneous medium. The detector response depends not on  $\mathbf{r}_s$  and  $\mathbf{r}_t$  separately, but only on the distance  $|\mathbf{r}_s - \mathbf{r}_t|$  between the source and detector. For a unit strength source, the detector response is (cf. Eq. 4)

$$\mathcal{G}^o(\mathbf{r}_s, \mathbf{r}_t, E) = \frac{\mathcal{R}(E)}{4\pi |\mathbf{r}_s - \mathbf{r}_t|} |^2 e^{-\mu(E)|\mathbf{r}_s - \mathbf{r}_t|}. \quad (5)$$


Here  $\mathcal{G}^o(\mathbf{r}_s, \mathbf{r}_t, E)$  is the *uncollided dose point kernel* and equals the dose at  $\mathbf{r}_t$  per particle of energy  $E$  emitted isotropically at  $\mathbf{r}_s$ . This result holds for any geometry or medium provided that the material through which a ray from  $\mathbf{r}_s$  to  $\mathbf{r}_t$  passes has a constant interaction coefficient  $\mu$ .

With this point kernel, the uncollided dose due to an arbitrarily distributed source can be found by first decomposing (conceptually) the source into a set of contiguous effective point sources and then summing (integrating) the dose produced by each point source.

### Applications to Selected Geometries

The results for the uncollided dose from a point source can be used to derive expressions for the uncollided dose arising from a wide variety of distributed sources such as line sources, area sources, and volumetric sources [4, 5, 18, 19]. An example to illustrate the method is as follows:

An isotropic disk source of radius  $a$  emitting isotropically  $S_a$  particles per unit area at energy  $E$  is depicted in Fig. 1. A detector is positioned at point  $P$  a distance  $h$  above the center of the disk. Suppose the only material separating the disk

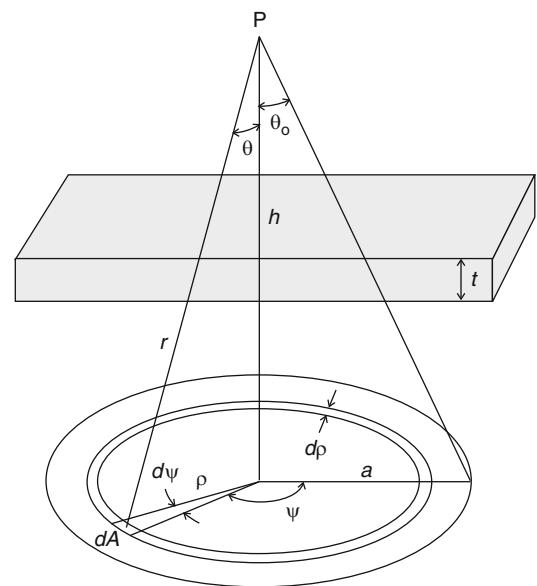

**Radiation Shielding, Fig. 1** An isotropic disk source is shielded by a parallel slab shield of thickness  $t$

source and the receptor at  $P$  is a slab of thickness  $t$  with a total attenuation coefficient  $\mu$ .

Consider a differential area  $dA$  between distance  $\rho$  and  $\rho + d\rho$  from the disk center and between  $\psi$  and  $\psi + d\psi$ . The source within  $dA$  may be treated as an effective point isotropic source emitting  $S_a dA = S_a \rho d\rho d\psi$  particles which produces an uncollided dose at  $P$  of  $dD^o$ . The ray from the source in  $dA$  must pass through a slant distance of the shield  $t \sec \theta$  so that the dose at  $P$  from particles emitted in  $d\rho$  about  $\rho$  is

$$dD^o(P) = \frac{\mathcal{R} S_a \rho d\rho d\psi}{4\pi r^2} \exp[-\mu t \sec \theta], \quad (6)$$

where  $\mathcal{R}$  and  $\mu$  generally depend on the particle energy  $E$ . To obtain the total dose at  $P$  from all differential areas of the disk source, one then must sum, or rather integrate,  $dD^o$  over all differential areas. Thus, the total uncollided dose at  $P$  is

$$D^o(P) = \frac{S_a \mathcal{R}}{4\pi} \int_0^{2\pi} d\psi \int_0^a d\rho \frac{\rho \exp[-\mu t \sec \theta]}{r^2}. \quad (7)$$

Because  $h$  is fixed,  $\rho d\rho = rdr$ , and from Fig. 1 it is seen that  $r = h \sec \theta$ . Integration over  $\psi$  and changing variables yields

$$D^o(P) = \frac{S_a \mathcal{R}}{2} \int_h^{h \sec \theta_o} dr r^{-1} e^{-\mu rt/h} \quad (8)$$

$$= \frac{S_a \mathcal{R}}{2} \int_{\mu t}^{\mu t \sec \theta_o} dx x^{-1} e^{-x} \quad (9)$$

$$= \frac{S_a \mathcal{R}}{2} [E_1(\mu t) - E_1(\mu t \sec \theta_o)], \quad (10)$$

where the *exponential integral function*  $E_n$  is defined as  $E_n(x) \equiv x^{n-1} \int_x^\infty du u^{-n} e^{-u}$  and is tabulated in many compilations [4, 5, 17].

## Intermediate Methods for Photon Shielding

In this section, several special techniques are summarized for the design and analysis of shielding for gamma and x-rays with energies from about 1 keV to about 20 MeV. These techniques are founded on very precise radiation transport calculations for a wide range of carefully prescribed situations. These techniques, which rely on buildup factors, attenuation factors, albedos or reflection factors, and line-beam response functions, then allow estimation of photon doses for many frequently encountered shielding situations without the need of transport calculations.

### Buildup-Factor Concept

The total photon fluence  $\Phi(\mathbf{r}, E)$  at some point of interest  $\mathbf{r}$  is the sum of two components: the *uncollided* fluence  $\Phi^o(\mathbf{r}, E)$  of photons that have streamed to  $\mathbf{r}$  directly from the source without interaction, and the fluence of *scattered* and *secondary* photons  $\Phi^s(\mathbf{r}, E)$  consisting of source photons scattered one or more times, as well as secondary photons such as x-rays and annihilation gamma rays.

The buildup factor  $B(\mathbf{r})$  is defined as

$$B(\mathbf{r}) \equiv \frac{D(\mathbf{r})}{D^o(\mathbf{r})} = 1 + \frac{D^s(\mathbf{r})}{D^o(\mathbf{r})}, \quad (11)$$

where  $D(\mathbf{r})$  is the total dose equal to the sum of the uncollided dose  $D^o(\mathbf{r})$  and the scattered or secondary photon dose  $D^s(\mathbf{r})$ . For a monoenergetic source this reduces to

$$\begin{aligned} B(E_o, \mathbf{r}) &= 1 \\ &+ \frac{1}{\Phi^o(\mathbf{r})} \int_0^{E_o} dE \frac{\mathcal{R}(E)}{\mathcal{R}(E_o)} \Phi^s(\mathbf{r}, E). \end{aligned} \quad (12)$$

In this case, the nature of the dose or response is fully accounted for in the ratio  $\mathcal{R}(E)/\mathcal{R}(E_o)$ . By far the largest body of buildup-factor data is for point, isotropic, and monoenergetic sources of photons in infinite homogeneous media. Calculation of

buildup factors for high-energy photons requires consideration of the paths traveled by positrons from their creation until their annihilation. Such calculations have been performed by Hirayama [20] and by Faw and Shultis [21] for photon energies as great as 100 MeV. Because incoherent scattering was neglected in many buildup-factor calculations, coherent scattering should also be neglected in calculating the uncollided dose, a significant consideration only for low-energy photons at deep penetration.

#### Buildup-Factor Geometry


Generally, buildup factors depend on the source and shield geometries. For a given material thickness between source and detector, buildup factors are slightly different for point isotropic sources in (a) an infinite medium, (b) at the surface of a bare sphere, and for a slab shield between source and detector. However, the use of buildup factors for a point isotropic source is almost always conservative, that is, the estimated dose is greater than that for a finite shield [17]. Adjustment factors for buildup factors at the surface of a finite medium in terms of the infinite-medium buildup factors is illustrated in Fig. 2.

Buildup factors are also available for plane isotopic (PLI) and plane monodirectional (PLM) gamma-ray sources in infinite media. Indeed,

Fano et al. [22], Goldstein [23], and Spencer [24], in their moments-method calculations, obtained buildup factors for plane sources first and, from these, buildup factors for point sources were derived. Buildup factors at depth in a half-space shield are also available for the PLM source, that is, normally incident photons [20, 25, 26]. The use of buildup factors for a point isotropic source in an infinite medium is conservative, that is, overpredictive, for the PLI and PLM geometries.

#### Buildup Factors for Stratified Shields

Sometimes shields are stratified, that is, composed of layers of different materials. The use of the buildup-factor concept for such heterogeneous shields is, for the most part, of dubious merit. Nevertheless, implementation of point-kernel codes for shielding design and analysis demands some way of treating buildup when the ray from source point to dose point is through more than one shielding material. However, certain regularities do exist, which permit approximate use of homogeneous-medium buildup factors for stratified shields. Many approximate buildup methods have been suggested, as described by Shultis and Faw [17]; however, they are of little use in most point-kernel codes and are not needed at all for shielding analysis based on transport methods.

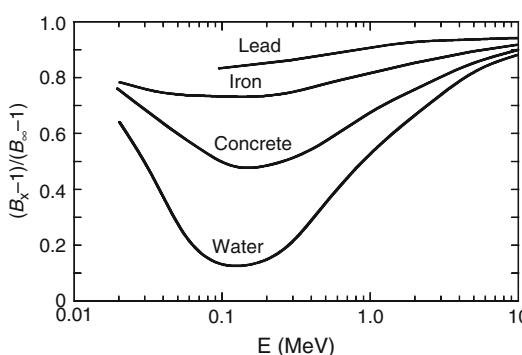

**Radiation Shielding, Fig. 2** Adjustment factor for the buildup factor  $B_x$  at the boundary of a finite medium in terms of the infinite-medium buildup factor  $B_\infty$  for the same depth of penetration (EGS4 calculations courtesy of Sherrill Shue, Nuclear Engineering Department, Kansas State University)

#### Point-Kernel Computer Codes

There are many codes in wide use that are based on the point-kernel technique. In these codes, a distributed source is decomposed into small but finite elements and the dose at some receptor point from each element is computed using the uncollided dose kernel and a buildup factor based on the optical thickness of material between the source element and the receptor. The results for all the source elements are then added together to obtain the total dose. Some that have been widely used are MicroShield [27], the QAD series [28], QADMOD-GP [29], QAD-CGGP [30], and  $G^3$  [31].

#### Broad-Beam Attenuation

Often a point radionuclide or x-ray source in air is located sufficiently far from a wall or shielding

slab that the radiation reaches the wall in nearly parallel rays. Further, the attenuation in the air is usually quite negligible in comparison to that provided by the shielding wall. Shielding design and analysis for such broad-beam illumination of a slab shield are addressed by NCRP Report 49 [9], Archer [32], and Simpkin [33]. The dose at the surface of the cold side of the wall can be computed as

$$D = D^o A_f. \quad (13)$$

For a radionuclide source of activity  $A$ , the dose  $D^o$  without the wall can be expressed in terms of the source energy spectrum, response functions, and distance  $r$  from the source to the cold side of the wall. Then,

$$D = D^o A_f = \frac{A}{r^2} \Gamma A_f, \quad (14)$$

where  $\Gamma$ , called the *specific gamma-ray constant*, is the dose rate in vacuum at a unit distance from a source with unit activity, and  $A_f$  is an *attenuation factor* which depends on the nature and thickness of the shielding material, the source energy characteristics, and the angle of incidence  $\theta$  (with respect to the wall normal). Values for  $\Gamma$  and  $A_f$  are provided by NCRP [9].

### Oblique Incidence

Attenuation factors for obliquely incident beams are presented in NCRP Report 49 [9]. For such cases, special three-argument slant-incidence buildup factors should be used [17]. For a shield wall of thickness  $t$  mean free paths, slant incidence at angle  $\theta$  with respect to the normal to the wall, and source energy  $E_o$ , the attenuation factor is in function form  $A_f(E_o, t, \theta)$ . However, a common, but erroneous, practice has been to use a two-argument attenuation factor based on an infinite-medium buildup factor for slant penetration distance  $t \sec \theta$ , in the form  $A_f(E_o, t \sec \theta)$ . This practice can lead to severe underprediction of transmitted radiation doses.

### X-ray Beam Attenuation

For x-ray sources, the appropriate measure of source strength is the electron-beam current  $i$ , and the appropriate characterization of photon energies, in principle, involves the peak accelerating voltage (kVp), the wave form, and the degree of filtration (e.g., beam half-value thickness). If  $i$  is the beam current (mA) and  $r$  is the source-detector distance ( $m$ ), the dose behind a broadly illuminated shield wall is

$$D(P) = \frac{i}{r^2} K_o A_f, \quad (15)$$

in which  $K_o$ , called the *radiation output (factor)*, is the dose rate in vacuum (or air) per unit beam current at unit distance from the source in the absence of the shield. Empirical formulas for computing  $A_f$  are available for shield design [34, 35].

### Intermediate Methods for Neutron Shielding

Shielding design for fast neutrons is generally far more complex than shielding design for photons. Not only does one have to protect against the neutrons emitted by some source, one also needs to protect against primary gamma rays emitted by most neutron sources as well as secondary photons produced by inelastic neutron scattering and from radiative capture. There may also be secondary neutrons produced from  $(n, 2n)$  and fission reactions. In many instances, secondary photons produce greater radiological risks than do the primary neutrons. Fast-neutron sources include spontaneous and induced fission, fusion,  $(\alpha, n)$  reactions,  $(\gamma, n)$  reactions, and spallation reactions in accelerators, each producing neutrons with a different distribution of energies.

Unlike photon cross sections, neutron cross sections usually vary greatly with neutron energy and among the different isotopes of the same element. Comprehensive cross-section databases are needed. Also, because of the erratic variation of the cross sections with energy, it is difficult to calculate uncollided doses needed in order to use

the buildup-factor approach. Moreover, buildup factors are very geometry dependent and sensitive to the energy spectrum of the neutron fluence and, consequently, point-kernel methods can be applied to neutron shielding only in very limited circumstances.

Early work led to kernels for fission sources in aqueous systems and the use of removal cross sections to account for shielding barriers. Over the years, the methodology was stretched to apply to nonaqueous hydrogenous media, then to non-hydrogenous media, then to fast-neutron sources other than fission. Elements of diffusion and age theory were melded with the point kernels. Today, with the availability of massive computer resources, neutron shielding design and analysis is largely done using transport methods. Nevertheless, the earlier methodologies offer insight and allow more critical interpretation of transport calculations.

Also, unlike ratios of different photon response functions, those for neutrons vary, often strongly, with neutron energy. Hence, neutrons doses cannot be converted to different dose units by simply multiplying by an appropriate constant. The energy spectrum of the neutron fluence is needed to obtain doses in different units. Consequently, many old measurements or calculations of point kernels, albedo functions, transmission factors, etc., made with obsolete dose units cannot be converted to modern units because the energy spectrum is unknown. In this case, there is no recourse but to repeat the measurements or calculations.

### Capture Gamma Photons

A significant, often dominant, component of the total dose at the surface of a shield accrues from capture gamma photons produced deep within the shield and arising from neutron absorption. Of lesser significance are secondary photons produced in the inelastic scattering of fast neutrons. Secondary neutrons are also produced as a result of  $(\gamma, n)$  reactions. Thus, in transport methods, gamma-ray and neutron transport are almost always coupled.

Historically, capture gamma-ray analysis was appended to neutron removal calculations. Most neutrons are absorbed only when they reach thermal energies, and, consequently, only the absorption of thermal neutrons was considered. (Exceptional cases include the strong absorption of epithermal neutrons in fast reactor cores or in thick slabs of low-moderating, high-absorbing material.) For this reason, it is important to calculate accurately the thermal neutron fluence  $\Phi_{th}(\mathbf{r})$  in the shield. The volumetric source strength of capture photons per unit energy about  $E$  is then given by

$$S_\gamma(\mathbf{r}, E) = \Phi_{th}(\mathbf{r})\mu_\gamma(\mathbf{r})f(\mathbf{r}, E), \quad (16)$$

where  $\mu_\gamma(\mathbf{r})$  is the absorption coefficient at  $\mathbf{r}$  for thermal neutrons and  $f(\mathbf{r}, E)$  is the number of photons produced in unit energy about  $E$  per thermal neutron absorption at  $\mathbf{r}$ .

Once the capture gamma-ray source term  $S_\gamma(\mathbf{r}, E)$  is known throughout the shield, point-kernel techniques using exponential attenuation and buildup factors can be used to calculate the capture gamma-ray dose at the shield surface.

### Neutron Shielding with Concrete

Concrete is probably the most widely used shielding material because of its relatively low cost and the ease with which it can be cast into large and variously shaped shields. However, unlike that for photon attenuation in concrete, the concrete composition, especially the water content, has a strong influence on its neutron attenuation properties. Other important factors that influence the effectiveness of concrete as a neutron shield include type of aggregate, the dose-response function, and the angle of incidence of the neutrons.

Because concrete is so widely used as a shield material, its effectiveness for a monoenergetic, broad, parallel beam of incident neutrons has been extensively studied, both for normal and slant incidence, and many tabulated results for shields of various thickness are available [36–40]. These results, incorporated into design and manufacturing standards (standards are

available from professional societies such as the American Nuclear Society and the American Society of Mechanical Engineers) are extremely useful in the preliminary design of concrete shields.

## Gamma-Ray and Neutron Reflection

Until now only shielding situations have been considered in which the radiation reaching a target contains an uncollided component. For these situations, point-kernel approximations, in principle, may be used and concepts such as particle buildup may be applied. However, in many problems encountered in shielding design and analysis, only scattered radiation may reach the target. Radiation doses due to reflection from a surface are examples that arise in treatment of streaming of radiation through multi-legged ducts and passageways. Treatment of radiation reflection from surfaces of structures is also a necessary adjunct to precise calibration of nuclear instrumentation. Skyshine, that is, reflection in the atmosphere of radiation from fixed sources to distant points is another example of this class of reflected-radiation problems. All such reflection problems are impossible to treat using elementary point-kernel

methods and are also very difficult and inefficient to treat using transport-based methods. For reflection from a surface of radiation from a point source to a point receiver, the *albedo function* has come to be very useful in design and analysis. The same can be said for use of the *line-beam response function* in treatment of skyshine. Both are discussed below.


### Albedo Methods

There are frequent instances for which the dose at some location from radiation reflected from walls and floors may be comparable to the line-of-sight dose. The term *reflection* in this context does not imply a surface scattering. Rather, gamma rays or neutrons penetrate the surface of a shielding or structural material, scatter within the material, and then emerge from the material with reduced energy and at some location other than the point of entry.

In many such analyses, a simplified method, called the *albedo method*, may be used. The albedo method is based on the following approximations. (1) The displacement between points of entry and emergence may be neglected. (2) The reflecting medium is effectively a half-space, a conservative approximation. (3) Scattering in air between a source and the reflecting surface and between the reflecting surface and the detector may be neglected.

### Radiation Shielding,

**Fig. 3** Angular and energy relationships in the albedo formulation

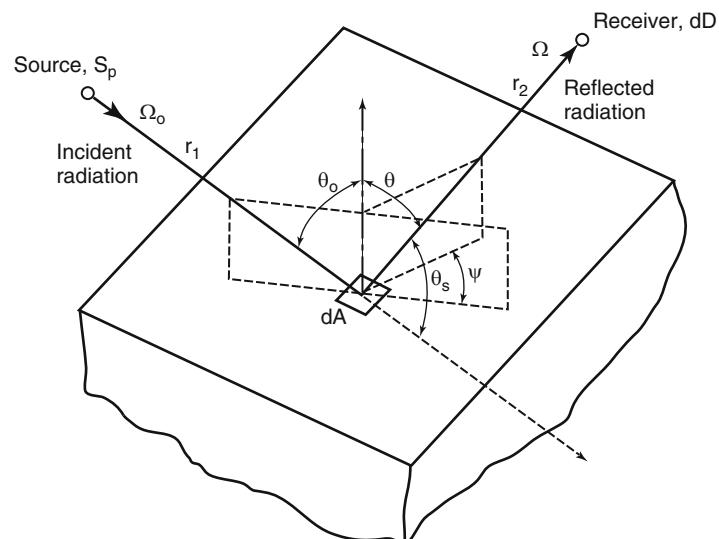

### Application of the Albedo Method

Radiation reflection may be described in terms of the geometry shown in Fig. 3. Suppose that a point isotropic and monoenergetic source is located distance  $r_1$  from area  $dA$  along incident direction  $\Omega_o$  and that a dose point is located distance  $r_2$  from area  $dA$  along emergent direction  $\Omega$ . Suppose also the source has an angular distribution such that  $S(\theta_o)$  is the source intensity per steradian evaluated at the direction from the source to the reflecting area  $dA$ . Then the dose  $dD_r$  at the detector from particles reflected from  $dA$  can be shown to be [17]

$$dD_r = D_o \alpha_D(E_o, \theta_o; \theta, \psi) \frac{dA \cos \theta_o}{r_2^2}, \quad (17)$$


in which  $D_o$  is the dose at  $dA$  due to incident particles. Here  $\alpha_D(E_o, \theta_o; \theta, \psi)$  is the *dose albedo*. Determination of the total reflected dose  $D_r$  requires integration over the area of the reflecting surface. In doing so one must be aware that, as the location on the surface changes, all the variables  $\theta_o$ ,  $\theta$ ,  $\psi$ ,  $r_1$ , and  $r_2$  change as well. Also, it is necessary to know  $\alpha_D(E_o, \theta_o; \theta, \psi)$  or, more usefully, to have some analytical approximation for the dose albedo so that numerical integration over all the surface area can be performed efficiently.

### Gamma-Ray Dose Albedo Approximations

A two-parameter approximation for the photon dose albedo was first devised by Chilton and Huddleston [41] and later extended by Chilton et al. [42]. Chilton [43] later proposed a more accurate seven-parameter albedo formula for concrete. Brockhoff [44] published seven-parameter fit data for albedos from water, concrete, iron, and lead. Two examples of this dose albedo approximation are shown in Fig. 4.

### Neutron Dose Albedo Approximations

The dose albedo concept is very useful for streaming problems that involve “reflection” of neutrons or photons from some material interface. However, unlike photon albedos, the neutron albedos are seldom tabulated or approximated for

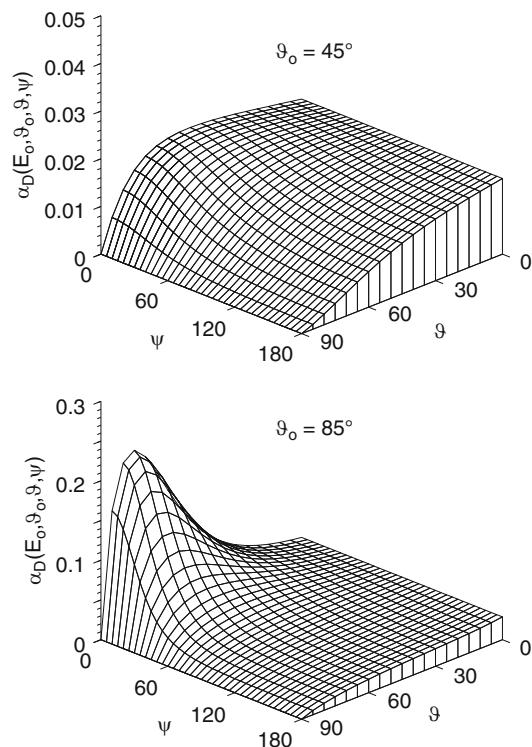

**Radiation Shielding, Fig. 4** Ambient-dose-equivalent albedos for reflection of 1.25-MeV photons from concrete, computed using the seven-term Chilton-Huddleston approximation

monoenergetic incident neutrons because of the rapid variation with energy of neutron cross sections. Rather, albedos for neutrons with a specific range of energies (energy group) are usually considered, thereby, averaging over all the cross-section resonances in the group. Also unlike photon albedos, neutron albedos involve reflected dose from both neutrons and secondary capture gamma rays.

There are many studies of the neutron albedos in the literature. Selph [45] published a detailed review. Extensive compilations of neutron albedo data are available, for example, SAIL [46] and BREESE-II [47]. Of more utility are analytic approximations for the albedo based on measured or calculated albedos. Neutrons albedos are often divided into three types: (1) fast-neutron albedos ( $E \geq 0.2$  MeV), (2) intermediate-energy albedos, and (3) thermal-neutron albedos. Selph [45] reviews early approximations for neutron albedos,

among which is a 24-parameter approximation developed by Maerker and Muckenthaler [48]. Newly computed and more accurate fast-neutron albedos, based on different 24-parameter approximations, have been computed by Brockhoff [44] for several shielding materials.

For neutrons with energy less than about 100 keV, the various dose equivalent response functions are very insensitive to neutron energy. Consequently, the dose albedo  $\alpha_D$  is very closely approximated by the number albedo  $\alpha_N$ . Thus, for reflected dose calculations involving intermediate or thermal neutrons, the number albedo is almost always used. Coleman et al. [49] calculated neutron albedos for intermediate-energy neutrons (200 keV to 0.5 eV) incident monodirectionally on reinforced concrete slabs and developed a nine-parameter formula for the albedo.

Thermal neutrons entering a shield undergo isotropic scattering that, on the average, does not change their energies. For one-speed particles incident in an azimuthally symmetric fashion on a half-space of material that isotropically scatters particles, Chandrasekhar [50] derived an exact expression for the differential albedo. A purely empirical and particularly simple formula, based on Monte Carlo data for thermal neutrons, has been proposed by Wells [51] for ordinary concrete, namely,

$$\alpha_N(\theta_0; \theta, \psi) = 0.21 \cos \theta (\cos \theta_0)^{-1/3}. \quad (18)$$

## Radiation Streaming Through Ducts

Except in the simplest cases, the analysis of radiation streaming requires advanced computational procedures. However, even within the framework of Monte Carlo transport calculations, albedo methods are commonly used, and special data sets have been developed for such use [46, 47, 52].

Elementary methods for gamma-ray streaming are limited to straight cylindrical ducts, with incident radiation symmetric about the duct axis and uniform over the duct entrance. Transmitted radiation generally may be subdivided into three

components: line-of-sight, lip-penetrated, and wall scattered. The first two may be treated using point-kernel methodology. The last requires use of albedo methods to account for scattering over the entire surface area of the duct walls. Selph [45] reviews the methodology of duct transmission calculations and LeDoux and Chilton [53] devised a method of treating two-legged rectangular ducts, important in analysis of structure shielding.

Neutron streaming through gaps and ducts in a shield is much more serious for neutrons than for gamma photons. Neutron albedos, especially for thermal neutrons, are generally much higher than those for photons, and multiple scattering within the duct is very important. Placing bends in a duct, which is very effective for reducing gamma-ray penetration, is far less effective for neutrons. Fast neutrons entering a duct in a concrete shield become thermalized and thereafter are capable of scattering many times, allowing the neutrons to stream through the duct, even those with several bends. Also, unlike gamma-ray streaming, the duct need not be a void (or gas filled) but can be any part of a heterogeneous shield that is “transparent” to neutrons. For example, the steel walls of a water pipe embedded in a concrete shield (such as the cooling pipes that penetrate the biological shield of a nuclear reactor) act as an annular duct for fast neutrons.

There is much literature on experimental and calculational studies of gamma-ray and neutron streaming through ducts. In many of these studies, empirical formulas, obtained by fits to the data, have been proposed. These formulas are often useful for estimating duct-transmitted doses under similar circumstances. As a starting point for finding such information, the interested reader is referred to Rockwell [18], Selph [45], and NCRP [54].

## Gamma-Ray and Neutron Skyshine

For many intense localized sources of radiation, the shielding against radiation that is directed skyward is usually far less than that for the radiation emitted laterally. However, the radiation emitted vertically into the air undergoes scattering

interactions and some radiation is reflected back to the ground, often at distances far from the original source. This atmospherically reflected radiation, referred to as *skyshine*, is of concern both to workers at a facility and to the general population outside the facility site.

As alternatives to rigorous transport-theory treatment of the skyshine problem several approximate procedures have been developed for both gamma-photon and neutron skyshine sources [54]. This section summarizes one approximate method, which has been found useful for bare or shielded skyshine sources. The *integral line-beam skyshine method*, is based on the availability of a *line-beam response function*  $\mathcal{R}(E, \phi, x)$ , which gives the dose (air kerma or ambient dose) at a distance  $x$  from a point source emitting a photon or neutron of energy  $E$  at an angle  $\phi$  from the source-to-detector axis into an infinite air medium. The air-ground interface is neglected in this method. This response function can be fit over a large range of  $x$  to the following three-parameter empirical formula, for a fixed value of  $E$  and  $\phi$  [55]:

$$\mathcal{R}(E, \phi, x) = \frac{\kappa(\rho/\rho_0)^2 E[x(\rho/\rho_0)]^b}{\exp[a - cx(\rho/\rho_0)]}, \quad (19)$$

in which  $\rho$  is the air density in the same units as the reference density  $\rho_0 = 0.0012 \text{ g/cm}^3$ . The constant  $\kappa$  depends on the choice of units.

The parameters  $a$ ,  $b$ , and  $c$  in Eq. 19 depend on the photon or neutron energy and the source emission angle. These parameters have been estimated and tabulated, for fixed values of  $E$  and  $\phi$ , by fitting Eq. 19 to values of the line-beam response function, at different  $x$  distances, usually obtained by Monte Carlo calculations. Gamma-ray response functions have been published by Lampley [56] and Brockhoff et al. [57]. Neutron and secondary gamma-ray response functions have been published by Lampley [56] and Gui et al. [58]. These data and their method of application are presented by Shultis and Faw [17].

To obtain the skyshine dose  $D(d)$  at a distance  $d$  from a bare collimated source, the line-beam response function, weighted by the energy and angular distribution of the source, is integrated

over all source energies and emission directions. Thus, if the collimated source emits  $S(E, \Omega)$  photons, the skyshine dose is

$$D(d) = \int_0^\infty dE \int_{\Omega_s} d\Omega S(E, \Omega) \mathcal{R}(E, \phi, d), \quad (20)$$

where the angular integration is over all emission directions  $\Omega_s$  allowed by the source collimation. Here,  $\phi$  is a function of the emission direction  $\Omega$ . To obtain this result, it has been assumed that the presence of an air-ground interface can be neglected by replacing the ground by an infinite air medium. The effect of the ground interface on the skyshine radiation, except at positions very near a broadly collimated source, has been found to be very small.

The presence of a shield over a skyshine source, for example, a building roof, causes some of the source particles penetrating the shield to be degraded in energy and angularly redirected before being transported through the atmosphere. The effect of an overhead shield on the skyshine dose far from the source can be accurately treated by a two-step hybrid method [59, 60]. First a transport calculation is performed to determine the energy and angular distribution of the radiation penetrating the shield, and then, with this distribution as an effective point, bare, skyshine source, the integral line-beam method is used to evaluate the skyshine dose.

The integral line-beam method for gamma-ray and neutron skyshine calculations has been applied to a variety of source configurations and found to give generally excellent agreement with benchmark calculations and experimental results [59]. It has been used as the basis of the microcomputer code *MicroSkyshine* [61] for gamma rays. A code package for both neutron and gamma-ray calculations is available from the Radiation Safety Computation Information Center. (Code package CCC-646: SKYSHINE-KSU: Code System to Calculate Neutron and Gamma-Ray Skyshine Doses Using the Integral Line-Beam Method, and data library DLC-188: SKYDATA-KSU: Parameters for Approximate Neutron and

Gamma-Ray Skyshine Response Functions and Ground Correction Factors.)

$$q(\mathbf{r}, E, \Omega) \equiv S(\mathbf{r}, E, \Omega) + \int_0^{\infty} dE' \int_{4\pi} d\Omega' \mu_s(\mathbf{r}, E', \Omega' \rightarrow E, \Omega) \phi(\mathbf{r}, E', \Omega'). \quad (23)$$

## Transport Theory

For difficult shielding problems in which simplified techniques such as point kernels with buildup corrections cannot be used, calculations based on transport theory must often be used. There are two basic approaches for transport calculations: *deterministic* transport calculations in which the linear Boltzmann equation is solved numerically, and *Monte Carlo* calculations in which a simulation is made of how particles migrate stochastically through the problem geometry. Both approaches have their advantages and weaknesses. Because of space limitations, it is not possible to give a detailed review of the vast literature supporting both approaches. What follows is a brief explanation of the basic ideas involved and some general references are supplied.

### Deterministic Transport Theory

The neutron or photon flux  $\phi(\mathbf{r}, E, \Omega)$  for particles with energy  $E$  and direction  $\Omega$  is rigorously given by the linear Boltzmann equation or, simply, the transport equation

$$\Omega \nabla \phi(\mathbf{r}, E, \Omega) + \mu(\mathbf{r}, E) \phi(\mathbf{r}, E, \Omega) = S(\mathbf{r}, E, \Omega) + \int_0^{\infty} dE' \int_{4\pi} d\Omega' \mu_s(\mathbf{r}, E', \Omega' \rightarrow E, \Omega) \phi(\mathbf{r}, E', \Omega'), \quad (21)$$

where  $S$  is the volumetric source strength of particles. This equation can be formally integrated to yield the integral form of the transport equation, namely,

$$\phi(\mathbf{r}, E, \Omega) = \phi(\mathbf{r} - R\Omega, E, \Omega) f(R) + \int_0^R dR' q(\mathbf{r} - R'\Omega, \Omega) f(R'), \quad (22)$$

where  $f(x) \equiv \exp \left[ - \int_0^x \mu(\mathbf{r} - R''\Omega, E) dR'' \right]$  and  $q$  is given by

Unfortunately, neither of these formulations of the transport equation can be solved analytically except for idealistic cases, for example, infinite medium with monoenergetic particles or a purely absorbing medium. Numerical solutions must be used for all practical shielding analyses. Many approximations of the transport equation are used, such as diffusion theory, to allow easier calculations. Also the energy region of interest is usually divided into a few or even hundreds of contiguous energy subintervals and average cross sections are calculated for each group using an assumed energy spectrum of the radiation. In this manner, the transport equation is approximated by a set of coupled equations in which energy is no longer an independent variable. Even with an energy-multigroup approximation, numerical solutions are still computationally formidable.

The most widely used deterministic transport approach is the discrete-ordinates method. In this method, a spatial and directional mesh is created for the problem geometry, and the multigroup form of the transport equation is then integrated over each spatial and directional cell. The solution of the approximating algebraic equations is then accomplished by introducing another approximation that relates the cell-centered flux densities to those on the cell boundaries, and an iterative procedure between the source (scattered particles and true source particles) and flux density calculation is then used to calculate the fluxes at the mesh nodes. For details of this method, the reader is referred to Carlson and Lathrop [62], Duderstadt and Martin [63], and Lewis and Miller [64].

Discrete-ordinates calculations can be computationally expensive because of the usually enormous number of mesh nodes and the fact that the convergence of an iterative solution is often very slow. A subject of great interest in the last 30 years has been the development of numerous methods to accelerate convergence of the iterations. Without convergence acceleration schemes, discrete-

ordinate solutions would be computationally impractical for many shielding problems. An excellent description of the various acceleration schemes that have been used is provided by Adams and Larsen [16].

Mature computer codes based on the discrete-ordinates method are widely available to treat one-, two-, and three-dimensional problems in the three basic geometries (rectangular, spherical, and cylindrical) with an arbitrary number of energy groups [65, 66].

Although discrete-ordinates methods are widely used by shielding analysts, these methods do have their limitations. Most restrictive is the requirement that the problem geometry must be one of the three basic geometries (rectangular, spherical, or cylindrical) with boundaries and material interfaces placed perpendicular to a coordinate axis. Problems with irregular boundaries and material distributions are difficult to solve accurately with the discrete-ordinates method. Also, in multidimensional geometries, the discrete-ordinates method often produces spurious oscillations in the flux densities (the *ray effect*) as an inherent consequence of the angular discretization. Finally, the discretization of the spatial and angular variables introduces numerical truncation errors, and it is necessary to use sufficiently fine angular and spatial meshes to obtain flux densities that are independent of the mesh size. For multidimensional situations in which the flux density is very anisotropic in direction and in which the medium is many mean-free-path lengths in size, typical of many shielding problems, the computational effort to obtain an accurate discrete-ordinates solution can become very large. However, unlike Monte Carlo calculations, discrete-ordinates methods can treat very-deep-penetration problems, that is, the calculation of fluxes and doses at distances many mean-free-path lengths from a source.

### Monte Carlo Transport Theory

In Monte Carlo calculations, particle tracks are generated by simulating the stochastic nature of the particle interactions with the medium. One does not even need to invoke the transport

equation; all one needs are complete mathematical expressions of the probability relationships that govern the track length of an individual particle between interaction points, the choice of an interaction type at each such point, the choice of a new energy and a new direction if the interaction is of a scattering type, and the possible production of additional particles. These are all stochastic variables, and in order to make selections of specific values for these variables, one needs a complete understanding of the various processes a particle undergoes in its lifetime from the time it is given birth by the source until it is either absorbed or leaves the system under consideration.

The experience a particle undergoes from the time it leaves its source until it is absorbed or leaves the system is called its *history*. From such histories expected or average values about the radiation field can be estimated. For example, suppose the expected energy  $\langle E \rangle$  absorbed in some small volume  $V$  in the problem geometry is being sought. There is a probability  $f(E)dE$  that a particle deposits energy in  $dE$  about  $E$ . Then the expected energy deposited is simply  $\langle E \rangle = \int Ef(E)dE$ . Unfortunately,  $f(E)$  is not known a priori and must be obtained from a transport calculation. In a Monte Carlo analysis,  $f(E)$  is constructed by *scoring* or tallying the energy deposited  $E_i$  in  $V$  by the  $i$ th particle history. Then in the limit of a large number of histories  $N$

$$\langle E \rangle \equiv \int Ef(E)dE \simeq \bar{E} \equiv \frac{1}{N} \sum_{i=1}^N E_i. \quad (24)$$

The process of using a computer to generate particle histories can be performed in a way completely analogous to the actual physical process of particle transport through a medium. This direct simulation of the physical transport is called an *analog* Monte Carlo procedure. However, if the tally region is far from the source regions, most analog particle histories will make zero contribution to the tally, and thus a huge number of histories must be generated to obtain a statistically meaningful result. To reduce the number of histories, *nonanalog* Monte Carlo procedures can be

used whereby certain biases are introduced in the generation of particle histories to increase the chances that a particle reaches the tally region. For example, source particles could be emitted preferentially toward the tally region instead of with the usual isotropic emission. Of course, when tallying such biased histories, corrections must be made to undo the bias so that a correct score is obtained. Many biasing schemes have been developed, and are generally called *variance reduction* methods since, by allowing more histories to score, the statistical uncertainty or variance in the average score is reduced.

The great advantage of the Monte Carlo approach, unlike discrete-ordinates, is that it can treat complex geometries. However, Monte Carlo calculations can be computationally extremely expensive, especially for deep-penetration problems. The stochastic contribution a single history makes to a particular score requires that a great many histories be simulated to achieve a good estimate of the expected or average score. If a tally region is many mean-free-path lengths from the source, very few histories reach the tally region and contribute to the score. Even with powerful variance reduction techniques, enormous numbers of histories often are required to obtain a meaningful score in deep-penetration problems.

Those readers interested in more comprehensive treatments of the Monte Carlo method will find rich resources. A number of monographs address Monte Carlo applications in radiation transport. Those designed for the specialists in nuclear-reactor computations are Goertzel and Kalos [67], Kalos [68], Kalos et al. [69], and Spanier and Gelbard [70]. More general treatments will be found in the books by Carter and Cashwell [71] Lux and Koblinger [72], and Dunn and Shultz [73]. Coupled photon and electron transport are addressed in the compilation edited by Jenkins et al. [74]. A very great deal of practical information can be gleaned from the manuals for Monte Carlo computer codes. Especially recommended are those for the EGS4 code [75], the TIGER series of codes [76], and the MCNP code [77].

## Future Directions

In many respects, radiation shielding is a mature technological discipline. It is supported by a comprehensive body of literature and a diverse selection of computational resources. Indeed, the present availability of inexpensive computer clusters and the many sophisticated transport codes incorporating the most detailed physics models, modern data, and the ability to model complex geometries has reduced shielding practice in many cases to brute force calculation. Many shielding problems require such a computer approach; however, there are many routine shielding problems that can be effectively treated using the simplified techniques developed in the 1940s–1970s. Point-kernel methods are still widely used today. However, there are shielding problems for which no simplified approach is effective and transport methods must be employed. These include transmission of radiation through ducts and passages in structures, reflection of gamma rays from shielding walls and other structures, and transmission of beams of radiation obliquely incident on shielding slabs.

Despite the relative maturity of the discipline, one must not become complacent. There will continue to be advances in many areas. Undoubtedly, new computational resources will allow much more detailed 3-D graphical modeling of the shielding geometries and their incorporation into the transport codes. Likewise 3-D displays of output will allow much better interpretations of results. New capabilities will be added to Monte Carlo and discrete-ordinates codes. Hybrid codes employing both Monte Carlo and deterministic techniques will also be developed. More nuclear data will become available that will, for example, allow detailed analysis of actinides in spent fuel and correlation effects in nuclear data will allow better sensitivity analyses of results. Likewise, more information on material properties, especially in radiation resistance, will become known. Advances in microdosimetry will provide better understanding of cellular responses to single radiation particles and the effects of low-level radiation doses. A better understanding of radiation hormesis effects may lead to changes in

radiation standards that will better reflect health effects of radiation. New sources of radiation in research and medicine will include energetic protons and neutrons. These developments require continuing attention and adoption into the radiation-shielding discipline.

## Bibliography

### Primary Literature

1. Shultis JK, Faw RE (2005) Radiation shielding technology. *Health Phys* 88:297–322
2. Mutscheller A (1925) Physical standards of protection against Roentgen-ray dangers. *Am J Roentgenol Radiat Ther* 13:65–70
3. National Council on Radiation Protection and Measurements (1941) Safe handling of radioactive luminous compounds. NBS handbook 27. NCRP report 5. US Government Printing Office, Washington, DC
4. Blizard EP, Abbott LS (eds) (1962) Reactor handbook, vol III, Part B, shielding. Wiley, New York
5. Jaeger RH (ed) (1968) Engineering compendium on radiation shielding, vol 1, Shielding fundamentals and methods. Springer, New York
6. Haffner JW (1967) Radiation and shielding in space. Academic, New York
7. Shure K (1964) P-3 multigroup calculations of neutron attenuation. *Nucl Sci Eng* 19:310
8. National Council on Radiation Protection and Measurements (1971) Protection against neutron radiation, NCRP report 38. National Council on Radiation Protection and Measurements, Washington, DC
9. National Council on Radiation Protection and Measurements (1976) Structural shielding design and evaluation for medical use of x-rays and gamma rays of energies up to 10 MeV, NCRP report 49. National Council on Radiation Protection and Measurements, Washington, DC
10. Kocher DC (1981) Radioactive decay tables. Technical Information Center, U.S. Department of Energy; DOE/TIC 11026, Washington, DC
11. Weber DA, Eckerman KE, Dillman LT, Ryman JC (1989) MIRD: radionuclide data and decay schemes. Society of Nuclear Medicine, Medical Internal Radiation Dose Committee, New York
12. ANS (American Nuclear Society) (1991) American national standard gamma-ray attenuation coefficients and buildup factors for engineering materials. ANSI/ANSI-6.4.3-1991. American Nuclear Society, La Grange Park
13. Caswell RS, Coyne JJ, Randolph ML (1980) Kerma factors for neutron energies below 30 MeV. *Radiat Res* 83:217–254
14. International Commission on Radiological Protection (1987) Data for use in protection against external radiation. Publication 51. Annals of the ICRP 17(2/3). Pergamon, Oxford
15. International Commission on Radiological Protection (1996) Conversion coefficients for use in radiological protection against external radiation. Publication 74. Annals of the ICRP 26(3/4). Pergamon, Oxford
16. Adams ML, Larsen EW (2002) Fast iterative methods for discrete-ordinates particle transport calculations. *Prog Nucl Energy* 40(1):3–159
17. Shultis JK, Faw RE (2000) Radiation shielding. American Nuclear Society, La Grange Park
18. Rockwell T III (ed) (1956) Reactor shielding design manual. Van Nostrand, Princeton
19. Schaeffer NM (1973) Historical background. In: Schaeffer NM (ed) Reactor shielding. TID-25951. US Atomic Energy Commission, Washington, DC
20. Hirayama H (1987) Exposure buildup factors of high-energy gamma rays for water, concrete, iron, and lead. *Nucl Technol* 77:60–67
21. Faw RE, Shultis JK (1993) Absorbed dose buildup factors in air for 10–100 MeV photons. *Nucl Sci Eng* 114:76–80
22. Fano U, Spencer LV, Berger MJ (1959) Penetration and diffusion of x rays. In: Encyclopedia of physics, vol 38, Part 2. Springer, Berlin
23. Goldstein H (1959) Fundamental aspects of reactor shielding. Addison-Wesley, Reading
24. Spencer LV, Spencer LV (1962) Structure shielding against fallout radiation from nuclear weapons, Monograph 42. National Bureau of Standards, Washington, DC
25. Takeuchi K, Tanaka S, Kinno M (1981) Transport calculation of gamma rays including bremsstrahlung by the discrete ordinates code PALLAS. *Nucl Sci Eng* 78:273–283
26. Takeuchi K, Tanaka S (1984) Buildup factors of gamma rays, including bremsstrahlung and annihilation radiation for water, concrete, iron, and lead. *Nucl Sci Eng* 87:478–489
27. Negin CA, Worku G (1998) Microshield v.5 user's manual. Grove Software, Lynchburg
28. Malenfant RE (1967) QAD: a series of point kernel general-purpose shielding programs. LA-3573. Los Alamos National Laboratory, Los Alamos
29. Price JH et al (1979) Utilization instructions for QADMOD-G. RRA-N7914. Radiation Research Association, Fort Worth. Available from RSICC as CCC565/QADMOD-GP
30. Litwin KA et al (1994) Improvements to the point kernel code QAD-CGGP: a code validation and user's manual. RC-1214 COG-94-65. AECL Research, Canada. Available from RSICC as CCC-645/QAD-CGGP-A
31. Malenfant RE (1990)  $G^3$ : a general purpose gamma-ray scattering code. LA-5176. Los Alamos National Laboratory, Los Alamos. Available from RSICC as CCC-564/G33-GP
32. Archer BR (1995) History of the shielding of diagnostic x-ray facilities. *Health Phys* 69:750–758
33. Simpkin DJ (1989) Shielding requirements for constant-potential diagnostic x-ray beams determined

- by a Monte Carlo calculation. *Health Phys* 56:151–154
34. Archer BR, Conway BJ, Quinn PW (1994) Attenuation properties of diagnostic x-ray shielding materials. *Med Phys* 21:1499–1507
  35. Simpkin DJ (1995) Transmission data for shielding diagnostic x-ray facilities. *Health Phys* 68:704–709
  36. Chilton AB (1971) Effect of material composition on neutron penetration of concrete slabs. Report 10425. National Bureau of Standards, Washington, DC
  37. Roussin RW, Schmidt FAR (1971) Adjoint Sn calculations of coupled neutron and gamma-ray transport through concrete slabs. *Nucl Eng Des* 15: 319–343
  38. Roussin RW, Alsmiller RG Jr, Barish J (1973) Calculations of the transport of neutrons and secondary gamma rays through concrete for incident neutrons in the energy range 15 to 75 MeV. *Nucl Eng Des* 24:250–257
  39. Wyckoff JM, Chilton AB (1973) Dose due to practical neutron energy distributions incident on concrete shielding slabs. In: Proceedings of 3rd international congress IRPA, American Nuclear Society, La Grange Park
  40. Wang X, Faw RE (1995) Transmission of neutrons and secondary gamma rays through concrete slabs. *Radiat Prot Dosimetry* 60:212–222
  41. Chilton AB, Huddleston CM (1963) A semi-empirical formula for differential dose albedo for gamma rays on concrete. *Nucl Sci Eng* 17:419–424
  42. Chilton AB, Davissom CM, Beach LA (1965) Parameters for C–H albedo formula for gamma rays reflected from water, concrete, iron, and lead. *Trans Am Nucl Soc* 8:656
  43. Chilton AB (1967) A modified formula for differential exposure albedo for gamma rays reflected from concrete. *Nucl Sci Eng* 27:481–482
  44. Brockhoff RC (2003) Calculation of albedos for neutrons and photons. Ph.D. dissertation, Department of Mechanical and Nuclear Engineering, Kansas State University, Manhattan
  45. Selph WE (1973) Albedos, ducts, and voids. In: Schaeffer NM (ed) Reactor shielding. TID-25951. US Atomic Energy Commission, Washington, DC
  46. Simmons GL, Albert TE, Gritzner DM (1979) The SAI/EPRI information library. Report SAI-013-79-525-LJ. Science Applications Inc, La Jolla
  47. Cain VR, Emmett MV (1979) BREESE-II: auxiliary routines for implementing the albedo option in the MORSE Monte Carlo code, ORNL/TM-6807. Oak Ridge National Laboratory, Oak Ridge
  48. Maerker RE, Muckenthaler FJ (1966) Measurements and single-velocity calculations of differential angular thermal-neutron albedos for concrete. *Nucl Sci Eng* 26:339
  49. Coleman WA, Maerker RE, Muckenthaler FJ, Stevens PJ (1967) Calculation of doubly differential current albedos for epicadmium neutrons incident on concrete and comparison of the subcadmium component with experiment. *Nucl Sci Eng* 27:411–422
  50. Chandrasekhar S (1960) Radiative transfer. Dover, New York
  51. Wells MB (1964) Reflection of thermal neutrons and neutron capture gamma rays from concrete. USAEC report RRA-M44. Radiation Research Associates, Fort Worth
  52. Gomes IC, Stevens PN (1991) MORSE/STORM: a generalized albedo option for Monte Carlo calculations. ORNL/FEDC-91/1, TN. Oak Ridge National Laboratory, Oak Ridge
  53. LeDoux JC, Chilton AB (1959) Gamma ray streaming through two-legged rectangular ducts. *Nucl Sci Eng* 11:362–368
  54. National Council on Radiation Protection and Measurements (2003) Radiation protection for particle accelerator facilities. NCRP report 144. National Council on Radiation Protection and Measurements, Washington, DC
  55. Lampley CM, Andrews MC, Wells MB (1988) The SKYSHINE-III procedure: calculation of the effects of structure design on neutron, primary gamma-ray, and secondary gamma-ray dose rates in air. RRA-T8209A. Radiation Research Associates, Fort Worth
  56. Lampley CM (1979) The SKYSHINE-II procedure: calculation of the effects of structure design on neutron, primary gamma-ray, and secondary gamma-ray dose rates in air. RRA-T7901. Radiation Research Associates, Fort Worth
  57. Brockhoff RC, Shultis JK, Faw RE (1996) Skyshine line-beam response functions for 20- to 100-MeV photons. *Nucl Sci Eng* 123:282–288
  58. Gui AA, Shultis JK, Faw RE (1997) Response functions for neutron skyshine analysis. *Nucl Sci Eng* 125:111–127
  59. Shultis JK, Faw RE, Bassett MS (1991) The integral line-beam method for gamma skyshine analysis. *Nucl Sci Eng* 107:228–245
  60. Stedry MH (1994) A Monte Carlo line-beam calculation of gamma-ray skyshine for shielded sources. MS thesis, Kansas State University, Manhattan
  61. Negin CA (1987) The microskyshine manual. Grove Software, Lynchburg
  62. Carlson BG, Lathrop KD (1968) Transport theory, the method of discrete ordinates. In: Greenspan H, Kelber CN, Okrent D (eds) Computing methods in reactor physics. Gordon and Breach, New York
  63. Duderstadt JJ, Martin WR (1979) Transport theory. Wiley, New York
  64. Lewis EE, Miller WF (1984) Computational methods of neutron transport theory. Wiley, New York
  65. Rhoades WA, Childs RL (1987) The TORT three-dimensional discrete ordinates neutron/photon transport code. ORNL-6268. Oak Ridge National Laboratory, Oak Ridge
  66. Alcouffe RE, Baker RS, Dahl JA, Turner SA (2002) PARTISN user's guide. CCS-4, LA-UR-02-

5633. Los Alamos National Laboratory, Transport Methods Group, Los Alamos
67. Goertz G, Kalos MH (1958) Monte Carlo methods in transport problems. In: Progress in nuclear energy, ser 1, vol 2. Pergamon, New York
68. Kalos MH (1968) Monte Carlo integration of the adjoint gamma-ray transport equation. *Nucl Sci Eng* 33:284–290
69. Kalos MH, Nakache NR, Celnik JC (1968) Monte Carlo methods in reactor computations. In: Greenspan H, Kelber CN, Okrent D (eds) Computing methods in reactor physics. Gordon and Breach, New York
70. Spanier J, Gelbard EM (1969) Monte Carlo principles and neutron transport problems. Addison-Wesley, Reading
71. Carter LL, Cashwell ED (1975) Particle-transport simulation with the Monte Carlo method. TID-26607. Los Alamos National Laboratory, Los Alamos
72. Lux I, Koblinger LK (1991) Monte Carlo particle transport methods: neutron and photon calculations. CRC Press, Boca Raton
73. Dunn WL, Shultz JK (2011) Exploring the Monte Carlo method. Elsevier, Amsterdam
74. Jenkins TM, Nelson TM, Rindi A (1988) Monte Carlo transport of electrons and photons. Plenum, New York
75. Nelson WR, Hirayama H, Rogers DWO (1985) The EGS4 code system. SLAC-265. Stanford Linear Accelerator Center, Menlo Park
76. Halbleib JA, Kensek RP, Mehlhorn TA, Valdez GD, Seltzer SM, Berger MJ (1992) ITS Version 3.0: the integrated TIGER series of coupled electron/photon Monte Carlo transport codes. SAND91-1634. Sandia National Laboratories, Albuquerque
77. X-5 Monte Carlo Team (2003) MCNP-a general Monte Carlo n-particle transport code, version 5. LA-UR-03-1987 (vol 1: Overview and theory), LA-UR-03-0245 (vol 2: User's guide). Los Alamos National Laboratory, Los Alamos
- Faw RE, Shultz JK (1999) Radiological assessment: sources and doses. American Nuclear Society, La Grange Park
- Goldstein H (1959) Fundamental aspects of reactor shielding. Addison-Wesley, Reading
- Haffner JW (1967) Radiation and shielding in space. Academic, New York
- ICRP (2007) The 2007 recommendations of the international commission on radiological protection. Report 103. Ann ICRP 37:2–4
- ICRP (2008) Nuclear decay data for dosimetric calculations. Report 107. Ann ICRP 38(3):1–96
- ICRU (1993) Quantities and units in radiation protection dosimetry. Report 51. International Commission on Radiation Units and Measurements, Bethesda
- ICRU (1998) Fundamental quantities and units for ionizing radiation. Report 60. International Commission on Radiation Units and Measurements, Bethesda
- Jaeger RG (ed) (1968–1975) Engineering compendium on radiation shielding. Shielding materials and design, vol 1; Shielding materials and designs, vol 2; Shield design and engineering, vol 3. Springer, New York
- NCRP (2003) Radiation protection for particle accelerator facilities. Report 144. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (2005a) Structural shielding design for medical x-ray imaging facilities. Report 147. National Council on Radiation Protection and Measurements, Bethesda
- NCRP (2005b) Structural shielding design and evaluation for megavoltage x- and gamma-ray radiotherapy facilities. Report 151. National Council on Radiation Protection and Measurements, Bethesda
- Rockwell T III (ed) (1956) Reactor shielding design manual. Van Nostrand, Princeton
- Schaeffer NM (ed) (1973) Reactor shielding. TID-25951. U.S. Atomic Energy Commission, Washington, DC
- Shultz JK, Faw RE (2000) Radiation shielding. American Nuclear Society, La Grange Park
- UN (1977, 1982, 1988, 1993, 2000) Reports of the United Nations Scientific Committee on the Effects of Atomic Radiation, New York. <http://www.unscear.org/unscear/en/publications.html>

## Books and Reviews

Blizard EP, Abbott LS (eds) (1962) Reactor handbook, vol 3, Part B, shielding. Wiley, New York



## Applications of Radioisotopes

Robert Bruce Hayes  
Department of Nuclear Engineering,  
North Carolina State University, Raleigh,  
NC, USA

### Article Outline

Glossary  
Definition of the Subject  
Introduction  
Introduction to Radioisotopes  
Production of Radioisotopes  
Radioisotopes in the Environment  
Applications in Science and Engineering  
Applications in Industry  
Applications in Medicine  
Applications in Homeland Security  
Applications in Space Activities  
Closing Remarks  
Future Directions  
Bibliography

### Glossary

**Background radiation** The radiation given off by natural radioisotopes and cosmic sources.

**Detection limits** The smallest amount of radiation which can be discriminated from background radiation.

**Dirty bomb** A conventional chemical bomb laced with radioactivity intended to cause mass panic and commercial havoc.

**Ionizing** The result of adding or removing charge from a neutral atom.

**IND** Improvised nuclear device, an attempt at a nuclear weapon generally assumed to be made by a terrorist organization.

**Isotope** An element may have different numbers of neutrons in a given atom, but the element is defined by the number of protons in the

nucleus. The different isotopes of an element will all have the same number of protons but different numbers of neutrons.

**NORM** Naturally occurring radioactive material, radioisotopes.

**Nucleus** The center of an atom containing all the neutrons and protons which constitute the overwhelming majority of the atom's mass.

**Nuclide** A commonly used term synonymous with an isotope, it is a particular combination of neutrons and protons for a specific element.

**Radiation** The emission of energy in the form of photons or other subatomic particles.

**Radioactive** The condition in which the individual atoms of a material have an excited nucleus which will eject excess energy in the form of radiation over time.

**Radioisotope** A specific isotope of an element which is radioactive.

**RDD** Radiological dispersion device, a combination of an explosive device and radioactive material intended to disperse the radioactivity in order to cause panic and commercial disruption (AKA: dirty bomb).

**RTG** Radioisotopic thermoelectric generator, a device for converting the heat generated by radioactive decay into a small electrical current.

**Transuranic** Radioisotopes having a Z number greater than that of uranium ( $Z > 92$ ).

### Definition of the Subject

The practical utility of radioactive materials in science, industry and medicine are useful in most technological fields when applied safely.

### Introduction

Radioisotopes are used all over the globe in many different types of applications. To name but a few examples, they are used in research in science, technology, and medicine; in industry; in

geological explorations; in forensics for art technology and archeology; in space activities; in home protection devices; and in homeland security activities.

This article presents (a) general discussion about radioisotopes and radioactivity and (b) brief discussion for each one of their many applications. It is not generally credible that all current and potential science, engineering, and technological applications for radioisotopes could be listed in a single article. Perhaps all those we know of could be detailed and listed in a large comprehensive book or series of works. This had been attempted early in the previous century [1] along with select industry and application-specific reference works such as chemistry [2], hydrology [3], agriculture [4], and the paper industry [5].

## Introduction to Radioisotopes

A radioisotope is an atomic species with a distribution of protons and neutrons in its nucleus such that it has excess energy relative to its ground state. The ground state is simply that configuration which has the lowest energy. Like a ball on a hill, the ball will move until it can attain its lowest possible energy state at the bottom of the hill; a nucleus will release energy through decay until it attains a stable, low energy state.

In an attempt to achieve its ground state, a radioisotope will eventually give off its extra energy in the form of radiation by decaying. This emitted radiation can take many forms; these include gamma, beta, alpha, neutrons, and neutrinos. Because the energy levels in a nucleus tend to be many orders of magnitude (MeV) larger than the energy levels associated with atomic bonding between atoms and molecules (eV), the energies associated with particles emitted by nuclei are of the order keV-MeV.

The nomenclature for describing all isotopes is to list the total number of neutrons and protons in the upper left of the chemical symbol of the element. A helium atom with its 2 protons and 2 neutrons is thus described by  ${}^4\text{He}$ . Similarly, a carbon

atom which has 8 neutrons along with its required 6 protons is thus described by the symbol  ${}^{14}\text{C}$ . Notice that the number of protons is already fixed by stating the chemical element as that describes the number of orbital electrons around the nucleus.

## Radioactivity

The more common radioisotopes in our environment are those which occur naturally. These include alpha, beta, and gamma emitters. In a rather literal sense, all materials are radioactive in that they will contain some fraction of radioactive atoms. In general, any tens of grams of an element or material will have on the order of Avogadro's number ( $6.02 \times 10^{23}$ ) atoms present in it. Even if only one millionth of a 1% of these atoms are radioactive, then this still means there are  $6 \times 10^{15}$  radioactive atoms in that material. Although this may seem like an unimaginably large number, this is much less than the typical natural radioactivity of the earth's crust due to primordial radionuclides which itself is greater than a few parts per million. Radioisotopes with mass greater than lead ( $Z = 82$ ) generally follow a decay chain which eventually decays into a stable (nonradioactive) isotope of lead.

The decay rate of a radioactive material is generally referred to as its activity, which gives the number of decays per unit time. The quantity that gives the probability of decay per nucleus per unit time is called the decay constant,  $\lambda$ . The decay constant  $\lambda$  is the same for all nuclei of a species and independent of the number of nuclei present and of the physical and chemical state of the material.

Consider a mass  $m$  of radioactive species with decay constant  $\lambda$ . The number of nuclei,  $N$ , in the mass  $m$  is given by

$$N = m \frac{N_A}{A} \quad (1)$$

where  $N_A$  = Avogadro's number =  $6.022 \times 10^{23}$  atoms per mole and  $A$  = atomic mass of that atom. The number of nuclei decaying per unit time, the activity  $A_c$ , is given by

$$A_c = \lambda N \text{ (decays/s)} \quad (2)$$

The unit of activity is the Becquerel (Bq): 1 Bq = one decay/s. Another unit also used (and historically the first one) is the Curie (Ci): 1 Ci =  $3.7 \times 10^{10}$  Bq. Since decay destroys atoms of a sample, the activity decreases with time. The equation that gives the change of activity with time,  $A_c(t)$ , is

$$A_c(t) = A_c(0)e^{-\lambda t} \quad (3)$$

also known as the exponential decay law. In practice, the decay constant is seldom used. Instead, what is tabulated and used in calculations is the half-life.

The half-life of a radioisotope is the amount of time it takes for half of the nuclei present to undergo radioactive decay. In this sense, within 2 half-lives, only 1/4 of the initial amount of the radioisotope would still be present, after 3 half-lives, only 1/8, etc. The general formula is that after  $n$  half-lives, only a fraction equal to  $2^{-n}$  of the parent radioisotope would remain. A general rule of thumb, frequently used, is that after 10 half-lives, the remaining radioactivity would be negligible. The relationship between the decay constant,  $\lambda$ , and half-life ( $T_{1/2}$ ) is

$$\lambda = \ln 2 / T_{1/2} \quad (4)$$

### Alpha Decay

An alpha particle is just the nucleus of a helium atom after being stripped of its outer pair of electrons. This leaves the alpha particle with a plus 2 charge due to its pair of protons as any single proton has a charge of plus one. The additional pair of neutrons in an alpha particle have no net charge and provides the required nuclear binding energy to hold the nucleus together despite the electrostatic repulsion from the pair of the two positively charged protons.

Examples of alpha-emitting radionuclides include the naturally occurring primordial nuclides of uranium, thorium, and their daughters. In addition to these, the man-made transuranic elements (elements with  $Z > 92$ ) are also alpha emitters such as  $^{239}\text{Pu}$ ,  $^{241}\text{Am}$ ,  $^{252}\text{Cf}$ , etc.

### Gamma Decay

A photon (gamma ray) is an electromagnetic energy given off by an excited nucleus in the process of various nuclear transitions down to lower energy levels. The process is analogous to x-ray production when the orbital electrons of an atom are able to transition down to lower energy levels on the atom. Many radioisotopes emit more than one photon; others may emit less than one photon per decay.

Examples include industrial sources such as  $^{137}\text{Cs}$ ,  $^{60}\text{Co}$ , and  $^{131}\text{Ir}$ ; medical sources such as  $^{99m}\text{Tc}$ ,  $^{131}\text{I}$ , and  $^{201}\text{Tl}$ ; and natural isotopes such as  $^{226}\text{Ra}$ ,  $^{235}\text{U}$ , and  $^{40}\text{K}$ .

### Internal Conversion (IC)

A gamma-decaying nucleus transfers, sometimes, energy directly to an orbital electron resulting in that electron being kicked out of the atom altogether. This process can also be identified by the induced x-ray emissions, created by this process similar to that of electron capture. It is also identified by the kinetic energy of the emitted electrons.

### Beta Decay

A beta particle is an electron. There are two forms of beta decay: some isotopes eject an electron ( $\beta^-$ ) from its nucleus and others eject a positron ( $\beta^+$ ), the antiparticle of the electron.

Electrons and positrons are identical with the exception of the charge. The rest mass energy equivalent ( $E = mc^2$ ) of either particle is 0.511 MeV. The positron cannot exist in our world which consists of matter. When it loses its kinetic energy, it will combine with an electron, and the two particles will annihilate each other and become pure energy in the form of a pair of back to back emitted photons each having energy equal to 0.511 MeV, equivalent to the rest mass of each of the  $\beta$  particles.

Beta decay is also accompanied by the emission of a neutrino or antineutrino to conserve energy, momentum, and spin. The neutrino is very penetrating and weakly interacting with normal matter.

### $\beta^-$ Decay

When an isotope has either too few protons or equivalently too many neutrons, the weak nuclear force allows a neutron in the nucleus to be converted into a proton, an electron ( $\beta^-$ ), and an antineutrino. The proton remains bound in the nucleus from the strong nuclear force, but the  $\beta^-$  and antineutrino are emitted as radiation. When the beta particle emerges out of the atom, it collides with other atomic electrons of the material into which the radioactive isotope was incorporated (which may be a material solely composed of the element of the isotope itself).

The  $\beta^-$  decay changes the decaying nucleus into a new chemical element. Examples of  $\beta^-$  emitters are  ${}^3\text{H}$ ,  ${}^{14}\text{C}$ , and  ${}^{32}\text{P}$ .

### $\beta^+$ Decay

The second beta decay mechanism is the emission of a positron ( $\beta^+$ ) where a proton in the nucleus is, essentially, converted into a neutron and a neutrino.

As mentioned earlier, a positron will not survive long outside the nucleus; it will combine with an electron; and the two particles will annihilate, their rest mass being converted into two 0.511 MeV photons. Therefore, any positron-emitting radioisotope is a source of 0.511 MeV photons.

The  $\beta^+$  decay, like the  $\beta^-$  decay, also changes the decaying nucleus into a new chemical element. Examples of  $\beta^+$  emitters are  ${}^{15}\text{O}$ ,  ${}^{22}\text{Na}$ ,  ${}^{64}\text{Cu}$ , and  ${}^{124}\text{I}$ .

### Electron Capture

An alternative to  $\beta^+$  decay is a nuclear transition called electron capture (EC). Using classical physics explanation, instead of emitting a positron and changing a proton into a neutron, the nucleus captures an electron and achieves the same result.

When EC occurs, it can be identified by the subsequent series of x-rays which are produced as higher orbital electrons cascade down to lower levels to fill the gap which was created by the captured electron. EC changes the decaying nuclide into a new chemical element (the same as  $\beta^+$  does).

## Production of Radioisotopes

The general method of producing man-made radioisotopes is to let a projectile hit a nucleus, cause a nuclear reaction, and produce a new nucleus that is radioactive. The most common projectiles are, by far, neutrons produced by a fission reactor. But highly energetic charged particles created in an accelerator are also used.

### Production Using Nuclear Fission Reactors

The process of fission splits the nuclear fuel into a pair of lighter atoms which are in most cases themselves radioactive. A large distribution of radionuclides is produced over the process of many fissions with the majority being concentrated around the mass groupings near atomic mass units of 95 and 140 resulting in a bimodal distribution. But neutrons are also emitted in fission which makes possible a chain reaction.

Exposing materials to the neutrons produced in a fission reactor can also make materials radioactive. When a nucleus absorbs a neutron, it generally results in a radioactive nuclide. This process is called neutron activation and follows the growth response given (under the most common conditions) by Eq. 5.

$$A_c = N\sigma\phi(1 - e^{-\lambda t}) \quad (5)$$

where:

$N$  = Number of nuclei in the sample being exposed to the neutron field (Eq. 1)

$\sigma$  = The probability of a neutron being absorbed in the nucleus (known as the cross section, in units of area)

$\phi$  = The neutron field hitting the target (in units of neutrons per area per time)

### Production Using Accelerators

A particle accelerator accelerates charged particles such as protons (hydrogen nuclei), electrons, and alphas (He nuclei). Higher mass elements such as carbon can also be stripped of many of their electrons and then accelerated to high kinetic energies.

When a charged particle is accelerated above around 10 MeV but preferably above 20 MeV, it has adequate energy to initiate a nuclear reaction in a target. The reaction results, in most cases, in the production of a radioisotope.

Production of radioisotopes in an accelerator follows Eq. 5 as for fission reactors.

## Radioisotopes in the Environment

Literally, all material in our solar system is already radioactive to some extent. Our solar system is believed to have actually been formed from the remnants of more than one supernovae ejecta combining to eventually be gravitationally pulled into the sun and its accretion disc which itself eventually formed the planets including the earth [6]. At least one if not all the precursor supernovae which formed our solar system created actinide and transuranic radionuclides which were transported here to contribute to the overall makeup of the earth. All natural radioactivity of our planet is designated as NORM which stands for naturally occurring radioactive material. NORM consists of three sources: (1) uranium and thorium and their daughters, (2) other primordial radionuclides such as potassium and lanthanum, and (3) cosmogenic radionuclides.

### U-Th and Their Daughters

The primary source of the earth's radioactivity comes from uranium and thorium and their daughters. Our earth contains about 0.02 ppm U and 0.074 ppm Th. There are two U parent isotopes:  $^{235}\text{U}$ , which makes 0.711% of natural U, and  $^{238}\text{U}$ , which is the rest (there is a small amount of  $^{234}\text{U}$  which is not important for this discussion). Only one isotope of thorium exists naturally:  $^{232}\text{Th}$ . These three isotopes continuously decay and produce daughters that are radioactive. Probably the most important daughter, from the point of view of health risk, is radon (Rn). Radon is an alpha-emitting gas. Because it is a gas, it percolates up through the soil and is found in our atmosphere. Breathing radon can pose a health risk because of the alpha particles it emits.

### Primordial Radioisotopes

The second source of NORM is the other primordial radionuclides such as  $^{40}\text{K}$  (the earth's crust contains 0.02% K [7]),  $^{87}\text{Rb}$ ,  $^{115}\text{In}$ ,  $^{113}\text{Cd}$ ,  $^{144}\text{Nd}$ , and others. These primordial nuclides are still present on earth because their half-lives are longer than the age of the earth.

### Cosmogenic Radioisotopes

The third source of NORM is cosmogenic radioisotopes. Cosmogenic nuclides are continuously formed (and decaying) primarily in the earth's atmosphere; a second, minor source is direct entrance to the Earthian environment from space. Cosmic rays, coming from outer space, bombard the earth continuously. They are extremely energetic particles, mostly protons with energies up to 800–1000 MeV. These particles colliding with the nuclei in the atmosphere initiate nuclear reactions and produce radioactive species. Examples are  $^{14}\text{C}$ ,  $^{3}\text{H}$ ,  $^{32}\text{P}$ ,  $^{33}\text{P}$  [8], and  $^{44}\text{Ti}$  [9] along with  $^{7}\text{Be}$  and  $^{10}\text{Be}$  [10]. The solar wind also contains sufficiently energetic protons and neutrons which can similarly interact with atomic nuclei in the atmosphere and generate new radioisotopes.

These energetic particles are also capable of shattering nuclei and producing secondary particles (electrons, photons, muons, neutrons). Some of these particles reach the surface of the earth and constitute what are called "cosmic rays."

### Man-Made Radioisotopes

As a result of atmospheric nuclear weapon testing in the past century, global fallout has distributed fission products around the world. Current levels of the long-lived alpha emitters (transurans such as plutonium) are substantially lower than the natural long-lived alpha emitters such as uranium, thorium, and radium [11].

Anthropogenic  $^{137}\text{Cs}$  from nuclear fallout and accidents (such as Chernobyl and Fukushima) is relatively small in terrestrial abundance compared to natural  $^{40}\text{K}$ . When compared to  $^{40}\text{K}$ ,  $^{137}\text{Cs}$  emits betas with a similar energy but a gamma with a much lower energy. For this reason, considering equal activity,  $^{137}\text{Cs}$  would pose less risk

than  $^{40}\text{K}$ . The relative risk of fallout radionuclides is small compared to naturally occurring levels which are considered to be safe (e.g., life being designed to operate at these or higher levels [12]).

## Applications in Science and Engineering

The applications of radioisotopes in science and engineering virtually span all of science and engineering activities. Even if an intentional effort were made to select things which may naively be assumed to be independent of any radioisotopes at all, there will almost invariably be a connection if not a full dependence on radioisotopes in some way. This is not just because all materials are radioactive to some extent but because it is rather easy to make quality measurements of very small amounts of radioactivity. Also, radioisotopes may be easily tracked, nondestructively, as they penetrate and diffuse through or out of a material.

### Archeology

To the extent that isotopic abundances and radiological conditions can be predicted throughout history, the magnitude and ratio of these conditions can provide insight into a prior state and age of ancient artifacts. Whether the material came from extraterrestrial meteoric impacts [13, 14], sediment dynamics [15], or simply as an ancient clock [16], the more facts one has, the more definitive any and all possible historical conditions can be determined.

### Solid-State Dosimetry

As the entire earth is radioactive (as is the whole universe), a fairly constant background dose rate is continually increasing the dose to all materials beginning at their formation. If this dose to a material can be measured, its age can be approximated if the background dose rate is also measured using the expression (Sample Age) = (Sample Dose)/(Background Dose Rate) where the age represents how long ago the sample was either created or the signal was set to zero through external means such as in the firing of a brick, tile, or porcelain [17, 18]. As with any radiation


detection technique, background radiation from terrestrial NORM must be considered.

Using solid-state techniques, the dose to human tooth enamel has successfully determined population dose when teeth from normal medical procedures (such as being fitted for dentures, root canals, and wisdom tooth extraction) are saved for this purpose. Population exposures from Chernobyl, Hiroshima, and Nagasaki have all been measured in this way [19].


Using optically stimulated luminescence (OSL), the age of sand deposits can be dated [20]. The signal is radiosensitive and set to zero when exposed to sunlight. The background dose rate to these materials can be measured which after acquiring its integrated OSL dose gives again the time the sand last saw sunlight using age = dose/dose rate [21].

### $^{14}\text{C}$ Dating

The radioisotope  $^{14}\text{C}$  is a beta emitter with a half-life of 5730 years; it is continuously produced in the atmosphere through the so-called carbon cycle involving the reactions

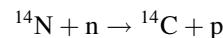

and the  $^{14}\text{C}$  decay:

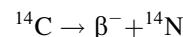

Since  $^{14}\text{C}$  is produced and decays, it reaches an equilibrium concentration in the atmosphere. As a result, in a living organism (plant or animal), the ratio of  $^{14}\text{C}$  to total carbon atoms is constant. But when the organism dies, the ratio decreases because  $^{14}\text{C}$  decays and is not replenished anymore through the organism's metabolism, but stable carbon does not change. Therefore, by measuring the ratio, the age of a dead organic sample is determined. Since the half-life of  $^{14}\text{C}$  is 5730 years, the method is applicable to samples that have an age of ~10,000 years or more.

### Frictional Wear Detection

By impregnating a material with a trace amount of an easy to measure radionuclide, the appearance

of this radionuclide in the effluents, (waste, lubricant, or other byproduct material) will be a measure of the wear on the item of interest. Multiple items can be tagged in this way using unique trace radionuclides for each item. By using amounts that result in radiation levels which are small compared to natural background radiation levels, it is still possible to achieve a rigorous measurement using modern gamma ray spectrometers. When using such small amounts of radioactivity in this way, these applications can be accomplished in ways that do not generate any environmental concern.

### Flow Tracing

By placing a trace radionuclide in a liquid, the detection of this radioisotope at various locations can signal flow rates and distributions of the liquid. In a pipeline, a trace radionuclide injected at the point of insertion of the fluid can signal at the far end when the new type of material has arrived.

A leak in a buried pipeline can be detected very easily using a radioisotope. The injected isotope will come out in the soil at the location of the leak. A technician with a radiation detector follows the path of the pipeline, continuously checking their instrument. At the location of the leak, the radiation level will suddenly peak, thus indicating the presence of the leak.

If a known amount, concentration, and injection rate of radioisotopes are introduced into a river, then the flow rate, mixing rate, and dilution rates can all be measured at locations downstream of the injection location. As mentioned earlier, this process takes advantage of the very sensitive nature by which radiation can be quantified enabling the acquisition of information with only trace amounts of a radioisotope, far too small to have any measurable environmental detriment.

### Mixing Characterization

By homogeneously distributing distinct radionuclides in one or more inputs of a mixture or process, the resulting distribution and concentrations of the products can then be a direct measure of the mixing proportions used in the constituent reactants. This could take place in a river, estuary, underground flow, etc. This can also be done for

chemical reactions where large or small systems may use catalysts which could be partly consumed or require multiple stages through systems not easily characterized in terms of waste or product.

The method can be applied to determine mixing rates and even mixing mechanisms through selective tagging of one or more reactants or feed supplies into the system. This can result in measurement of solubility and equilibrium constants for chemical mixtures.

### Surface Temperature Measurement

Impregnating materials with a radioactive noble gas can allow measurement of diffusion out of that material. This can serve as a measure of temperature such as on the internals of jet engine components during operation. By implanting the surface of a turbine blade with a radioactive noble gas such as  $^{85}\text{Kr}$ , the rate of exhalation from the blade is a sensitive function of temperature. As such, a measure of the release rate of this radioisotope then gives an indirect determination of these blades in operation where they otherwise would not be able to have surface temperature measurements (the internal temperatures of an operating jet engine).

### Chemical Reaction Dynamics

Chemical reactions can take place through any number of intermediary steps. If there are multiple pathways in which a chemical reaction can pass (such as making  $\text{OH}^-$  radicals and  $\text{H}_2\text{O}_2$  molecules in combustion, etc.), then tagging one of the reactants with a radioisotope can determine where this reactant was used in making the products. One example would be using  $^{14}\text{C}$ -doped molecules in only one reactant of a process requiring multiple inputs of carbon and then determining if this ended up in all products equally or in some biased fashion.

### Applications in Industry

The use of radioisotopes in industry is a multi-billion dollar business even excluding commercial electricity generation. Examples are nuclear

medicine, food irradiation, insect sterilization, smoke detectors, neutron radiography, etc.

### Naturally Occurring Radioisotopes

Naturally occurring radioisotopes have many uses. The most common of which is commercial electricity generation through nuclear reactors, but there are many more commercial applications common to everyday life. Many of these will be considered here.

#### Uranium Used in Ceramic Dinner Ware Glaze

Fiestaware™ was a line of plates, bowls, and dinner ware. It utilized uranium oxide to give the ceramic multiple flamboyant colors. The glaze is no longer available in modern ceramics and has to be obtained through antique shops.

By adding uranium to the glaze of ceramic dinnerware, the resulting colors attained included blazing oranges, reds, and maroon. This occurred throughout the mid-1900s using depleted uranium but has since been discontinued. As a result, this historical Fiestaware™ is often found to be useful for demonstration purposes by nuclear and radiological practitioners [22].

#### Uranium as Nuclear Fuel

Today's light-water reactors (LWR) which generate about 19% of the US electricity use as a fuel uranium, specifically the isotope  $^{235}\text{U}$ . Unfortunately  $^{235}\text{U}$  is only 0.711% of natural uranium and must be enriched to 4–5% to be used as a fuel in LWRs.

#### Depleted Uranium Used in Munitions

After uranium enrichment, what is left behind is a “waste” product containing 0.2–0.3%  $^{235}\text{U}$ . This waste product is called depleted uranium (DU). This DU can then be converted to pure uranium metal which is extremely dense and hard, making it useful as armor piercing munitions for the military. Replacing the cheaper element of lead with DU may cost more, but it also provides a strategic advantage in capability such as with the A10 aircraft ammunition for piercing tank armor [23].

### Thorium Used in Lantern Mantles

The lantern mantle is designed to burn gas within its volume such that the heat from the combustion is sufficient to excite the valence electrons of thorium oxide in the lantern filaments which then gives off a very bright glow. It is by placing the mantle fabric in a thorium nitrate solution that the resulting dried salt when heated will glow with a bright white illumination [24]. Because of public concerns with any radioactive commercial product, lantern mantles using thorium are no longer manufactured in the USA.

Lantern mantles with thorium have often been used as check sources for laboratory demonstration purposes utilizing the radiation given off by the thorium.

#### Thorium Used in Photography Lenses

A very important aspect of optic lenses is the refractive index of the dielectric material making up the lens. By adding a small amount of  $\text{ThO}_2$  to the glass, the dielectric constant substantially increases the dielectric constant of the material and still leaves the lens transparent. It has been shown that such use of thorium results in a negligible radiation dose to users even under extended exposures [25]. Because of public fears from any product involving radioactive materials, this practice has stopped.

#### Thorium Used in Welding Rods

The use of tungsten inert gas (TIG) welding is a common practice in industry due to the quality and versatility of the method for multiple metal types with small precise welds. The TIG welder uses a thoriated ( $\text{ThO}_2$ ) element in the process. The thorium allows the welding rods to withstand very high temperatures without melting or sputtering under high electrical current. The use of these materials in welding and subsequent grinding has been shown to generate air concentrations below regulatory limits required for minimal controls [26].

#### Radium as Fluorescent Agent

Radium is an alpha emitter and as such is always depositing a large amount of energy in its immediate environment out to as much as

50 micrometers in flesh (less than the outer dead layer of your skin) and around 40 mm in air. As such, when it is placed in a fluorescent (glow in the dark) material, it continually feeds energy into the luminescent source of the fluorescence, meaning the material gives off light (glows) continually. This property was utilized in the early 1900s to provide a means to allow wrist watches to be read in the dark. Painting the dials and markers with radium impregnated fluorescent paint would cause these markings to glow continuously. Sadly enough, the painting was done by women who would lick their paint brushes into a fine tip with their tongue which ultimately led to large radium intakes and subsequent carcinogenesis [27].

#### Potassium Use in Potash Mining

Potash can be obtained from underground deposits where NaCl is also typically found. Potash contains a concentrated amount of potassium (K). It is then possible to determine the quality of the ore based on external dose rate caused by the  $^{40}\text{K}$  in the ore itself.

#### Lanthanum as Steel Additive

The addition of rare earth elements in some steel forms has been shown to substantially alter and even improve properties such as toughness [28].

#### Lanthanum Used in Lighting

The use of artificial lighting which approximates the solar spectrum requires the use of lanthanum as a component [29]. This also permits very bright light in a portable controlled fashion which can approximate a solar spectrum for video recording.

#### Lanthanum Used in Radiation Detectors

$^{138}\text{La}$  is both a beta and gamma emitter. When the transparent crystal  $\text{LaBr}_3$  is formed as a scintillator for radiation detection, the natural gamma signal in the crystal can be used as an energy calibration standard. Similarly the presence of this signal can also serve as a sensitivity check in terms of the natural count rate in the detector from this source.

## Using Man-Made Radioisotopes

The bulk of man-made radioisotopes are produced by nuclear reactors. This supplies the majority of alpha-, beta-, and gamma-emitting radioisotopes for the host of current applications. In addition to this, high-powered accelerators are currently required to generate radioisotopes for use in medicine, e.g., positron ( $\beta^+$ ) emitters.

#### Food Sterilization

By exposing food to high levels of radiation, various health-related benefits can be realized as listed in Table 1 below. This approach has generally great benefits over other forms of food preservation, cleaning, or sterilization techniques such as heating and chemical treatments. Just as with canning foods, heating them to high temperatures will kill bacteria, but heating substantially changes the texture and consistency of the food due to the chemical effects from cooking. With irradiation, food is generally not affected in a noticeable way at all (leafy products do show wilt at higher doses) and so constitutes a desirable means to preserve food similar to the approach of pasteurization.

The chemical process resulting from food irradiation is similar to that which occurs in cooking, but the chemical bond breaking is much more random. With cooking, all the weaker bonds are broken first irrespective of how many there are or where they are located resulting in the large

**Applications of Radioisotopes, Table 1** Taken from Farkas and Mohacsi-Farkas [30]

Food irradiation application	Dose requirement (kGy)
Inhibition of sprouting	0.03–0.12
Insect disinfestation	0.2–0.8
Parasite disinfection	0.1–3.0
Shelf life extension (“radurization”)	0.5–3.0
Bacterial sterilization (“radicidation”)	1.5–1.7
Reduction of bacteria in dry food ingredients	3.0–20
Production of meat, poultry, and fishery products to be shelf-stable at ambient temperature (“radappertization”)	25–60

change in food texture, appearance, and properties after cooking. The same benefit achieved by cooking can be obtained via gamma food sterilization with drastically less structural changes to the material. Many individuals in society have voiced fears from not knowing (or believing) the benefits found from irradiating food similar to that which occurred when pasteurization was first introduced as a preservative.

Food sterilization is accomplished by exposing the foodstuff to gamma rays. The most gamma-ray sources used are  $^{137}\text{Cs}$ , emitting a 0.662 MeV gamma, and  $^{60}\text{Co}$ , emitting two gammas at 1.17 and 1.33 MeV. The probability of making the food radioactive by exposing it to gammas of this energy is zero.

#### Sterilization of Medical Instruments and Insects

Surgical instruments can be sterilized using noxious gaseous treatments which will kill all bacteria present. This results in killing only the bacteria but not necessarily any viral components which may be present (as a virus is a molecule and not a living organism). Using large doses of radiation can readily kill both bacteria and weaken many viral agents without leaving even a trace of radioactivity on the instruments providing a strong technical basis for this application.

The sterilization of pestilent male insects has also been shown to decrease infestations. Male insects of a species are exposed to such a large dose of radiation that makes them unable to successfully reproduce. The irradiated insects are subsequently released to the environment where being unable to reproduce during subsequent copulation results in a reduction of that pestilent insect population.

#### Smoke Detectors

Smoke detectors utilize the ionization created by alpha particles to measure the aerosol content in air. If the aerosol content (smoke) exceeds a reasonable level, the air ionization decreases and the alarm will sound alerting occupants of the danger from smoke (the assumed aerosol of interest). The radioisotope used in smoke detectors is typically  $^{241}\text{Am}$ .

#### Radiolytic Polymerization

Polymerization (cross-linking) of monomers (long single chains of organic molecules) can be synthesized in many ways, but they all involve the generation of free radicals during chemical reactions [31]. The artificial generation of free radicals through exposure to ionizing radiation can catalyze these processes by generating a desired amount of free radicals through controlling the dose to the materials.

The ability to cause cross-linking between adjacent strands of a long chain polymer is readily accomplished by exposing it to ionizing radiation from various radioisotopes such as  $^{137}\text{Cs}$  or  $^{60}\text{Co}$ . By cross-linking the polymers, their strength, rigidity, and similar properties are readily changed and controlled as a function of dose.

#### Neutron Activation Analysis

Neutron activation analysis is a technique used to provide qualitative and quantitative information about the constituents of an unknown sample; it works as follows: The sample is placed very near a nuclear fission reactor core where it is bombarded by neutrons. The nuclei of the sample absorbs neutrons, at various rates, and some become radioactive. The production of radioactivity for each isotope is given by Eq. 5. The sample is then removed from the reactor, and the radioactive decay emissions (mostly gamma) are carefully measured to determine the energy and intensity of the gammas being emitted; from this information, the isotopic contents of the sample can be determined with great accuracy. This process requires in some cases making a very fast measurement to be able to detect those radioisotopes which have very short half-lives and at other times making long measurements to see those isotopes which have low concentrations but long half-lives. The method can be used to analyze soil content, bacterial or fungi trace content, or basically any material which can be sampled and placed in a reactor's neutron field [32].

#### Neutron Radiography

Similar to traditional x-ray imaging, neutrons can be used to produce images based on exposing an item of interest to an incident neutron beam and measuring the resulting beam which passes

through the item without interaction. The benefit of using neutrons is not just that the technique is nondestructive (as are x-ray images), but it is able to see light elements (plastics, organic materials) behind heavy metals such as lead and iron very easily. This is due to the fact that neutrons preferentially scatter (interact) with the lighter elements such as hydrogen and carbon which is inverse to that of x-rays. In general, x-rays differentiate the constituents of a material based on differences in atomic number Z; neutrons differentiate based on difference in atomic weight A. The method has even developed to the point where it can produce three-dimensional tomographic images [33].

The neutrons used in radiography may come from a fission reactor or from a neutron-emitting radioisotope, such as  $^{252}\text{Cf}$  (neutrons emitted by  $^{252}\text{Cf}$  come from its spontaneous fission).

#### Radioisotopic Thermoelectric Generators

A radioisotopic thermoelectric generator (RTG) uses some of the same technology as that found in a thermocouple. This is due to the Seebeck and Peltier effects. If two different metals are joined at one end and their junction is heated and kept at a different temperature than the other (unjoined) end, a small voltage difference is induced at the unjoined end. There are many choices for the source of heat. Probably the most practical one is to use a radioisotope and, in particular, an alpha-emitting isotope. The most commonly used isotope for RTGs is  $^{238}\text{Pu}$ . Typical power produced by a RTG is about 70–80 W.

RTGs are ideal as power sources for scientific instruments employed at remote locations, such as the polar regions, light houses, weather monitoring stations, and space; they have been used extensively in space missions. The instruments used in the Apollo program and all the deep space probes are powered by RTGs which use  $^{238}\text{Pu}$  as the heat source.

#### Density Gauges

In order to safely build a structure even as simple as a road, the density of the soil must be known and the soil sufficiently packed to prevent subsidence during long-term use. In order to rigorously measure such an unknown quantity without

disturbing the soil (and so changing its density), radiation is used to nondestructively measure soil density with sufficient accuracy to meet public safety requirements in construction.

The principle of this technique is simple. Radiation is directed toward the soil; the reflected radiation components (both energy and intensity) can give unique information about the density of the soil itself. Typical industrial density gauges for construction include both a neutron and a separate gamma radioisotope source. The instrument works based on the dependence of radiation interaction probability with the materials that make up the soil. The interaction probability depends on the density and the characteristic nuclear interaction probabilities (cross sections) of the various isotopes in the soil.

#### Borehole Logging for Fossil Fuels

This application is, in many respects, the same techniques as the density gauge. A radiation source is lowered in a borehole drilled for oil, gas, and other hydrocarbon exploration. The radiation goes into the soil surrounding the borehole and some of it is reflected. The constitution of the reflected radiation (intensity and energy) provides information about the contents of the soil beyond the walls of the borehole. Borehole logging tools typically have both a neutron and separate gamma source along with a neutron detector and a gamma ray spectrometer. By correlating signal responses from the radiation along with that from simple measurements such as soil conductivity, penetration resistance, etc., an estimate is obtained for the borehole hydrocarbon worth as a function of depth.

#### Material Thickness Measurements

Low energy gamma rays and moderately high energy beta rays have very well-known attenuation and range values in any material. By measuring the intensity of radiation passing through a production material such as a foil, film, or layered substance, a precise measure of its thickness can nondestructively be determined.

#### Industrial Radiography

Just as medical x-rays can image a bone or other internal features in a human body, industrial

radiography can image the internals of a manufactured item. This can be an image of a weld to verify that there are no bubbles, cracks, or defects. Intricate items which have many facets such as a jet engine can be imaged for defects to insure that the item satisfies quality standards that will allow it to be used in an application that involves public safety.

### Filter Media

A common method of creating a membrane filter begins with manufacturing an impermeable membrane which is thin relative to the range of alpha particles given off by common radioisotopes such as  $^{210}\text{Po}$ ,  $^{241}\text{Am}$ , etc. The membrane is exposed to a source of alpha particles. The molecular damage done by the alpha particles, as they travel through the membrane, is then magnified by exposing the membrane to a weak acid which etches the particle tracks forming randomly placed holes in the membrane. The resultant number density of the holes is controlled by the exposure time to the radioisotope.

## Applications in Medicine

Although ionizing radiation is known to increase the probability of cancer in humans, its ability to save lives, when it is applied for diagnosis and therapy, has given it an important role to play in medicine. In research, radioisotopes are utilized in the study of chemical dynamics within individual cells up to larger biological systems and functions.

The applications of ionizing radiation in medicine are too numerous and diverse to be adequately covered in an article such as the present one. Only the most common uses will be briefly discussed.

### Blood Irradiators

In order to prevent transfusion-associated graft-versus-host-disease (TA-GVHD) in patients requiring blood transfusions, gamma irradiation of the blood is a common practice prior to such administration. The occurrence of TA-GVHD is rare but fatal and easily prevented by giving to the blood many 10s of Gy prior to use for patients

identified as potentially susceptible to TA-GVHD (e.g., immunosuppressed patients). Irradiation takes place using an x-ray source or the radioisotopes  $^{137}\text{Cs}$  or  $^{60}\text{Co}$ . Efforts are underway to replace these sources and still prevent TA-GVHD [34].

### Radiopharmaceuticals

Radiopharmaceuticals are chemical compounds in which one or more chemical elements are made with a radioisotope of that element. With the radioisotope present, the compound is injected or ingested by the patient in pursuit of various goals. Examples are tracking of blood flow, imaging of an organ, killing a tumor, etc. A short list of some radioisotopes used in nuclear medicine is given in Table 2. This is by no means comprehensive but only offered to give a perspective of the diversity in the radioisotopes used for medical applications in nuclear pharmacy.

**Applications of Radioisotopes, Table 2** Partial listing of radioisotopes for nuclear pharmacy applications

Radioisotope	Chemical forms for injection, ingestion or inhalation including industry nomenclature	Potential targets for imaging or therapy
$^{51}\text{Cr}$	Albumin or sodium chromate injection	Spleen
$^{111}\text{In}$	Indium pentetate, autologous leukocytes, OncoScint®	Brain surface or spleen
$^{125}\text{I}$	Sodium iodide, albumin, fibrinogen, iothalamate	Thyroid and ovaries
$^{131}\text{I}$	Orthiodohippurate, sodium iodide	Bladder wall and thyroid
$^{32}\text{P}$	Chromic phosphate or sodium phosphate	Pleura, peritoneum, bone
$^{201}\text{Tl}$	Thallous chloride	Myocardial perfusion imaging
$^{99\text{m}}\text{Tc}$	Sodium pertechnetate, many commercial compounds	Imaging most systems
$^{133}\text{Xe}$	Inhalation followed by imaging	Lung functions

## Diagnosis

The use of radiopharmaceuticals allows mapping out biological processes *in vivo*. By tagging a protein, cell, or a compound with a particular radioisotope, and by using gamma cameras to record the distribution of the radiation exiting from the patient's body, the evolution of the radioactivity in the body or in an organ can then be mapped out and used for assessment of abnormalities. Following are a few examples.

### Occult Infection Imaging

A simple introductory application of this approach is the extraction of blood from a patient with an occult infection from which the white blood cells are then separated. The white blood cells are then tagged with a radioisotope (typically  $^{99m}\text{Tc}$ ) and then reinjected back into the patient. The body will then actively transport the white blood cells to the location of the infection where its spatial extent can then be imaged, thus eliminating the need for exploratory surgery to locate the infection.

### Blood Flow Imaging

In order to image blood flow through the heart under conditions of physical exertion, the patient is injected with  $^{201}\text{Tl}$  as a thallous chloride injection (Table 2); after reaching a state of stress with proper exercise, following the thallium radiation, the blood flow can be traced very accurately. Such procedures are known as myocardial perfusion studies and can also be done using  $^{99m}\text{Tc}$  compounds. The common layman term for this procedure is that of a "stress test."

### Technetium

In many cases in which radiopharmaceuticals are used, the compound used must have the biological property of attaching to a particular molecule, protein, cell, etc. This would require the ability of the radioisotope to have multiple stable oxidation states. It would also be desirable to give only a small dose (comparable to a chest x-ray) to a patient in its administration which would require rapid removal of the radioactivity from the body (typically in hours to enable imaging).

The element technetium, with a Z = 43, is the only transition metal which does not have a stable isotope. It has stable oxidation states ranging from +7 to +4 but can be combined in a +3, +1, or -1 state in special circumstances. Because of these many possible oxidation states, it can be attached to most if not all molecules, proteins, and cells or even used as a simple ionic solution ( $\text{NaTcO}_4$ ). With  $^{99}\text{Tc}$  giving off a 140 keV photon, an almost ideal energy for imaging internal radioactivity, along with a relatively short stay time in the body (approximately 6 h), only a reasonably small dose is typically required.

## Therapy

The use of radioisotopes for therapy is based on the evidence that ionizing radiation can kill tumor (cancer) cells in very large doses. Of course, radiation will kill normal cells as well. Because of this unfortunate fact, the challenge faced by the practitioners of radiation therapy is to devise radiation sources and delivery of the radiation in such a way that mostly cancerous cells are hit and killed. In any radiation therapy procedure, some normal cells are killed, but the human body has the ability to survive and replenish the cells that were eliminated.

### Brachytherapy

Radioisotopes encapsulated in small metal pellets (comparable in size to a rice grain) are surgically implanted into a tumor. Beta emitters are used because beta particles have a short range in tissue, their energy is deposited locally inside the tumor, and the radiation dose from these pellets is delivered to the tumor and not to the surrounding healthy tissue. The pellets are surgically removed after the prescribed accumulated dose.

### Teletherapy

In this technique, the radiation source is located outside the body. The most commonly used radioisotope for teletherapy is  $^{60}\text{Co}$ , although accelerators can also be used. To reduce the dose to healthy tissue outside the tumor, multiple collimators are used to customize the shape of the beam to shadow the outline of a tumor as closely

as possible. By also changing the direction of the beam while also changing its shape to match the tumors' projection, the dose to the tumor is maximized with tolerable skin and tissue dose delivered to healthy tissue. As this is generally applied only as a lifesaving measure, the small increase in cancer induction some 10 or 20 years later in the irradiated healthy tissue is considered fully acceptable (particularly if caught early and treatable).

### Pacemaker Power Source

The use of a RTG as a power source for the pacemaker in cardiac patients enabled long-term use of the item without frequent surgery to replace the battery. Follow-up analysis of their use determined that although they cost more, their benefits far outweighed this extra expense because in the long run the nuclear-powered pacemaker is the most effective device, thanks to avoidance of cost complications associated with the follow-up surgeries required to replace similar chemical-powered batteries [35].

### Applications in Homeland Security

In today's world, the danger exists for a rogue state or group, or one or more individuals to obtain nuclear materials and use them to harm a large number of people. Examples are radiological exposure devices (RED), dirty bombs (DB), or even improvised nuclear devices (IND). The most dangerous of these is that of an IND as this can easily kill tens of thousands of people if strategically placed, whereas an RED may only kill a few people under limited conditions, and a DB has only its primary harm in commercial disruption caused by panic and food embargoes. To protect our society from such acts, devices and methods must be found and established to detect nuclear materials of all physical and chemical shapes wherever they may be located. Many different techniques have been developed to detect nuclear materials at almost every point in the nuclear fuel cycle.

### Active Interrogation

Active interrogation involves exposing a material to a known and controlled radiation source to induce fissions in an item suspected of containing special nuclear material such as uranium or plutonium. The radiation may be neutrons from  $^{252}\text{Cf}$  spontaneous fission or portable accelerators. Neutrons are the most common radiation used for active interrogation. Neutrons induce fission in uranium or plutonium. From the prompt and delayed neutrons and/or gammas emitted by the induced fission, the presence of the fissile material may be detected.

Active interrogation can also involve simple radiography using  $^{60}\text{Co}$ ,  $^{192}\text{Ir}$ , or similar sources. The goal is to determine what is inside a package without opening it or in any way to potentially trigger any explosives which may be present.

### Applications in Space Activities

NASA has used multiple forms of nuclear technology for space exploration and discovery. The examples discussed in this section are for mineral analysis, propulsion, and remote power supplies.

### Spectrometry

The Mars Curiosity Rover operated by NASA has many nuclear instruments aboard. These include both an alpha particle x-ray spectrometer and an x-ray diffraction fluorescence instrument. In addition, CsI and silica detectors will be used to measure ambient background along with a neutron detector to measure reflected neutrons from the Martian soil created by cosmic rays.

The alpha particle x-ray spectrometer will expose Martian samples to alpha particles and x-rays emitted from an on-board curium radioisotope. This radiation will excite x-rays from the martial soil samples allowing chemical composition information to be obtained sufficient for geological analysis. Similar instruments were also used on previous Martian rover platforms (Pathfinder and Exploration).

The use of x-ray fluorescence takes ground samples which when exposed to x-rays will induce

sample-specific x-ray characteristic of the elements present in the crushed sample. By also evaluating the diffraction pattern given off by reflected x-rays in the sample, the crystal structure of the material can also be determined providing further insight into the geology and chemistry of the Martian samples.

### Power Supply

With regard to space exploration where scientific instruments must have electric power over very many years, the only practical source of power is a RTG. The RTG provides approximately constant electrical power output over long periods of time in deep space where solar energy is too low to make solar panels effective at supplying even minimal system power requirements.

The use of a RTG effectively enabled the New Horizons spacecraft to complete its mission to Pluto and the outer solar system. The use of RTGs by NASA began with the Systems Nuclear Auxiliary Power concept and was used in the Apollo lunar missions which were later developed into more formal systems such as that in modern designs [36]. Other missions which used RTGs included the Lincoln experimental satellites 8 and 9 along with Voyager 1 and 2 as well as Cassini.

### Closing Remarks

This article presents, briefly, the most common uses of radioisotopes. This wide-range use of radioisotopes in many human activities, such as research in science, technology, medicine, use in household items, use in industry, use in medicine for diagnosis and therapy, etc. is due to the following characteristics of radioisotopes and of ionizing radiation.

1. Radioisotopes may be tracked easily with relatively simple instruments.
2. Small amounts of material are involved with negligible environmental consequences in terms of health effects.
3. Radiation measurements have reached such a level that extremely small amounts of a substance (of a contaminant) can be determined.

4. Using radioisotopes, the constituents of an unknown sample (isotopes therefore elements) may be determined with a great degree of confidence.
5. Delivery of energy from a radiation source is reliable.

### Future Directions

Most radioisotope applications are expected to be wholly or partially replaced by methods not requiring radioactive materials due to radiophobia.

### Bibliography

1. IAEA (1963) Radioisotope applications in industry; a survey of radioisotope applications classified by industry or economic activity, with selected references to the international literature. International Atomic Energy Agency, Vienna
2. Bowen HJM (1969) Chemical applications of radioisotopes. Methuen, London
3. IAEA (1963) Symposium on the application of radioisotopes in hydrology. International Atomic Energy Agency, Vienna
4. IAEA (1963) Symposium on the use and application of radioisotopes and radiation in the control of plant and animal insect pests. International Atomic Energy Agency, Vienna
5. IAEA (1968) Panel on the application of radioisotopes in the pulp and paper industry. International Atomic Energy Agency, Vienna
6. Wasserburg GJ, Busso M, Gallino R, Nollett KM (2006) Short-lived nuclei in the early solar system: possible AGB sources. Nucl Phys A 777:5–69
7. Van Schmus WR (1995) Chapter 17: Natural radioactivity of the crust and mantle. In: Global earth physics. American Geophysical Union, Washington, DC
8. Nakanishi T, Kusakabe M, Aono T, Yamada M (2009) Simultaneous measurements of cosmogenic radionuclides  $^{32}\text{P}$ ,  $^{33}\text{P}$  and  $^{7}\text{Be}$  in dissolved and particulate forms in the upper ocean. J Radioanal Nucl Chem 278(3):769–776
9. Taricco C, Bhandari N, Colombetti P, Verma N, Vivaldo G (2007) Experimental set-up and optimization of a gamma-ray spectrometer for measurement of cosmogenic radionuclides in meteorites. Nucl Instr Meth Phys Res A 572(1):241–243
10. Aldehan A, Hedfors J, Possnert G, Kulan A, Berggren A-M, Soderstrom C (2008) Atmospheric impact on beryllium isotopes as a solar activity proxy. Geophys Res Lett 35:L21812

11. CDC (2005) Radioactive fallout from global weapons testing. US Centers for Disease Control, Atlanta
12. Parsons PA (2002) Radiation hormesis: challenging LNT theory via ecological and evolutionary considerations. *Health Phys* 82(4):513–516
13. Bhandari N, Bhattacharya SK, Somayajulu BLK (1978) Cosmogenic radioisotopes in the Dhajala chondrite: implications to variation in cosmic ray fluxes in the interplanetary space. *Earth Planet Sci Lett* 40:194–202
14. Phillips FM, Zreda MG, Smith SS, Elmore D, Kubik PW, Dorn RI, Roddy DJ (1991) Age and geomorphic history of Meteor Crater, Arizona from cosmogenic  $^{36}\text{Cl}$  and  $^{14}\text{C}$  in rock varnish. *Geochem Cosmochem Acta* 55:2695–2698
15. Giffin D, Corbett DR (2003) Evaluation of sediment dynamics in coastal systems via short-lived radioisotopes. *J Mar Sys* 42:83–96
16. Hedges REM (1979) Radioisotope clocks in archaeology. *Nature* 281:19–24. doi:10.1038/281019a0
17. McKeever SWS (1985) Thermoluminescence of solids. Cambridge University Press, New York
18. McKeever SWS (2001) Optically stimulated luminescence dosimetry. *Nucl Instr Meth B* 184:29–54
19. Regulla DF (2005) ESR spectrometry: a future-oriented tool for dosimetry and dating. *Appl Radiat Isot* 62(2):117–127
20. Yukihara EG, McKeever SWS (2011) Optically stimulated luminescence: fundamentals and applications. Wiley, New York
21. Haskell EH, Difley R, Kenner G, Hayes R, Snyder K, Gustafson D (1999) A comparison of optical stimulated luminescence dating methods applied to eolian sands from the Mohave Desert in Southern Nevada. *Quat Geochronol* 18:235–242
22. Peplow DE (1999) Fiestaware™ radiography. *Phys Teach* 37(5):316–318
23. Kamal K (2016) The best aircraft for close air support in the twenty-first century. *Air Space Power J* 30(3):39–53
24. Toepker T (1996) Thorium and yttrium in gas lantern mantles. *Am J Phys* 64:109. <http://dx.doi.org/10.1119/1.18463>
25. Schirmer A, Kersting M, Uschmann K (2016) Occupational doses from the use of thoriated optical components. *Health Phys* 111(2):106
26. Crim EM, Bradley TD (1995) Measurements of air concentrations of thorium during grinding and welding. *Health Phys* 68(5):719–722
27. Sharpe WD (1978) The New Jersey radium dial painters: a classic in occupational carcinogenesis. *Bull Hist Med* 52(4):560–570
28. Garrison WM, Maloney JL (2005) Lanthanum additions and the toughness of ultra-high strength steels and the determination of appropriate lanthanum additions. *Mater Sci Eng A* 403(1):299–310
29. Zou H, Song M, Yi F, Bian L, Liu P, Zhang S (2016) Simulated-sunlight-activated photocatalysis of Methyl Orange using carbon and lanthanum co-doped  $\text{Bi}_2\text{O}_3\text{-TiO}_2$  composite. *J Alloys Compd* 680:54–59
30. Farkas J, Mohacsi-Farkas C (2011) History and future of food irradiation. *Food Sci Technol* 22:121–126
31. Wang Q, Fu S, Yu T (1994) Emulsion polymerization. *Prog Polym Sci* 19:703–753
32. Witkowska E, Szczepaniak K, Biziuk M (2005) Some applications of neutron activation analysis: a review. *J Radioanal Nucl Chem* 265(1):141–150
33. Strobl M, Manke I, Kardjilov N, Hilger A, Dawson M, Banhart J (2009) Advances in neutron radiography and tomography. *J Phys D Appl Phys* 42(12):1–21
34. Fast LD (2012) Developments in the prevention of transfusion-associated graft-versus-host-disease. *Br J Haematol* 158(5):563–568
35. Parsonnet V, Driller J, Cook D, Rizvi SA (2006) Thirty-one years of clinical experience with “nuclear-powered” pacemakers. *Pacing Clin Electrophysiol* 29:195–200
36. O’Brien RC, Amrosi RM, Bannister NP, Howe SD, Atkinson HV (2008) Safe radioisotope thermoelectric generators and heat sources for space applications. *J Nucl Mater* 377(3):506–521



---

## Nuclear Safeguards and Proliferation of Nuclear Weapons Materials

Michael C. Baker

Los Alamos National Laboratory, Nuclear Nonproliferation Division, Advanced Nuclear Technology Group, Los Alamos, NM, USA

### Article Outline

#### Glossary

##### Definition of the Subject

Introduction: Historical Development of Nuclear Safeguards and Nonproliferation Policy

Technologies for Safeguarding Nuclear Materials

Detection of Nuclear Proliferation and Treaty

Verification

Detection and Prevention of Illicit Trafficking and Terrorism

Future Directions

Bibliography

### Glossary

**Calorimetry** Calorimetry is a nondestructive assay technique for determining the thermal power output of heat-producing nuclear materials. Calorimeter systems are used to determine the power output (Watts) of various radionuclides over a broad range of power levels and sample types (Pu, highly enriched uranium, and Tritium).

**Destructive assay** Destructive Assay (DA) aims at the measurement of the nuclear material content, the isotopic composition, or other chemical properties of a sample. The analysis introduces a significant change to the physical form of the test sample.

**Detection time** The maximum time that may elapse between diversion of a given amount of nuclear material and detection of that diversion by a safeguards authority.

**Direct-use material** Nuclear material that can be used for the manufacture of nuclear explosive devices without transmutation or further enrichment. It includes plutonium containing less than 80%  $^{238}\text{Pu}$ , highly-enriched uranium, and  $^{233}\text{U}$ .

**Diversion** The undeclared removal of nuclear material from a safeguarded facility or the use of a safeguarded facility for the production or processing of undeclared nuclear material.

**Dual-use technology** Technology that can be used for both military and peaceful purposes.

**Highly enriched uranium (HEU)** Uranium containing 20% or more of the isotope uranium-235.

**Holdup** The amount of nuclear material remaining in process equipment and facilities after the in-process material, stored materials, and product have been removed.

**Nondestructive assay** Nondestructive Assay (NDA) techniques allow analysis of a sample in its own physical/chemical form without any modification of its properties and characteristics. The most common NDA techniques applied in nuclear safeguards include gamma spectroscopy, neutron counting, and calorimetry.

**Nuclear material (NM)** Any source or special fissionable material.

**Safeguards** An integrated, layered system of physical protection, material accounting, and material control measures designed to deter, prevent, detect, and respond to unauthorized possession, use, or sabotage of nuclear materials.

**Significant quantity (SQ)** The approximate amount of nuclear material for which the possibility of manufacturing a nuclear explosive device cannot be excluded. The International Atomic Energy Agency uses 8 kg of plutonium, 25 kg of  $^{235}\text{U}$  in highly enriched uranium, and 75 kg of  $^{235}\text{U}$  in low enriched or natural uranium.

**Source material** Uranium containing the mixture of isotopes occurring in nature; uranium depleted in the isotope 235; thorium; or ore concentrate.

**Special fissionable material** Plutonium-239; uranium-233; uranium enriched in the isotopes

© This is a U.S. Government work and not under copyright protection in the US; foreign copyright protection may apply 2018 411  
N. Tsoulfanidis (ed.), *Nuclear Energy*,  
[https://doi.org/10.1007/978-1-4939-6618-9\\_24](https://doi.org/10.1007/978-1-4939-6618-9_24)

235 or 233; and any material containing one or more of the foregoing; and such other fissionable material as the International Atomic Energy Agency Board of Governors shall from time to time determine; but the term “special fissionable material” does not include source material.

**Special nuclear material (SNM)** Plutonium, uranium-233, uranium enriched in the isotope 235, and any other material which, pursuant to Section 51 of the United States Atomic Energy Act of 1954, as amended, has been determined to be special nuclear material, but does not include source material; it also includes any material artificially enriched by any of the foregoing, not including source material.

## Definition of the Subject

Nuclear technology, by its very nature, may be used for peaceful or harmful ends. From its birth, efforts have existed to control access to, as well as the spread of, nuclear technology for destructive purposes, while at the same time attempting to provide access to its multitude of beneficial applications. Nuclear safeguards refers to the system of legal, institutional, and technical mechanisms used to control the use of nuclear materials, detect nuclear material misuse, and if the material is misused, to provide domestic and international responses in a timely fashion. Proliferation refers to the spread of weapons usable or direct-use materials, nuclear weapons technology, and the knowledge and skills necessary for the design and manufacture of such weapons. Nonproliferation policy and technology, including nuclear safeguards, has traditionally been centered on the spread between nation states. In the past decades that focus has broadened to include the spread of materials, technology, and knowledge to criminal and terrorist entities. Nuclear safeguards must be viewed as a multilayered system, no single layer being self-sufficient, which as a whole, provides deterrence, detection, and response to theft, diversion, or misuse of nuclear material and nuclear weapons knowledge and skills.

## Introduction: Historical Development of Nuclear Safeguards and Nonproliferation Policy

Before the end of World War II, diplomats and scientists familiar with nuclear weapons technology and its early development during the war were struggling with how to control the technology while sharing its benefits. Early efforts were largely focused on international control and the development of an international authority for management of the control regime and nuclear materials. In June 1946, following the formation of the United Nations Atomic Energy Commission (UNAEC) in January, the US representative, Bernard Baruch, proposed a plan for such an international control regime. The Soviet Union and other countries opposed the significant transfer of state authority to an international body, as would be required, and the Baruch plan quickly came to pass. However, it did provide the conceptual framework and foundation for subsequent discussions between nation states.

By mid 1953, three nations (USA, United Kingdom, and Soviet Union) had conducted nuclear tests, Dwight Eisenhower had been elected President of the USA, and Joseph Stalin had died. These events set the stage for President Eisenhower’s address to the United Nations on December 8, 1953. This address outlined the President’s Atoms for Peace initiative, which included the creation of an international agency responsible for the peaceful expansion of nuclear technology and the control of nuclear materials that in accordance with the President’s plan would be contributed by nation states. The President’s initiative also called for states receiving assistance with the peaceful application of nuclear technology to allow inspections that would ensure that the technology and materials were not used for military purposes. The President’s speech was the genesis of the International Atomic Energy Agency (IAEA).

In 1956, 81 nations unanimously approved the charter of the IAEA. At the same time, international cooperation related to the peaceful application of nuclear technology was rapidly expanding. By the end of 1959, the USA had cooperative bilateral agreements with 42 countries for collaborative

nuclear technology development. Within the next decade, the Soviet Union would have similar agreements with another 26 countries. In most cases, both the USA and Soviet Union included at least a minimal acknowledgement of the dual-use capabilities of the nuclear technologies to be shared. The Soviet cooperative agreements typically required the return of spent nuclear fuel to the Soviet Union as a nuclear material control measure, as well as a pledge to use the material only for peaceful purposes. Most of the US agreements foresaw the need for nuclear safeguards to be applied by the USA that would eventually be turned over to the IAEA. The safeguards experience gained as a result of these bilateral agreements, as well as that obtained following the establishment of Euratom safeguards by the European community in 1957, provided a useful experience base and context for the establishment of specific IAEA safeguards agreements and protocols. In 1959, IAEA safeguards were applied for the first time at the Japanese JRR-3 research reactor running on natural uranium fuel from Canada [1].

The political history of the early 1960s included France and China joining the club of countries that had conducted nuclear tests and the Cuban Missile Crisis in 1962. This later event, one of the major confrontations of the Cold War, is the closest the world has come to a nuclear war. During the crisis, US Armed Forces were at their highest state of readiness and Soviet commanders were prepared to use nuclear weapons to defend Cuba against an invasion [2]. As a result, both superpowers came to the realization that greater cooperation on nuclear arms and nuclear safeguards were necessary for their mutual national security and that of their allies. This recognition and associated efforts to seek common ground were also seen in other countries. For example, in 1967, the Treaty for the Prohibition of Nuclear Weapons in Latin America was signed. By 1968, negotiations regarding the Treaty on the Non-Proliferation of Nuclear Weapons (NPT) were well underway. Although the idea of such a treaty had been proposed 10 years earlier by Ireland, the NPT was not opened for signature until 1970. This marked a major milestone in the evolution of

nonproliferation policy and nuclear safeguards. One of the significant requirements that resulted from the NPT is that nonnuclear weapons states place all of their peaceful nuclear programs under IAEA safeguards. As of 2007, the NPT had been ratified by 189 nations.

After the NPT had established a legal framework for international safeguards in 1970, the next 20 years saw the rapid development of both destructive and nondestructive measurement technology in support of nuclear safeguards, as well as the continued development of procedures and protocols used for international inspections. Formal training programs were established in multiple countries, as well as by the IAEA, to train and develop a cadre of professional safeguards inspectors. Some would argue that safeguards programs, personnel, and international policy had reached a state of maturity by the mid-1980s. However, in 1991, the international community was shocked with the revelation of a clandestine nuclear weapons program in Iraq. This program had developed under the noses of international inspectors that had been reviewing the declared activities in Iraq but were unaware of the clandestine program.

The international community responded with a reevaluation of safeguards and nonproliferation policy that included an acknowledgment of the need for IAEA safeguards to be significantly strengthened. Specifically, the IAEA needed the capability to detect undeclared nuclear activities in countries that were parties to the NPT. In 1997, the IAEA Board of Governors approved the “Additional Protocol” which allows for the use of environmental sampling to detect clandestine activities, earlier provision of design information on nuclear facilities to the IAEA, complementary access to additional locations within a country, and a broader use of open source, satellite imagery, and third-party information to assess nonproliferation performance in a particular nation. As of 2009, implementation of the Additional Protocol was complete or at a minimum underway in countries with significant nuclear programs.

Until the terror attacks on September 11, 2001, the diversion of nuclear material for a nation state’s weapon program was the primary threat that nuclear safeguards programs were designed

to mitigate and international policy experts had been focused. Those attacks demonstrated a higher level of sophistication than previously expected and brought the realization to international security professionals that nuclear terrorism sponsored by substate actors must also be considered as a significant threat to be addressed by nuclear security programs. In the last decade, the proliferation of nuclear materials and nuclear weapons to substate groups has replaced a potential nuclear confrontation between dominant superpowers as the preeminent global security concern. This has shifted emphasis in the nuclear security community to border monitoring, event attribution, and consequence management. In 2009, with the election of a new President in the USA, focus of international security policy and programs is returning to the threat from nations with large nuclear arsenals; however, it is certain that the terrorist threat will remain a greater concern than it was before 2001. Significant events that impacted the development of international nonproliferation and safeguards policy are shown in Table 1.

## Technologies for Safeguarding Nuclear Materials

To properly secure nuclear materials, a state must know how much material it possesses and where it is located. This baseline is used to plan protection strategies, which mitigate the risks from both insider and outsider threats. The fundamental system that both provides this baseline information and allows the tracking and maintenance of the information as it changes over time is the nuclear material accounting system. To be effective, this system must be supported by a nuclear material measurement program, which provides accurate and precise information on the material being protected.

Nuclear material accounting and nuclear material measurements must be closely coupled with a physical protection system that ensures that access to the material is controlled and the materials stay in their intended locations. The physical protection system consists of people, procedures, and

**Nuclear Safeguards and Proliferation of Nuclear Weapons Materials, Table 1** Influential events in the development of international safeguards and nonproliferation policy

Date	Event
1945	USA's first nuclear test at the Trinity Site
	Nuclear bombing of Hiroshima and Nagasaki
1946	Formation of the United Nations Atomic Energy Commission (UNAEC)
	Baruch Plan presented
1949	Soviet nuclear test
	UNAEC dissolves
1952	United Kingdom nuclear test
1953	President Eisenhower presents Atoms for Peace
1955	USA and Turkey conclude the first "Atoms for Peace" cooperative agreement for the peaceful uses of nuclear energy
1956	International Atomic Energy Agency (IAEA) charter is approved
1957	European Atomic Energy Community (Euratom) is established
1959	First application of IAEA safeguards
1960	French nuclear test
1962	Cuban Missile Crisis
1964	Chinese nuclear test
1967	Treaty for the Prohibition of Nuclear Weapons in Latin America established
1968	Treaty for the Non-Proliferation of Nuclear Weapons (NPT) established
1974	Indian nuclear test
1979	Three Mile Island nuclear accident
1986	Chernobyl nuclear accident
1991	Iraqi clandestine nuclear weapons program discovered
1995	NPT is made permanent
1997	IAEA approves the Additional Protocol
1998	Pakistan's nuclear test
2001	September 11, 2001 terrorist attacks in the USA
2003	Disclosure of the A. Q. Kahn clandestine nuclear trade network
2006	North Korean nuclear test

technology, which are designed and implemented following a careful evaluation of system vulnerabilities against predicted threats. Each facility is unique; therefore, a systematic planning effort is required to manage risks appropriately.

## Nuclear Material Accounting

Nuclear material accounting is not that different from managing inventory for a complicated

manufacturing and warehouse operation or the accounting involved in today's banking systems. Matter of fact, initial nuclear materials accounting developed from procedures and tools, which had been developed for financial and materials management. Today, nuclear material accounting is defined as the use of statistical and accounting measures to maintain knowledge of the quantities of SNM present in each area of a facility. It includes the use of physical inventories and material balances to verify the presence of material or to detect the loss of material after it occurs.

The quality of nuclear material accounting data and therefore the quality of the entire safeguards system is dependent on

- A measurement system that provides accurate, repeatable data on nuclear material quantities involved in both storage and internal or external transfers;
- Operating records that document nuclear material movements, locations, item identities, item histories, and links to the measurement data; and
- Accounting control procedures that include frequent cross-checking of data to detect inconsistencies, which may be indications of human error, unidentified measurement errors, or an attempt to divert or steal material.

The accounting system may divide a facility or process into sections, which are frequently called material balance areas (MBA) for monitoring and tracking of nuclear material (NM). Measurement, storage, and transfer records are maintained for each MBA. The choice of MBA boundaries will impact detection probabilities and should be carefully considered. The MBA will include defined key measurement points (KMPs), where NM is in a form that can be measured to determine material flow or inventory. KMPs include, but are not limited to, all of the inputs and outputs to the MBA. Selection of appropriate KMPs is a fundamental requirement for timely detection of diversion or theft attempts. Ideally these KMPs would be identified during facility or process design to optimize their effectiveness while minimizing the impact on operational efficiency.

One of the primary goals of an accounting system is to monitor the inventory difference (ID) or material unaccounted for (MUF) within a facility or a specific area within a facility, such as an MBA, over a given period of time. The period of time used is typically the time between physical inventories of SNM within the facility, usually 1 or 2 months. The ID for SNM over this time period of interest, represented by  $t$ , is defined as:

$$ID_t = BI_t + R_t - EI_t - S_t \quad (1)$$

where  $BI$  is the beginning inventory of SNM,  $R$  is receipts of SNM during the inventory period,  $EI$  is the ending physical inventory of SNM, and  $S$  is shipments out of SNM during the inventory period. Note that all terms may have multiple individual components and include some uncertainty due to measurement and sampling errors. IDs are charted as a function of time and monitored for trends that may indicate a loss of nuclear material. If the safeguards practitioner understands the uncertainties in the components of each of the inputs to Eq. 1, the practitioner may propagate these uncertainties to determine the variance of the ID,  $\sigma_{ID}$ . The monthly ID may then be compared to statistical limits to determine whether or not an indicator of theft or diversion may exist. An ID in excess of a significant quantity (SQ) indicates an abrupt loss of NM. Trends including systematic, smaller losses of NM over a period of time indicate a protracted loss of material. In some cases, protracted losses may be referred to as a trickle diversion.

A common performance measure for an accounting program is the magnitude of the ID variance,  $\sigma_{ID}$ . IDs must be maintained at a level sufficiently small to detect abrupt diversions, while a sequential test or alternative statistical test for trend detection may be used to detect both abrupt and protracted diversions [3–6]. Specific statistical tests are well documented in the literature and beyond the scope of this section. Safeguards practitioners must understand several issues that complicate the evaluation of IDs, including (1) the impact of holdup on  $\sigma_{ID}$ ; (2) serial correlation in successive IDs; (3) poorly characterized measurement quality and its impact

on estimates of  $\sigma_{ID}$ ; and (4) time delays in the measurement results that are input components to the terms in Eq. 1. Without a detailed understanding of these effects, the practitioner will not be sensitive to the subtle variations and trends, the impact of nuclear process changes, or the impact of safeguards policy changes.

### Nuclear Material Measurement Technology

The accurate quantification of nuclear material is essential to nuclear safeguards and as noted previously, the minimization of precision and bias in these measurements of NM is vital to the system's ability to detect abrupt and protracted diversion attempts. Measurement of NM is typically accomplished by either destructive wet chemistry techniques or nondestructive measurement of radiation or heat output. Nuclear material is found in multiple chemical forms, a wide range of quantities, and a variety of packaging configurations. Each of these variables introduces uncertainty into measurement results that must be carefully managed and considered when determining whether or not nuclear material is present and accounted for appropriately without evidence of diversion, theft, or misuse.

#### Destructive Analysis

Analytical chemistry typically provides the most accurate techniques for the quantification of pure metals and compounds of safeguards interest. These techniques require the destruction of a small sample of the nuclear material item, which must be homogenous to prevent the introduction of significant uncertainties from a sample that is not representative of the bulk item. The nature of these destructive analysis (DA) techniques requires ready access to the material to be analyzed. Finished material, such as a fuel rod, is not a candidate for DA for this reason. Some of the more common techniques, which are described below, are gravimetry, titrimetry, and mass spectrometry [7, 8].

Mass spectrometry is a mature technology used for the determination of the isotopic composition of nuclear material samples. Samples to be analyzed in a thermal ionization mass spectrometer (TIMS) are deposited on a filament that is then

inserted into the spectrometer and slowly heated by an electrical current. This results in ions of the sample "boiling off" after which they are accelerated by an electric field through a magnetic field, which is orthogonal to their trajectory. This results in a deflection of the ions, the magnitude of which is a function of the weight of the ion. Following the deflection, ions are collected at positions of interest that allow the analyst to infer the isotopic mass of each ion. The precision of this technique for the analysis of plutonium or uranium isotopes is better than 0.05% [7, 8]. Gas mass spectrometers and Isotope Dilution Mass Spectrometers (IDMS) are also in use and in many cases may lead to even better precision than TIMS.

Plutonium or Uranium can be burned to  $PuO_2$  and  $U_3O_8$ , respectively, and then accurately weighed. This technique, called gravimetry, can be performed in the laboratory with random and systematic errors of less than 0.05% [7, 8]. Non-volatile impurities must be accurately determined and the gravimetric results then corrected accordingly.

Titration procedures are used to assay the amount of uranium or plutonium in solution through the careful addition of a reagent that reacts with the nuclear material. The measured amount of reagent to produce a particular endpoint is then related to the amount of NM. A typical endpoint is detected by a color change or electrical response of the solution. One of the most common techniques in use by the IAEA and other laboratories is the Davies-Gray method [7]. The precision for these techniques can be as good as 0.02% for uranium and 0.04% for plutonium [7, 8].

DA techniques in use by the IAEA's Safeguards Analytical Laboratory (SAL) and its network of approved analytical laboratories are summarized in Table 2. In addition to requiring access to the material and destruction of a sample, DA techniques, in general, are more costly and time consuming than nondestructive techniques.

#### Nondestructive Assay

Many nuclear materials that one may encounter, such as a fuel assembly or a radioisotopic heat source, are technologically complex and have high economic value. Nevertheless, to adequately

**Nuclear Safeguards and Proliferation of Nuclear Weapons Materials, Table 2** IAEA destructive analysis techniques [7]

Technique	NM	Material type	Random error (%)	Systematic error (%)
Davies-Gray	U	U, MOX	0.05	0.05
MacDonald-Savage	Pu	Pu materials	0.1	0.1
Controlled Potential Coulometry	Pu	Pure Pu	0.1	0.1
Ignition Gravimetry	U, Pu	Oxides	0.05	0.05
K X-ray Flourescence	Pu	Pu materials	0.2	0.2
Isotope Dilution Mass Spectrometry (IDMS)	U, Pu	Pu, MOX, spent fuel	0.1	0.1
Pu(IV) Spectrophotometry	Pu	Pu, MOX	0.2	0.2
Alpha Spectrophotometry	Np, Am, Cm	Spent fuel	5.0	5.0
Thermal Ionization Mass Spectrometry (TIMS)	U, Pu	Pure U, Pu	0.05	0.05


track and account for these materials, they must be quantified accurately. This necessitates the use of methods that do not alter their physical form or integrity of the item. Nondestructive assay (NDA) techniques can provide the necessary information, and although the precision and accuracy is generally poorer than DA, NDA is usually less expensive and can be performed within quicker time periods. DA and NDA should be viewed as complimentary techniques that are both necessary for a quality safeguards measurement program.

Most NDA techniques measure spontaneous or stimulated radiation or heat generated as a result of the radioactive decay process. Passive NDA methods measure radiation that is spontaneously emitted, while active techniques measure radiation that is stimulated by external neutron or gamma ray irradiation. Of the principal radiations, alpha and beta particles do not penetrate bulk material sufficiently to be of use to the NDA professional. On the other hand, x-rays, gamma rays, and neutrons are all electrically neutral, penetrate bulk materials, and are regularly used for NDA applied to nuclear safeguards.

Gamma rays and x-rays are photons with energies above that of the visible light spectrum. X-rays are emitted as result of changes in the electronic structure of the atom, while gamma rays are emitted when there is a change in the state of the nucleus. In commonly assayed nuclear

materials, x-rays in the energy range 80–120 keV or gamma rays from 60–2,600 keV may be used for quantitative measurements. Since every isotope emits radiations at very precise energies and at well-characterized intensities, it provides a signature that is unique to that specific isotope and related to the amount of material present.

One of the most common NDA measurements is to determine the isotopic composition of plutonium or uranium by measuring the intensity of specific gamma rays produced by one isotope of interest relative to those from other isotopes present in the sample. For example, Fig. 1 shows spectra from two types of plutonium. If the spectra are carefully examined, one can see that the characteristics of each spectrum are highly dependent on the isotopic composition of the plutonium. Common instruments for the measurement of gamma ray spectra are scintillators, such as NaI, or semiconductors, such as high-purity germanium. Scintillators are materials that produce optical light pulses when the detector material interacts with a gamma-ray photon. The production of light is proportional to energy deposited in the detector material by the interacting gamma ray. Alternatively, when a gamma photon interacts with a semiconductor (solid-state) material, it creates electron–hole pairs in proportion to the deposited energy. The characteristics of commonly used detector materials are delineated in

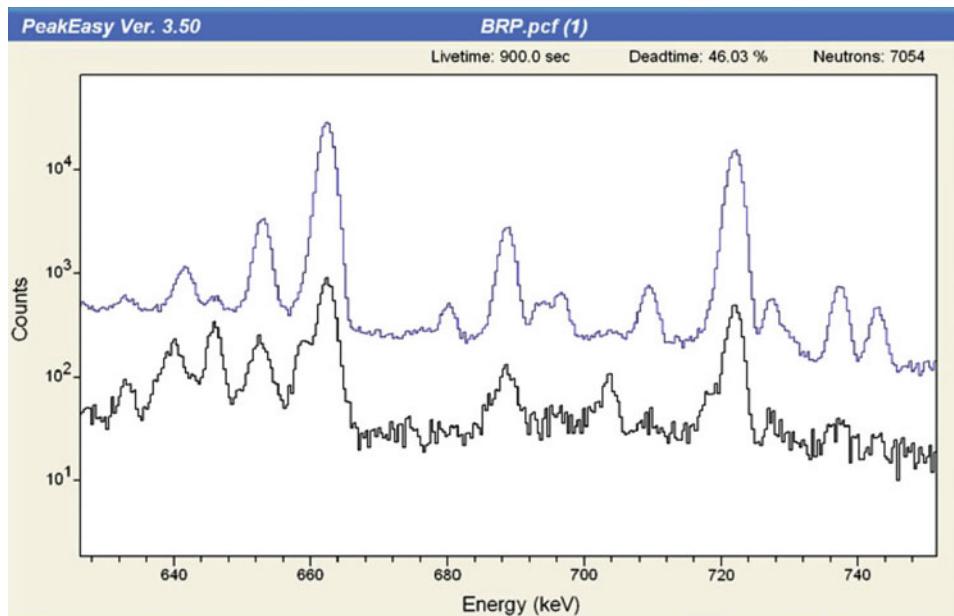

**Nuclear Safeguards and Proliferation of Nuclear Weapons Materials, Fig. 1** Simulated High-Purity Germanium spectra for weapons-grade and reactor-grade plutonium (Garner S, 2009, personal communication)

**Nuclear Safeguards and Proliferation of Nuclear Weapons Materials, Table 3** Commonly used gamma detector materials [9]

Material	Type	Average Z	Density (g/cm <sup>3</sup> )	Resolution % FWHM @ 662 keV	Resolution % FWHM @ 122 keV
Bi <sub>4</sub> Ge <sub>3</sub> O <sub>12</sub> (BGO)	Scintillator	28	7.1	12	28
NaI:Tl	Scintillator	32	3.7	7	13
LaCl <sub>3</sub> :Ce	Scintillator	28	3.9	3.3	8
LaBr <sub>3</sub> :Ce	Scintillator	41	5.3	2.8	7
Xe	Gas	54	0.4–0.5	2	7
CdZnTe	Solid-state	49	6.0	3.2	6.3
CdTe	Solid-state	49	6.1	0.6	1.5
Ge (thick planar)	Solid-state	32	5.3	0.2	0.4

Table 3. Resolution describes how well a given spectrometer can distinguish one gamma ray from another as a function of energy.

Under some conditions, the measurement of gamma rays may be used to determine the mass of NM present. Most nuclear materials have high atomic numbers and densities and therefore readily scatter and absorb their own radioactive emissions. By measuring the transmission of known gamma-ray intensities at one or more energies, the

NDA professional may calculate correction factors to account for the scatter and absorption in the item. It is common practice to use the 413.7 keV gamma ray from plutonium or the 185.7 keV gamma ray from uranium for mass measurements. It should be noted that the self-attenuation factor for plutonium is smaller than that for uranium, since the plutonium gamma ray of interest has a higher energy. This means that self-attenuation corrections for mass measurements of plutonium

items are generally smaller than those required for uranium items.

Since many items to be assayed may have the nuclear material dispersed nonuniformly in a matrix that may also be nonuniform, systems that make attenuation correction frequently have to divide the measured item up into a number of elements that are measured individually and have attenuation correction factors determined for each individual element. Early systems used a technique called Segmented Gamma Scanning (SGS) [10]. The SGS measured the item as a series of horizontal slices; each slice was characterized individually and then summed to arrive at an overall result. With the powerful computers that became economically available in the early 1990s, a tomographic gamma scanner (TGS) was developed that divides an item up into a large number of volume elements [11]. The techniques used to calculate the absorption-corrected mass of nuclear material following the TGS measurement are similar to those used in computed tomography for medical applications. The accuracy of assay results for low-density matrices, such as combustible waste, is as good as 2–3% but may be as high as 15–18% for higher-density matrices, such as sludge.

Like gamma rays, neutrons are electrically neutral, but they penetrate high-Z, high-density materials further than a gamma ray of the same energy. Therefore, the measurement of neutrons for the assay of special nuclear material is advantageous for large items and items in high-density matrices. At this point in time, neutron detectors in use around the world do little to distinguish one neutron from another of a different energy. However, neutron intensity and the time correlation of multiple neutron detections provide information that can be used to determine the amount of nuclear material present in a sample if the isotopic composition of the sample is already known. Most nuclear material assay applications in use today using neutrons measure coincident neutrons that result from induced or spontaneous fission.

Most neutron detectors use  $^3\text{He}$  gas proportional counters embedded in polyethylene. The  $^3\text{He}$  has a large cross section (probability) for capturing thermal neutrons. The polyethylene

acts as a moderator to slow down the neutrons, produced by fission or  $(\alpha, n)$  reactions, to thermal energies where they have a higher probability of interaction with the  $^3\text{He}$  gas. The capture interaction then results in the release of a triton and proton that share 765 keV of energy, which then ionize the gas and create an associated electronic pulse that can be measured. Passive detector systems developed using this basic technique have been installed in nuclear facilities for nuclear safeguards of plutonium that have demonstrated precisions of better than 2% [8, 12]. Plutonium measurement is the primary application of passive neutron counting since plutonium has a high rate of spontaneous fission from the decay of its even-numbered isotopes. Counters using higher-order coincident neutrons from fission have also been developed and are in widespread use [13, 14]. Such multiplicity counters are advantageous for the measurement of impure plutonium-bearing items [15]. In general, the precision and accuracy of the measurements using multiplicity counting can be as good as 1–3% [8].

Uranium, due to its long radioactive decay half-lives, emits very few neutrons from spontaneous fission or  $(\alpha, n)$  reactions, unlike plutonium. Therefore, effective assay of uranium via neutron measurement requires that the fission rate in the item be externally enhanced. By placing an external neutron source near the item, fissions will be induced in the sample. If the external source used to interrogate the sample produces uncorrelated neutrons, such as those from an AmLi source, they can be distinguished from those produced by the induced fissions in the sample, since these later neutrons will be correlated in time. Alternatively, one can use an external fission source, such as a small  $^{252}\text{Cf}$  source, that can be moved away from the sample after inducing fissions or can be turned off, such as a small accelerator. In these later two cases, the measurement of neutrons from the induced fissions is then conducted after the external source is no longer present.

The Active Well Coincidence Counter (AWCC), which is in common use around the world, uses AmLi sources to induce fissions in a uranium sample [16]. Its precision and accuracy have been reported to be better than 5% for the

measurement of uranium [8]. Another advantage of using AmLi sources is that it produces neutrons with a mean energy of 0.5 MeV, which is below the fission threshold of  $^{238}\text{U}$ . This allows the effective assay of  $^{235}\text{U}$  in a sample of uncertain enrichment.

The Californium Shuffler is an example of an instrument that rapidly moves a spontaneous fission source away from a sample to allow subsequent measurement of the induced fissions [17, 18]. This instrument measures the delayed neutrons from fission. Approximately 1.6% of neutrons from fission reactions are produced a few seconds to minutes after the fission. For materials that are well represented with appropriate calibration standards, the shuffler technique has been reported to accuracy as good as 1–2%.

The differential die-away technique (DDT) was developed to use a pulsed accelerator producing 14 MeV neutrons as the external source. This technique has been successfully applied to the assay of both uranium- and plutonium-bearing wastes [19–21]. The combined thermal epithermal neutron (CTEN) method is similar to the DDT method but interrogates the sample with both thermal and epithermal neutrons [22]. This is achieved partly by the addition of  $^4\text{He}$  detectors, which have a faster response than the  $^3\text{He}$  detectors and can detect fast fission neutrons in the presence of the epithermal interrogating flux.  $^4\text{He}$  detectors rely on the recoil of light nuclei to ionize the gas in the detector tube, which is dependent on the elastic scattering cross section. Because epithermal neutrons are more penetrating in fissile material than thermal neutrons, the differential response can be analyzed to detect the occurrence of self-shielding by fissile material and measure the size of the effect. Self-shielding occurs when discrete lumps of fissile material are present and can result in assay errors of several hundred percent. The DDT and CTEN methods have been applied to the measurement of SNM in waste containers and for the detection of the potentially smuggled SNM in packages [23].

Many nuclear materials, including plutonium and to some extent uranium, emit heat produced

as a result of alpha particle absorption in the sample following radioactive decay. Plutonium produces 2–12 W of heat for each kilogram of material in the sample depending on the specific isotopic composition of the plutonium. Radiometric calorimeters measure the heat output of nuclear materials [24]. This method has seen wide application to plutonium and tritium samples, as well as large (kilogram) quantities of uranium and neptunium [25, 26]. Calorimetry is generally considered the most accurate and precise NDA technique for plutonium measurement since it is not subject to many of the biases that effect both gamma-ray and neutron measurements. Accuracy and precisions better than 1% are generally reported in the literature [27]. As is required for neutron-based NDA, the calorimetry data must be combined with isotopic data from gamma-ray or mass spectroscopy to obtain the total amount of plutonium in a specific item. Although calorimeters are the most accurate technique, it usually requires long measurement times (typically 4–8 h) and is not generally portable. These disadvantages make the application of calorimeters to international safeguards and inspection efforts very limited.

## Detection of Nuclear Proliferation and Treaty Verification

There is a well-established historical record of states pursuing nuclear weapon development, even after accepting international obligations through treaties not to develop weapons. In recent years, those countries have included Iraq, Libya, and North Korea. It is likely that such trends will continue in the future. This necessitates that the international community have the capability to detect, deter, and even dismantle undeclared nuclear capabilities. It should be noted that Libya agreed to abide by the NPT in 2003 and following negotiations with the USA and Great Britain, the USA airlifted out of Libya components of the abandoned nuclear weapons program in 2004.

## Open Source Information and Satellite Imagery

The analysis of open source information and commercial satellite imagery are two methods currently in use by the IAEA and state intelligence assets. Open sources of information include such things as publically available data, media reports, published scientific literature, business reports, information on technical conferences and meetings, and patent applications. Open sources of information are numerous and continuously changing. Each type of information must be assessed in relationship to the others in an attempt to establish an integrated picture of a state's legal nuclear programs, undeclared activity, and potential to breakout and quickly establish a nuclear weapons capability. The open source analyst, which should have a broad technical background, must understand the potential quality pitfalls from the large volume of data available and then formulate useful search, query, and analysis strategies. This type of analysis requires sustained efforts over time, personnel with excellent research skills, and teams with multidisciplinary backgrounds [28].

Another open source is commercial satellite imagery, which has recently become available for anyone with modest computer access to view, identify, and monitor facilities that may be used in a nuclear weapons program. Commercial satellite images have been available since the 1970s, although at that time resolution was as poor as 80 m. Today, commercial images with resolution better than 0.5 m are becoming widely available for panchromatic data [29, 30]. Commercial satellites typically acquire images in the visible and/or near-infrared parts of the electromagnetic spectrum. Multispectral satellites, which collect data from more than one electromagnetic band, generally have poorer resolution ( $\sim 2.5$  m) than those collecting panchromatic data (black and white). An image that results from the fusion of the multispectral data and a panchromatic overlay is generally the best for facility and infrastructure analysis.

Imagery analysis is the process of identifying, analyzing, and attaching significance to the image data. An analyst's effectiveness requires

- Size – an ability to assess true and relative size of the objects being imaged
- Shape – an ability to determine physical characteristics
- Shadows – an ability to use the sun angle and orientation on the imaged objects
- Shade – an ability to use tonal brightness and contrast of objects of interest
- Surroundings – an ability to use context and setting of the objects including topographic and geographic information
- Signatures – an ability to use cultural or manmade features to help separate objects from their surroundings and to uniquely identify them
- Time – an ability to monitor temporal changes to provide insight on functionality, operating histories, or facility changes [31]

These techniques have been used multiple times in the detection and monitoring of clandestine nuclear activities. They are complementary to direct access inspections, open source analysis, and traditional nuclear safeguards (nuclear material accounting and measurements) in the detection and deterrence of nuclear weapons development.

## Seismic and Hydroacoustic Monitoring

As a nation tries to develop new nuclear weapons, whether or not it already possesses one or more earlier generation nuclear weapons, they are likely to test new designs. It is probable that such tests would be conducted underground to both contain the fission products and conceal the exact nature of the test from other countries. Hence, seismic monitoring is an important tool in the nonproliferation regime [32]. Monitoring requires the detection of the signal, separation of the signal from background and natural events (earthquake vs. explosion), as well as estimating the location and size of the event. There are more than 200,000

seismic events that are similar in magnitude to a small nuclear explosion every year. These events are either earthquakes or chemical explosions associated with peaceful applications, such as mining.

The energy released by a sudden movement of the earth's crust produces two types of elastic body-waves. The first to arrive at a monitoring station are the high velocity P-waves, which move in a direction parallel to the direction of the wave energy. S-waves move as transverse waves with motion perpendicular to the direction of wave propagation and arrive at the monitoring station at a later time relative to the P-wave. An explosion produces little S-wave energy relative to that produced by an earthquake. Therefore, the shape of the wave recorded by a monitoring station can be used to distinguish between an explosion and earthquake. The Comprehensive Test Ban Treaty, which was opened for signature in 1996, specifies a minimum detection level for explosions of 1 kt. This level, which is currently exceeded by international monitoring capabilities, corresponds to a seismic event of approximately 4.0 on the Richter scale. At some locations around the globe, monitoring capability is better than 2.5 on the Richter scale. How this relates to the size of a nuclear explosion is dependent on the geology between the event and the monitoring stations [33, 34].

Since more than 65% of the earth's surface is water, it is also important to monitor for explosive events in the world's oceans. Underwater explosions produce extremely powerful broadband acoustic signals. A sensitive hydrophone either suspended from a moored buoy or anchored to the ocean floor can be used to monitor low frequencies (1–100 Hz). Such low-frequency monitoring is optimal for detecting explosions over long distances. Today's hydrophones can detect signals more than 15,000 km from their source. The waveform detected can be used to differentiate explosions from underwater earthquakes or volcanoes.

### Environmental Surveillance and Monitoring

Another tool that can be used to monitor treaty compliance or breakout activity by a proliferant is the surveillance of radionuclides present in the environment [35]. The fission products produced

by nuclear fission and their isotopic ratios are an unambiguous and well-characterized indicator. However, unlike seismic or acoustic monitoring, it is not done in real time. Atmospheric and underwater explosions release particles carrying radionuclides as well as noble gases, while underground explosions release noble gases. In either case, the nuclides are then transported by air or water to monitoring stations. At that point in time, which may be several days or even weeks following the event, the analysis of the sample can confirm the nuclear event but not pinpoint the location. Combining seismic and acoustic monitoring with the atmospheric surveillance, with meteorological data, can provide definitive evidence of a nuclear explosion and its location.

Most of the energy of a nuclear explosion is transformed into the immediate blast or the radiation released during the blast. Approximately 10% of the energy is released as residual radiation, which is emitted over time, through the decay of fission products generated during the nuclear blast. Fission products are produced in both gaseous and particulate form and most are radioactive. Following an atmospheric explosion, solid fission products attach to dust particles, which may then be propagated by winds over significant distances. Underwater explosions also release particles into the atmosphere. Underground explosions may be conducted in such a way that particles carrying radionuclides are contained. However, some fission products, particularly xenon, are noble gases that are much more difficult to contain and can be collected and analyzed by monitoring stations thousands of kilometers from the explosion site [36].

A radionuclide particulate monitoring station contains air sampler and detection equipment. At the air sampler, air is forced through a filter, which typically retains 85% or more of all particles that reach it. The used filter is usually first cooled for a period of 24 h and then measured for another 24 h in the detection device at the monitoring station. The result is a gamma ray spectrum that the analyst can use to identify specific radionuclides. The analyst can use the spectrum to determine characteristics of the device tested and the nuclear material used in the device.

## Detection and Prevention of Illicit Trafficking and Terrorism

Since the attacks in the USA on September 11, 2001, terrorism's threat against a country's national security has come under increased scrutiny. Although few terrorist organizations will implement acts of such devastation, it is considered by many experts that nuclear terrorism cannot be ruled out, and, because the devastation of a nuclear attack would be unmatched, the risks must be mitigated regardless of the low probability [37–39]. To mitigate these risks, one may increase security at the storage locations (strengthen nuclear safeguards), dispose of the nuclear materials in such a way that they are unavailable to the terrorists, strengthen methods to detect their misuse and transport once they have fallen into the wrong hands, and also develop methods through which illegal activity may be attributed to a particular national or subnational group.

Rigorous nuclear safeguards, which have been described previously, are only one layer in a defensive system against the use of nuclear materials by a subnational or terrorist organization. In addition to nuclear safeguards, the other layers of mature protection system would include monitoring of nuclear material in transit, robust intelligence collection and analysis, consequence management, and a vigorous response capability to a nuclear emergency or event to mitigate it prior to a detonation. Each of these layers relies on, at least in part, the ability to detect and characterize nuclear or radiological materials at various points in their life cycle.

Nuclear smuggling is difficult to stop due to the small size of the materials required by the terrorist to make a nuclear bomb; the weak radiation many of these materials emit; the large number of smuggling routes; the large amount of legitimate traffic crossing these borders every year; and the existence of established smuggling networks for other contraband, such as illegal drugs. A recent analysis of 174 illicit radiological material trafficking incidents that have occurred since 1991 found little evidence of clear trends that can be used by nuclear security personnel [40]. It did note that the incidents involved a variety of radionuclides; however,

approximately 60% of the cases involved Cesium-137, which happens to be an attractive isotope for radiological dispersal devices.

## Border and Port Monitoring

Studies of illicit trafficking of nuclear and radiological materials have indicated that whether by auto, bus, train, or air, smugglers have consistently used transportation methods and routes that were most convenient to them, maintaining a close physical proximity to the materials [41]. During the past decade, one of the areas that have received international emphasis for this very reason is the improvement of border and port detection capability and protocols.

In the USA, one such effort is the Second Line of Defense program at the Department of Energy's National Nuclear Security Administration. This program seeks to interdict illicit trafficking of nuclear and radiological material through airports, seaports, and border crossings in Russia and other key transit states. This is to be accomplished by helping other nations install and use radiation detection equipment at these sites and by providing associated training and support. It is worth investing in improved border detection systems, but this line of defense will inevitably be porous, and one should not place undue reliance on it.

Fixed portal monitors have been installed at land, sea, and air facilities with the goal of detecting smuggled radioactive materials. Typically, these detectors use passive gamma measurement, which in its simplest and least expensive configuration utilizes gross gamma counting with little discrimination of the gamma-ray energy. Plastic scintillators are the most common detector material for this application and are inexpensively available in large sizes. Pedestrians, vehicles, or cargo pass through one or more pairs of these detectors. The number of gamma rays detected over the time interval during which the object is between the detectors can be used to trigger an alarm requiring the intervention of a guard or similar security personnel. There is a significant trade-off between the sensitivity of this method and the permissible duration that the object can be measured. Also, if the sensitivity is set such that frequent false alarms occur, security personnel

may ignore alarms in order to keep traffic moving efficiently. Most of the radiation emitted by highly enriched uranium (HEU) is weak, which means it is both easy to shield by the smuggler and difficult to detect through passive means. The detectors being deployed in the Second Line of Defense program simply detect gamma-ray radiation, without attempting to zero in on particular energy levels, and therefore have almost no ability to detect HEU above the background of natural radiation if the terrorist or smuggler uses even modest radiation shielding.

Efforts are underway to develop “advanced spectroscopic portal monitors” (ASPs) that do examine the energy ranges of different gamma rays. This will theoretically allow them to not only detect nuclear or radiological material but also to identify the type of material. The ASPs are expected to reduce the rates of false alarms caused by naturally radioactive materials in legitimate shipment; however, they are significantly more costly than nonspectroscopic detectors and can only be manufactured with much lower detection probabilities. Thus, substantial controversy exists over whether there is a true benefit to their deployment.

Active detectors, such as neutron sources coupled with detectors to detect induced fission, may offer higher confidence of detecting HEU, even in a shielded configuration. Several methods are under active research and development that have been demonstrated to be highly effective at detecting shielded SNM. These detection methods are based on the active neutron techniques developed for nuclear safeguards discussed previously. Other development efforts are underway to use high-energy photons to induce fission. In both cases, neutron or photon sources, systems are in the developmental stages and not yet ready for wide-spread deployments.

### Nuclear Forensics

In response to nuclear smuggling, which was first reported in 1991, a new branch of science was developed: “nuclear forensics” [42]. Analytical methods were initially borrowed from nuclear safeguards and supplemented with techniques developed for material science investigations.

Over several ensuing years, techniques were standardized, new methods developed, and extensive databases of nuclear information compiled to guide the analysis and attribution of nuclear materials. As in other forensic fields, the analyst relies on the fact that certain measurable parameters in a sample are characteristic of the nuclear material and can be used to draw conclusions on the intended use or origin of the materials. Such attribution is an important deterrent to a nation state’s participation, whether willingly or not, in smuggling activity.

The first category of characteristics to be exploited for nuclear forensics was major elemental and macroscopic composition of the interdicted nuclear material. Physical dimensions and isotopic composition of the major nuclear materials, usually uranium and plutonium, may be used to identify the intended use of the material. For example, plutonium with less than 7%  $^{240}\text{Pu}$  is considered to be weapons grade and likely produced for that purpose. The isotopic composition may also indicate the origin of the material. Since different types of nuclear reactors have different fuel loadings and neutron energy spectra, they generally produce plutonium of differing isotopic composition [43]. The concentration of the nuclear material may indicate stoichiometry of the compound or the presence of impurities, both of which may be indicators of the materials’ source or status in a known nuclear fuel cycle. Fuel additives, which are used in the fuel cycle or material processing steps, such as gadolinium as a nuclear reactor burnable poison, may also be used by the analyst to narrow down the type of nuclear material present. In the case of manufactured items, such as nuclear fuel elements or pellets, the physical dimensions may allow the identification of the intended reactor type or design.

Further developments in the nuclear forensics field lead to the use of minor elemental as well as microscopic composition of the nuclear material in investigations initiated in the late 1990s [41]. This included chemical and isotopic analysis of individual particles as part of the forensic toolbox. Techniques such as secondary ionization mass spectrometry and scanning electron

microscopy coupled with electron dispersive x-ray analysis allow for the isotopic composition of particles or powders to be determined. With powder samples, the analyst also gains information related to the sample homogeneity with regard to the isotopic composition and the particle size distribution.

In the past decade, analysts have also developed geolocation techniques and methods. Trace elements can be found in uranium at all stages of its mining, milling, and enrichment. Each processing step reduces the concentration of these trace elements and may introduce new trace contaminants. However, it has been noted that the pattern of certain impurities does not vary through the processing and may be used as a characteristic of the starting material. For example, the distribution of lead isotopes in the sample may be used as an indication of the age of the ore body and its initial U/Th ratio. The ratio of  $^{18}\text{O}/^{16}\text{O}$  in a uranium oxide sample may be used to determine the temperature, latitude, and distance to the sea for the water used in the wet processing of the uranium [41].

The challenge in the interpretation of the many data sources discussed above is the accessibility of reference data. Efforts are underway to develop databases of reference forensic information. Data on nuclear materials produced for commercial applications, such as power production, are generally available with the various manufacturers and to some extent in open literature. However, some of the data is commercially sensitive and its availability is limited. Also, similar data on nuclear materials developed for weapons applications is generally protected for national security reasons.

### Terrorism Response and Consequence Management

If a terrorist succeeds in smuggling nuclear or radiological material through the layers of nuclear safeguards and security at the source and subsequent national or international monitoring (such as the Second Line of Defense), it may then be readied for use as a weapon. If monitoring stations, intelligence, or criminal investigations lead to the discovery of the material or weapon, a response is

required to mitigate the threat. That response requires personnel familiar with weapons design, device characterization, weapon defusing and disposal, and consequence management.

To assist the response or management of the consequences of the event, small portable instruments are required for identification and quantification of the materials involved. Many responders, including those that may be on the incident scene first, such as police officers, today use hand-held or backpack-size instruments called radioisotope identification devices (RIIDs). These instruments have undergone significant advancements over the past several years in both hardware and algorithms.

The algorithm used for isotope identification by a RIID plays a key role in obtaining a correct identification of the radioisotope. Correct ID is perhaps the most essential step in determining whether or not a true threat exists that requires a more extensive response for mitigation. The majority of RIIDs deployed around the world are based on Nay spectrometers. Their performance in isotope identification is generally poor and therefore secondary analysis of spectra by a trained spectroscopist is frequently necessary to resolve problems in the isotope identification. A trained spectroscopist is capable of identifying complicated, multiple-line sources with even the poorest resolution detectors, such as Nay. Many factors in detector performance, such as energy resolution, play an important role in isotope identification and are active areas of research [44–46].

### Future Directions

World energy demand continues to grow and along with it does the demand for nuclear power, a carbon-free energy source. Some are predicting that world energy demand growth will exceed 50% over the next 20–25 years [47]. This expansion presents both challenges and opportunities to nuclear safeguards and nonproliferation. Challenges include the timely detection of diversion at large throughput fuel cycle facilities, new types of fuel cycles that may present challenges to accurate measurement of the fuel at appropriate KMPs,

and the detection of nuclear material misuse in the background of activity required for a large-scale nuclear fuel cycle. Finally, significant expansion of nuclear power will also include increased nuclear material shipping, which creates its own issues related to continuity of knowledge and monitoring of the material in transit.

Addressing these future challenges will require advances in instrumentation, safeguards system analysis, modeling techniques, and data mining. On-line, near real-time monitoring methods using both radiation and nonradiation signatures will be required as part of integrated process monitoring schemes for new facilities. There will also be opportunities to incorporate nuclear safeguards and physical protection into the design of new facilities. This will allow the efficacy of the safeguards system to be maximized while minimizing cost and impact to the facility.

Improvements in the detection of shielded nuclear material is one of the most active areas of research to improve border monitoring and other efforts related to illicit nuclear trafficking. As worldwide commerce continues to increase, so will be the movement of goods around the world. This will necessitate that the false alarm rates of the current generation of portal monitors be significantly improved to avoid considerable negative impacts to commerce. Although this is another area of active research, implementable solutions are likely still several years away.

## Bibliography

### Primary Literature

1. Fischer D (1997) History of the International Atomic Energy Agency: the first 40 Years. IAEA, vienna
2. Kennedy RF (1968) Thirteen days: a memoir of the Cuban Missile Crisis. McCall, New York
3. Jaech J (1973) Statistical methods in nuclear materials control. U.S. Atomic Energy Commission, Oak Ridge
4. Burr T, Coulter C, Hakkila E, Ai H, Kadokura I, Fujimaki K (1995) Statistical methods for detecting loss of materials using near-real time accounting data. 36th annual meeting of the Institute of Nuclear Materials Management, Palm Desert
5. Picard R (1987) Sequential analysis of materials balances. *J Nucl Mater Manag* 15(2):38–42
6. Zrdecki A, Armstrong J, Longmire V, Strittmatter R (1997) Inventory difference analysis at Los Alamos Plutonium Facility. 38th annual meeting of the Institute of Nuclear Materials Management, Phoenix
7. IAEA (2003) Safeguards techniques and equipment – 2003 Edition. IAEA/NVS/1 (revised), International Nuclear Verification Series No. 1
8. Aigner H, Binner R, Kuhn E, Blohm-Hieber U, Mayer K, Guardini S, Pietri C, Rappinger B, Mitterrand B, Reed J, Mafra-Guidicini O, Deron S (2002) International target values 2000 for Measurement uncertainties in safeguarding nuclear materials. *ESARDA Bulletin*, No. 31
9. Russo P, Vo D (2005) Gamma-ray detectors for nondestructive analysis. Los Alamos National Laboratory, LA-UR-05-3813
10. Martin R, Jones D, Speir L, Walker A (1974) Field assay of plutonium with a new computerized segmented gamma scan instrument. Los Alamos Scientific Laboratory, LA-UR-74-924
11. Estep R, Prettyman T, Sheppard G (1993) Tomographic gamma scanning to assay heterogeneous waste. *Nucl Sci Eng* 118:145–152
12. Menlove H, Swansen J (1985) A high-performance neutron time correlation counter. *Nucl Technol* 71:497–505
13. Krick M, Swansen J (1984) Neutron multiplicity and multiplication measurements. *Nucl Instrum Methods* 219:384–393
14. Langer D, Krick M, Ensslin N, Bosler G, Dylewski N (1991) Neutron multiplicity counter development. In: Proceedings of the 13th annual ESARDA symposium, Avignon
15. Stewart J, Krick M, Langer D, Wenz T (1998) Neutron multiplicity assay of impure materials using four different neutron counters. In: 39th annual meeting of the Institute for Nuclear Materials Management, Naples
16. Menlove H, Foley J, Bosler G (1980) Application of the active well coincidence counter to the measurement of uranium. In: 2nd symposium on safeguards and nuclear material management, Edinburgh
17. MacMurdo K, Bowman W (1977) Assay of fissile materials by a cyclic method of neutron activation and delayed neutron counting. *Nucl Instrum Methods* 141:299–306
18. Menlove H, Crane T (1978) A  $^{252}\text{Cf}$  Nondestructive assay system for fissile material. *Nucl Instrum Methods* 152:549–557
19. Kunz W, Atencio J, Caldwell J (1980) A 1-nCi/g Sensitivity transuranic waste assay system using pulsed neutron interrogation. In: 21st annual meeting of the Institute for Nuclear Materials Management
20. Caldwell J, Hastings R, Herrera G, Kunz W (1986) The Los Alamos second-generation system for passive and active neutron assays of drum-sized containers. Los Alamos National Laboratory LA-10774-MS
21. Rinard P, Coop K, Nicholas N, Menlove H (1994) Comparison of shuffler and differential die-away technique instruments for the assay of fissile materials in 55-gallon waste drums. *J Nucl Mater Manag* 22(3):4–28

22. Coop K, Hollas C (1996) Epithermal interrogation of fissile waste. Institute of Nuclear Materials Management Annual Meeting, Naples
23. Rooney B, York R, Close D, Williams H (1998) Active interrogation package monitor. IEEE Nuclear Science Symposium, Toronto
24. Bracken D, Biddle R, Carillo L, Hypes P, Rudy C, Schneider C, Smith M (2002) Application guide to safeguards calorimetry. Los Alamos National Laboratory LA-13867-M
25. Walsh T, Hamilton R, Baker E, Hurlbut S, Fazzari D, Delegard C, McRae L, Liebetrau A, Lemaire R, DeRidder P (1996) Plutonium assay for safeguards purposes: material heterogeneity and application of calorimetry. In: 37th annual meeting of the Institute for Nuclear Materials Management, Naples
26. Thornton M, Vassallo G, Miller J, Mason J (1995) Design and performance testing of a tritium calorimeter. *Nucl Instrum Methods A* 363:598–603
27. Guardini S (2003) Performance values for nondestructive assay (NDA) techniques applied to safeguards: the 2002 evaluation by the ESARDA NDA Working Group. *ESARDA Bulletin* 31
28. Wallace R, Anzelon G, Essner J (2009) Safeguards information from open sources. *J Nucl Mater Manag* 37(4):30–40
29. Hitchens T (2006) European eyes in the sky: strategic independence is focus as security comes to the forefront. *Imaging Notes* 21(3):20–24
30. Niemeyer I (2009) Safeguards information from satellite imagery. *J Nucl Mater Manag* 37(4):41–48
31. Pabian F (2008) Commercial satellite imagery: another tool in the nonproliferation verification and monitoring toolkit, Chapter 12 of nuclear safeguards, security, and nonproliferation. Elsevier, New York
32. Hannon W (1985) Seismic verification of a comprehensive test ban. *Science* 227(4684):251–257
33. Bache T (1982) Estimating the yield of underground nuclear explosions. *Bull Seismol Soc Am* 72(6B): S131–S168
34. Taylor S, Dowla F (1991) Spectral yield estimation of NTS explosions. *Bull Seismol Soc Am* 81(4):1292–1308
35. Yutaka M, Tetsuzo O, Hiroshi N, Hideo N (1998) Overview of atmospheric radionuclide monitoring techniques for CTBT International Monitoring System, Proceedings of the annual meeting of INMM Japan Chapter 19:129–130
36. Carrigan C, Heinie R, Hudson G, Nitao J, Zucca J (1996) Trace gas emissions on geological faults as indicators of underground nuclear testing. *Nature* 382:528–531
37. Ferguson C, Potter W, Sands A, Spector L, Wehling F (2005) The four faces of nuclear terrorism. Routledge, New York
38. Jenkins BM (2008) Will terrorists go nuclear? Prometheus Books, New York
39. Allison G (2005) Nuclear terrorism: the ultimate preventable catastrophe. Holt Paperbacks, New York
40. Kerst R (2009) Trends and patterns in illicit trafficking of radioactive sources. LLNL-GS-0052-2009, Lawrence Livermore National Laboratory
41. Battelle Memorial Institute (2009) Nuclear smuggling handbook: case studies and detection methods
42. Mayer K, Wallenius M, Fanganel T (2007) Nuclear forensic science – from cradle to maturity. *J Alloys Compd* 444–445:50–56
43. Wallenius M, Lutzenkirchen K, Mayer K, Ray I, de Las Heras LA, Betti M, Crombroom O, Hild M, Lynch B, Nicholl A, Ottmar H, Rasmussen G, Schubert A, Tamborini G, Thiele H, Wagner W, Walker C, Suleger E (2007) Nuclear forensic investigations with a focus on plutonium. *J Alloys Compounds* 444–445:57–62
44. Sullivan C, Garner S, Lombardi M, Butterfield K, Smith-Nelson M (2007) Evaluation of key detector parameters for isotope identification. *IEEE Nucl Sci Symp Conf Rec* 2:1181–1184
45. Keyser R, Rwyomey T, Upp D (2005) A Comparison of an HPGe-based and Nay-based Radioisotope Identifier (RIID) for radioactive materials. In: ESARDA Symposium, London
46. Sullivan C, Garner S, Blagoev K, Weiss D (2007) Generation of customized wavelets for the analysis of gamma-ray spectra. *Nucl Instrum Methods A* 579(1):275–278
47. Energy Information Administration (2007) International Energy Outlook 2007. DOE/EIA-0484

## Books and Reviews

- Doyle JE (ed) (2008) Nuclear safeguards, security, and nonproliferation: achieving security with technology and policy. Elsevier, New York
- Hakansson A, Jonter T (2007) An introduction to nuclear non-proliferation and safeguards. SKI Rep 2007:44
- IAEA (2007) Combating illicit trafficking in nuclear and other radioactive material: reference manual, vol 6, IAEA nuclear security series. International Atomic Energy Agency, Vienna
- Moody K, Hutcheon I, Grant P (2005) Nuclear forensic analysis. CRC Press, Boca Raton
- Mozley RF (1998) The politics and technology of nuclear proliferation. University of Washington Press, Seattle/London

---

# Index

## A

Accelerators, radioisotopes production by, 398–399  
Actinides  
  recycling, 105  
  reprocessing, 105  
Activation neutron, 320  
Activation photon, 323  
Advanced burner reactor (ABR), 113  
Advanced heavy water reactor (AHWR), 90  
Advanced high-temperature reactor (AHTR), 110  
Advanced liquid metal reactor (ALMR), 110  
Advanced spectroscopic portal monitor  
  (ASP), 424  
Airborne radioactivity, 334  
Aircraft reactor experiment (ARE), 111  
ALARA principle, 356  
Alpha decay, 314  
Alpha-emitting radionuclides, 397  
Alpha-neutron sources, 319  
Aluminum, 151  
Americium, 334  
Archeology, radioisotopes using in, 400–401  
Astronaut, solar-flare radiation exposures, 311  
Atomic electron, 6  
Atomic energy commission (AEC), 371  
Atomic mass measurements, 10  
Atomic vapor laser isotope separation (AVLIS), 146  
Auger electron, 323  
Austenitic stainless steels, 154  
Auxiliary cooling system (ACS), 133

## B

Beam therapy, 311  
Beryllium, 334  
  fluorides, 111  
Beta decay, 314, 397–398  
Binding energy, 10  
Bioremediation, 229  
Blocks, 177–178  
Blood flow imaging, 407  
Blood irradiators, 406  
Boiling water reactor (BWR), 117, 155, 356  
Bolometer, 352

## Boltzmann

  constant, 19  
  equation, 25  
  transport theory, 284

Boron, 156

Brachytherapy, 311, 332  
  by radioisotopes, 407

Brayton cycle, 92, 108  
  helium turbine, 106  
  thermodynamic, 59

Bremsstrahlung

  angular distribution, 326  
  energy distribution, 325–327

Bulk-shielding facilities, 372

Burnable poisons, 25

## C

Californium, 334

Canadian-Deuterium-Uranium (CANDU) reactor, 155

Capture gamma photons, 322

Cartesian coordinate system, 30

<sup>14</sup>C dating, 400

Central Research Institute of Electric Power Industry  
  (CRIEPI), Japan, 130

Chernobyl accident, 42, 61, 79, 81–82

COEX™ process, 192

Cold fusion, 284

Combined thermal epithermal neutron (CTEN) method, 420

Compound nucleus, 21

Compton scattering, 23, 375

Concrete, shield material, 383–384

Contamination

  groundwater, 229

  surface water, 229

Coronal mass ejection (CME), 328

Cosmic ray (CR), 310, 315, 328–330

Cosmogenic radioisotopes, 399

Cosmogenic radionuclides, 315–317

Coulomb

  collisions, 256

  forces, 11

  scattering, 342

Countercurrent recycle cascade, 143

**D**

Decontamination, 226–227

Deep-dose equivalent, 364

Delayed neutron, 317

Diagnostic X-ray, 331

Discounting, 298

Dopant, 363

Doppler effect, 133

Dosimeter

- electronic, 366–367

- of record, 366

- spherical neutron, 350

Dosimetry, 2, 361–367

- external, 362

- internal, 362

- solid-state, 400

Dynode, 347

**E**

Earth magnetic field, 328

Effective delayed neutron fraction, 34

Elastic collision, 8

Elastic scattering, 21

Electricity

- production, energy discount rate, 299

- requirements, 307

Electromagnetic radiation, 6, 310, 327

Electromagnetism, 7

Electron

- antineutrinos, 173

- capture, 314, 325, 398

Electronic dosimeters, 366–367

Electron positron pair, 333

Electrorefiner, 199

ELSY project, 109

Energetic neutron, 333

Energy discounting, 299

Erythema, 357

European lead-cooled system (ELSY), 109

Eutectic mixture, 127

Evaluated nuclear data files (ENDF), 338

Evaluated nuclear structure data files (ENSDF), 338

Excitation energy, 12, 20

Experimental breeder reactor II (EBR-II), 113

Experimental technology demonstration reactor

- (ETDR), 106

External dosimetry, 362

Eye-dose equivalent, 364

**F**

Fast breeder reactor (FBR), 63, 66, 91, 182

Fast breeder test reactor (FBTR), 115

Fast flux test facility (FFTF), 113

Fast ignition, 278

Fast neutron, 46

Fast-neutron-spectrum breeder reactor (FBR), 63

Fick's Law, 30, 31

Field-reversed configuration (FRC), 268

Fissile

- fuel, 288

- isotope, 9, 39, 288

- nucleus, 9, 45

- plutonium, 66

Fission

- activation energy, 12

- chain reaction, 45

- energy, 45

- fissionable materials, 45–46

- fragments, 17

- neutron-induced, 12, 13

- neutrons, 28

- production, 45

- product, 10, 38

- decay heat, 199

- nucleus, 15

- poisons, 26

reactor

- cooling system, 17

- design, 16, 17, 21

- development, 38

- fissioning isotope, 15

- fuel reprocessing plant, 288

- heavy elements, 9–10

- performance, 32–38

- physics, 5

- source, 25

Fission-product photon, 320–322

Fluorescence/fluorescent radiation, 325

Fluorescent yield, 325

Food sterilization, radioisotopes in, 403–404

Fuel

- assemblies, 242

- clad, 152

Fusion fission hybrid, 288–290

Fusion neutrons, 317–318

Fusion power plants, 288

Fusion reactor blanket, 288

**G**

Gabon reactor, 11

Galactic cosmic radiation/rays (GCR), 310, 328, 338, 373

Gamma

- decay, 314, 397

- photon, 318, 320–323

- ray, 342, 365, 370

- dose, albedo approximations, 385–386

- MicroSkyshine, 387

- photon, 417

- shielding methods, 372–373

- Skyshine, 386–388

- spectra, 417

- tracking spectrometers, 354

- skyshine, 386–388

Gamma Photons, Sources, 320–323

Gamma-Ray Dose Albedo Approximations, 385

- Gamma-Ray, Skyshine, 386–388  
Gas-cooled fast reactor system, 105–108  
Gas/gaseous  
centrifugation, 137, 139–141  
diffusion, 138–140  
ideal cascade, 145–146  
multiplication, 344  
turbine modular helium reactor (GT-MHR), 105  
Gaussian theorem, 24, 34  
GE Hitachi Nuclear Energy (GEH), 131  
Geiger–Mueller counter, 345–346, 362  
GEN-IV module, 126–128  
Generation-IV (GEN-IV) reactors  
nuclear systems, 105  
reactors, 1, 103–122  
Geoneutrino, 173, 174  
Geothermal energy, 176  
Geothermal energy flux, 173  
Global  
laser enrichment (GLE), 146  
nuclear energy partnership (GNEP), 113
- H**  
Halogen, 335  
Health/healthy physics  
definition, 356  
development, 357–358  
history, 357  
Heisenberg uncertainty principle, 20  
Heliotron, 261  
High-level radioactive waste (HLW), 218, 242–247  
Highly enriched uranium (HEU), 168  
Hybrid imaging, 338  
Hydrogen  
for fossil fuel refining, 119  
fuel, 43  
nucleus, 18  
Hyperion Power Module (HPM)/GEN-IV  
module, 126–128
- I**  
Illicit radiological material trafficking border and port monitoring, 423  
In-core radiolysis, 118  
Industry  
facility, cost analysis, 297–298  
radiography, 311  
Inelastic collision, 8  
Inelastic scattering, 19  
photons, 322–323  
Inertial confinement fusion (ICF)  
laser development, 282–283  
Integral Fast Reactor (IFR) program, 110, 196  
Integral line-beam skyshine method, 387  
Integral Molten Salt Reactor (IMSR), 134–136  
Intermediate heat exchanger (IHX), 113, 120, 132–133  
Internal dosimetry, 362
- International Thermonuclear Experimental Reactor (ITER)  
Joint Project, 257–258  
Ionization chamber, 344  
Ionizing radiation, 341, 358, 370  
dosimetry, 361  
gas-filled detectors, 343–346  
origins, 311–312  
sources, 310, 339  
Irradiation tests, 121  
Isomeric transition, 314  
Isotope/isotopic  
dilution mass spectrometers (IDMS), 416  
of plutonium, 7  
separation, 137  
cascade theory, 141–146  
Countercurrent Recycle Cascade, 143  
factor, 139  
ideal cascade, 143–144  
McCabe–Thiele diagram, 144  
potential, 145  
separative Work Unit, 144–146  
shift, 146
- K**  
Kinetic energy, 6, 8, 12, 18, 312  
Kronecker delta, 30  
Krypton, 335  
K-shell electron, 314
- L**  
Lanthanum, 403  
Laser isotope separation (LIS), 146–147  
Lead  
bismuth, 108  
cooled fast reactor, 108–110  
Legendre polynomial, 30  
Lid tank shielding facility (LTSF), 372  
Light water reactor (LWR), 53–57, 116, 127, 128  
Liouville equation, 37  
Liquid-metal-cooled fast reactors, 115  
Lithium, 112  
Low-level radioactive waste (LLW), 241, 247–248  
disposal, 248
- M**  
Magnetic  
field, 256  
rotational transform, 256  
mirror, 256  
Magnetosphere, 330  
Manhattan project, 7, 37  
Mass–energy relationship, 7–9  
Maxwell–Boltzmann velocity distribution, 18  
Maxwell’s equations, 6, 7, 284  
Mega-ampere spherical torus (MAST), 257  
Miniature suns, 252  
Mixed carbide fuel, 116  
Mixed oxide (MOX) fuel, 115, 190, 303

- Modular, 125  
 Molecular flow, 138  
 Molecular laser isotope separation (MLIS), 146  
 Molten salt reactor experiment (MSRE), 110–113  
 Monte Carlo  
     computer programs, 28  
     method of simulating radiation, 373  
     simulation, 29  
     statistics, 39  
     transport, 389–390  
         calculations, 386  
 mPower reactor, 128–129  
 Multipurpose pyroprocessing complex (MPC), 202  
 Muon decay, 329
- N**
- National Spherical Torus Experiment (NSTX), 257  
 Natural gas, 43  
 Naturally occurring radioactive material (NORM), 314–317, 341  
 Neutrino, 13, 172, 173, 311, 370  
 Neutron  
     balance, 15, 19, 22, 26  
     Broglie wavelength, 20  
     capture, 19  
     chain reaction, 73  
     channeling, 29  
     density, 23–24, 26, 33, 37  
     detection, 349  
     detectors, 419  
     diffusion equation, 30, 31  
     distributions, 23–32  
     dosimetry, 385  
         albedo technique, 366  
     energy, 45, 57  
         distributions, 319  
     fluctuations, 38  
     kinetic energy, 12  
     loss, 27  
     measurement, 419  
     momentum, 21  
     Monte Carlo simulation, 28, 35  
     multiplication factor, 27  
     poisons, 52  
     production, 27  
     radiography, 404–405  
     reaction, 25  
     scattering, 19  
     shielding, 372  
         capture gamma photons, 383  
     sources, 317–320, 424  
     spectroscopy, 349  
     streaming, 386  
     transport equation, 24, 26, 28, 29, 38  
 Neutron detector, 350  
 Neutron Dose Albedo Approximations, 385–386  
 Neutron shielding methods, 372  
 Neutron transport equation, 25  
 Nitride fuel, 116  
 Nodal method, 32  
 Nondestructive assay (NDA) technique, 417  
 Nuclear clad material, 152–154  
 Nuclear decommissioning  
     cost estimates, 223–225  
     decontamination methods, 226–227  
     dismantling and removing buildings, 227  
     equipment, 227  
     final inspections, 231  
     general methodologies, 220–232  
     groundwater restoration, 221  
     performance assessment, 225–226  
     reclaiming disturbed land, 232  
     remediating residual radioactivity, 227  
     safety, 225–226  
     site characterization, 221–222  
     status of decontamination, 232–235  
     surveys, 231  
     total costs, 224  
     waste management and disposal, 215–216  
 Nuclear design calculation, 29  
 Nuclear energy, 1, 103–104  
     electric generation, 42  
         GEN-IV, 106  
 Nuclear explosive, 42, 337  
 Nuclear facility  
     decommissioning, 2, 205–235  
     decontamination, 208, 222  
     dismantlement, 208, 222  
     types, 209–210  
 Nuclear fission, 166  
     power plants, 1, 41–100  
     process, 154  
     reactors, 398  
 Nuclear forensics, 424–425  
 Nuclear fuel  
     back end fuel cycle facilities, 215–216  
     clad materials, 152–154  
     cycle, 1, 159–163, 192, 205, 207, 210, 215, 235  
         facilities, 232  
         front end facilities, 210–214  
         waste storage and disposal, 336  
     disposal, 163  
     enrichment  
         fabrication, 162  
         gaseous diffusion, 213  
     fabrication facilities, 213–214  
     isotope separation methods, 1, 137–147  
     management, 166  
     as a nuclear fuel, 169–170  
     operation, 163  
     recycling, 43, 245  
     reprocessing, 2, 187, 188, 335–336  
         facility, 215  
     resources, 169–170  
         materials, 150–152  
 Nuclear fusion  
     cold fusion, 284  
     compact toroids, 256

- confinement systems, 272–275  
electrostatically plugged cusps, 273  
field-reversed configuration, 268  
of hydrogen isotopes, 252  
hypervelocity impact fusion, 283–284  
inertial confinement fusion (ICF), 276–282  
inertial electrostatic confinement (IEC), 276  
levitated dipole experiment, 275  
magnetized target fusion (MTF), 268–269  
muon-catalyzed fusion, 276  
open magnetic confinement, 272–275  
plasma focus, 275  
plasma physics theory, 284  
polywell, 274  
reaction, 252  
reactor  
    design, 290  
    requirements, 254–255  
Reactor Design Studies, 287–288  
reversed field pinch, 262  
RF plasma confinement, 273–274  
rotating plasmas, 275  
stellarators, 261–262  
tandem mirror, 273  
technology issues, 284–287  
tokamak, 257
- Nuclear material  
    accounting, 414  
    control measure, 413  
    destructive analysis, 416  
    key measurement points (KMP), 415  
    mass spectrometry, 416  
    material balance areas (MBA), 415  
    measurements, 414  
    measurement technology, 416–420  
    nondestructive assay, 416–420  
    technologies for safeguarding, 414–420
- Nuclear medicine, 311, 331, 332, 338, 359
- Nuclear power  
    design-basis accidents, 75–76  
    economics, 2, 295–307  
    energy sources, 74–75  
    facilities, leveled costs, 299  
    financial viability, 295  
    future, 94, 98–99  
    industry, 334–337  
    new nuclear installations, 99–100  
    occupational exposure, 336–337  
    plant, 1, 150, 214–215, 232, 338  
        buying nuclear fuel, 302  
        costs and their uncertainties, 304  
        decommission costs, 301  
        discount, 304–306  
        enrichment, 302  
        estimating uncertainties, 304  
        external costs, 306  
        financial risk, 297  
        fuel fabrication, 302  
        interest rates, 304–306
- interim spent fuel storage, 302–303  
    operating costs, 301  
    power facility construction, 301  
    spent fuel disposal, 303  
    spent fuel recycle, 303
- production  
    capital costs, 301  
    cost calculations, 301–303
- reactor  
    advanced boiling-water reactors (ABWR), 88  
    advanced CANDU reactor (ACR), 90  
    advanced light-water reactor, 84  
    advanced reactors, 82, 84  
    boiling-water reactor, 54–55, 68–69  
    CANDU reactors, 67  
    classifications, 46, 52  
    control, 52  
    design, 52  
    emergency core cooling systems (ECCS), 77, 84  
    European pressurized-water reactor (EPR), 89  
    fast breeder reactors, 63, 66  
    fast-neutron reactors, 91–92  
    gas-cooled fast breeder reactor (GCFBR), 67  
    gas-cooled fast reactors (GFR), 92, 94  
    gas-cooled reactors, 58–60  
    generation IV nuclear reactors, 92–94  
    generation-III reactors, 86–87  
    heavy-water reactors, 57–58, 89–91  
    high-temperature gas-cooled reactors, 90–91  
    lead-cooled fast reactors (LFR), 94  
    light-water graphite reactors, 60–61, 63  
    light-water reactors, 53–57, 87–89  
    liquid-metal reactor, 85–86  
    maintenance, 73–74  
    molten-salt breeder reactor (MSBR), 67  
    molten-salt reactors (MSR), 94  
    operation features, 73  
    operation, 46, 68  
    plant control systems, 74  
    postaccident radioactivity removal, 78  
    power reactor inherently safe module  
        (PRISM), 85–86  
    pressurized-water reactor, 55–57, 72–73  
    quality assurance (QA)  
    requirements, 82  
    refueling outages, 73  
    safety systems, 76–77  
    safety, 52, 74–79  
    shutdown, 73  
    sodium-cooled fast reactors (SFR), 94  
    supercritical water-cooled reactors (SWCR), 92  
    systems, 53  
    thermal design, 52  
    very high-temperature gas reactors (VHTR), 92  
    worldwide perspective, 66–67
- regulation, 79
- Nuclear power plant  
    cooling water, 302  
    cost comparisons, 306

- Nuclear power plant (*cont.*)  
     life-cycle cost, 297  
     Power Facility O M, 301
- Nuclear power reactor  
     gas-cooled reactors, 84  
     design, 52
- Nuclear proliferation, 420–422
- Nuclear radiation, 342
- Nuclear reaction, 9, 15  
     neutron-induced, 349
- Nuclear reactor, 214  
     fuel, 1, 149–157  
     materials, 1, 149–157  
         coolant materials, 155  
         moderator materials, 154–155  
         neutron poison materials, 155–156  
         structural materials, 156  
     for propulsion, 371–372
- Nuclear regulatory commission, 245
- Nuclear reprocessing  
     advanced aqueous separations process, 192  
     aqueous reprocessing, 188–196  
         equipment, 192–196  
     aqueous separation technology, 190  
     centrifugal contactors, 195–196  
     COEX™ process, 192  
     columns, 193–194  
     liquid–liquid extraction, 189  
     magnetic confinement, 256  
     process technology, 197–201  
     PUREX Process Technology, 190–191
- Nuclear safeguards, 3, 411–426  
     historical development, 412–414  
     nondestructive measurement technology, 413  
     nonproliferation policy, 412–414
- Nuclear safety, 73, 353
- Nuclear security programs, 414
- Nuclear smuggling, 423, 424
- Nuclear spectroscopy, 21
- Nuclear steam-supply system (NSSS), 56
- Nuclear technology, 356, 412
- Nuclear terrorism, 414, 423
- Nuclear test/testing, 412
- Nuclear waste, 222  
     disposal, 243  
     long-term management, 98  
     repository, 245
- Nuclear weapon  
     fission yield, 337  
     hydroacoustic monitoring, 421–422  
     materials, 411–426  
     open source information, 421  
     radioactive wastes, 337  
     satellite imagery, 421  
     seismic monitoring, 421–422  
     fusion yield, 337  
     technology, 412
- Nuclear-weapon fallout, structure shielding, 373
- Nucleus, 9
- Nucleus mass number, 9
- Nuclide, 341
- NuScale Reactor, 129–130
- O**
- Occult infection imaging, 407
- Optical/optically stimulated luminescence (OSL), 366
- Oxide fuels, 336
- P**
- Pacemaker power source, 408
- Pair production, 342
- Particle accelerators, 332–333
- Pauli exclusion principle, 12
- Peaking plants, 307
- Pebble bed modular reactor (PBMR), 105
- Pebble bed versus prismatic, 120
- Pellet clad interaction (PCI), 156–157
- Photocathode, 346, 364
- Photoelectric effect, 23, 342
- Photoelectron, 346
- Photomultiplier tube, 363, 364
- Photoneutrons, 318–319
- Photon/photon  
     deterministic transport theory, 388–389  
     radiation, 375  
     shielding, buildup-factor concept, 380–381
- Pitchblende, 160
- Planck's constant, 20
- Plasma theory, 258, 284
- Plutonium, 150–152, 161, 190–191, 214, 218, 242, 334, 371, 417  
     measurement, 419  
     reprocessing methods, 245
- Point kinetics equation, 33, 34
- Poison control rods, 77
- Poloidal magnetic field, 257, 258
- Polyethylene (PE), 419
- Polyvinyltoluene (PVT), 347
- Polywell, 274
- Positron  
     annihilation photons, 323  
     decay, 314
- Potassium, 403
- Power plant, fossil-fired, 118
- Pressurized water reactor (PWR), 128, 129, 155, 356
- Primordial radioisotopes, 399
- PRISM reactor, 131–133
- Prompt fission  
     gamma photons, 320  
     lifetime, 34  
     photons, 320
- Prompt neutron, 317  
     lifetime, 35
- Proton  
     accelerators, 333  
     recoil scintillation detector, 350

- Proton-beam accelerator, 338  
Prototype fast breeder reactor (PFBR), 115  
PUREX process waste treatment, 191  
Pyrochemical separation technologies, 112  
Pyroprocessing, 196–202
- R**
- Radiation  
  absorbers, 351–352  
  anthropomorphic phantom, 378  
  atmospherically reflected, 387  
  biological damage, 311  
  biological effects, 356  
  bremsstrahlung, 378  
  characterization, 342  
  detection, 342  
    advancements in detection methods, 351–352  
    advancements in detector materials, 351–352  
    advancements in Signal Measurement, 353–354  
  Compton-suppressed germanium detector, 352–353  
  fast neutron detectors, 350  
  Geiger-Müller counters, 345–346  
  moderating detectors, 350–351  
  neutron detectors, 349–351  
  proportional counters, 344–345  
  scintillation detectors, 346–347  
  semiconductor detectors, 348  
  slow neutron detectors, 349–350  
detectors, 343, 362  
dosimetry, 2  
energy, measurement, 367  
equivalent dose, 362  
expanded and aligned field, 378  
exposure, 357, 358  
fluence-to-dose conversion  
  factors, 377–378  
harmful effects, 356  
health physics, 2  
highly enriched uranium (HEU), 424  
intensity characterization, 377  
isotropic point detector, 379  
output (factor), 382  
point kernel for uncollided Dose, 379  
protection, 3, 218, 356, 357  
reflection, albedo methods, 384  
resistance, 390  
selected geometries, 379–380  
shielding, 3, 369–391  
  broad-beam attenuation, 381–382  
  of buildup factors, 375  
  design, 375  
  geometric progression formula, 375  
  history, 370–378
- Monte Carlo calculations, 374  
point-kernel computer codes, 381  
practice, 376–378  
source characterization, 376–377  
skyshine dose, 387  
from solar and galactic sources, 311  
source, 2, 309–339  
  accelerators, 333  
  industrial isotope, 334  
  in medicine, 331–332  
  occupational medical exposure, 332  
  physical characterization, 312–313  
  spectrometers, 338  
  therapy, 332  
  transport, 372, 373  
    used in human activities, 330–337  
streaming through ducts, 386  
transmission of beams, 390  
transport, 390  
  equation, 370  
  theory, 388–390  
uncollided radiation doses, 379
- Radiation-producing reaction  
  binary reactions, 312  
  energetics, 312  
  radioactive decay, 311–312
- Radiation shielding, 370  
  design, 374
- Radiation transport  
  digital computer applications, 374  
  Monte Carlo simulations, 373
- Radioactive  
  decay, 313–314, 320  
    constant, 9  
    types, 314  
  fission, 334  
  material, 207, 227, 241  
  nuclides, 341–342  
  radium, 371  
  thorium, 170  
  tracers, 247  
  transmutations, 312  
waste, 163, 188, 215, 241, 296  
  disposal, 230–231  
    groundwater restoration, 218  
    hazardous and mixed wastes, 219–220  
    high-level waste, 218–219  
    intermediate-level waste, 219  
    low-level waste, 219  
  management, 2, 230–231, 241–249  
  offsite disposal, 229, 231  
  onsite waste management, 231  
  spent nuclear fuel, 218–219  
  uncontaminated wastes, 220
- Radioactivity, 73, 159, 209, 341, 357, 362  
  detectors, 341
- Radioimmunoassay, 332  
Radioimmunoimaging, 332  
Radioimmunotherapy, 332

- Radioisotope/radioisotopic, 319  
 activity, 396–397  
 alpha decay, 397  
 applications  
   in homeland security, 408  
   in industry, 401–405  
   in medicine, 406–408  
   in science and engineering, 400–401  
   in space activities, 408–409  
 beta decay, 397–398  
 decay data for shielding design, 375  
 in environment, 399–400  
 gamma decay, 397  
 identification devices (RIIDs), 425  
 man-made, 399–400  
 production  
   by accelerators, 398–399  
   by nuclear fission reactors, 398  
 Radioisotopic thermoelectric generator (RTG), 405, 409  
 Radiolytic polymerization, 404  
 Radionuclide  
   decays, 313  
   environmental surveillance, 422  
   long-lived, 225  
   monitoring, 422  
   release, 225  
   sources, 376  
   monitoring, 422  
 Radiopharmaceutical, 247, 332  
 Radiotoxicity, 192  
 Radium, 209, 211, 371, 402–403  
 Rankine cycle, 39, 108, 115  
 Rare earth elements, 169  
 Ray effect, 389  
 Rayleigh-Taylor instability, 278, 281  
 Reactor  
   application, Doppler broadening, 22  
   control elements, 27  
   perturbations, 36  
   physics, 16  
   power changes, 36  
   primary nuclear design, 26  
   principle design process, 32  
   reactivity, 33  
   shielding, 371  
   theory, 30  
   trial configuration, 27  
 Reactor vessel air cooling system (RVACS), 133  
 Residual radioactivity, 229  
 Reversed field pinch (RFP), 262
- S**  
 Scattering law, 19  
 Scintillation detector, 346–347  
 Secondary electron, 344  
 Segmented gamma scanning (SGS), 419  
 Semiconductor detectors, 348
- Semiempirical mass formula, 11, 13  
 Separation of isotopes by laser excitation (SILEX), 146  
 Shallow-dose equivalent, 364  
 Silicon carbide cladding, 154  
 Slow neutron, 349–350  
 Small modular reactor, 307  
   advantages, 125–126  
   Hyperion Power Module/GEN-IV Module, 126–128  
   Integral Molten Salt Reactor, 134–136  
   mPower reactor, 128–129  
   NuScale reactor, 129–130  
   PRISM reactor, 131–133  
   Super-Safe, Small, and Simple (4S) reactor, 130–131  
   traveling wave reactor, 133–134  
 Small secure transportable autonomous reactor (SSTAR), 109  
 Smoke detectors, 404  
 Sodium-cooled fast reactor, 113–116  
 Solar particle event (SPE), 328–330, 338  
 Solar radiation, 310, 328–330  
 Solar wind, 330  
 Solid-state dosimetry, 400  
 Space shielding, 373  
 Spallation neutron sources, 320  
 Specific gamma-ray constant, 382  
 Spectrometry, 408–409  
 Spent nuclear fuel (SNF), 218–219, 241–247  
   interim storage facilities, 296  
   storage, 303  
 Spherical neutron dosimeters, 350  
 Spheromak, 264–265  
 Spontaneous fission, 314  
 Statistical mechanics, 5  
 Stellarator, 261–262  
 Styrene, 347  
 Supercritical light water reactor (SCLWR), 118  
 Supercritical water-cooled reactor, 116–119  
 Supernova explosion, 173  
 Super-Safe, Small, and Simple (4S) reactor, 130–131  
 Sustained Spheromak Physics Experiment (SSPX), 264  
 Synchrotron, 338  
   photon, 327
- T**  
 Technetium, 407  
 Teletherapy, 332  
   accelerators, 338  
   by radioisotopes, 407–408  
 Temperature coefficient, 23  
 TerraPower, 133  
 Terrestrial Energy, 134–136  
 Theory of relativity, 7  
 Thermal  
   breeder reactors, 182  
   energy, 22  
   ionization mass spectrometer (TIMS), 416

- neutron, 19, 31, 46, 322  
energy, 18  
Monte Carlo data, 386
- reactor, 31, 36, 39  
moderators, 18  
spatial oscillations, 37  
Xenon override requirements, 36  
spatial oscillations, 37
- Thermodynamic(s)  
equilibrium, 255  
foundations, 5
- Thermoluminescence dosimetry (TLD), 363–364  
filters, 365  
inorganic materials, 363  
for neutron radiations, 365–366
- Thorium, 39, 150, 160, 165–184, 211, 214  
decay, 315  
dioxide's, 152  
high-temperature reactor (THTR), 60, 105  
molten salt seactor (TMSR), 111  
radioisotopes, 399, 402
- Threshold energy, 18, 312, 319
- Time value of money, 298
- Tokamaks, 256–260
- Tomographic gamma scanner (TGS), 419
- Torsatron, 261
- Toshiba, 130
- Tower shielding facility (TSF), 372
- Townsend avalanche, 344
- Transmutation, 9, 10
- Transport equation, 34
- Transuranic(s)  
elements, 9  
isotopes, 12, 248  
waste (TRU), 241, 248–249  
waste isolation pilot plant (WIPP), 249
- Trapped radiation belts, 328–330
- Traveling Wave Reactor (TWR), 133–134
- Tri Alpha Energy Company, 275
- Tritium, 252, 316
- Troposphere/tropospheric, radioactive debris, 337
- Tungsten, 327
- U**  
Ultimate neutronic investigation code, 39
- Uraninite, 178
- Uranium  
astrophysical origins, 172–173  
average vertical distribution, 176–177  
carbide (UC), 152  
conversion, 161–162, 211–212, 233, 302  
facilities, 211–212  
decay, 315  
deposit types, 177–178  
dioxide ( $\text{UO}_2$ ), 151, 242  
dioxide fuel, 302  
energy content, 170–171
- enriching, 7, 161–162  
enrichment, 137, 139  
existing enrichment tails, 179–180  
extraction (UREX), 180–184, 192, 218  
in situ leaching, 180–181
- facilities, decommissioning, 210–211
- fissioned, 6
- from seawater, 180, 181
- fuel, 209, 296  
enrichment, 213  
fabrication, 335
- future energy needs, 182
- geochemical beneficiation processes, 177
- geoneutrino estimates, 173–174
- gold and phosphate tailings, 180
- hexafluoride, 161
- history, 160–161
- igneous processes, 175–176
- in situ leaching (ISL), 211
- isotopes, 160
- light water reactor, 169
- measurement, 419–420
- mechanisms for the concentration, 174–179
- mill/milling, 211, 215–218, 233  
groundwater restoration, 216–218  
tailings, 216–218
- mining, 209–211, 216, 302, 335
- nitride fuel, 127, 152
- oxide, 161, 178, 181, 213
- prices, 166
- radioactivity, 176
- radioisotopes, 399, 402
- recovery, 211
- remediation technologies, 230
- reserves, 168–169, 182–184
- resources, 165–184
- roll-front deposits, 178
- scarcity, 182–184
- silicate, 180
- thermal conductivity, 152
- unconventional resources, 179–180
- Used nuclear fuel  
dry storage systems, 243  
reprocessing, 245  
geologic repository, 244  
monitored retrievable storage facility (MRS), 244  
PUREX method, 245  
transportation, 244, 246
- V**  
Van Allen belt, 330
- Very-high-temperature nuclear reactors (VHTR), 119–121
- W**  
Waste, 215

**X**

- Xenon, 335  
Xenon oscillation, 37  
X ray, 342, 365, 370  
  energies, 325  
  fluorescence, 324–325  
  machines, 326–327  
  shielding, 371  
  sources, 323–324  
  yields, 325

**Y**

- Yellow cake, 211, 335

**Z**

- Zeolite drying, 200–201  
Zircaloy, 151, 153  
Zirconium alloy material, 153  
Zirconium-based alloy, 118