

Anytime Backup Camera Mod

Monday, August 10, 2026 1:07 PM

Things needed:

Anytime Backup Camera - Gen3 Harness (Use the code "60centenergy" at checkout for 10% off! Thanks Brian!) - https://www.tundras.com/out/?url=https%3A%2F%2Fwww.anytimebackupcamera.com%2Fproducts%2Funtitled-jan7_08-03&inner=QW55dGltZSUyMEJhY2t1cCUyMENhbWVYYSUyMC0lMjBHZW4zJTlwSGFybWVzcw%3D%3D&post=3860086

Quick disconnect spade connectors, solder connection, etc (really any connection for wires you want)

Illumination wire tap location to light up switch (see my footwell light mod)

Ground wire tap location

Something to fish the wire (I used a landscape flag - they work great for short fish runs like this)

Time (took me about 30 min to install but I already had some other taps done like illumination and ground)

This will probably be the most useful mod I do to my Tundra. I had this on my Tacoma and loved it - helps with parking and seeing trailer hookup while driving. I was trying to figure out something myself for this but wasn't getting very far and then I just hopped on Anytime Backup Camera's site again (after looking there for a while) and looks like Brian's got us hooked up with a harness that will work. I immediately bought it.

Install was very easy. Luckily you can do this without taking out the head unit. I've got my writeup below - let me know if you have any questions, thanks!

Step1:

Open up the top center dash piece where the cigarette lighter plug is - very easy to do - just use plastic pry from the front edge and lift up then unplug the charger port there.

Step 2:

Identify the plug location on the back of the head unit that you will plug the harness in from Anytime Backup Camera (ABC). I circled it below. Just unplug that and plug in the harness from ABC in line from the factory connector to the head unit.





Step 3:

The ABC harness comes with a pigtail extension of wire off the constant +12V and camera trigger wire:




Use the landscape flat and secure the end of the pigtail from the harness to the opposite flag end (I just use electrical tape for this) and fish it through the back of the dash toward the driver's side floorboard. There's a lot in the way, but it's possible - just have to feel around for the route that's free.

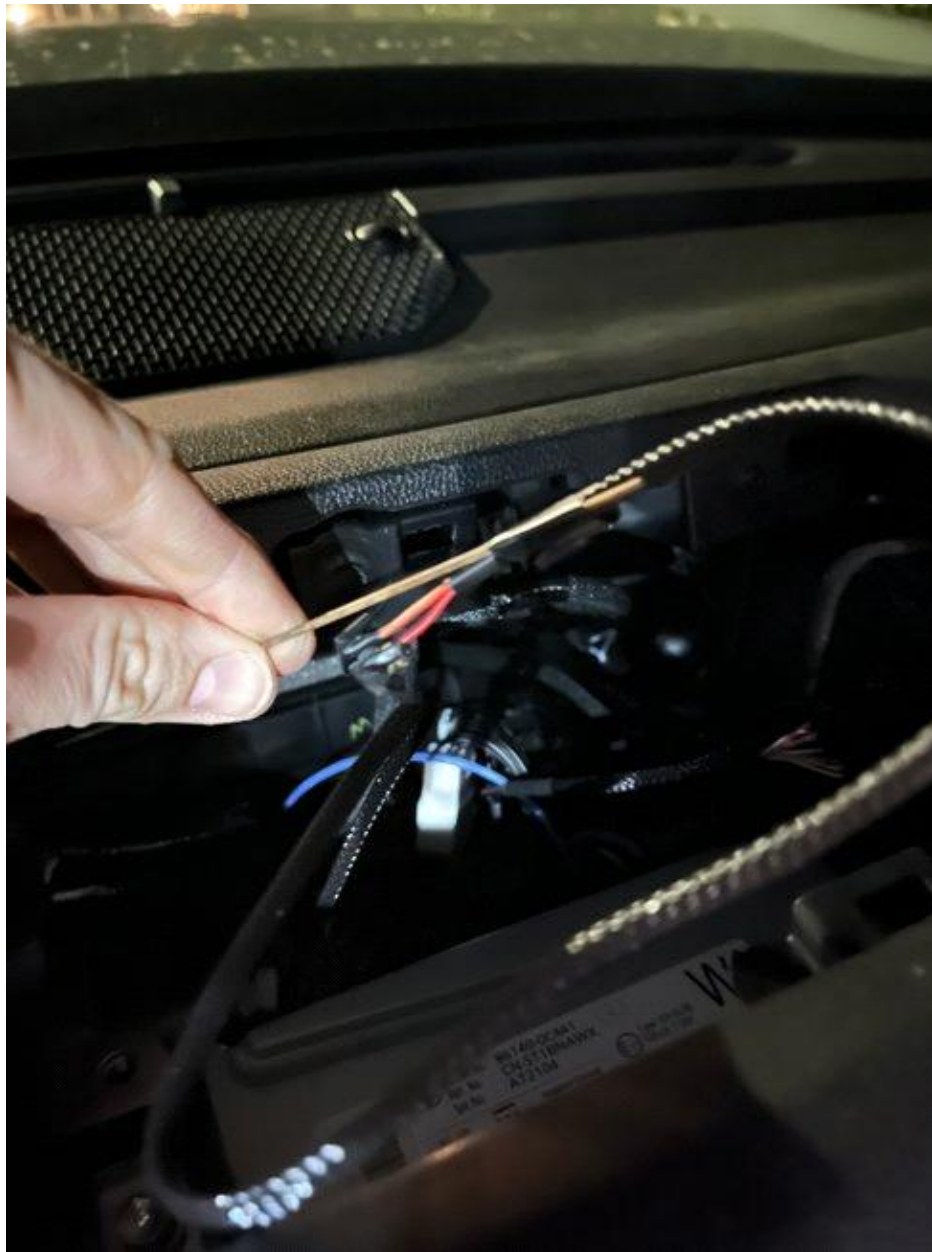

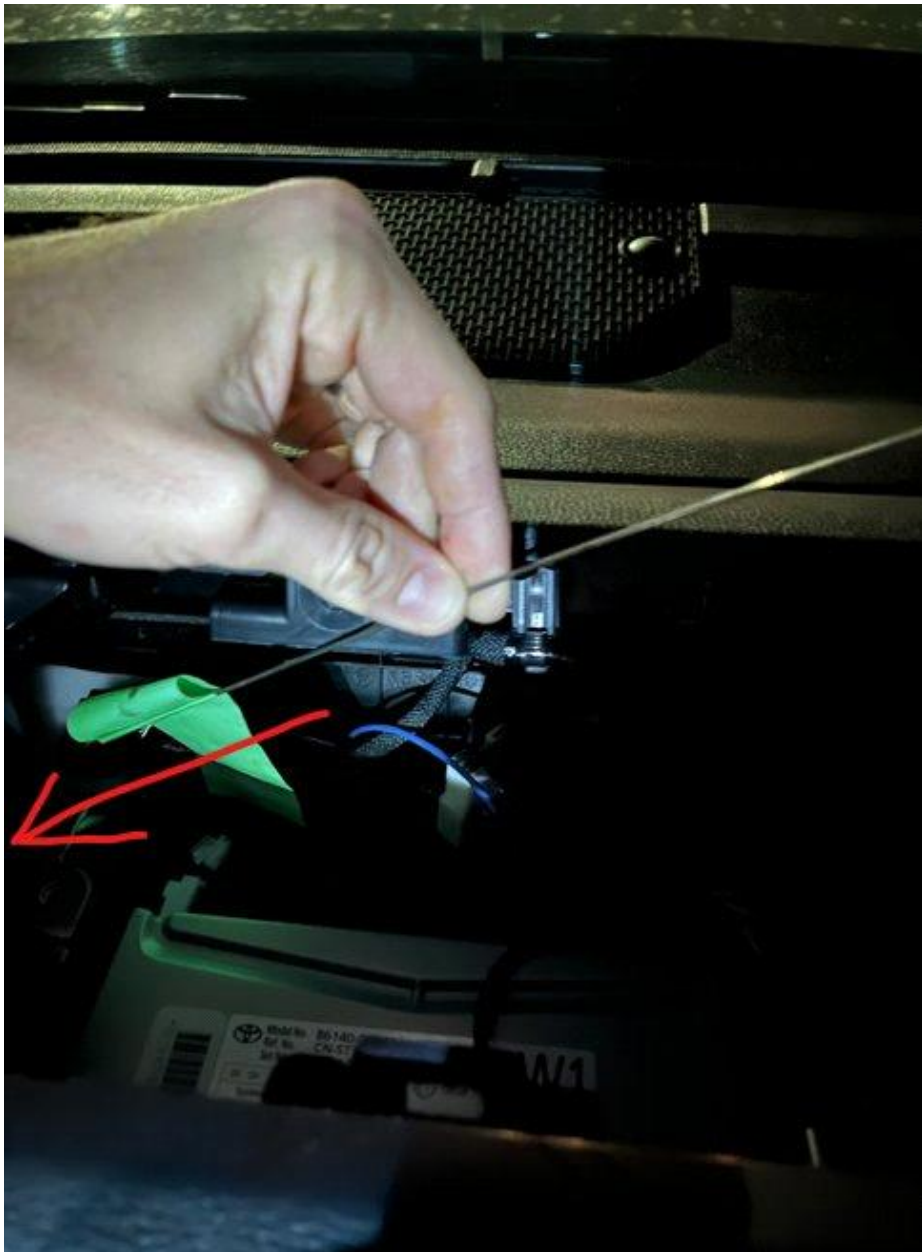

Step 4:

Take out the driver side dash trim piece and you should be able to reach the flag and pig tail from there (I've pointed the wire path looking at the inside of the dash from the driver side trim that's removed)

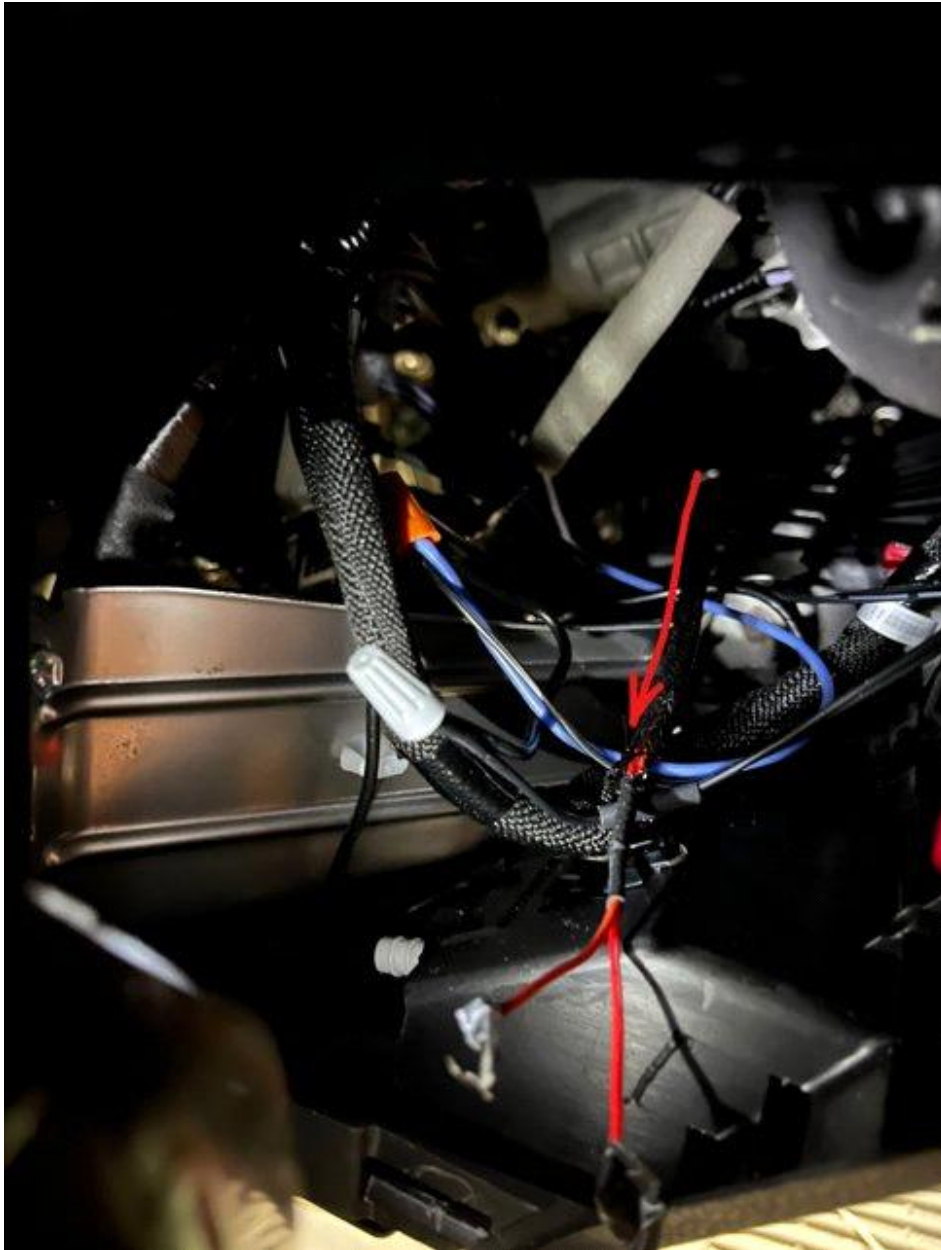

Step 5:

I tried to do the switch install without popping out the panel, but that seemed to be more difficult than I had hoped. So, I ended up just popping out the panel itself - just start at the top and work that out then the entire switch panel will come out. With my SR5, I had the bottom, right 3 as blanks so I chose the bottom, far right blank to install the switch. You have to work the blank out from the back of the panel. There are 2 plastic tabs, one on each side that will release it back into the cab.



Step 6:

Then just install the switch and make wire connections. I decided to use some spade quick disconnects to connect the long pigtail from the modified harness to the switch. Then I used my wire nuts to secure the illumination + wire and the ground (from my footwell light mod!)

The I like the image better on the switch that came with the ABC kit, however the illumination light is too intense and doesn't match the rest of the switches. I opted to use another switch I had gotten from AliXpress that did match the rest of the illuminated switches - however, the icon is kinda dumb. Brian said that there will be another round of switches made that will fix this and I plan to get one of those when that's released.

Using the camera switch that came with the ABC harness, here are my connections:

- Yellow switch wire to red ABC pigtail (12v supply in)
- Red switch wire to orange ABC pigtail (12v switched sending to harness to activate rear camera)
- White switch wire to + illumination wire tap (see my footwell mod write up)
- Green switch wire to ground OR - illumination wire tap (I used ground here)
- Black switch wire to ground

Since I opted to use the other switch I had for now, there was a slightly different wiring configuration and I'm happy to share that with anyone who is interested.

Here is an example shot for when I was testing to see how the switch would work (I hadn't made the spade connection yet - just testing)



Step 7:

Make quick disconnect spade connections (or however you're going to connect everything) and tuck everything in the dash, connect the switch harness to the switch and install the switch in it's spot.

Step 8:

Re-connect all the trim you took loose and then power it up and try it!

Here is the way the switches look when I have everything powered up:



Here's what it looks like when I press the camera view button - a nice yellow light illuminates above the switch telling me it's on.



Then I see the image! No lines or annoying radar or anything - just a plain and nice image from the camera :)

