

Illumination Wires Source

Monday, August 10, 2026 1:38 PM

This is a little project to tap into the ILL+ and ILL- circuit from the combination switch assembly. I had originally tapped into the radio harness for this circuit but decided I wanted to change this. I also have future plans for the combination switch assembly (possibly going to add my own switches here one day).

Parts/tools:

Harness male to female for the 90980-12553 connector

(<https://www.tundras.com/out/?url=https%3A%2F%2Fa.aliexpress.com%2FmqzNbJh&inner=SGFybmVzcyUyMG1hbGUIMjB0byUyMGZlbWFsZSUyMGZvciUyMHRoZSUyMDkwOTgwLTEyNTUzJTlwY29ubmVjdA%3D%3D&post=3887141>) -

\$10.59 shipped - funny enough this harness is advertised as 12pin but I looked at the pic carefully and also confirmed when it came in it is actually the 16pin connector we need and does indeed match the OEM connector part number that we were looking for

~5' of wire - 2 colors (5' each wire) (preferably green and white to match OEM colors) - I had some lying around the shop

Wire cloth tape (see my above posts where I've used this)

Tools:


Wire strippers

Solder and soldering iron

Landscape flag for fishing

Use your wire strippers to GENTLY strip back about a quarter of an inch of sleeve to expose the #8 and #9 wires roughly in the middle of the run from the harness.

I try and follow the OEM colors for things. #8 is ILL- and #9 is ILL+.

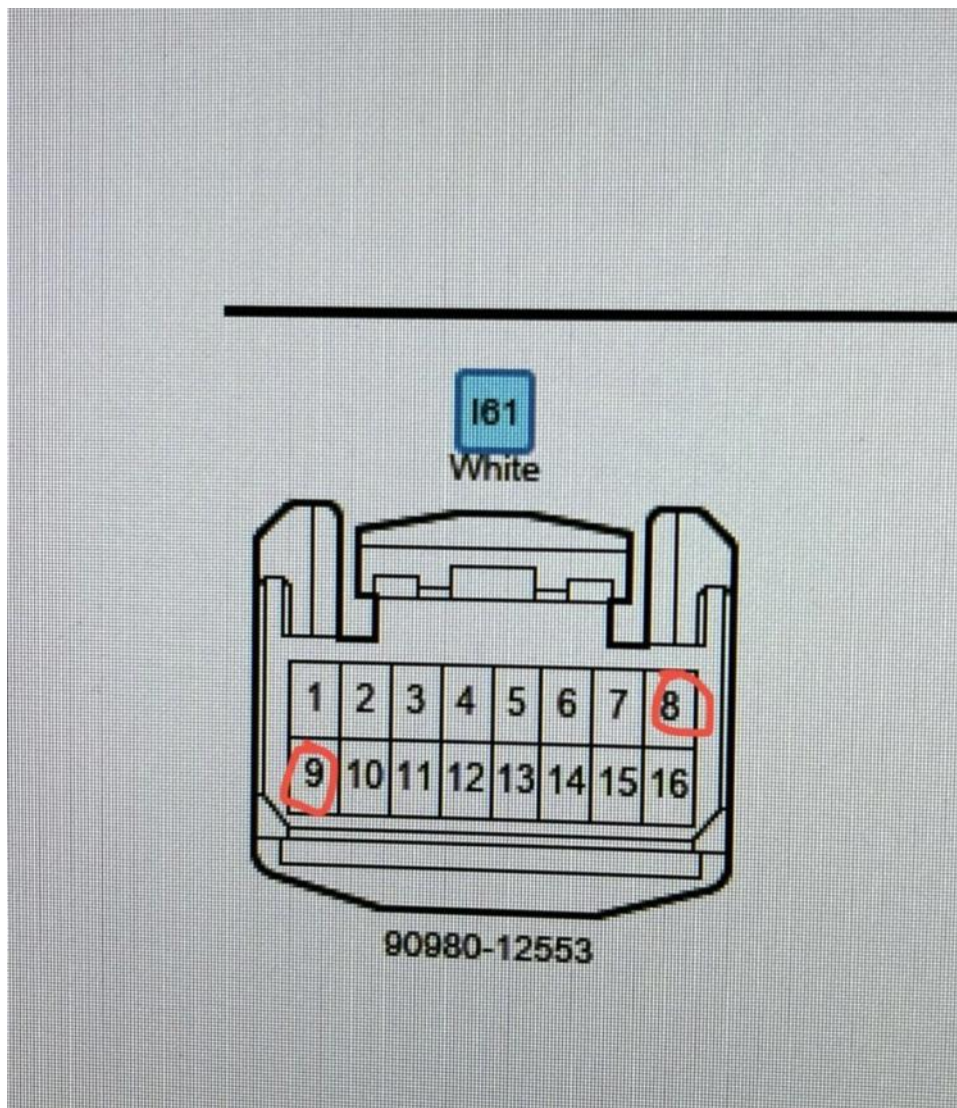



Then I wrapped the solder points with electric tape then some length of the cloth tape on top of that.



Then I took apart the dash up to the combination switch assembly. Then I tied on the end of the wires from that hadn't been connected yet to the end of the glad and led down the cavity with the color end of the flag.



I routed it along the under side of the steering wheel and then popped the driver side access panel to get the wires from the other end. You can see the rough route here.



Then I changed up my connections from my past mods to date from the previous

run I did. The blue wire nut is the ILL+ connections, orange wire nut is still the grounded connection (for my footwell lights), and the grey wire nut is for ILL- connections.



Then I plugged the wire harness in line with the combination switch assembly and tried everything out and it went great! Then I disconnected the illumination wires from the modified radio harness from my anytime backup camera mod I did earlier.

This will be useful for any other switches I add in the future I can come off these wires as a single source point.

