

Slim Credit Card Key Fob Programming

Monday, August 10, 2026 1:42 PM

I decided to go for this slim key fob that lots were talking about. I ended up getting mine from Fred Anderson Dealer for \$178.78 out the door shipped to me. That was a steal considering it retails for ~\$320. It was a 4th of July sale and free shipping. The only other thing I paid for was the activation code for \$15. Here's a thread that talks more about this key card.

I programmed this myself after I got the key. You don't need the dealer if you have the right tools and process and I'll go over that below.

Background - I did try and first get this from fleBay for ~\$100. It DID NOT WORK. Many folks on the main thread talk about this but I saw some fleBay reviews on how some were able to get it programmed so I decided to try it since there were free returns. I can definitely say it wasn't due to the process I followed, it was definitely the key that was the issue. I received this key without it being in the OEM packaging even though it looked and felt like the real thing. There was some issue with it. So just get one from the dealer, don't try fleBay.

Parts & Tools:

8990H-A1010 for the slim key fob

69515-12350 for the slim metal physical key OPTIONAL (I haven't gotten this, yet - may one day but decided I'd start with the fob)

Computer with Techstream or access to Techstream (V18 is what I have and used)

Techstream OBDII dongle to USB (If you have Techstream, you should have this)

Phone (or something with a camera that can access the internet) to purchase a Toyota Rolling Code (I paid \$15 for mine)

Make sure your truck is DTC free (I believe this means error code free - you'll need to confirm this with a scan tool or Techstream before continuing)


About 30min of time

This is what my key fob looked like coming in from Fred Anderson. I like ordering from them since they are always great with prices and they are not too far away (NC shipping to SC is pretty quick).




You need to connect your cable from OBDII to computer, turn the truck to ON position (don't start engine, just press the start button twice to get to ON), then jump into your Techstream.


Then under All ECUs, click on Entry&Start, then continue.

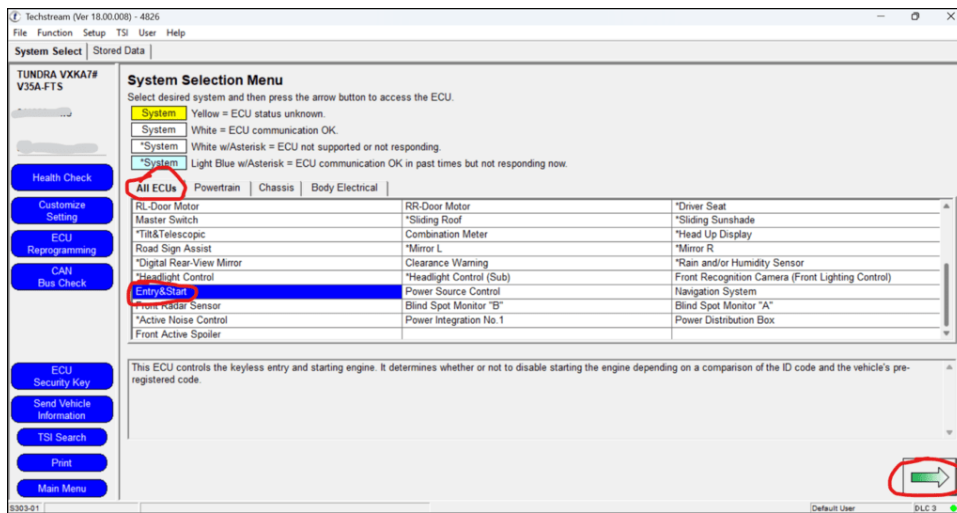

Then click Utility and continue

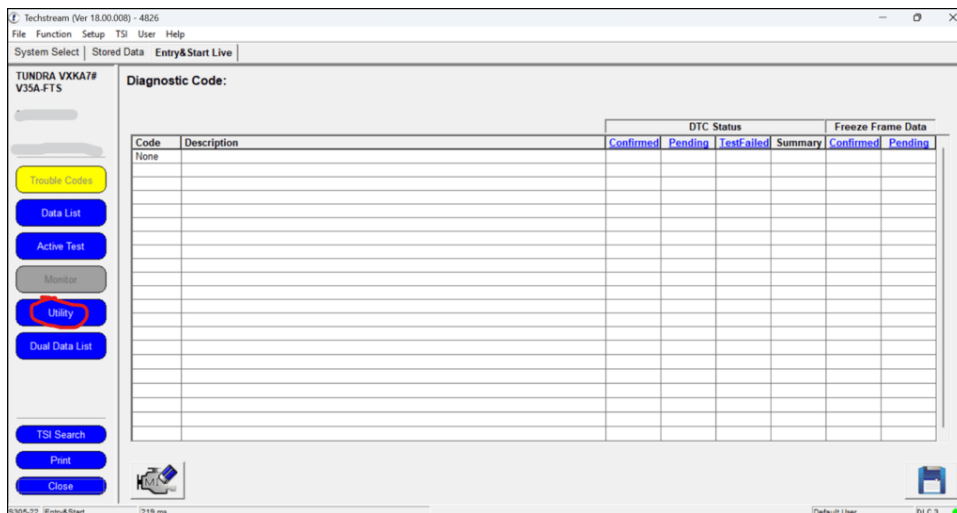

Then Key Code Registration and continue

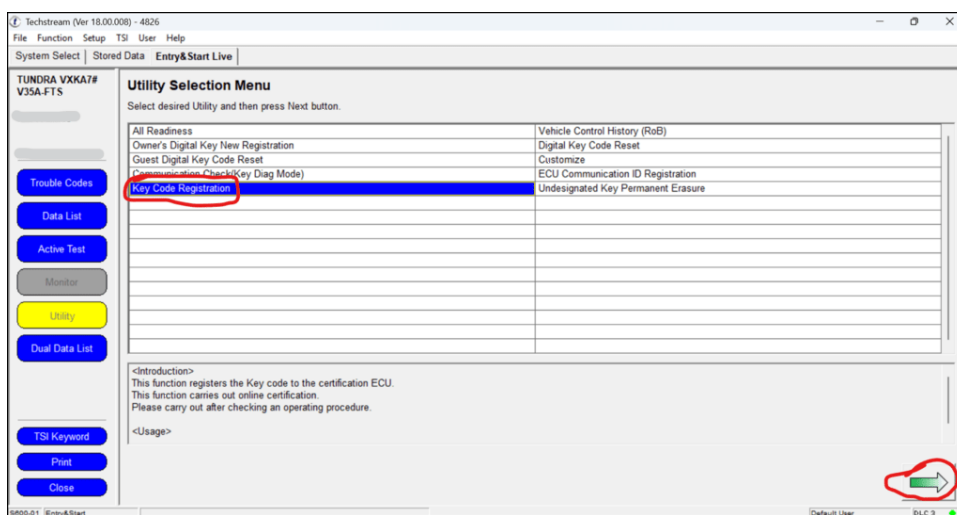

You'll see a screen with some instructions you'll have to confirm then this is

where it gets interesting. Like I said earlier, make sure your truck is DTC free before continuing!


You'll be greeted with the next screen that will have a seed number with 4 lines of data, then another box that asks for a Pass-Code number.

On your phone (or tablet or whatever you have as another device that can access the internet and take pictures), go to this site (<https://www.tundras.com/out/?url=https%3A%2F%2Ffleetkeysupply.com%2Fproducts%2Ftoyota-rolling-code-1&inner=dGhpcyUyMHNpdGU%3D&post=3973134>) to purchase a Toyota rolling code. This was the best and least expensive site I could find that offered this service. I stumbled across this from a FB post. I also didn't want to ask a sketchy locksmith through WhatsApp for a code...

Scroll down on that page and you'll need to check the box to acknowledge there's not DTCs or that if the process fails, there is no money back guarantee.

Then you'll need to input your VIN, then Data 1 (line of info under VIN), then Data 2 (line of info under Data 1), then Data 3 I just chose ADD KEY. Finally, you'll need to take a pic of your Techstream page and attach it there under Data 3.


Here is a snapshot to help:

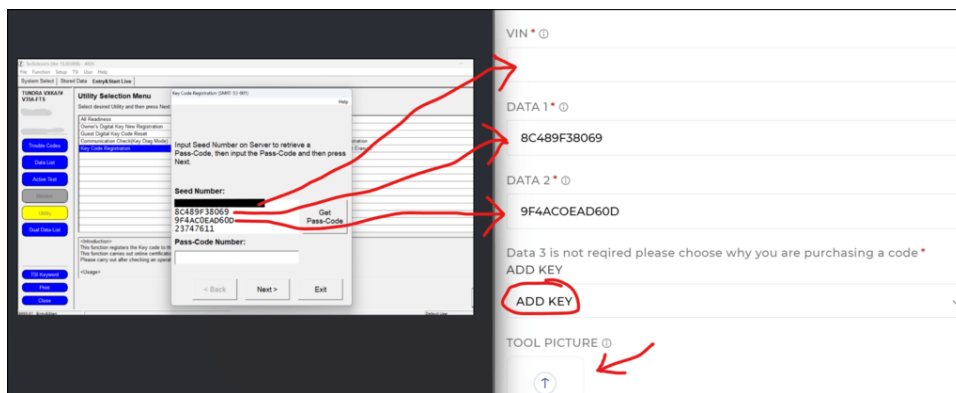


Then click add to cart and checkout - make sure your email address is correct.

During all this part, make sure you STAY ON THE SCREEN IN TECHSTREAM. DON'T LEAVE OR LET YOUR COMPUTER GO TO SLEEP.

You'll get an email confirming your order. Then I only had to wait a minute or two and I got another email with the one-time Pass-Code. I then typed this into the Pass-Code box in Techstream then click next.

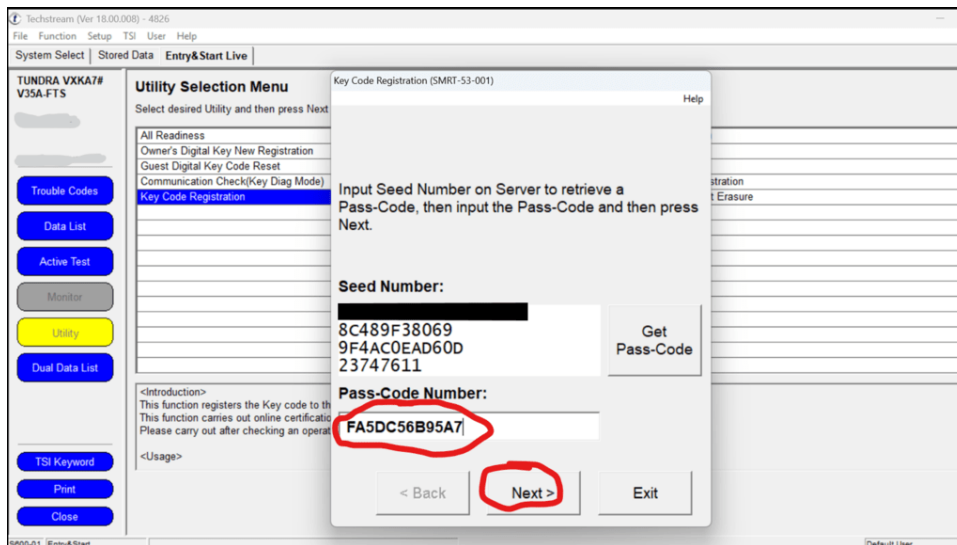

You'll see a screen showing the number of available keys and number of registered keys. I had 2 registered from purchasing the truck, like we all should have. The key here (lol pun intended) is to make sure the number of available spaces is more than 0 then click next.

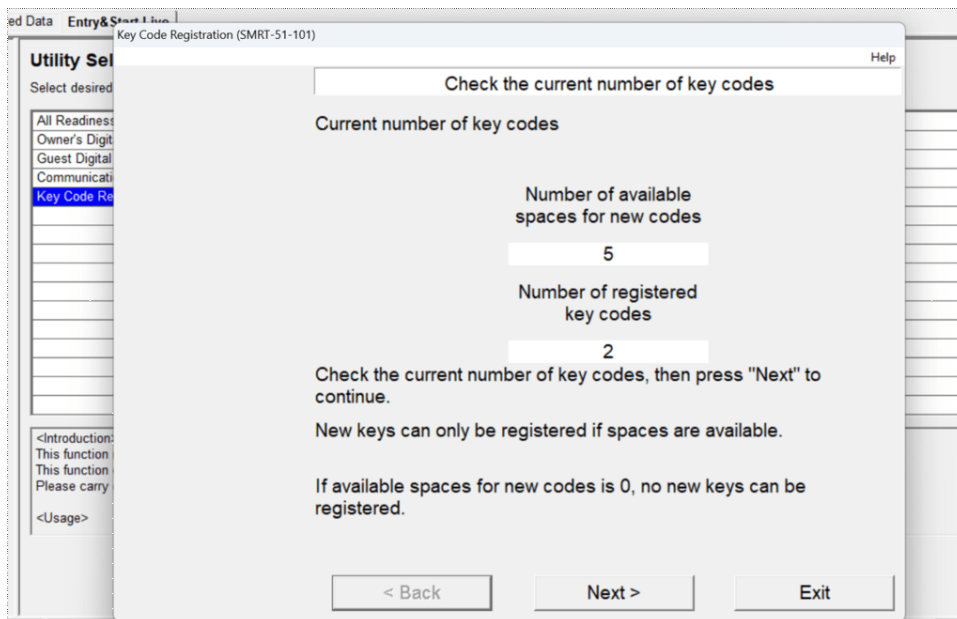


Now, I didn't get pics of the rest of the process because I was worried about running out of time. At this point you aren't under a time constraint but once you get past the instructions and ready to go you only have 30sec per step to get it done. Yes, it's plenty of time but you'll want to be quick.

Here is a reference (<https://www.tundras.com/out/?url=https%3A%2F%2Fstatic.nhtsa.gov%2Fodi%2Ftsbs%2F2024%2FMC-10253225-9999.pdf%23page%3D29%26zoom%3D100%2C40%2C154&inner=SGVyZSUyMGlzJTIwYSUyMHJlZmVyZW5jZQ%3D%3D&post=3973134>)

from NHTSA starting on step 13 from the page you open this to and on that shows the screens you should see just so you get an idea of what to expect. Just make sure to separate the keys like it tells you to. You don't want to risk them being too close to each other or the truck ignition to mess it up.

I followed these steps and it programmed perfectly. Once I got to this final screen, I tested the new fob and it worked just like my other keys!

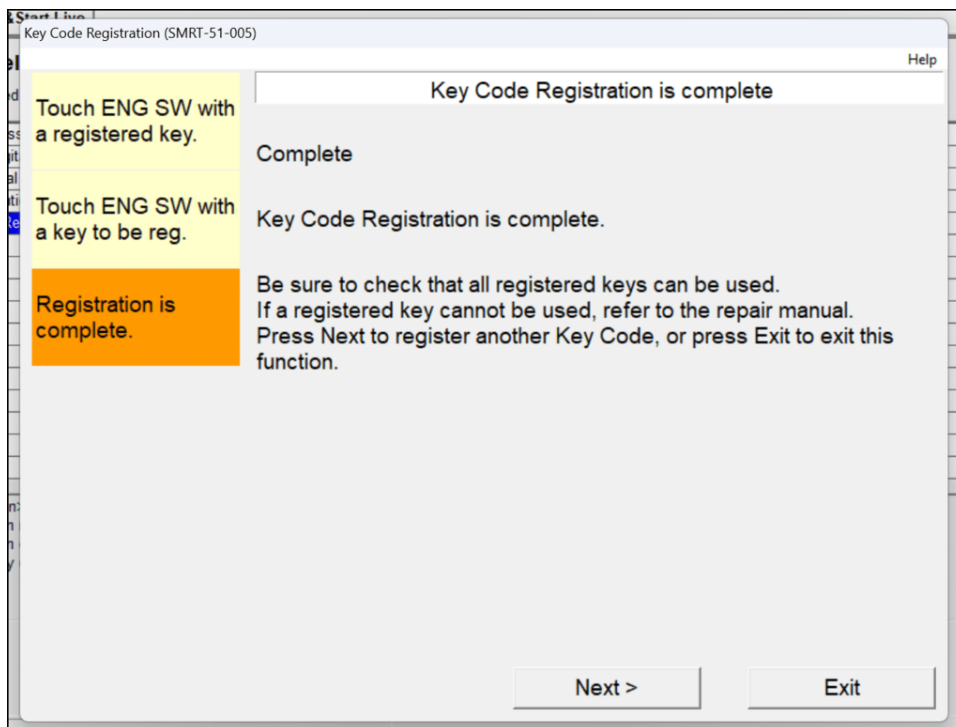

I hope this helps others get this done because it truly is a thin key and should work great over time! Now crack open a "beverage" and enjoy