

Footwell Lighting Upgrade

Monday, August 10, 2026 1:04 PM

Parts:

VLED Universal Footwell Lights - <https://www.tundras.com/out/?url=https%3A%2F%2Fwww.vleds.com%2Ffwk-alm.html&inner=VkxFRCUyMFVuaXZlcnNhbcUyMEZvb3R3ZWxsJTlwTGlnaHRz&post=3851590>

VLED Universal Footwell PWM Dimmer Kit - <https://www.tundras.com/out/?url=https%3A%2F%2Fwww.vleds.com%2Funiversal-footwell-kit-pwm-dimmer-kit.html&inner=VkxFRCUyMFVuaXZlcnNhbcUyMEZvb3R3ZWxsJTlwUFdNJTIwRGltbWVyJTlwS2l0&post=3851590>

VLED Rear Footwell LED Kit Addon - <https://www.tundras.com/out/?url=https%3A%2F%2Fwww.vleds.com%2Frear-fwk-universal-addon.html&inner=VkxFRCUyMFJIYXIlMjBGb290d2VsbCUyMExFRCUyMEtpdCUyMEFkZG9u&post=3851590>


Male plug for connection to light circuit from OEM footwell light location (Thanks @Siblue!)

Some additional wire and solder for tap into illumination wire and create a ground to body connection

Total cost was \$115. I had a VLED kit in my Tacoma and they looked great. I didn't get a true plug and play "kit" from VLED for our Tundra because they don't have one yet but this will make up a full kit. My lights will come on at the "high" brightness when the doors are opened and function the same way as my OEM footwell lights did. The beauty of this kit is the dimmer allows you to connect a "low" brightness power source. I was crafty and connected this to the illumination circuit so that they come on at a dim setting when the headlights turn on at night.

Step 1: See my illumination wires source thread where I ran the +12V illumination wire.

Step 2: I created a ground to body spot since I haven't done this yet and I'll probably use this for other mods in the future. I chose This location circled below. There was conveniently a stud that was welded to a frame member here that I just created a eye connector to a black wire and used a nut I had to secure it. (the picture was taken looking into the driver side panel area)

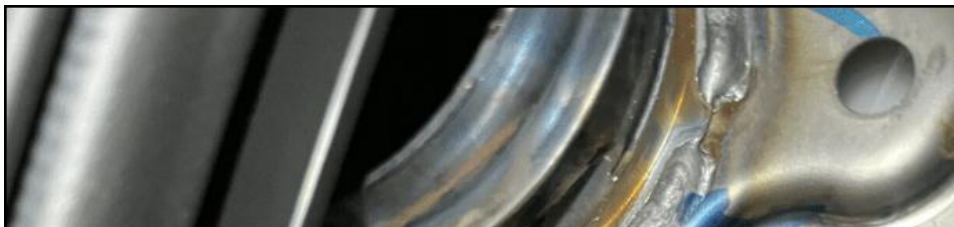



Step 3: Then I made my first connection to a piece from the VLED kit. This one will be for the "low" or dim setting from the dimmer switch when the headlights are on. They have a pigtail wire that comes with a round eye ground connector on one end and the other wire has a compression connector. I ended up cutting those off because I like soldered connections. Just pay attention to polarity. It should be obvious in this one with the wires set up the way they were from VLED. (the picture just shows wire nuts and this is because I was still testing everything worked before soldering)



Step 4: Now I am making the "high" connection that will run off the OEM footwell light connector. This is where I used the male connector that I got from @Siblue and soldered it to a pigtail I created from another wire that I got in the kit. I believe this VLED wire was a 6" connector that I just cut and then made the solder connections. Again, pay attention to polarity. You can see below I have the footwell light connector on the "high" wire with the red tape going to the dimmer and the "low" one is from the previous connection I made which is the white tape on the wire to the dimmer.



Step 5: Then I just connected the first light to that stackup after the dimmer like below. I then tested all the functions to make sure it all worked the way I wanted, then it was time to route everything through the truck. Fun fun.



Step 6: I tucked everything up nice and neat under that panel at the bottom of the driver side, taking caution not to have any wires hang down around where the pedals are. Then I routed the wire I connected after the first LED around the area I drew from the picture below. I had taken out some trim pieces to do that like you see in the pic. I'll say, the best way I've found to route wire is to tape it to the end of a utility flag and then use that to wind it around things - it works great for me and I have a ton of those flags!

Oh, and you can see the difference in the VLED light vs the OEM one in this pic below too!



Step 7: Then it's just a matter of connecting the next LED and securing it under the dash with wires out of the way then snaking the next one to the back seats. I ended up taking the lower door panel trim out to route the wire through and it worked great. VLED kit comes with plenty of extra wire across the kits I ordered so no need to worry about that.

Here's the fronts at night on the low setting when the doors are closed:



Here's the rears also at night on the low setting with the doors closed:

