


Qualcomm Atheros, Inc.

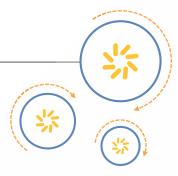

IPQ4018/IPQ4028/IPQ4019/IPQ4029 SOHO Switch UCI Command

User Guide

80-Y9571-10 Rev. B

November 18, 2015

Confidential and Proprietary - Qualcomm Atheros, Inc.

NO PUBLIC DISCLOSURE PERMITTED: Please report postings of this document on public servers or websites to: DocCtrlAgent@qualcomm.com.

Restricted Distribution: Not to be distributed to anyone who is not an employee of either Qualcomm Atheros, Inc. or its affiliated companies without the express approval of Qualcomm Configuration Management.

Not to be used, copied, reproduced, or modified in whole or in part, nor its contents revealed in any manner to others without the express written permission of Qualcomm Atheros, Inc.

- 100 116 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1
For additional information or to submit technical questions go to https://createpoint.qti.qualcomm.com/
Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. All Qualcomm Incorporated trademarks are used with permission. Other product and brand names may be trademarks or registered trademarks of their respective owners.
This technical data may be subject to U.S. and international export, re-export, or transfer ("export") laws. Diversion contrary to U.S. and international law is strictly prohibited.

Revision history

Revision	Date	Description	
Α	June 2015	Initial release	
В	November 2015	Update 2.11.1 to 2.11.4, 2.11.10 and 2.11.11. Add 2.11.21 to 2.11.32.	

Contents

1 Overview	9
2 Switch UCI Commands	10
2.1 ACL commands	10
2.1.1 Rule	
2.1.2 udfprofile	
2.2 COSMAP commands	
2.2.1 dscp2pri	
2.2.2 dscp2dp	
2.2.3 up2pri	
2.2.4 up2dp	
2.2.5 dscp2ehpri	
2.2.6 dscp2ehdp	
2.2.7 up2ehpri	
2.2.8 up2ehdp	
2.2.9 pri2q	
2.2.10 pri2ehq	
2.2.11 egRemark	
2.3 FDB commands	
2.3.1 Entry	
2.3.2 portLearn	
2.3.3 ageCtrl	
2.3.4 Vlansmode	
2.3.5 ageTime	
2.3.6 Ptlearnlimit	
2.3.7 ptlearnexceedcmd	
2.3.8 learnlimit	
2.3.9 Learnexceedcmd	19
2.3.10 Resventry	19
2.3.11 ptLearnstatic	19
2.4 IGMP commands	19
2.4.1 Mode	20
2.4.2 cmd	
2.4.3 portJoin	20
2.4.4 portLeave	21
2.4.5 rp 21	
2.4.6 createStatus	21
2.4.7 Static	
2.4.8 Leaky	
2.4.9 version3	
2.4.10 Queue	
2.4.11 Ptlearnlimit	22
2.4.12 Ptlearnexceedcmd	
2.4.13 Multi	
2.5 IP commands	
2.5.1 Hostentry	
2.5.2 ptarpleran	
2.5.3 arplearn	
2.5.4 Ptipsrcguard	25
2.5.5 ptarpsrcguard	
2.5.6 routestatus	26

26
27
27
27
27
28
28
28
29
29
29
29
30
30
30
30
31
31
31
31
31
31
32
32
32
32
33
33
33
33
34
34
34
34
34
35
35
35
35 35
35 35 35
35 35 35
35 35 35 36
35 35 36 36
35 35 36 36 36
35 35 36 36 36 36
35 35 36 36 36
35 35 36 36 36 37 37
35 35 36 36 36 36
35 35 36 36 36 37 37
35 35 36 36 36 37 37
35 35 36 36 36 37 37 38 39 39
35 35 36 36 37 37 38 39 39
35 35 36 36 37 37 38 39 39 39
35 35 36 36 36 37 37 38 39 39 39
35 35 36 36 37 37 38 39 39 39 39 40
35 35 36 36 36 37 37 38 39 39 39
35 35 36 36 37 37 38 39 39 39 39 40
35 35 36 36 37 37 39 39 40 40
35 35 36 36 37 37 39 39 39 40 40 41

	2.11.3 autoAdv	
2	2.11.4 autoNeg	43
2	2.11.5 txhdr	44
	2.11.6 rxhdr	
	2.11.7 hdrtype	
	2.11.8 flowCtrl	
	2.11.9 flowCtrlforcemode	
	2.11.10 powersave	
2	2.11.11 hibernate	45
2	2.11.12 txmacstatus	45
2	2.11.13 rxmacstatus	45
	2.11.14 txfcstatus	
	2.11.15 rxfcstatus	
	2.11.16 bpstatus	
	2.11.17 linkforcemode	
	2.11.18 macLoopback	
	2.11.19 congeDrop	
	2.11.20 ringfcthreshold	
	2.11.21 leee8023az	
2	2.11.22 crossover	47
2	2.11.23 prefermedium	47
	2.11.24 fibermode	
	2.11.25 localloopback	
	2.11.26 remoteloopback	
	2.11.27 magicframemac	
	2.11.28 wolstatus	
	2.11.29 Interfacemode	
	2.11.30 poweron	
	2.11.31 poweroff	
2	2.11.32 reset	50
2.12 POR	RT_VLAN commands	50
	2.12.1 forceVid	
	2.12.2 forceMode	
	2.12.3 sVlanTPID	
	2.12.4 Invlan	
	2.12.5 tlsMode	
	2.12.6 priPropagation	
	2.12.7 vlanPropagation	
2	2.12.8 translation	52
2	2.12.9 gingMode	52
	2.12.10 qinqRole	
	2.12.11 macvlanxlt	
	2.12.12 netiso	
	2.12.13 Egbypass	
	7 **	
	commands	
2	2.13.1 qTxBufSts	54
	2.13.2 qTxBufNr	
2	2.13.3 ptTxBufSts	54
2	2.13.4 ptRedEn	54
	2.13.5 ptTxBufNr	
	2.13.6 ptRxBufNr	
	2.13.7 ptMode	
	2.13.8 ptModePri	
	2.13.9 ptschMode	
	·	
	2.13.10 ptDefaultSpri	
	2.13.11 ptDefaultCpri	
	2.13.12 ptFSpriSts	
	2.13.13 ptFCpriSts	
2	2.13.14 ptQuRemark	57
2.14 RAT	E commands	57
2	2.14.1 Portpolicer	57
	2.14.2 portshaper	
-	-· ·· – F · · · · · · · · · · · · · · · ·	-

2.14.3 queueshaper	59
2.14.4 aclpolicer	60
2.14.5 ptAddRateByte	60
2.14.6 ptgolflowen	61
2.15 SEC commands	61
2.15.1 mac resv_vid	
2.15.2 mac invalid_src_addr	
2.15.3 ip invalid_ver	
2.15.4 ip set same_addr	
2.15.5 ip ttl_change_status	
2.15.6 ip ttl_val	
2.15.7 ip4 invalid_hl	
2.15.8 ip4 hdr_opts	
2.15.9 ip4 invalid_df	
2.15.10 ip4 frag_offset_min_len	
2.15.11 ip4 frag_offset_min_size	
2.15.12 ip4 frag_offset_max_len	
2.15.13 ip4 invalid_frag_offset	
2.15.14 ip4 invalid_sip	65
2.15.15 ip4 invalid_dip	65
2.15.16 ip4 invalid_chksum	65
2.15.17 ip4 invalid_pl	
2.15.18 ip4 df_clear_status	
2.15.19 ip4 ipid_random_status	
2.15.20 ip6 invalid_dip	
2.15.21 ip6 invalid_sip	
2.15.22 ip6 invalid_pl	
2.15.23 tcp blat	
2.15.24 tcp invalid_hl	
2.15.25 tcp min_hdr_size	
2.15.26 tcp invalid_syn	
2.15.27 tcp su_block	
2.15.27 tcp su_block	
• •	
2.15.29 tcp sap_block	
2.15.30 tcp xmas_scan	
2.15.31 tcp null_scan	
2.15.32 tcp sr_block	
2.15.33 tcp sf_block	
2.15.34 tcp sar_block	
2.15.35 tcp rst_scan	
2.15.36 tcp rst_with_data	
2.15.37 tcp fa_block	
2.15.38 tcp pa_block	
2.15.39 tcp ua_block	70
2.15.40 tcp invalid_chksum	71
2.15.41 tcp invalid_urgptr	71
2.15.42 tcp invalid_opts	71
2.15.43 udp blat	
2.15.44 udp invalid_len	
2.15.45 udp invalid_chksum	
2.15.46 icmp4 ping_pl_exceed	
2.15.47 icmp4 ping_frag	
2.15.48 icmp4 ping_max_pl	
2.15.49 icmp6 ping_pl_exceed	
2.15.50 icmp6 ping_fr	
2.15.51 icmp6 ping_max_pl	
2.16 STP commands	
2.16.1 portState	
2.17 TRUNK commands	
2.17.1 Group	74
2.17.2 Hashmode	

2.18 VLAN commands	74
2.18.1 Entry	75
2.18.2 Member	
2 18 3 learnete	75

1 Overview

This document provides a comprehensive reference for understanding and configuring QCA SOHO switch by UCI (Unified Configuration Interface) format. UCI format is intended to centralize OpenWrt configuration.

Common UCI commands are listed as below:

```
config 'example' 'test'
    option 'string' 'some value'
    option 'boolean' '1'
    list 'collection' 'first item'
    list 'collection' 'second item'
```

Setup switch by UCI format as below:

```
config switch_ext
  option device 'switch0'
  option name 'PortSpeed'
  option port_id '1'
  option speed '10'
```

As shown in this example, every switch configuration contains a 'switch_ext' configuration. Each configuration contains multiple options. 'option name' is made up of module name and feature name.

The following chapters will introduce UCI command format for each module.

NOTE: All configs and options are case-sensitive.

2 Switch UCI Commands

2.1 ACL commands

Config	Description	
rule	Add ACL rule	
udfprofile	Configure user defined field offset and length on a particular port.	

2.1.1 Rule

UCI Command	Description
/*STAG mode, enhanced L2 checking field*/	■ ipv6_dst_address = IPv4 destination IP
option ctagged '1'	ipv6_flow_label = IPv6 flow label
option ctag_vlan_id '3'	<pre>ip_protocol = 0-0xff</pre>
option ctag_vlan_id_mask '0xff'	• ip_dscp = 0-63
option ctag_vlan_priority '1'	ip_dst_port = IP destination port
option ctag_vlan_priority_mask '1'	<pre>ip_src_port = IP source port</pre>
option ctag_cfi '1'	icmp_type = ICMP type
option stagged '1'	icmp_code = ICMP code
option stag_vlan_id '3'	tcp_flag = TCP flag
option stag_vlan_id_mask '0xff'	■ ripv1 = RIP packet
option stag_vlan_priority '1'	dhcpv4 = DHCPv4 packet
option stag_vlan_priority_mask '1'	dhcpv6 = DHCPv6 packet
option stag_dei '1'	inverse_check_fields = 0 1
·	 0 = Do not inverse any field.
/*IPv4 L3 checking field*/	1 = Inverse all fields in this rule.
option ipv4_src_address '1.1.1.1'	<pre>packet_drop = yes no</pre>
option ipv4_src_address_mask '1.1.1.1'	redirect_to_cpu = yes no
option ipv4_dst_address '1.1.1.1'	<pre>copy_to_cpu = yes no</pre>
option ipv4_dst_address_mask '1.1.1.1'	redirect_to_ports = destination ports bitmap
/*IPv6 L3 checking field*/	mirror = yes no
option ipv6_src_address 'ff::00'	dscp_of_remark = 0-63
option ipv6_src_address_mask 'ff::00'	<pre>queue_of_remark = 0-7</pre>
option ipv6_dst_address 'ff::00'	port_bitmap = define into which ports this
option ipv6_dst_address_mask 'ff::00'	rule binds.
option ipv6_flow_label '0x12345'	 Bit[0] for port 0
option ipv6_flow_label_mask '0xfffff'	 Bit[1] for port 1
	·
/*IP L4 checking field*/	Bit[6] for port 6
option ip_protocol '1'	remark_lookup_vid = yes no
option ip_protocol_mask '1'	stag_vid_of_remark = 0-4095
option ip_dscp '1'	stag_priority_of_remark = 0-7
option ip_dscp_mask '1'	stag_dei_of_remark = 0 1
option ip_dst_port '3'	ctag_vid_of_remark = 0-4095
option ip_dst_port_mask '0xff'	ctag_priority_of_remark = 0-7
option ip_src_port '3'	ctag_dei_of_remark = 0 1
option ip_src_port_mask '0xff'	action_policer_id = 0-31
	action_arp_ptr = 0-127
/*ICMP tcp rip dhcp flag checking field*/	action_wcmp_ptr = 0-3
option icmp_type '100'	action_snat = yes no
option icmp_type_mask '0xff'	action_dnat = yes no
option icmp_code '100'	bypass_egress_translation = yes no
option icmp_code_mask '0xff'	interrupt_trigger = yes no
option tcp_flag '100'	
option tcp_flag_mask '0xff'	
	1

UCI Command	Description
/*RIP, DHCP checking field*/	
option ripv1 '1'	
option dhcpv4 '1'	
option dhcpv6 '1'	
/*rule forward action. if drop is yes, no action is valid. redirect_to_cpu and copy_to_cpu can't exist together.*/ option inverse_check_fields 'no' option packet_drop 'no' option redirect_to_cpu 'y' option copy_to_cpu 'y' option redirect_to_ports '0x1e' option mirror 'y'	
/*lala a ala a a a a a a a a a a a	
/*rule vlan change action*/ option remark_lookup_vid 'y'	
option stag_vid_of_remark '100'	
option stag_priority_of_remark '2'	
option stag_dei_of_remark '1'	
option ctag_vid_of_remark '100'	
option ctag_priority_of_remark '10'	
option ctag_dei_of_remark '4'	
/*rule dscp change action*/	
option dscp_of_remark '1'	
/*rule queue change action*/	
option queue_of_remark '1'	
/*rule rate limit action*/	
option action_policer_id '1'	
/*rule L3 action. arp and wcmp can't exist together; snat and dnat can't exist together.*/	
option action_arp_ptr '1'	
option action_wcmp_ptr '1'	
option action_snat 'y'	
option action_dnat 'y'	
/*rule egress qinq bypass action and interrupt trigger action*/	
option bypass_egress_translation 'y'	
option interrupt_trigger 'y'	

NOTE: For rule config, below options are mandatory. Other check fields or result items are optional.

```
option device 'switch0'
option name 'AclRule'
option rule_id '1'
option priority '0'
```

```
option rule_type 'ip4'
option port_bitmap '0x1e'
option packet drop 'no'
```

2.1.2 udfprofile

UCI Command	Description
config switch_ext 'acl' option device 'switch0' option name 'AclUdfprofile' option port '2' option user_defined_type 'l2' option user_defined_offset '1' option user_defined_length '4'	Set user defined field offset and length on a particular port. port = 0-6 user_defined_type = I2/I2snap/I3/I3plus/I4 user_defined_offset = offset value user_defined_length = 0-15

2.2 COSMAP commands

Config	Description
dscp2pri	Configure DSCP to internal priority mapping.
dscp2dp	Configure DSCP to drop precedence mapping.
up2pri	Configure 802.1P to internal priority mapping.
up2dp	Configure 802.1P to drop precedence mapping.
*dscp2ehpri	Configure DSCP to internal priority mapping for port 0, 5, 6.
*dscp2ehdp	Configure DSCP to drop precedence mapping for port 0, 5, 6.
*up2ehpri	Configure 802.1P to internal priority mapping for port 0, 5, 6.
*up2ehdp	Configure 802.1P to drop precedence mapping for port 0, 5, 6.
pri2q	Configure internal priority to queue mapping.
pri2ehq	Configure internal priority to enhanced queue mapping.
egRemark	Configure egress remark table.

^{1. *} Available for ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029 only.

2.2.1 dscp2pri

UCI Command	Description
config switch_ext option device 'switch0' option name 'CosmapDscp2Pri' option dscp '7' optoin pri '3'	Set DSCP to internal priority mapping. dscp = 0-63 pri = 0-7

2.2.2 dscp2dp

UCI Command	Description
config switch_ext option device 'switch0' option name 'CosmapDscp2Dp' option dscp '7' optoin cfi '1'	Set DSCP to drop precedence mapping. dscp = 0-63 cfi = 0-1

2.2.3 up2pri

UCI Command	Description
config switch_ext	Set 802.1P to internal priority mapping.
option device 'switch0'	■ up = 0-7
option name 'CosmapUp2Pri'	priority = 0-7
option up '7'	
option pri '3'	

2.2.4 up2dp

UCI Command	Description
config switch_ext	Set 802.1P to drop precedence mapping.
option device 'switch0'	■ up = 0-7
option name 'CosmapUp2Dp'	■ cfi = 0-1
option up '7'	
option cfi '1'	

2.2.5 dscp2ehpri

UCI Command	Description
config switch_ext option device 'switch0' option name 'CosmapDscp2ehPri' option dscp '7' optoin pri '3'	Set DSCP to internal priority mapping for port 0, 5, 6. dscp = 0-63 pri = 0-7

^{1.} Available for ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029 only.

2.2.6 dscp2ehdp

UCI Command	Description
config switch_ext option device 'switch0' option name 'CosmapDscp2ehDp' option dscp '7' optoin cfi '1'	Set DSCP to drop precedence mapping for port 0, 5, 6. dscp = 0-63 cfi = 0-1

^{1.} Available for ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029 only.

2.2.7 up2ehpri

UCI Command	Description
config switch_ext	Set 802.1P to internal priority mapping for port 0, 5, 6.
option device 'switch0'	■ up = 0-7
option name 'CosmapUp2ehPri'	• priority = 0-7
option up '7'	
option pri '3'	

^{1.} Available for ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029 only.

2.2.8 up2ehdp

UCI Command	Description
config switch_ext	Set 802.1P to drop precedence mapping for port 0, 5, 6.
option device 'switch0'	■ up = 0-7
option name 'CosmapUp2ehDp'	■ cfi = 0-1
option up '7'	
option cfi '1'	

^{1.} Available for ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029 only.

2.2.9 pri2q

Command	Description
config switch_ext	Set internal priority to queue mapping.
option device 'switch0'	■ pri = 0-7
option name 'CosmapPri2Q'	■ queue = 0-3
option pri '3'	
option queue '3'	

2.2.10 pri2ehq

Command	Description
config switch_ext	Set internal priority to port 0/5/6 queue mapping.
option device 'switch0'	■ pri = 0-7
option name 'CosmapPri2Ehq'	enhance_queue = 0-5
option pri '3'	
option enhance_queue '5'	

2.2.11 egRemark

UCI Command	Description
config switch_ext	Set egress remark table
option device 'switch0'	• id = 0-15
option name 'CosmapEgRemark'	remark_dscp = enable disable
option id '1'	remark_up = enable disable
option remark_dscp 'enable'	green_dscp = 0-63, remark green frame DSCP
option remark_up 'enable'	yellow_dscp = 0-63, remark yellow frame DSCP
option green_dscp '63'	green_up = 0-7, remark green frame 802.1P
option yellow_dscp '7'	yellow_up = 0-7, remark yellow frame 802.1P
option green_up '7'	
option yellow_up '1'	

2.3 FDB commands

Config	Description
entry	Configure FDB entry.
portLearn	Configure dynamic address learning status on a particular port.
ageCtrl	Configure dynamic address aging status on particular device.
vlansmode	Configure FDB search mode when VLAN invalid.
ageTime	Configure dynamic address aging time.
ptlearnlimit	Configure dynamic address learning count limit on a particular port.
ptlearnexceedcmd	Configure dynamic address learning count exceed command on a particular port.
learnlimit	Configure dynamic address learning count limit.
learnexceedcmd	Configure dynamic address learning count exceed command.
resventry	Configure reserved FDB entry.
ptLearnstatic	Configure FDB entry learning static status of a particular port.

2.3.1 Entry

UCI Command	Description
config switch_ext option device 'switch0' option name 'FdbEntry' option addr 11-22-33-44-55-66 option fid '600' option dacmd 'forward' option sacmd 'forward' option dest_port '1' option static 'yes' option leaky 'no' option mirror 'no' option clone 'no' option queue_override 'no' option cross_pt_state 'no' option white_list_en 'no' option load_balance '2'	Add a FDB entry. addr = xx-xx-xx-xx-xx-xx fid = 0-65535 dacmd forward = packets are normally forwarded cropepu = packets are copied to CPU rdtcpu = packets are redirected to CPU sacmd forward = packets are normally forwarded drop = packets are normally forwarded drop = packets are dropped crycpu = packets are copied to CPU rdtcpu = packets are redirected to CPU rdtcpu = packets are redirected to CPU dest port = 0-6 static = yes no leaky = yes no nirror = yes no queue override = yes no vhite_list_en = yes no load_balance_en = yes no, available for IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only load_balance = 0-3, available for IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only

2.3.2 portLearn

UCI Command	Description
config switch_ext	Set dynamic address learning status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'FdbPortLearn'	learn_status = enable disable
option port_id '1'	
option learn_status 'enable'	

2.3.3 ageCtrl

UCI Command	Description
config switch_ext	Set dynamic address aging status on particular device.
option device 'switch0'	aging_status = enable disable
option name 'FdbAgeCtrl'	
option aging_status 'enable'	

2.3.4 Vlansmode

UCI Command	Description
config switch_ext option device 'switch0' option name 'FdbVlansmode' option vlan_searching_mode 'ivl'	Set FDB search mode when VLAN is invalid. • vlan_searching_mode = ivl svl

2.3.5 ageTime

UCI Command	Description
config switch_ext	Set dynamic address aging time.
option device 'switch0'	aging_time = 7-458745, in second
option name 'FdbAgeTime'	
option aging_time '100'	

2.3.6 Ptlearnlimit

UCI Command	Description
config switch_ext option device 'switch0' option name 'FdbPtlearnlimit' option port_id '1' option learn_limit_status 'enable' option learn_limit_counter '10'	Set dynamic address learning count limit on a particular port. port_id = 0-6 learn_limit_status = enable disable learn_limit_counter = 0-1024

2.3.7 ptlearnexceedcmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'FdbPtlearnexceedcmd' option port_id '1' option learn_exceed_cmd 'drop'	Set dynamic address learning count exceed command on a particular port. port_id = 0-6 learn_exceed_cmd forward = packets are normally forwarded drop = packets are dropped cpycpu = packets are copied to CPU rdtcpu = packets are redirected to CPU

2.3.8 learnlimit

UCI Command	Description
config switch_ext	Set dynamic address learning count limit.
option device 'switch0'	learn_limit_status = enable disable
option name 'FdbLearnlimit'	learn_limit_counter = 0-2048
option learn_limit_status 'enable'	
option learn_limit_counter '100'	

2.3.9 Learnexceedcmd

UCI Command	Description
config switch_ext	Set dynamic address learning count exceed command.
option device 'switch0'	learn_exceed_cmd
option name 'FdbLearnexceedcmd'	 forward = packets are normally forwarded
option learn_exceed_cmd 'drop'	 drop = packets are dropped
	 cpycpu = packets are copied to CPU
	 rdtcpu = packets are redirected to CPU

2.3.10 Resventry

UCI Command	Description
config switch_ext	Add a reserved FDB entry.
option device 'switch0'	addr = xx-xx-xx-xx-xx
option name 'FdbResventry'	• fid = 0-65535
option addr '11-22-33-44-ee-66'	dacmd = forward drop cpycpu rdtcpu
option fid '100'	sacmd = forward drop cpycpu rdtcpu
option dacmd 'forward'	dest port = 0-6
option sacmd 'forward'	static = yes no
option dest_port '1'	leaky = yes no
option static 'yes'	mirror = yes no
option leaky 'no'	■ clone = yes no
option mirror 'no'	queue override = yes no
option clone 'no'	<pre>cross_pt_state = yes no</pre>
option queue_override 'no'	white_list_en = yes no
option cross_pt_state 'no'	
option white_list_en 'no'	

2.3.11 ptLearnstatic

Command	Description
config switch_ext	Set FDB entry learning static status of a particular port.
option device 'switch0'	port_id = 0-6
option name 'FdbPtLearnstatic'	learn_static_status = enable disable
option port_id '1'	
option learn_static_status 'enable'	

2.4 IGMP commands

Config	Description
mode	Configure IGMP /MLD packets snooping status on a particular port.
cmd	Configure IGMP / MLD packets forwarding command.
portJoin	Configure IGMP / MLD join packets hardware acknowledgement status on particular port.

Config	Description
portLeave	Configure IGMP / MLD leave packets hardware acknowledgement status on a particular port.
rp	Configure IGMP / MLD router ports.
createStatus	Configure the status of creating multicast entry during IGMP/MLD Join/leave procedure.
static	Configure the static status of multicast entry which learned by hardware.
leaky	Configure the leaky status of multicast entry which learned by hardware.
version3	Configure IGMP v3/ MLD v2 packets hardware acknowledgement status.
queue	Configure the queue status of multicast entry which learned by hardware.
ptlearnlimit	Configure IGMP hardware learning count limit on a particular port.
ptlearnexceedcmd	Configure IGMP hardware learning count exceed command on a particular port.
multi	Configure IGMP / MLD entry.

2.4.1 Mode

UCI Command	Description
config switch_ext	Set IGMP / MLD packets snooping status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'IgmpMode'	igmp_mode = enable disable
option port_id '1'	
option igmp_mode 'enable'	

2.4.2 cmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'lgmpCmd' option igmp_command 'cpycpu'	Set IGMP / MLD packets forwarding command. This operation will take effect only after enabling IGMP / MLD snooping igmp_command forward = packets are normally forwarded drop = packets are dropped cpycpu = packets are copied to CPU rdtcpu = packets are redirected to CPU

2.4.3 portJoin

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpPortJoin' option port_id '1' option join_status 'enable'	Set IGMP / MLD join packets hardware acknowledgement status on particular port. port_id = 0-6 join_status enable = hardware will learn or change multicast entry dynamically. disable = hardware will not learn or change multicast entry dynamically.

2.4.4 portLeave

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpPortLeave' option port_id '1' option leave_status 'enable'	Set IGMP / MLD leave packets hardware acknowledgement status on a particular port. port_id = 0-6 leave_status enable = hardware will delete or change multicast entry dynamically. disable = hardware will not delete or change multicast entry dynamically.

2.4.5 rp

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpRp' option route_port_bitmap '0x40'	Set IGMP / MLD router ports. After enabling IGMP / MLD join/leave feature on a particular port, IGMP / MLD join/leave packets received on this port will be forwarded to router ports. route_port_bitmap BIT[0] = port 0 BIT[1] = port 1 BIT[2] = port 2 BIT[3] = port 3 BIT[4] = port 4 BIT[5] = port 5 BIT[6] = port 6

2.4.6 createStatus

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpCreateStatus' option create_status 'enable'	Set the status of creating multicast entry during IGMP / MLD join/leave procedure. • create_status • enable = hardware will create and delete multicast entry dynamically.
	 disable = hardware only can change destination ports of existing multicast entry.

2.4.7 Static

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpStatic' option static_status 'enable'	Set the static status of multicast entry which learned by hardware. static_status enable = hardware will not age out multicast entry which learned by hardware. disable = hardware will age out multicast entry which learned by hardware.

2.4.8 Leaky

UCI Command	Description
config switch_ext option device 'switch0' option name 'lgmpLeaky' option leaky_status 'enable'	Set the leaky status of multicast entry which learned by hardware. • leaky_status • enable = hardware will set leaky flag of multicast entry which learned by hardware.
	 disable = hardware will not set leaky flag of multicast entry which learned by hardware.

2.4.9 version3

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpVersion3' option version3_status 'enable'	Set IGMPv3/MLDv2 packets hardware acknowledgement status. version3_status enable = hardware will create or change multicast entry after receiving IGMPv3/MLDv2 packets dynamically. disable = hardware will not create or change multicast entry after receiving IGMPv3/MLDv2 packets dynamically.

2.4.10 Queue

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpQueue' option status 'enable' option queue_id '0'	Set the queue status of multicast entry which learned by hardware. status entry enable = hardware will set queue flag of multicast entry
	which learned by hardware. disable = hardware will not set queue flag of multicast entry which learned by hardware.
	• queue_id = 0-7

2.4.11 Ptlearnlimit

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpPtlearnlimit' option port_id '1' option learn_limit_status 'enable' option learn_limit_counter '10'	Set IGMP hardware learning count limit on a particular port. port_id = 0-6 learn_limit_status = enable disable learn_limit_counter = 0-1024

2.4.12 Ptlearnexceedcmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpPtlearnexceedcmd' option port_id '1' option learn_exceed_cmd 'cpycpu'	Set IGMP hardware learning count exceed command on a particular port. port_id = 0-6 learn_exceed_cmd forward = packets are normally forwarded drop = packets are dropped cpycpu = packets are copied to CPU rdtcpu = packets are redirected to CPU

2.4.13 Multi

UCI Command	Description
config switch_ext option device 'switch0' option name 'IgmpMulti' option group_type '0' option group_ip_addr '224.0.0.1' option source_type '0' option source_ip_addr '0.0.0.0' option portmap '0x14'	Set IGMP/MLD entry. group_type 0 = IPv4 Other = IPv6 group_addr = IPv4 or IPv6 address source_type 0 = IPv4 Other = IPv6 source_addr = IPv4 or IPv6 address portmap BIT[0] = port 0 BIT[1] = port 1 BIT[2] = port 2 BIT[3] = port 3 BIT[4] = port 4 BIT[5] = port 5 BIT[6] = port 6

2.5 IP commands

Config	Description
hostentry	Add a host entry.

Config	Description
ptarplearn	Set/get port based ARP learn flag.
arplearn	Set/get ARP learn mode.
ptipsrcguard	Set/get port based IP source guard.
ptarpsrcguard	Set/get port based ARP source guard.
routestatus	Set/get routing status.
intfentry	Add, delete and next interface entry.
ipunksrc	Set/get IP source unknown forwarding command.
arpunksrc	Set/get ARP source unknown forwarding command.
ipagetime	Set/get IP aging time.
wcmphashmode	Set/get WCMP hash mode.
* defaultflowcmd	Set default flow command.
* defaultrtflowcmd	Set default RT flow command.
* hostroute	Set host route entry.
* defaultroute	Set default route entry.
* vrfbaseaddr	Set VRF base address.
* vrfbasemask	Set VRF base address mask.
* Rfsip4	Set IP4 load balance.
* Rfsip6	Set IP6 load balance.

^{1. *} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.1 Hostentry

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpHostentry' option entry_id '0' option entry_flags '1' option entry_status '0xf' option ip_addr '1.1.1.1' option mac_addr '00-00-00-00-11' option interface_id '0' opton load_balance_num '0' option vrf_id '0' option port_id '4' option action 'forward' option counter 'no'	Add a host entry with below parameter: entryid = 0-1023 entryflags #define FAL_IP_IP4_ADDR #define FAL_IP_IP6_ADDR #define FAL_IP_CPU_ADDR #define FAL_IP_CPU_ADDR Ox4 entry_status = 0-15 0 = indicates entry is empty. 1-7 = indicates entry is dynamic and valid. 8-14 = entry is dynamic and valid, can be aged but can't be changed by any other address. 15 = indicates entry is static and can't be aged or changed by hardware. ip4 addr = IPv4 address mac addr = MAC address interface id = 0-4094 load_balance_num = 0-3 (available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only) vrf_id = 0-7 (available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only) port id = 0-6
	 action = forward mirror = yes no counter = yes no

2.5.2 ptarpleran

UCI Command	Description
config switch_ext	Set port based ARP learn flag.
option device 'switch0'	■ port = 0-6
option name 'IpPtarplearn'	• status
option port '2'	BIT 0 = ARP REQ
option status '3'	□ BIT 1 = ARP ACK

2.5.3 arplearn

UCI Command	Description
config switch_ext	Set ARP learn mode.
option device 'switch0'	mode = <learnlocal learnall></learnlocal learnall>
option name 'IpArplearn'	
option mode 'learnall'	

2.5.4 Ptipsrcguard

UCI Command	Description
config switch_ext option device 'switch0' option name 'IpPtipsrcguard' option port '2' option source_guard_mode 'mac_ip_port_vlan'	Set port based IP source guard. port = 0-6 source_guard_mode = <mac_ip mac_ip_port mac_ip_vlan mac_ip_port_vlan no_guard></mac_ip mac_ip_port mac_ip_vlan mac_ip_port_vlan no_guard>

2.5.5 ptarpsrcguard

UCI Command	Description
config switch_ext option device 'switch0'	Set port based ARP source guard. port = 0-6
option name 'IpPtarpsrcguard' option port '2' option source_guard_mode 'mac_ip_port_vlan'	<pre>source_guard_mode =</pre>

2.5.6 routestatus

UCI Command	Description
config switch_ext option device 'switch0'	Set routing status. status = <enable disable></enable disable>
option name 'IpRoutestatus' option status 'enable'	

2.5.7 Intfentry

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpIntfentry' option entry_id '0' option vrf_id '0' option vlan_low '1' option vlan_high '1'	Add interface entry. • entry_id = 0-7 • vrf_id = 0-7 (available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only)
option mac_addr '00-00-00-00-00-11' option ipv4_route 'yes' option ipv6_route 'yes'	

2.5.8 ipunksrc

UCI Command	Description
config switch_ext option device 'switch0' option name 'lplpunksrc' option action 'rdtcpu'	Set IP source unknown forwarding command. action = <forward drop cpycpu rdtcpu></forward drop cpycpu rdtcpu>

2.5.9 arpunksrc

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpArpunksrc' option action 'forward'	Set ARP source unknown forwarding command. action = <forward drop cpycpu rdtcpu></forward drop cpycpu rdtcpu>

2.5.10 ipagetime

UCI Command	Description
config switch_ext	Set IP aging time.
option device 'switch0'	age_time = 0-255
option name 'IpIpAgetime'	 6s*N. 0 means aging disable.
option age_time '10'	

2.5.11 wcmphashmode

UCI Command	Description	
config switch_ext option device 'switch0'	Set/get WCMP hash mode. wcmp_hash_mode	
option name 'lpWcmphashmode' option wcmp_hash_mode '3'	 #define FAL_WCMP_HASH_KEY_SIP #define FAL_WCMP_HASH_KEY_DIP #define FAL_WCMP_HASH_KEY_SPORT #define FAL_WCMP_HASH_KEY_DPORT 	0x1 0x2 0x4 0x8

2.5.12 defaultflowcmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpDefaultflowcmd' option vrf_id '0'	 Set default flow command. Flow_type FAL_FLOW_LAN_TO_LAN = 0 FAL_FLOW_WAN_TO_LAN
option flow_type 'lan2wan' option flow_cmd 'forward'	 FAL_FLOW_WAN_TO_LAN FAL_FLOW_LAN_TO_WAN FAL_FLOW_WAN_TO_WAN Flow cmd
	 FAL_DEFAULT_FLOW_FORWARD = 0 FAL_DEFAULT_FLOW_DROP FAL_DEFAULT_FLOW_RDT_TO_CPU FAL_DEFAULT_FLOW_ADMIT_ALL

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.13 defaultrtflowcmd

UCI Command	Description
config switch_ext	Set default RT flow command.
option device 'switch0'	Flow_type
option name 'IpDefaultrtflowcmd'	<pre>- FAL_FLOW_LAN_TO_LAN = 0</pre>
option vrf_id '0'	□ FAL_FLOW_WAN_TO_LAN
option flow_type 'lan2wan'	□ FAL_FLOW_LAN_TO_WAN
option flow_cmd 'forward'	□ FAL_FLOW_WAN_TO_WAN
	■ Flow_cmd
	FAL_DEFAULT_FLOW_FORWARD = 0
	 FAL_DEFAULT_FLOW_DROP
	FAL_DEFAULT_FLOW_RDT_TO_CPU
	□ FAL_DEFAULT_FLOW_ADMIT_ALL

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.14 hostroute

UCI Command	Description
config switch_ext option device 'switch0' option name 'IpHostRoute' option entry_id '0' option entry_valid '1' option vrf_id '0' option ip_version '0' option ip_addr '0.0.0.0' option prefix_length '15'	 Set host route entry. Entry_id = 0-15 Entry_valid = 0-1 Vrf_id = 0-7 Ip_version = 0-1 Prefix_length = 0-127

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.15 defaultroute

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpDefaultRoute' option entry_id '0' option entry_valid '1' option vrf_id '0' option route_type '0' option index '0'	Set default route entry. Entry_id = 0-15 Entry_valid = 0-1 Vrf_id = 0-7 Route_type = 0-1 index = 0-127

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.16 vrfbaseaddr

UCI Command	Description
config switch_ext	Set VRF base IP address.
option device 'switch0'	■ Vrf_id = 0-7
option name 'IpVrfbaseaddr'	
option vrf_id '0'	
option base_addr '0.0.0.0'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.17 vrfbasemask

UCI Command	Description
config switch_ext	Set VRF base IP address mask.
option device 'switch0' option name 'IpVrfbasemask'	■ Vrf_id = 0-7
option vrf_id '0' option base_mask '255.0.0.0'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.18 Rfsip4

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpRfsip4' option mac_addr '00-00-00-00-01' option ip4_addr '0.0.0.0' option vlan_id '1' option load_balance '1'	Set IP4 load balance value.

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.5.19 Rfsip6

UCI Command	Description
config switch_ext option device 'switch0' option name 'lpRfsip6' option mac_addr '00-00-00-01' option ip6_addr '0.0.0.0' option vlan_id '1' opton load_balance '1'	Set IP6 load balance value.

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.6 LEAKY commands

Config	Description	
ucMode	Configure unicast packets leaky mode.	
mcMode	Configure multicast packets leaky mode.	
arpMode	Configure ARP packets leaky mode.	
ptUcMode Set/get port based unicast packets leaky mode.		
ptMcMode	Set/get port based multicast packets leaky mode.	

2.6.1 ucMode

UCI Command	Description
config switch_ext	Configure unicast packets leaky mode.
option device 'switch0'	unicast_leaky_mode = <port fdb></port fdb>
option name 'LeakyUcMode'	
option unicast_leaky_mode 'port'	
leaky ucMode set <port fdb></port fdb>	

2.6.2 mcMode

UCI Command	Description
config switch_ext	Configure multicast packets leaky mode.
option device 'switch0'	multicast_leaky_mode = <port fdb></port fdb>
option name 'LeakyMcMode'	
option multicast_leaky_mode 'port'	

2.6.3 arpMode

UCI Command	Description
config switch_ext option device 'switch0' option name 'LeakyArpMode' option port '2' option status 'enable'	Configure ARP packets leaky mode. status = <enable disable></enable disable>

2.6.4 ptUcMode

UCI Command	Description
config switch_ext option device 'switch0'	Set port based unicast packets leaky mode. status = <enable disable></enable disable>
option name 'LeakyPtUcMode'	otatao = torrabiojaleabios
option port '2' option status 'enable'	

2.6.5 ptMcMode

UCI Command	Description
config switch_ext	Set port based multicast packets leaky mode.
option device 'switch0'	status = <enable disable></enable disable>
option name 'LeakyPtMcMode'	
option port '2'	
option status 'enable'	

2.7 MIB commands

Command	Description	
status	Configure MIB engine status.	
cpuKeep	Configure CPU keep mode.	

2.7.1 Status

UCI Command	Description
config switch_ext option device 'switch0' option name 'MibStatus' option status 'enable'	Configure MIB engine status. status = <enable disable></enable disable>

2.7.2 cpuKeep

UCI Command	Description
config switch_ext option device 'switch0' option name 'MibCpuKeep' option status 'enable'	Configure CPU keep mode. status = <enable disable></enable disable>

2.8 MIRROR commands

Config	Description	
analyPt	Set/get analyzer port in switch chip for mirror.	
ptIngress	Configure ingress mirror status.	
ptEgress	Configure egress mirror status.	

2.8.1 analyPt

UCI Command	Description
config switch_ext	Set analyzer port in switch chip for mirror.
option device 'switch0'	analyst_port = 0-6
option name 'MirrorAnalyPt'	
option analyst_port '2'	

2.8.2 ptIngress

UCI Command	Description
config switch_ext	Configure ingress mirror status.
option device 'switch0'	status = <enable disable></enable disable>
option name 'MirrorPtIngress'	ingress_port = 0-6
option ingress_port '2'	
option status 'enable'	

2.8.3 ptEgress

Command	Description
config switch_ext	Configure ingress mirror status.
option device 'switch0'	status = <enable disable></enable disable>
option name 'MirrorPtEgress'	<pre>egress_port = 0-6</pre>
option egress_port '2'	
option status 'enable'	

2.9 MISC commands

Config	Description
frameMaxSize	Configure MAX frame size.
ptUnkUcFilter	Configure forwarding command for unknown source address unicast packets on one port.
ptUnkMcFilter	Configure forwarding command for unknown source address multicast packets on one port.
ptBcFilter	Configure forwarding command for unknown source address broadcast packets on one port.
cpuPort	Configure CPU port status.
PppoeCmd	Configure PPPoE frames forwarding command on switch chip.

Config	Description	
Pppoe	Configure PPPoE frames hardware identification status on switch chip.	
ptDhcp	Configure DHCP frames hardware identification status.	
arpcmd	Configure ARP packets forwarding command on switch chip.	
eapolcmd	Configure EAPOL (802.1x) packets forwarding command on switch chip.	
eapolstatus	Configure EAPOL (802.1x) packets hardware acknowledgement status on one port.	
rip	Configure RIP v1 packets hardware acknowledgement status on one port.	
ptarpreq	Configure ARP request packet hardware acknowledgement status on switch chip.	
ptarpack	Configure ARP ACK packet hardware acknowledgement status on switch chip.	
extendpppoe	Add, delete and get PPPoE entries in extend mode.	
* glomacaddr	Configure global MAC address.	
* framecrcrsv	Configure frame CRC reserve status.	

^{1. *} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.9.1 frameMaxSize

UCI Command	Description
config switch_ext	Configure MAX frame size.
option device 'switch0'	frame_max_size = 1508-9000
option name 'MiscFrameMaxSize'	
option frame_max_size '9000'	

2.9.2 ptUnkUcFilter

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPtUnkUcFilter' option port '2' option status 'enable'	Set forwarding command for unknown source address unicast packets on one port. port = 0-6 status = <enable disable></enable disable>

2.9.3 ptUnkMcFilter

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPtUnkMcFilter' option port '2' option status 'enable'	Set forwarding command for unknown source address multicast packets on one port. port = 0-6 status = <enable disable></enable disable>

2.9.4 ptBcFilter

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPtBcFilter' option port '2' option status 'enable'	Set forwarding command for broadcast packets on one port. port = 0-6 status = <enable disable></enable disable>

2.9.5 cpuPort

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscCpuPort' option status 'enable'	Configure CPU port status. status = <enable disable></enable disable>

2.9.6 PppoeCmd

UCI Command	Description
config switch_ext	Set PPPoE frames forwarding command.
option device 'switch0'	action = < forward rdtcpu>
option name 'MiscPppoeCmd'	
option action 'forward'	

2.9.7 Pppoe

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPppoe' option status 'enable'	Set PPPoE frames hardware identification status. status = <enable disable></enable disable>

2.9.8 ptDhcp

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPtDhcp' option port '2' option status 'enable'	Set DHCP frames hardware identification status on one port port = 0-6 status = <enable disable></enable disable>

2.9.9 arpCmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscArpcmd' option action 'rdtcpu'	Set ARP packets forwarding command. • action = <forward cpycpu rdtcpu></forward cpycpu rdtcpu>

2.9.10 eapolCmd

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscEapolcmd' option action 'rdtcpu'	Set EAPOL packets forwarding command. • action = <cpycpu rdtcpu></cpycpu rdtcpu>

2.9.11 eapolStatus

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscEapolstatus' option port '2' option status 'enable'	Set EAPOL frames hardware identification status on one port. port = 0-6 status = <enable disable></enable disable>

2.9.12 Rip

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscRip' option status 'enable'	Set RIP v1 frames hardware identification status on one port. status = <enable disable></enable disable>

2.9.13 Ptarpreq

UCI Command	Description
config switch_ext	Set ARP request packets hardware identification status.
option device 'switch0'	■ port = 0-6
option name 'MiscPtarpreq'	status = <enable disable></enable disable>
option port '2'	
option status 'enable'	

2.9.14 Ptarpack

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscPtarpack' option port '2' option status 'enable'	ARP request packets hardware identification status on one port. port = 0-6 status = <enable disable></enable disable>

2.9.15 Extendpppoe

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscExtendpppoe' option entry_id '0' option session_id '1' option multicast_session 'yes' option unicast_seesion 'yes'	Add a PPPoE session entry. entry_id = 0-31 session_id = 1-31 multicast_session = <yes no> unicast_seesion = <yes no></yes no></yes no>

2.9.16 Glomacaddr

UCI Command	Description
config switch_ext	Set global MAC address.
option device 'switch0'	
option name 'MiscGloMacAddr'	
option macaddr '00-00-00-00-01'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.9.17 Framecrcrsv

UCI Command	Description
config switch_ext option device 'switch0' option name 'MiscFramecrc' option status 'enable'	Set frame CRC reserve status. status = <enable disable></enable disable>

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.10 NAT commands

Config	Description
natentry	Add, delete, get and next NAT entry.
naptentry	Add, delete, get and next NAPT entry.
natstatus	Set and get NAT status.
nathash	Set and get NAT hash flag.

Config	Description	
naptmode	Set and get NAT hash mode.	
prvbaseaddr	Set and get NAT private base address.	
pubaddr	Add, delete and next public address.	
natunksess	Set and get NAT unknown session command.	
prvbasemask	Set and get NAT private base address.	
natglobal	Set global NAT function.	
* flowentry	Add, delete, get and next flow entry.	
* flowcookie	Set flowcookie entry.	
* flowrfs	Set flowrfs entry.	

^{1. *} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.10.1 Natentry

UCI Command	Description
config switch_ext	Add a NAT entry. entry_id = 0-31 entry_flags #define FAL_NAT_ENTRY_PORT_CHECK

2.10.2 naptentry

UCI Command	Description
config switch_ext	Add a NAPT entry. entry_id = 0-1023 entry_flags "#define FAL_NAT_ENTRY_PROTOCOL_TCP

2.10.3 natstatus

UCI Command	Description
config switch_ext option device 'switch0' option name 'NatNatstatus' option status 'enable'	Set NAT status. status = <enable disable></enable disable>

2.10.4 Nathash

UCI Command	Description	
config switch_ext	Set NAT hash mode.	
option device 'switch0'	hash_flag	
option name 'NatNathash'	#define FAL_NAT_HASH_KEY_PORT	0x40
option hash_flag '0'	#define FAL_NAT_HASH_KEY_IPADDR	0x80

2.10.5 Naptmode

UCI Command	Description
config switch_ext	Set NAPT mode.
option device 'switch0'	napt_mode = <fullcone strictcone portstrict synmatric></fullcone strictcone portstrict synmatric>
option name 'NatNaptmode'	
option napt_mode 'strictcone'	

2.10.6 Prvbaseaddr

UCI Command	Description
config switch_ext	Set NAT PRV base address.
option device 'switch0'	base_addr = base IP address
option name 'NatPrvbaseaddr'	
option base_addr '255.255.255.0'	

2.10.7 Prvbasemask

UCI Command	Description
config switch_ext	Set NAT PRV base mask.
option device 'switch0'	
option name 'NatPrvbasemask'	
option base_addr_mask '255.255.255.0'	

2.10.8 pubaddr

UCI Command	Description
config switch_ext	Add PUB address.
option device 'switch0'	entry_id = 0-7
option name 'NatPubaddr'	
option entry_id '0'	
option pub_addr '1.1.1.1'	

2.10.9 natunksess

UCI Command	Description
config switch_ext option device 'switch0'	Set NAT unknown session command. action = <forward drop cpycpu rdtcpu></forward drop cpycpu rdtcpu>
option name 'NatNatunksess' option action 'drop'	

2.10.10 natglobal

UCI Command	Description
config switch_ext	Set global nat function.
option device 'switch0'	status = <enable disable></enable disable>
option name 'NatGlobal'	sync = <enable disable></enable disable>
option status 'enable'	
option sync 'disable'	

2.10.11 flowentry

UCI Command	Description
config switch_ext	Add a NAPT entry. entry_id = 0-1023 entry_flags define FAL_NAT_ENTRY_PROTOCOL_TCP define FAL_NAT_ENTRY_PROTOCOL_UDP define FAL_NAT_ENTRY_PROTOCOL_UDP define FAL_NAT_ENTRY_PROTOCOL_PPTP define FAL_NAT_ENTRY_TRANS_IPADDR_INDEX define fal_NAT_ENTRY_PROTOCOL_UDP define fal_NAT_ENTRY_

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.10.12 flowcookie

UCI Command	Description
config switch_ext option device 'switch0' option name 'NatFlowcookie' option proto '1' option src_addr '1.1.1.1' option dst_addr '3.3.3.3' option src_port '10' option dst_port '20' option flow_cookie '0'	Set a flow cookie entry. proto #define FAL_NAT_ENTRY_PROTOCOL_TCP

1. Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.10.13 flowrfs

UCI Command	Description	
config switch_ext option device 'switch0' option name 'NatFlowrfs' option action '1' option proto '1' option src_addr '1.1.1.1' option dst_addr '3.3.3.3' option src_port '10' option dst_port '20' option flow_rfs '0'	Set a flow cookie entry. action #define FLOW_RFS_ADD	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11 PORT commands

Description
Configure duplex mode on a particular port.
Configure speed on a particular port.
Configure auto negotiation advisement ability on a particular port.
Configure auto negotiation on a particular port.
Configure status of Atheros header packets parsed on a particular port.
Configure status of Atheros header packets parsed on a particular port.
Configure Atheros header type status and value on a particular device.
Configure flow control status on a particular port.
Configure flow control force mode on a particular port.
Configure power saving status on a particular port.
Configure hibernate status on a particular port.
Configure status of Tx MAC on a particular port.
Configure status of Rx MAC on a particular port.
Configure status of Tx flow control on a particular port.
Configure status of Rx flow control on a particular port.
Configure status of back pressure on a particular port.
Configure link force mode on a particular port.
Configure loopback on a particular port.
Configure congestion drop status on port queue.
Configure flow control threshold on ring.

^{1. *} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.1 Duplex

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortDuplex' option port_id '1' option duplex 'half'	Set duplex mode on a particular port. port_id = 0-5 duplex = half full

2.11.2 speed

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortSpeed' option port_id '1' option speed '10'	Set speed on a particular port. port_id = 0-5 speed =10 100 1000 = 10M, 100M, 1000M

2.11.3 autoAdv

UCI Command	Description
config switch_ext	Set auto negotiation advisement ability on a particular port.
option device 'switch0'	port_id = 0-5
option name 'PortAutoAdv'	auto_adv
option port_id '1'	BIT[0] = 10M half
option auto_adv '0x23F'	BIT[1] = 10M full
	BIT[2] = 100M half
	 BIT[3] = 100M full
	 BIT[4] = pause
	BIT[5] = async pause
	BIT[9] = 1000M full

2.11.4 autoNeg

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortAutoNegEnable' option port_id '1'	Get auto negotiation status on a particular port. • port_id = 0-5
config switch_ext option device 'switch0' option name 'PortAutoNegRestart' option port_id '1'	Restart auto negotiation procedure on a particular port. • port_id = 0-5

2.11.5 txhdr

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortTxHdr' option port_id '1' option tx_frame_atheros_header_tag_status 'noheader'	Set status of Atheros header packets parsed on a particular port. port_id = 0-6 tx_frame_atheros_header_tag_status noheader = frames should be send out without header
	 onlymanagement = only management frame should be send out with header, normal packet without header allframe = all frames should be send out with header

2.11.6 rxhdr

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortRxHdr' option port_id '1' option rx_frame_atheros_header_tag_status 'noheader'	Set status of Atheros header packets parsed on a particular port. port_id = 0-6 rx_frame_atheros_header_tag_status noheader = frame should be received without header onlymanagement = only management frame should be received with header allframe = all frame with header

2.11.7 hdrtype

UCI Command	Description
config switch_ext option device 'switch0'	Set Atheros header type status and value on a particular device.
option name 'PortHdrType' option atheros_header_tag_status 'enable' option atheros_header_tag_type '0x10'	atheros_header_tag_status = enable disableatheros_header_tag_type = 0x0-0xffff

2.11.8 flowCtrl

UCI Command	Description
config switch_ext	Set flow control status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortFlowCtrl'	flow_control_status = enable disable
option port_id '1'	
option flow_control_status 'enable'	

2.11.9 flowCtrlforcemode

UCI Command	Description
config switch_ext	Set flow control force mode on a particular port. port_id = 0-6 flow_control_force_mode_status = enable disable

2.11.10 powersave

UCI Command	Description
config switch_ext	Set power saving status on a particular port.
option device 'switch0'	port_id = 1-5
option name 'PortPowerSave'	power_save_status = enable disable
option port_id '1'	
option power_save_status 'enable'	

2.11.11 hibernate

UCI Command	Description
config switch_ext	Set hibernate status on a particular port.
option device 'switch0'	port_id = 1-5
option name 'PortHibernate'	hibernate_status = enable disable
option port_id '1'	
option hibernate_status 'enable'	

2.11.12 txmacstatus

UCI Command	Description
config switch_ext	Set status of Tx MAC on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortTxMacStatus'	tx_mac_status = enable disable
option port_id '1'	
option tx_mac_status 'enable'	

2.11.13 rxmacstatus

UCI Command	Description
config switch_ext	Set status of Rx MAC on a particular port.
option device 'switch0'	■ port_id = 0-6
option name 'PortRxMacStatus' option port_id '1'	rx_mac_status = enable disable
option rx_mac_status 'enable'	

2.11.14 txfcstatus

UCI Command	Description
config switch_ext	Set status of Tx flow control on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortTxFcStatus'	tx_flow_control_status = enable disable
option port_id '1'	
option tx_flow_control_status 'enable'	

2.11.15 rxfcstatus

UCI Command	Description
config switch_ext	Set status of Rx flow control on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortRxFcStatus'	rx_flow_control_status = enable disable
option port_id '1'	
option rx_flow_control_status 'enable'	

2.11.16 bpstatus

UCI Command	Description
config switch_ext	Set status of back pressure on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortBpStatus'	back_presure_status = enable disable
option port_id '1'	
option back_presure_status 'enable'	

2.11.17 linkforcemode

UCI Command	Description
config switch_ext	Set link force mode on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortLinkForceMode'	link_force_mode_status = enable disable
option port_id '1'	
option link_force_mode_status 'enable'	

2.11.18 macLoopback

UCI Command	Description
config switch_ext	Set loopback on a particular port.
option device 'switch0'	■ port_id = 0-6
option name 'PortMacLoopback'	mac_loopback_status = enable disable
option port_id '1'	
option mac_loopback_status 'enable'	

2.11.19 congeDrop

UCI Command	Description
config switch_ext	Set congestion drop on port queue.
option device 'switch0'	port_id = 0-5
option name 'PortCongeDrop'	queue_id = 0-5
option port_id '1'	status = enable disable
option queue_id '1'	
option status 'enable'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.20 ringfcthreshold

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortRingFcThresh' option ring_id '1' option on_thresh '0x10'	Set flow control threshold on ring. ring_id = 0-7
option off_thresh '0x20'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.21 leee8023az

UCI Command	Description
config switch_ext option device 'switch0' option name 'Portleee8023az' option port_id '1' option mode 'disable'	Set az mode on port. port_id = 1-5 mode = enable disable

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.22 crossover

UCI Command	Description
config switch_ext	Set crossover mode on port.
option device 'switch0' option name 'PortCrossover'	port_id = 1-5mode = mdi auto mdix
option port_id '1' option mode 'mdi'	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.23 prefermedium

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortPreferMedium' option port_id '5' option mode 'copper'	Set prefer medium type mode on port. port_id = 5 mode = copper fiber

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.24 fibermode

UCI Command	Description
config switch_ext option device 'switch0'	Set fiber mode on port. port_id = 5
option name 'PortFiberMode' option port_id '5' option mode '1000bx'	■ mode = 100fx 1000bx

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.25 localloopback

UCI Command	Description	
config switch_ext option device 'switch0' option name 'PortLocalLoopback' option port_id '1' option mode 'enable'	Set local mode on port. port_id = 1-5 mode = enable disable	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.26 remoteloopback

UCI Command	Description	
config switch_ext option device 'switch0' option name 'PortRemoteLoopback' option port_id '1' option mode 'enable'	Set remote loopback mode on port. port_id = 1-5 mode = enable disable	

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.27 magicframemac

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortMagicFrameMac' option port_id '1' option macaddr '00-00-00-11-22'	Set magic frame MAC address on port. port_id = 1-5 macaddr = xx-xx-xx-xx-xx

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.28 wolstatus

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortWolstatus' option port_id '1' option mode 'enable'	Set WOL mode on port. port_id = 1-5 mode = enable disable

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.29 Interfacemode

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortInterfaceMode' option port_id '5' option mode 'psgmii_baset'	Set interface mode on port. port_id = 5 mode = psgmii_baset psgmii_bx1000 psgmii_fx100 psgmii_amdet sgmii_baset

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.30 poweron

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortPoweron' option port_id '1'	Set power on on port. port_id = 1-5

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.31 poweroff

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortPoweroff' option port_id '1'	Set power off on port. • port_id = 1-5

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.11.32 reset

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortReset' option port_id '1'	Set reset on port. port_id = 1-5

^{1.} Available in IPQ4018/IPQ4019/IPQ4028/IPQ4029 ESS only.

2.12 PORT_VLAN commands

Config	Description
forceVid	Configure force default VLAN ID status on a particular port.
forceMode	Configure force port based VLAN status on a particular port.
sVlanTPID	Configure nest VLAN TPID on a particular device.
invlan	Configure ingress VLAN mode on a particular port.
tlsMode	Configure TLS status on a particular port.
priPropagation	Configure priority propagation status on a particular port.
vlanPropagation	Configure VLAN propagation status on a particular port.
translation	Configure VLAN translation entry on a particular port.
qinqMode	Configure switch QINQ work mode.
qinqRole	Configure QINQ role on a particular port.
macvlanxlt	Configure egress MAC based VLAN enable status on a particular port.
netiso	Configure net isolation function.
egbypass	Configure egress translation filter bypass status.

2.12.1 forceVid

UCI Command	Description
config switch_ext	Set force default VLAN ID status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortvlanForceVid'	force_vid_status = enable disable
option port_id '1'	
option force_vid_status 'enable'	

2.12.2 forceMode

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortvlanForceMode' option port_id '1' option force_mode 'enable'	Set force port based VLAN status on a particular port. port_id = 0-6 force_mode = enable disable

2.12.3 sVlanTPID

UCI Command	Description
config switch_ext	Set nest VLAN TPID on a particular device.
option device 'switch0'	stag_tpid = 0x0-0xffff
option name 'PortvlanSVlanTPID'	
option stag_tpid '0x88a8'	

2.12.4 Invlan

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortvlanInVlan' option port_id '1' option ingress_tag_mode 'admit_all'	Set ingress VLAN mode on a particular port. port_id = 0-6 ingress_tag_mode admit_all = receive all packets including tagged and untagged admit_tagged = only receive tagged packets admit_untagged = only receive untagged packets including priority tagged

2.12.5 tlsMode

UCI Command	Description
config switch_ext	Set TLS status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortvlanTlsMode'	tls_mode
option port_id '1'	 enable = port work at TLS mode
option tls_mode 'enable'	disable = port work at NON-TLS mode

2.12.6 priPropagation

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortvlanPriPropagation' option port_id '1' option vlan_priority_propagation_status 'enable'	Set priority propagation status on a particular port. port_id = 0-6 vlan_priority_propagation_status = enable disable

2.12.7 vlanPropagation

UCI Command	Description
config switch_ext	Set VLAN propagation status on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortvlanVlanPropagation'	vlan_propagation_mode
option port_id '1'	 disable = VLAN propagation disable
option vlan_propagation_mode 'replace'	 clone = VLAN propagation mode is clone
	 replace = VLAN propagation mode is replace

2.12.8 translation

UCI Command	Description
config switch_ext	Add a VLAN translation entry to a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortVlanTranslation'	original_vid = 0-4095
option port_id '1'	bi_direction = yes no
option original_vid '100'	forward_direction = yes no
option bi_direction 'yes'	reverse_direction = yes no
option forward_direction 'yes'	■ svid = 0-4095
option reverse_direction 'yes'	• cvid = 0-4095
option svid '10'	original_vid_is_cvid = yes no
option cvid '1000'	svid_enable = yes no
option original_vid_is_cvid 'yes'	cvid_enable = yes no
option svid_enable 'yes'	one_2_one_vlan = yes no
option cvid_enable 'yes'	
option one_2_one_vlan 'no'	

2.12.9 qinqMode

UCI Command	Description
config switch_ext	Set switch QINQ work mode.
option device 'switch0'	qinq_mode = ctag stag
option name 'PortvlanQinqMode'	
option port_id '1'	
option qinq_mode 'ctag'	

2.12.10 qinqRole

UCI Command	Description
config switch_ext	Set QINQ role on a particular port.
option device 'switch0'	port_id = 0-6
option name 'PortvlanQinqRole'	qinq_role = edge core
option port_id '1'	
option qinq_role 'edge'	

2.12.11 macvlanxlt

UCI Command	Description
config switch_ext option device 'switch0' option name 'PortvlanMacVlanXlt' option port_id '1' option egress_mac_based_vlan 'enable'	Set egress MAC based VLAN enable status on a particular port. port_id = 0-6 egress_mac_based_vlan = enable disable

2.12.12 netiso

UCI Command	Description
config switch_ext	Set NET isolation function.
option device 'switch0'	net_isolate
option name 'PortvlanNetiso'	 enable = isolate private net and public net
option net_isolate 'enable'	 disable = not isolate private net and public net

2.12.13 Egbypass

UCI Command	Description
config switch_ext	Set egress translation filter bypass status. • egress_translation_filter_bypass = enable disable

2.13 QoS commands

Command	Description	
qTxBufSts	Configure buffer assignment status of transmitting queue on one particular port.	
qTxBufNr	Configure max occupied buffer number of transmitting queue on one particular port.	
ptTxBufSts	Configure buffer assignment status of transmitting port on one particular port.	
ptRedEn	Configure RED status on one particular port.	
ptTxBufNr	Configure max occupied buffer number of transmitting port on one particular port.	
ptRxBufNr	Configure max reserved buffer number of receiving port on one particular port.	
ptMode	Configure port QoS mode status on one particular port.	
ptModePri	Configure priority of one particular QoS mode on one particular port.	
ptschMode	Mode Configure traffic scheduling mode on particular one port.	
ptDefaultSpri	Configure default STAG priority on one particular port.	
ptDefaultCpri	Configure default CTAG priority on one particular port.	
ptFSpriSts	Configure force STAG priority flag on one particular port.	
ptFCpriSts	Configure force CTAG priority flag on one particular port.	
ptQuRemark	Configure egress queue based CoS remark on one particular port.	

2.13.1 qTxBufSts

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosQTxBufSts' option port_id '1' option buffer_limit 'enable'	Set buffer assignment status of transmitting queue on one particular port. port_id = 0-6 buffer_limit = enable disable If enable queue Tx buffer on one port, it means each queue of this port will have fixed number buffers when transmitting packets. Otherwise they will share the whole buffers with other queues in device.

2.13.2 qTxBufNr

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosQTxBufNr' option port_id '1' option queue_id '3' option number '120'	Set max occupied buffer number of transmitting queue on one particular port. port_id = 0-6 queue_id = 0-3 number = 0-120

2.13.3 ptTxBufSts

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtTxBufSts' option port_id '1' option buffer_limit 'enable'	Set buffer assignment status of transmitting port on one particular port. port_id = 0-6 buffer_limit = enable disable If enable Tx buffer on one port, it means this port will have fixed number buffers when transmitting packets. Otherwise they will share the whole buffers with other ports in device.

2.13.4 ptRedEn

UCI Command	Description
config switch_ext	Set RED status on one particular port.
option device 'switch0'	■ port_id = 0-6
option name 'QosPtRedEn'	red_status = enable disable
option port_id '1'	The status is to enable or disable Random Early Detection on
option red_status 'enable'	a port.

2.13.5 ptTxBufNr

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtTxBufNr' option port_id '1' option number '504'	Set max occupied buffer number of transmitting port on one particular port. port_id = 0-6 number = 0-504

2.13.6 ptRxBufNr

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtRxBufNr' option port_id '1' option number '120'	Set max reserved buffer number of receiving port on one particular port. port_id = 0-6 number = 0-120

2.13.7 ptMode

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtMode' option port_id '1' option mode 'up' option status 'enable'	Set port QoS mode status on one particular port. port_id = 0-6 mode = da up dscp flow status = enable disable

^{1.} Flow is available in ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029.

2.13.8 ptModePri

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtModePri' option port_id '1' option mode 'up' option priority '3'	Set priority of one particular QoS mode on one particular port. port_id = 0-6 mode = da up dscp flow priority = 0-3 Smaller value indicates higher priority.

^{2.} Flow is available in ESS of IPQ4018/IPQ4019/IPQ4028/IPQ4029.

2.13.9 ptschMode

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtschMode' option port_id '1' option mode 'wrr' option weight '1,2,4,8,0,0'	Set traffic scheduling mode on particular one port. port_id = 0-6 mode sp wrr mix mixplus sp = strict priority scheduling mode wrr = weight round robin scheduling mode mix = SP and WRR mixed scheduling mode mixplus = SP and WRR mixed plus scheduling mode weight q0,q1,q2,q3,q4,q5 Weight value (0-31) for each queue when in WRR mode.

2.13.10 ptDefaultSpri

UCI Command	Description
config switch_ext	Set default stag priority on one particular port.
option device 'switch0'	port_id = 0-6
option name 'QosPtDefaultSpri'	stag_pri = 0-7
option port_id '1'	
option stag_pri '7'	

2.13.11 ptDefaultCpri

UCI Command	Description
config switch_ext	Set default CTAG priority on one particular port.
option device 'switch0'	<pre>port_id = 0-6</pre>
option name 'QosPtDefaultCpri'	<pre>ctag_pri = 0-7</pre>
option port_id '1'	
option ctag_pri '7'	

2.13.12 ptFSpriSts

UCI Command	Description
config switch_ext	Set force stag priority flag on one particular port.
option device 'switch0'	port_id = 0-6
option name 'QosPtFSpriSts'	force_stag_pri_status = enable disable
option port_id '1'	
option force_stag_pri_status 'enable'	

2.13.13 ptFCpriSts

UCI Command	Description
config switch_ext option device 'switch0' option name 'QosPtFCpriSts' option port_id '1' option force_ctag_pri_status 'enable'	Set force CTAG priority flag on one particular port. port_id = 0-6 force_ctag_pri_status = enable disable

2.13.14 ptQuRemark

UCI Command	Description
config switch_ext	Set egress queue based CoS remark on one particular port.
option device 'switch0'	port_id = 0-6
option name 'QosPtQuRemark'	queue_id = 0-3
option port_id '1'	■ table_id = 0-15
option queue_id '3'	status = enable disable
option table_id '1'	
option status 'enable'	

2.14 RATE commands

Config	Description
portpolicer	Configure port ingress policer parameters on one particular port.
portshaper	Configure port egress shaper parameters on one particular port.
queueshaper	Configure queue egress shaper parameters on one particular port.
aclpolicer	Configure ACL ingress policer parameters.
ptAddRateByte	Configure byte number should be added to frame when calculate rate limit.
ptgolflowen	Configure status of port global flow control when global threshold is reached.

2.14.1 Portpolicer

UCI Command Description config switch_ext Set port ingress policer parameters on one particular port. option device 'switch0' port_id = 0-6 option name 'RatePortPolicer' combine_enable = yes | no option port_id '1' byte_based = yes | no option combine_enable 'no' Yes means byte based. option byte_based 'yes' No means packet based. option couple_flag 'no' couple_flag = yes | no option color_aware 'no' color_aware = yes | no option deficit_flag 'yes' deficit_flag = yes | no option c_bucket_enable 'yes' c bucket enable = yes | no option cir '1000' \circ cir = 0-1048544 option cbs '10000' Committed Information Rate, kbps for byte based mode or PPS for packet mode. option c_rate_flag '0xfe' option c_meter_interval '1ms' • cbs = 0-524288option e bucket enable 'yes' Committed Burst Size, bytes for byte based mode or packets for packet mode. option eir '10000' option ebs '10000' c_rate_flag BIT[0] = MIRROR_RATE_EN, Ingress mirror frame rate option e_rate_flag '0xfe' limit enable for C bucket option e_meter_interval '1ms' BIT[1] = TCP_CTRL_RATE_EN, Ingress TCP control frame rate limit enable for C bucket BIT[2] = MANAGE_RATE_EN, Ingress management frame rate limit enable for C bucket BIT[3] = BROAD_RATE_EN, Ingress broadcast frame rate limit enable for C bucket BIT[4] = UNK_UNI_RATE_EN, Ingress unknown unicast frame rate limit enable for C bucket BIT[5] = UNK_MULTI_RATE_EN, Ingress unknown frame multicast rate limit enable for C bucket BIT[6] = UNI_RATE_EN, Ingress unicast frame rate limit enable for C bucket BIT[7] = MULTI_RATE_EN, Ingress multicast frame rate limit enable for C bucket c_meter_interval = 100us/1ms/10ms/100ms e_bucket_enable = yes | no eir = 0-1048544 Excess Information Rate, kbps for byte based mode or PPS for packet mode. ebs = 0-524288 Excess Burst Size, bytes for byte based mode or packets for packet mode.

UCI Command	Description
	e_rate_flag
	 BIT[0] = MIRROR_RATE_EN, Ingress mirror frame rate limit enable for E bucket
	 BIT[1] = TCP_CTRL_RATE_EN, Ingress TCP control frame rate limit enable for E bucket
	 BIT[2] = MANAGE_RATE_EN, Ingress management frame rate limit enable for E bucket
	 BIT[3] = BROAD_RATE_EN, Ingress broadcast frame rate limit enable for E bucket
	 BIT[4] = UNK_UNI_RATE_EN, Ingress unknown unicast frame rate limit enable for E bucket
	 BIT[5] = UNK_MULTI_RATE_EN, Ingress unknown frame multicast rate limit enable for E bucket
	 BIT[6] = UNI_RATE_EN, Ingress unicast frame rate limit enable for E bucket
	 BIT[7] = MULTI_RATE_EN, Ingress multicast frame rate limit enable for E bucket
	e_meter_interval = 100us/1ms/10ms/100ms

2.14.2 portshaper

UCI Command	Description
config switch_ext option device 'switch0' option name 'RatePortShaper' option port_id '1' option status 'enable' option byte_based 'yes' option cir '1000' option cbs '10000' option eir '1000' option ebs '10000'	Set port egress shaper parameters on one particular port. port_id = 0-6 status = enable disable byte_based = yes no Yes = byte based No = packet based cir = 0-1048544. Committed Information Rate, kbps for byte based mode or PPS for packet mode. cbs = 0-524288. Committed Burst Size, bytes for byte based mode or packets for packet mode. eir = 0-1048544 Excess Information Rate, kbps for byte based mode or PPS for packet mode. ebs = 0-524288 Excess Burst Size, bytes for byte based mode or packets for packet mode.

2.14.3 queueshaper

UCI Command	Description
config switch_ext option device 'switch0' option name 'RateQueueShaper' option port_id '1' option queue_id '1' option status 'enable' option byte_based 'yes' option cir '1000' option cbs '10000' option eir '10000' option ebs '10000'	Set queue egress shaper parameters on one particular port. port_id = 0-6 queue_id = 0-3 status = enable disable byte_based = yes no Yes = byte based No = packet based Cir = 0-1048544 Committed Information Rate, kbps for byte based mode or PPS for packet mode. cbs = 0-524288 Committed Burst Size, bytes for byte based mode or packets for packet mode. eir = 0-1048544 Excess Information Rate, kbps for byte based mode or PPS for packet mode. ebs = 0-524288 Excess Burst Size, bytes for byte based mode or PPS for packet mode.

2.14.4 aclpolicer

UCI Command	Description
config switch_ext option device 'switch0' option name 'RateAclPolicer' option policer_id '1' option counter_mode 'no' option byte_based 'yes' option couple_flag 'no' option color_aware 'no' option deficit_flag 'yes' option cir '1000' option cbs '10000' option eir '10000' option ebs '10000' option meter_interval '1ms'	Set ACL ingress policer parameters. counter_mode = yes no byte_based = yes no Yes = byte based No = packet based couple_flag = yes no color_aware = yes no deficit_flag = yes no cir = 0-1048544 Committed Information Rate, kbps for byte based mode or PPS for packet mode. cbs = 0-524288 Committed Burst Size, bytes for byte based mode or packets for packet mode. eir = 0-1048544 Excess Information Rate, kbps for byte based mode or PPS for packet mode. eir = 0-524288 Excess Burst Size, bytes for byte based mode or PPS for packet mode. ebs = 0-524288 Excess Burst Size, bytes for byte based mode or packets for packet mode. meter_interval = 100us/1ms/10ms/100ms

2.14.5 ptAddRateByte

UCI Command	Description
config switch_ext option device 'switch0' option name 'RatePtAddRateByte' option port_id '1' option add_rate_bytes '24'	Set the byte number which can be added to frame when calculate rate limit. port_id = 0-6 add_rate_bytes = 0-255

2.14.6 ptgolflowen

UCI Command	Description
config switch_ext option device 'switch0' option name 'RatePtGolflowen' option port_id '1' option golbal_flow_control_status 'enable'	Set status of port global flow control when global threshold is reached. port_id = 0-6 golbal_flow_control_status = enable disable

2.15 SEC commands

Config	Description
mac resv_vid	Configure security status of frame with reserved VID.
mac invalid_src_addr	Configure security status of frame with invalid source MAC address.
ip invalid_ver	Configure security status of frame with invalid IP version.
ip set same_addr	Configure security status of frame with same source and destination IP address.
ip ttl_change_status	Configure security status of frame TTL change.
ip ttl_val	Configure TTL value.
ip4 invalid_hl	Configure security status of frame with invalid IPv4 header.
ip4 hdr_opts	Configure security status of frame with IPv4 header option.
ip4 invalid_df	Configure security status of frame with DF=1 and offset or MF not zero.
ip4 frag_offset_min_len	Configure security status of frame with offset length less than MIN size.
ip4 frag_offset_min_size	Configure frame offset length MIN size.
ip4 frag_offset_max_len	Configure security status of frame with offset length more than max.
ip4 invalid_frag_offset	Configure security status of frame with invalid fragment offset.
ip4 invalid_sip	Configure security status of frame with invalid SIP.
ip4 invalid_dip	Configure security status of frame with invalid DIP.
ip4 invalid_chksum	Configure security status of frame with invalid checksum.
ip4 invalid_pl	Configure security status of frame with short length.
ip4 df_clear_status	Configure security status of clear IPv4 DF field.
ip4 ipid_random_status	Configure security status of sent frame (not fragment) with random ID.
ip6 invalid_dip	Configure security status of frame with invalid destination IPv6 address.
ip6 invalid_sip	Configure security status of frame with invalid source IPv6 address.
ip6 invalid_pl	Configure security status of IPv6 frame with short length.
tcp blat	Configure security status of TCP frame with same source port and destination port.

Config	Description
tcp invalid_hl	Configure security status of TCP frame with invalid header length.
tcp min_hdr_size	Configure TCP frame header length min size.
tcp invalid_syn	Configure security status of TCP frame with invalid SYN.
tcp su_block	Configure security status of TCP frame with SYN=1 & URG=1.
tcp sp_block	Configure security status of TCP frame with SYN=1 & PSH=1.
tcp sap_block	Configure security status of TCP frame with SYN=1 & ACK=1 & PSH=1.
tcp xmas_scan	Configure security status of TCP frame with FIN=1 & URG=1 & PSH=1.
tcp null_scan	Configure security status of TCP frame with all TCP FLAG zero.
tcp sr_block	Configure security status of TCP frame with SYN=1 & RST=1.
tcp sf_block	Configure security status of TCP frame with SYN=1 & FIN=1.
tcp sar_block	Configure security status of TCP frame with SYN=0 & ACK=0 & RST=0.
tcp rst_scan	Configure security status of TCP frame with RST=1.
tcp rst_with_data	Configure security status of TCP frame with RST=1 & IP payload LEN > TCP header length.
tcp fa_block	Configure security status of TCP frame with FIN=1 & ACK=0.
tcp pa_block	Configure security status of TCP frame with PUSH=1 & ACK=0.
tcp ua_block	Configure security status of TCP frame with URG=1 & ACK=0.
tcp invalid_chksum	Configure security status of TCP frame with invalid checksum.
tcp invalid_urgptr	Configure security status of TCP frame with URG=0 but pointer not zero.
tcp invalid_opts	Configure security status of TCP frame with SYN=0 and IP header larger than 20.
udp blat	Configure security status of UDP frame with SP equal to DP.
udp invalid_len	Configure security status of UDP frame with invalid length.
udp invalid_chksum	Configure security status of UDP frame with invalid checksum.
icmp4 ping_pl_exceed	Configure security status of ICMP4 frame with IP payload length larger than max.
icmp4 ping_frag	Configure security status of ICMP4 frame with fragment.
icmp4 ping_max_pl	Configure ICMP4 frame IP payload length MAX.
icmp6 ping_pl_exceed	Configure security status of ICMP6 frame with IP payload length larger than MAX.
icmp6 ping_fr	Configure security status of ICMP6 frame with fragment.
icmp6 ping_max_pl	Configure ICMP6 frame IP payload length MAX. It is available when set command "sec icmp4 set ping_pl_exceed 1"

2.15.1 mac resv_vid

UCI Command	Description
config switch_ext	Set security status of frame with reserved VID.
option device 'switch0'	■ value = 0-1
option name 'SecMac'	 1 = frame with VID 4095 is dropped by switch.
option item 'resv_vid'	 0 = frame with VID 4095 is forwarded by switch.
option value '0'	

2.15.2 mac invalid_src_addr

UCI Command	Description
config switch_ext	Set security status of frame with invalid source MAC address.
option device 'switch0'	■ value = 0-1
option name 'SecMac'	 1 = frame with SA is multicast or broadcast is dropped.
option item 'invalid_src_addr' option value '1'	 0 = frame with SA is multicast or broadcast is forwarded by switch.

2.15.3 ip invalid_ver

UCI Command	Description
config switch_ext	Set security status of frame with invalid IP version.
option device 'switch0'	■ value = 0-1
option name 'Seclp'	1 = frame isn't IPv4 or IPv6 is dropped.
option item 'invalid_ver' option value '1'	 0 = frame isn't IPv4 or IPv6 is forwarded by switch.

2.15.4 ip set same_addr

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp'	Set security status of frame with same source and destination IP address. • value = 0-1
option item 'same_addr' option value '1'	 1 = frame with SIP equal to DIP is dropped. 0 = frame with SIP equal to DIP is forwarded by switch.

2.15.5 ip ttl_change_status

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp' option item 'ttl_change_status' option value '1'	Set security status of frame TTL change. value = 0-1 1 = enable frame TTL change to IP_TTL 0 = disable frame TTL change to IP_TTL

2.15.6 ip ttl_val

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp' option item 'ttl_val' option value '1'	Set TTL value. If security status of frame TTL change is set to 1, TTL will be changed to this value. • value = TTL value, 8 bits

2.15.7 ip4 invalid_hl

UCI Command	Description
config switch_ext	Set security status of frame with invalid IPv4 header.
option device 'switch0'	■ value = 0-1
option name 'SecIp4'	 1 = frame with IPv4 header length less than 20 byte is dropped
option item 'invalid_hl' option value '1'	 0 = frame with IPv4 header length less than 20 byte is forwarded by switch.

2.15.8 ip4 hdr_opts

UCI Command	Description
config switch_ext	Set security status of frame with IPv4 header option.
option device 'switch0'	■ value = 0-1
option name 'Seclp4'	 1 = frame with IPv4 header option is dropped.
option item 'hdr_opts'	 0 = frame with IPv4 header option is sent to CPU port.
option value '1'	

2.15.9 ip4 invalid_df

UCI Command	Description
config switch_ext	Set security status of frame with DF=1 and offset or MF not zero.
option device 'switch0'	■ value = 0-1
option name 'Seclp4'	1 = frame with DF=1 and offset or MF not zero is dropped.
option item 'invalid_df' option value '1'	 0 = frame with DF=1 and offset or MF not zero is forwarded by switch.

2.15.10 ip4 frag_offset_min_len

UCI Command	Description
config switch_ext option device 'switch0' option name 'Seclp4' option item 'frag_offset_min_len' option value '1'	Set security status of frame with offset length less than MIN size. • value = 0-1 • 1 = frame with offset length less than min is dropped • 0 = frame with offset length less than min is forwarded by switch.

2.15.11 ip4 frag_offset_min_size

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp4' option item 'frag_offset_min_size' option value '1'	Set frame offset length MIN size. • value = offset length min, 8 bits

2.15.12 ip4 frag_offset_max_len

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp4' option item 'frag_offset_max_len'	Set security status of frame with offset length more than max. value = 0-1 1 = frame with offset length more than max (Offset (13bits) ×8+ IP TOTAL LEN (16bits) >= 64KB) is dropped. 0 = frame with offset length more than max is forwarded by switch.

2.15.13 ip4 invalid_frag_offset

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of frame with invalid fragment offset. • value = 0-1
option name 'SecIp4' option item 'invalid_frag_offset' option value '1'	 1 = frame with ipv4 fragment (not the last fragment, mf =1) and length check error ((IP len (LENGTH FIELD) - Header Len) % 8 ! = 0) is dropped. 0 = forwarded by switch.

2.15.14 ip4 invalid_sip

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp4' option item 'invalid_sip' option value '1'	Set security status of frame with invalid SIP. value = 0-1 1 = frame with SIP[31:24] more than 0xE0 and less than 0xF0, or equal to 0x7F, or SIP[31:0] is 32'hFFFFFFFF, is dropped. 0 = frame with SIP[31:24] more than 0xE0 and less than 0xF0, or equal to 0x7F, or SIP[31:0] is
	32'hFFFFFFF, is forwarded by switch.

2.15.15 ip4 invalid_dip

UCI Command	Description
config switch_ext	Set security status of frame with invalid DIP.
option device 'switch0'	■ value = 0-1
option name 'Seclp4' option item 'invalid_dip'	 1 = frame is dropped if with DIP all zero or DIP[31:24] is 0x7F.
option value '1'	 0 = frame with DIP all zero or DIP[31:24] is 0x7F is forwarded by switch.

2.15.16 ip4 invalid_chksum

UCI Command	Description
config switch_ext	Set security status of frame with invalid checksum.
option device 'switch0'	■ value = 0-1
option name 'Seclp4'	 1 = frame with IPv4 checksum error is dropped.
option item 'invalid_chksum' option value '1'	 0 = frame with IPv4 checksum error is forwarded by switch.

2.15.17 ip4 invalid_pl

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIp4' option item 'invalid_pl' option value '1'	Set security status of frame with short length. value = 0-1 1 = frame with short length (20(Min IPv6 Header Length) + 18 + VLAN + SNAP + PPPOE > FRAME LENGTH) is dropped. 0 = frame with short length is forwarded by switch

2.15.18 ip4 df_clear_status

UCI Command	Description
config switch_ext	Set security status of clear IPv4 DF field.
option device 'switch0'	■ value = 0-1
option name 'Seclp4'	 1 = enable IPv4 DF field cleared to zero
option item 'df_clear_status'	 0 = disable IPv4 DF field cleared to zero
option value '1'	

2.15.19 ip4 ipid_random_status

UCI Command	Description
config switch_ext option device 'switch0' option name 'Seclp4'	Set security status of sent frame (not fragment) with random ID. • value = 0-1
option item 'ipid_random_status' option value '1'	 1 = enable sent frame (not fragment) with random ID. 0 = disable sent frame (not fragment) with random ID.

2.15.20 ip6 invalid_dip

UCI Command	Description
config switch_ext option device 'switch0' option name 'Seclp6' option item 'nvalid_dip' option value '1'	Set security status of frame with invalid destination IPv6 address. value = 0-1 1 = IPv6 with DIP is 1 or zero is dropped. 0 = IPv6 with DIP is 1 or zero is forwarded by switch.

2.15.21 ip6 invalid_sip

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of frame with invalid source IPv6 address. • value = 0-1
option name 'Seclp6'	□ 1 = IPv6 with SIP is 1 or ff00::/8 is dropped.
option item 'invalid_sip' option value '1'	 0 = IPv6 with SIP is 1 or ff00::/8 is forwarded by switch.

2.15.22 ip6 invalid_pl

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of IPv6 frame with short length. • value = 0-1
option name 'SecIp6' option item 'invalid_pl' option value '1'	 1 = frame with short length (40(Min IPv6 Header Length) + 18 + VLAN + SNAP + PPPOE > FRAME LENGTH) is dropped. 0 = frame with short length is forwarded by switch

2.15.23 tcp blat

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'blat' option value '1'	Set security status of TCP frame with same source port and destination port. value = 0-1 1 = TCP frame with SP equal to DP is dropped. 0 = TCP frame with SP equal to DP is forwarded by switch.

2.15.24 tcp invalid_hl

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'invalid_hl'	Set security status of TCP frame with invalid header length. value = 0-1 1 = if frame with TCP header length less than min size but not first of fragment, is dropped
option value '1'	 0 = frame with TCP header length less than min size but not first of fragment, is forwarded by switch.

2.15.25 tcp min_hdr_size

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'min_hdr_size' option value '1'	Set TCP frame header length min size. • value = TCP header length, 4 bits.

2.15.26 tcp invalid_syn

UCI Command	Description
config switch_ext	Set security status of TCP frame with invalid SYN.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	1 = frame with SYN=1 & ACK=0 & SP<1024 is dropped.
option item 'invalid_syn' option value '1'	 0 = frame with SYN=1 & ACK=0 & SP<1024 is forwarded by switch.

2.15.27 tcp su_block

UCI Command	Description
config switch_ext	Set security status of TCP frame with SYN=1 & URG=1.
option device 'switch0' option name 'SecTcp'	value = 0-11 = frame with SYN=1 & URG=1 is dropped.
option item 'su_block' option value '1'	 0 = frame with SYN=1 & URG=1 is forwarded by switch.

2.15.28 tcp sp_block

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp'	Set security status of TCP frame with SYN=1 & PSH=1. value = 0-1 1 = frame with SYN=1 & PSH=1 is dropped.
option riame 'secrep' option item 'sp_block' option value '1'	0 = frame with SYN=1 & PSH=1 is forwarded by switch.

2.15.29 tcp sap_block

UCI Command	Description
config switch_ext	Set security status of TCP frame with SYN=1 & ACK=1 & PSH=1.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	1 = frame with SYN=1 & ACK=1 & PSH=1 is dropped.
option item 'sap_block' option value '1'	 0 = frame with SYN=1 & ACK=1 & PSH=1 is forwarded by switch.

2.15.30 tcp xmas_scan

UCI Command	Description
config switch_ext	Set security status of TCP frame with FIN=1 & URG=1 & PSH=1.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	1 = frame with FIN=1 & URG=1 & PSH=1 is dropped
option item 'xmas_scan' option value '1'	 0 = frame with FIN=1 & URG=1 & PSH=1 is forwarded by switch.

2.15.31 tcp null_scan

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'null_scan' option value '1'	Set security status of TCP frame with all TCP FLAG zero. value = 0-1 1 = frame with all TCP FLAG zero is dropped. 0 = frame with all TCP FLAG zero is forwarded by switch.

2.15.32 tcp sr_block

UCI Command	Description
config switch_ext	Set security status of TCP frame with SYN=1 & RST=1.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	1 = frame with SYN=1 & RST=1 is dropped.
option item 'sr_block' option value '1'	 0 = frame with SYN=1 & RST=1 is forwarded by switch.

2.15.33 tcp sf_block

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'sf_block' option value '1'	Set security status of TCP frame with SYN=1 & FIN=1. value = 0-1 1 = frame with SYN=1 & FIN=1 is dropped. 0 = frame with SYN=1 & FIN=1 is forwarded by switch.

2.15.34 tcp sar_block

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of TCP frame with SYN=0 & ACK=0 & RST=0. value = 0-1
option across switched option name 'SecTcp' option item 'sar_block' option value '1'	 1 = frame with SYN=0 & ACK=0 & RST=0 is dropped. 0 = frame with SYN=0 & ACK=0 & RST=0 is forwarded by switch.

2.15.35 tcp rst_scan

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of TCP frame with RST=1. value = 0-1
option name 'SecTcp' option item 'rst_scan' option value '1'	 1 = frame with RST=1 is dropped. 0 = frame with RST=1 is forwarded by switch.

2.15.36 tcp rst_with_data

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'rst_with_data' option value '1'	Set security status of TCP frame with RST=1 & IP payload len > TCP header length. • value = 0-1 • 1 = TCP frame with RST=1 & IP payload len > TCP header length is dropped. • 0 = TCP frame with RST=1 & IP payload len > TCP header length is forwarded by switch.

2.15.37 tcp fa_block

UCI Command	Description
config switch_ext	Set security status of TCP frame with FIN=1 & ACK=0.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	1 = frame with FIN=1 & ACK=0 is dropped.
option item 'fa_block' option value '1'	0 = frame with FIN=1 & ACK=0 is forwarded by switch.
option value i	

2.15.38 tcp pa_block

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of TCP frame with PUSH=1 & ACK=0. value = 0-1
option name 'SecTcp' option item 'pa_block' option value '1'	 1 = frame with PUSH=1 & ACK=0 is dropped. 0 = frame with PUSH=1 & ACK=0 is forwarded by switch.

2.15.39 tcp ua_block

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'ua_block' option value '1'	Set security status of TCP frame with URG=1 & ACK=0. value = 0-1 1 = frame with URG=1 & ACK=0 is dropped. 1 = forwarded by switch

2.15.40 tcp invalid_chksum

UCI Command	Description
config switch_ext	Set security status of TCP frame with invalid checksum.
option device 'switch0'	■ value = 0-1
option name 'SecTcp'	 1 = frame with TCP checksum error is dropped.
option item 'invalid_chksum' option value '1'	 0 = frame with TCP checksum error is forwarded by switch.

2.15.41 tcp invalid_urgptr

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'invalid_urgptr' option value '1'	Set security status of TCP frame with URG=0 but pointer not zero. value = 0-1 1 = frame with URG=0 but pointer not zero is dropped. 0 = frame with URG=0 but pointer not zero is forwarded by switch.

2.15.42 tcp invalid_opts

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecTcp' option item 'invalid_opts' option value '1'	Set security status of TCP frame with SYN=0 and IP header larger than 20. value = 0-1 1 = frame with SYN=0 and IP header larger than 20 byte is dropped.
opiion value 1	 0 = frame with SYN=0 and IP header larger than 20 byte is forwarded by switch.

2.15.43 udp blat

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of UDP frame with SP equal to DP. value = 0-1
option name 'SecUdp' option item 'blat'	 1 = UDP frame with SP equal to DP is dropped. 0 = UDP frame with SP equal to DP is forwarded by
option value '1'	switch.

2.15.44 udp invalid_len

UCI Command	Description
config switch_ext option device 'switch0'	Set security status of UDP frame with invalid length. • value = 0-1
option name 'SecUdp' option item 'invalid_len'	 1 = frame with UDP length check error (UDP LEN + IP HDR != IP LEN) is dropped.
option value '1'	 0 = frame with UDP length check error (UDP LEN + IP HDR != IP LEN) is forwarded by switch.

2.15.45 udp invalid_chksum

UCI Command	Description
config switch_ext	Set security status of UDP frame with invalid checksum.
option device 'switch0'	■ value = 0-1
option name 'SecUdp'	 1 = frame with UDP checksum error is dropped.
option item 'invalid_chksum' option value '1'	 0 = frame with UDP checksum error is forwarded by switch.

2.15.46 icmp4 ping_pl_exceed

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIcmp4' option item 'ping_pl_exceed' option value '1'	Set security status of ICMP4 frame with IP payload length larger than max. value = 0-1 1 = Ping frame with IP payload length larger than max is dropped. 0 = Ping frame with IP payload length larger than max is forwarded by switch.

2.15.47 icmp4 ping_frag

UCI Command	Description
config switch_ext	Set security status of ICMP4 frame with fragment.
option device 'switch0'	■ value = 0-1
option name 'SecIcmp4'	 1 = ICMPv4 frame with fragment is dropped.
option item 'ping_frag'	 0 = ICMPv4 frame with fragment is forwarded by switch.
option value '1'	

2.15.48 icmp4 ping_max_pl

UCI Command	Description
config switch_ext option device 'switch0' option name 'Seclcmp4' option item 'ping_max_pl' option value '1'	Set ICMP4 frame IP payload length MAX. It is available when set command "sec icmp4 set ping_pl_exceed 1". • value = IP payload length, 14 bits

2.15.49 icmp6 ping_pl_exceed

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIcmp6' option item 'ping_pl_exceed' option value '1'	Set security status of ICMP6 frame with IP payload length larger than MAX. value = 0-1 1 = ICMPV6 ping frame with IP payload length larger than MAX is dropped. 0 = ICMPV6 ping frame with IP payload length larger than MAX is forwarded by switch.

2.15.50 icmp6 ping_fr

UCI Command	Description
config switch_ext	Set security status of ICMP6 frame with fragment.
option device 'switch0'	■ value = 0-1
option name 'Seclcmp6'	1 = ICMPv6 frame with fragment is dropped.
option item 'ping_frag' option value '1'	 0 = ICMPv6 frame with fragment is forwarded by switch.

2.15.51 icmp6 ping_max_pl

UCI Command	Description
config switch_ext option device 'switch0' option name 'SecIcmp6' option item 'ping_max_pl' option value '1'	Set ICMP6 frame IP payload length MAX. It is available when set command "sec icmp4 set ping_pl_exceed 1". • value = IP payload length, 14 bits

2.16 STP commands

Config	Description	
portState	Configure STP state on a particular port.	

2.16.1 portState

UCI Command	Description
config switch_ext	Configure STP state on a particular port.
option device 'switch0'	■ stp_id = 0
option name 'StpPortState'	port_id = 0-6
option stp_id '0'	stp_status = <disable block listen learn forward></disable block listen learn forward>
option port_id '2'	
option stp_status 'forward'	

2.17 TRUNK commands

Config	Description	
group	Configure trunk group port member information.	
hashmode	Configure trunk hash mode.	

2.17.1 Group

UCI Command	Description
config switch_ext	Configure trunk group port member information.
option device 'switch0'	trunk_id = 0-3
option name 'TrunkGroup'	status = <enable disable></enable disable>
option trunk_id '1'	trunk_port_bitmap
option status 'enable'	BIT[0] = port 0
option trunk_port_bitmap '0x6'	BIT[1] = port 1
	BIT[2] = port 2
	BIT[3] = port 3
	□ BIT[4] = port 4
	□ BIT[5] = port 5
	□ BIT[6] = port 6

2.17.2 Hashmode

UCI Command	Description	
config switch_ext option device 'switch0'	Configure trunk hash mode. • trunk hash mode	
option name 'TrunkHashmode' option trunk_hash_mode '0xf'	#define FAL_TRUNK_HASH_KEY_DA	0x1
option trunk_nash_mode oxi	#define FAL_TRUNK_HASH_KEY_SA#define FAL_TRUNK_HASH_KEY_DIP	0x2 0x4
	#define FAL_TRUNK_HASH_KEY_SIP	0x8

2.18 VLAN commands

Config	Description	
entry	ntry Configure VLAN entry on a particular device.	

Config	Description
member	Configure port member on a particular VLAN entry.
learnsts	Configure FDB learning status of a particular VLAN entry.

2.18.1 Entry

UCI Command	Description
config switch_ext option device 'switch0' option name 'VlanEntry' option vlan_id '100'	Create a VLAN entry by VLAN ID. After this operation the member ports of the created VLAN entry are null. • vlan_id = 0-4095

2.18.2 **Member**

UCI Command	Description
config switch_ext	Add a port member to a particular VLAN entry.
option device 'switch0'	vlan_id = 0-4095
option name 'VlanMember'	port_id = 0-6
option vlan_id '100'	tag_mode
option port_id '1'	 unmodified = egress transmit packets unmodified
option tag_mode 'untagged'	 untagged = egress transmit packets without VLAN tag
	 tagged = egress transmit packets with VLAN tag

2.18.3 learnsts

UCI Command	Description
config switch_ext option device 'switch0' option name 'VlanLearnSts' option vlan_id '100' option learn_status 'enable'	Set FDB learning status of a particular VLAN entry. vlan_id = 0-4095 learn_status enable = indicates normal operation about learn and final DP disable = indicates no learn and not use ARL table DP calculate final DP, but use UNI flood DP as ARL DP to calculate DP