Build Overview:

1 **EMO Cable Install**
2 **Cabinet Temperature Assy Install**
3 **PSU HFE Hose Install**
4 **Main AC EMO Panel & Switch Install**

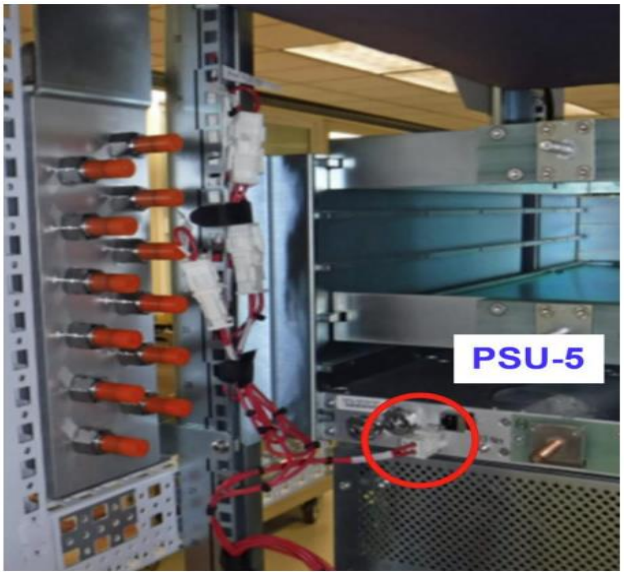

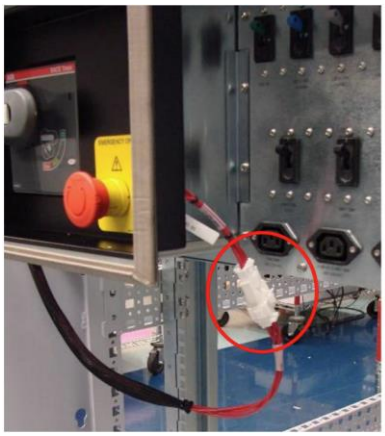

CHANGE HISTORY

Date	BPM Rev	Change Details	Updated by
	1	New Issue	JOSEPH AMAD

Prepared By:
JOSEPH R. AMAD
Manufacturing Engineer

Checked By:
IVAN NOWELL PANIQUE
Team Lead

Approved By:
SHERWIN ARIOSTE
Operations Manager

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	634-439-12	EMO Line	1
2	813-929-01	Tie	6
3	813-929-00	Tie	2
4	961-286-04	EMO Temperature Sensor	1
5	472-426-12	M5 Screw	2
6	631-794-00	Blue short cooling pipe	1
7	631-794-01	Red long cooling pipe	1
8	629-384-00	Circuit Breaker panel	1
9	479-133-23	EMO warning label	1
10	801-643-01	EMO Switch	1
11	801-541-02	Switch Contact Block	1
12	801-515-02	Switch Contact Block	1
13	634-438-00	Switch Line	1
14	603-096-00	M5 Hex nut	4

MACHINE:

NO.	PART # / ID	DESCRIPTION	IMAGE
1	N/A	PH2 Phillips Torque Screwdriver 3.3 N.m	N/A
2	N/A	EMO Socket Wrench	N/A
3	N/A	8mm Socket wrench 0.7 N.m	N/A
4	N/A	Slotted Screwdriver 0.7 N.m	N/A

METHOD:

Flow chart of operation steps

BPM preparation	See (1. Scope of application)
↓	
Preparation Tools	See (2. Tools/Materials/Parameters---1. Tools)
↓	
Prepare Materials	See (2. Tools/Materials/Parameters---2. Materials)
↓	
Complete Operation	See (3. Operation Steps)
↓	
Inventory	See (2. Tools/Materials/Parameters---2. Materials)
↓	
Operation Check	See (4. Matters needing attention)
↓	
Inventory collection tools	See (2. Tools/Materials/Parameters---1. Tools)

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3. Operation steps

1.1 Install the EMO cable (634-439-12) on the operation surface of the cabinet as shown in the figure, and wind it from under the power rack to the left-the red wire harness.

a. Connect the connector labeled "PSU5 EMO" to PSU5 on the installation line.

Ensure that the PSU0-PSU4 connector is above PSU0, And tie it up with 3 813-929-01 cable ties.

b. Place the remaining wire on the lower left of the DC shelf.

c. As shown in the figure, except for the connectors labeled "CUSTOMER EMO" and "TH EMO", place the other wires on the right side and use 2

The cable tie (813-929-01) fixes the wire on the shelf at the bottom of the upper groove.

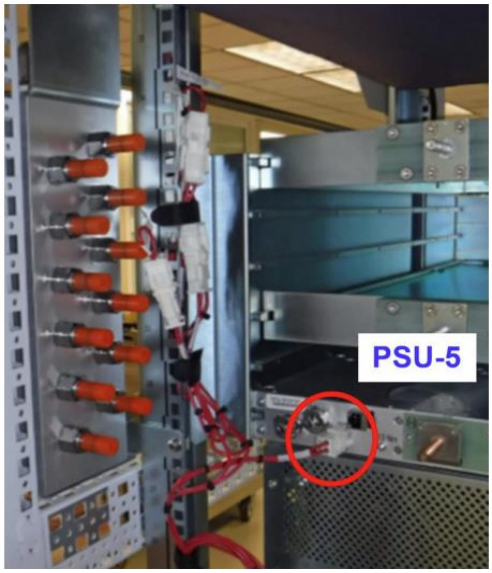

BPM preparation

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.2 Connect the connectors labeled "J67", "J68" and "J70" on the EMO line to the back area of the ADB on the right side of the cabinet operation surface as shown in the figure.

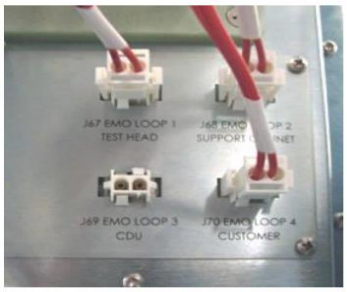

1.3 Place the EMO cable connected to the SMC on the right side outside the cabinet as shown in the figure, and put it on the SMC shelf along the grounding cable. Label the EMO cable "SMC J1"
The connector is connected to the J1 interface on the front of the SMC shelf.

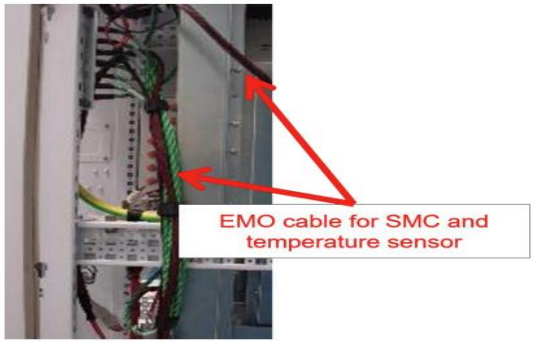

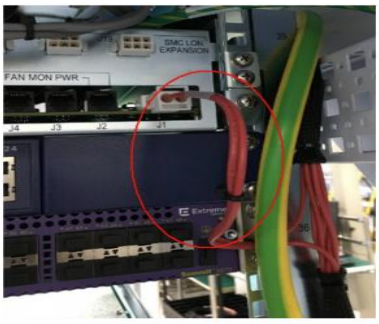

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.4 Connect the EMO cable connector labeled "Customer EMO" to the EMO button on the operation surface of the cabinet as shown in the figure.

Rear view of the Interface panel of the cabinet operation surface

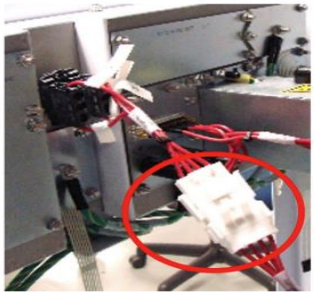

1.5 Connect the EMO cable connector labeled "External EMO" to the front of the External EMO panel as shown in the picture.

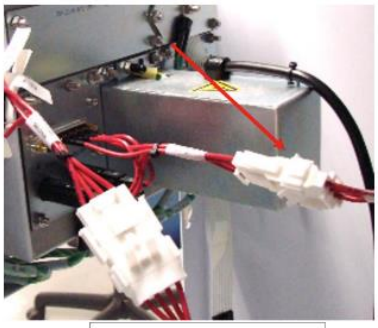

Looking from the bottom up on the power shelf

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.6 As shown in the figure, the labels “EXPANSION EMO” and “External EMO B” on the right side of the cabinet operation surfaceWith EMO jumperThe line Tie it to the guide rail with a small cable tie (813-929-01).

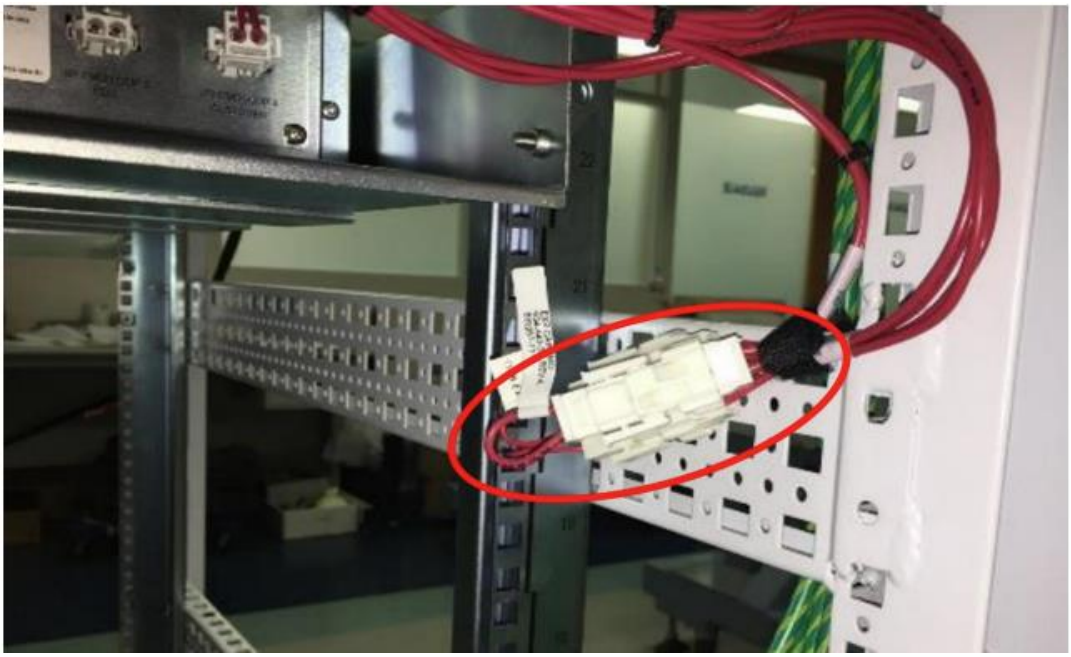

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.7 Place the line "Temp.EMO" and the line "Service EMO" on the maintenance surface of the cabinet along the guide rail as shown in the figure. Use 2 short cable ties (813-929-00) tied to the rack rail.

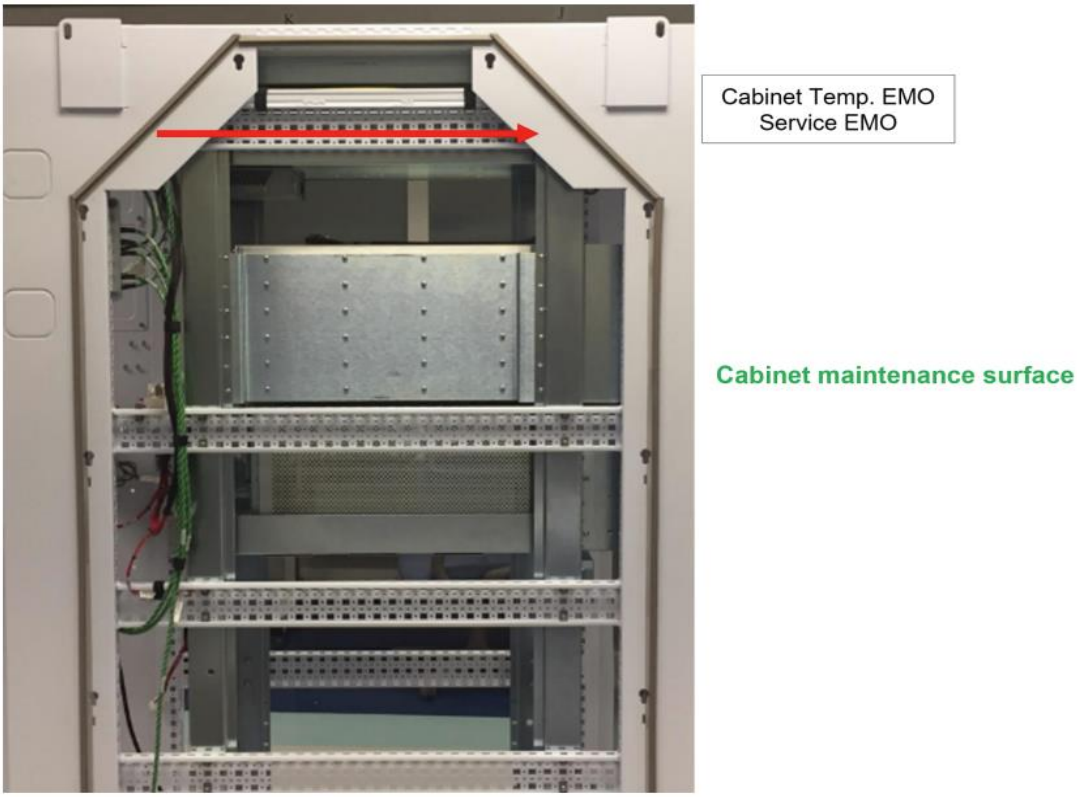

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

2.1 Install an EMO temperature sensor (961-286-04) on the upper side of the cabinet maintenance surface as shown in the figure, using 2 M5 screws (472-426-12) F\fixed. The tool is a PH2 Phillips torque screwdriver with a torque value of 3.3 N·m.

2.2 As shown in the figure, connect the EMO wire harness on the operation surface of the previous step to the temperature sensor on the left.

a. Connect Temp 1 to the left side of the sensor.

b. Connect Temp 2 to the right side of the sensor.

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3.1 Install the PSU cooling tube on the cooling manifold to the PSU as shown in the figure.

a. As shown in the figure, install a supply tube (short tube blue) (631-794-00) on the inside of the Manifold and connect it to the left connector of the PSU.

b. As shown in the figure, install a return pipe (long pipe red) (631-794-01) on the outside of the Manifold, near the cabinet door on the right connector of the PSU.

Note: The position of the connector on the Manifold relative to the PSU. Connect PSU0 to the top position of the Manifold.

Manifold bottom location connected to PSU5.

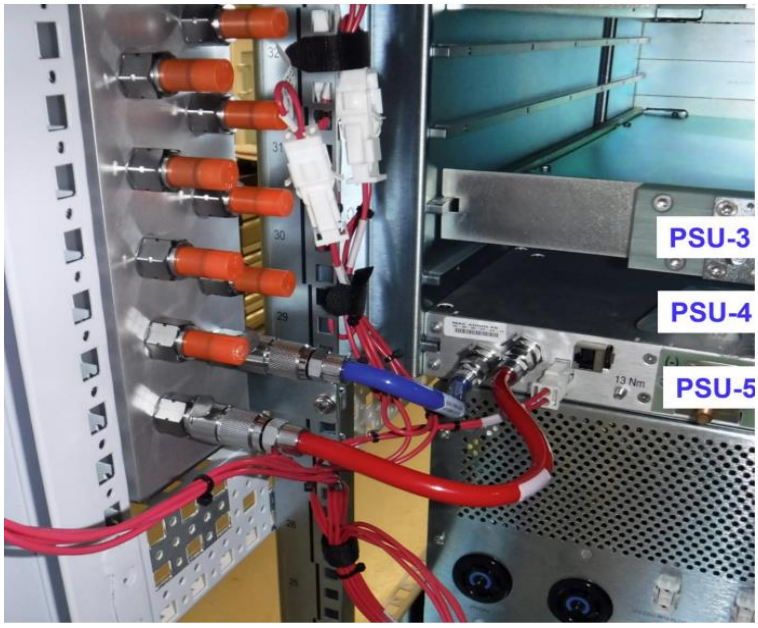

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.1 Attach an EMO warning label 479-133-23 to the circuit breaker panel (629-384-00) as shown in the figure.

4.2 Install an EMO switch (801-643-01) on the circuit breaker panel as shown in the figure.
a. Place the large gap of the switch downward and use a large plastic nut to fix the switch.
The tool is an EMO socket wrench with a torque value of 17.7 in-lbs.

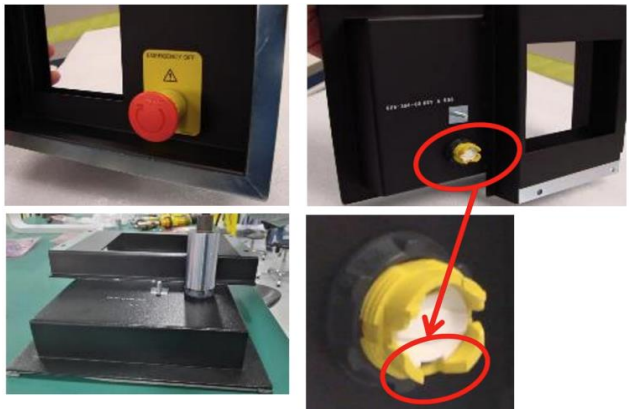

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.6 Install the circuit breaker panel to the back of the ADB as shown in the figure,
and fix it with 4 M5 nuts (603-096-00).
The tool is an 8mm socket wrench.
The torque value is 0.7 N·m. (This panel will be removed when installing the power cord.)

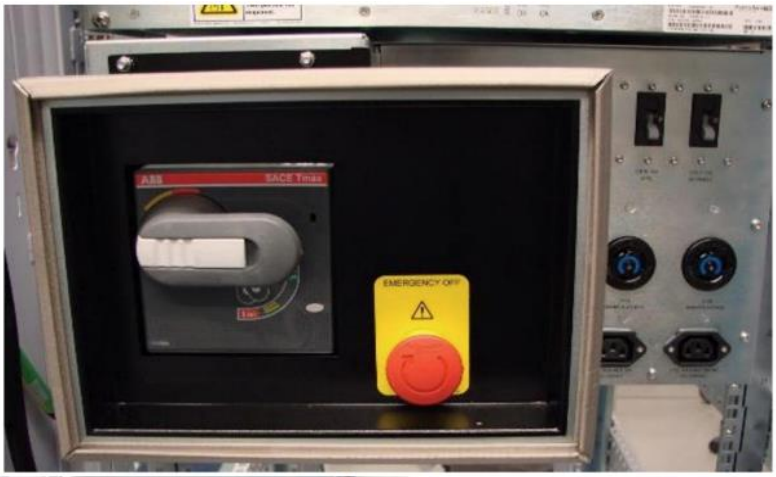

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.3 Insert the switch contact block (801-541-02) into another switch contact block (801-515-02) as shown in the figure.

4.4 Install the wire (634-438-00) on the switch as shown in the figure, and fix it with a flat-blade screwdriver. The torque value is 0.7 N·m.

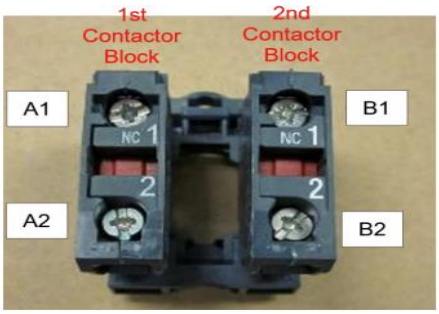

4.5 As shown in the figure, the buckle of the switch faces upwards, and the EMO contact switch is installed on the back of the EMO button.

a. Push the button gently to ensure that the EMO switch can be pressed in and unscrewed normally without obstacles.

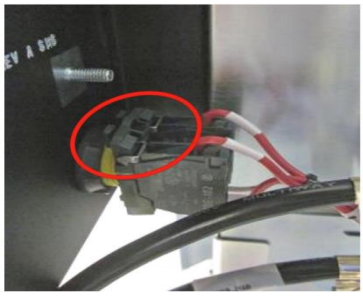

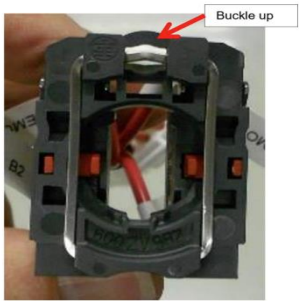

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:
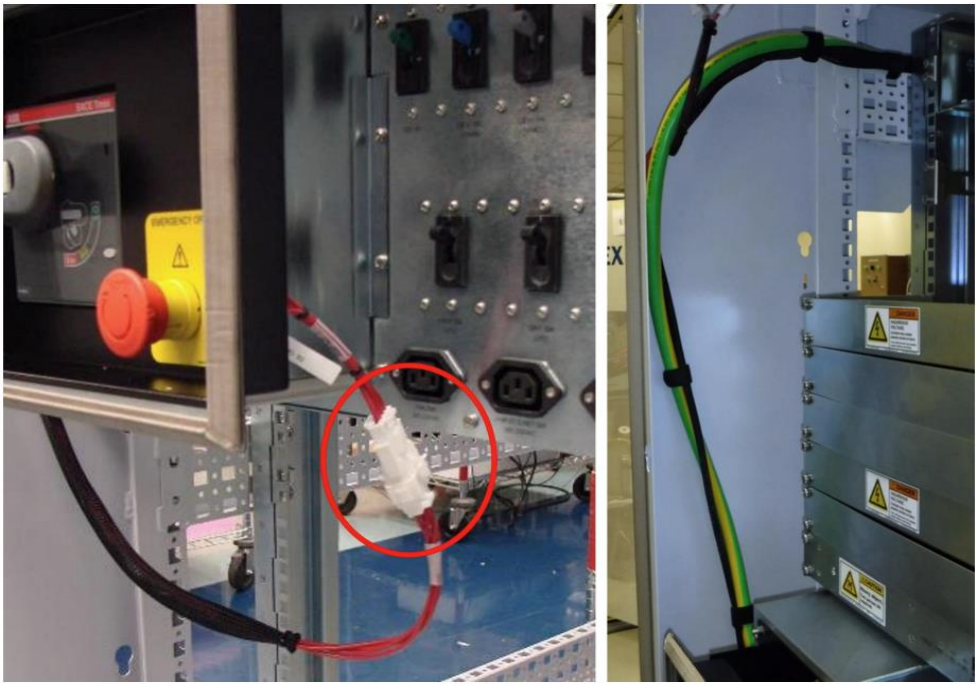
4.7 Connect the wire of the EMO knob to the EMO harness of the main system as shown in the figure.
Note: Arrange the EMO cable from the left side of the cabinet.