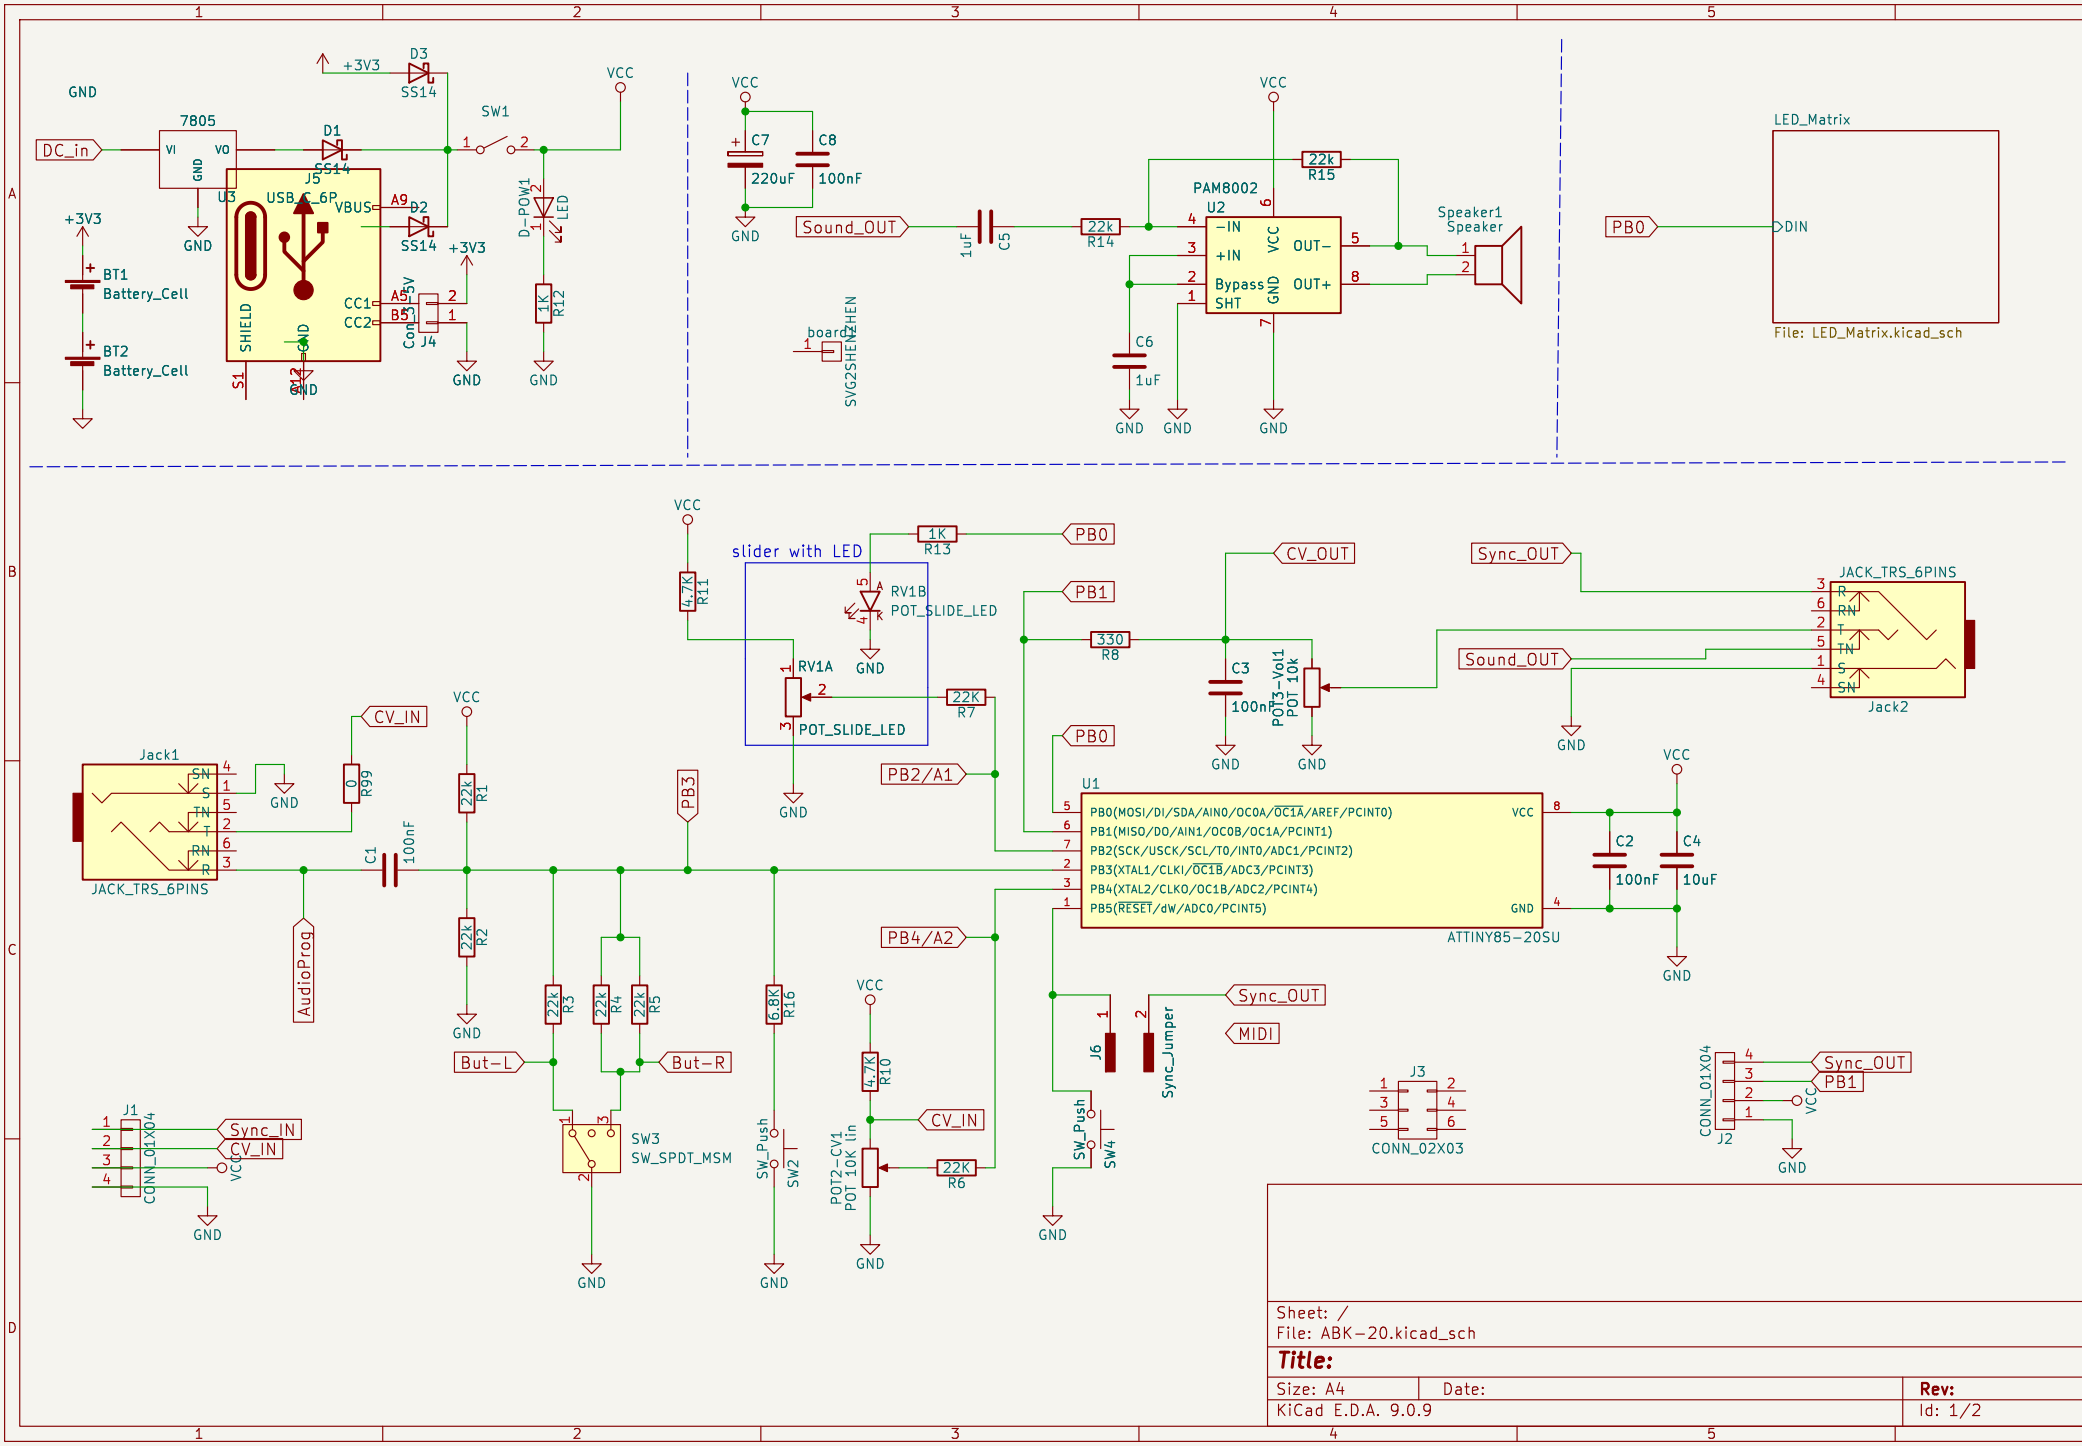
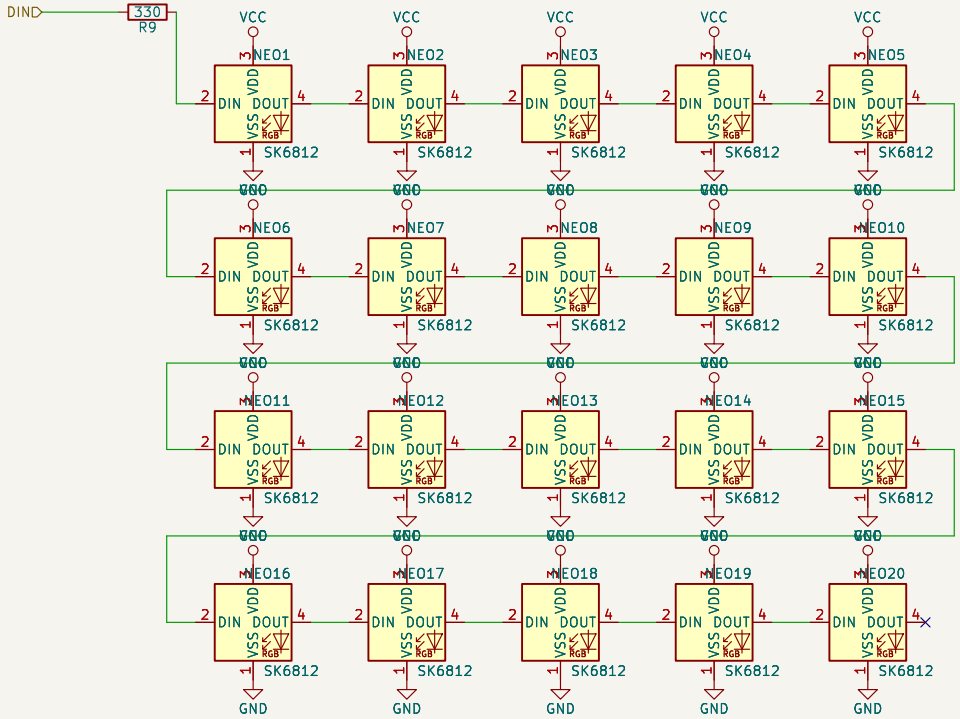

GND
DC_in
7805
VI
VO
GND
U3
+3V3
D3
SS14
D1
SS14
J5
USB_C_6P
VBUS
SHIELD
GND
S1
A9
B5
A5
B8
CC1
CC2
SW1
D2
SS14
+3V3
Conn_5V
J4
VCC
D-POW1
LED
1K
R12
BT1
Battery_Cell
BT2
Battery_Cell
C7
220uF
C8
100nF
Sound_OUT
1uF
C5
22k
R14
PAM8002
U2
-IN
+IN
Bypass
SHT
VCC
GND
OUT-
OUT+
22k
R15
C6
1uF
Speaker1
Speaker
board2
SVG2SHENZHEN
LED_Matrix
PB0
DIN
File: LED_Matrix.kicad_sch
slider with LED
1K
R13
4.7K
R11
RV1B
POT_SLIDE_LED
RV1A
POT_SLIDE_LED
22K
R7
330
R8
CV_OUT
C3
100nF
POT3-Vol1
POT 10k
Sync_OUT
Sound_OUT
JACK_TRS_6PINS
Jack2
Jack1
JACK_TRS_6PINS
CV_IN
0
R99
C1
100nF
22k
R1
22k
R2
PB3
PB2/A1
PB0
PB1
PB4/A2
U1
PB0(MOSI/DI/SDA/AIN0/OC0A/OC1A/AREF/PCINT0)
PB1(MISO/DO/AIN1/OC0B/OC1A/PCINT1)
PB2(SCK/USCK/SCL/T0/INT0/ADC1/PCINT2)
PB3(XTAL1/CLKI/OC1B/ADC3/PCINT3)
PB4(XTAL2/CLKO/OC1B/ADC2/PCINT4)
PB5(RESET/dW/ADC0/PCINT5)
VCC
GND
ATTINY85-20SU
C2
100nF
C4
10uF
AudioProg
But-L
But-R
22k
R3
22k
R4
22k
R5
SW3
SW_SPDT_MSM
6.8K
R16
SW_Push
SW2
4.7K
R10
POT2-CV1
POT 10K lin
22K
R6
J6
Sync_Jumper
Sync_OUT
MIDI
SW_Push
SW4
J3
CONN_02X03
J1
CONN_01X04
Sync_IN
CV_IN
J2
CONN_01X04
Sync_OUT
PB1
Sheet: /
File: ABK-20.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 9.0.9
Id: 1/2



Sheet: /LED_Matrix/
File: LED_Matrix.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 2/2