

Padbobot Food Delivery Robot W3s


User Manual

W3s Table of Contents

1. Product Overview	1
2. Robot Installation Guide	2
3. Robot Charging	3
4. Power On and Usage	4
5. Robot Software User Guide	7
6. Padbot App User Guide	15
7. FAQ	18
8. Notes	19

W3s Product Overview

Product Composition

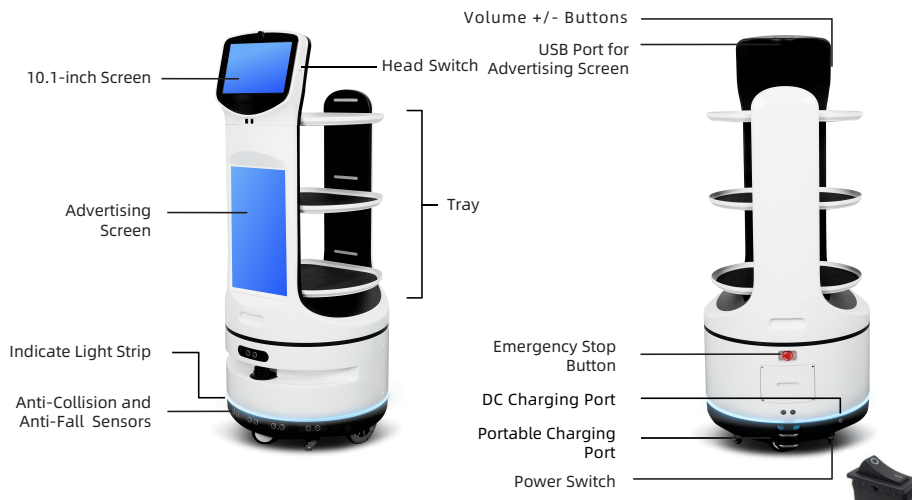

Size (W*H*L)	50*120*50 cm
Screen Size	10.1 Inch
Resolution Ratio	1280*800
Advertising Screen Size	15.6 Inch
Advertising Screen Resolution	1920*1080
N.W.	33.5 Kg
Battery Capacity	12800 mAh
Charging Input	25.9V/3A
Charging Time	9 H
Running Time	10 H

Accessories



Charger




Charging Dock

W3s Robot Installation Guide

Robot Installation Steps

Connect the wire from the upper body of the robot to the wiring port on the chassis, paying attention to the direction. The black protrusion inside the circle should face the gap in the wiring port. Plug in the network cable and USB connection cable. Align the centerline of the upper body with the chassis, secure the chassis, and rotate the upper body clockwise until it matches the example shown in the picture.

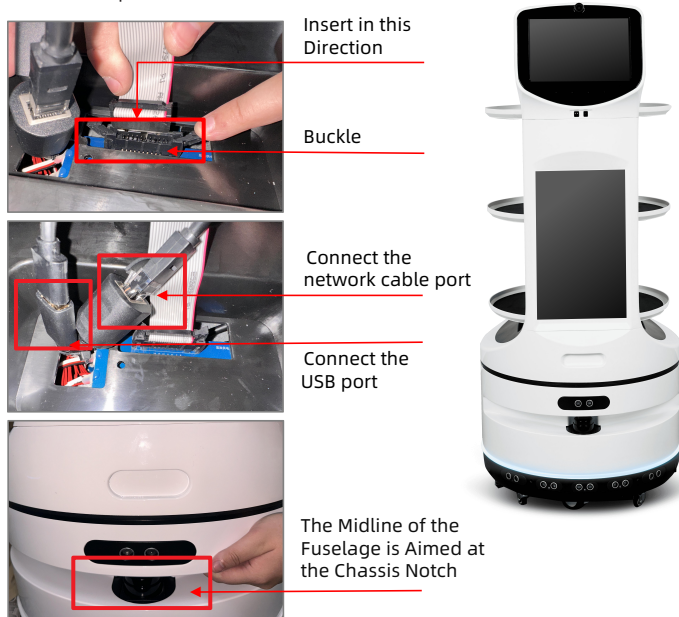


Robot Disassembly Steps


1. Fixed the chassis, and rotate the fuselage in the direction shown in the figure.



2. Open the wiring port of the chassis, simultaneously pull apart the snap fasteners on both sides of the port. Remove the power cables, USB cables and network cables from the upper body of the robot. The disassembly is completed.

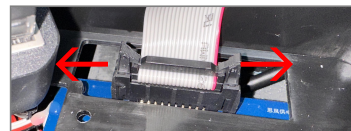

Break the buckle to both sides while disassembly

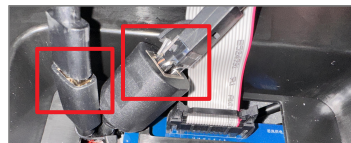

Remove the USB cable and the network cable

W3s Robot Charging

Charging

This product has a built-in lithium battery. Please charge the robot before first use to ensure normal operation. Charger indicator shows Red while charging and Green when not charging.

Charging Methods:

1. Direct Charging: Connect the charger directly to the robot's DC charging port.
2. Dock Charging: Connect the charger to the DC charging port on the charging dock. Charge the robot by docking it on the charging base.



Direct Charging Port



Charging Dock

W3s Powering On and Usage

Powering On the Robot

1. Power Switch

The power switch is located at the bottom of the robot. Turn on the power switch, the robot will power on and the screen will light up.



2. Head Switch


The head switch is located on the back of the head. Pressing it once will turn off the screen; pressing and holding it will bring up the "Restart" option.



W3s Powering On and Usage

SIM Card Installation

The robot supports 4G network connection. Use a Micro-SIM card. Insert the card with the notch facing outward and the metal core facing downward, as shown in the picture.

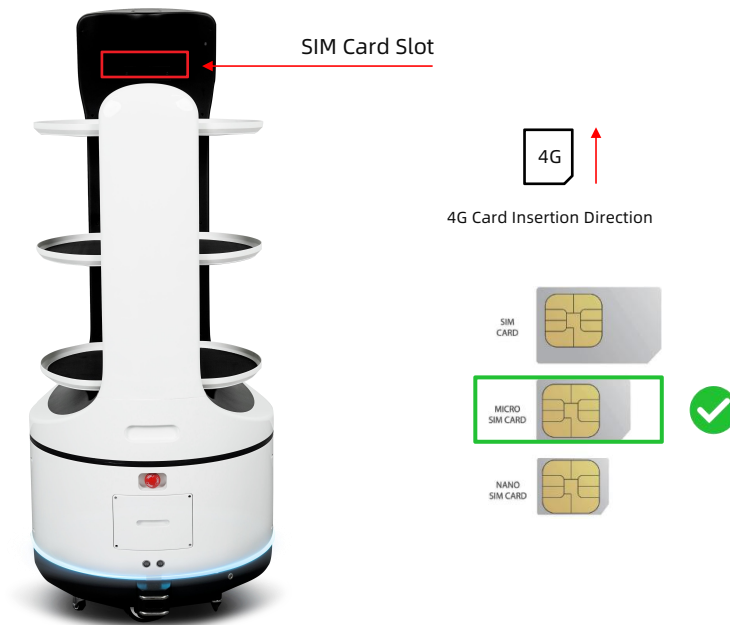

W3s Powering On and Usage



Emergency Stop Button

Emergency Stop Button is located at the rear of the chassis. Pressing the button causes the robot to stop immediately. Rotate the button clockwise to release it and resume normal operation.



Creating a Map



Click the "+" button in the upper right corner of the Map Management interface. The robot enters map scanning mode. Slowly push the robot to start scanning, or control the robot's movement for scanning via the PadBot Manager App.

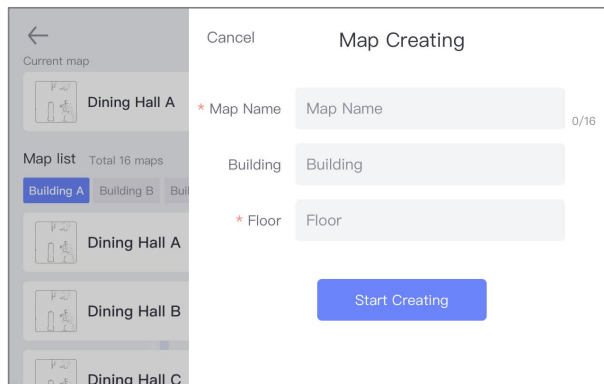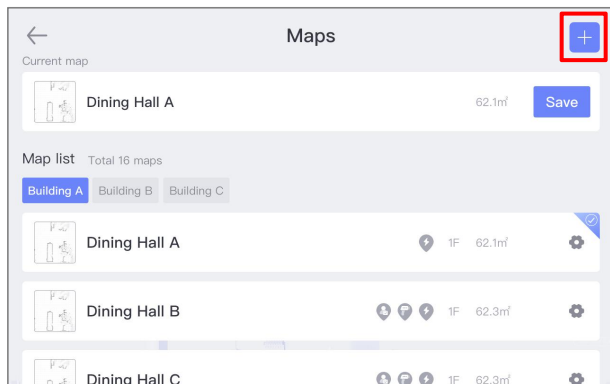

Editing a Map

After creating a map, click the "Edit" button to edit the map.


1. Add Target Points: Add target points to the map as needed. Supports editing, moving, and deleting target points.
2. Set Virtual Walls or Restricted Areas: The robot will avoid virtual walls and restricted areas during navigation.
3. Passable Areas: Set specific areas on the map as passable. The robot will ignore obstacles on the map during navigation.
4. Speed Limit Areas: Navigation speed through these areas will not exceed the set limit.

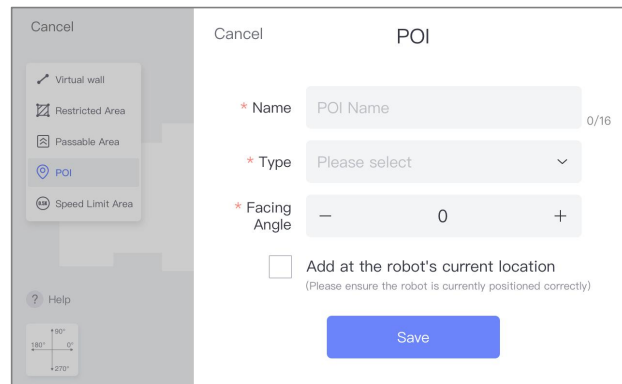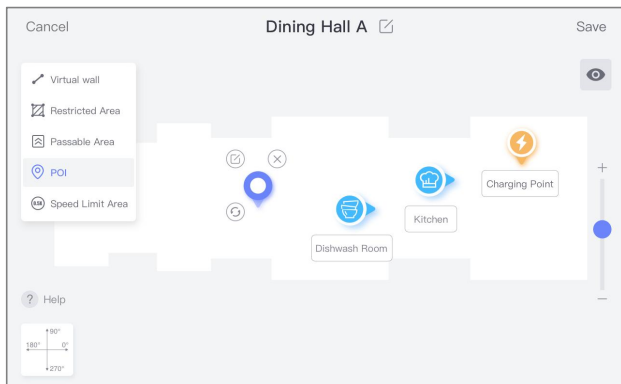

* Due to variations in hardware navigation system versions, the functions available for editing on this page may differ.

Editing Target Point Information

1. Target Point Name.
2. Target Point Type: Target Point, Charging Point, Kitchen, Dishwash Room.
3. Facing Angle (Orientation).
4. Add at the robot's current location.

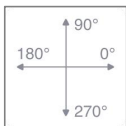



Reference coordinate for orientation angle

Target Point	The location reached by the robot navigation.
Charge Point	The position when robot successfully docks to the charging base.
Kitchen	The destination point returned after the meal is finished.
Dishwash Room	The target point returned automatically after the return of the round trip .
Facing Angle	The angle of the robot when it reaches the target point based on the reference coordinates.

Robot Locate


Method 1: If a charging point is correctly set on the map, push the robot back onto the charging dock and dock it. The robot will automatically reset its position.

Method 2: On the map page, click the "Locate" button. Draw the robot's actual position and orientation on the map. Click "Locate". The robot will spin in place to calibrate. Locating is successful upon completion.

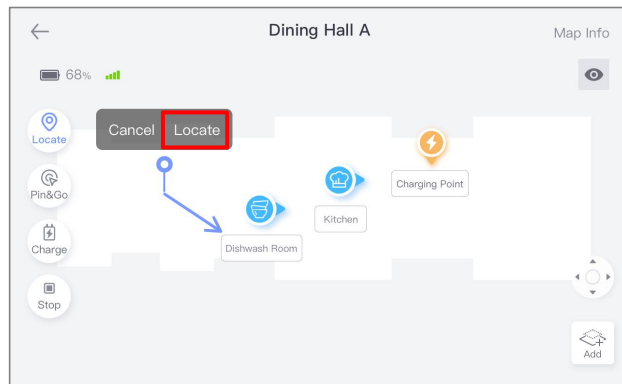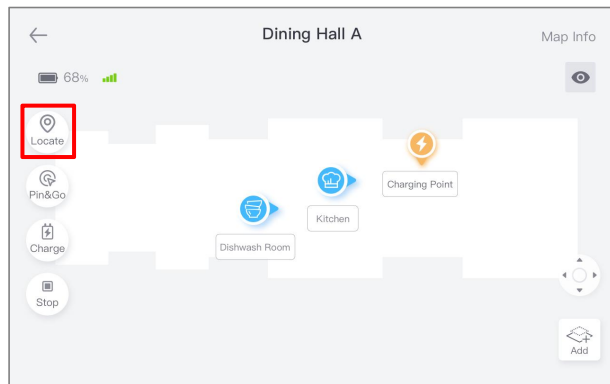



Three Modes

The food delivery robot has three modes: Delivery, Dishwash and Cruise. It can meet the diverse needs in complex scenarios .

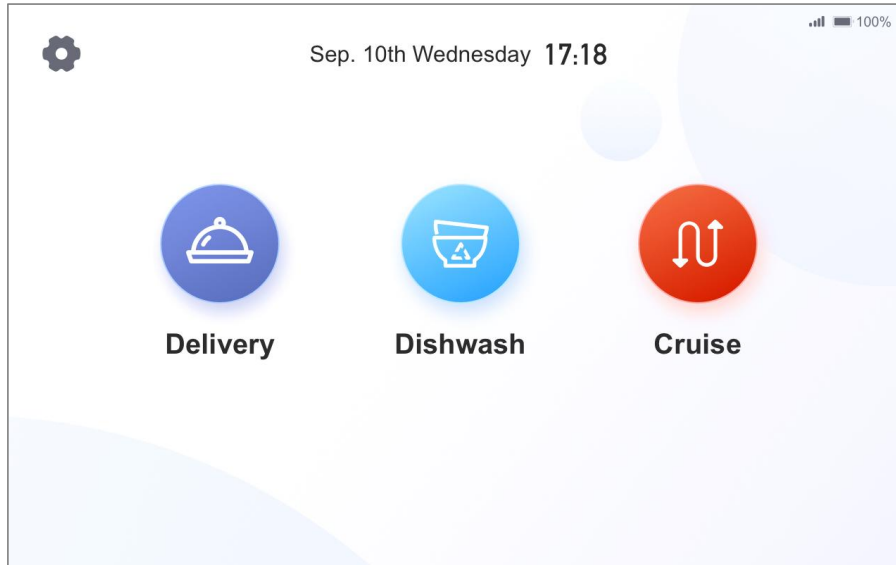


Delivery Mode

1. On the home page of the Padbot Delivery Robot APP, click the "Delivery" button to enter the Delivery Mode.
2. In the interface, the table number can be set to the corresponding position of the robot tray on the left by selecting or dragging.
3. Click "Start" and the robot begins its delivery mission.
4. After completing all the deliveries, the robot will automatically return to the kitchen.

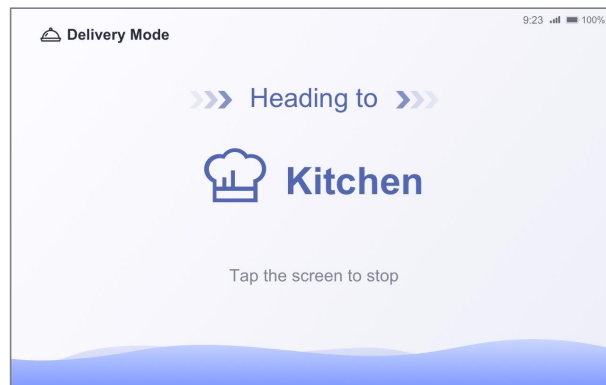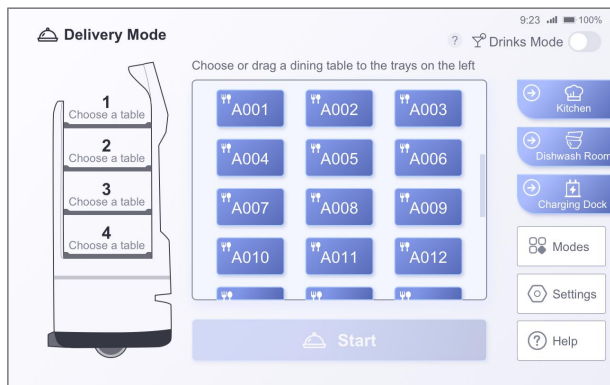



Dishwash Mode

1. In the home page of the Padbot Delivery Robot APP, click the "Dishwash" button to enter the Dishwash Mode.
2. In the interface, the table number to be returned can be set to the corresponding position of the robot tray on the left by selection or drag and drop.
3. Click "Start" and the robot begins its return mission.
4. After collecting the dishes from each table, the robot will automatically return to the dishwash room.

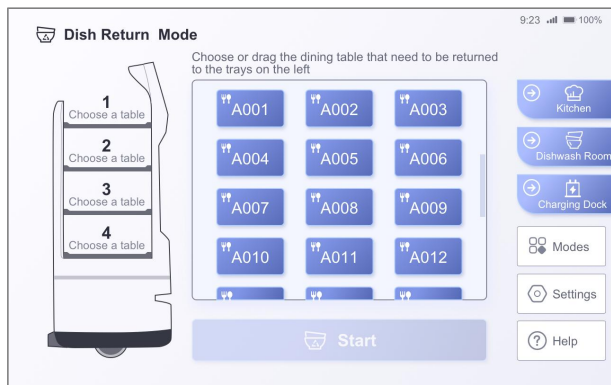

Cruise Mode

1. In the home page of the Padbot Delivery Robot APP, click the "Cruise" button to enter Cruise Mode.
2. Different cruise routes can be selected in Cruise Mode.
3. The Delivery Robot will continue to cruise along the cruise route.

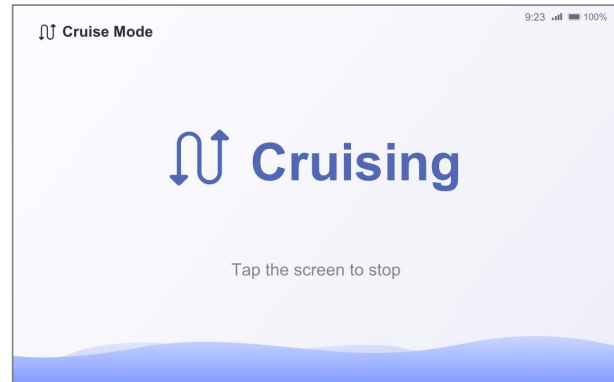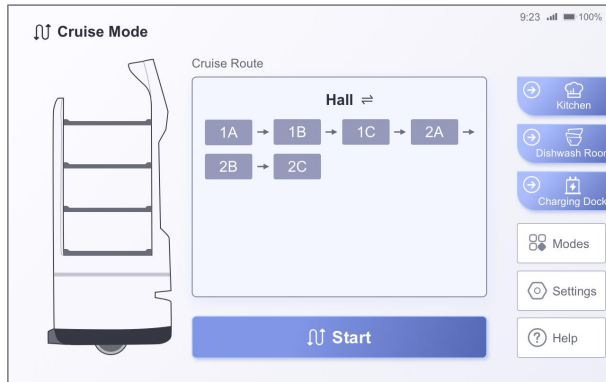

Download & Installation

Download Padbot App for iOS

Method 1: Search "PadBot" in your AppStore and download/install.

Method 2: Scan the QR code below to download and install.



iOS

Download Padbot App for Android

Method 1: Search "PadBot" in your app store and download/install.



Method 2: Scan the QR code below to download and install.



Android




Binding the Robot

After registering and logging in, bind the robot by scanning the QR code displayed on the robot. The first user to bind becomes the Super Administrator.

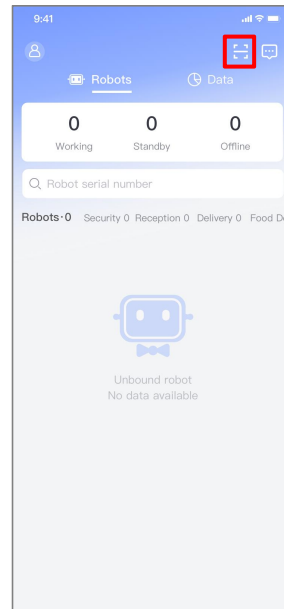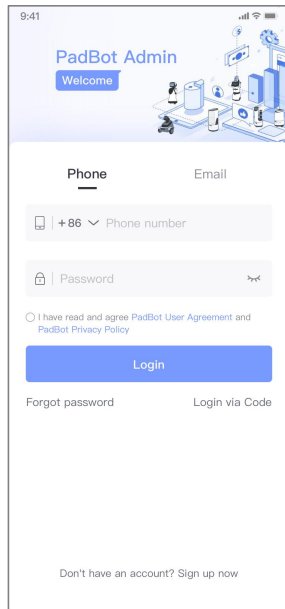

Map Management

1. On the Robot Homepage, click "Maps" to view all robot maps.
2. Click the "Settings" icon on the right side of the map -> "Edit" to edit the map, set target points, and edit target point information.
3. On the Map page, click "Locate", "Pin&Go", "Charge", "Stop", etc., to control robot navigation.

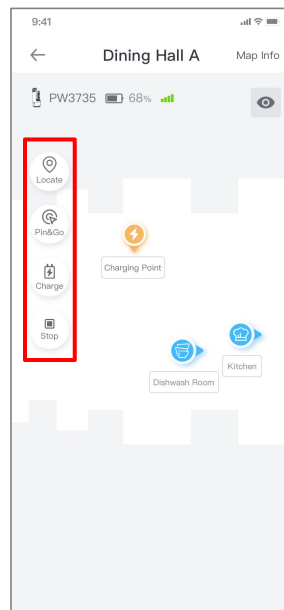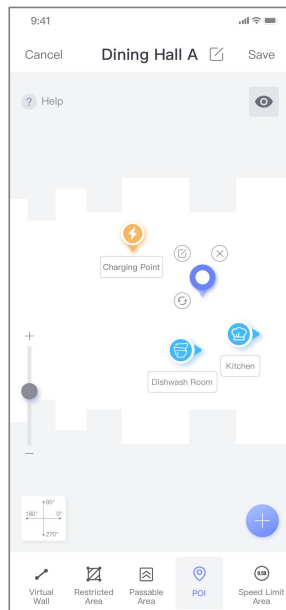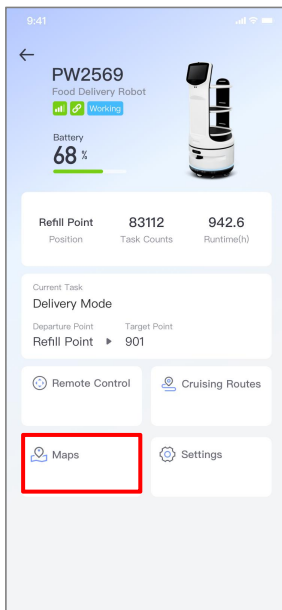

Robot cannot charge automatically

- A: 1. Check if "Auto Charge" is enabled in the PadBot Brain App settings.
2. Charge the robot directly using the power adapter. Check if the adapter indicator is Red (indicates normal charging).
3. Connect the adapter to the charging dock. Push the robot onto the dock. Check if the adapter indicator is Red (indicates normal charging).

Can it use 4G network?

A: Yes. The robot's head has a SIM card slot supporting China Telecom/Unicom/Mobile 4G. It can also use WiFi.

Incorrect destination at delivery time

A: Before delivery, push the robot to the charging base, and it will automatically reposition itself. Once the repositioning is completed, it will resume delivery tasks.

Emergency Stop Button

- A: 1. The robot is equipped with an emergency stop button at the rear. Press this button in case of emergency to stop the robot's movement immediately.
2. If the robot is unable to move, first check whether the emergency stop button has been pressed.
3. When packing the robot, the emergency stop button shall be pressed.

Do not obstruct the collision sensors at the bottom of the robot to interfere with the chassis collision sensing.

Do not throw, drop, or subject the robot to strong vibrations.

The charging dock should be installed against a wall, leaving sufficient space for the robot to dock.

Using batteries of the wrong type for replacement carries a risk of explosion. Dispose of used batteries strictly according to the instructions.

Contact Us

Guangdong Padbot Robotics Ltd

Website: www.padbot.com

Email: padbot@inbot.cn

Company Tel: 020-38456676 Sales Inquiry: 020-38456676 Ext.2

Guangzhou HQ: Building B8, No. 2 Tengfei 2nd Street, Sino-Singapore Guangzhou Knowledge City, Huangpu District, Guangdong Province.



TikTok



YouTube



Official Website

Due to technical upgrades, customer requirements, or other reasons, product configurations, images, and technical data may change without prior notice. The company is not responsible for inaccuracies or printing errors resulting from such product upgrades or changes.