DIGITAL SIGNAL PROCESSING: COSC390

Jordan Hanson January 15, 2019

Whittier College Department of Physics and Astronomy

UNIT 1.3 OUTLINE

Previous lectures covered:

- Complex numbers 2: The Fourier series and Fourier transform (continuous and discrete)
- Time-permitting: The Laplace transform (continuous and discrete)

This lecture will cover: (Reading: Chapter 2)

- Statistics and probability: the normal distribution and other useful distributions
- Noise: digitization and sampling
- · Noise: Spectral properties of noise, ADC and DAC

THE NOD

STATISTICS AND PROBABILITY: THE NOR-

MAL DISTRIBUTION

The mean, μ , and standard deviation, σ , of a data set $\{x_i\}$ are defined as

$$\mu = \frac{1}{N} \sum_{i=1}^{N} x_i \tag{1}$$

$$\sigma^2 = \frac{1}{N-1} \sum_{i=1}^{N} (x_i - \mu)^2$$
 (2)

Octave commands:

```
x = randn(100,1);
mean(x)
std(x)
```

One nice theorem: The variance is the average of the squares minus the square of the average. Let $\langle x \rangle$ represent the average of the quantity or expression x. We have

$$\sigma_{\rm X}^2 = \langle {\rm X}^2 \rangle - \langle {\rm X} \rangle^2 \tag{3}$$

Proof: observe on board.

Note: There is a distinction between the process or signal process and the the data. Just because the data has a given μ and σ does not imply that the signal process has or will continue to have the exact same values of μ and σ . The underlying process could be non-stationary.

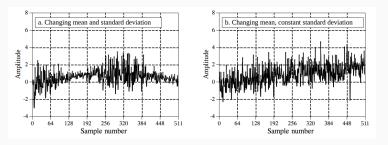


Figure 1: Signal processes in (a) and (b) are considered non-stationary because one or both of μ and σ depend on time.

A histogram is an object that represents the frequency¹ of particular values in a signal. For example, below is a histogram of 256,000 numbers drawn from a probability distribution:

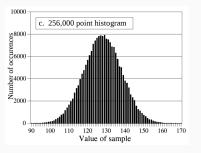


Figure 2: The histogram contains counts versus sample values.

¹Careful: the word frequency refers to the number of occurences in the data, not a sinusoidal frequency.

The following octave code should reproduce something like Fig. 2 from the textbook:

```
x = randn(256000,1)*10.0+130.0;
[b,a] = hist(x,100);
plot(a,b,'o');
```

The function randn(N,M) draws $N \times M$ numbers from a normal distribution and returns them in the size the user desires. The function hist(x,N) creates N bins and sorts the data x_i into them.

For data that is appropriately stationary, we can use histograms to estimate μ and σ faster, since we only have to loop over bins rather than every data sample. Let H_i represent the counts in a given bin, and i represent the bin sample. We have:

$$\mu = \frac{1}{N} \sum_{i=1}^{M} i H_i \tag{4}$$

$$\sigma^2 = \frac{1}{N-1} \sum_{i=1}^{M} (i - \mu)^2 H_i$$
 (5)

To obtain the mean in signal *amplitude*, you'll have to convert bin number to amplitude.

```
3.1
-0.03
1.2
0.2
-0.7
-1.45
2.2
-0.05
0.93
0.21
```

Table 1: Using Eq. 4 and 5, find estimates of μ and σ for this data.

```
x = [...];
[b,a] = hist(x,4); %(How many bins?)
```

Some vocabulary:

- normalization Total probability is 1.0. For pdf the integral from $[-\infty, \infty]$ is 1.0. For pmf the sum from $[-\infty, \infty]$ is 1.0.
- pmf Probability mass function: A normalized continuous function that gives the probability of a value, given the value.
- histogram Histograms are an attempted measurement of the pmf by breaking the data into discrete bins. Histograms can be normalized as well.
- pdf Probability density function: A normalized continuous function that gives the probability density of a value, given the value. Integrating the normalized pdf between two values gives the probability of observing data between the given values.

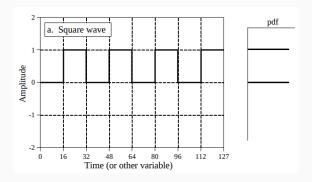


Figure 3: The square-wave signal spends equal time at 0.0 and 1.0, and the probability density function reflects that.

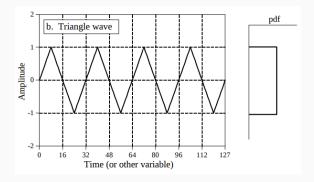


Figure 4: The triangle-wave signal spends equal time at all values between 0.0 and 1.0, and the probability density function reflects that.

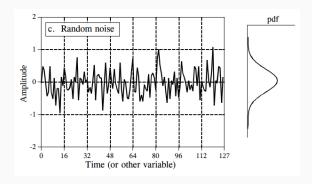


Figure 5: The random noise *usually* spends time near 0.0, but rarely it fluctuates to larger values.

Normally distributed data decreases in probability at a rate that is proportional (1) to the *distance from the mean*, and that is proportional (2) to the *probability itself*.

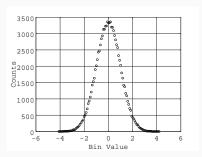


Figure 6: Normally distributed data counts decrease as measured further from the mean for *two reasons*.

Normal Distribution PDF

Let p(x) be the PDF of normally distributed data x with mean μ . In order to obey conditions (1) and (2), the function p(x) must be described by the following differential equation, where k is some constant.

$$\frac{dp}{dx} = -k(x - \mu)p(x) \tag{6}$$

Rearranging Eq. 6, we have

$$\frac{dp}{p} = -k(x - \mu)dx \tag{7}$$

Integrating both sides gives

$$\ln(p) = -\frac{1}{2}k(x - \mu)^2 + C_0 \tag{8}$$

Exponentiating,

$$p(x) = C_1 \exp\left(-\frac{1}{2}k(x-\mu)^2\right)$$
 (9)

Ensuring that the PDF is normalized requires

$$\int_{-\infty}^{\infty} p(x)dx = 1 \tag{10}$$

But how do we integrate Eq. 9? First, a change of variables. Let $s = \sqrt{k/2}(x - \mu)$, so $ds = \sqrt{k/2}dx$. Then, we have

$$C_1 \sqrt{\frac{2}{k}} \int_{-\infty}^{\infty} \exp(-s^2) ds = 1$$
 (11)

Squaring both sides, we have

$$C_1^2 \frac{2}{k} \left(\int_{-\infty}^{\infty} \exp(-s^2) ds \right)^2 = 1$$
 (12)

Let's pretend the two factors of the integral involve different variables:

$$C_1^2 \frac{2}{k} \left(\int_{-\infty}^{\infty} \exp(-x^2) dx \right) \left(\int_{-\infty}^{\infty} \exp(-y^2) dy \right) = 1$$
 (13)

Now we have

$$C_1^2 \frac{2}{k} \int_{-\infty}^{\infty} \exp(-(x^2 + y^2)) dx dy = 1$$
 (14)

Change to polar coordinates $(x^2 + y^2 = r^2)$

$$C_1^2 \frac{2}{k} \int_0^\infty \int_0^{2\pi} r \exp(-r^2) dr d\phi = 1$$
 (15)

One more substitution: $u = r^2$, and du = 2rdr:

$$-\frac{C_1^2}{k} \int_0^\infty \int_0^{2\pi} \exp(-u) du d\phi = 1$$
 (16)

Solving for C_1 , we find

$$C_1 = \sqrt{\frac{k}{2\pi}} \tag{17}$$

Thus the pdf of normally distributed data is

$$p(x) = \sqrt{\frac{k}{2\pi}} \exp\left(-\frac{1}{2}k(x-\mu)^2\right)$$
 (18)

Let's defined $k = \frac{1}{\sigma_x^2}$ so that it's clear the exponent has the proper ratio of units:

$$p(x) = \sqrt{\frac{1}{2\pi\sigma_X^2}} \exp\left(-\frac{1}{2}\left(\frac{x-\mu}{\sigma_S}\right)^2\right)$$
 (19)

STATISTICS AND PROBABILITY: PROGRAM-

MING WITH OCTAVE

More on the hist function in octave²

```
pkg install -forge io
pkg install -forge statistics
pkg load statistics
pkg help histfit
histfit(randn(1000,1))
histfit(rand(1000,1))
```

Let's work out the σ of a *flat* distribution between [0,1]. What is it for a flat distribution between [-1,1]? (We can derive this by hand as well if we cannot access statistics package).

²I hope this works, but if not, it's ok.

Some interesting notation for normal distributions:

$$N(\mu, \sigma) = \sqrt{\frac{1}{2\pi\sigma^2}} \exp\left(-\frac{1}{2} \left(\frac{x-\mu}{\sigma}\right)^2\right)$$
 (20)

Let's write a function **NGaus.m** that produces the Gaussian probability given μ and σ :

function ret = NGaus(mu,sigma,x)
...
endfunction

Now let's write a function *NRand* that sums *N* uniformly-distributed (flat) random variables *x*:

```
function ret = NRand(n)
    ret = sum(rand(n,1));
endfunction
```

Create a histogram of a few hundred outputs of *NRand*. What do you notice about the pmf? Let's plot *NGaus* on the same axes as the histogram of *NRand*. How do they compare?

We are on our way to producing N(0,1) distributed numbers, and therefore our first noise signals...

The Box-Muller method for N(0,1) distruted numbers:

$$X_1 = \sqrt{-2\ln(U)}\cos(2\pi V) \tag{21}$$

$$X_2 = \sqrt{-2\ln(U)}\sin(2\pi V) \tag{22}$$

Try this in octave... More vocabulary:

• cdf - Cumulative distribution function: Probability that a continuous random variable X is less than some value x. For a given pdf, the cdf $\Phi(X)$ is the integral of the total probability on $[-\infty,x]$. The derivative of the pdf is related to the pdf via the fundamental theorem of calculus.

If the pdf follows f(x), then

$$\Phi(X \le x) = \int_{-\infty}^{x} f(x) dx \tag{23}$$

The cdf of N(0,1) has an expected shape, but can't be expressed with elementary functions.

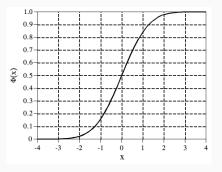


Figure 7: The cumulative distribution of the normal distribution. Although we can plot it, it's hard to write. We will discuss the *erf* and *erfc* functions in the near future.

STATISTICS AND PROBABILITY: OTHER

USEFUL DISTRIBUTIONS

STATISTICS AND PROBABILITY: OTHER USEFUL DISTRIBUTIONS

We now know how to obtain random uniform numbers (rand) in octave, and have algorithms (Box-Muller) and functions (randn) in octave for $N(0,1)^3$. What if we require a different pdf? One technique is to use inverse transform sampling:

- 1. For the pdf p(x), work out the cdf $\Phi(x)$.
- 2. Generate a sample of uniform random numbers $u_i \in [0,1]$.
- 3. Call $\Phi^{-1}(u_i)$, that is, invert the cdf and plug in the list u_i to the dependent variable.

Write an octave script that generates exponentially-distributed numbers, e.g. pdf $\propto \exp(-x)$.

 $^{^{\}rm 3}{\rm This}$ can be scaled to any μ and σ values we need.

STATISTICS AND PROBABILITY: OTHER USEFUL DISTRIBUTIONS

Octave Programming: The scripts meanStdDev...m on Moodle demonstrate different digitized signals. Examine the effect of changing the pdf of the noise from Gaussian to exponential.

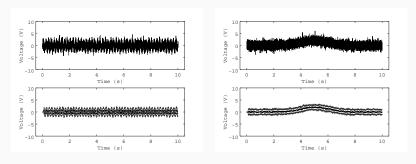


Figure 8: (Left) A CW signal in the presence of normally distributed noise. (Right) A Gaussian pulse in the presence of normally distributed noise.

STATISTICS AND PROBABILITY: OTHER USEFUL DISTRIBUTIONS

Octave has many pre-programmed distributions. Although system noise is usually normally distributed, it's good to know these: https://octave.org/doc/v4.2.0/Distributions.html

Useful video on inverse transform sampling: https://www.youtube.com/watch?v=rnBbYsysPaU&t=373s

MONIC OSCILLATOR

SUPPLEMENT: DAMPED DRIVEN HAR-

SUPPLEMENT: DAMPED DRIVEN HARMONIC OSCILLATOR

Let the defining equation for the signal x(t) be

$$x'' + bx' + cx = A\cos(\omega_0 t) \tag{24}$$

Take the Fourier transform of both sides:

$$((j\omega)^2 + j\omega b + c) X(\omega) = A \int_{-\infty}^{\infty} \cos(\omega_0 t) \exp(-j\omega t) dt$$
 (25)

The right-hand side is a pair of delta-functions:

$$F\{\cos(\omega_0 t)\} = \frac{1}{2} \left(\delta(\omega - \omega_0) + \delta(\omega + \omega_0)\right) \tag{26}$$

Solving for $X(\omega)$ gives

$$X(\omega) = -\frac{A}{2} \frac{\delta(\omega - \omega_0) + \delta(\omega + \omega_0)}{\omega^2 + j\omega b + c}$$
(27)

Taking the inverse Fourier transform gives

$$X(t) = -\frac{A}{4\pi} \left(\frac{\exp(-j\omega_0 t)}{\omega_0^2 + j\omega_0 b + c} + \frac{\exp(j\omega_0 t)}{\omega_0^2 + j\omega_0 b + c} \right)$$
(28)

Let $k^2=\omega_0^2-c$. (Finish on board). Are there any special conditions you see (resonance, total damping)? Can we plot this in Octave for varying damping and c parameters?

NOISE: DIGITIZATION AND SAMPLING,

THEORY AND EXAMPLES

NOISE: DIGITIZATION AND SAMPLING

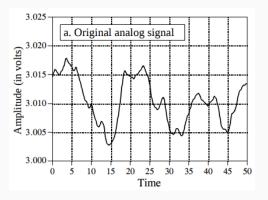


Figure 9: An example of analogue data from chapter 2 of the text. Both the dependent and independent axes are continuous.

NOISE: DIGITIZATION AND SAMPLING

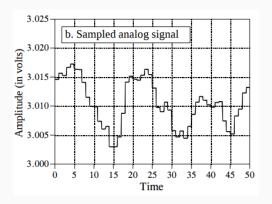


Figure 10: The same signal from Fig. 9, except a *sample-and-hold* action has been applied to the independent variable.

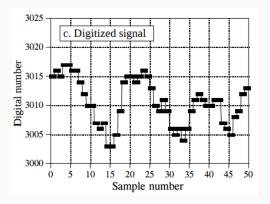


Figure 11: The same signal from Fig. 10, except a *digitization* action has been applied to the dependent variable.

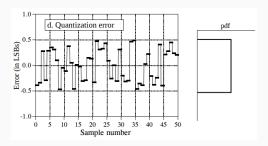


Figure 12: The error incurred by the *digitization* action from Fig. 11. The y-axis is expressed in units of LSB (least significant bit - more in a second). Turns out we know the σ of this error: *LSB/sqrt*12.

A model for a particular value in Fig. 10, the sample-and-hold action⁴ is

$$s_n(t) = f(n\Delta t) square(t - n\Delta t)$$
 (29)

where $f(n\Delta t)$ is the function or data value, and

$$square(t) = 1, \quad |t| \le T/2 \tag{30}$$

The entire N-sample data-set or signal is

$$s(t) = \sum_{n=0}^{N-1} f(n\Delta t) square(t - n\Delta t)$$
 (31)

⁴Technically, this is the 0th-order hold, and there are other (much) less common choices.

Sample/Hold Signal Model

$$s(t) = \sum_{n=0}^{N-1} square(t - n\Delta t)$$
 (32)

Several important questions:

- 1. What is $S(\omega)$?
- 2. What are the important relationships between Δt , N, and the frequencies present in the data?
- 3. How precisely does s(t) represent the data?

The Fourier transform of s(t) may be obtained using a combination of properties of the Fourier transform, plus the result obtained for $F\{square(t)\}$. Let $x=\omega\Delta t/2$. The result is (observe on board):

$$S(\omega) = \operatorname{sync}(x) \sum_{n=0}^{N-1} f(n\Delta t) \exp(-j\omega n\Delta t) \Delta t$$
 (33)

The factor at right is a discrete version of the Fourier Transform. Let the DFT represent the discrete Fourier transform on the right. Equation 33 may be written

$$S(\omega) = DFT\{f(t)\} sync(x)$$
 (34)

The spectrum of a sampled signal is the **convolution** of the discrete Fourier transform of the signal and the sync function with a period of the time between samples.

The convolution of two functions f(t) and g(t) is

$$(f \circ g)(t) = \int_{-\infty}^{\infty} f(\tau)g(t - \tau)d\tau \tag{35}$$

Convolution theorem: The Fourier transform of the convolution of two functions $f \circ g$ is

$$F\{f \circ g\} = F(\omega)G(\omega) \tag{36}$$

The DFT can contain only have a finite number of frequencies, since it is discrete. What are the limits of this?

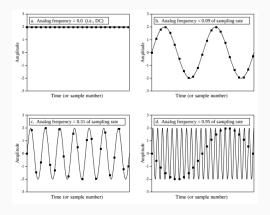


Figure 13: Various degrees of sampling.

Notice that the sync function has a zero, which occurs at $x = \pi$, for some frequency f_s . This implies that

$$\pi = \frac{\omega \Delta t}{2} \tag{37}$$

$$\pi = \frac{2\pi f_{\rm S} \Delta t}{2} \tag{38}$$

$$f_{\rm S} = \frac{1}{\Delta t} \tag{39}$$

The frequency f_s is known as the sampling frequency.

We have finally arrived at the sampling theorem:

Sampling Theorem

A signal containing frequencies less than or equal to $f_{crit} = f_s/2$ can be perfectly reconstructed.

Let's go back and think about Fig. 13.

The DFT can contain only have a finite number of frequencies, since it is discrete. What are the limits of this?

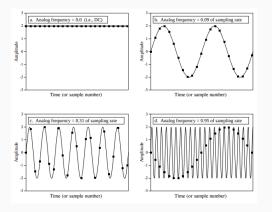


Figure 14: What if the sine wave had a frequency of f_c ?. (Professor draw on board).

Equation 33 contained a form of the DFT. Let $h(k\Delta t) = h_k$, with $f_s = 1/\Delta t$ and N time samples. The discrete Fourier transform is defined as

$$H_n \approx \Delta t \sum_{k=0}^{N-1} h_k \exp\left(-2\pi j k \frac{n}{N}\right)$$
 (40)

The integral is approximated at frequencies $f_n = \frac{n}{n\Delta t}$. The inverse DFT is

$$h_k \approx \frac{\Delta f}{N} \sum_{n=0}^{N-1} H_n \exp\left(2\pi j k \frac{n}{N}\right) \tag{41}$$

What is Δf ? There are N/2 independent frequencies for real data, so $\Delta f = f_c/(N/2) = T^{-1}$.

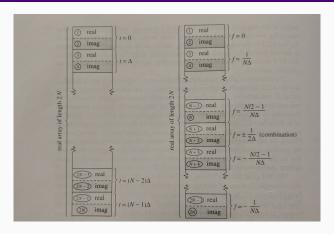


Figure 15: The FFT must conserve degrees of freedom. The data are organized to optimize speed and efficiency. (Left) Time samples. (Right) Frequency samples.

Therefore in some implementations (**not** including octave) transforming forward and then backward incurs a factor of *N*.

Looking at Fig. 15, let's do a few things:

- 1. Convince ourselves that $\Delta f = 1/T$.
- 2. Convince ourselves that degrees of freedom are conserved.
- 3. Convince ourselves that the data $\pm 1/2\Delta t$ should be the same.
- 4. Ensure we understand the order of the negative frequencies.

Parseval's theorem works like this for the discrete quantities:

$$\sum_{k=0}^{N-1} |h_k|^2 = \frac{1}{N} \sum_{n=0}^{N-1} |H_n|^2$$
 (42)

OCTAVE CODING EXAMPLE

How do we determine if data has been *properly sampled* or *properly sampled?* Aliasing.⁵ On Moodle, obtain the Aliasing.m script.

- Activity: run for the first time, and take a few moments to understand the output. What are the units of the axes? What is the lower panel showing?
- 2. Add noise by boosting the standard deviation of the pdf of the noise distribution by increasing the parameter **noise_sigma**.
- 3. What happens to the amplitude when you increase the number of modes in the Fourier series?
- 4. Push the Fourier modes way above the sampling rate. What happens to the amplitude? Probably best to minimize noise.

⁵This is apart from the trivial case when we know f_s and f_{max} .

⁶Do you see the Gibb's phenomenon disappear? Why?

Aliasing. Building off of the Aliasing.m script, do the following:

- 1. *Filter the data* according to the transfer function of the single-pole low-pass filter.
- 2. Use this technique to get rid of any aliasing, and explore the effect on the Fourier modes and noise.
- 3. Limit the Fourier series to \approx 25 terms, and use $f_0 \approx$ 1 Hz. Plot the signal while varying f_s . What do you notice?

Looks like adding noise in frequency-space where there is no signal just distorts the signal. Does this make sense?

Now we return to the problem of precision due to *digitization* in the *dependent variable*, as opposed to *sampling* in the independent variable.

Recall how the **standard deviation** in the digitized dependent variable is $LSB/\sqrt{12}$. Let's begin calling the least-significant bit (LSB) the quantum (Q). Now imagine we are digitizing analog sinusoids between -V/2 and V/2 with N quanta. The standard deviation of data distributed like a sinusoid is $V/(2\sqrt{2})$. Taking the ratio of the two standard deviations will give us the signal to noise ratio.

Written in equation form, these ideas translate as follows:

$$\sigma_{\rm S} = \frac{V}{2\sqrt{2}} = \frac{2^{\rm N}Q}{2\sqrt{2}} \tag{43}$$

$$\sigma_{Q} = \frac{Q}{\sqrt{12}} \tag{44}$$

$$\frac{\sigma_{\rm S}}{\sigma_{\rm Q}} = \frac{\frac{2^{\rm N}Q}{2\sqrt{2}}}{\frac{Q}{\sqrt{12}}}\tag{45}$$

$$\frac{\sigma_{\rm S}}{\sigma_{\rm Q}} = \frac{2^{\rm N}\sqrt{12}}{2\sqrt{2}}\tag{46}$$

(47)

Often SNR is quoted in decibels. The formula for decibel is

$$P_{dB} = 10 \log(P_2/P_1) \tag{48}$$

Since $P \propto V^2$,

$$P_{dB} = 20 \log(V_2/V_1) \tag{49}$$

Applying the definition of decibel to Eq. 46:

$$SNR_{dB} = 20 \log \left(\frac{2^N \sqrt{12}}{2\sqrt{2}} \right) \tag{50}$$

$$SNR_{dB} = 20N\log(2) + 20\log(\sqrt{6}/2)$$
 (51)

$$SNR_{dB} = 6.02N + 1.76 (52)$$

Example: in the presence of *just* quantization noise, if we digitize with 8 bits, we expect an SNR \approx 50 dB. What if we drop to 4 bits? Answer: \approx 26 dB. What if there is *analogue* noise in addition to the *quantization* noise? Suppose it has standard deviation of σ_N .

$$\frac{\sigma_{S}}{\sigma_{Q} + \sigma_{N}} = \frac{\frac{2^{N}Q}{2\sqrt{2}}}{\frac{Q}{\sqrt{12}} + \sigma_{N}}$$
 (53)

$$SNR_{dB} = 6.02N + 1.76 - 20\log\left(1 + \sqrt{12}\frac{\sigma_N}{Q}\right)$$
 (54)

Recalling that $\sigma_Q = Q/\sqrt{12}$, we have

$$SNR_{dB} = 6.02N + 1.76 - 20 \log \left(1 + \frac{\sigma_N}{\sigma_Q} \right)$$
 (55)

Example: suppose we have $\sigma_N=20$ mV, and we have N=8 bits over a 2.56 V range. This means $\sigma_Q=2.56/256/\sqrt{12}=1/(100\sqrt{12})\approx 2.89$ mV. Thus, $\sigma_N/\sigma_Q=20/2.89\approx 6.92$. The final answer is then $SNR_{dB}=32$. This is the maximum achievable SNR (in decibels) in this system.⁷

⁷More realistically, the noises add in quadrature, but in practice the system is designed so that σ_N dominates over σ_0 .

What are the maximum SNR values in dB acheivable on the following systems?

- 1. 16 bits, 6.55V, with 50 mV of analogue noise.
- 2. 12 bits, 4.096V, with 50 mV of analogue noise.
- 3. 12 bits, 4.096V, with 5 mV of analogue noise.




Figure 16: The complete (basic) system for sampling and digitization, reconstruction.

We already know what the reconstruction filter should be: the inverse of the sync function encountered in the derivation of the sampling theorem ideas.

What type of anti-aliasing filter should be chosen? Chapter 3 of the text covers three:

- 1. Butterworth
- 2. Bessel
- 3. Chebyshev

But this begs the question. How do filters work in general? Besides the single-pole examples we've already seen, what other types are there?

We have now reached Unit 2!



UNIT 1.3 OUTLINE

Previous lectures covered:

- Complex numbers 2: The Fourier series and Fourier transform (continuous and discrete)
- Time-permitting: The Laplace transform (continuous and discrete)

This lecture will cover: (Reading: Chapter 2)

- Statistics and probability: the normal distribution and other useful distributions
- Noise: digitization and sampling
- Noise: Spectral properties of noise, ADC and DAC