
QMX+ ATU, Battery, Charger and speaker solution

Build instructions

Ver 1.0

By AC8L

1. Install connectors to the QMX+ main board

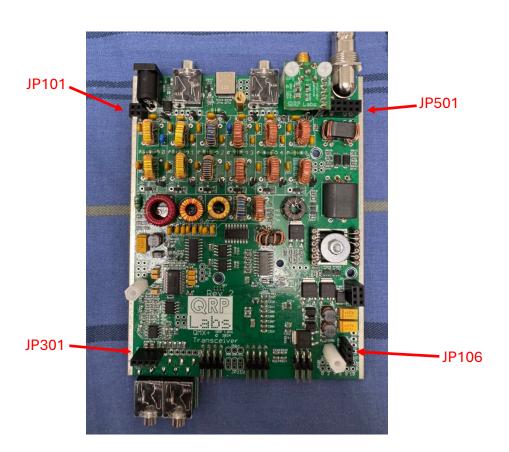

2. Install three 11mm nylon standoff spacers



Use 6mm nylon screws to secure spacers from the bottom of the QMX+ main board.