
QMX+ ATU, Battery, Charger and speaker solution

Build instructions

Ver 1.0 (DRAFT)

By AC8L

1. Install connectors to the QMX+ main board

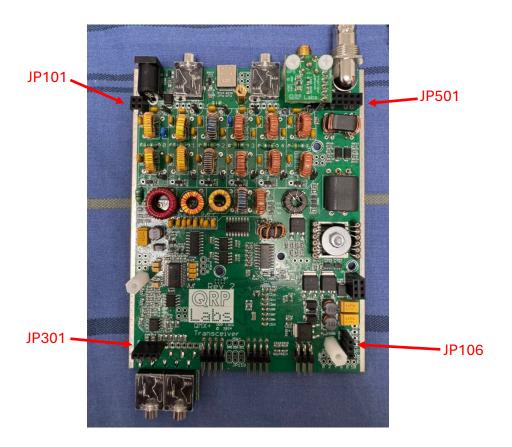


2. Install three 11mm nylon standoff spacers



Use 6mm nylon screws to secure spacers from the bottom of the QMX+ main board.

3. Install pin headers to ATU Mounting PCB

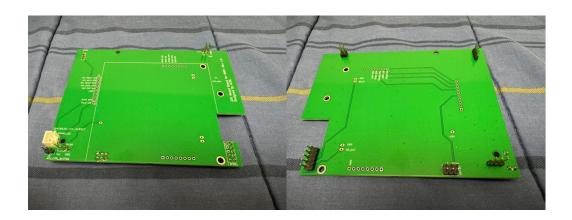

Remebemer, JP106 connector (left) and JP102 connector are long-tail! Make sure the plastic part at the bottom of the PCB.

