


You can see that the maximal short circuit current at the fault position is smaller than in the uncoupled case !!!!

HINT: For asymmetric cases always use the coupled lines, impedance models

Comparison of coupled and uncoupled line impedance

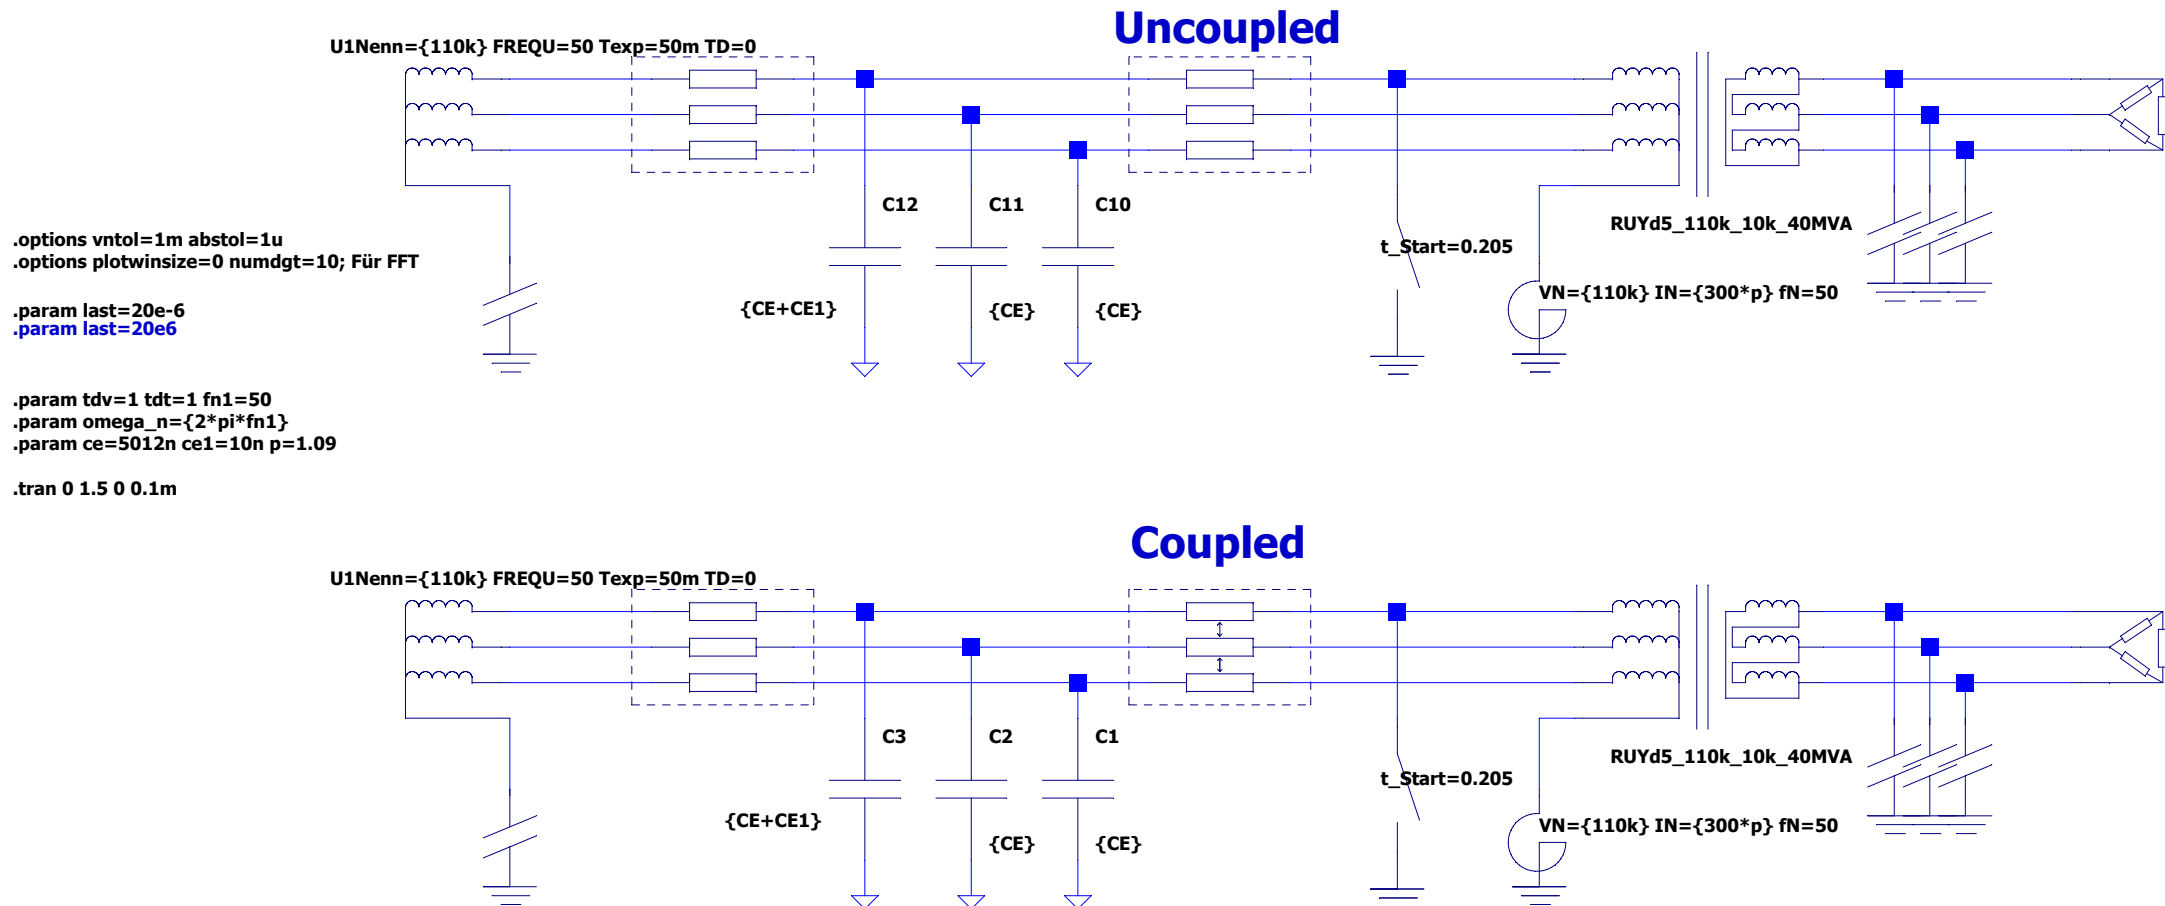

Inductivity of impedance computed in
Petersen_fault_coupled_uncoupled.wmxm