


Petersen with fault loaded vs unloaded (AC-analysis)

```
.options vntol=1m abstol=1u  
.ac lin 1000 48 52
```

```
.param tdv=1 tdt=1 fn1=50  
.param omega_n={2*pi*fn1}  
.param ce=5012n ce1=10n  
.param last=20e-6 last1=40e6
```

V_3Phase_AC
U1Nenn={110k}

Load 40 MW/8 MVar

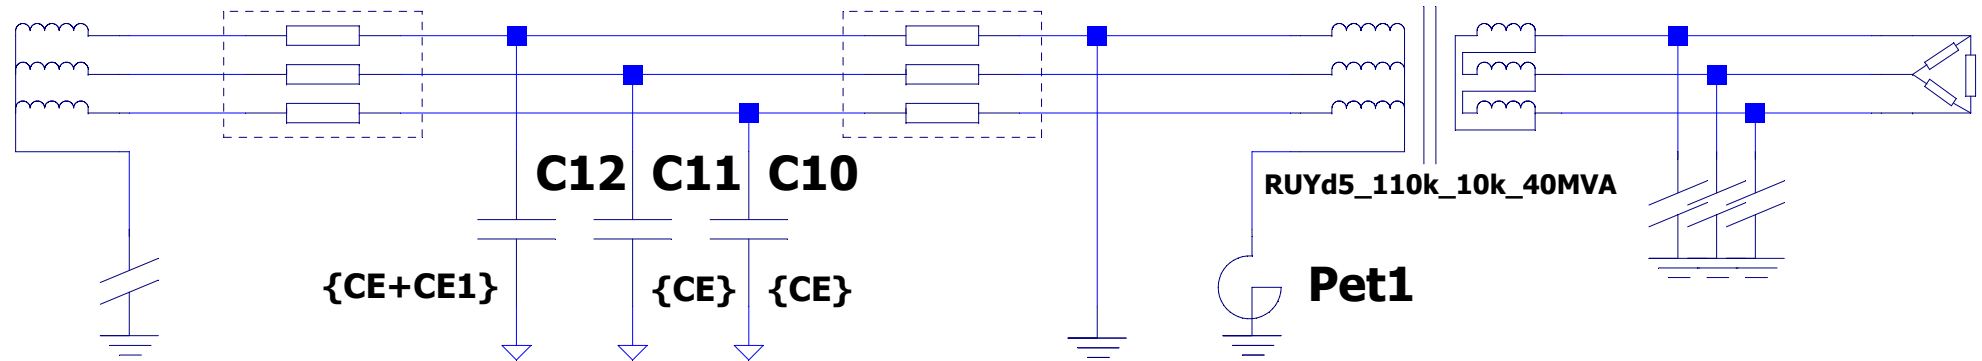


VN={110k} IN={328} fN=50

V_3Phase_AC
U1Nenn={110k}

The starpoint voltage decrease with the load
especially at inductive load

Load 0MW

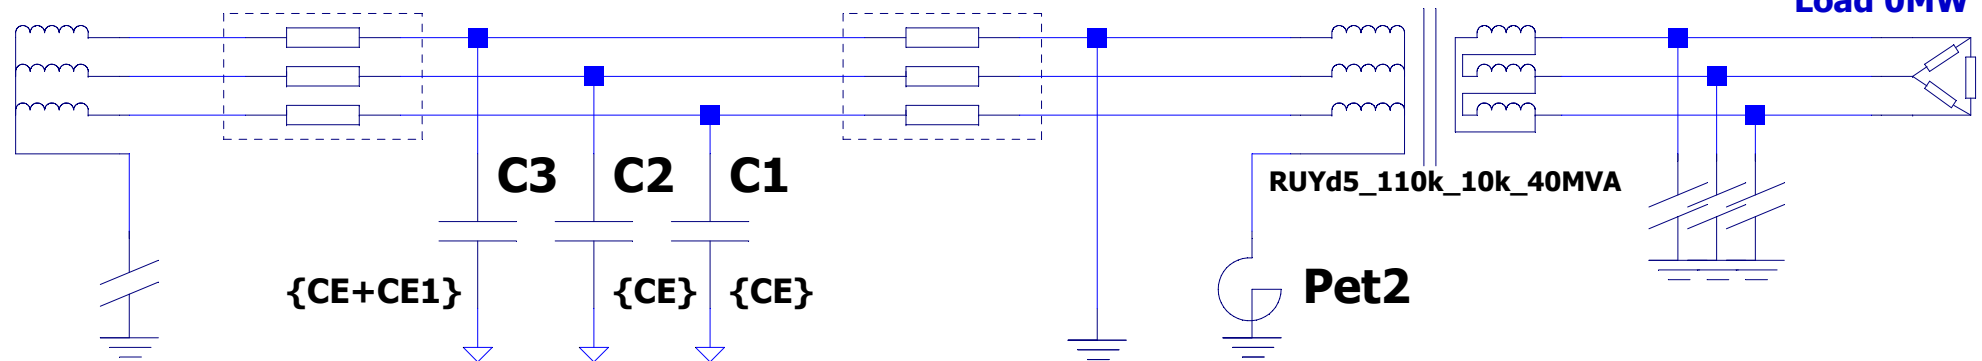

VN={110k} IN={328} fN=50