

.param tdv=1 tdt=1 fn1=50 omega_n={2*pi*fn1}

.options vntol=1m abstol=1u reltol=0.003

.tran 0 6 0 0.1ms

.ac lin 1000 40 60

For the overhead line configuration see ATPDraw File:
Ltspice_400kV_Donaumast.acp with geometry of line


For converting ATP to LTspice subcircuit in .libfile see file
ATP_cables_and_lines.xlsx

Line 1 is closed


Line 2 is open

Voltagesource is switched on exponentially

**Net Impedance
SK=40GVA**


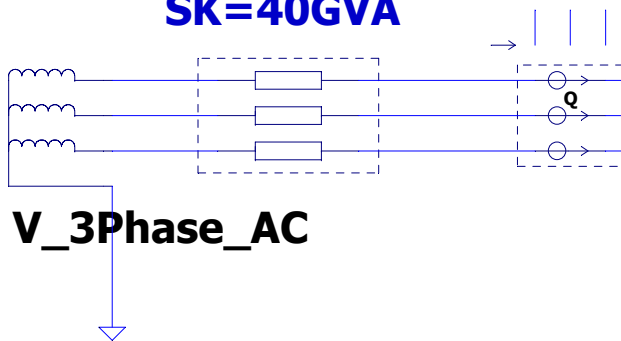


.param len=10

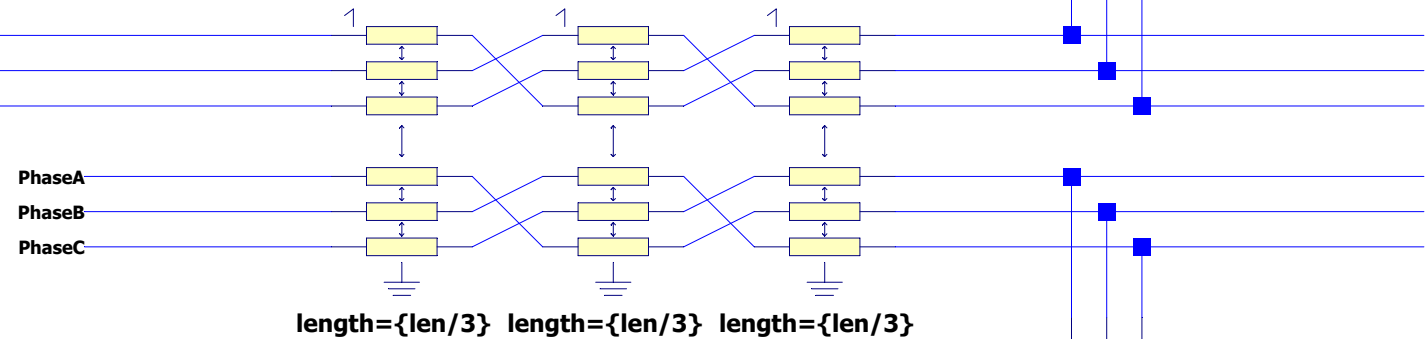

comp1

VN=400e3 Q=6e6 fn=50 r_x=0.01



VN=400e3 Q=6e6 fn=50 r_x=0.01

comp2