


.tran 0 1500m 0 0.1m
.options plotwinsize=0 numdgt=10
.options vntol=100m abstol=1m


.param tdv=1 tdt=1 fn1=50 omega_n={2*pi*fn1}

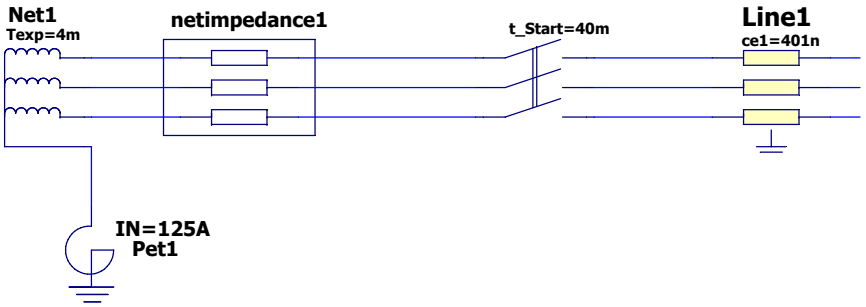

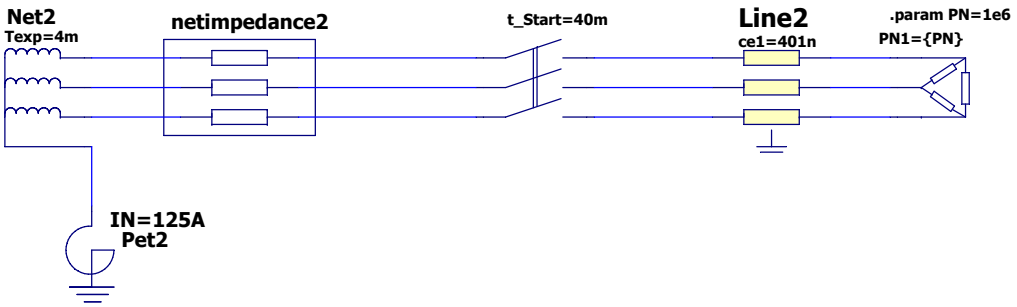

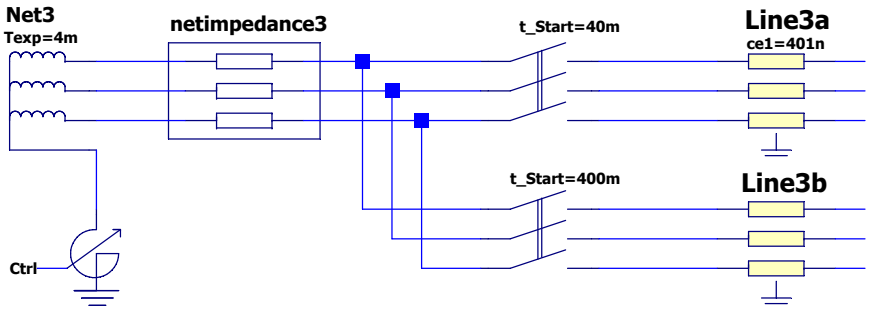

Vctrl ctrl 0 pwl 0s 125A 400ms 125A 401ms 250A

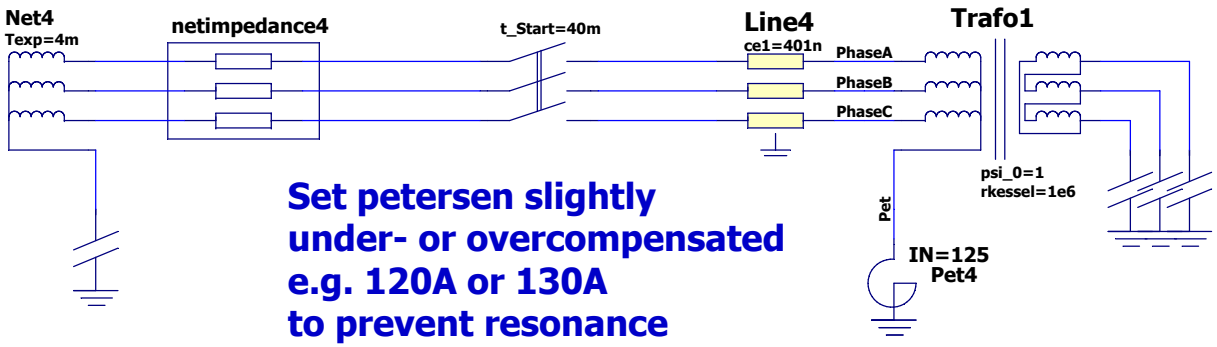

Set petersen slightly under- or overcompensated e.g. 120A or 130A to prevent resonance
At exact 125A petersen current resonance can occur