Middle voltage transformer with petersen 328A (Transient analysis) wo fault

```
.param last=20e6
.param last=20e-6
.param tdv=1 tdt=1 ce=5012n ce1=10n fn1=50

.options vntol=1m abstol=1u
.tran 0 5s 0 0.1m
.ac lin 1000 40 52
```

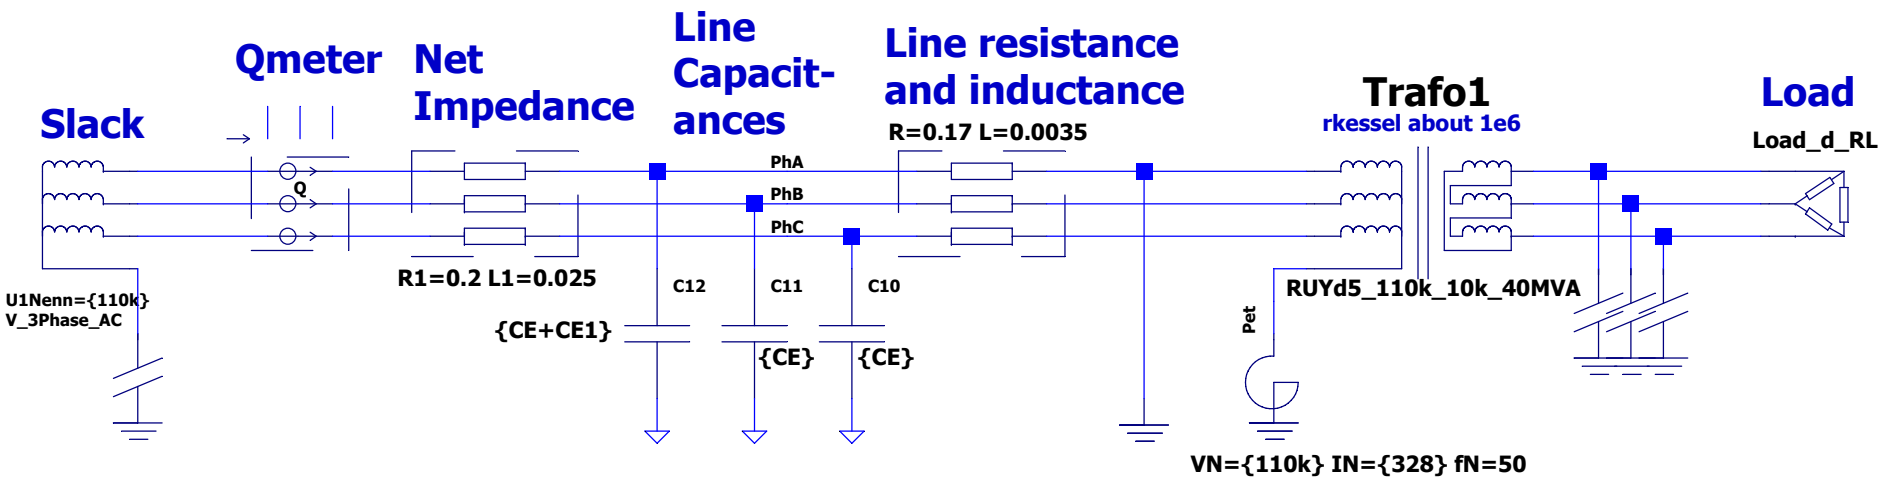

XC=1/omega/C = 1/314.159/5012e-9=635.1Ohm
I0=UN/1.73205/635.1Ohm=100A
IE=3*I0=300A (only for cables)

To see maximal petersen voltage
at resonant point
unset fault (delete wire or set rgnd=1e6) and measure petersen voltage

To see minimal fault current
at resonant point
enable fault and measure fault current