16ECT72 - RF AND MICROWAVE ENGINEERING SET CHOOK ON THE CHOOK OF THE PROPERTY OF THE PROPERTY

Unit IV – Microwave Tubes and Measurements

Microwave Measurements

Course Handling Faculty

Ms.S.Thilagavathi

Assistant Professors

Department of Electronics and Communication Engineering Dr.Mahalingam College of Engineering and Technology Pollachi-642003

thilagavathis@drmcet.ac.in



Course Outcome 4



CO4

Explain the operation of Microwave Tubes and Measuring Techniques

Learning Outcome 1

LO2

Measure the characteristics of Microwave devices





MICROWAVE MEASUREMENTS






Transmission line characteristics

- Transmission Line- In the microwave frequency region, power is considered to be in electric and magnetic fields that are guided from place to place by some physical structure. Any physical structure that will guide an electromagnetic wave place to place.
- Transmission lines are distributed devices. RLCG type models are commonly used to approximate the distributed behavior of a transmission line.



RLCG Model for Single Transmission Line



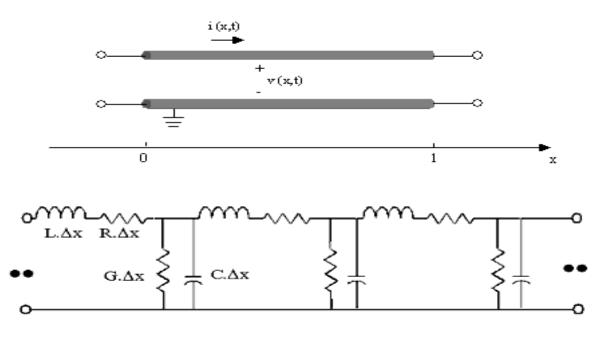

The single transmission line shown below can be modeled by a network consisting of a series resistance and inductance with parallel capacitance and conductance.



- COLLEGE OF ENGINEERING AND TLCINOLOGY
 Enlightening Technical Minds
- R Resistive loss of the conductor (transmission line trace).

 Determined by the conductance of the metal, width, height, and length of the conductor.
- L Inductive part of the circuit resulting from the layout of the conductors.
- C Capacitive part of the circuit resulting from the layout of the conductors. Determined by the permittivity and thickness of the board material and the area of the conductor.
- **G** Shunt loss of the dielectric. Determined by the layout of the conductors, permittivity, loss tangent and thickness of the board material.





General Characteristics of Transmission Line

- Propagation delay per unit length (T_0) {time/distance} [ps/in] Or Velocity (v_0) {distance/ time} [in/ps]
- Characteristic Impedance (Z_0)
- Per-unit-length Capacitance (C_0) [pf/in]
- Per-unit-length Inductance (L_0) [nf/in]
- Per-unit-length (Series) Resistance (R_0) [W/in]
- Per-unit-length (Parallel) Conductance (G_0) [S/in]





Transmission Line Equations Propagation equation

$$\gamma = \sqrt{(R + j\omega L)(G + j\omega C)} = \alpha + j\beta$$

 α is the attenuation (loss) factor β is the phase (velocity) factor




Characteristic Impedance equation

$$Z0 = \sqrt{\frac{(R + j\omega L)}{(G + j\omega C)}}$$





Characteristics of transmission line

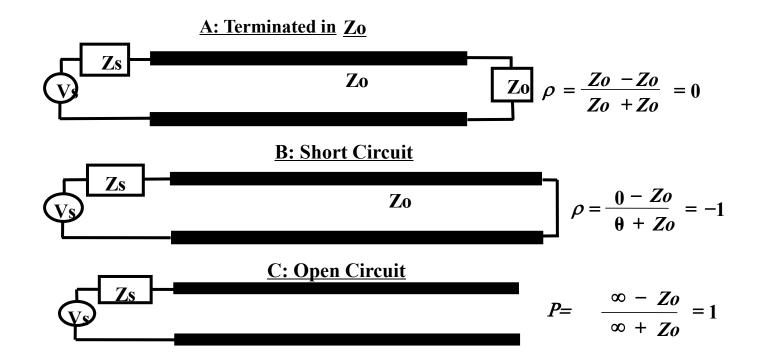

The Reflection and Transmission Losses



- When the resistive load termination is not equal to the characteristic impedance, part of the power is reflected back and the remainder is absorbed by the load
- . The amount of voltage reflected back is called *voltage reflection* coefficient.

$$\Gamma = V_i/V_r$$

where Vi is incident voltage and vr is reflected voltage.

The reflection coefficient is also given by:

$$\Gamma = (\mathbf{Z}_{L} - \mathbf{Z}_{O})/(\mathbf{Z}_{L} + \mathbf{Z}_{O})$$

VOLTAGE STANDING WAVE RATIO (VSWR)



• A standing wave is formed by the addition of incident and reflected waves and has nodal points that remain stationary with time.

 Voltage Standing Wave Ratio:

$$VSWR = V_{max}/V_{min}$$

Voltage standing wave ratio expressed in decibels;

$$SWR (dB) = 20log_{10}VSWR$$

- The maximum impedance of the line is given by:
- $Z_{\text{max}} = V_{\text{max}}/I_{\text{min}}$

• The minimum impedance of the line is given by:

•
$$Z_{min} = V_{min}/I_{max}$$

or alternatively:

•
$$Z_{min} = Z_o/VSWR$$

• Relationship between VSWR and Reflection Coefficient:

$$VSWR = (1 + |\Gamma|)/(1 - |\Gamma|)$$

$$\Gamma = (VSWR - 1)/(VSWR + 1)$$


TYPES OF MEASUREMENT



TYPES OF MEASUREMENT	EQUIPMENTS
FREQUENCY-DOMAIN	 Wavemeter s (absorption, transmission or reaction). Slotted lines. Spectrum analyzer, frequency sweepers and frequency counters.
DISPLAY OF TIME-DOMAIN	Sampling oscilloscope.Oscilloscope.
VSWR	> Slotted lines (direct method or double minimum method)
POWER	 Power meters. Detectors with oscilloscopes. Spectrum analyzers.
WAVELENGTH	> Coaxial and waveguide slotted lines
NOISE	 Noise meters. Network analyzer – multifunctional test equipment.
	THOUSANT ANALYZOF MAILITANOLIONAL COLOGUIPMONT.

DR MAHALINGAM COLLEGE OF ENGINEERING AND TECHNOLOGY Enlightening Technical Minds

BLOCK DIAGRAM OF INSTRUMENT IN MICROWAVE TESTING

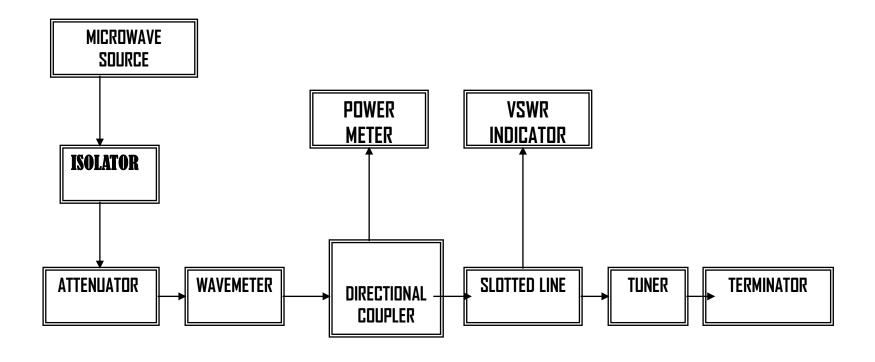



FUNCTION OF EACH BLOCK

MICROWAVE SOURCE – generates microwave source in X-band (8 – 12 GHz);

e.g klystron, magnetron or TWT

ISOLATOR /CIRCULATOR - Allow wave to travel through in one direction while being attenuated in the other direction or it is used to eliminate the unwanted generator frequency pulling (changing the frequency of the generator) due to system mismatch or discontinuity. (to prevent reflected energy from reaching the source)



- ATTENUATOR Control the amount of power level in a fixed amount, variable amount or in a series of fixed steps from the from the microwave source to the wavemeter.
- ➤ WAVEMETER Used to select / measure resonant cavity frequencies by having a plunger move in and out of the cavity thus causes the the cavity to resonate at different frequencies.
- ➤ DIRECTIONAL COUPLER Samples part of the power travelling through the main waveguide and allows part of its energy to feed to a secondary output port. Ideally it is used to separate the incident and reflected wave in a transmission line.
- > SLOTTED LINE Used to determine the field strength through the use of a detector probe that slides along the top of the waveguide.



• **VSWR INDICATOR** - Denotes the value of VSWR measured by the slotted line.

• TUNER - Allows only the desired frequency to appear at the output. Any harmonic frequencies that appear at the output are reduced to an acceptable level.

• **TERMINATOR** - May range from a simple resistive termination to some sort of deep-space antenna array, active repeater or similar devices. 3 special cases of transmission line i.e short circuit, open circuit, match impedance.



FREQUENCY MEASUREMENT



- The frequency meter used has a cavity which is coupled to the waveguide by a small coupling hole which is used to absorb only a tiny fraction of energy passing along the waveguide.
- Adjusting the micrometer of the Frequency Meter will vary the plunger into the cavity. This will alters the cavity size and hence the resonance frequency.
- The readings on the micrometer scales are calibrated against frequency. As the plunger enters the caviy, its size is reduced and the frequency increases.



- The wavemeter is adjusted for maximum or minimum power meter readings depending on whether the cavity is a transmission or absorption type device.
- With the transmission-type device, the power meter will be adjusted for a maximum. It only allows frequency close to resonance to be transmitted through them.
- Other frequencies are reflected down the waveguide. The wavemeter acts as a short circuit for all other frequencies.
- For the absorption-type wavemeter, the power meter will be adjusted for a minimum. Its absorp power from the line around resonant frequency and act as a short to other frequencies.
- The absorbing material used is to absorb any unwanted signal that will cause disturbance to the system.



VSWR (VOLTAGE STANDING WAVE RATIO) MEASUREMENT

- Used to determine the degree of mismatch between the source and load when the value VSWR $\neq 1$.
- Can be measured by using a slotted line. **Direct Method**Measurement is used for VSWR values upto about 10. Its value can be read directly using a standing wave detector.
- The measurement consists simply of adjusting attenuator to give an adequate reading, making sure that the frequency is correct and then using the dc voltmeter to measure the detector output at a maximum on the slotted section and then at the nearest minimum.





The ratio of the voltage maximum to the minimum gives the VSWR i.e

VSWR =
$$V_{max} / V_{min}$$

ISWR = I_{max} / I_{min}
= $k (V_{max})^2 / k (V_{min})^2$
= $(V_{max} / V_{min})^2$
= $VSWR^2$

$$VSWR = \sqrt{\left(I_{max}/I_{min}\right)} = \sqrt{ISWR}$$

- Methods used depends on the value of VSWR whether it is high or low. If the load is not exactly matched to the line, standing wave pattern is produced.
- Reflections can be measured in terms of voltage, current or power.


 Measurement using voltage is preffered because it is simplicity.
- When reflection occured, the incident and the reflected waves will reinforce each other in some places, and in others they will tend to cancel each other out.



<u>DOUBLE MINIMUM METHOD</u> <u>MEASUREMENT (VSWR > 10)</u>



• 'Double Minimum' method is usually employed for VSWR values greater than about 10.

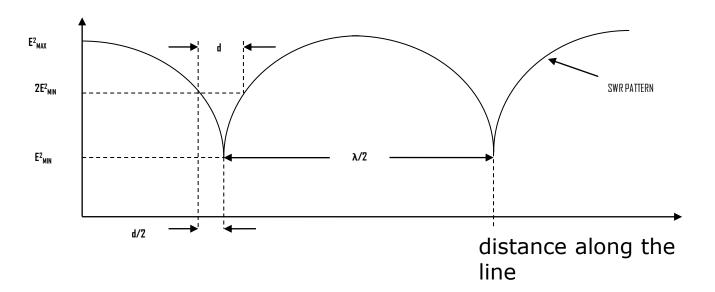



• The detector output (proportional to field strength squared) is plotted against position. The probe is moved aling the line to find the minimum value of signal.

• It is then moved either side to determine 2 positions at which twice as much detector signal is obtained. The distance d between these two positions then gives the VSWR according to the formula:

$$S = \sqrt{1 + 1/\sin^2(\pi d/\lambda)}$$

<u>POWER MEASUREMENT</u>



- Power is defined as the quantity of energy dissipated or stored per unit time.
- Methods of measurement of power depend on the frequency of operation, levels of power and whether the power is continuous or pulsed.
- The range of microwave power is divided into three categories :
 - i. Low power (< 10 mW @ 0 dBm)
 - ii. Medium power (from 10 mW 10 W @ 0 40 dBm)
- The microwave power meter consists of a power sensor, which converts the microwave power to heat energy.
- The sensors used for power measurements are the Schottky barrier diode, bolometer and the thermocouple.





SCHOTTKY BARRIER DIODE

- A zero-biased Schottky Barrier Diode is used as a square-law detector whose output is proportional to the input power.
- The diode detectors can be used to measure power levels as low as 70dBm.






BOLOMETERS


- A Bolometer is a power sensor whose resistance changes with temperature as it absorbs microwave power.
- Are power detectors that operate on thermal principles. Since the temperature of the resistance is dependent on the signal power absorbed, the resistance must also be in proportion to the signal power.
- The two most common types of bolometer are, the barretter and the thermistor. Both are sensitive power detectors and is used to indicate microwatts of power. They are used with bridge circuits to convert resistance to power using a meter or other indicating devices.



BOLOMETER



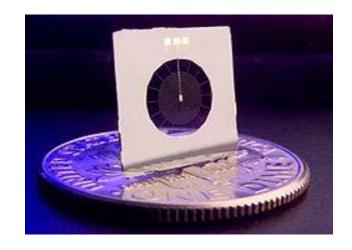

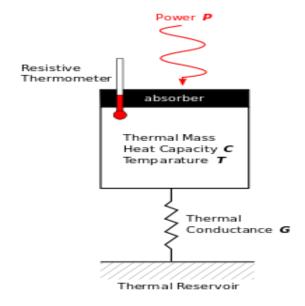



BARETTERS



- Are usually thin pieces of wire such as platinum. They are mounted as terminating devices in a section of transmission line. The section of transmission line with the mounting structure is called a detector mount.
- The increase of temperature of the baretter due to the power absorbed from the signal in the line causes the temperature of the device to increase.
- The temperature coefficient of the device causes the resistance to change in value in proportion to the change in temperature of the device (positive temperature coefficient i.e the resistance increases with increasing temperature; $R \alpha t$).



BARETTER







THERMISTOR

• Are beads of semiconductor material that are mounted across the line. They have a negative temperature coefficient i.e the resistance decreases with increasing temperature; R α 1/t.

• The impedance of baretters and thermistors must match that of the transmission so that all power is absorbed by the device.






Thermistor mount







• Variations in resistance due to thermal-sensing devices must be converted to a reading on an indicating device such as a meter. This can be done accurately using a balanced bridge arrangement as shown below:-

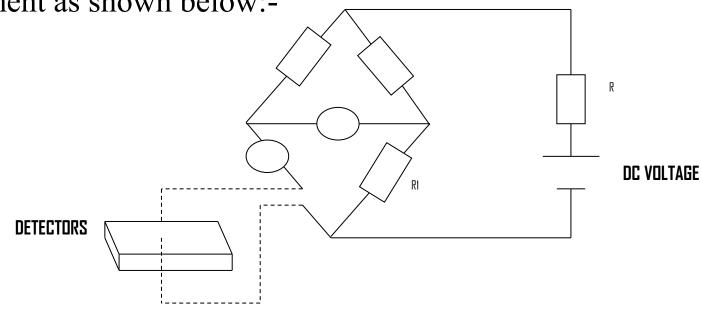





- With no power to the detector that contains the sensor element, the sensor-line R1 is adjusted to zero reading through the meter M1 and the bridge circuit is balanced.
- When signal is applied to the sensor element, causing its temperature to change, the sensor resistance changes, causing the bridge to become unbalanced.
- Resistor R1 is adjusted to balance meter M1. The change in the reading of meter M2 in the sensor element leg is a direct measure of the microwave power.




THERMOCOUPLES



- Are used as power monitors in the low-to-medium power regions and are very sensitve.
- Is a thin wire made of two disimilar metals. Hence there will be two junctions (hot & cold).
- When the temperature at two junctions are different, a voltage is developed across the thermocouple (i.e across both junctions). This developed voltage is proportional to the difference between the two junction temperatures.
- When the temperature at both junctions are the same, the difference in voltage = 0.



Thermocouple

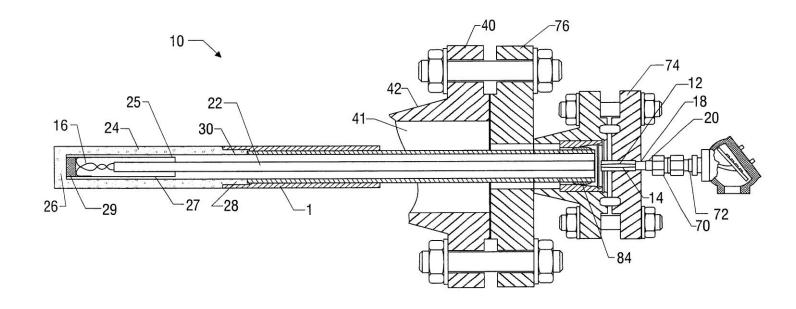



MICROWAVE CRYSTALS



- Are non-linear detectors that provide current in proportion to the power. It is limited to making low-power measurements.
- The current is proportional to the power due to the squarelaw characteristic of the crystal. This square-law characteristic only occurs for small signal levels.
- At larger signal levels the relationship is linear, as with any diode. Therefore the proportional relationship between power and current output is only true at power levels below 10mW.





Microwave Crystal







CALORIMETERS

- The calorimeters are the most accurate of all instruments for measuring high power.
- Calorimeters depend on the complete conversion of the input electromagnetic energy into heat.
- Direct heating requires the measurement of the heating effect on the medium, or load, terminating the line.



CALORIMETERS




- Indirect heating requires the measurement of the heating effect on a medium or body other than the original power-absorbing material.
- Power measurement with true calorimeter methods is based solely on temperature, mass, and time.
- Substitution methods use a known, low-frequency power to produce the same physical effect as an unknown of power being measured.
- Calorimeters are classified as STATIC (non flow) types and CIRCULATING (flow) types.





CALORIMETER

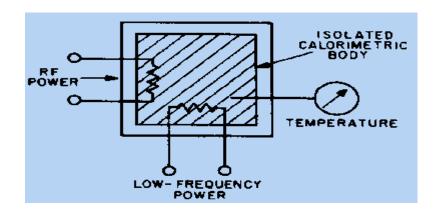





References:

- Liao, S.Y., "Microwave Devices and Circuits", Prentice Hall of India, 2006
- ❖ Annapurna Das and Sisir K Das, "Microwave Engineering", Tata McGraw Hill Inc., 2009
- ❖ David M Pozar, "Microwave Engineering", 3rd Edition John Wiley and Sons, Inc., 2005





THANK YOU...



